

High-Performance Process Manager Control Theory

HP09-684

R684

03/2013

Notices and Trademarks

**Copyright 2013 by Honeywell International Srl.
Release 684 March, 2013**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special, or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell is a registered trademark of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell Process Solutions
1860 W. Rose Garden Lane
Phoenix, AZ 85027 USA
1-800 822-7673

About This Document

This document describes how to use the High-Performance Process Manager (HPM).



ATTENTION

With TPN R684, Enhanced Universal Control Network (EUCN) is introduced. In EUCN, the traditional coaxial cable system is no longer utilized and is replaced with a Fault Tolerant Ethernet (FTE) based communication network.

Throughout the document, unless specifically mentioned, the terms HPM, NIM, and UCN are interchangeably used with the terms EHPM, ENIM, and EUCN respectively.

Release Information

Document Name	Document ID	Release Number	Publication Date
High-Performance Process Manager Control Theory - HP09	HP09-684	R684	03/2013

Document Category

Configuration

References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

Document Title	Doc ID
PM Family Parameter Reference Dictionary	XPM09-684

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
United States and Canada	Honeywell Solution Support Center	Honeywell TAC, MS L17 1860 W. Garden Lane Phoenix, AZ, 85027 USA	Phone: 1-800-822-7673 Facsimile: 1-973-455-5000
Note: Calls are answered by dispatcher between 6:00 A.M. and 4:00 P.M. Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.			
Europe, Middle East and Africa (EMEA)	Honeywell TAC-EMEA	TAC-BE02 Hermes Plaza Hermeslaan, 1HB-1831 Diegem, Belgium Email: tac-be02@honeywell.com	Phone: 32-2-728-2345 Facsimile: +32-2-728-2696
Pacific	Honeywell Global TAC – Pacific	Honeywell Limited Australia 5 Kitchener Way Burswood 6100, Western Australia Email: GTAC@honeywell.com	Phone: 1300-364-822 (toll free within Australia) +61-8-9362-9564 (outside Australia) Facsimile: +61-8-9362-9564
India	Honeywell Global TAC – India	Honeywell Automation India Ltd. 56 and 57, Hadapsar Industrial Estate Hadapsar, Pune –411 013, India Email: Global-TAC-India@honeywell.com	Phone: +91-20- 6603-2718/19 1800-233-5051 Facsimile: +91-20- 66039800

Location	Organization	Address	Phone/Facsimile
Korea	Honeywell Global TAC – Korea	Honeywell Co., Ltd 4F, Sangam IT Tower B4-4 Block 1590, DMC Sangam-dong, Mapo-gu, Seoul, 121-835, Korea Email: Global-TAC- Korea@honeywell.com	Phone: +82-80-782-2255 (toll free within Korea) Facsimile: +82-2-792-9015
People's Republic of China	Honeywell Global TAC – China	Honeywell (China) Co., Ltd 33/F, Tower A, City Center, 100 Zunyi Rd., Shanghai 200051, People's Republic of China Email: Global-TAC- China@honeywell.com	Phone: +86- 21-2219-6888 800-820-0237 400-820-0386
Singapore	Global TAC – South East Asia	Honeywell Private Limited Honeywell Building 17, Changi Business Park Central 1, Singapore 486073 Email: GTAC- SEA@honeywell.com	Phone: +65-6823-2215 Facsimile: +65-6445-3033
Japan	Global TAC – Japan	Honeywell K.K. New Pier Takeshiba, South Tower Building, 20th Floor, 1-16-1 Kaigan, Minato-ku, Tokyo 105-0022, Japan Email: Global-TAC- JapanJA25@honeywell. com	Facsimile: +81-3-6730-7228
Elsewhere	Call your nearest Honeywell office.		

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
World Wide Web	Honeywell Solution Support Online:	https://www.honeywellprocess.com/	
Training Classes	Honeywell Automation College:	http://www.automationcollege.com	

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.
	REFERENCE -EXTERNAL: Identifies an additional source of information outside of the bookset.
	REFERENCE - INTERNAL: Identifies an additional source of information within the bookset.
CAUTION	Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.
	CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. CAUTION symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.
	WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death. WARNING symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.
	WARNING, Risk of electrical shock: Potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 VDC may be accessible.

Symbol	Definition
	ESD HAZARD: Danger of an electro-static discharge to which equipment may be sensitive. Observe precautions for handling electrostatic sensitive devices
	Protective Earth (PE) terminal: Provided for connection of the protective earth (green or green/yellow) supply system conductor.
	Functional earth terminal: Used for non-safety purposes such as noise immunity improvement. NOTE: This connection shall be bonded to Protective Earth at the source of supply in accordance with national local electrical code requirements.
	Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.
	Chassis Ground: Identifies a connection to the chassis or frame of the equipment shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.

Contents

1.	HPM CONTROL HARDWARE THEORY OF OPERATION	27
1.1	Introduction	27
1.2	HPM Module	29
1.3	I/O Subsystem	29
2.	CONTROL PROCESSING THEORY OF OPERATION	33
2.1	Control Functions	33
3.	I/O POINTS.....	39
3.1	I/O Points Background	39
4.	HIGH AND LOW LEVEL ANALOG INPUT POINT	41
4.1	AI Points Functional Overview	41
4.2	Analog-to-Digital Conversion	43
4.3	PV Characterization	49
4.4	PV range checking and filtering	49
4.5	PV source selection	50
4.6	Alarming.....	51
5.	SMART TRANSMITTER INTERFACE POINT	53
5.1	STI Point Functional Overview	53
5.2	Parameter comparisons	57
5.3	PV Characterization	60
5.4	PV Range Checking and Filtering.....	63

Contents

5.5	PV Source Selection.....	65
5.6	Alarming	65
5.7	Smart Transmitter Communication Modes	66
5.8	Database Considerations.....	66
5.9	Point States	68
5.10	STI IOP Commands.....	69
6.	ANALOG OUTPUT POINT	71
6.1	AO Point Functional Overview	71
6.2	Direct/Reverse Output.....	73
6.3	Calibration Compensation	74
6.4	Disable Output Alarming when Using Open-Line Detection.....	75
6.5	Pre-determine the mode of the point when error occurs in IOL/IOP communication	75
7.	DIGITAL INPUT POINTS.....	77
7.1	DI Points Functional Overview	77
7.2	Status Digital Input Point.....	80
7.3	Latched Digital Input Point	85
7.4	Accumulation Digital Input Point	85
7.5	Sequence of Events Digital Input Point.....	87
8.	DIGITAL OUTPUT POINT	93
8.1	DO Point Functional Overview	93
8.2	Pulse Width Modulated DO Point.....	94
8.3	Status DO Point	96
9.	PULSE INPUT POINT.....	99
9.1	Pulse Input Point Functional Overview	99
9.2	PV CALC	102

10. SERIAL INTERFACE POINT	103
10.1 Serial Interface Point Functional Overview	103
10.2 Serial Input Point Operation	104
10.3 Serial Input Point Configuration	105
11. SERIAL DEVICE INTERFACE	107
11.1 Serial Device Interface Functional Overview	107
11.2 Manual/Auto Station Interface	108
11.3 Toledo Weigh Scale Interface	114
12. ALARMING THEORY OF OPERATION	117
12.1 Alarming Function	117
12.2 Contact Cutout Function	118
12.3 Process Alarm Rebroadcast	121
12.4 Red Tagging	123
12.5 Write Lockout	124
13. DIGITAL COMPOSITE POINT	125
13.1 Functional Overview	125
13.2 Point States	128
13.3 Mode Attributes	131
13.4 Interlocks	132
13.5 Digital Inputs	135
13.6 Current Input State (PV)	139
13.7 Alarming	141
13.8 Change-of-State Events	143
13.9 Commanded State (OP)	143
13.10 Digital Outputs	146
13.11 Read Back Check	151

Contents

13.12	Initialization Manual	151
13.13	Local Manual Indication	154
13.14	Maintenance Statistics	154
14.	LOGIC POINTS	157
14.1	Functional Overview	157
14.2	Configuring a Logic Point	158
14.3	Logic Block Algorithms.....	164
15.	PROCESS MODULE DATA POINT	185
15.1	Functional Overview	185
15.2	Sequence Programs Overview	187
15.3	Unit Partitioning	189
15.4	Writing sequence programs	191
15.5	Sequence Program Structure	193
15.6	Sequence Execution	197
15.7	Process Module Operating Status	198
15.8	Sequence Execution State	202
15.9	Sequence Overrides	210
15.10	Sequence Alarms	211
15.11	Sequence Messages	212
15.12	Restart Option	213
15.13	Parameters.....	213
16.	REGULATORY PV POINT	215
16.1	Regulatory PV Point Background	215
16.2	PV Input Connections.....	217
16.3	PV Algorithm Calculation	217
16.4	PV Range Check and Filtering.....	218

16.5	PV Value Status	219
16.6	PV Source Selection.....	220
16.7	PV Alarm Detection	221
16.8	Deviation High alarm.....	222
17.	DATA ACQUISITION PV ALGORITHM.....	223
17.1	Functional Overview	223
17.2	Equations	224
18.	FLOW COMPENSATION PV ALGORITHM.....	225
18.1	Functional Overview	225
18.2	Options and Special Features	226
18.3	Equations	228
19.	MIDDLE OF THREE PV ALGORITHM.....	233
19.1	Functional Overview	233
19.2	Options and Special Features	235
19.3	Equations	235
20.	HIGH LOW AVERAGE PV ALGORITHM	237
20.1	Functional Overview	237
20.2	Options and Special Features	239
20.3	Equations	240
21.	SUMMER PV ALGORITHM	243
21.1	Functional Overview	243
21.2	Options and Special Features	244
21.3	Equations	245
22.	VARIABLE DEAD TIME PV ALGORITHM	247

Contents

22.1	Functional Overview	247
22.2	Options and Special Features	248
22.3	Equations	252
23.	TOTALIZER PV ALGORITHM.....	255
23.1	Functional Overview	255
23.2	Options and Special Features	258
23.3	Equations	268
24.	GENERAL LINEARIZATION PV ALGORITHM.....	271
24.1	Functional Overview	271
24.2	Options and Special Features	272
24.3	Equations	274
25.	CALCULATOR PV ALGORITHM.....	277
25.1	Functional Overview	277
25.2	Options and Special Features	278
25.3	Equations	279
26.	REGULATORY CONTROL POINTS	283
26.1	Regulatory Control Point Background	283
26.2	Regulatory Control Point Functional Overview	284
26.3	Control Input Connections.....	294
26.4	PV Source Selection	294
26.5	PV Alarm Detection.....	296
26.6	External Mode Switching.....	297
26.7	Initialization Logic.....	299
26.8	Target Value Processing	304
26.9	PV Tracking	314

26.10	Control Algorithm Calculation	315
26.11	Control Output Processing.....	316
26.12	Override Control	323
27.	PID CONTROL ALGORITHM	329
27.1	Functional Overview	329
27.2	Options and Special Features	331
27.3	Equations	341
27.4	Initialization	346
27.5	Override Feedback Processing.....	346
27.6	Control Output Connection	348
28.	PID W/FEEDFORWARD CONTROL ALGORITHM.....	349
28.1	Functional Overview	349
28.2	Options and Special Features	352
28.3	Equations	354
28.4	Initialization	357
28.5	Override Feedback Processing.....	358
29.	PID W/EXTERNAL RESET-FEEDBACK CONTROL ALGORITHM	361
29.1	Functional Overview	361
29.2	Options and Special Features	364
29.3	Hand/Auto Stations	367
29.4	Equations	370
29.5	Initialization	372
29.6	Override Feedback Processing.....	372
30.	PID POSITION PROPORTIONAL CONTROLLER	373
30.1	Functional Overview	373

30.2	Options and Special Features	374
30.3	Equations	377
31.	POSITION PROPORTIONAL CONTROL ALGORITHM	379
31.1	Functional Overview	379
31.2	Options and Special Features	381
31.3	Equations	384
31.4	Initialization	387
32.	RATIO CONTROL ALGORITHM.....	389
32.1	Functional Overview	389
32.2	Options and Special Features	392
32.3	Equations	394
32.4	Initialization	396
32.5	Override Feedback Processing	397
33.	RAMP AND SOAK CONTROL ALGORITHM	399
33.1	Functional Overview	399
33.2	Equations	410
34.	AUTO MANUAL CONTROL ALGORITHM	411
34.1	Functional Overview	411
34.2	Options and Special Features	413
34.3	Equations	415
FOR EQUATION A	415	
34.4	Initialization	417
34.5	Override Feedback Processing	417
35.	INCREMENTAL SUMMER	419

35.1	Functional Overview	419
35.2	Options and Special Features	420
35.3	Equations	422
35.4	Initialization	423
35.5	Override Feedback Processing	423
36.	SWITCH CONTROL ALGORITHM	425
36.1	Functional Overview	425
36.2	Options and Special Features	427
36.3	Equations	430
36.4	Initialization	431
36.5	Override Feedback Processing	431
37.	OVERRIDE SELECTOR CONTROL ALGORITHM	433
37.1	Functional Overview	433
37.2	Options and Special Features	436
37.3	Equations	437
37.4	Initialization	438
37.5	Override Feedback Processing	439
38.	MULTIPLY DIVIDE CONTROL ALGORITHM	441
38.1	Functional Overview	441
38.2	Options and Special Features	442
38.3	Equations	443
38.4	Initialization	444
38.5	Override Feedback Processing	447
39.	REGULATORY CONTROL SUMMER ALGORITHM	449
39.1	Functional Overview	449

Contents

39.2	Options and Special Features	450
39.3	Equations	451
39.4	Initialization	452
39.5	Override Feedback Processing	453
40.	OUTPUT SWITCH SELECT ALGORITHM.....	455
40.1	Functional Overview	455
40.2	Options and Special Features	460
40.3	Equations	462
40.4	Initialization	464
41.	BOX DATA POINTS	465
41.1	Box Data Point Background	465
42.	BOX FLAG DATA POINT.....	467
42.1	Functional Overview	467
43.	BOX NUMERIC DATA POINT	469
43.1	Functional Overview	469
44.	BOX TIMER DATA POINT	473
44.1	Functional Overview	473
45.	BOX TIME DATA POINT	475
45.1	Functional Overview	475
46.	BOX STRING DATA POINT	477
46.1	Functional Overview	477
47.	ARRAY POINTS	479

47.1	Array Background	479
47.2	Node Specific Configuration Requirements	481
47.3	Array Parameter Names	482
47.4	Array Point Use with HPM Box Global Variables	482
47.5	Serial Interface to Array Points	486
47.6	Status and Error Checking	493
47.7	Read-Back Check for Device Control/Digital Composite Points	494
47.8	CL Notes	494
48.	DEVICE CONTROL POINTS	495
48.1	Functional Overview	495
48.2	Input Connections	497
48.3	Output Connections	508
48.4	Alarms.....	514
48.5	Maintenance Statistics	515
49.	HPM CONTROL PERFORMANCE	517
49.1	Background.....	517
49.2	Control Slot Types.....	517
49.3	Scan Frequency	518
49.4	Determining Processing and Memory Capacity.....	524
49.5	Overrun Handling	531
49.6	Performance Monitoring	536
49.7	UCN Device Resource Utilization Display.....	537
50.	DATABASE CONSIDERATIONS	539
50.1	Background.....	539
51.	POINT EXECUTION STATE	543

Contents

51.1	Background	543
51.2	Run-Idle-Run Transition	543
51.3	Warm/Cold Restart.....	544
52.	PEER-TO-PEER COMMUNICATION	547
52.1	Background	547
52.2	Implementation.....	547
52.3	Restrictions	549
53.	HARDWARE REFERENCES	553
53.1	Hardware Reference Addressing	553
54.	REDUNDANCY	557
54.1	Background	557
54.2	IOP Module Switchover	557
54.3	HPM Redundancy Parameters.....	557
55.	POINT RESERVATION	559
55.1	Background	559
55.2	Establishing Point Reservation	559
56.	STATUS MESSAGES	561
56.1	Availability	561
56.2	Configuration.....	561
56.3	Operator Interaction.....	561
56.4	CL Interaction	561
57.	MODE AND MODE ATTRIBUTE SELECTION LIST	563
57.1	Background	563
57.2	Configuration.....	563

Tables

Table 4-1 HL and LL analog input point sensor types	44
Table 4-2 Max Allowable Lead Resistance and Max Allowable Intrinsic Safety barrier Resistance for RTD types	48
Table 5-1 STI sensor types and PV characterization	60
Table 5-2 State Parameters of STI-IOP and the transmitter	68
Table 5-3 STI-IOP command parameters	69
Table 6-1 Event sequence	75
Table 13-1 Digital Composite Point Normal States	128
Table 13-2 Digital Composite Point Momentary States	130
Table 13-3 Digital Composite Point PV Sources	140
Table 14-1 Entires for LOGMIX parameters	158
Table 15-1 Normal Sequence and Abnormal Condition Handler Component Definitions	196
Table 15-2 Process Module Operating States	198
Table 15-3 Sequence Execution Mode	201
Table 15-4 Sequence Execution States	203
Table 16-1 PV Value Status Definitions	219
Table 18-1 Flow Compensation Forms	226
Table 18-2 Flow Compensation PV Algorithm Equations	230
Table 22-1 Variable Dead-Time PV Algorithm Equations	253
Table 25-1 Supported Operators and Functions	280
Table 26-1 Regulatory Control Point Operating Modes	286
Table 26-2 Regulatory Control Point Mode Attributes	288
Table 26-3 Regulatory Control Point Remote Cascade Options	290
Table 26-4 Regulatory Control Point Bad PV/Mode Shed	292
Table 26-5 Regulatory Control Point PV Source Selection Configuration	295
Table 26-6 Regulatory Control Point Bad PV Alarm Detection	296
Table 26-7 Regulatory Control Point External Mode Switching	298
Table 26-8 PID-Based Regulatory Control Algorithm Setpoint Access	305
Table 26-9 Non-PID-Based Regulatory Control Algorithm Setpoint Access	307
Table 26-10 INITVAL Calculation with RATIO or BIAS Clamped	313
Table 26-11 Regulatory Control Point HMI Accessible Output Parameters	317
Table 26-12 Regulatory Control Override Control Status and Feedback Parameters	325
Table 27-1 Pid Control Algorithm Gain Options	334
Table 27-2 Pid Control Algorithm - Equation A	344
Table 27-3 Pid Control Algorithm - Equation B	344
Table 27-4 Pid Control Algorithm - Equation C	345
Table 27-5 Pid Control Algorithm - Equation D	345
Table 29-1 Hand/Auto Station Functions	367
Table 29-2 Hand/Auto Station I/O Signals	367
Table 30-1 PIDPOSPR Safety Shutdown SAFOPCMD Parameter Value	375

Contents

Tables

Table 30-2 PIDPOSPR Bad PV/Mode Shed.....	376
Table 30-3 PIDPOSPR Raise/Lower Equation Decision	378
Table 30-4 PIDPSOPR raise/lower pulse width equation (RAISETIM)	378
Table 31-1 Analog Output Related Parameters.....	383
Table 31-2 POSPROP Raise/Lower Equation Decision	385
Table 31-3 POSPROP Raise/Lower Pulse Width Equation.....	386
Table 32-1 Ratio Control Algorithm Equations.....	395
Table 33-1 Mark Timer Parameters	405
Table 36-1 SELXINP Parameter Status.....	428
Table 38-1 Multiply/Divide Equations (CV)	443
Table 38-2 Multiply/Divide Initialization Equations (INITVAL).....	445
Table 38-3 Multiply/Divide Override Feedback Equations (ORFB)	447
Table 47-1 Maximum Si/Array Points.....	481
Table 47-2 Array Parameter Names	482
Table 47-3 HPM Box Global Variables	482
Table 48-1 Primary and Secondary Logic Gate Algorithms.....	503
Table 48-2 SVHITP and SVHHTP Colors	506
Table 48-3 SVP Bar Graph Color Chart.....	507
Table 49-1 Scheduled frequency of SCANRATE parameters	519
Table 49-2 Fast slots parameters	520
Table 49-3 Memory unit capacity	527
Table 49-4 Memory unit constraints.....	528
Table 49-5 HPM Link Unit Calculation Sheet.....	533
Table 52-1 Peer-to-peer implementation summary	548

Figures

Figure 2-1 Primary Operator Interface for control loop.....	35
Figure 2-2 Primary Operator Interface for Mass Flow	36
Figure 2-3 Primary Operator Interface for Motor	37
Figure 2-4 Type of Stand alone points	38
Figure 4-1 Analog Input Point, Functional Diagram	42
Figure 4-2 PVCALC Calculation	46
Figure 5-1 Smart transmitter input point functional diagram	55
Figure 5-2 STI Point Detail Display	59
Figure 5-3 Linear Conversion STI IOP	61
Figure 5-4 Conversion Equations	62
Figure 6-1 Analog Output Point Functional Diagram.....	72
Figure 6-2 Output Characterization for an Analog Output Point	74
Figure 7-1 Digital Input Point Functional Diagram.....	78
Figure 7-2 DI Input States	79
Figure 8-1 Digital Output Point Functional Diagram.....	93
Figure 8-2 PWM Type Digital Output Point Waveforms	94
Figure 8-3 Calculation of pulse-on-time and reverse acting outputs.....	95
Figure 8-4 Status Type Digital Output Point Waveforms.....	97
Figure 9-1 Pulse Input Point Functional Diagram.....	100
Figure 10-1 Serial Interface Point Hardware Block Diagram.....	103
Figure 11-1 Serial Device Interface Block Diagram	107
Figure 11-2 Manual/Auto Station Implementation	110
Figure 13-1 Digital Composite Point Inputs Functional Diagram	126
Figure 13-2 Digital Composite Point Outputs Functional Diagram.....	127
Figure 13-3 Digital Composite Point Display	129
Figure 14-1 Logic Point.....	157
Figure 14-2 AND Logic Point Algorithm.....	165
Figure 15-1 Process Module Data Point Functional Diagram	186
Figure 15-2 Sequence Program and Unit Partitioning.....	190
Figure 15-3 Sequence Program Structure.....	194
Figure 15-4 Process Module Operating States Relational Diagram	200
Figure 15-5 Sequence Execution State Transitions	202
Figure 16-1 Regulatory PV Point Functional Diagram	216
Figure 17-1 Data Acquisition PV Algorithm Functional Diagram.....	223
Figure 18-1 Flow Compensation PV Algorithms	225
Figure 19-1 Middle of Three PV Algorithm Functional Diagram.....	234
Figure 20-1 High, Low, Average PV Algorithm Functional Diagram	238
Figure 21-1 Summer PV Algorithm Functional Diagram	243
Figure 22-1 Variable Dead Time PV Algorithm Functional Diagram.....	247
Figure 22-2 Variable Dead-Time Functional Diagram.....	249
Figure 23-1 Totalizer PV Algorithm Functional Diagram	255

Contents

Figures

Figure 23-2 Using a Totalizer to Fill a Tank	257
Figure 24-1 General Linearization PV Algorithm Functional Diagram	271
Figure 24-2 General Linearization Operation Example.....	273
Figure 25-1 Calculator PV Algorithm Functional Diagram	277
Figure 26-1 Regulatory Control Point Functional Diagram	284
Figure 26-2Regulatory Control Point Mode Structure.....	287
Figure 26-3 Override Control Strategy Example.....	327
Figure 27-1 PID Control Algorithm Functional Diagram	330
Figure 27-2 Override Feedback Processing Diagram.....	346
Figure 28-1 PIDFF Control Algorithm Functional Diagram	350
Figure 28-2 PIDFF Control Algorithm in Feed Heater Example	351
Figure 29-1 PIDERFB Control Algorithm Functional Diagram.....	363
Figure 29-2 PIDERFB Control Algorithm Example Application	364
Figure 29-3 Hand/Auto Station Control Configuration and Wiring Diagram	369
Figure 29-4 Hand/Auto Station Logic Point Configuration and Wiring Diagram	370
Figure 30-1 PID Position Proportional Control Algorithm Functional Diagram	373
Figure 31-1 POSPROP Example Control Strategy.....	380
Figure 31-2 POSPROP Control Algorithm Functional Diagram.....	381
Figure 32-1 RATIOCTL Algorithm Functional Diagram	389
Figure 32-2 Ratio Control Example Application	391
Figure 32-3 Override Feedback Processing	397
Figure 33-1 Ramp and Soak Control Algorithm Functional Diagram.....	400
Figure 33-2 Wait Time Between Phases	404
Figure 33-3 Ramping Waits for the Process	404
Figure 33-4 Ramp/Soak Mark Timers	405
Figure 33-5 Using a Logic Slot to Achieve Additional Rampsoak Segments	408
Figure 34-1 Auto Manual Control Algorithm Functional Diagram	411
Figure 34-2 AUTOMAN Serving as Ultimate Secondary in a Fan-Out Configuration	412
Figure 34-3 AUTOMAN Override Feedback Processing	417
Figure 35-1 Incremental Summer Control Algorithm Functional Diagram	419
Figure 35-2 Incremental Summer Input and Output Connections	420
Figure 36-1 Switch Control Algorithm Functional Diagram.....	425
Figure 36-2 Switch Control Algorithm Examples	426
Figure 37-1 Override Selector Control Algorithm Functional Diagram	434
Figure 37-2 Override Control Strategy Example.....	435
Figure 38-1 Multiply/Divide Control Algorithm Functional Diagram	441
Figure 39-1 Regulatory Control Summer Functional Diagram.....	449
Figure 40-1O P SELECT Control Algorithm Functional Description.....	455
Figure 40-2 Switching Example	459
Figure 42-1 Box Flag Data Point Functional Diagram	468
Figure 43-1 Box Numeric Data Point Functional Diagram	470

Figure 44-1 Box Timer Data Point Functional Diagram.....	473
Figure 47-1 Array Point Access to Box Global Variables	479
Figure 47-2 Serial Interface to an Array Point	480
Figure 47-3 String Array with Starting Index Set to 301	484
Figure 47-4 Signal Path Between SI Subsystems and Array Point.....	487
Figure 48-1 Device Control Point Functional Diagram	496
Figure 48-2 Logic Gates and Destinations	498
Figure 48-3 Primary and Secondary Logic Input Gate	500
Figure 48-4 Secondary Input Gate	502
Figure 48-5 Primary and Secondary Logic Gates	502
Figure 48-6 Primary Logic Gate Destinations	504
Figure 48-7 Secondary Logic Gate Destinations.....	504
Figure 48-8 Detail Display of Logic Configuration	505
Figure 48-9 Secondary Variable Representation on the Point Detail Display.....	506
Figure 48-10 Interlocks and Permissives Functional Diagram	510
Figure 48-11 Output Indicators on the Point Detail Display	511
Figure 48-12 Logic Output Connections.....	512
Figure 49-1 Display for Peer to Peer UCN overruns and soft failures	536

Contents
Figures

1. HPM Control Hardware Theory of Operation


1.1 Introduction

The High-Performance Process Manager (HPM) is designed to provide flexible and powerful process scanning and control capabilities. To do this, it uses a powerful multiprocessor architecture with separate microprocessors dedicated to perform specific tasks. As depicted in the following high level diagram, the HPM consists of two primary components:

- High-Performance Process Manager Module (HPMM).
- I/O Subsystem.

1 HPM Control Hardware Theory of Operation

1.1 Introduction

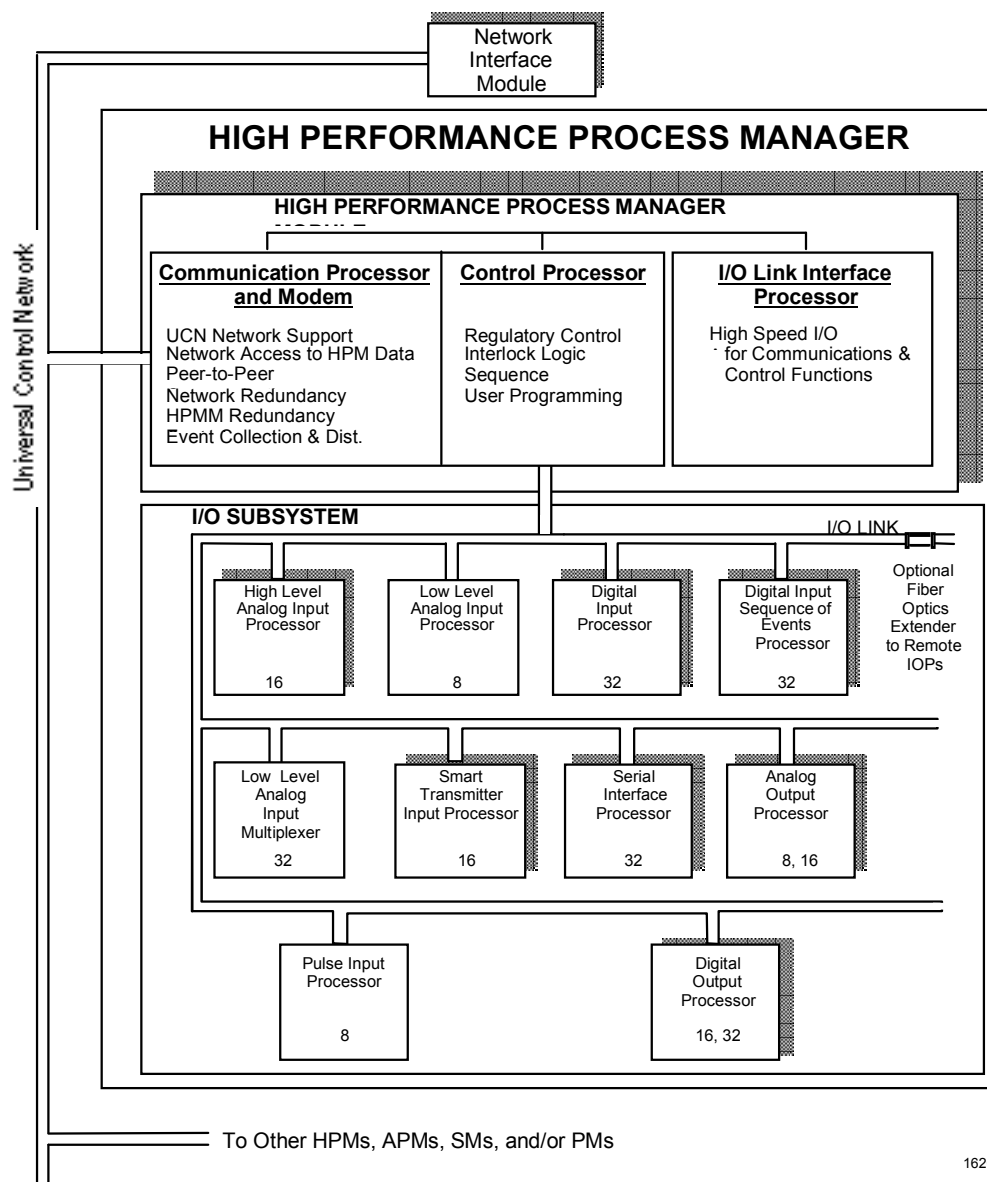

16206

1.2 HPM Module

HPPM elements

The High-Performance Process Manager Module (HPMM), as depicted in the following detailed diagram, consists of three basic elements:

- Communication Processor and Modem.
- I/O Link Interface Processor.
- Control Processor.

Redundancy can be optionally provided and would be depicted here as a fourth basic element of the HPMM.

Communication processor

The Communication Processor is optimized to provide High-Performance network communications, handling such functions as network data access and peer-to-peer communications.

Control processor

The Control Processor is the HPM resource dedicated to executing regulatory, logic, and sequence functions, including a powerful user programming facility. Because communication and I/O processing are performed by separate dedicated hardware, the full power of the control processor can be applied to control strategy implementation.

I/O link interface processor

The I/O Link Interface Processor is the interface to the I/O Subsystem.

1.3 I/O Subsystem


I/O subsystem elements

The I/O Subsystem, as depicted in the following detailed diagram, consists of two basic elements:

- redundant I/O Link.
- I/O Processors.

1 HPM Control Hardware Theory of Operation

1.3 I/O Subsystem

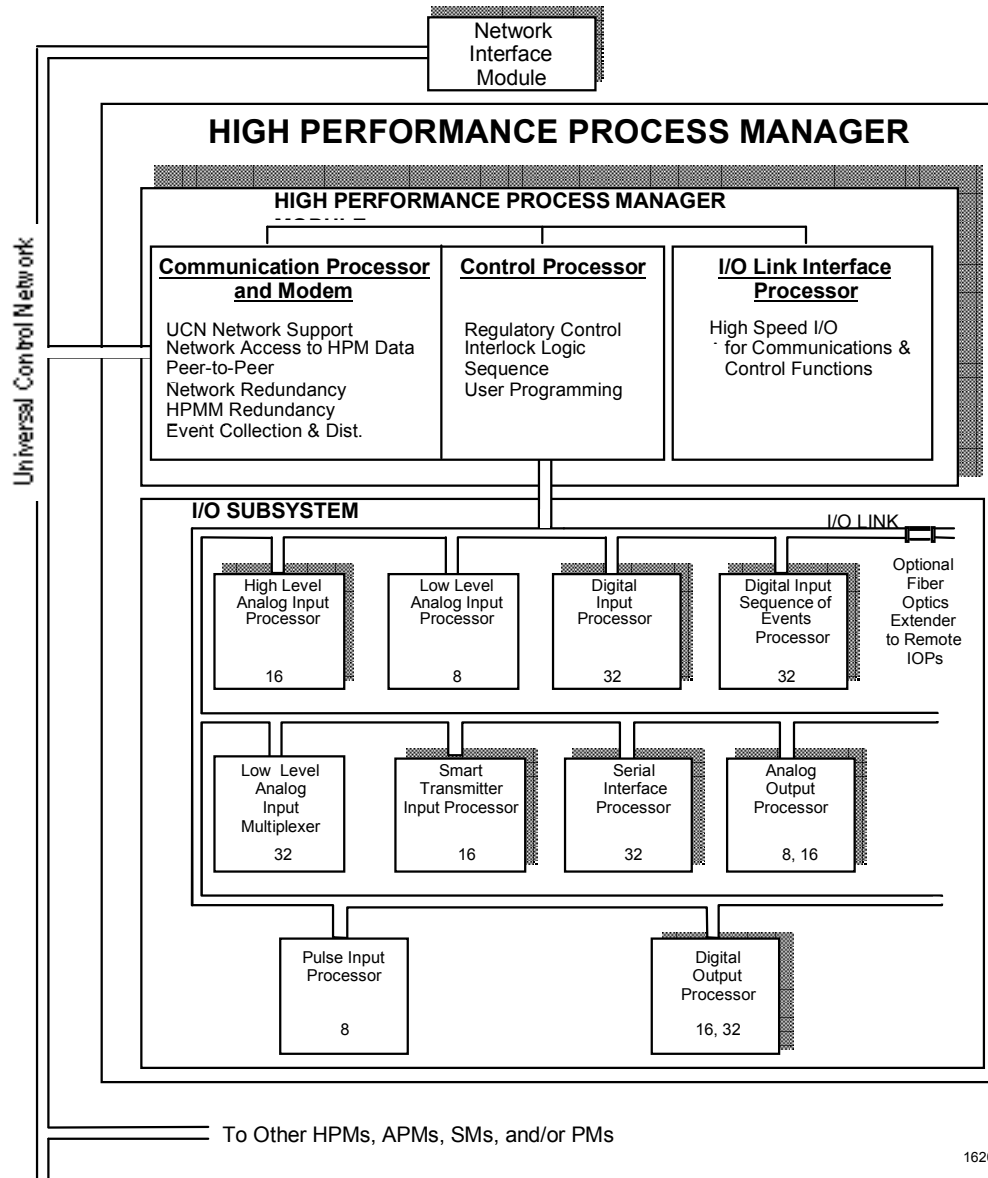

1620f

Scanning field I/O

The I/O Processors (IOPs), in conjunction with Field Termination Assemblies (FTAs), perform input and output scanning, and processing on all field I/O. A redundant I/O Link is standard for added security.

I/O processing

The I/O Processors handle all field I/O for both data acquisition and control functions. They provide such functions as engineering unit conversion and alarm limit checking independent of the HPMM. All control operations are performed within the HPMM. All I/O processing (for example, data acquisition) is performed separately from control processing functions so that I/O scan rates are completely independent of I/O quantity, controller loading, processing, and alarming. Partitioning of processing requirements allows more efficient use of control processor capability and future integration of additional I/O Processor types.

IOP types

Multiple types of I/O processors (IOPs) are available for the HPM, including:

Type	IOP
Analog Input	16 Point, High Level—Analog Input
	8 Point, Low Level—Analog Input
Analog Output	8 Point, Analog Output
	16 Point, Analog Output
Digital Input	32 Point, Digital Input
	32 Point, Sequence of Events—Digital Input
Digital Output	16 Point, Digital Output
	32 Point, Digital Output

Type	IOP
<i>Special Purpose</i>	Fieldbus (4 segments, 10 devices each)
	16 Point, Smart Transmitter Interface
	32 Point, Low Level—Multiplexer
	8 Point, Pulse Input
	32 Point, Serial Interface
	16 Point, Serial Device Interface



ATTENTION

Up to 40 of the I/O processors in the preceding table can be selected in any mix. Optionally, redundant Analog Output and High Level—Analog Input processors (up to 40 primary and 40 redundant IOPs) are supported.

Control application implementation

You, as process engineer, have complete flexibility of choice, within the maximum HPM design limits, in the assignment of point types and control strategies. The interactive tools provided by both the Universal Station, GUS/Native Window, and TPS Builder are used to implement these selections.



REFERENCE – INTERNAL

For more information concerning the assignment of point types and control strategies:

When using...

Universal Station or GUS/Native Window tools

GUS/Native Window

TPS Builder tool

Refer to...

Engineer's Reference Manual

Native Window User's Guide

TPS Builder Implementation Guide

2. Control Processing Theory of Operation

2.1 Control Functions

Background

The HPM provides a variety of control tools that can be customized to address a wide range of process automation needs. Functions from I/O scanning, through regulatory and logic control to more advanced control can be easily implemented through the HPM. The HPM toolbox includes a sophisticated regulatory control package, fully integrated interlock logic functions, and an advanced process engineer-oriented Control Language (CL/HPM). CL/HPM is an enhanced version of the Control Language implemented by Honeywell in the Multifunction Controller, Process Manager, and Application Module. This language facility includes the sequence structures needed to handle batch or hybrid applications as well as the computational capability needed for some continuous control tasks. Key to the power of this control capability is that each of the functions shares data freely within the HPM and can share data from other devices on the Universal Control Network.

HPMM point types

The following point types reside in the HPMM:

- Regulatory PV
- Regulatory Control
- Digital Composite
- Logic
- Array
- Process Module
- Device Control
- Box Flag, Numeric, and Timer

Implementing control applications

Separate functional elements of the HPM are used to implement various parts of typical control loops and control strategies. Each of these functional elements can be assigned a user-defined point name to allow for location-independent reference to the data associated with that function. For example, points are assigned by the user for analog input and analog output slots. The I/O Processor data (engineering-unit range for inputs, characterization option for outputs, and so on.) is configured as part of the point-build process for these points. A separate point would be configured for each regulatory control (RegCtl) slot that would be linked to the assigned analog I/O points through input/output connections.

Point form

The HPM provides a configurable parameter called PNTFORM (Point Form) that allows the user to define which points are to be used as the primary operator interface for point data. The PNTFORM parameter provides the user with two choices for point form: "Full" and "Component." Points that are configured as having "Full" point form include alarm-related parameters and sometimes, some other miscellaneous parameters. This information is needed when the point is to be used as the primary operator interface to the point's data.



ATTENTION

The maximum number of points per Network Interface Module (NIM) is 8000. Both full and component points should be counted when checking against this limit. Note that for the DI and DO portions of a digital composite point are not counted as part of the point total if they are implemented using both:

- the hardware reference source.
- destination addresses entered on the configuration form for the digital composite point.

CAUTION


Database security is provided to prevent an operator from starting an IOP that has an invalid database. After initial configuration, each IOP must be set valid. You cannot checkpoint unless the IOP database is marked valid. Restoring the database from a valid checkpoint also sets the IOP database valid. An IOP cannot be switched from Idle to Run unless its database is valid.

Simple single loop control example

In the following figure, a single-loop PID controller has the PV of a Smart Transmitter Interface point (FT100) connected to the PV of a RegCtl point (FIC100) that has been configured for a PID algorithm. The output (OP) of the RegCtl point is applied to an analog output (AO) point (FY100). In this example:

- FIC100 is the primary operator interface and is configured as a "Full" point.
- FT100 and FY100 are parts (components) of FIC100, and could be configured as "Component" points.

Figure 2-1 Primary Operator Interface for control loop

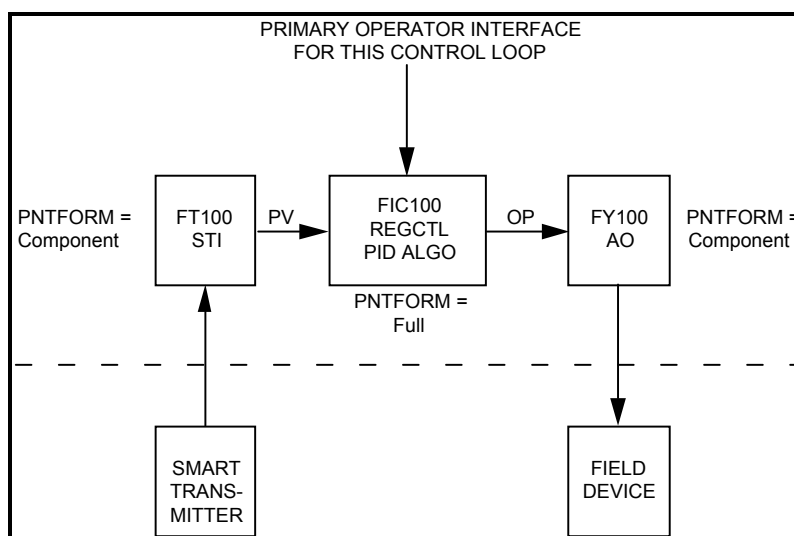

Mass flow example

The following figure shows a single-loop PID controller controlling mass flow. Mass flow is computed by the flow compensation PV algorithm in regulatory PV (RegPV) point (FX101). FX101 receives three PVs representing the uncompensated flow, absolute pressure, and absolute temperature from AI points FT101, PT101, and TT101. FX101 provides the PV as mass flow to a RegCtl point (FIC101) that has been configured for a PID algorithm. FIC101 provides an output to an AO point (FY101).

In this example:


- FIC101 is the primary operator interface and would be configured as a "Full" point.
- FX101 is part of FIC101 and would be configured as a "Component" point.
- FT101, PT101, and TT101 could be configured as "Full" or "Component" points.
- FY101 must be configured as a "Component" point.



ATTENTION

"Full" would be selected for any of these points that require separate alarm reporting, such as alarming for uncompensated flow, line pressure, or fluid temperature.

Figure 2-2 Primary Operator Interface for Mass Flow

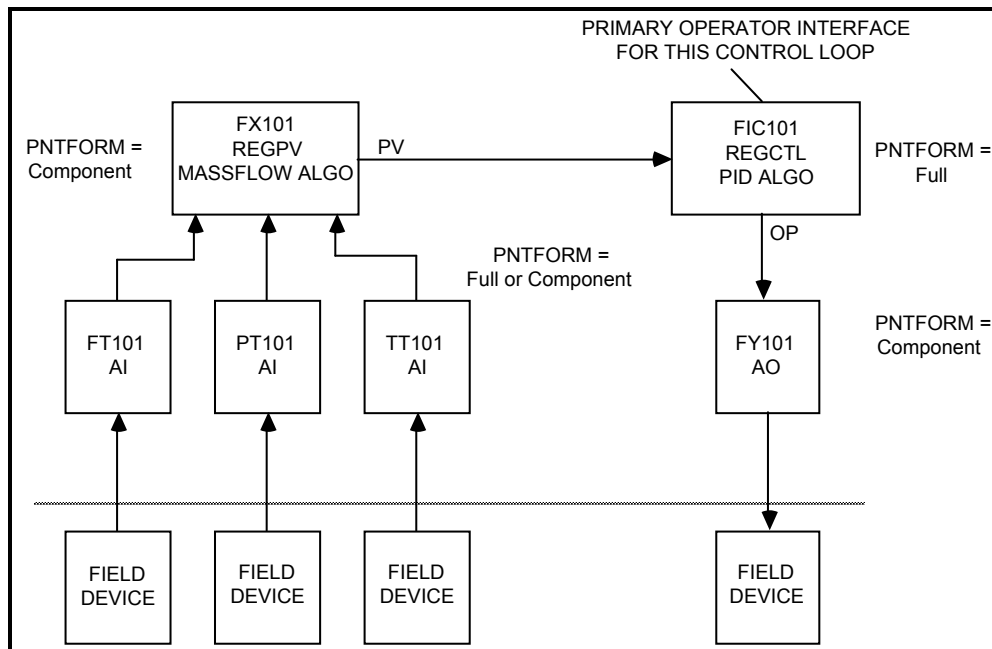


Motor control example

The following figure shows a single-output, single-input digital composite point (MTR100) that interfaces a motor control circuit through a digital output (DO) point MTR100OP, and digital input (DI) point MTR100FB.

In this example:

- MTR100 is the primary operator interface and would be configured as a "Full" point.
- MTR100OP and MTR100FB are parts of TR100 and would be configured as "Component" points.


Figure 2-3 Primary Operator Interface for Motor

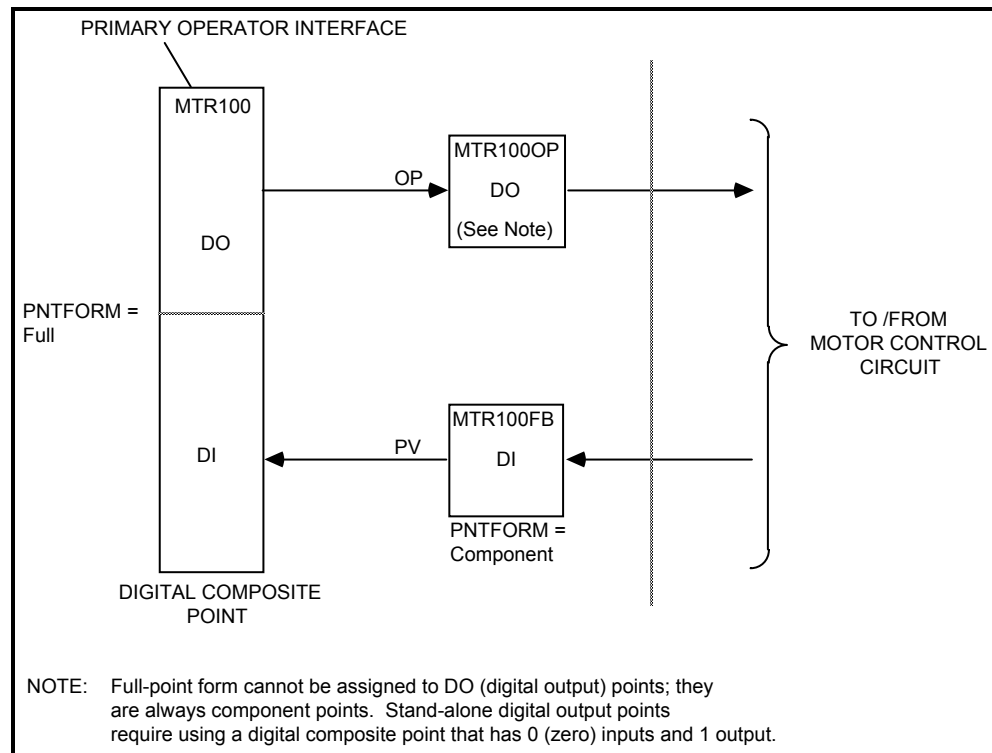

Stand-alone points

The following figure shows three types of stand-alone points. FT102 and CT105 are points that could be used for data acquisition; in this case these points would be configured as full points. For the stand-alone digital output (DO) point SW103, a digital composite (DigComp) point would be used and would be configured as having 0 (zero) inputs and 1 output.

Figure 2-4 Type of Stand alone points

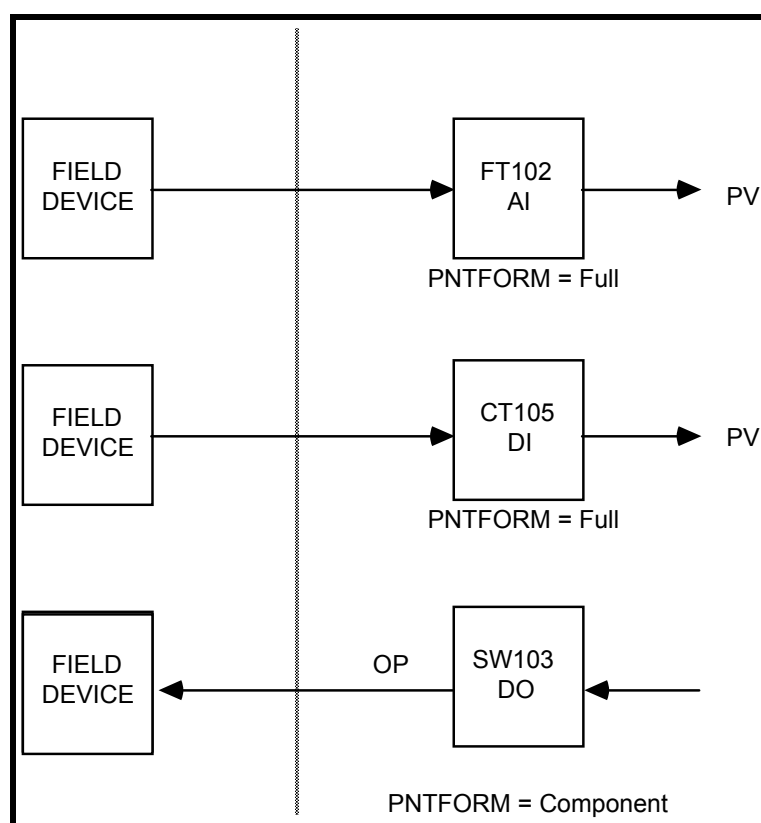

Associated HMI displays

With Release 510 and later software, an Associated Display can be configured for each HPM point at build time by entering the name of a custom built schematic in the ASSOCDSP parameter. At operating time, the operator can call up that associated custom schematic from a point Detail Display or Group Display.

3. I/O Points

3.1 I/O Points Background

Purpose

The analog and digital data points in the I/O Processors (IOPs) perform input and output processing on all field I/O. These functions are performed independently of the control functions. The partitioning of processing requirements allows more efficient use of control processor capability and future integration of additional IOP types.

I/O Point Types

The following I/O points are available:

- High and Low Level Analog Input Point.
- Smart Transmitter Interface Point.
- Analog Output Point.
- Digital Input Points.
- Digital Output Point.
- Pulse Input Point.
- Serial Interface Point.
- Serial Device Interface.



TIP

To support on-line field maintenance activities, Standby Manual units are recommended for the Process Manager AO and DO I/O Processors.



ATTENTION

The Serial Device Interface (SDI) IOP is configured as a Smart Transmitter Interface (STI) IOP.

3 I/O Points

3.1 I/O Points Background

4. High and Low Level Analog Input Point

4.1 AI Points Functional Overview

Family

The High and Low Level Analog Input Points are members of the I/O Point family.

Purpose

The analog input point converts an analog PV signal received from a field sensor to engineering units for use by other data points in the HPM, and by the rest of the **TotalPlant** Solution (TPS) system.

Description

High level points are located in the High Level Analog Input (HLAI) IOP. One type of low level point is located in the Low Level Analog Input (LLAI) IOP. This type is generally used for control points. The other type is located in either the Low Level Multiplexer (LLMUX) or the Remote Hardened Multiplexer (RHMUX) IOP. This type is generally used for data acquisition points. The type of analog input point needed is based on the type of field sensor that is providing the input to the point and the characterization options selected by the user as listed in Table 2-1.

Operation


To accomplish this function, the analog input point (shown in the following figure) performs:

- Analog-to-Digital Conversion.
- PV Characterization.
- PV range checking and filtering.
- PV source selection.
- Alarming.

4 High and Low Level Analog Input Point

4.1 AI Points Functional Overview

Figure 4-1 Analog Input Point, Functional Diagram

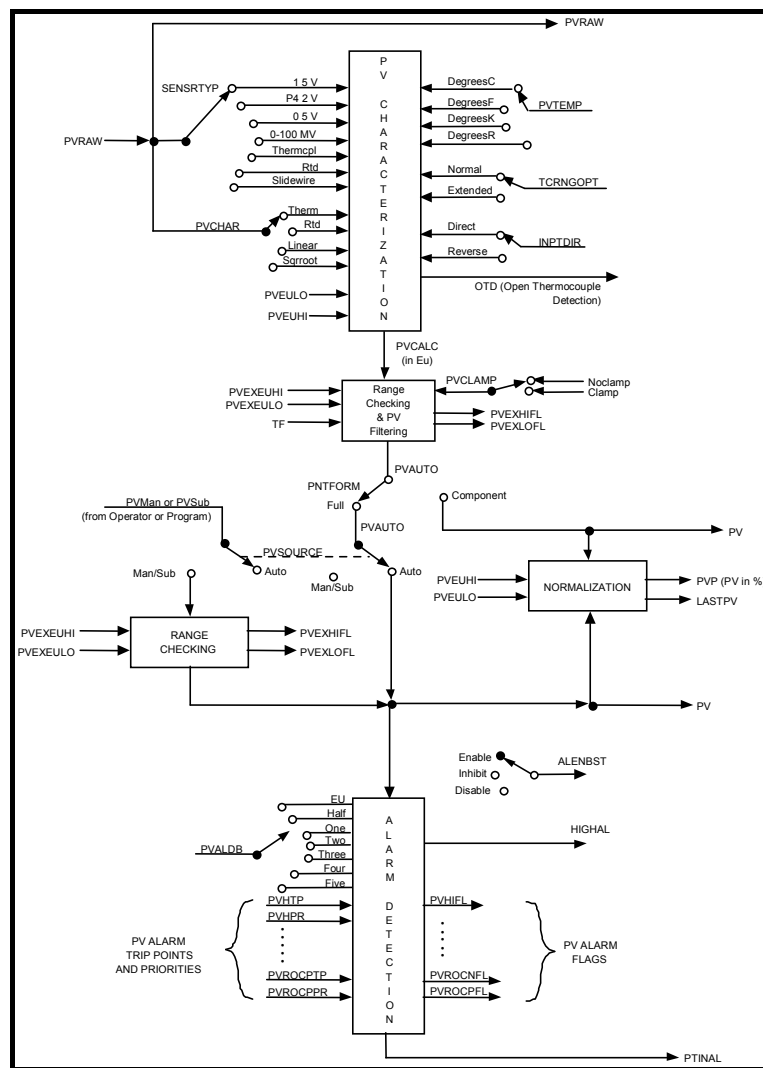

4.2 Analog-to-Digital Conversion

Engineering units conversion

The engineering unit conversions that are performed in the HLAI, LLAI and LLMUX points are listed in the following chart, and described in the following topics.

High Level AI Point	Low Level AI Point	Low Level Mux Point ¹
Linear	Linear	Linear
Square Root	Square Root	RTD ²
Thermal Slidewire	Thermal	Thermal

1) In general, LLMUX points apply to (include) points built against the LLMUX IOP as well as the RHMUX IOP. The RHMUX does not have a unique point type.

2) RTDs are not supported by RHMUX IOP.

Linear Conversion

The PVRAW value is converted to a floating-point number. The output value of the linear conversion is PVCALC, which is calculated based on the raw input span (for slidewire and 0-100 mV sensor types only), and the engineering unit span. The state of the input direction parameter (INPTDIR) is taken into consideration during the calculation of PVCALC as described in the following table.

<i>For slidewire and 0-100 mV sensor types, when INPTDIR is Direct</i> $PVCALC = \frac{(PVRAW - PVRAWLO)}{(PVRAWHI - PVRAWLO)} * (PVEUHI - PVEULO) + PVEULO$
<i>For 0-5V, 0.4-2V, and 1-5V, sensor types, when INPTDIR is Direct</i> $PVCALC = \frac{PVRAW}{100} * (PVEUHI - PVEULO) + PVEULO$
<i>For slidewire and 0-100 mV sensor types, when INPTDIR is Reverse:</i> $PVCALC = PVEUHI - \frac{(PVRAW - PVRAWLO)}{(PVRAWHI - PVRAWLO)} * (PVEUHI - PVEULO)$

4 High and Low Level Analog Input Point

4.2 Analog-to-Digital Conversion

For 0-5V, 0.4-2V, and 1-5V, sensor types, when INPTDIR is Reverse:

$$PVCALC = PVEUHI - \frac{(PVR\bar{A}W - PVR\bar{A}WLO)}{(PVR\bar{A}WHI - PVR\bar{A}WLO)} * (PVEUHI - PVEULO)$$

Sensor types and characterization options

The following table defines the HL and LL analog input point sensor types and PV characterization options.

Table 4-1 HL and LL analog input point sensor types

Sensor Type (SENSRTYP)	AI Processor Type	PVCHAR Options	PVRAW ¹	PVCALC	BAD PV Detection ²
0 to 5 V	HL & LL	Linear	%	EU	Range Check on PVCLAC
	HL & LL	Square Root			
	HL	Thermocouple			
	HL	RTD			
0.4 to 2 V	HL	Linear	%	EU	Range Check on PVCLAC
	HL	Square Root			
	HL	Thermocouple	%	EU	HLAI checks for open input
	HL	RTD			
1 to 5 V	HL & LL	Linear	%	EU	Range Check on PVCLAC
	HL & LL	Square Root			
	HL	Thermocouple	%	EU	HLAI checks for open input
	HL	RTD			
Slidewire	HL	Linear	Ratio	EU ³	Bad slidewire source, range check on PVCALC
0 to 100 mV	LL	Linear	millivolts	EU ³	Range check

4 High and Low Level Analog Input Point
4.2 Analog-to-Digital Conversion

Sensor Type (SENSRTYP)	AI Processor Type	PVCHAR Options	PVRAW ¹	PVCAL C	BAD PV Detection ²
	LLMUX				on PVCLAC
	RHMUX				
Thermocouple	LL	Thermocouple	μvolts	EU	Open thermocouple, and range check on PVCLAC
	LLMUX				
	RHMUX				
RTD	LL	RTD	milli	EU	Range check on PVCLAC
1	PVRAW is the voltage signal at the HPM Field Termination Assembly as a percentage of the voltage range for the sensor type. The exceptions are as follows: – For a thermocouple sensor type, PVRAW is in microvolts after reference junction compensation. If an open thermocouple is detected, PVRAW is set to NaN. – For an RTD sensor type, PVRAW is in milliohms after lead-wire compensation. If an open RTD is detected, PVRAW is set to NaN. – An external power source is used to excite the slidewire. The power source and the slidewire are connected to separate analog input points. One power source input can be used with several slidewire inputs. – For a Slidewire type, PVRAW is the slidewire ratio (V_{in}/V_{src}) where: V_{in} is the FTA voltage input for this data point (slot); V_{src} is the FTA voltage source at the slidewire source slot specified by parameter; SLWSRCID. If V_{src} is zero (fails the under-range check), PVRAW is set to "NaN." – For a 0-100 millivolt sensor type, PVRAW is the FTA voltage input for the slot.				
2	If the diagnostics determine that the A/D converter has failed, PVRAW of the slot is set to NaN.				
3	The normal operating range for PVRAW is configured by the user (for a thermocouple 0% = PVRAWLO, 100% = PVRAWHI; for a slidewire, 0 = PVRAWLO, 1 = PVRAWHI).				

Square-Root Conversion

The square-root calculation is applied to the PVRAW input such that 100% of span = 1.0. The square-rooted value is then converted to engineering units based on the configured PV engineering-unit range values. (For example, square root of 100% = 100%; square root of 50% = 70.71%.) The output value of the square-root conversion is PVCALC, which is calculated based on the state of the input direction parameter (INPTDIR) as defined in the following table.

Figure 4-2 PVCALC Calculation

<i>If PVRAW ≥ 0.0 and INPTDIR is Direct</i> $\text{PVCALC} = \sqrt{\frac{\text{PVRAW}}{100}} * (\text{PVEUHI} - \text{PVEULO}) + \text{PVEULO}$
<i>If PVRAW < 0.0 and INPTDIR is Direct</i> $\text{PVCALC} = - \sqrt{\frac{\text{PVRAW}}{100}} * (\text{PVEUHI} - \text{PVEULO}) + \text{PVEULO}$
<i>If PVRAW ≥ 0.0 and INPTDIR is Reverse</i> $\text{PVCALC} = \text{PVEUHI} - \sqrt{\frac{-\text{PVRAW}}{100}} * (\text{PVEUHI} - \text{PVEULO})$
<i>If PVRAW < 0.0 and INPTDIR is Reverse</i> $\text{PVCALC} = \text{PVEUHI} - \sqrt{\frac{-\text{PVRAW}}{100}} * (\text{PVEUHI} - \text{PVEULO})$

Thermal conversion when using Thermocouples

Thermal linearization is performed on thermocouple input types, and is selectable by parameter PVCHAR. The following thermocouples are supported by the analog input point:

- | | | | |
|----------|----------|-----------|----------|
| • Btherm | • Jtherm | • Rtherm | • Stherm |
| • Etherm | • Ktherm | • Rptherm | • Ttherm |



ATTENTION

The range of the thermocouple type used with the LLAI or LLMUX points can be increased by selecting Extended as the entry for the TCRNGOPT parameter. Refer to the PM Family PRD for the normal and extended ranges.

The LLAI and LLMUX points calculate the reference junction compensation from the measured reference junction output level. This value is stored and then later converted back to microvolts, with respect to 0 degrees C, for each thermocouple that is to be compensated. The cold-junction reference compensation (PVREFJN) parameter is expressed in microvolts for the specified thermocouple and is added to the microvolt value for PVRAW.



ATTENTION

In general, LLMUX points apply to (include) points built against the LLMUX IOP as well as the RHMUX IOP. The RHMUX does not have a unique point type.

Thermal conversion when using RTDs

Thermal linearization is performed on RTD input types, and is selectable by parameter PVCHAR. The following 3-wire RTDs are supported by the analog input point:

- | | | | |
|------------|------------|------------|------------|
| • PtDinRTD | • PtJisRTD | • NickIRTD | • CopprRTD |
|------------|------------|------------|------------|



TIP

For an RTD, the LLAI and LLMUX points calculate the lead-wire compensation and then subtract the value from PVRAW.

4 High and Low Level Analog Input Point

4.2 Analog-to-Digital Conversion

The maximum allowable lead-wire resistance and intrinsic safety barrier resistance for the RTDs are listed in the following table.



ATTENTION

RTD is not supported by RHMUX IOP.

Proper compensation for lead-wire resistance depends on the resistance being equal in each leg of the RTD. This includes resistance due to lead-wire resistance and intrinsic safety barriers. No provision is made to compensate for lead-wire resistance mismatch or intrinsic-safety-barrier resistance mismatch. Both the lead resistance and the intrinsic-safety-barrier resistance are allowed simultaneously when connected to an RTD in a Division 1 area.

Table 4-2 Max Allowable Lead Resistance and Max Allowable Intrinsic Safety barrier Resistance for RTD types

RTD Type	Max. Allowable Lead Resistance		Max. Allowable Intrinsic Safety Barrier Resistance	
	<i>Loop</i>	<i>Leg</i>	<i>Loop</i>	<i>Leg</i>
PtDinRTD 100 ohm DIN Characterization	20 ohm	10 ohm	18 ohm	18 ohm
PtJisRTD 100 ohm JIS Characterization	20 ohm	10 ohm	18 ohm	18 ohm
NickIRTD 120 Edison Type Characterization	20 ohm	10 ohm	18 ohm	18 ohm
CopprRTD 10 ohm SEER Standard Characterization	20 ohm	10 ohm	0.0 ohm	0.0 ohm

4.3 PV Characterization

PV input signal processing

The PV signal received from the field is characterized based on the entries that were made for the SENSRTYP, PVCHAR, PVTEMP, INPTDIR, and TCRNGOPT parameters as shown in the figure illustrated in AI Functional Overview, Operation.

The input PV signal is first converted to a raw PV signal (PVRAW) whose units can be %, ratio, millivolts, microvolts, or milliohms depending on the entry made for the SENSRTYP parameter.

The PVRAW signal is then converted to the engineering units.

4.4 PV range checking and filtering

PV range checking ensures that the PVCALC output of PV characterization is within the limits defined by parameters PVEXEULO and PVEXEUHI.

If...	then...
either of the limits is violated and clamping has not been specified	the output of the PVAUTO is set to NaN
either of the limits is violated and clamping has been specified	the output of the PVAUTO is clamped to PVEXEUHI or PVEXEULO, except when PVRAW (and consequently, PVCALC) is NaN in which case, PVAUTO will be NaN
the range-checked and filtered value is less than the value as was specified by configuring the LOCUTOFF parameter	the final output called PVAUTO is forced to PVEULO

First-order filtering is performed on PVCALC, as was specified through parameter TF (filter lag time).

4.5 PV source selection

The PVSOURCE parameter allows you to select the source of the PV for this data point. As shown in Functional Overview, Operation the PV can:

- be provided by the Range Checking and Filtering circuit (when PVSOURCE is Auto).
- be the manually entered PV (when PVSOURCE is Man).
- come from a sequence program (when PVSOURCE is Sub).

In addition, the PV source option parameter (PVSRCOPT) determines whether it is permissible to change the PV source to a source other than Auto. PVSRCOPT has two states: OnlyAuto and All. The All state allows the PV to be manually entered for this data point.

4.6 Alarming

The analog input data point compares the PV to threshold values and records the alarms in the database of the data point. Alarms are then reported by the High-Performance Process Manager Module (HPMM). The parameters that are associated with alarming in the analog input point are:

- | | | |
|-------------|------------|------------|
| • \$OLDEVDS | • PVEXHIFL | • PVLLTP |
| • ALENBAT | • PVEXLOFL | • PVLOFL |
| • BADPVFL | • PVHHFL | • PVLOPR |
| • BADPVPR | • PVHHPR | • PVLOTP |
| • CONTCUT | • PVHHTP | • PVROCNFL |
| • EIPPCODE | • PVHIFL | • PVROCNPR |
| • HIGHAL | • PVHIPR | • PVROCNTP |
| • HIGHALPR | • PVHITP | • PVROCPFL |
| • PTINAL | • PVLLFL | • PVROCPPR |
| • PVALDB | • PVLLPR | • PVROCPTP |
| • PVALDBEU | | |



REFERENCE - INTERNAL

Refer to the *PM Family Parameter Reference Dictionary* for the definitions of these parameters.

4 High and Low Level Analog Input Point

4.6 Alarming

5. Smart Transmitter Interface Point

5.1 STI Point Functional Overview

Family

The Smart Transmitter Interface (STI) point is a member of the I/O Point family.

Purpose

The Smart Transmitter Interface (STI) point provides an interface to Honeywell's advanced series of Smartline 3000 Smart Transmitters.

Description

The STI points are located on the STI IOPs. Each STI IOP has a maximum of 16 inputs, and it can communicate bidirectionally with up to 16 Smartline transmitters, regardless of the mix of transmitter types (pressure, temperature, or flow) using Honeywell's digitally enhanced (DE) protocol.

An STIMV IOP allows up to four multi-PV transmitters or a mix of multi-PV and single PV transmitter inputs that total no more than 16. A multi-PV transmitter is configured as if it were in n contiguous slots where n = the number of PVs expected. The STITAG parameter value for each contiguous slot must be identical. Refer to the PM/APM Smartline Transmitter Integration Manual for complete details.

Communication

The STI IOP and the Smartline Transmitters use bidirectional digital communication to allow you to configure, view, and modify the transmitter database from the Universal Station or GUS station. This digital protocol allows a more precise PV value to be transferred, thereby permitting more accurate control of the process. In addition, the transmitter can also send a secondary variable such as the transmitter temperature, cold junction temperature, or totalized value, depending on the transmitter type.

5 Smart Transmitter Interface Point

5.1 STI Point Functional Overview

Transmitter database

The transmitter database is configured at the Universal Station or GUS, and down-line loaded to the transmitter and the transmitter database can be up-line loaded to the STI IOP as required, when the STI point is in the inactive state. During normal operation (when the STI point is in the active state), each time that the transmitter broadcasts the PV value to the STI IOP, it also sends the one byte of its database (depending on the selected DECONF mode) to the STI IOP. This allows the STI IOP to compare the stored database to the newly received database to check for database mismatches. If a mismatch is detected, the PV is set to NaN and the status is set to DBCHANGE. You can easily correct the mismatch by down-line loading the database stored in the STI IOP.

Operation


A functional diagram of the STI IOP point is shown in the following figure. The STI point performs the following functions:

- PV Characterization.
- PV Range Checking and Filtering.
- Alarming.

5 Smart Transmitter Interface Point

5.1 STI Point Functional Overview

Figure 5-1 Smart transmitter input point functional diagram

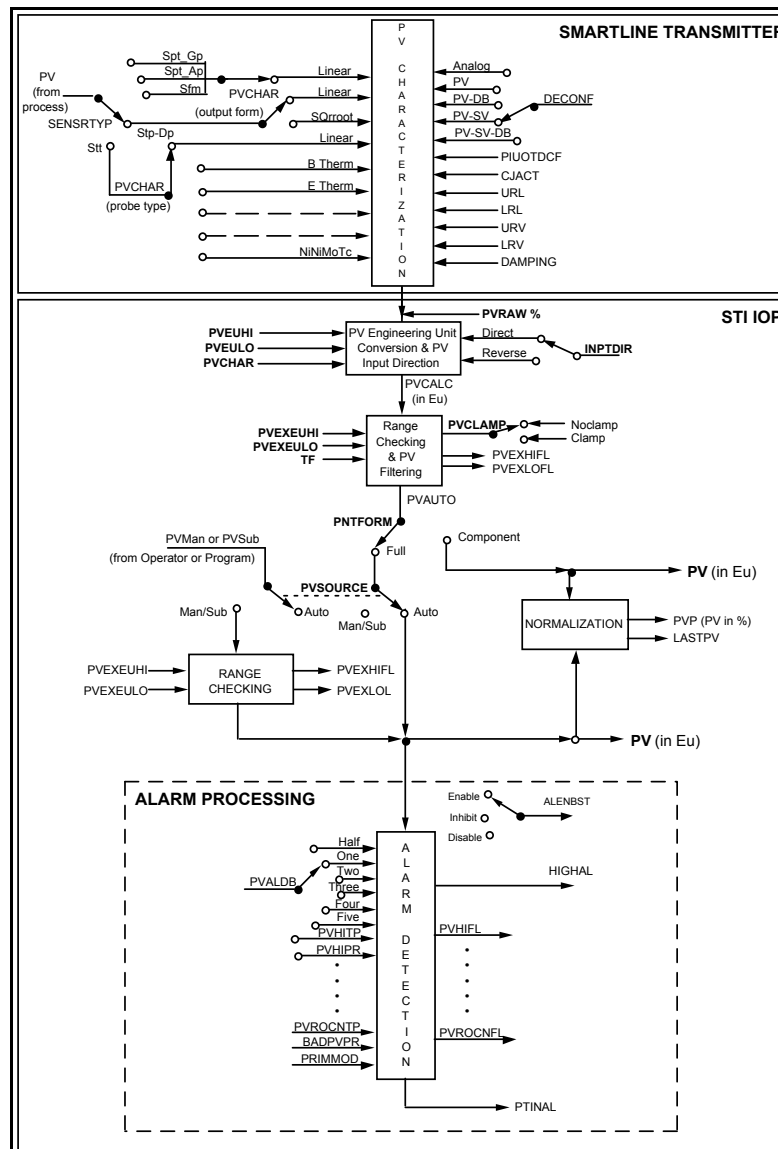

5 Smart Transmitter Interface Point

5.1 STI Point Functional Overview

Transmitters supported

The STI point can support the following Smartline Transmitter types:

- ST3000 Smart Pressure Transmitter for differential, gauge, and absolute pressure measurements.
- STT3000 Smart Temperature Transmitter for temperature, millivolts, and ohms measurements.
- MagneW 3000 Smart Magnetic Flow Transmitter for flow measurements.
- SCM3000 Smart Flow Transmitter (Coriolis method).
- Drexelbrook SLT Level Transmitter.
- MV 3000 Multivariable Pressure Transmitter.
- SGC 3000 Gas Chromatograph.

Transmitter parameters

All key transmitter parameters can be accessed from the Universal Station including:

- Upper and Lower Range Values.
- Damping.
- PV type.
- DE (Digital Enhanced communications) configuration variables.
- Status of the Transmitter.
- Transmitter's serial number and software revision number.
- Transmitter's scratchpad.

You access these variables through the point's Detail Display or custom-built schematics. In addition to the tag name assigned to the process point associated with the transmitter, the transmitter is also assigned a tag name and the access mechanism follows the TDC3000 parameter access mechanism. This allows all the LCN capabilities applicable to a data point to be also applicable to the Smartline Transmitters.

The STI IOP maintains a copy of the transmitter's database. When a transmitter failure occurs, the database can be down-loaded to the transmitter. This database save/restore feature can significantly reduce the downtime of a control loop by reducing the time in getting a replacement transmitter in operation. The transmitter database can also be saved to a History Module or removable media if a checkpoint request is initiated. This allows for centralized control of the transmitter database, which significantly minimizes the effort required to establish the transmitter database during startup or normal operation.

The STI IOP also allows the user to access the detailed status of a transmitter. The status is displayed at a Universal Station or GUS together with the scratchpad information that has been entered, including any maintenance notes.

Calibration of the transmitter can also be accomplished from the Universal Station or GUS. This function allows on-line adjustment of the transmitter's working ranges so that the reference points for a measurement are accurate.

In addition a Smart Field Communicator (SFC), which is a hand-held device, can also be physically connected to the appropriate FTA in the HPM cabinet to communicate with Smartline Transmitters without disrupting the process, as required (refer to the appropriate *Operating Guide for Smart Field Communicators*).

5.2 Parameter comparisons

Relationship between the STI IOP and the transmitter database

To configure the STI IOP point to operate with the appropriate Smartline Transmitter, it is necessary to know the parameter relationships between the STI IOP and the transmitter database. The following table lists and describes these relationships.

Smart Transmitter Database Parameter	STI IOP Parameter	Description
Upper Range Value Lower Range Value	URV LRV	Define the operating range of the transmitter. These values correspond to the values for PVEUHI and PVEULO, respectively.
Upper Range Limit Lower Range Limit	URL LRL	These parameters are the respective built-in maximum and minimum limits of the transmitter and they cannot be changed. These parameters are read-only parameters at the Universal Station or GUS. URL must be configured to match the URL value of the transmitter.
PV Damping	DAMPING	PV damping at the transmitter. Refer to PV Range Checking and Filtering in the Smart Transmitter Interface Point section.

5 Smart Transmitter Interface Point

5.2 Parameter comparisons

Smart Transmitter Database Parameter	STI IOP Parameter	Description
Tag Identifier	STITAG	Transmitter identifier. This parameter is a read-only parameter at the Universal Station or GUS.
Software Version	STISWVER	This parameter is a read-only parameter at the Universal Station or GUS.
Serial Number	SERIALNO	Serial number (PROM) of the transmitter. This parameter is a read-only parameter at the Universal Station or GUS.
Secondary Variable	SECVAR	- For a pressure transmitter, the secondary variable is the meter-body temperature of the transmitter. - For a temperature transmitter, the secondary variable is the cold-junction temperature. - For a flowmeter, the secondary variable is the totalized value. This parameter is a read-only parameter at the Universal Station or GUS.
Linear/Square Root Characterization	PVCHAR	Refer to PV Characterization.
Communication Mode	DECONF	Refer to Smart Transmitter Communication Modes.
Cold Junction Compensation Active	CJTACT	Applicable to STT 3000 only.



REFERENCE - INTERNAL


For more information on

- STI IOP, refer to the appropriate Smartline transmitter publication and to the PM/APM Smartline Transmitter Intergration Manual.
 - STI IOP parameters, refer to the PM Family Parameter Reference Dictionary.
-

STI point detail display

A detail display of a typical STI point is shown in the following figure. It also shows the location of the transmitter database parameters.

Figure 5-2 STI Point Detail Display

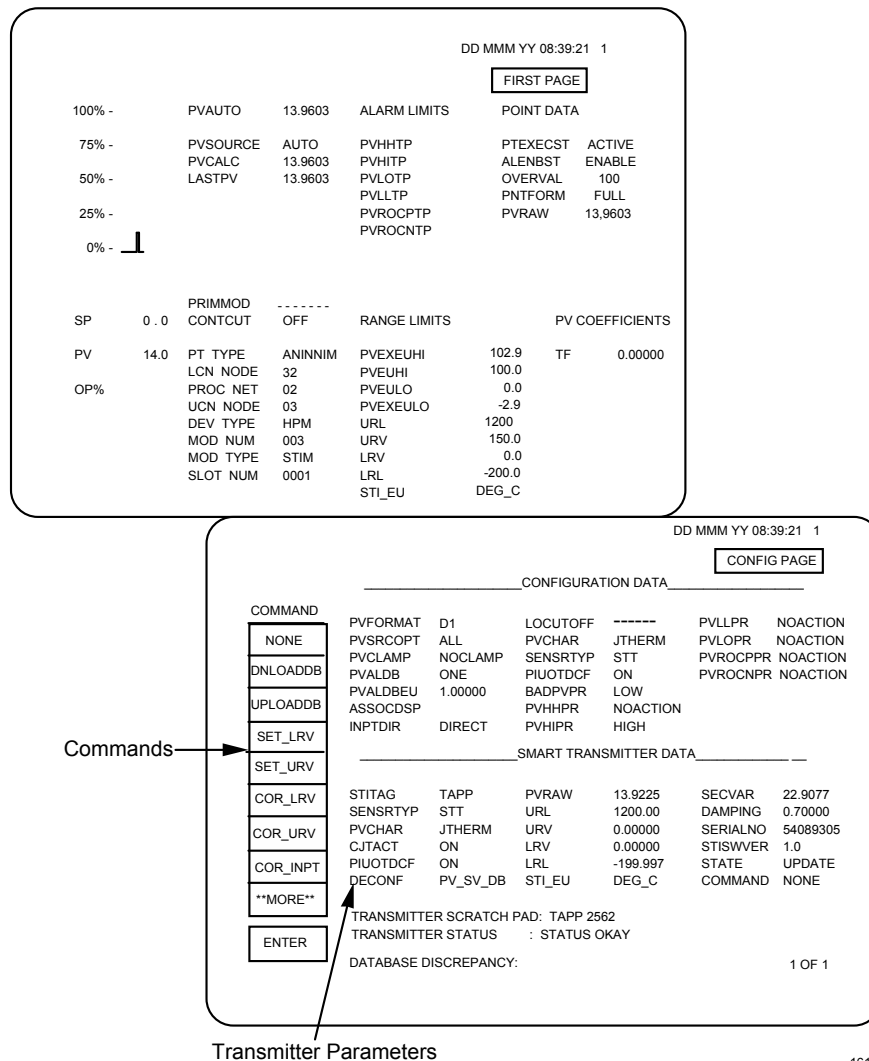

5.3 PV Characterization

PV input signal processing

The PV signal (PVRW) received from the transmitter has been characterized by the transmitter in terms of linear or square-root characterization and damping. For the STT 3000, PVRW is further characterized based on the entries that the user makes for the SENSRTYP, PVCHAR, and INPTDIR parameters as shown in the Smart transmitter input point functional diagram in the Operation section of STI Point Functional Overview. The following table lists the PV characterization options available for the various transmitter (sensor) types.

Sensor types and characterization options

The following table defines the STI sensor types and PV characterization options.

Table 5-1 STI sensor types and PV characterization


Sensor Type (SENSRTYP)	PVCHAR Options	PVRW ^{1,3}	PVCA LC	PV Detection ²
Spt_Dp (Differential Pressure)	Linear	% in H ₂ O	EU	Range check on PVCALC
	Square Root	% in H ₂ O	EU	Range check on PVCALC
Spt_Gp (Gauge Pressure)	Linear	% in H ₂ O	EU	Range check on PVCALC
Spt_Ap (Absolute Pressure)	Linear	% in H ₂ O	EU	Range check on PVCALC
Stt (Temperature) ⁴	Linear	% in H ₂ O	EU	Range check on PVCALC
	Thermocouple	% in °C	EU	Open thermocouple detection and range check on PVCALC
	RTD	% in °C	EU	Range check on PVCALC
	RTD Ohms	% in Ohms	EU	Range check on PVCALC
Sfm (Flow)	Linear	% m ³ /Hr	EU	Range check on PVCALC

Sensor Type (SENSRTYP)	PVCHAR Options	PVRAW ^{1,3}	PVCA LC	PV Detection ²
1) PVRAW is a percentage of the configured range for the sensor type. For Multivariable transmitters, PVRAW Engineering Units are different for each PV slot. 2) If the transmitter gross status indicates Output mode or Bad, PVRAW of the STI point is set to NaN, and PVSTS is set to Bad. 3) The normal operating range for PVRAW (0% = PVRAWLO, 100% = PVRAWHI) is configured by the user. 4) For the supported temperature ranges, refer to the definition of the PVCHAR parameter in the PM Family Parameter Reference Dictionary.				

Linear Conversion

If the entry for PVCHAR is Linear, the PVRAW input from the FTA is calculated as a proportion of the input span in percent, as determined from upper and lower range values URV and LRV. This proportion is then used in generating an identical proportion of the output span, as determined from PVEULO and PVEUHI shown in the following figure. The URV and LRV values are the 100% and 0% values that correspond to the PVEUHI and PVEULO values, respectively.

Figure 5-3 Linear Conversion STI IOP

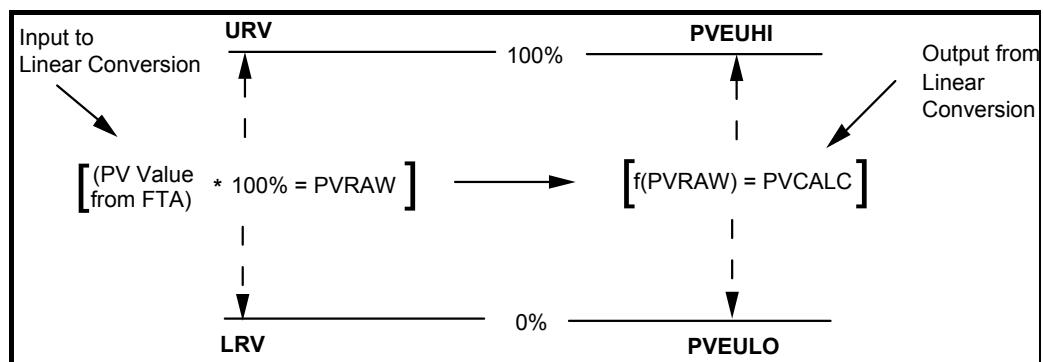

Square-Root Conversion

If square root is selected, this function is performed by the smart transmitter in its computation of PVRAW. The value for PVCALC is then determined in the same manner as linear conversion. These conversion equations are provided below.

Figure 5-4 Conversion Equations

For INPTDIR = Direct:
$PVCALC = \frac{PVRAW}{100} (PVEUHI - PVEULO) + PVEULO$
If INPTDIR = Reverse:
$PVCALC = \frac{PVRAW}{100} (PVEULO - PVEUHI) + PVEUHI$

Thermal conversion when using Thermocouples

Thermal linearization is available for the inputs of the Stt (temperature) transmitter. Thermal linearization is selectable by parameter PVCHAR. The following thermocouples are supported for an STI point:

- Btherm
- Ethern
- Jtherm
- Ktherm
- NiNiMoTC
- Ntherm
- RhRad
- Rtherm
- Stherm
- Ttherm
- W5W26TC
- W3W25TC

The STI point calculates the reference junction compensation from the measured reference junction output level. This value is stored and then later converted back to millivolts, with respect to 0 degrees C, for each thermocouple that is to be compensated. The external cold-junction reference compensation (CJTACT) parameter is expressed in millivolts for the specified thermocouple and is added to the millivolt value for PVRAW.

Thermal conversion when using RTDs

Thermal linearization is available for the inputs of the Stt (temperature) transmitter. Thermal linearization is selectable by parameter PVCHAR. For an RTD, the STI point calculates the lead-wire compensation and then subtracts the value from PVRAW. The following 3-wire RTDs are supported by the STI point:

- Pt200RTD
- Pt500RTD
- Cu10RTD
- Cu25RTD
- PtDinRTD (Pt100D)
- PtJisRTD (Pt100J)
- NicklRTD (Ni500)

5.4 PV Range Checking and Filtering

PV range checking

PV range checking ensures that the PVCALC output of PV characterization is within the limits defined by parameters PVEXEULO and PVEXEUHI.

If...	then...
either of the limits is violated and clamping has not been specified	the output of the range check is set to BadPV
either of the limits is violated and clamping has been specified	the output of the range check is clamped
If the range-checked and filtered value is less than the value specified by the user-configured LOCUTOFF parameter	the final output called PVAUTO is forced to PVEULO

PV filtering

PV filtering can be implemented at the STI IOP, or at the Smartline Transmitter. At the STI IOP, first-order filtering is performed on PVCALC, as specified by the user through parameter TF (filter lag time). At a transmitter, filtering is performed on the PV depending on the value entered for the DAMPING parameter using the SFC.

5 Smart Transmitter Interface Point

5.4 PV Range Checking and Filtering

You should decide the type of filtering required based on the following guidelines:

- The DAMPING parameter allows for better control accuracy because more PV samples are used in calculating the filtered PV value at the transmitter.
- TF can be changed on-process from the Universal Station. To change the DAMPING value requires the point to be made inactive and requires the database to be down-line loaded to the transmitter after the change has been made.



TIP

For better control accuracy, the use of the DAMPING value is preferred over the TF value. The transmitter accepts only certain DAMPING values from the STI IOP, and the value received must first be converted to one of the predefined DAMPING values that reside in the transmitter. This conversion is accomplished automatically by the STI IOP by finding the DAMPING value that is nearest to the desired DAMPING value.

DAMPING values differ between the Smartline Transmitters. The valid DAMPING values for each transmitter type are contained in the following listing (values listed are the first-order filter time constants in seconds).

Pressure (Spt)	Temperature (Stt)	Flow (Sfm)
0.0	0.0	0.0
0.16	0.3	0.5
0.32	0.7	1.0
0.48	1.5	2.0
1.00	3.1	3.0
2.0	6.3	4.0
4.0	12.7	5.0
8.0	25.5	10.0
16.0	51.1	50.0
32.0	102.3	100.0

5.5 PV Source Selection

The PVSOURCE parameter allows the user to select the source of the PV for this data point. As shown in STI Functional Overview, Operation, PV can be provided by the:

- Range Checking and Filtering circuit (when PVSOURCE is Auto)
- Manually entered PV (when PVSOURCE is Man or Sub)

In addition, the PV source option parameter (PVSRCOPT) determines whether it is permissible to change the PV source to a source other than Auto. PVSRCOPT has two states: OnlyAuto and All. The All state allows the PV to be manually entered for this data point.

5.6 Alarming

Function

The STI point compares the PV to threshold values and records the alarms in the database of the data point. The alarms are then reported by the High-Performance Process Manager Module (HPMM).

Associated parameters

The parameters that are associated with alarming in the STI point are as follows:

- | | | |
|------------------|----------|------------|
| • ALENBST | • PVHHFL | • PVLOFL |
| • BADPVFI | • PVHHPR | • PVLOPR |
| • <i>BADPVPR</i> | • PVHHTP | • PVLOTP |
| • PRIMMOD | • PVHIFL | • PVROCNFL |
| • PTINAL | • PVHIPR | • PVROCNP |
| • PVALDB | • PVHITP | • PVROCNT |
| • PVALDBEU | • PVLLFL | • PVROCPFL |
| • PVEXHIFL | • PVLLPR | • PVROCPPR |
| • PVEXLOFL | • PVLLTP | • PVROCPT |



REFERENCE - INTERNAL

Refer to the *PM Family Parameter Reference Dictionary* for the definitions of these parameters.

5.7 Smart Transmitter Communication Modes

All communications between the STI IOP and the Smartline transmitters are in bit-serial form using the Honeywell DE (digital enhanced) protocol. The communication mode for the transmitter is selectable through the DECONF (DE configuration mode) parameter, whose possible entries are as follows:

DECONF Entry	Definition
Analog	Not supported
Pv	Transmitter communicates only the PV (4-byte format)
Pv_Sv	Transmitter communicates the PV and the Secondary Variable (SV) (4-byte format)
Pv_Db see NOTE	Transmitter communicates the PV and the database (6-byte format)
Pv_Sv_Db see NOTE	Transmitter communicates the PV, SV, and the database (6-byte format)

NOTE: The use of these two modes is recommended because they offer database mismatch detection and on-process mismatch recovery.

5.8 Database Considerations

Normal database operation

During normal operation, the STI point database and the corresponding transmitter database contain the same information. If under special conditions, the databases are not the same, a status message appears on the STI point's Detail Display to indicate a database mismatch. Three possible ways that a database mismatch can occur between the STI IOP database and the transmitter database are as follows:

- Smart Field Communicator (SFC) is used to change PV-related values in the transmitter.
- A write operation from the Universal Station to the STI IOP (during a checkpoint restore or point building).

- The same transmitter has been reinstalled after bench calibration, or after the transmitter electronic module has been replaced and the LRV/URV values have been modified.

Database mismatch detection

The following parameters of the STI IOP database and the transmitter database are compared when the STI IOP checks for database mismatches:

- | | | |
|-------------|------------|-----------|
| • CJTACT | • DAMPING | • DE_CONF |
| • FREQ60/50 | • PIUOTDEN | • PVCHAR |
| • SENSRTYP | • STITAG | • URL |
| • URV | • LRV | |

If a database mismatch is detected, the first four parameter mismatches are displayed in the S1 status field of the STI point's Detail Display at the Universal Station or GUS. These mismatched parameters are preceded by the message "DATA BASE DISCREPANCY."

Correcting a database mismatch

You can correct the mismatch by one of the following methods:

- Download the STI IOP database to the transmitter by issuing a DnLoadDb command through the COMMAND parameter when the point is in an Inactive state. If the loading is successful, the point STATE changes to OK when the point is made active.
- Upload the transmitter database to the STI IOP by issuing an UpLoadDb command through the COMMAND parameter when the point is in an Inactive state. If the loading is successful, the point STATE changes to OK when the point is made active.
- Correct the mismatched parameter using the SFC. If the parameter or parameters are updated by the SFC to the same value as in the STI IOP database, the state changes from Mismatch to OK when the next database transfer from the transmitter occurs.

If a mismatch occurred because the Smart Field Communicator (SFC) was used to change a parameter in the transmitter database, the data in the transmitter database may be correct. In this case, the STI IOP does not know which value to use and issues an "SFC MODIFIED XMTR DATABASE" message, which appears on the Detail Display. The user should wait until the next database transfer occurs from the transmitter before taking action. At that time, the specific change is displayed.

5 Smart Transmitter Interface Point

5.9 Point States

A database mismatch can also occur because the transmitter was miswired during installation. This can be fixed by correcting the transmitter wiring.

For the MagneW3000, the URL value displayed on the SFC is a factor of 10 higher than the actual value displayed at the Universal Station. The value displayed at the SFC is the scaled limit while the value displayed at the Universal Station represents raw data. Also, the STI IOP does not respond to changes made in the MagneW3000 database parameters for up to 3 minutes when the database changes are made using the Local Setting Card. This card is an option that is available with the MagneW3000.

5.9 Point States

The STATE parameter indicates the current status of the STI IOP and the transmitter. The various states are listed in the following table.

Table 5-2 State Parameters of STI-IOP and the transmitter

States	Description
OK	Normal state; indicates that the STI point and the transmitter are OK. Transmitter is updating the PV value at the STI point. STATE remains OK when the point is made inactive.
DBChange	Indicates that a database mismatch between the STI point and the transmitter has been detected. Transmitter is not updating the PV value at the STI point. STATE remains DBChange when the point is made inactive.
Loading	Indicates that database loading between the STI point and the transmitter is occurring.
Loadcomp	Indicates that the database transfer between the STI point and the transmitter has been successfully completed.
Loadfail	Indicates that the parameter transfer between the STI point and the transmitter has not been successfully completed.
Calib	Indicates that certain parameters are being calibrated at the transmitter by the STI point.
Calcomp	Indicates that the calibration has been successfully completed.
Calfail	Indicates that the calibration has not been successfully completed.

5.10 STI IOP Commands

The COMMAND parameter allows the engineer to load configuration parameters in the smart transmitter and to calibrate the transmitter. (The point must first be placed in the Inactive state through the PTEXECST parameter.) The enumerations of the COMMAND parameter are as follows:

Table 5-3 STI-IOP command parameters

COMMAND Selection	Description
DnLoadDB	Load the STI IOP database into the transmitter (down-line load)
UpLoadDb	Loads the transmitter database into the STI IOP (up-line load)
Set_LRV	Set the Lower Range Value
Set_URV	Set the Upper Range Value
Cor_LRV	Corrects the Lower Range Value
Cor_URV	Corrects the Upper Range Value
Cor_Inpt	Correct the zero point
RstCor	Sets all input calibration parameters to their factory default values
Null	A command has not been issued by the STI IOP

The result of issuing a command to an STI IOP point is reflected in the STATE parameter for the point.

5 Smart Transmitter Interface Point

5.10 STI IOP Commands

6. Analog Output Point

6.1 AO Point Functional Overview

Family

The Analog Output Point is a member of the I/O Point family.

Purpose

The analog output point converts the output value (OP) to a 4-20 mA output signal for operating final control elements such as valves and actuators in the field. The OP parameter value can be controlled from an HPM regulatory point, an AM regulatory point, the operator, or a user program, depending on the selected mode and the entries for the RCASOPT and PNTFORM parameters.


Operation

To convert the OP value to a 4-20 mA signal, the analog output point performs

- Direct/reverse Output Function.
- Nonlinear Output Characterization.

An option allows redundant Analog Output points. The following is a functional diagram of the analog output point.

Figure 6-1 Analog Output Point Functional Diagram

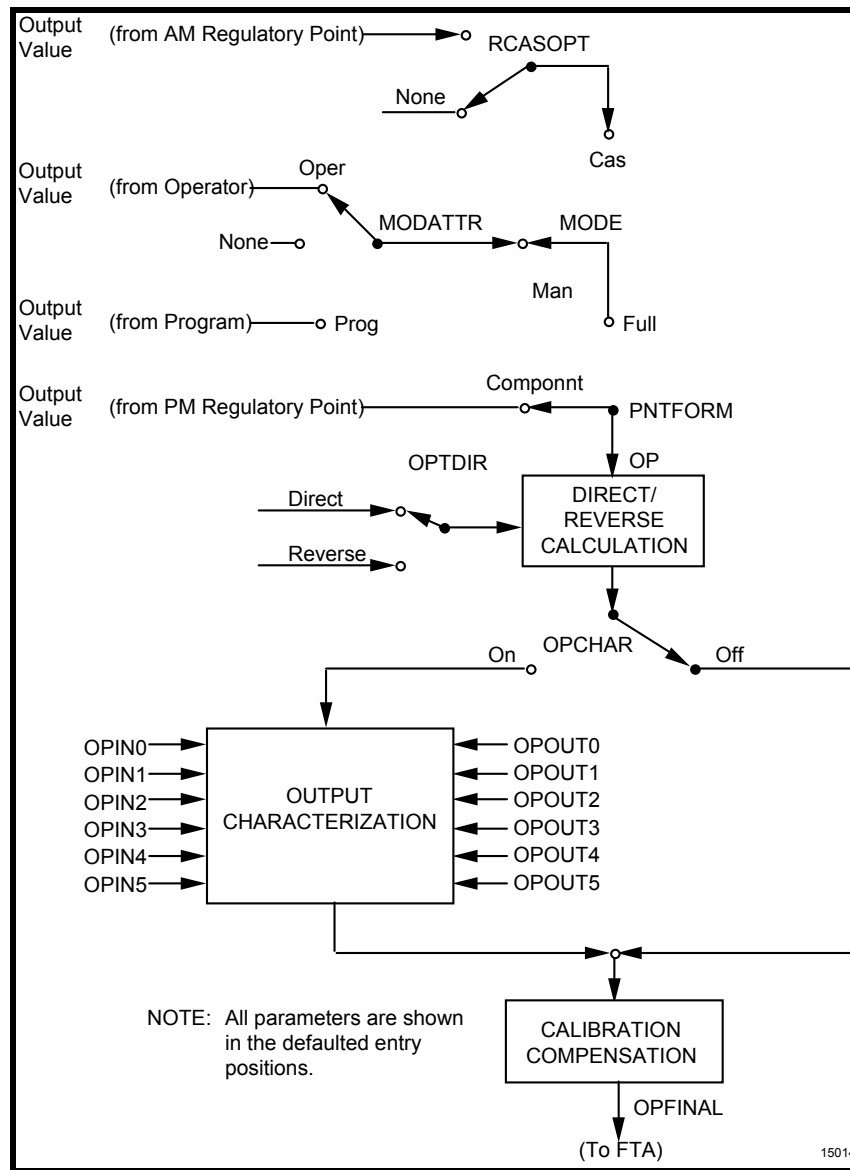

6.2 Direct/Reverse Output

Parameter OPTDIR allows the user to specify whether the output of the data point is direct acting (where 4 mA = 0%, and 20 mA = 100%) or reverse acting (where 4 mA = 100%, and 20 mA = 0%). The default mode is direct acting.

Output Indication

OUTIND parameter defines how the output of an analog data point is to be displayed at the Universal Station. The output display is determined by the selection of the value range, which can be:


- Direct = A 4 mA output from this data point is displayed as 0% at the Universal Station. A 20 mA output is displayed as 100%.
- Reverse = A 20 mA output from this data point is displayed as 0%. A 4 mA output is displayed as 100%.

Nonlinear Output Characterization

Output characterization allows the user to specify an output transfer function, using configurable X-Y coordinates that provide five linear segments. The length of each segment is variable according to the coordinates that can be entered as applicable constants for OPOUT1-4 and OPIN1-4 parameters, which are real numbers.

As shown in the following figure, the end points of the curve are fixed at coordinates OPOUT0,OPIN0 (at -6.9%) and OPOUT5,OPIN5 (at 106.9%). These coordinates are fixed at these values to ensure that neither the characterization function nor its inverse can provide output values which are outside the -6.9% to 106.9% range.

Figure 6-2 Output Characterization for an Analog Output Point

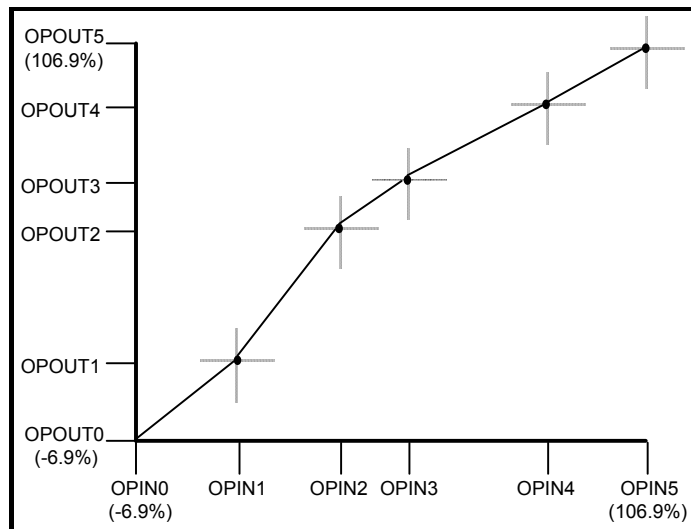

Depending on the output value, the analog output point interpolates linearly between the two nearest values. The interpolated value becomes the output value OPFINAL.

Output characterization is an optional function that can be implemented by setting parameter OPCHAR to On.

6.3 Calibration Compensation

The final stage of output processing in the analog output point is calibration compensation. This is accomplished in the data point using internal offset and scale constants. The output value OPFINAL is then routed to the field through the appropriate FTA.



ATTENTION

Slot or module level soft failures can prevent a point (or points) from outputting to the field. The regulatory control point will initiate a "Bad Output" alarm (If configured) when any connection is broken. If all configured point connections to the field are broken, the regulatory control point driving that analog output slot goes into initialization.

6.4 Disable Output Alarming when Using Open-Line Detection

With R640, *\$OLDEVDS* disables the alarms associated with an open AO output line. This function allows you to disable the OUTPUTFL soft failure alarms generated by the AO IOPs when transmitters or positioners are physically disconnected for normal maintenance.

6.5 Pre-determine the mode of the point when error occurs in IOL/IOP communication

With R680, *\$BADOCMD* parameter is added to the regulatory control points. This parameter allows you to pre-determine the mode of the point to either

- hold at its current value,
or
- switch to the MANual mode when there is a communication error.

Depending on the values configured, the initialization request is set, the upstream points are initialized, and the control is frozen.

The sequence of events in a point and the four enumeration values are described in the following table:

Table 6-1 Event sequence

If the Enumeration value is this ...	Then this is the sequence of events for the point...	
	During an IOP communication error	After an IOP communication error
SHEDMAN	Initialization request is set. Mode sheds to MANual.	Initialization request is reset. Mode remains in MANual.
15_SEC	Initialization request is set. If error exists even after 15 seconds, then mode sheds to MANual.	If the error ceases before 15 seconds, the initialization request is reset and the point continues to work as earlier. Otherwise, the initialization request is reset and the mode remains in MANual.

6 Analog Output Point

6.5 Pre-determine the mode of the point when error occurs in IOL/IOP communication

If the Enumeration value is this ...	Then this is the sequence of events for the point...	
	During an IOP communication error	After an IOP communication error
60_SEC	Initialization request is set. If error exists even after 60 seconds, then mode sheds to MANual.	If the error ceases before 60 seconds then the initialization request is reset and the point continues to work as earlier. Otherwise, the initialization request is reset and the mode remains in MANual.
NO_SHED	Initialization request is set.	Initialization request is reset. The point continues to work as earlier.

7. Digital Input Points

7.1 DI Points Functional Overview

Family

The digital input point is a member of the I/O family of points.


Purpose

A digital input point converts a digital PVRAW signal received from the field to a PV that can be used by other data points in the HPM and the system. A functional diagram of the digital input point is shown in the following figure.

7 Digital Input Points

7.1 DI Points Functional Overview


Figure 7-1 Digital Input Point Functional Diagram

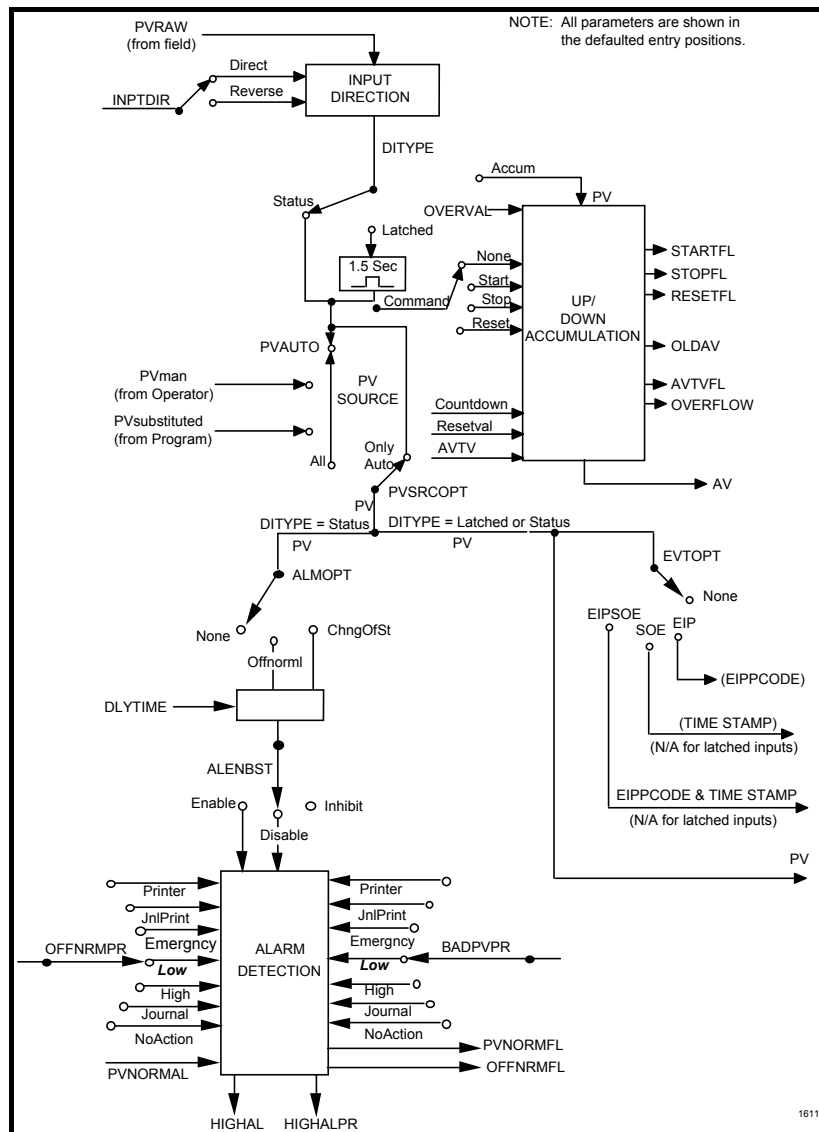

Current state

The current state of the PV input is represented on the Universal Station Group and Detail Displays as two boxes, as shown in the following figure. The boxes are lighted or extinguished depending on the current state of PVRAW and the input direction as configured through the INPTDIR parameter, as shown in the chart in the following figure. The current PV state is also available to be used as an input to logic slots, and other HPM control functions.

Figure 7-2 DI Input States

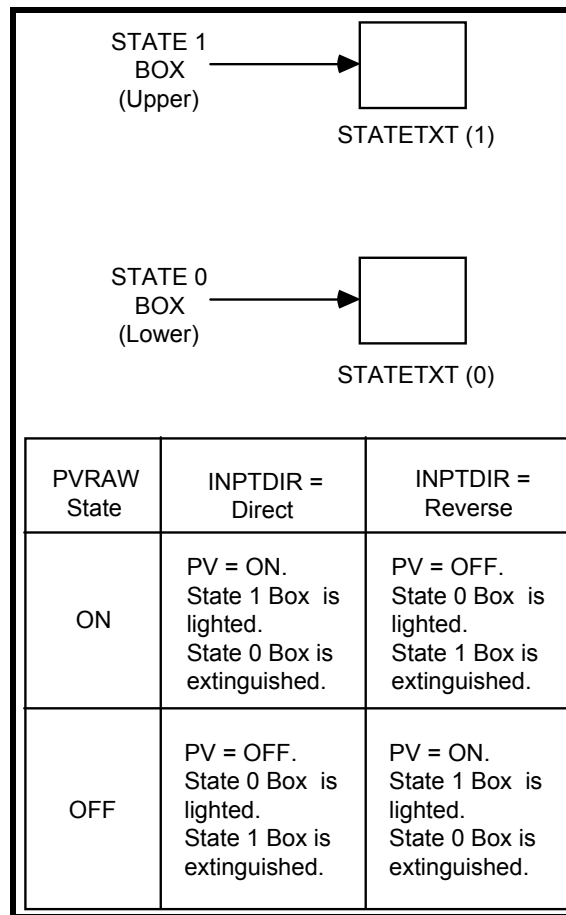

Bad PV flag

Control strategies can test for a bad Digital Input PV. Parameter BADPVFL is set ON when PV source:

- has been switched to Substituted, and the point is inactive or the module status is Idle.
- is AUTO and the PV is not being updated, because either the point is inactive, the module is idle, there is a slot soft failure, or the FTA is missing.

Digital input point types

The digital input point is a single-input point that can be configured as:

- Status Digital Input Point.
- Latched Digital Input Point.
- Accumulation Digital Input Point.

7.2 Status Digital Input Point

Description

For this digital input type, the PVAUTO value represents the state of the raw input signal after the direct/reverse conversion is performed. The status digital-input point can be configured for PV source selection, detection of off-normal alarms, and for reporting any PV state changes to the system. The status digital input point is selected by entering Status for the DITYPE parameter.

PV source selection

The PV source parameter (PVSOURCE) option determines the source of the PV for a status input point. The source can be the PV input from the field (PVauto), the PV state entered by the operator (PVman), or it can be supplied by a user program (PVsub). PVSOURCE has no effect on the latched and accumulation options of the digital input point. If PVSOURCE is PVauto, PV tracks PVRAW.

Off-normal alarming

Enabling, Disabling, and Inhibiting Off-Normal Alarms

The ALENBST parameter allows the operator to enable (permit), disable, or inhibit the off-normal alarm. Disabling the alarm still allows the alarm to be listed on the Group and Detail displays. Inhibiting the alarm prevents the current PV state from being compared to the configured normal state.

Off-Normal Alarming & PV Change Reporting

Off-normal alarming can be selected for the digital input point through the ALMOPT parameter. An off-normal alarm is generated when the input PV state is different than the configured normal (desired) state for the point as specified by the PVNORMAL parameter. The priority of the off-normal alarm is determined through the OFFNRMMPR parameter (ALPRIOR may also be used to maintain compatibility with schematics and CL programs designed for pre-R500 software).

Additionally, all PV state changes can be historized as determined by HM volume configuration.

Change Of State Reporting

Digital Input Status points (and Sequence of Events points) can be configured for Change Of State (COS) alarm reporting through the ALMOPT parameter. The alarm is generated when the input changes state in either direction. Alarm priority is determined through the OFFNRMMPR/ALPRIOR parameters as before.

COS alarms are removed from the Alarm Summary display following acknowledgement. The Point does not remain in alarm so there is no Return-to-Normal. Point Detail or Group displays will never show a point in COS alarm.

Older digital input IOPs may need to have a new firmware chip for COS reporting. Check the IOP's detail display. For COS reporting the Digital Input IOP firmware revision must be 5.0 or later.

Note that when a point with COS reporting is changed from Inactive to Active, a COS alarm is generated if the PV = 1. There is no COS alarm if the PV = 0. The same alarming occurs if the point is active and the IOP is put into Run mode.

Digital Input Alarm Delay

With R660, parameter \$DLYOPT allows you to select one of the following four alarm-delay options:

- PMOFFDLY – Existing alarm-delay option with delay time specified by DLYTIME parameter (IOP based).
- NMOFFDLY – NIM based alarm off-delay option.
- NMONDLY – NIM based alarm on-delay option.
- None – Alarms are not delayed.

The alarm delay option can be disabled in one of the following ways:

- Setting the DLYTIME parameter to 0, or
- Setting the \$DLYOPT option to None.

Note that you can switch between the options and retain the delay time.

Note1: If a point is in alarm delay, and the CONTCUT parameter for the point is enabled, the delay timer is terminated. When CONTCUT is disabled, the subsequent alarms follow the configured delay.

Note 2: If a point's return-to-normal condition is delayed because of the OFF delay and CONTCUT is made TRUE and then FALSE, the return-to-normal condition is reported immediately. If a point's alarm is delayed because of the ON delay and CONTCUT is made TRUE and then FALSE, the alarm is reported only after the configured delay period.

PM OFF delay—When off-normal alarming has been configured and \$DLYOPT is configured as PMOFFDLY, any off-normal event is detected and reported to the system. Further off-normal alarms for the same data point are not reported until the time delay (0 to 60 seconds) specified by the DLYTIME parameter expires. When the time delay expires, the time-delay function is disabled and the off-normal alarm for the data point can again be reported.

For Change of State alarms, when a PV state change occurs, a COS alarm is produced and the delay timer is started. When DLYTIME expires, two situations are possible:

- the PV is in the same state and future state changes are immediately alarmed.
- the PV is in the opposite state (it may have changed many times during the DLYTIME period) so a second COS alarm is produced and the timer starts again.

NIM ON delay— With R660, when the alarm delay option \$DLYOPT is configured as NIMONDLY and an off-normal alarm is detected, the event is not reported to the system until the time delay (0 to 9999 seconds) specified by the DLYTIME parameter has expired. When the time delay expires, if the point is still in alarm, the time-delay function is disabled and the off-normal alarm for the data point is reported. After the time delay expires, no action is taken if the point ceases to be in the alarm condition.

NIM OFF delay— With R660, when the alarm delay option \$DLYOPT is configured as NIMOFFDLY, and when the point returns to the normal state from the alarm state, the return-to-normal is not reported to the system until the delay time (0 to 9999 seconds) specified by DLYTIME parameter has expired. When the time delay expires and the point continues to be in the normal condition, the return-to-normal condition is reported.

After the time delay expires, no action is taken when the point ceases to be in the return to normal condition.

Note that the DLYTIME parameter is resident in both the NIM and the IOP, and they are synchronized. With R660, view-only parameter \$PMDLYTM is provided to monitor the value of IOP DLYTIME value. This parameter shows 0 when \$DLYOPT is set to NMOFFDLY, NMONDLY or NONE. When \$DLYOPT is set to PMOFFDLY, the parameter shows the value specified for DLYTIME.

NIM OFF delay— With R681, the OFF delay feature is provided for BADPV and BADCTL alarms using the new \$DLBADAL parameter. This parameter allows you to delay the return to normal condition (RTN) for a time as specified by the DLYTIME parameter.

During delay period, if any of the BADPV or BADCTL alarm returns to normal, the timer is restarted from its initial configured value. When the timer expires and the point is not in alarm, the return to normal is reported. The RTN event is reported with the time stamp when the timer expires and not the actual RTN time.

While in delay, the following instances can cause the RTN to get reported before expiry of the timer:

- Change in \$DLBADAL parameter value, and change in DLYTIME.
- Change in priority of the BADPV and BADCTL alarms.

Note: The OFF delay feature does not delay reporting of alarms; it delays only the return to normal (RTN).

Alarm delay reset— The Alarm delay can be reset by any of the following events:

- When \$DLYOPT is set to NMONDLY, if the input chatters during the alarm delay period, the delay time is reset and restarted whenever the point goes into the alarm state.
- When \$DLYOPT is set to NMOFFDLY, if the input chatters during the alarm delay period, the delay time is reset and restarted whenever the point goes to the return- to-normal state.

Scenarios

- When the delay timer is running, if the NIM/xPM/IOP switches over to its redundant partner during an existing alarm condition, which is being delayed, the delayed alarm is reported immediately.
- If there is a change in the value of DLYTIME when the \$DLYOPT is NMONDLY or NMOFFDLY and the delay timer is running the alarm will be reported immediately and the new value is in effect from the next cycle.
- If there is a change in the value of DLYTIME when the \$DLYOPT is PMOFFDLY and the delay timer is running the new value is not applied until the delay time for that cycle is completed.
- If there is a change in the value of \$DLYOPT from PMOFFDLY to NMOFFDLY or NMONDLY or NONE, the new value is not applied until the delay time for that cycle is completed.
- If there is a change in the value of \$DLYOPT from NMOFFDLY or NMONDLY or NONE to PMOFFDLY or NMONDLY or NMOFFDLY or NONE, the new value is taken into effect immediately.
- Whenever there is a configuration change that affects the alarm (like priority change, ALENBST change, AUXUNIT change, or contact cutout change) and if the delay timer is running, the timer will be terminated, and the delayed alarm will be reported immediately.

Note that when the value of \$DLYOPT is set to PMOFFDLY, if the input chatters during the alarm delay time, the delay time is not restarted.

Note: Change of state alarms are momentary state change alarms and do not have Return to Normal events. Therefore, they must not be configured for NMOFFDLY. In addition, if there is an alarm-related configuration change when the Change of State alarm is subjected to delay, the delayed alarm may not be reported.

Event Reporting

The EVTOPT parameter for the status input allows the user to optionally specify the tag name (EIPPCODE) of a data point in the system that is to be notified when the PV changes state, and/or specify that a time stamp be added to the reported PV state change.

For a status input point, EVTOPT has the four possible entries: None, EIP, SOE, and EIPSOE. EIP specifies that the user supply the tag name of the data point in the system that is to receive the PV state change, while SOE specifies that a time stamp is added to the PV state change to establish a sequence of events.

Change of State Reporting can initiate Event Initiated Processing if the point is configured for both COS and EIP. Note that digital input points that have COS (or Off Normal alarming) and EVTOPT EIP configured will have EIP triggered twice. EIP processing associated with COS reporting is not recoverable for NIM/HPM failovers. Full EIP recovery is available for DISOE points.

7.3 Latched Digital Input Point

Description

To capture the occurrence of momentary digital inputs, such as from pushbuttons, requires you to configure the digital input point as a latched digital input point. Configuring the point as a latched point is accomplished by entering Latched for the DITYPE parameter.

When configured as a latched input point, an input pulse that is on for a minimum of 40 milliseconds is latched true for 1.5 seconds. This ensures that any control function that needs to monitor this event will execute at least once during the time that the signal is latched on.

The current state of the latched PV input is represented on the Universal Station Group and Detail displays as two boxes, as shown DI Functional Overview. The boxes are lighted or extinguished depending on the current state of PVRAW and the input direction as configured through the INPTDIR parameter. The current PV state is also available to be used as an input to logic slots, and other HPM control functions.

Event reporting

The EVTOPT parameter for the latched input allows the user to optionally specify the tag name (EIPPCODE) of a data point in the system that is to be notified when the PV changes state. For a latched input point, EVTOPT has two possible entries: None and EIP.

7.4 Accumulation Digital Input Point

Description

The accumulation type digital input point counts the transitions of the digital input pulses received from the field. The digital input point is configured for accumulation by entering Accum for the DITYPE parameter.

7 Digital Input Points

7.4 Accumulation Digital Input Point

Up/Down accumulation

The accumulation type digital-input point can be incremented or decremented depending on the entry made for the COUNTDOWN parameter. If the entry for this parameter is Off, the point is to be incremented by the field transitions; if the entry is On, the point is decremented. The accumulated or decremented value is the value of parameter AV.

Accumulator commands

The operator has the capability of issuing start, stop, and reset commands to the accumulator for starting, stopping, and resetting the accumulation. For resetting the accumulator, the operator can specify the value to which the accumulator is reset by using the RESETVAL parameter to enter the value. When the accumulator is reset, the old accumulated value is displayed using the OLDAV parameter.

Target value

The operator can specify the accumulator target value through the AVTV parameter. When the accumulated value (PVAUTO) reaches the target value (PVTV), parameter AVTVFL is set to On. AVTVFL is set to Off when the accumulator is reset.

Overflow

If the accumulated value AV overflows the accumulator ($AV > 32767$), the OVERFLOW parameter is set to On. In addition, it is set to 0 when the accumulator is configured for counting up (incrementing); it is set to 32767 if it is configured for counting down (decrementing).

7.5 Sequence of Events Digital Input Point

Description

Sequence of Events (SOE) points are used to report the order of occurrence of physical events. The SOE digital input IOPs can use the same type FTAs as digital input cards, but the best overall performance is obtained when using the high resolution 24 VDC Digital Input FTAs.

SOE events are recorded in a journal with a timestamp so that you can determine, for example, which event started an upset and the progression of events thereafter. The record includes the point ID, point descriptor, state text unit, and time of occurrence to one ms resolution. Refer to the *Engineer's Reference Manual* for a discussion of SOE Journal size requirements. For SOE Journal and Process Unit Journal Configuration requirements refer to the *Network Configuration Forms Instruction* manual.

SOE points can also be configured for Change of State Reporting (an alarm is generated when the input changes state in either direction).

Each sequence of events IOP card provides 32 status and/or latched type inputs.

Timestamping

Timestamps are based on the "wall clock" time entered in the LCN. Time is broadcast over the UCN every six seconds by the NIM with the lowest UCN address. To do this, the time synch parameter (TIMESYNC) must be enabled during NIM configuration and the NIM must contain an EPNI card. If there is a redundant NIM, its TIMESYNC parameter should also have been enabled in case the primary NIM fails.

The HPMM receives time sync messages from the NIM and broadcasts time synch messages on its own I/O Link every two seconds to the Sequence of Events IOPs. The IOP time stamps an input state change with a code that is converted to, and reported as, wall clock time by the HPMMs. Each IOP can store up to 20 seconds of state changes (for all 32 points) before older events are overwritten.

If an HPMM fails, or if event collection by the HPMM is stopped or delayed, or if the buffer in the IOP becomes full, the IOP rejects newer events (that is, it saves the older events).

If the DISOE IOP hardware detects loss of one or more physical events, then an SOE Lost event packet is passed in the System Status Journal (not the SOE Journal). This packet contains the time at which lost events were detected, and should be used in conjunction with the SOE journal to correlate the SOE events. SOE lost events are usually caused by a chattering input.

Specifications and reporting

Resolution

The operator sees one millisecond resolution as reported in the SOE Journal. Event time is reported in hours, minutes, seconds, and milliseconds. The entries are further sorted at a sub-millisecond level that affects the order of entry but does not appear in the journal.

Reporting

Typical SOE Journal entries appear as follows:

Date (MM/DD/YY)

10:50:21:848	SE150501	ON
10:50:21:849	SE150501	OFF
10:50:21:850	SE150502	ON
10:50:21:851	SE150502	OFF

7 Digital Input Points

7.5 Sequence of Events Digital Input Point

Minimum physical event separation

The following table shows the guaranteed Minimum Physical Event Separation (MPES) values using various Field Termination Assemblies for two digital state change events occurring between two points. In one case the events are on the same IOP. In the other case, assume that the events are in different HPMMs on two separate UCNs, logical or physical, or in case of NIM failover. Assume that both points are using the same type of FTA. These specifications implicitly include DISOE IOP and/or HPMM failovers, are valid for stable system operating conditions, and represents the guaranteed worst-case conditions.

Digital Input FTA Type and Model #		MPES	
		<i>2 Turn-On Events in Same IOP</i>	<i>2 Events (On/Off) on Different UCNs</i>
High Resolution 24Vdc	(MU/C-TDID12/52)	3.0ms	6.5ms
Galvanic 24Vd	(MU/C-GDID12/13/82/83)	6.6ms	7.4ms
Low Cost 24Vdc	(MU/C-TDID72)	10.6ms	10.6ms
120Vac	(MU/C-TDIA12/52)	44.1ms	44.1ms
240Vac	(MU/C-TDIA22/62)	44.1ms	44.1ms

Configuration

Digital input SOE IOP points are configured by selecting the DIGITAL INPUT target from the NIM Point Build Menu. The configuration considerations are similar to those described for the conventional digital input point, with the following additions.

PNTMODTY

For Point Module Type, select DISOE.


DITYPE

Choose STATUS as the Digital Input Type. Note that the SOE IOP can be used as a conventional digital input point if you choose Latched.


DEBOUNCE

The contact debounce time parameter specifies the time interval used to debounce an input from mechanical contacts of a field input source. It is defined as the length of time following an input state change during which the input must remain unchanged in the new state to declare it a valid event. DEBOUNCE has a range of - 50 milliseconds in one millisecond increments. The default value of 10 ms should suffice for most contacts. If not, choose a value slightly longer than the manufacturer's specified contact bounce time.

The following figures illustrate debounce operation.

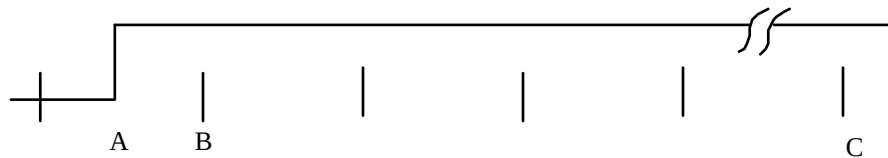

- This waveform represents the field input.
- Tick marks across the waveform indicate the 200 microsecond scan intervals of the DISOE IOP hardware.
- Assume that the input state changes at point A.
- At point B, the state change is detected, the current time and old state are recorded and the debounce timer is started.

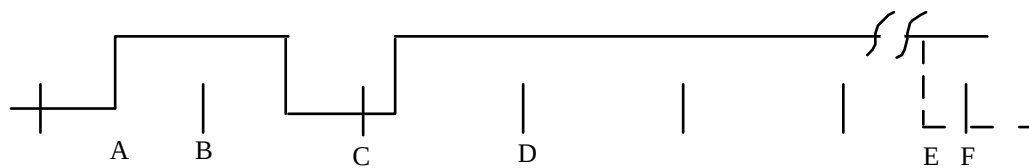

- If the input—
 - remains at a steady state until the debounce timer expires, then an event is generated with a timestamp corresponding to the time of detection (point B).
 - changes before the debounce timer expires (point c), then the change of state event detected at B is discarded, the timer is restarted and runs for the full debounce time.

7 Digital Input Points

7.5 Sequence of Events Digital Input Point

- If a new input detected at D remains in a steady state until the debounce timer expires (point F), then an event is generated with a timestamp corresponding to the original time of detection (point D).
- If the input has returned to the old state (dotted line at E) when the debounce timer runs out (point F), no event is generated.

PVCHGDLY

The PV change delay parameter specifies the time of separation in seconds for reporting two consecutive PV change events from the same input source. It is intended to prevent repeated rapid reporting of PV change events (that is, chattering). It can be configured over a 0–60 second range in one second increments. It applies to points configured as EIP, EIPSOE, or SOE only. Ideally, PVCHGDLY AND DLYTIME should have the same value.

When a PV state change is detected, the change is reported and the PV change delay timer is started.

If the PV state

- does not change before the delay timer runs out, no further action is taken.
- changes only once before the delay timer runs out, this second event is noticed and timestamped with the actual time of detection, but it is not reported until the delay timer expires.
- changes more than once before the PV change delay timer runs out, only the last state change is noticed and timestamped but not yet reported. When the delay timer expires, if the PV state is—
 - different from the state that started the timer, this event is reported.
 - is the same as the original PV state that started the timer, no event is reported.

8. Digital Output Point

8.1 DO Point Functional Overview

Family

The digital output point is a member of the I/O Point family.


Purpose

The digital output point provides a digital output to the field based on the origin of the input and the configured parameters.

Description

A functional diagram of the digital output point is shown in the following figure. The digital output point does not have any modes.

Figure 8-1 Digital Output Point Functional Diagram

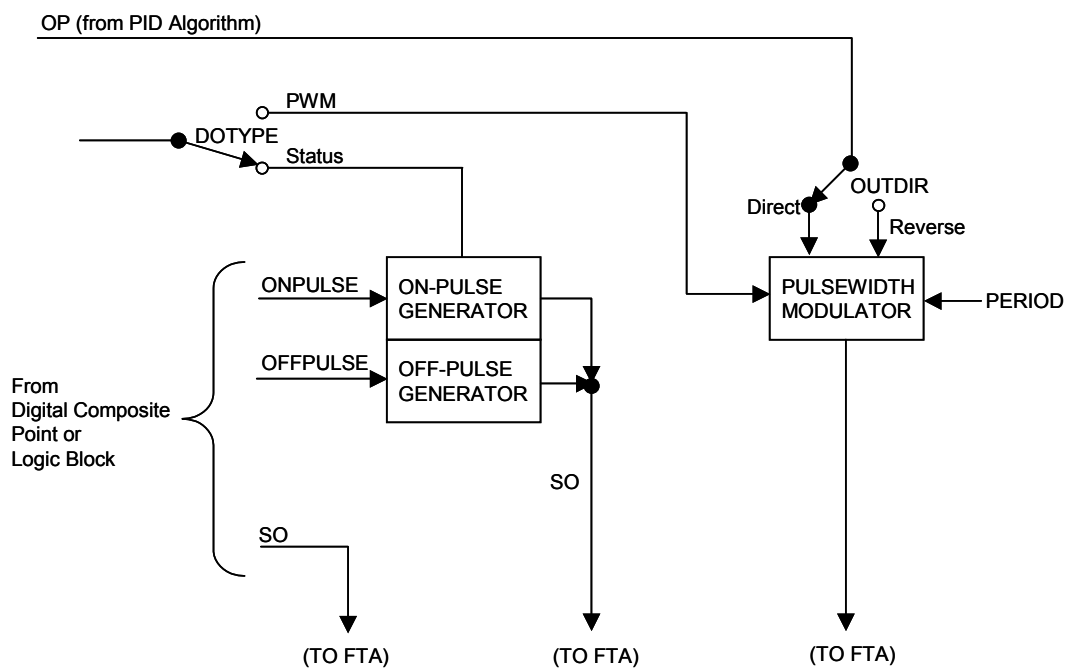

DO point types

There are two types of digital output points:

8 Digital Output Point

8.2 Pulse Width Modulated DO Point

- Pulse Width Modulated DO Point.
- Status DO Point.

Selection of the output type is accomplished through the DOTYPE parameter shown in the figure illustrated in DO Point Functional Overview, Description. Actual output action can be status, latched or momentary, depending on the configuration of the digital composite point. The default for untagged component DO points is Status.

8.2 Pulse Width Modulated DO Point


PWM DO point use

The Pulse Width Modulated (PWM) type is used in combination with RegCtl algorithms to provide true proportional control.

PWM DO point input

The pulse width modulated output type can receive its input from an HPM regulatory point (that has been configured for a PID type algorithm) through a user-specified output connection. The length of the pulse is derived from the OP parameter provided by the regulatory point. Because OP is in percent, the percent value becomes the percent on-time for the pulse whose period (1 to 120 seconds) is specified by the PERIOD parameter, as shown in the timing diagram in the following figure.

Figure 8-2 PWM Type Digital Output Point Waveforms

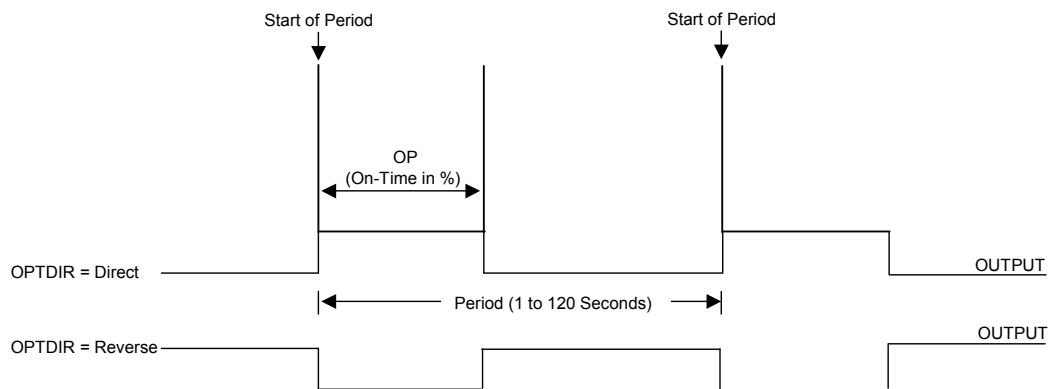

PWM DO point output

The output direction of the output signal can be configured to be direct or reverse acting by using the OPTDIR parameter, as shown in the timing diagram in the figure illustrated in Pulse Width Modulated DO Point, PWM DO point input.

Calculating PWM DO point pulse on-time

The pulse on-time for direct and reverse acting outputs is calculated as defined in the following table.

Figure 8-3 Calculation of pulse-on-time and reverse acting outputs

<i>For direct action:</i>
$\text{Pulse On-Time} = \frac{\text{OP\%} * \text{PERIOD}}{100}$
<i>For reverse action:</i>
$\text{Pulse On-Time} = \frac{100\% - \text{OP\%} * \text{PERIOD}}{100}$



ATTENTION

If the value of OP is less than 0%, it is clamped to 0%; an OP with a value greater than 100% is clamped to 100%.

Initialization Request Flag

Parameter INITREQ is set ON when a PWM type output is configured.



ATTENTION

Digital Composite points or Position Proportional control algorithms are automatically forced to initialize when outputting to a Digital Output point whose INITREQ is ON.

8.3 Status DO Point

Status DO point use

The status type output is the normal configuration for digital outputs that are linked to digital composite points.

Status DO point input

The status output type can be controlled from a digital composite-point output, a logic slot output, or a RegCtl point (that has been configured for the PosProp algorithm) as determined by the output connection.

Status DO point output functions

Output latch function


The output latch function is obtained by linking digital composite-point output connections to the SO parameter.

Pulsed output function

Pulsed operation (pulse-on or pulse-off) can be obtained by linking the output connections to the ONPULSE and OFFPULSE parameters, respectively.

The ONPULSE parameter sets SO to On for the specified duration, as shown in the following figure.

Figure 8-4 Status Type Digital Output Point Waveforms

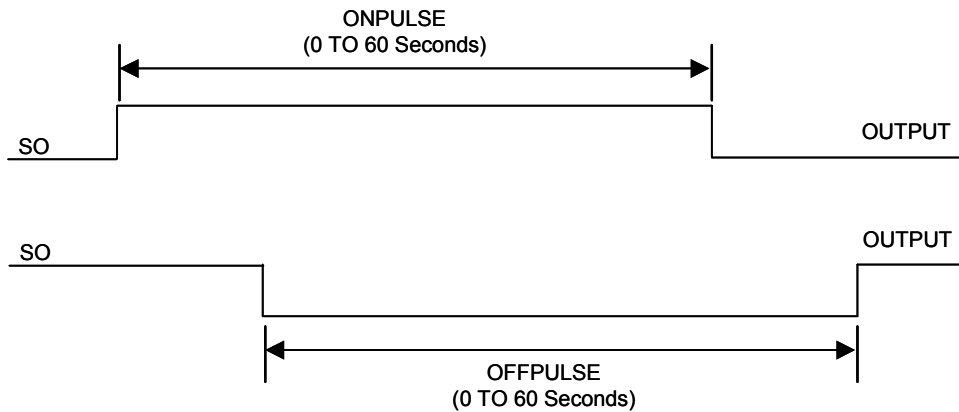

At the end of the pulse time, SO is set to Off. If ONPULSE is specified as 0.0, SO is immediately set to Off. This also applies to the OFFPULSE, except that the OFFPULSE sets SO to Off.

If SO is received from a logic slot, the SO output of the digital output point tracks the SO output provided by the logic slot.

Initialization Request Flag

When ON, this parameter indicates control strategies in the HPM cannot manipulate the output. Parameter INITREQ is set ON when a Status Output type is configured and:

- the point is inactive.
- the module is idle.
- there is a soft failure such that the point is not working.



ATTENTION

Digital Composite points or Position Proportional control algorithms are automatically forced to initialize when outputting to a Digital Output point whose INITREQ is ON.

9. Pulse Input Point

9.1 Pulse Input Point Functional Overview

Family

The pulse input point is a member of the I/O Point family.

Purpose

The Pulse Input IOP accepts variable frequencies from a variety of devices such as turbine meters, vortex type flow meters and positive displacement meters and converts input pulses to flow rate in engineering units.


Description

The Pulse Input IOP accepts variable frequencies from a variety of devices such as turbine meters, vortex type flow meters and positive displacement meters and converts input pulses to flow rate in engineering units. Each Pulse IOP module contains eight input points. The input frequency supported is up to 20 kHz per channel. Alarming and filtering are provided by the IOP. Pulse Input points are configured under the Analog Input point selection on the NIM Process Point Building Menu. The following figure illustrates a functional drawing of the Pulse IOP.

9 Pulse Input Point

9.1 Pulse Input Point Functional Overview

Figure 9-1 Pulse Input Point Functional Diagram

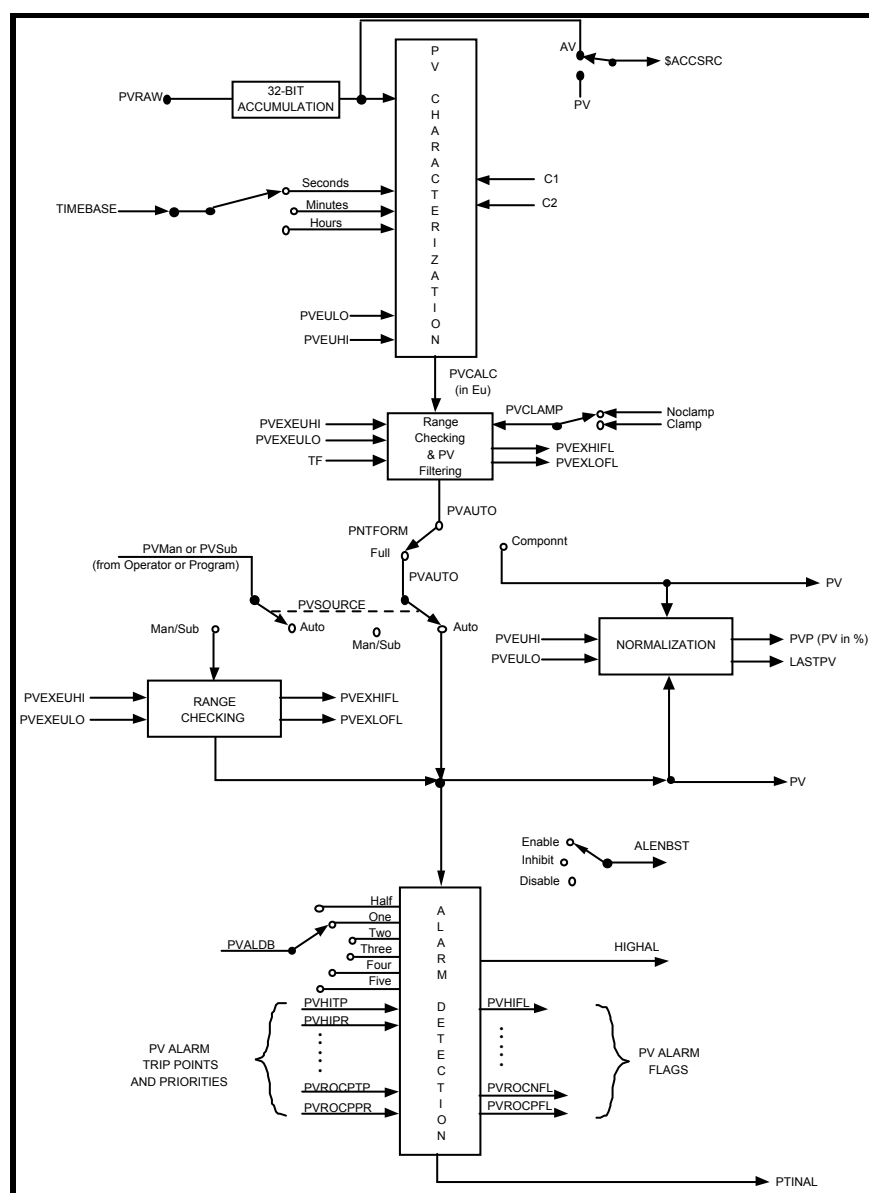

Operation

For each point, the IOP is able to calculate flow rate in engineering units based on user selected scaling factors. The Pulse IOP module always provides two related functions simultaneously:

- Totalizing
- Frequency counting

Totalizing

Totalizing means the IOP maintains a 32-bit accumulation (AV) for each channel (updated every 20 ms). The least significant bits are provided by the hardware accumulator. The 32-bit entity continually rolls (that is, there is no start, stop, or reset). The Pulse IOP only sets the parameter AV to zero when the point is inactive, the IOP is in Idle, or an error is detected. In the case of an error, status parameter AVSTS is set to BAD.

Frequency counting

Frequency counting is expressed by parameter PVRAW.

$$PVRAW = \frac{\text{Delta_AV}}{\text{Elapsed Time Seconds}} = \text{Pulses Per Second}$$

The frequency of the input pulse train must be greater than 0.4 Hz for the calculated PV for that point to be correct. The AV is correct under all circumstances.

9.2 PVCALC

Calculating PVCALC

PVCALC is PVRAW after scaling (for example, barrels per minute):

$$\text{PVCALC} = \frac{C1}{C2} \bullet \text{TIMESBASE} \bullet \text{PVRAW}$$

- C1 is an engineering units scale factor and is dimensionless, for example, barrels per gallon).
- TIMEBASE is a time scale factor (seconds, minutes, or hours).
- C2 is a meter factor in pulses per engineering unit (for example, pulses per gallon).



TIP

If the instrument vendor supplies the factor K in engineering units per pulse (for example, gallons per pulse), then C2 must represent the reciprocal of the factor K; that is, $C2 = 1/K$.

Rate Value

The rate value is treated similar to an analog input PV and is supported by high/low alarms, Rate of Change (ROC) alarming, filtering, and so on, on a half second processing interval (every four seconds for ROC only).

The Pulse IOP calculates the unsigned integer AVDELTHS every half second.

AVDELTHS is the change in AV from the last half second and is intended for display purposes. The parameter's value is normally constant, but the operator will observe a change if the pulse input rate varies.

Pulse Period

The pulse period (1/PV) can be determined with CL.

10. Serial Interface Point

10.1 Serial Interface Point Functional Overview

Family

The serial interface point is a member of the I/O point family.


Purpose

The Serial Interface IOP provides bi-directional interfaces to various programmable logic controllers (PLC) and other Honeywell-approved serial devices that are compatible with one of several interfaces.

Description

The following block diagram illustrates the Serial Interface IOP and associated hardware.

Figure 10-1 Serial Interface Point Hardware Block Diagram

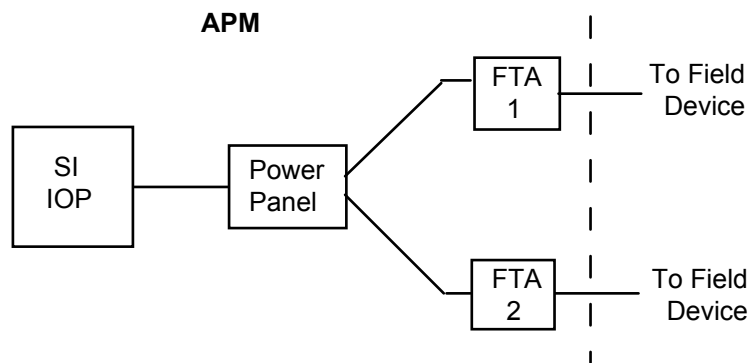

Each active SI slot must have a corresponding Array point. Data collected through the SI slot is available as local data for use by Digital Composite points, Device Control points, CL programs, and so on.

10.2 Serial Input Point Operation

Communications

Communications to the field device is by EIA RS-232D or EIA RS-485 standards. RS-232D communication has a limit of 15 meters (50 feet) and RS-422/485 protocol is supported to 1.2 km (4000 feet). You can extend EIA RS-232D Communications between an FTA and a field device with appropriate Modems.



ATTENTION

Not all EIA RS-232D or EIA RS-485 signals are supported.

Function

Each Serial Interface IOP connects to one or two FTA assemblies. There are 32 slots per Serial I/O card. 16 slots can be configured to FTA-1 and 16 slots can be configured to FTA-2.

Supported interfaces

Each of the 32 Serial Interface slots can support up to 512 Flags, 16 Reals, 32 Integers, or 64 ASCII characters of contiguous data to/from a field device. Plug-in modules adapt the FTAs for different communications protocols and applications. Qualified applications include:

- Modbus Interface—
 - Modicon Modbus-RTU protocol with extensions for real numbers and string support).
 - Modicon 984 programmable logic controller.
 - Rosemount Micro-Motion Transmitter.
 - Other Honeywell-approved Modbus compatible devices.
- Allen-Bradley Interface—
 - Allen-Bradley PLC-2, 3, and 5 programmable logic controllers.

Flags and numerics

Flags and Numerics are fully supported as I/O connections; however, the Serial Interface is primarily intended as an input vehicle and it can efficiently import large quantities of data.

Diagnostics

The Serial Interface IOP firmware runs diagnostic routines. It monitors and reports any detected communications timeouts or errors between the IOP and FTAs.

10.3 Serial Input Point Configuration

Scan period

On the HPMM Node Specific Configuration display, you must choose an HPMM scan period (SCANPER). The HPMM scan period specifies the scan period in seconds at which the HPMM images the Serial Interface IOP database to the Array points.

The maximum number of SI and associated Array points at the three configurable scan periods are defined in the following table.

Scan Period	Maximum Number
1	80
.5	40
.25	20

IO module numbers

During Node Specific Configuration, you must also specify the IO Module Numbers that contain SI cards. Otherwise, no specific configuration is required for an SI slot, except what is entered for the associated Array point. Array points are described in the Array Points section.

Detail status displays

The communication protocol in the FTA firmware is customized by Honeywell for specific uses. The SI IOP's Detail Status display shows the protocol, baud rate, and parity type configured for each FTA. If a fault exists, the configuration information is replaced with a failure message.

10 Serial Interface Point

10.3 Serial Input Point Configuration

Checkpointing

The SI slot data is not checkpointed, but SI configuration is contained in the HPMM Array point checkpoint. Configuration of related Array points is saved.

Startup

The SI slot configuration data is automatically reloaded on every startup. When reloaded, the SI IOP Database Valid parameter is automatically set to Valid.

11. Serial Device Interface

11.1 Serial Device Interface Functional Overview

Family

The serial device interface is a member of the I/O point family.

Purpose


The Serial Device Interface (different from the Serial Interface) uses a Serial Device Interface (SDI) module and a Companion Field Termination Assembly (FTA) designed to transfer serial data from and to specific external devices.

Description

Each SDI board can support two serial channels and each FTA can communicate in ANSI/EIA-232 (RS-232) or EIA-422/485. The EIA-232 interface connects to one serial device and the EIA-485 interface can connect to a multidrop network of up to eight devices.

The following figure illustrates a block diagram of the serial device interface.

Figure 11-1 Serial Device Interface Block Diagram

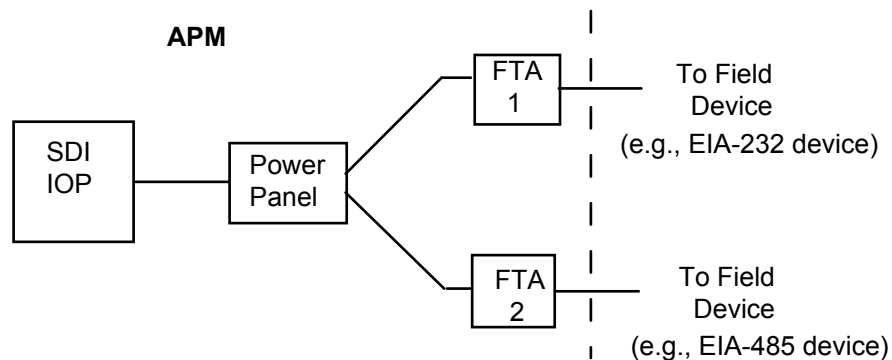

Implementation

You can communicate directly with the SDI using CL or control algorithms. Other implementation methods are described in the *Process Manager Implementation Guideline* or the *PM/UDC 6000 Integration Manual*.

Control

Operators typically control an SDI device from a custom schematic. You can build your own schematic or contract with Honeywell Engineering Services to build it.

Configuration

Communications with the device mimics a Smart Transmitter analog input point. The SDI module is configured as you would for a Smart Transmitter Interface Module (STIM, see “Smart Transmitter Interface Point” in Section 5).

Supported serial device interface types

Currently interfaces for the following devices are supported:

- Manual/Auto Station.
- Toledo Weigh Scale, Model 8142-2089.
- Toledo Weigh Scale, Model 8142-2189.
- UDC 6000 Process Controller.

11.2 Manual/Auto Station Interface

Manual/Auto Station functional description

The Manual/Auto Station interfaces with the Process Manager through the Serial Device Interface FTA using EIA-485 protocol at 19.2 k baud. Up to four M/A Stations can be connected in multidrop to each of the two SDI FTAs. Each of eight slots in the SDI IOP can be configured for use with one Manual/Auto station. Slots 1–4 correspond to logical address for FTA one and slots 9–12 correspond to logical address 1–4 on FTA two (slot one = M/A Station 1 on FTA1, and so on and slot–9 = M/A Station 1 on FTA2 and so on).



REFERENCE - INTERNAL

Refer to the *High-Performance Process Manager Implementation Guidelines* for additional information.

Communications

Invalid data

Both data received from the SDI IOP and data received from the Manual Auto Station are checked for reasonableness. Very small values may be rounded to .001. Very large (absolute) values are either rejected or stored as NaN.

Time out

A time out signal is sent from the SDI IOP to the FTAs every half second. Loss of this signal for 10 seconds or more halts all communications with the Manual/Auto Stations connected to that FTA.

Communication failure

When communications between the FTA and an M/A Station fails, the FTA makes two attempts to send the last message after the time out, then the point is put in bad input soft failure. As long as the slot remains active, there is an attempt to restore communications, but the M/A station is marked as not communicating.




REFERENCE - INTERNAL

Refer to the *Manual/Auto Station Installation and Operation Manual* for additional information on the Manual/Auto Station itself.

Implementation

The PV and OP process signals are directly connected to appropriate modules in the HPM. Process and status signals are sent from the HPM to the M/A station and operator changes to the Set Point at the M/A station are read into the HPM as if those changes were at a Universal Station. The following figure illustrates a typical Manual Auto Station implementation.

Figure 11-2 Manual/Auto Station Implementation

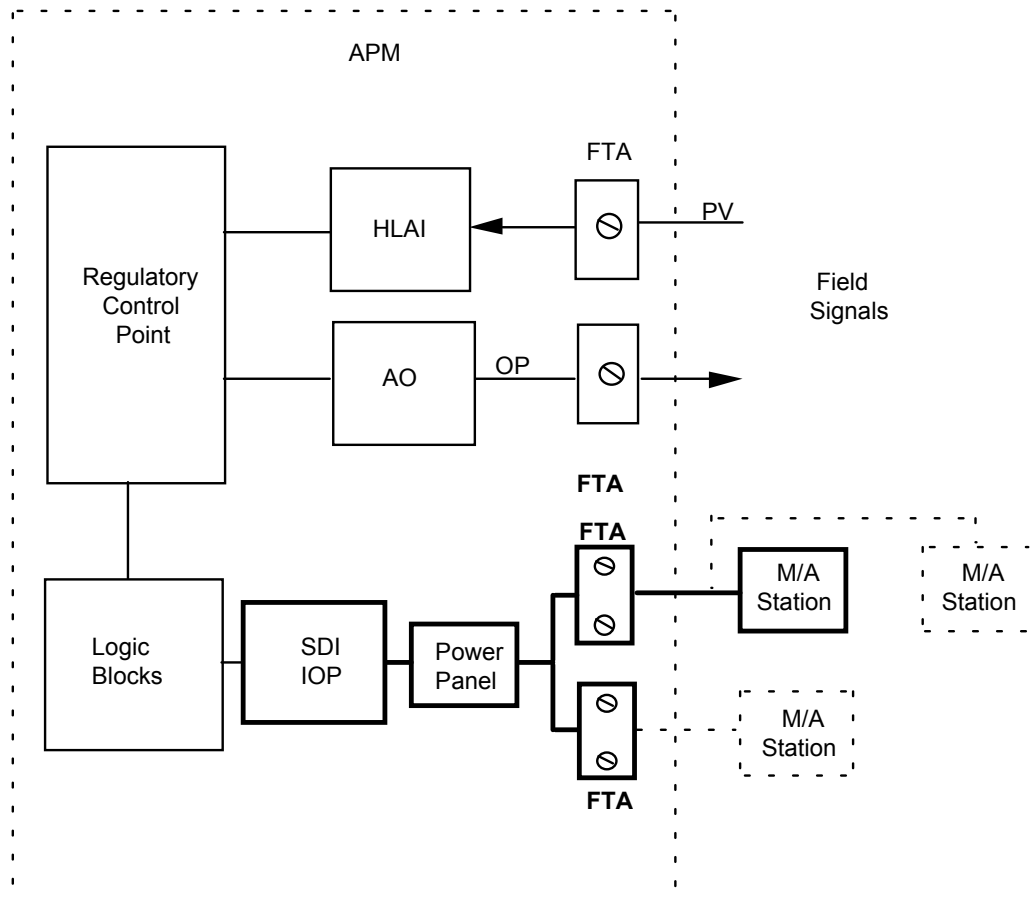

PM override flag

Unless the PM Override flag is set, the PM responds to SP, OP, or mode change operations from the M/A Station's front panel. The PM Override function can inhibit operator functions attempted from the M/A station front panel that would affect SP, OP, or Mode.

PV related parameters sent to the Manual Auto Station

The following table shows how to interpret PV related parameters seen at the Universal Station or GUS through the STI point and their meaning as Manual/Auto station parameters.

Parameter	As an STI Point Parameter	As an M/A Station Parameter	Comments
LRV	Low end of operating range for PVRAW	Low end of operating range for PVRAW	PV (in engineering units)
PVEUHI	PV high range in engineering units	PV high range in engineering units	Must be set to 100.0
PVEULO	PV low range in engineering units	PV low range in engineering units	Must be set to 0.0
PVEXEUHI	PV extended range high limit in engineering units	PV extended range high limit in engineering units	Must be set to 100.0
PVEXEULO	PV extended range low limit in engineering units	PV extended range low limit in engineering units	Must be set to 0.0

Other parameters sent to the Manual Auto Station

The following table shows how to interpret the control, status, and other parameters seen at the Universal Station or GUS through the STI point and their meaning as Manual/Auto station parameters.

Parameter	Meaning as an STI Point Parameter	As an M/A Station Parameter
CJTACT	Internal cold junction reference active	OFF = Manual Mode ON = Auto Mode
DAMPING	Damping	M/A Station Alarms: 1 = Alarm 1 true 2 = Alarm 2 true 3 = Both Alarms true
PIUOTDCF	Open thermocouple detect enable	ON = In Override OFF = Not in Override
PTEXECST	Point execution state	Active = Point is active Inactive = Point is inactive

11 Serial Device Interface

11.2 Manual/Auto Station Interface

Parameter	Meaning as an STI Point Parameter	As an M/A Station Parameter
PVTV	PV target value	Setpoint in engineering units
STITAG	Transmitter tag name	M/A Station Tag Name
URL	Upper range limit of PV	OP in per cent
URV	Upper range value of PVRW	Valve position in per cent

Parameters sent from the Manual Auto Station

The following table shows how to interpret the parameters seen at the Universal Station or GUS through the STI point and their meaning as Manual/Auto station parameters.

Parameter	Meaning as an STI Point Parameter	As an M/A Station Parameter
PVRW	Raw PV input value	Setpoint (in engineering units) from M/A Station
SECVAR	Value of Secondary Variable	OP (in per cent) from the M/Auto Station)
SLOTSF	Slot soft failures	Soft failure due to bad input
STATE	Current point state	FTA Information
STI_EU	Smart Transmitter, engineering units: • INH2O • MM_HG • PSI • KPA • MPA	Change Requests: • 0 = No change request • 1 = SP change request • 2 = OP change request • 3 = Manual Mode request • 4 = Auto Mode request
STISWVER	Smart Transmitter software revision level	FTA information (sent from FTA): • Slot 1 = M/A application • Slot 2 = Software gen date • Slot 3 = Software rev date

Logic points and the SDI IOP

In addition to configuring the SDI IOP as an STI point, at least one, and preferably two logic points must be built to read data from each M/A station, perform necessary processing and then write the processed data, control, and status signals back to the M/A station.

The primary logic point handles the control functions and the following rules apply:

- **Parameter Change Requests** (STI_EU), where an SP or OP change request takes on the enumeration value shown for approximately five seconds, after which it is reset to 0 (H2O) indicating no change request. Manual Mode change request and Auto Mode change requests are similar except their enumeration value is reset to 0 (H2O) as soon as the new mode is written to the M/A station (by means of CJTACT).
- **OP** (SECVAR), where an OP request is read from the Manual/Auto Station, processed and written back to the M/A Station through the URL parameter.
- **SP** (PVRW), where an SP request from the Manual/Auto Station is processed and written back to the Manual/Auto Station using the PVTV parameter.

The second logic point is optional and is used to write back information such as Valve Position, Alarm state, and the Override flag using the parameters shown in the tables.



REFERENCE - INTERNAL

Refer to the *High-Performance Process Manager Implementations Guidelines* for detailed information about implementing the above rules.

Operating Considerations

To modify any Regulatory Control Point parameter from the M/A station, the external Mode Switching Enable parameter ESWENBST must be set to ENABLE.

The Regulatory Control Point's Mode attribute parameter (MODATTR) must be set to PROG so that OP can be modified by a Logic point.

Only a one second scan period is supported for the M/Auto Station Logic points.

The PV High, PV Low, and PV Extended Range parameters must be configured with the values shown in Table 2-6 in order to transfer an SP change request to the Regulatory Control point's set point parameter SPP.

11.3 Toledo Weigh Scale Interface

Toledo Weigh Scale interface functional description

Toledo Weigh Station models T8142-2089 and T8142-2189 interface with the Advanced Process Manager through the Serial Device Interface IOP using RS-232-D protocol at 9600 Baud. One Toledo Weigh Station can be connected to each of the two SDI FTAs. Slots one and nine in the SDI IOP can be configured as to communicate with the Toledo Weigh Station. The SDI IOP is implemented as a Smart Transmitter Interface Module (STIM).

Communications

Invalid data

Invalid data—The following parameters are checked for reasonableness: DAMPING, PVTV, URL, LRV, and DECONF.

Invalid data

When communications between an FTA and a Toledo Weigh Station fails, the FTA makes two additional attempts to send the last message, then the Toledo Weigh Station is marked as not communicating and PVRAW (the weight) is set to NaN.

To recover from most communication failures, switch the point execution status PTEXECST to inactive and back to active.

Invalid data

Weight (PVRAW) and Flow Rate (SECVAR) are updated every 250 ms or faster.



REFERENCE - INTERNAL

Refer to your *Toledo Weigh Scale* manual for more information.

Parameters sent from the Toledo Weigh Station

The following table explains the parameters used to communicate with the Toledo Weigh Scale using an SDI interface configured as an STI module.

Parameter	Meaning as an STI Point Parameter	Meaning as a Weigh Scale Parameter
PVRAW	Raw PV input value	Weight (W)
SECVAR	Value of Secondary Variable	Flow Rate (R)
STI_EU	Smart Transmitter, type of engineering units used: • 0 = In_H2O • 1 = MMHg • 2 = PSI	Feed Status: • Feed is Off (x) • Feed is On (F) • Feed is in alarm (A)
STISWVER	Smart Transmitter software revision level	FTA information (sent from FTA): • Slot 1 = Application • Slot 2 = Software gen. date • Slot 3 = Software rev. date

Parameters sent to the Toledo Weigh Station

The following table explains the parameters used to communicate with the Toledo Weigh Scale using an SDI interface configured as an STI module.

Parameter	Meaning as an STI Point Parameter	Meaning as a Weigh Scale Parameter
CJTACT	Internal cold junction reference active	Feed Control: • On = Start Feeding/Feeding • Off = Not Feeding
DAMPING	Damping	Weight Filter (F) ^(See NOTE 1) :
PIUOTDCF	Open thermocouple detect enable	Mode: • On = Ascending Mode (A) • Off = Descending Mode (D)
PVTV	PV target value	Weight Setpoint* (S)

11 Serial Device Interface

11.3 Toledo Weigh Scale Interface

Parameter	Meaning as an STI Point Parameter	Meaning as a Weigh Scale Parameter
URL	Upper range limit of PV	Alarm Setpoint* (A)
LRV	Low end of operating range for PVRAW	Decimal Point Position (D) • 1 = 1.0 • 2 = 0.1 • 3 = .01 • 4 = 0.001 • 5 = 0.0001
DECONF	Digitally Enhanced Configuration Mode	Parity Selection ^{(See NOTE 2).} • 0 = No Parity • 1 = Odd Parity • 2 = Even Parity • 3 = No Parity • 4 = No change
LRL	Lower Range Limit	Weight recorded when feed status switched from On to Off

NOTE 1: Values are modified to 6 digits or less by moving the decimal point per LRV.

NOTE 2: Odd parity should not be used. Even parity is preferred.

12. Alarming Theory of Operation

12.1 Alarming Function

Background

Common alarming functions that can be configured for HPM points. The alarm parameters available depend on the point type. Refer to the individual point description for details. Alarm detection and reporting for a point can be configured only if the full point form is specified.

Priorities

For each point, a separate alarm priority can be specified for each alarm (for example, PV high alarm can be low priority but PV high high alarm can be emergency). Alarm priority configuration information is maintained by the NIM.

The following alarm priorities are supported for HPM points:

- Emergency
- High
- Low
- Journal
- JnlPrint
- Printer
- NoAction

CAUTION

The Journal (JnlPrint) option causes alarms to be journaled only. This selection causes alarms to be journaled in the HM and printed. If the Printer option is selected, alarms:

- are printed but not journaled.
 - could be lost if the printer is not working.
-

Alarm enable status

Alarm enable status is applicable to full point forms and allows the user to enable, disable, and inhibit alarms. This function is accomplished through the ALENBST parameter. The alarm enable status function is resident in the NIM.

12.2 Contact Cutout Function

Operation

The contact cutout function prevents a proliferation of alarms from being reported to the operator. This function can be used to cut out alarms on a point when they are generated because of alarm conditions that have been detected at other points. Contact cutout is provided for all the point types in the HPM and is implemented through the CONTCUT parameter. Another point or CL program must write to the CONTCUT parameter in order to change the Contact Cutout state.

Exemption to contact cutout

With R681, the Selective Cutout feature allows the alarms of a point to pass through, though the secondary point is in the cutout state. The NIM, flag, numeric, regulatory control, regulatory PV, digital input, analog input, digital composite, and device control points can be configured with the new parameters to enable selective cutout. The alarm parameters are named \$DHSELCT, \$DLSELCT, \$HHSELCT, \$HISELCT and so on. Selective Cutout operates in conjunction with the contact cutout feature.

When the parameter is set to ALLOW, the respective alarm passes through, even though the point is in the cutout state. When the parameter is set to CUTOOUT, the particular alarm is blocked if the point is in the cutout state.

Alarm reporting

When the contact cutout state is applied, alarms at the point are cut out. New alarms are not reported on the alarm summary display at the HMI (for example, Universal Station, GUS) nor are they journaled on the system (for example, History Module, Real Time Journal). This is the same way inhibited alarms are handled except Cutout alarms continue to be reported to the AM or CM60 for event initiated processing (EIP). A Contact Cutout True message is journaled for points that are in alarm when cutout. For points that are not in alarm when cut out, no message is journaled.

On event recovery (for example, node failover), the system journals a Contact Cutout True message for points that are currently in alarm and cut out.

Removing contact cutout

When contact cutout is removed, points that were in alarm are checked and if the alarm condition still exists, the system generates a new alarm with a current timestamp. If the alarm condition does not exist when contact cutout is removed, a Contact Cutout False message is journaled for points that were in alarm.

UCN contact cutout implementation

Contact Cutout is implemented by using a logic point or a CL program to write a Boolean variable from a primary control point into an alarmable UCN secondary point's CONTCUT parameter. A TRUE (ON) in this parameter will cut out alarming by the secondary point. The secondary point will not resume alarming until a logic point or CL program writes a FALSE (OFF) into the secondary's CONTCUT parameter.

Typical implementation of Contact Cutout uses a primary point's PTINAL parameter (point-in-alarm indicator) to control a secondary point's CONTCUT status. This is a convenient method for providing Contact Cutout for all primary alarms, and we recommend it as the safest and most secure implementation. However, any other valid primary point alarm parameter, such as PVHIFL, PVHHFL, PVLOFL, PVROCNFL or any other valid primary point Boolean parameter can be used. When distributing a primary point's alarm status to the CONTCUT parameter of several points, use only one input connection to make the best use of peer-to-peer resources.

When implementing a Contact Cutout connection using a logic point, the Logic Bad Input handling Option parameter, LIBADOPT, must be set to OFF in case the primary point fails or is deleted while in alarm. This implementation ensures that the secondary point's CONTCUT parameter will be set to OFF in the event of a point failure. In addition, if the primary and secondary points are in different UCN nodes, the logic point should be located in the same node as the secondary point in case the node containing the primary point is idled or fails.

For the same reason, we recommend that CL programs be located in the same node as the secondary point. CL programs should include error trapping code to handle the different failure cases previously described.

In general, Contact Cutout should be implemented using primary point alarming flags as previously described, because these alarm parameters automatically clear (to the OFF state) when the primary points are made INACTIVE or the node containing the primary point is idled. Note that when connecting CONTCUT to other parameters, such as box flags or digital composite PV flags, these parameters do not provide similar protection. Because CONTCUT cannot be changed by the operator, it is possible to end up with a secondary point temporarily or permanently disabled from alarming!

Primary module points

Primary Module (PRIMMOD) Points are used to collect alarms and events from points that are related for some purpose. All UCN points with alarming capability have a PRIMMOD parameter with which to identify a common PRIMMOD point. All points with a matching Primmod point are considered to be in the same alarm group.

12 Alarming Theory of Operation

12.2 Contact Cutout Function

The value for the Primmod parameter can be any point in the same NIM. The value is assigned during point build, but can later be stored by a CL program or from schematics. If a Primmod point name is changed when alarms exist, the alarms are reissued for the new Primmod name.

Up to 10 Primmod points can be grouped into one annunciator group in the Area data base and Primmod points can be assigned to turn on the configurable button alarm indicators.

Auxiliary units

Alarmable NIM points in Release 520 and later software have an Auxiliary Unit (\$AUXUNIT) parameter. If this parameter is set to null (- -), alarms and messages on that point go to the primary unit. If a valid Unit ID is specified, alarms and messages from that point go to the Auxiliary Unit.

\$AUXUNIT can be configured at build time or, with the proper keylevel, it can be initially assigned or changed by schematics, CL programs, the DEB alter parameters function, or from the configuration page of the Point Detail display. The keylevel necessary to change \$AUXUNIT is configurable in the System Wide Values section of the Network Configuration File.

Alarms from a point where \$AUXUNIT has been configured are only accepted by Universal or GUS stations having an Area Database in which both the Primary Unit and the Auxiliary Unit are configured.

If an \$AUXUNIT assignment is changed and there are outstanding alarms on the old unit, alarms are deleted from the old unit and added to the new unit.

12.3 Process Alarm Rebroadcast

With R660, acknowledged and unacknowledged process alarms (event-type 21) are rebroadcast if they have not returned to normal (RTN) within the re-alarming interval specified by the \$REALARM parameter. The re-alarm feature is applicable for all types of process alarms that can have an RTN event.

Re-alarming is consistent across all stations in the console in that area. Rebroadcast alarms are also sent to the History Module with a new timestamp, and reported to the RTJ and Process Alarm Journal where they appear as an alarm.

On the alarm displays, a rebroadcast alarm behaves like a new alarm but has a yellow time stamp.

Rebroadcast alarms appear on the GUS Alarm Summary, and on the following GUS/US native-window displays:

- Area Alarm Summary.
- Unit Alarm Summary.
- Alarm Annunciator.
- Point Detail.

The re-alarm feature is implemented using the \$REALARM parameter that has a range of 0 through 9999 minutes. The value specified for this parameter determines the amount of minutes that will elapse before the specified point is re-alarmed. Zero is the default value for the \$REALARM parameter. A zero value also inactivates the re-alarm feature.

The user-configured re-alarm interval is the same value for all process alarms associated with the point.

Point types that use the \$REALARM parameter

The following HPM point types contain the \$REALARM parameter:

- Analog Input.
- Box Flag (Only the first 1024 are alarmable).
- Box Numeric (Only the first 2047 are alarmable).
- CM (Fieldbus).
- Digital Input.
- Digital Composite.
- Device Control.
- Logic Slot.
- Regulatory PV.
- Regulatory Control.

Modify \$REALARM

The following scenarios describe the change in the alarm handling because of the change in the re-alarming interval while the point is in alarm.



ATTENTION

To prevent unusual or inconsistent re-alarming behavior, do not modify \$REALARM while the point is in alarm.

Scenario 1: Re-alarm interval is modified.

If the re-alarm interval is changed (a non-zero value changed to a different non-zero value) while the point is in alarm, the change is not detected for the current alarm. The change in the interval is detected only for the new alarms subsequently raised for that point. In addition, each alarm for that point is updated with the new interval. Therefore, all alarms of the point are synchronized.

Scenario 2: Re-alarm is cancelled.

If the re-alarm interval is changed (a non-zero value changed to zero) while the point is in alarm, the change is immediately detected and the rebroadcast of the alarms does not occur.

Scenario 3: Re-alarm is initiated.

If the re-alarm interval is changed (zero value changed to non-zero) while the point is in alarm, the change is not detected for the current alarm. The change in the interval is detected only for the new alarms subsequently raised for that point. However, the alarms existing prior to the modification are not rebroadcast.

Multiple alarms on the same point

Multiple alarms on the same point are rebroadcast at the same time. The first alarm occurred for that point determines the schedule for all the subsequent alarms. Therefore, all re-alarms for a point appear together in the alarm displays and journals.

12.4 Red Tagging

Purpose of Red Tagging

A point can be "red tagged" to indicate that it requires maintenance. This is accomplished by setting the REDTAG parameter to On. Typically, the operator sets the output of the point to a desired safe value before putting on the red tag. Once red tagged, the mode, mode attribute, external mode switching state, and output cannot be changed.

Function of Red Tagging

The Red Tag function prevents changes to the output on a point that has the REDTAG parameter set to ON, but it may still be possible to change the output connected to the field. For example, even if a Digital Composite point has REDTAG set to ON, a program/Logic Block can still change the state of the Digital Output.

Before red tagging a point

The mode and the mode attribute of the point must be changed to Man and Oper, respectively, and the external mode switching state, if configured, must be Disabled before the point can be red tagged. To red tag a digital composite point, the output of the point must not be configured for the momentary state.

When a point is red tagged

The point can not be reconfigured or deleted if the red tag is On. Red tagging is supported for only the analog output, RegCtl (only if it is outputting to an AO or a PWM DO Processor), and digital composite point types. A point must be configured for the full point form in order to be red tagged.

12.5 Write Lockout

Purpose of the Write Lockout

HPM Write Lockout is a feature that protects the HPM database. It can be enabled or disabled from a Detail Display accessible through the HPM's Node Status display. Engineering key level is required to make changes.

The lockout state can only be changed when the HPM is in Run or RunSoftfail state.

Function of the Write Lockout

When HPM Write Lockout is ON, most writes to the HPM are locked out. All parameter reads are allowed and cable swaps, HPMM swaps, and IOP swaps are permitted. Peer-to-peer writes are locked out but peer-to-peer reads from the same or other nodes are permitted.

13. Digital Composite Point

13.1 Functional Overview

Purpose

The Digital Composite Point allows manipulation of sets of digital outputs and interprets corresponding feedback of digital inputs. It provides a structured approach to handling interlock functions and includes indication to the operator of existence of interlock condition.

Description

The digital composite point is a multi-input/multi-output point that provides an interface to discrete devices such as motors, pumps, solenoid valves, and motor-operated valves. This point provides built-in structures for handling interlocks, and supports display of the interlock conditions in group, detail, and graphic displays. In addition, the digital composite point can be used with logic slots and other digital points to implement complex interlock schemes.

Features


Features of the digital composite point include:

- Input and output states of the data point are totally independent of each other and can be configured as required by the user's application.
- The inputs and outputs of the point can be linked to I/O points or to Boolean flags within the HPM.
- Supports devices with two or three commandable states (motor-operated valves, reversing motors, and so on).
- Specific states can be defined as being momentary.
- Provides structured approach to handling interlock functions and includes indication to the operator of existence of interlock condition.

Functional diagrams


The input portion of a digital composite point can be configured only if the user has entered 1 or 2 for the number-of-digital-inputs parameter (NODINPTS). A functional diagram of the input portion of the digital composite point is shown in the following figure.

Figure 13-1 Digital Composite Point Inputs Functional Diagram

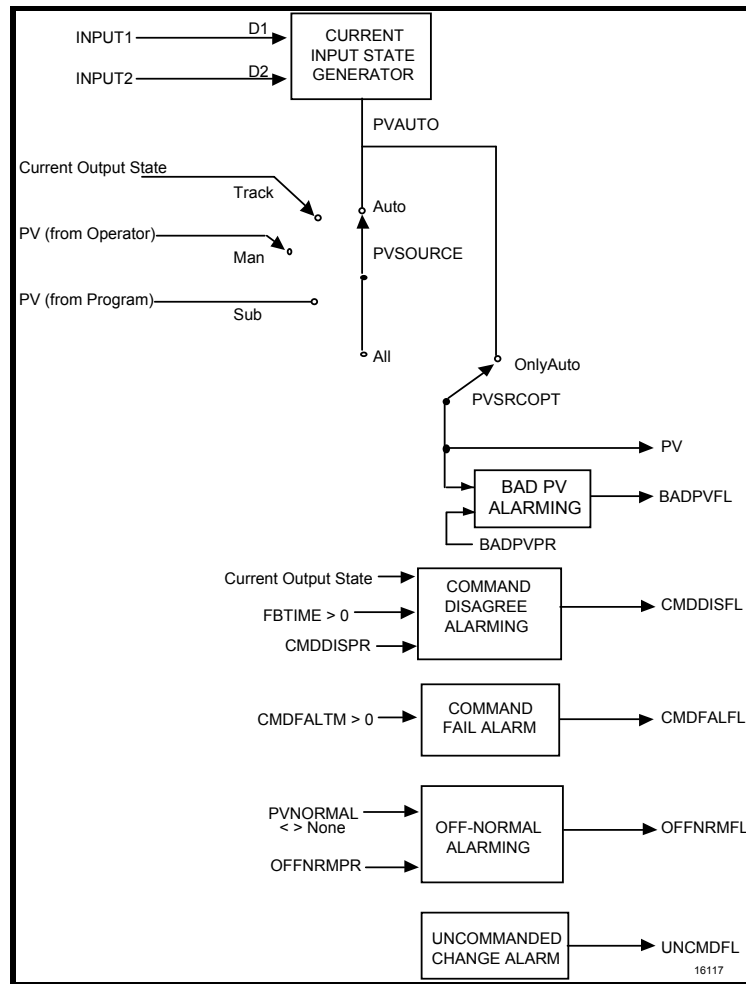

A functional diagram of the output portion of a digital composite point is shown in the following figure.

Figure 13-2 Digital Composite Point Outputs Functional Diagram

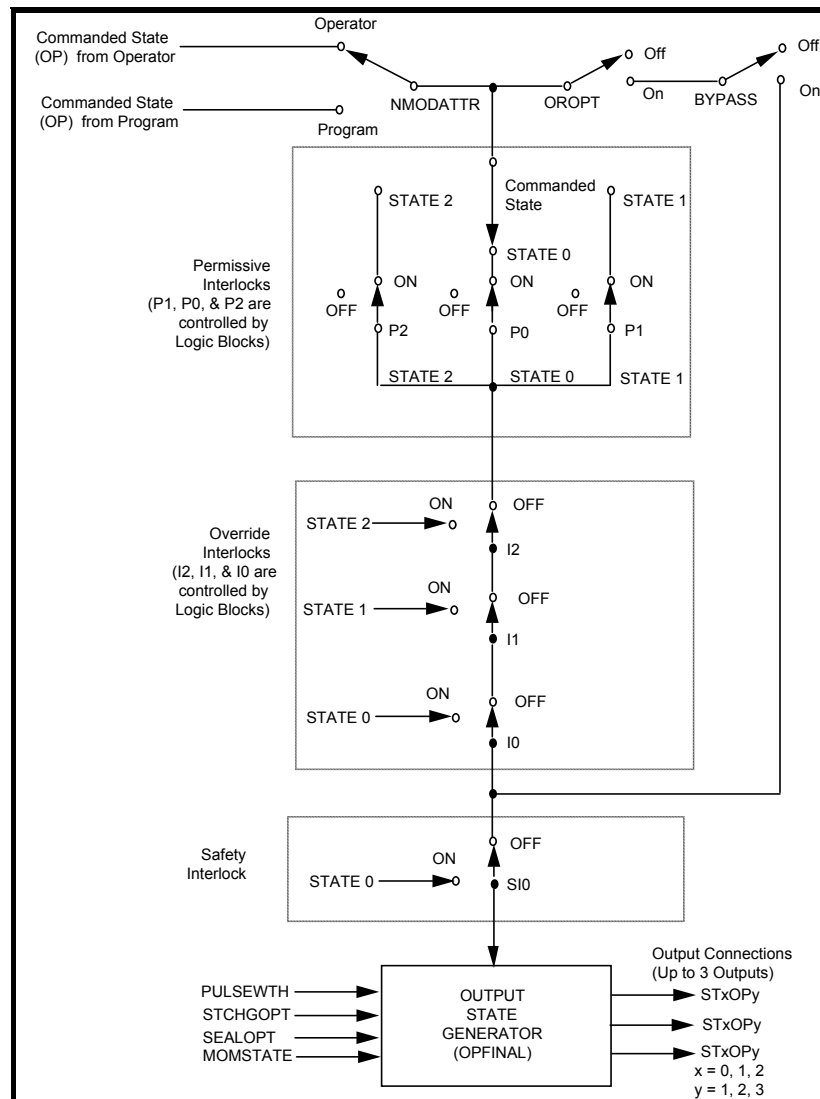

13.2 Point States

Introduction

The Digital Composite point supports three point states:

- Normal states
- Momentary states
- Moving/Bad states

Normal states

A digital composite point can have two or three normal states that allow the data point to interface with devices that have two or three operational states. The normal states of a digital composite point are presented in the following table.


Table 13-1 Digital Composite Point Normal States

State	Description
0	Inactive State (a.k.a. Middle State). This is considered a safe state. If for any reason a valid output cannot be determined, the OP is forced to this state. Refer to: Initialization Manual for more information.
1	First Active State.
2	Second Active State. Applicable only when the entry for the NOSTATES parameter is 3, signifying that the data point has three states.

These states can best be described by showing how the digital composite data point is depicted in a group display, as shown in the following figure. On the display, each state is represented by a separate box. The state 0 box is the middle box, the state 1 box is the upper box, and state 2 box is the lower box. (The state 2 box does not appear if the point has been configured for two states where parameter NOSTATES = 2). The state descriptor for each box is an 8-character descriptor and appears at the top of the box. In the following figure, the descriptors are FORWARD (for state 1), STOP (for state 0), and REVERSE (for state 2), which are specified by parameters STATETXT(0)-STATETXT(2).

The lower portion of each box is split, with the left box being the indicator for the input PV state, and the right box being the commanded-output state indicator. The condition of the PV input that causes the left box to light is determined by parameters D2D1_00 - D2D1_11. The condition that causes the right box to light is determined by OP being commanded to that state.

Figure 13-3 Digital Composite Point Display

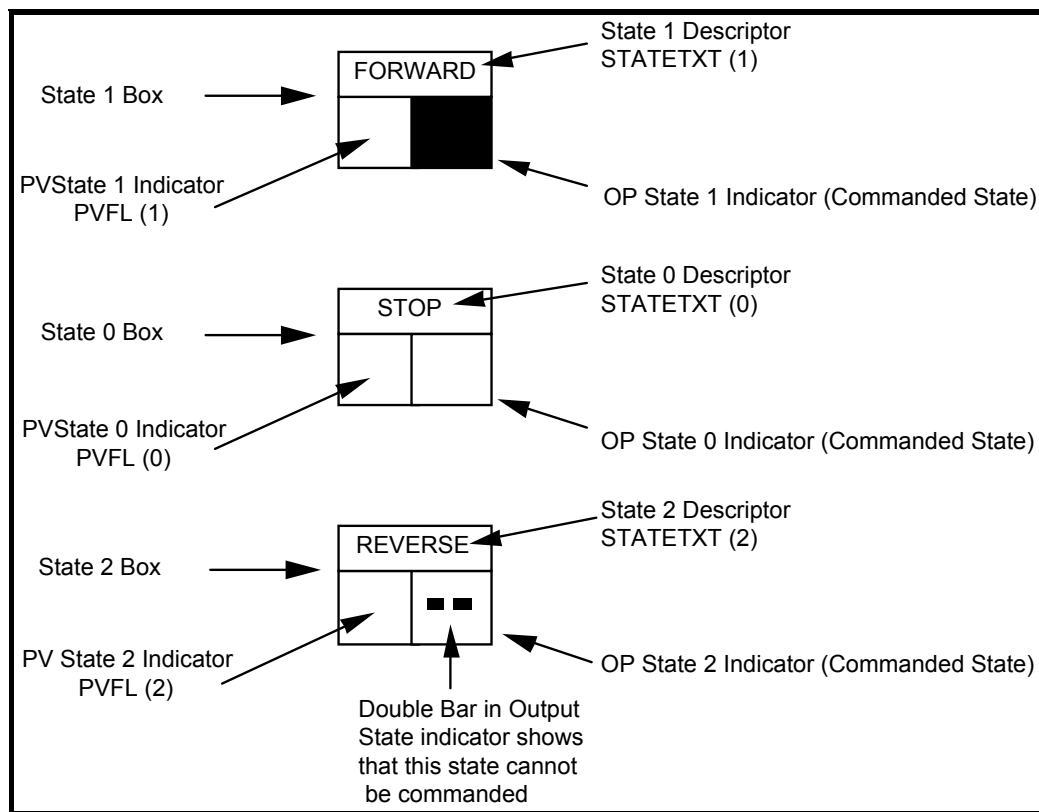

As an example, assume that the digital composite point shown in the previous figure is connected through digital output points and digital input points to a motor control circuit and that the current state of the digital composite point is state 0 (STOP).

In state 0, the PV indicator of the STOP box is lit, indicating that the motor is stopped because the proper PV input has been received from the field. All other indicators in the display are in the extinguished condition.

13 Digital Composite Point

13.2 Point States

When the operator touches the FORWARD box to place the motor in the forward running direction, the digital composite point output goes to State 1. Outputs from the digital composite point are provided as determined by the ST1_OPn parameter (where n=1.3). When the proper PV inputs are received from the field, the FORWARD box is lighted. This indicates to the operator that the motor is running. Also, the current state of the PV can be read by a logic slot or by a user program by accessing parameter PVFL(n) where n is 0, 1, or 2. If the PV is in State 0, PVFL(0) is on; otherwise, PVFL(0) is off. PVFL(1) and PV(FL2) operate in the same manner for States 1 and 2, respectively.

Similarly, when the operator presses the STOP box, the operator is notified that the motor is stopped by the lighted PV indicator in the STOP box. The operator can then select the REVERSE box to start the motor running in the reverse direction.

Momentary states

The states of a digital composite point can be configured as being momentary by using the MOMSTATE parameter. The commanded states can be configured as momentary where the state acts like a doorbell (state remains active as long as a switch is pressed). The momentary states (MOMSTATE) parameter specifies which of the states are momentary as presented in the following table.

Table 13-2 Digital Composite Point Momentary States

Entry	Description
Mom_1	State 1 is momentary. • When released from this state, it jumps back to State 0.
Mom_0	State 0 is momentary. • When released from this state, it jumps back to State 1. • Mom_0 can be selected only if the NOSTATES parameter = 2.
Mom_2	State 2 is momentary. • When released from this state, it jumps back to State 0. • Mom_2 can be selected only if NOSTATES parameter = 3.
Mom_1_2	States 1 and 2 are momentary. • When released from any one of these states, it jumps back to State 0. • Mom_1_2 can be selected only if NOSTATES parameter = 3.

A state cannot be set to momentary if the MOMSTATE parameter = NONE.
MOMSTATE is mutually exclusive with the Seal-In option or State Change option (STCHGOPT).

Moving/Bad states

The digital composite point has two standard states that represent conditions when the current state of the device is "bad" (indeterminate) or the current state is "moving" (from one state to another). The bad state can result when the PV input signals from the process are in an inconsistent state (for example, for a valve, the limit switches indicating open and closed are both simultaneously on). The moving state is encountered when the device is in transition from one state to another (for example, a slow moving valve is changing from the open state to the closed state). The moving/bad state descriptor is located below the State 2 box on the display. In the example described above, the descriptor assigned for the BADPVTXT parameter would be the word FAULTY and the descriptor assigned for the MOVPTXT parameter would be the word MOVING. These descriptors are configured once for each HPM box data point and then are used for all digital composite points in the same HPM.

If the standard "bad/moving" default text is not desired, you can select the PV Text Option during point configuration, and enter two eight-character strings of your choice. While the words "bad/moving" are defined on a PM/HPM box basis, your entries override them on a per point basis. Up to 15 unique bad/moving text descriptors can be defined on a UCN network basis.

13.3 Mode Attributes

The digital composite point supports only the manual (MAN) mode with mode attributes (specified by parameter NMODATTR) of Operator and Program. If the mode attribute is Operator, only the operator can provide the commanded output state, as shown in the Digital composite point outputs functional diagram illustrated in. On the other hand, if the mode attribute is Program, only user programs (continuous or discontinuous) can provide the commanded output state. The operator mode attribute flag (OPRATRFL) is also provided for potential use by the interlocking logic.

The MODEPERM parameter is provided to optionally prevent the operator (as opposed to the supervisor or engineer) from changing the mode attribute.

Parameter PRGATRFL indicates when the point is in Program mode attribute and parameter NRMATRFL indicates when the point is in the configured Normal mode attribute.

13.4 Interlocks

Types of interlocks

Two kinds of interlocks, permissives and overrides, are provided in the output portion of a digital composite point. The states of the interlocks are typically controlled by output connections from logic slots that can write to the P0-P2 permissive interlock parameters, and I0-I2 override interlock parameters. In addition, a safety override interlock (SIO) that cannot be bypassed is provided.

Permissive Interlocks

The permissive interlock parameters P0-P2 (illustrated in the Digital composite point outputs functional diagram) are controlled by logic slot outputs, and the permissive interlocks determine whether the operator and user programs are allowed to change the output of a digital composite point to a specific state. A permissive interlock is provided for each of the three states. The permissive interlocks themselves never cause the output to change.

For the commanded output to be changed to the desired state, the corresponding permissive interlock parameter must be set to ON. As an example, if a logic-slot output has set parameter P1 to OFF, the commanded output of the digital composite point cannot be set to State 1. The permissive interlock parameters P0, P1, and P2 are all defaulted to ON, thereby allowing permission for all the states. They must be individually set to OFF by the logic slots to prevent access to the corresponding commanded output state.

Override Interlocks

The override interlock parameters I0-I2 (illustrated in the Digital composite point outputs functional diagram in the) are also controlled by the logic slot outputs and can force the commanded output to a specific state regardless of the condition of the permissive interlocks. The operator and user programs cannot change the output state when any override interlock is in the ON condition. An override interlock is provided for each of the three output states.

When parameter I0 is set to ON by a logic slot output, the commanded output state is forced to State 0 (regardless of the condition of parameters I1 and I2). When I0 is OFF and I1 is ON, the commanded output is forced to State 1 (regardless of parameter I2). Finally, when I0 and I1 are OFF and I2 is ON, the commanded output is forced to State 2.

Override interlock parameters I0-I2 are all defaulted to OFF, disabling all the override interlocks. They must be set to ON to force the output to go to any specific state. If the override interlock forces the output to go to a momentary state, it stays in that state as long as the interlock remains ON and then switches back to the original state when the override interlock is reset to Off.

When all the override interlocks are OFF, the last value of the commanded output is maintained (except for momentary state) until changed by the operator, a user program, or another override interlock. The interlock logic restores the output value to the output devices (Digital Output IOPs) whenever the interlock value changes, even if the state asserted by the interlock is already in effect.

The Override Alarm Option (OVRDALOP) allows an Optional alarm to be generated when an override occurs. You have the following configuration choices for the Override Alarm Option:

- a) no alarm.
- b) return to normal when the override is cleared (auto return).

Operator confirmation required after interlock is cleared (the operator must confirm the alarm before it is possible to command a new state).

The occurrence of a new override takes precedence over any previously active override (including the Safety Override Interlock, SIO) if that condition has returned to inactive. Therefore, to the operator, a lower priority confirmation appears to overwrite a higher priority override if that higher priority override has reset. This is sometimes called an auto-confirm of the previous override.

If a higher priority override has been reset, the descriptions and confirm prompt (if Cnfm_Rqd was configured) remain visible until the operator confirms the override from the Detail Display. The confirm prompt and alarm are then reset. If any other override occurs after a previous condition has reset, regardless of the previous priority, the new description and confirm prompt appear. This also applies to the Real Time Journal Display. If the confirmation required option was not selected for a particular class of overrides, the description will still override the previous one and the previous confirm prompt goes away, if the previous override condition has reset.



ATTENTION

When upgrading from an R400 APM to an R500 HPM, note the differences described herein and make sure your strategy continues to operate as intended.

13 Digital Composite Point

13.4 Interlocks

In R410 and R500 systems, a lower priority interlock (such as I1) can become active if a higher priority interlock (such as I0) is no longer true, but has not yet been confirmed. In R400 systems, Confirmation has to be done before the lower priority interlock is activated.

When the Digital Composite point is built, you can specify the tag name of the Logic point that is driving the interlocks as parameter LOGICSRC. The contents of this parameter then appear on the Group Display when the Digital Composite point is selected. After identifying the Logic point, an operator can call up the Detail Display for that point to find out about the interlocks.

You can predefine an eight character alarm descriptor for each override interlock, I0-I2. When the override interlock is activated, that string is displayed on the detail display. CL programs can write into these descriptors (InDESC) before asserting the interlock. The detail display text then explains why the program forced the interlock (for example, TOO HOT in the Override Alarm Descriptor, OVRDESC).

Configurable Interlock Bypass

The operator can have the ability to bypass the permissive and override interlocks for a digital composite point. To do so, the override parameter OROPT must be set to ON. The operator can then set (or reset) the parameter BYPASS. Note that while BYPASS is ON, the point execution state parameter can't be changed. When the BYPASS parameter is reset, existing override interlocks (if any) take effect immediately. The group display shows whether interlocks are being bypassed. The organizational summary display lists all the points for which BYPASS = ON.

Safety Interlocks for State 0 (SI0)

The safety override interlock parameter SI0 behaves like the I0 interlock, but it cannot be bypassed even when BYPASS is configured and turned on (illustrated in the Digital composite point outputs functional diagram).

If a device has tripped as a result of a state 0 interlock, an interlock-trip alarm (SI0ALOPT) can result (if configured). The interlock-trip alarm has three options: None (no alarming), Auto Return or Alarm with Confirm Required. The alarms are described as follows:

Auto Return— if a state 0 interlock causes the OP state to change, an interlock-trip alarm is generated and then automatically terminated when the interlock, that caused the alarm returns to OFF.

Alarm with Confirm Required— if a state 0 interlock causes the OP state to change, an interlock-trip alarm is generated. The interlock that caused the alarm must return to OFF and the operator must reset the trip-confirm required flag OVRDCONF.

The trip-confirm required flag can also be reset by REDTAG, BYPASS, or LOCALMAN, but the motor cannot be restarted by the operator, interlock, or other system functions until the interlock trip alarm is terminated.

If SIO resets, a lower priority interlock can be asserted and confirm automatically as described in Override Interlocks.

You can predefine an 8-character alarm descriptor for SIO. When the safety override interlock is activated, that string is displayed on the detail display. CL programs can write into these descriptors (InDESC) before asserting the interlock. The detail display text then explains why the program forced the interlock (for example, TOO HOT in the Override Alarm Descriptor, SIODESC). SIOALPR sets the interlock-trip alarm priority.

Trip Descriptor—When a device trips because of an interlock, the cause of the trip is available as an 8-character descriptor from the parameter OVRDDESC.

13.5 Digital Inputs

Background

When configuring digital inputs of the digital composite data point, you can specify the input connections, PV states, PV source and options, alarming, and change-of-state events.

Input connections

The inputs to a digital composite point are specified through digital input-source parameters DISRC(1)-DISRC(2). Inputs to the digital composite point are designated as Input 1 and Input 2, and they can be obtained from any of the following sources:

- Digital Input Point—PV
- Digital Output Point—SO
- Logic Slot Output
- Logic Slot Flags
- HPM Box PV Flags
- Process Module Slot Flags
- Array Point Flags
- Device Control Slot Flags



ATTENTION

Please note that:

- these sources must be in the same HPM box as the digital composite point that is being configured.
- the status of Input 1 is represented by parameter D1; Input 2 is represented by parameter D2.
- Input 2 can be configured only when the entry for the number-of-digital-inputs parameter (NODINPTS) is 2.

Digital Input Point—PV

To assign the PV of a digital input point to the PV input of a digital composite point in the same HPM box, you can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.PVFL or

!DIimmSss.PVFL

where:

- Tagname is the 8- or 16-character name of the point that will provide the PV.
- PVFL signifies the PV of the respective digital input point.
- !DI signifies a digital input point. This is the start of the hardware reference address.
- mm is the Digital Input IOP Card number from 1-40 within the same HPM.
- the letter “S” is a constant.
- ss is the slot number in the same Digital Input IOP Card in the range from 1-32.

Logic Slot Output

To assign the logic slot output to the PV input of a digital composite point, the user can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.SO(nn)

where:

- Tagname is the 8- or 16-character name assigned to the logic slot that is providing the output.
- SO signifies the output of the logic block.
- nn is the logic block number in the range from 1–24.

Logic Slot Flags

To assign a logic slot flag to the input of a digital composite point, the user can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the logic slot that is providing the flag.
- FL signifies the logic-slot flag.
- nn is the flag number in the range from 1–12.

HPM Box PV Flags

To assign a HPM box PV flag to the input of a the digital composite point, the user can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.PVFL or

!BOX.FL(nnnn) where:

- Tagname is the 8- or 16-character name assigned to the box PV flag.
- PVFL signifies the PV flag.
- !BOX specifies the HPM box.
- FL(nnnn) is the flag number that has a range from 1 to 16384.

Device Control Slot Flags

To assign the digital composite-point input to a Device Control slot flag, the user can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- FL signifies a flag.
- nn is the flag number to which the input of the digital composite is sent. The flag number has a range of 7-12: flag numbers 1-6 have dedicated uses and cannot be used as destinations by a Device Control point.

Array Point Flags

To assign the digital composite-point input to an Array Point flag, the user can enter the following information for the respective DISRC(n) input connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- FL signifies a flag.
- nn is the flag number to which the input of the digital composite is sent. The flag number has a range of 1-NFLAG, where NFLAG is the array point parameter that defines the number of flags in the Array point.

Process Module Slot Flags

To assign a Process Module slot flag to the input of a digital composite point, enter the following information for the respective DISRC(n) input connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the Process Module flag.
- FL(nn) signifies the flag.

13.6 Current Input State (PV)

Background

The flexibility of the digital composite point allows the user to assign the states of the PV for each possible combination of digital inputs, so that the states correspond to the different applications in which this point type can be used. The PV parameter represents the current state of the interfaced device and is derived from inputs D1 and D2 that can be feedback signals from the process. Separate parameters are used to configure a single-input point and a dual-input point.



TIP

The inputs to a digital composite point are usually the PVs from digital input points. The digital input points should be configured as component points that force the input direction to be direct (as opposed to reverse).

Direct/Reverse action

The actual direct/reverse action can be configured by assigning the appropriate PV state to the input as described in the following paragraphs.

Single input points

For a single-input point, there is only one input parameter (D1). D1 has two possible PV states (PVstate0 and PVstate1) that can be assigned to either of the following input conditions:

- D1 = 1 (D1 is ON; parameter D1_1)
- D1 = 0 (D1 is OFF; parameter D1_0)

You assign either PVstate0 or PVstate1 to parameter D_1; the system automatically assigns the other PV state to parameter D1_0.

Dual input points

For a dual-input point, there are two input parameters (D2 and D1) that together have four possible combinations of input values as follows:

- D2D1 = 00 (D2 is OFF, D1 is OFF; parameter D2D1_00)
- D2D1 = 01 (D2 is OFF, D1 is ON; parameter D2D1_01)
- D2D1 = 10 (D2 is ON, D1 is OFF; parameter D2D1_10)
- D2D1 = 11 (D1 is ON, D2 is ON; parameter D2D1_11)

To these four combinations of input values, you can assign any four of the following five PV states:

- Pvstate1
- Pvstate0
- Pvstate2
- MovPV
- BadPV

PVstates1, 0, and 2 cause the PV indicator to be lighted in the respective state box on the group display when the assigned D2D1 input conditions are satisfied. The MovPV and BadPV states cause the respective MOVPTXT or BADPTXT descriptor to appear below the state boxes on the group display.

PV source

The PV source parameter (PVSOURCE) determines the source of the current PV state for the digital input portion of the digital composite data point. The possible sources of the current PV state are presented in the following table.

Table 13-3 Digital Composite Point PV Sources

Source	Description
Man	Manual—Current PV state is provided by the operator.
Auto	Automatic—Current PV state is derived from Input 1 (D1) and Input 2 (D2).
Track	Current PV state is the commanded output state.
Sub	Substituted—Current PV state is provided by a user program.

PV Source Option

During configuration, the user can specify the PV sources that can be used for this data point. Parameter PVSRCOPT allows the user to select the PV source as being only AUTO, or to select all the PV sources in the above listing as allowable sources of the PV. Note that the organizational summary display lists all the points for which PVSOURCE = TRACK.

13.7 Alarming

Background

The digital composite point can be configured to detect and report command disagree, command fault, uncommanded change, or off-normal alarms. You have the option of specifying no alarming for the data point. Digital composite points also generate a bad PV alarm when any input is coming from a digital input point that has a bad PV flag (BADPVFL) status of ON.



ATTENTION

Please note that:

- Digital Composite point alarm options can be configured only if the digital composite point is configured to have inputs, or inputs and outputs.
 - The BADPVPR parameter determines priority of the bad PV alarm.
-

Command disagree

During the command disagree timeout interval, determined by the feedback-time parameter, FBTIME, it is possible, in some instances, that the state defined as BADPV could occur in the PV inputs, but not reflect an actual failure of the inputs or associated hardware. To lessen operator confusion, these "state" BADPVs should be ignored. Therefore, only BADPVs resulting from detected input errors are declared by the point during the timeout interval. If a "state" BADPV occurs, the previous PV remains displayed.

When the commanded-output state is changed and the actual input PVstate does not change accordingly within a predefined feedback time, a command disagree alarm is generated.

The feedback time (1 to 1000 seconds) is specified by the FBTIME parameter and the timer starts whenever the OP value changes. A command disagree alarm is also generated if OP changes are caused by the interlocks.

13 Digital Composite Point

13.7 Alarming

This alarm condition returns to normal when the input PV state and the commanded-output state are the same. If the commanded state is momentary, no alarm is generated. For example, a motor may have two PV states (RUN and STOP), but there may be three commanded output states (RUN, STOP, and JOG) where JOG is defined as a momentary state. Command-disagree alarming is performed for only the RUN and STOP commanded output states.

Command fail

The command fail alarm is similar to the command disagree alarm, but instead of waiting for the actual state to equal the commanded state, a check is made to verify that the PV changed from its original value to any other value within a configurable time interval. For slow devices, absence of this alarm provides feedback that the device responded to the command, even if it has not yet moved to its final position. The command fail alarm is enabled by entering an integer greater than zero for the command failure timeout parameter, CMDFALTM.

Uncommanded change

If a change does not occur in the commanded output state but the input PV state changes (and the PV is not bad), an uncommanded-change alarm is generated. This alarm condition returns to normal when the input PV state and the commanded state are the same. If the point state has been configured as being momentary, this type of alarm is not applicable. Alarm priority for the command disagree alarm, the command fail alarm, and the uncommanded change alarm is determined by the Command Disagree Priority (CMDDISPR) parameter.

Off-Normal

Detection of off-normal alarms is inhibited by selecting an FBTIME greater than zero. The normal state of the PV input is defined by the user through the PVNORMAL parameter.

When the PV input state is different than the state specified by the PVNORMAL parameter, the off-normal alarm is generated. The alarm condition returns to normal when the PV input state and the specified PV normal state are the same. When command disagree is configured, the off-normal alarm is inhibited if PVNORMAL = ON. This is to avoid two alarms at the same time and help isolate failures. You can set the priority of the off-normal alarm with the OFFNRMPR parameter.

13.8 Change-of-State Events

Any transitions in the PV input state can be used for triggering event-initiated processing of points in the Application Module (AM). It is configured by entering EIP for the event-report-option parameter EVTOPT. The user must enter the tag name of the AM or CM point using the EIPPCODE parameter.

13.9 Commanded State (OP)

Functional description

The command to go to a specific state results in outputs to the process that drives the actual state of the device to the commanded state. The commanded state is represented by the OP parameter in the digital composite point; the commanded state can be State 1 (ST1), State 0 (ST0), or State 2 (ST2). The OP parameter is available for configuration only if the number of digital output connections (NODOPTS) is configured to be greater than 0.

Up to nine Boolean parameters of the form STx_OPy (where x = 0, 1, or 2 for the state number and y = 1, 2, or 3 for the output number) allow the user to specify the state values that are to be stored by the output connections. For each of the three commanded states per output connection, you must define the value (On or Off) of the state.

CL programs or Logic points can test the parameter INITREQ to see if they are allowed to command a certain state. If INITREQ(i) = ON, then CL programs or Logic points cannot change the output to STATE(i) (i = 0, 1, or 2).

Status Output

The Status Output command parameter allows Logic points or CL programs (HPM or AM) to manipulate outputs (subject to interlocks and the mode attribute). Logic or CL programs can set SOCMD(i) to ON to command State(i) where I = 0, 1, or 2. The same rules apply as storing the corresponding state to the OP parameter, that is, the mode attribute must be PROGRAM, the corresponding permissive must be available, no override can be active, and so on. The actual output (OP) is switched to the requested state only by an OFF to ON change of the corresponding SOCMD(i) flag. There is no priority scheme; the last one changing from OFF to ON controls the output.

13 Digital Composite Point

13.9 Commanded State (OP)

OP can be commanded to state 1 or state 0 using the OPCMD parameter. When OPCMD is ON, OP is set to state 1. When OPCMD is OFF, OP is set to State 0. OPCMD can be used when three states are defined, but will only command OP to state 1 or state 0. Overrides take precedence over OPCMD; however, when the override is cleared, the OP will be commanded to the state determined by OPCMD. OPCMD should not be used in conjunction with SOCMD since OPCMD will always override the state set by SOCMD. Like SOCMD, OPCMD only affects OP when the mode attribute is PROGRAM.



ATTENTION

Do not configure two different logic outputs to drive OPCMD and SOCMD of the same Digital Composite Point.

Seal-In circuit

The seal-in circuit is a configurable option (SEALOPT). It is used to unlatch the digital output contacts on detection of the PV, not following the output command as happens on a device drop out (for example, a stopped motor).

This condition is determined to be true any time the PV is not in state1 or state 2 and either of the following is present:

- a command disagree alarm.
- an uncommanded state change alarm.

If the seal-in option is enabled, when the above condition is detected, the output destinations are set to the state corresponding to OP of state 0, but OP is not altered. The actual state commanded to the output destinations can be observed on the lower part of the group display as OPFINAL. OPFINAL is displayed in reverse video if it is different from OP. OPFINAL is set equal to OP on the next store to OP, thus clearing the seal condition. However, if OPCMD is used, it must be set OFF, then ON to clear the seal condition.



ATTENTION

The seal-in option is mutually exclusive with MOMSTATE.

State Change Option

A configurable option (STCHGOPT) allows break before make on output changes. You must configure state 0 as the break, or off, or inactive state. The number of states must equal 3.

When an output change from state 1 to state 2 or from state 2 to state 1 is commanded:

- OP changes to state 0 first.
- if the command disagree time out alarm is configured and a corresponding PV state is applicable, the alarm is held off until a successful feedback has been reached (that is, PV = state 0).
- the digital composite point waits for a predefined pause time (PAUSETIM).
- OP is then changed to the requested value.



TIP

If the break before make option is enabled, commanding a motor to change direction from forward to reverse causes the motor to stop before reversing.



ATTENTION

Please note that:

- the CL state change statement waits until feedback for the second OP change is successfully received.
 - the state change option is mutually exclusive with MOMSTATE.
-

13.10 Digital Outputs

Introduction

You can specify the latched or pulsed output type for the digital composite point through the configurable output connections.

Latched Output

Configuring the digital composite point for a latched output is accomplished by specifying any parameter other than ONPULSE or OFFPULSE.

Pulsed Output

Configuring the digital composite point for a pulsed output is accomplished through the output connections by specifying the ONPULSE or OFFPULSE parameters as the destination points for the outputs. The width of the pulse is configured at the digital composite data point through the PULSEWTH parameter; it allows the user to specify a pulse width from 0 to 60 seconds as a real number. The selected pulse width applies to all of the output connections.

Output Connections

The destinations of the outputs (and the output types) from a digital composite point are specified by the user through the DODSTN(1)-DODSTN(3) parameters. The categories of destinations that can be specified are as follows:

- Digital Output Point—Pulsed Output.
- !DO signifies a digital output point. This is the start of the hardware-reference form of addressing the digital output.
- mm is the IOP card number from 1-40 of the Digital Output IOP Card within the same HPM.
- letter 'S' is a constant.
- ss is the slot number in the range from 1-16 on the same Digital Output IOP Card.
- Logic Slot Flags.
- HPM Box PV Flags.
- Process Module Slot Flags.

- Device Control Slot Flags.
- Array Point Flags.

These destinations must be in the same HPM box as the digital composite point that is being configured.

Digital Output Point—Latched Output

To assign the digital composite-point output to the latched output of a digital output point, the user can enter either of the following output connections for the respective DODSTN(n) output connection parameter:

Tagname.S0

or

!DOmmSss.S0

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- SO signifies the status output of the digital output point.
- !DO signifies a digital output point. This is the start of the hardware-reference form of addressing the digital output.
- mm is the IOP card number from 1-40 of the Digital Output IOP Card within the same HPM.
- the letter 'S' is a constant.
- ss is the slot number in the range from 1-16 on the same Digital Output IOP Card.

Digital Output Point—Pulsed Output

Pulsed outputs can be either of two types: normally off pulsed-on, and normally on pulsed-off. To assign the digital composite-point output to the pulsed output of a digital output point, the user can enter the following information for the respective DODSTN(n) output connection parameter:

13 Digital Composite Point

13.10 Digital Outputs

For a normally off pulsed-on output:

Tagname.ONPULSE

or

!DOmmSss.ONPULSE

where:

- Tag Name is the 8- or 16-character name assigned to the data point through the NAME parameter.
- OFFPULSE signifies the pulsed output of the digital output point.
- !DO signifies a digital output point. This is the start of the hardware-reference form of addressing the digital output.
- mm is the IOP card number from 1-40 of the Digital Output IOP Card within the same HPM.
- the letter 'S' is a constant.
- ss is the slot number in the range from 1-16 on the same Digital Output IOP Card.

For a normally on pulsed-off output:

Tagname.OFFPULSE

or

!DOmmSss.OFFPULSE

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- OFFPULSE signifies the pulsed output of the digital output point.
- !DO signifies a digital output point. This is the start of the hardware-reference form of addressing the digital output.
- mm is the IOP card number from 1-40 of the Digital Output IOP Card within the same HPM.

- letter 'S' is a constant.
- ss is the slot number in the range from 1-16 on the same Digital Output IOP Card.

Logic Slot Flags

To assign the digital composite-point output to a logic-slot flag, the user can enter the following information for the respective DODSTN(n) output connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- FL signifies a logic-slot flag.
- nn is the flag number to which the output of the digital composite is sent. The flag number has a range of 7–12: flag numbers 1–6 have dedicated uses and cannot be used as destinations by a digital composite point.

HPM Box PV Flags

To assign the digital composite-point output to an HPM box PV flag in the same HPM box, the user can enter the following information for the respective DODSTN(n) output connection parameter:

Tagname.PVFL or !BOX.FL(nnnn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- PVFL signifies the PV flag.
- !BOX specifies the same HPM box in which the digital composite point resides.
- nnnn is the flag number. Box flags from 1 to 16,384 are available.

13 Digital Composite Point

13.10 Digital Outputs

Device Control Slot Flags

To assign the digital composite-point output to a Device Control slot flag, the user can enter the following information for the respective DODSTN(n) output connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- FL signifies a flag.
- nn is the flag number to which the output of the digital composite is sent. The flag number has a range of 7–12: flag numbers 1–6 have dedicated uses and cannot be used as destinations by a Device Control point.

Array Point Flags

To assign the digital composite-point output to an Array Point flag, the user can enter the following information for the respective DODSTN(n) output connection parameter:

Tagname.FL(nn)

where:

- Tagname is the 8- or 16-character name assigned to the data point through the NAME parameter.
- FL signifies a flag.
- nn is the flag number to which the output of the digital composite is sent. The flag number has a range of 1-NFLAG, where NFLAG is the array point parameter that defines the number of flags in the Array point.

13.11 Read Back Check

Digital Composite and Device Control points can have digital output connections through an SI/Array point to a field device. The field device or its interface may interrupt or change the output and not provide any indication of the change.

If flag data is mapped back from the SI/Array point, a digital output read-back check determines the actual value of the output. After a new output state is stored to the digital output connections, the read-back check is delayed for a time period equal to the feedback-time parameter time (FBTIME) or 4 seconds, whichever is greater. This delay allows the SI/Array output enough time to reach even a slow responding field device before causing a Command Disagree alarm (see “Digital Composite Point” in Section 13 and “Alarming” in Section 13.7).

If a discrepancy then exists between OPFINAL and OP, the operator is advised. If OPFINAL does not agree with any of the defined states, its state is displayed as NONE.

13.12 Initialization Manual

Initialization

A digital composite point that has at least one output connected to a discrete point (DO, Flag, or SI Array) is placed into the initialization manual condition (INITMAN is On) when the:

- associated DO point has failed or been powered off (digital composite point cannot communicate with the DO point), the DO point is in an idle condition, or in standby manual, for the FTA is missing.
- associated DO point has its initialization request (INITREQ) flag set. The flag may be set because the point is inactive, the point is not configured as a status output type, or one of the output diagnostics has failed.
- digital composite point is inactive.
- HPMM is in an idle condition.

Operator notification

INIT is displayed for the particular digital composite point to inform the user that one of the above conditions has occurred. When the condition is corrected, INITMAN is set to Off.

Initialization Option

With R630, parameter \$INITOPT allows the user to configure a digital composite point so that the digital composite point holds the output value (OP) at its last value when the point recovers from the initialization manual condition.

The \$INITOPT parameter has two values; NORMAL and HOLDOP. If NORMAL is selected as the entry for the \$INITOPT parameter, the digital composite point operates as currently described in the Initialization section.

If HOLDOP is selected, the output value is held at its last value (previous state) as long as the initialization condition persists. When the digital composite recovers from the initialization manual condition, the output is not sent to the output point unless an override interlock or safety interlock is active. If the active interlock (I0, I1, I2, or SIO) is not bypassed, the digital-composite point output value is set to the value of the active interlock.



CAUTION

If HOLDOP has been selected as the entry for the \$INITOPT parameter, it is possible that the state of the output field device does not match the state of the OPFINAL parameter after recovery from initialization has been completed. There may be a mismatch between the digital-composite output value and the output device state that requires operator intervention to correct this mismatch. Therefore, there may be uncertainty in the validity of the field device state after recovering from initialization.

For recommendations about the implementation and use of the \$INITOPT parameter, refer to the description of the \$INITOPT parameter in the *PM Family Parameter Reference Dictionary*.

Operation

When INITMAN transitions from On to Off, the digital composite point provides an output value OP as follows:

If \$INITOPT is configured as Normal...	then the OP value sent to the field device...
override interlocks are active and not bypassed	corresponds to the highest priority override interlock
feedback is configured	tracks the PV state if the PV state is valid (that is, not bad or moving).
if the input is bad and there are no output connections to ONPULSE/OFFPULSE	the OP value is back-initialized from the output connections
if the input is bad and output connections to ONPULSE/OFFPULSE exist	is set to State0
none of the above conditions exist	is set to State0
If \$INITOPT is configured as HoldOp...	then the OP value...
HOLD is configured for the \$INITOPT parameter	is held at the last output value
override interlocks are active and not bypassed	corresponds to the highest priority override interlock
feedback is configured and the value of the PV does not match the value of the OP	causes an uncommanded change alarm to be generated
If the tracked PV is not valid	a BADPV alarm is generated

13.13 Local Manual Indication

Field devices that are interfaced by a digital composite point often have a local HAND/OFF/AUTO (often called HAND/OFF/REMOTE) switch. Unless this switch is in AUTO position, the control system (HPM) may not have any control over that device. The users can optionally feedback the switch position into the HPM to obtain some display indication for the operator. This indication is provided by the word LOCALMAN appearing at the bottom of the digital composite point on a group display. Further, when in local manual, any changes to the output by the operator, and user programs, are prohibited. The override interlocks are still active when the local manual condition is on. When the local manual condition is on, both OP and OPFINAL follow the PV value (the actual state of the device).

To support HAND/OFF/AUTO switches, a Boolean flag called LOCALMAN is provided. The ON state indicates that the switch is not in AUTO position. The user can hard-wire the AUTO position of the HAND/OFF/AUTO switch through a digital input point. The state of the digital input state is then stored to the LOCALMAN flag from logic slot outputs or sequence programs.

13.14 Maintenance Statistics

Types of maintenance statistics provided

The Maintenance Statistics page of the Digital Composite Point Detail Display provides statistical information about the point. For example:

- accumulated number of transitions to each state.
- date/time of most recent statistics reset.
- accumulated time in each state.
- date/time of most recent change to each state.
- accumulated number of safety interlock overrides.

Enabling maintenance statistics

Statistics are enabled by entries in the Maintenance Statistics section during point configuration. You can enter the maximum number of hours that you want to allow in each state and maximum number of transitions that you want to allow into each state. Even if either maximum is reached, the Digital Composite point does not provide an alarm, but a CL program can be written to monitor the statistics and take action.

Reset and Redtag

The above statistics are accumulated since the most recent reset. A program can reset the statistics with the RESETFL parameter anytime or they can be reset from the Maintenance Statistics page as explained below.

The Maintenance Statistics display contains a REDTAG target. The REDTAG and RESET targets work as follows:

If you select the REDTAG target (and ENTER), the point's REDTAG parameter is set to ON and a RESET target appears. Selecting the RESET target (and ENTER), resets the points maintenance statistic values. If you select REDTAG (and ENTER, the REDTAG condition clears and the RESET target disappears

13 Digital Composite Point
13.14 Maintenance Statistics

.


14. Logic Points

14.1 Functional Overview

Description

The logic point provides a configurable mix of logic capability that, together with a digital composite point, provides the basis for integrated logic functions. The logic point is also fully integrated with the regulatory functions in the HPM. A logic point consists of logic blocks, flags, numerics, user-defined generic descriptors, input connections, and output connections as shown in the following figure.

Figure 14-1 Logic Point

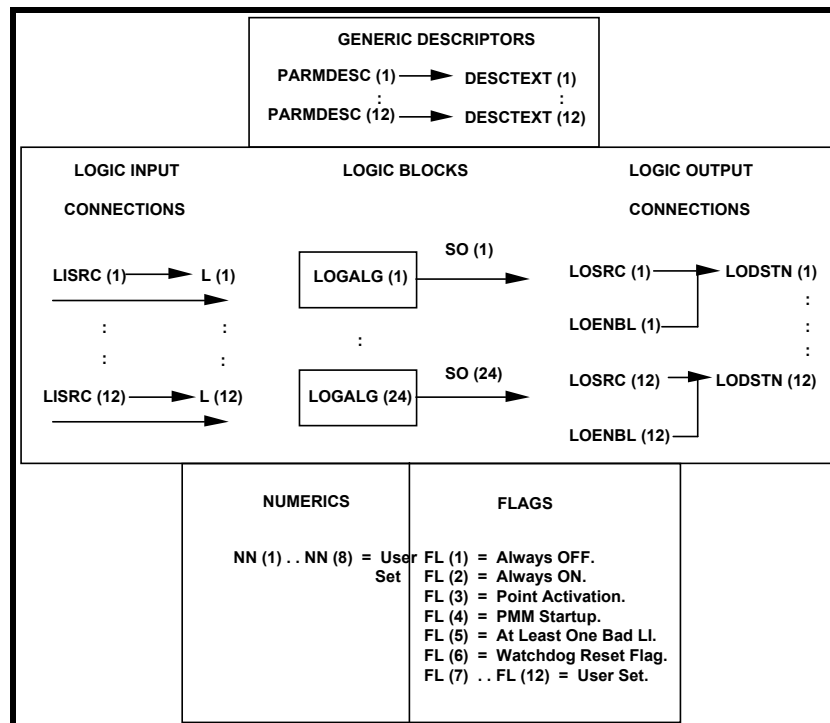

14 Logic Points

14.2 Configuring a Logic Point

Connections

The logic point can have up to 12 input connections, 24 logic blocks, and 12 output connections. The actual number of these is specified through the entry made for LOGMIX parameter as shown in the following table.

Table 14-1 Entires for LOGMIX parameters

Input Connections	Logic Blocks	Output Connections	LOGMIX Param. Entry
12	24	4	12_24_4
12	16	8	12_16_8
12	8	12	12_8_12

14.2 Configuring a Logic Point

Input connections

Inputs to the logic point are assigned by the user during configuration by using logic input connections. The user can specify up to 12 inputs that are assigned to logic-point inputs L(1) to L(12), as shown in the figure in Logic Points, Functional Overview, Description. The logic input connections can be specified using the "Tagname.Parameter" format, or the hardware reference address format by using the LISRC parameter.

The inputs to the logic point can be obtained from any of the following sources:

- Any Boolean, integer, enumeration, self-defining enumeration, or real parameter within this HPMM or in another UCN node. Note that the integer, enumeration, or self-defining enumeration parameters are automatically converted to real values.
- Any parameter from the IOPs in this HPM. Note that each IOP resident parameter counts as one of a maximum of four prefetches across the I/O Link (per logic block). The exception is for the following parameters which are scanned—
 - PVFL and BADPVFL of a DI point.
 - SO and INITREQ of a DO point.
 - PV, PVSTS, BADPVFL, PVHHFL, PVHIFL, PVLLFL, PVLOFL, PVROCNFL, PVROCPFL of an AI point.

Effect of communication and configuration errors

Because the logic point can be used for implementing safety interlocks, special handling is provided for inputs, especially Boolean inputs that cannot be obtained because of communication or configuration errors.

For example, an input obtained from a failed DI Processor can result in a communication error. Alternatively, an input can be coming from a digital composite point in another HPM (or APM OR PM) and the point mix in that HPM can be changed such that the specified point no longer exists. This results in a configuration error. In order for the logic to be able to continue in spite of a configuration error, the following special features are provided:

- **Bad Boolean Inputs**—If a Boolean input is not successfully fetched, its value is defaulted based on the logic input bad handling option parameter (LIBADOPT) as follows—
 - LIBADOPT = On
The On state is substituted for the unsuccessful input.
 - LIBADOPT = Off
The Off state is substituted for the unsuccessful input.
 - LIBADOPT = Hold
The previous value (the last successfully fetched value) is substituted for the unsuccessful input. On startup, the previous value is defaulted to the Off state. If required, the startup condition can be monitored by checking the startup flag.
- **Bad Real Inputs**—If a real input cannot be successfully fetched, its value is defaulted to NaN. If required, special action can be taken in the logic by checking it with the "check for bad" logic algorithm.
- **Input Bad Flag**—When an error is encountered in fetching the value of any input, flag FL(5) is set to On. Note that flag FL(5) is not set to On if a real input is successfully fetched but has a value of NaN.
- **Processing Order**—The logic points defined for each HPM are processed in descending order. Within each logic point, the inputs are calculated first, then the gates are processed, then the outputs are processed, each in ascending order.

14 Logic Points

14.2 Configuring a Logic Point

Flags

Twelve flags, FL(1) to FL(12), are provided for each logic point. The states of flags FL(1) to FL(6) are controlled by the HPM and cannot be changed by the user. Flags FL(7) to FL(12) are assigned by the user for controlling the path of the logic in the respective logic point. The flags are described in the following table.



TIP

You can not change Flags FL(1) to FL(5), but the states of these flags can be used as inputs to the logic points and can also be read by user programs.

Flag	Description
FL(1)	Always Off (see “Output connections” in Section 14.2 when used for logic output enable).
FL(2)	Always On.
FL(3)	On only if this logic point is processing for the first time after becoming active.
FL(4)	On only if this point is processing for the first time after the HPMM box state has transitioned from Idle to Run, or the HPMM has gone into the Run state following a power-up.
FL(5)	On if at least one of the logic input connections was unsuccessful in fetching the specified source parameter.
FL(6)	Used by the watchdog timer logic algorithm. It is set to On by the function or device being monitored to indicate that it is alive. The watchdog timer algorithm always sets this flag to Off. Flag FL(6) cannot be changed from the Universal Station.
FL(7)-FL(12)	Can be changed as determined by the user. They can be changed from the Universal Station, other logic points, or user programs.

Numerics

Eight numerics, NN(1) to NN(8), are provided with each logic point. The numerics can be used as reference values for the comparison logic algorithms, or they can be used as source parameters for the output connections when writing predefined analog constants to other points. The values of the numerics can be changed from the Universal Station, by other logic points, or by user programs. A bad numeric input typically has the value NaN.

Logic blocks

The logic operations are performed by the logic blocks. Up to 24 logic blocks may be configured by the user for each logic point. The actual number of logic blocks configured is determined by the logic mix described in Logic Points, Connections. Each logic block consists of:

- Up to 4 inputs (specified by S1, S2, S3, S4).
- One logic algorithm (specified by LOGALG).
- One Boolean output (specified by SO).

The parameters associated with a logic block are always qualified with an array index corresponding to the number of that logic block. For example, LOGALG(4) represents the algorithm configured in the logic block number 4, whose output is SO(4), and the inputs may be S1(4), S2(4), and so on.

On the first time through configuration, the outputs of all logic blocks are set to OFF; however, on a subsequent restart (for example: IDLE to RUN transition of the HPMM state, or INACTIVE to ACTIVE transition of the point execution state), all the outputs are held at their previous values.

The logic points defined for each HPM are processed in descending order. Within each logic point, the inputs are calculated first, then the gates are processed, then the outputs are processed, each in ascending order.

Output connections

Logic output connections are used to write the values of local parameters of a respective logic point to the configured destinations. Up to 12 output connections can be configured for each logic point. The actual number of output connections is determined by the LOGMIX parameter described in Logic Points, Connections. The destinations are specified by parameter LODSTN by using the "Tagname.Parameter" format or the hardware reference address format.

The logic output connection can write the selected local parameters of a logic point to any of the following destinations:

Any Boolean, integer, enumeration, self-defining enumeration, or real parameter in this HPMM, or another UCN node

Any Boolean, integer, enumeration, self-defining enumeration, or real parameter in the IOPs in this HPM. A maximum of 8 such connections can be configured for each point. The remaining 4 output connections can be used to write to boolean or real parameters that reside in this HPMM or in another UCN node.

14 Logic Points

14.2 Configuring a Logic Point

The user must specify the local parameter within the logic point and the destination to which it is to be written. The local parameter to be written is specified as the logic output source (LOSRC(n), where n = 1 to 12). The source parameter for the output connection can be selected from any of the flags (specified as FL1, FL2, and so on), numerics (specified as N1, N2, and so on), external inputs (specified as L1, L2, and so on), or the output of any of the logic blocks (specified as SO1, SO2, and so on.).

Associated with each output connection is a logic output enable flag, LOENBL(n). The parameter pointed to by LOENBL(n) must be ON for the corresponding output connection to write to the specified destination. If store-only-on-a-change is required, the appropriate condition to store can be determined by the CHDETECT logic algorithm and then used to manipulate the enable signal; or if the FL1 parameter is specified for the output enable and the output data type is Boolean, then output occurs on change only. The logic output enable flag can be obtained from any of the flags (specified as FL1, FL2, and so on), external inputs (specified as L1, L2, and so on.), or the output of any of the logic blocks (specified as SO1, SO2, and so on.).

Generic descriptors

Up to 12 user-defined generic descriptors are provided with each logic point for identifying parameters of the logic point with custom names that are to be shown on Universal Station displays. Generic descriptors can be assigned to any of the following logic-point parameters:

- Flags (FL1, FL2, and so on).
- Numerics (N1, N2, and so on).
- External inputs (L1, L2, and so on).
- Outputs of any of the logic blocks (SO1, SO2, and so on).

Typically, the generic descriptors identify critical interlock signals, operator-adjusted parameters, and so on.

The actual number of descriptors used is determined by the NODESC parameter for this logic point. For each descriptor, the parameter to which it is attached is defined by PRMDESC(n) parameter, and the corresponding 8-character descriptor is defined by GENDESC(n).

Configurable alarms

Four custom alarms can be configured for each logic point. The alarm source can be any of the logic inputs (L1–L12), logic flags (FL1–FL12), logic gate outputs (SO1–SO24), or None.

When the alarm source is None, a CL program can force an alarm by writing ON to the alarm flag (C1FL–C4FL) and clear the alarm by writing OFF to the alarm flag.

Each of the four custom alarms permits an 8-character descriptor that appears on page one of the Detail Display, the Alarm Summary Display, and the Real Time Journal, when that alarm is active.

The alarm priority choices are:

- No Action
- Journal
- Low
- High
- Emergency
- Journal Print
- Printer

Parameters



REFERENCE - INTERNAL

For a complete list of the parameters associated with the Logic Point algorithms, refer to the *PM Family Parameter Reference Dictionary*.

14.3 Logic Block Algorithms

Logic functions

Logic blocks perform logic functions. A logic block can have one-to-four inputs and produce a single Boolean output, depending on the selected algorithm. The algorithm can require real or Boolean inputs. The real inputs can be obtained from any of the numerics (specified as NN1, NN2, and so on) or the external inputs (specified as L1, L2, and so on). The Boolean inputs can be any of the flags (specified as FL1, FL2, and so on), external inputs (specified as L1, L2, and so on), or the output of any of the logic blocks (specified as SO1, SO2, and so on).

When one of the external inputs (L(1), L(2), .. L(12)) is used as an input to an algorithm, the value fetched can be real or Boolean. If the algorithm requires a real input and the fetched value is Boolean, it is treated as NaN. If the algorithm requires a Boolean input and the fetched value is real, it is treated as OFF. In either case, the bad input flag, FL(5), is not affected.

Supported Logic Block algorithms

The following logic block algorithms are supported.

Null	AND gate	OR gate	NOT gate
NAND gate	NOR Gate	XOR Gate	Qualified OR gate with 2 Inputs ON
Discrepancy 3	Two Out of Three Voting	Switch	Qualified OR gate with 3 Inputs ON
Compare Equal with Deadband	Compare Not Equal with Deadband	Compare Greater Than with Deadband	Compare Greater Than or Equal to with Deadband
Compare Less Than with Deadband	Compare Less Than or Equal to with Deadband	Check for Bad	Fixed-Size Pulse
Pulse with Maximum Time Limit	Pulse with Minmum Time Limit	Delay	On Delay
Off Delay	Watchdog Timer	Flip-Flop	Change Detect


Null

This logic algorithm provides an output (SO) that is always set to OFF.

AND Gate

This algorithm provides a 3-input AND gate, with each input (S1, S2, and S3) having the capability of being optionally inverted, as required. The output SO is determined as follows.

Figure 14-2 AND Logic Point Algorithm

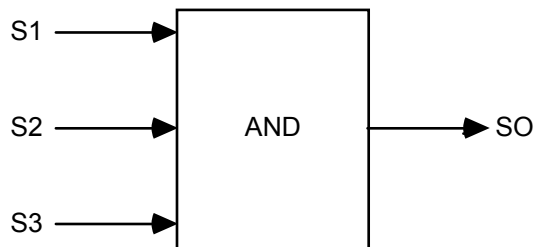

ATTENTION

In the following truth table, REV indicates if the input is reverse acting (inverted).


S1	S1REV	S2	S2REV	S3	S3REV	SO
OFF	ON	OFF	ON	OFF	ON	OFF
OFF	ON	OFF	ON	ON	OFF	OFF
OFF	ON	ON	OFF	OFF	ON	OFF
OFF	ON	ON	OFF	ON	OFF	OFF
ON	OFF	OFF	ON	OFF	ON	OFF
ON	OFF	OFF	ON	ON	OFF	OFF
ON	OFF	ON	OFF	OFF	ON	OFF
ON	OFF	ON	OFF	ON	OFF	ON

14 Logic Points

14.3 Logic Block Algorithms

OR Gate

This logic algorithm provides a 3-input OR gate, with each input (S1, S2, and S3) having the capability of being optionally inverted, as required. The output SO is determined as follows.

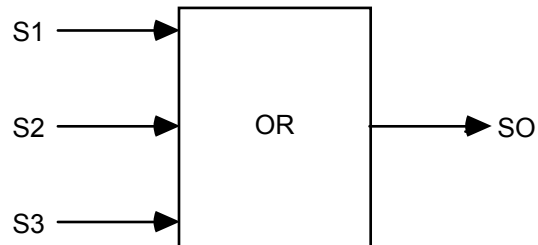


ATTENTION

In the following truth table, REV indicates if the input is reverse acting (inverted).

S1	S1REV	S2	S2REV	S3	S3REV	SO
OFF	ON	OFF	ON	OFF	ON	OFF
OFF	ON	OFF	ON	ON	OFF	ON
OFF	ON	ON	OFF	OFF	ON	ON
OFF	ON	ON	OFF	ON	OFF	ON
ON	OFF	OFF	ON	OFF	ON	ON
ON	OFF	OFF	ON	ON	OFF	ON
ON	OFF	ON	OFF	OFF	ON	ON
ON	OFF	ON	OFF	ON	OFF	ON

NOT Gate


This algorithm provides the Boolean inversion (NOT) function. The output SO is the inversion of the input S1 as follows.

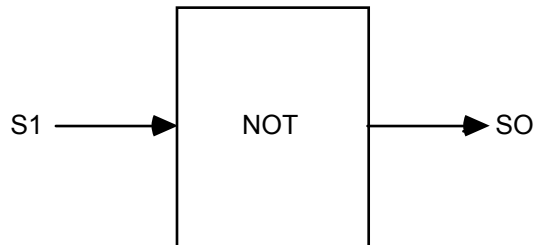

If S1 is...	then SO is...
OFF	ON
ON	OFF

NAND Gate

This algorithm provides a 3-input NAND gate, with each input (S1, S2, and S3) having the capability of being optionally inverted. The output SO is determined as follows.

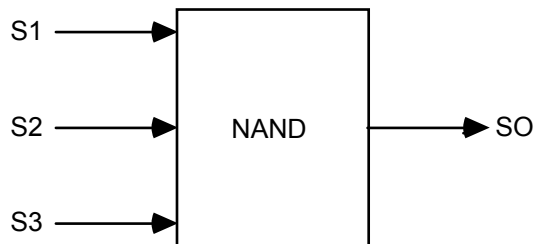

ATTENTION

In the following truth table, REV indicates if the input is reverse acting (inverted).


14 Logic Points

14.3 Logic Block Algorithms

S1	S1REV	S2	S2REV	S3	S3REV	SO
OFF	ON	OFF	ON	OFF	ON	ON
OFF	ON	OFF	ON	ON	OFF	ON
OFF	ON	ON	OFF	OFF	ON	ON
OFF	ON	ON	OFF	ON	OFF	ON
ON	OFF	OFF	ON	OFF	ON	ON
ON	OFF	OFF	ON	ON	OFF	ON
ON	OFF	ON	OFF	OFF	ON	ON
ON	OFF	ON	OFF	ON	OFF	OFF

NOR Gate

This logic algorithm provides a 3-input NOR gate, with each input (S1, S2, and S3) having the capability of being optionally inverted. The output SO is determined as follows.

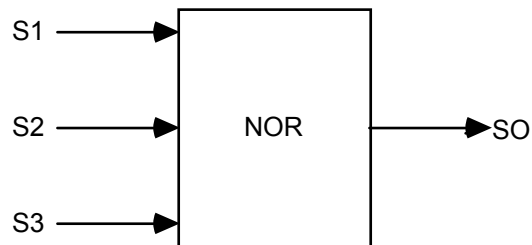


ATTENTION

In the following truth table, REV indicates if the input is reverse acting (inverted).

S1	S1REV	S2	S2REV	S3	S3REV	SO
OFF	ON	OFF	ON	OFF	ON	ON
OFF	ON	OFF	ON	ON	OFF	OFF
OFF	ON	ON	OFF	OFF	ON	OFF
OFF	ON	ON	OFF	ON	OFF	OFF
ON	OFF	OFF	ON	OFF	ON	OFF
ON	OFF	OFF	ON	ON	OFF	OFF
ON	OFF	ON	OFF	OFF	ON	OFF
ON	OFF	ON	OFF	ON	OFF	OFF

XOR Gate

This algorithm provides a 2-input exclusive-OR gate. The output SO is determined as follows.

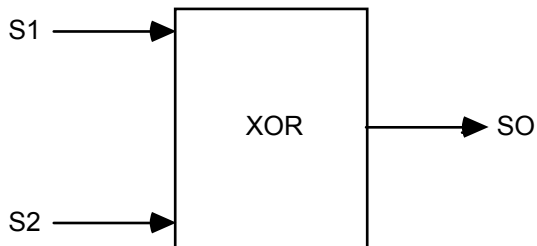

S1	S1REV	S2	S2REV	SO
OFF	ON	OFF	ON	OFF
OFF	ON	OFF	ON	ON
OFF	ON	ON	OFF	ON
OFF	ON	ON	OFF	ON
ON	OFF	OFF	ON	ON


14 Logic Points

14.3 Logic Block Algorithms

S1	S1REV	S2	S2REV	SO
ON	OFF	OFF	ON	ON
ON	OFF	ON	OFF	ON
ON	OFF	ON	OFF	OFF

Qualified OR Gate with 2 Inputs ON


This algorithm provides a 4-input qualified-OR function that requires at least two inputs to be ON before output SO is set to ON. The output is determined as follows.

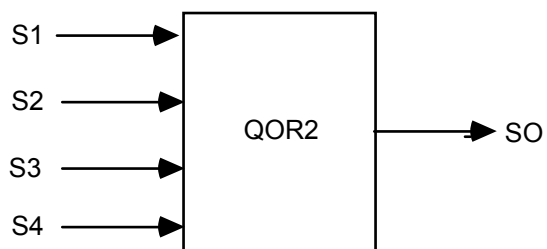

If...	then...	else...
any two or more inputs (S1, S2, S3, S4) are ON	SO = ON	SO = OFF

Qualified OR Gate with 3 Inputs ON

This algorithm provides a 4-input qualified-OR function that requires at least three inputs to be ON before output SO is set to ON. The output is determined as follows.

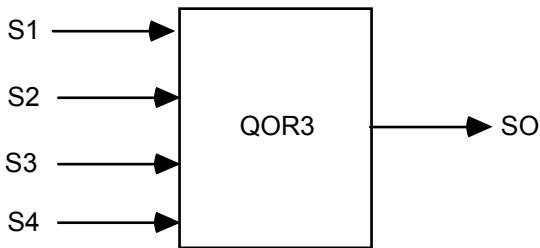


If...	then...	else...
any three or more inputs (S1, S2, S3, S4) are ON	SO = ON	SO = OFF

Discrepancy 3

The Discrepancy 3 algorithm has three inputs and an output. The output SO is set True if the three inputs do not agree for longer than the delay time (DLYTIME). The delay time is configurable and has a range of 1 to 8000 seconds. If the configured delay time is less than or equal to one sample time of this logic point, it is assumed to be equal to one sample time.

The output is determined as follows.

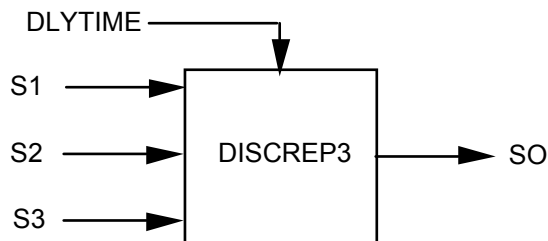

If...	or...	or...	after...	then...	else...
S1 <> S2	S2 <> S3	S3 <> S1	T >= DLYTIME	SO = ON	SO = OFF


14 Logic Points

14.3 Logic Block Algorithms

The Discrepancy block is used to monitor inputs S1 - S3 for inactivity or failure. The output (SO) goes true if any input disagrees with either of the other two inputs for longer than the preset delay time.

Two Out of Three Voting

A two out of three voting function can be implemented with the QOR2 and DISCREP3 logic blocks as follows. One input to the QOR2 block is connected to a source that is always off such as the output (LO) of logic flag 1.

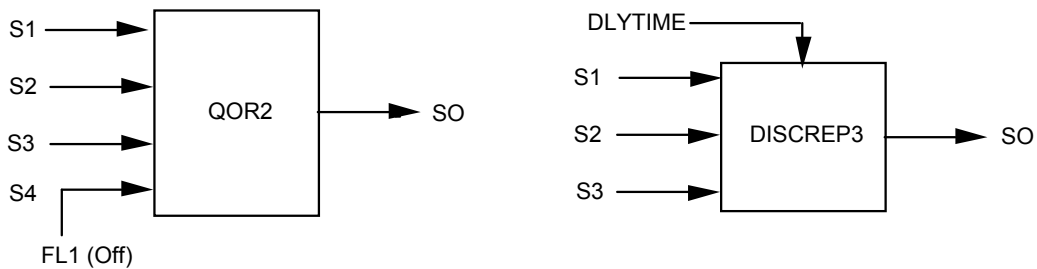

If...	or...	or...	then...	else...
S1 and S2	S2 and S3	S3 and S1	SO = ON	SO = OFF


Switch

This algorithm provides a 2-input switch. Output SO is determined as follows.

If...	then...	else...
S3 = ON	SO = S1	SO = S2

Compare Equal with Deadband

This algorithm compares two real inputs (R1 and R2) for being "almost equal" or within a specified deadband. Output SO is determined as follows.

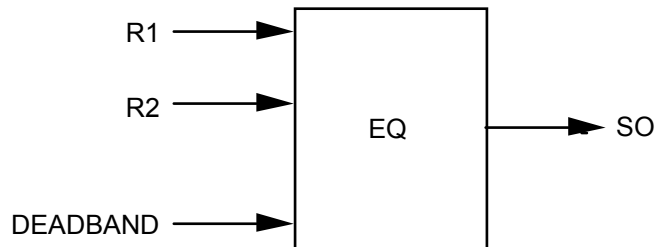

If...	then...	else...
$\text{ABS}(R1 - R2) \leq \text{DEADBAND}$	SO = ON	SO = OFF




ATTENTION

If R1 and/or R2 inputs are "NaN", then SO is not changed.

Compare Not Equal with Deadband

This algorithm compares two real inputs for NOT being "almost equal," or being outside of a prespecified deadband. Output SO is determined as follows:

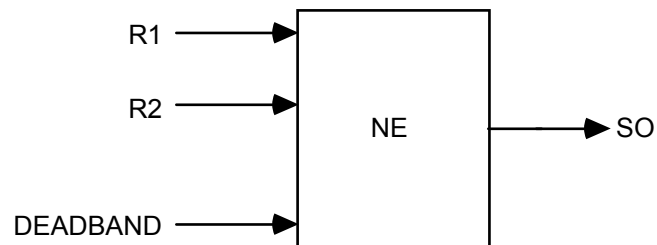

If...	then...	else...
$\text{ABS}(R1 - R2) > \text{DEADBAND}$	SO = ON	SO = OFF




ATTENTION

If R1 and/or R2 inputs are "NaN", then SO is not changed.

Compare Greater Than with Deadband

This algorithm compares a real input (R1) for being greater than another real input (R2) with a predefined deadband. Output SO is determined as follows.

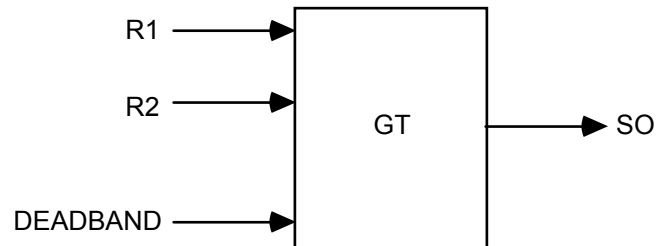

If...	then...	else...	then...	else...
$R1 > R2$	SO = ON	$R1 \leq (R2 - \text{DEADBAND})$	SO = OFF	SO = OFF




ATTENTION

If R1 and/or R2 inputs are "NaN", then SO is not changed.

Compare Greater Than or Equal with Deadband

This algorithm compares a real input (R1) for being greater than or equal to another real input (R2) with a specified deadband. Output SO is determined as follows.

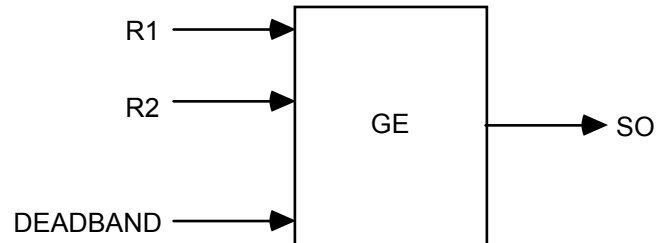

If...	then...	else...	then...	else...
$R1 \geq R2$	SO = ON	$R1 < (R2 - \text{DEADBAND})$	SO = OFF	SO is not changed




ATTENTION

If R1 and/or R2 inputs are "NaN", then SO is not changed.

Compare Less Than with Deadband

This algorithm compares a real input (R1) for being less than another real input (R2) with a predefined deadband. Output SO is determined as follows.

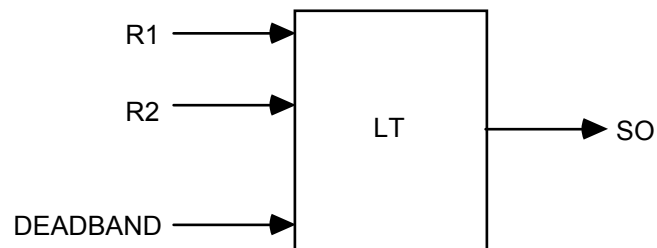

If...	then...	else...	then...	else...
$R1 < R2$	SO = ON	$R1 \geq (R2 - \text{DEADBAND})$	SO = OFF	SO is not changed



ATTENTION


If R1 and/or R2 inputs are "NaN", then SO is not changed.

14 Logic Points

14.3 Logic Block Algorithms

Compare Less Than or Equal with Deadband

This logic algorithm compares a real input (R1) for being less than or equal to another real input (R2) with a predefined deadband. Output SO is determined as follows.

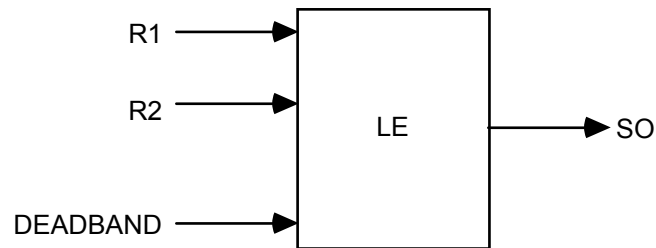

If...	then...	else...	then...	else...
$R1 \leq R2$	SO = ON	$R1 > (R2 + \text{DEADBAND})$	SO = OFF	SO is not changed




ATTENTION

If R1 and/or R2 inputs are "NaN", then SO is not changed.

Check for Bad


This logic algorithm checks a real input (R1) for being bad (equal to NaN). Output SO is determined as follows.

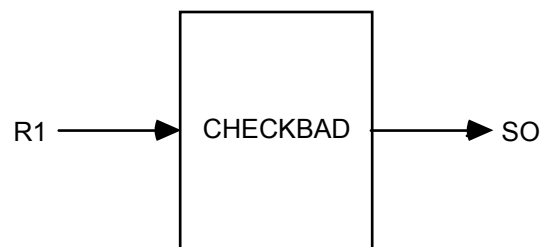

If...	then...	else...
R1 is NaN	SO = ON	SO = OFF


Fixed-Size Pulse

This logic algorithm provides a fixed-size output pulse at the SO output each time the S1 input transitions from the OFF state to the ON state. The output pulse width (in seconds) is specified by the DLYTIME parameter. If the delay time is less than or equal to one sample time (of the logic point), it is assumed to be equal to one sample time. Another output pulse cannot be generated until the generation of the preceding pulse has been completed.

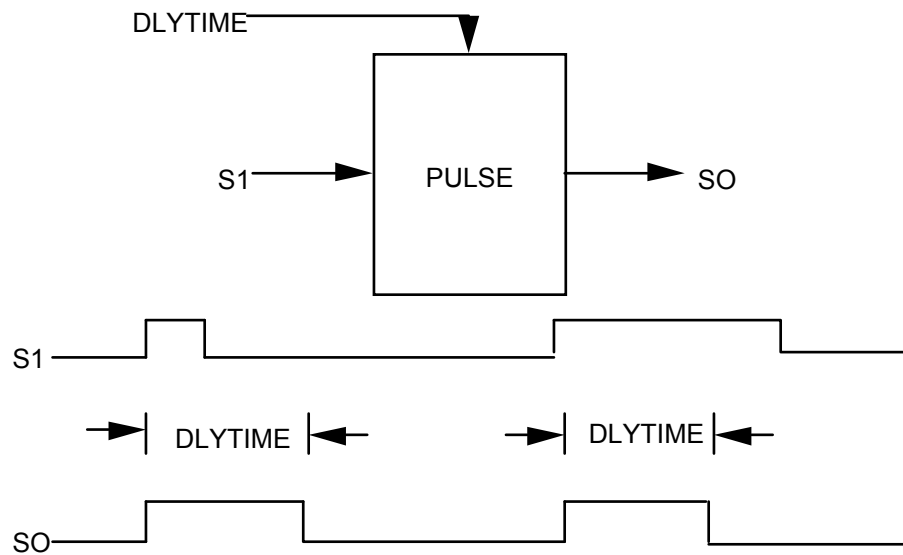


Pulse with Maximum Time Limit

This logic algorithm provides a pulse at the SO output each time the S1 input transitions from the OFF to the ON state. If the input stays ON longer than a predefined time, the output pulse is terminated. The maximum output pulse width (in seconds) is specified by the DLYTIME parameter. If the specified output pulse width is less than or equal to one sample time (of the logic point), it is assumed to be equal to one sample time.

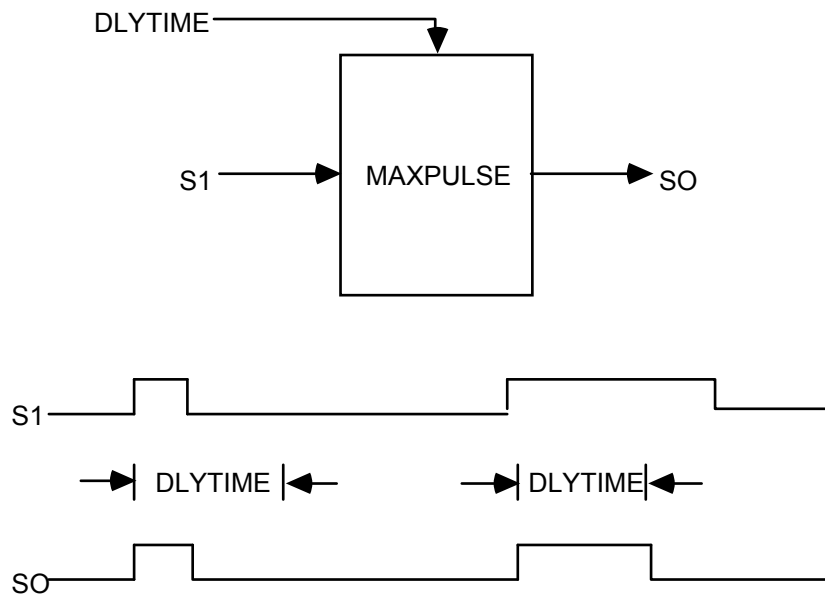

Pulse with Minimum Time Limit

This algorithm generates a pulse at the SO output each time the S1 input transitions from the OFF to the ON state. If the S1 input stays ON for an interval that is less than the specified time, the output pulse is extended until the timed interval is over. The minimum output pulse width (in seconds) is specified by the DLYTIME parameter. If the specified output pulse width is less than, or equal to, one sample time (of the logic point), it is assumed to be equal to one sample time.

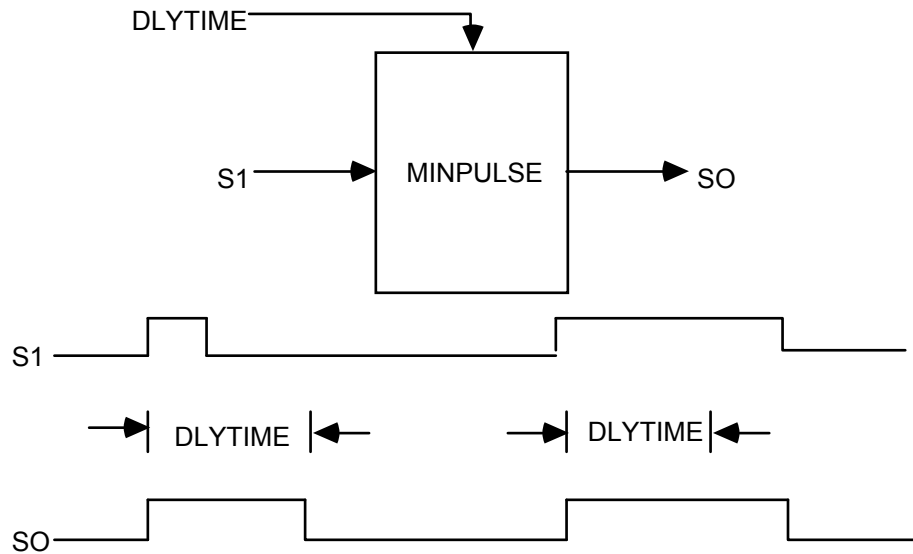


14 Logic Points

14.3 Logic Block Algorithms


Delay

This logic algorithm delays the input signal at the S1 input by one sample time. The SO output always follows the input after one sample time delay.

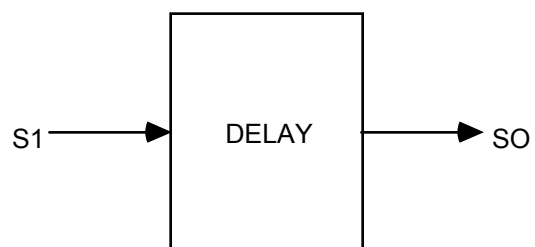


On Delay

This logic algorithm delays the input signal supplied at the S1 input when the input signal is going from the OFF to the ON state. (There is no delay provided when the input changes from the ON to the OFF state.) When the input state changes from OFF to ON, an internal timer starts counting down the delay time specified by the DLYTIME parameter (in seconds). When it times out, the S1 input is monitored again, and if it is still ON, the SO output is set to ON. When the input state transitions to OFF, the SO output is set to OFF immediately, and the timer is shut off (if it is running). If the specified delay time is less than or equal to one sample time (of the logic point), it is assumed to be equal to one sample time.

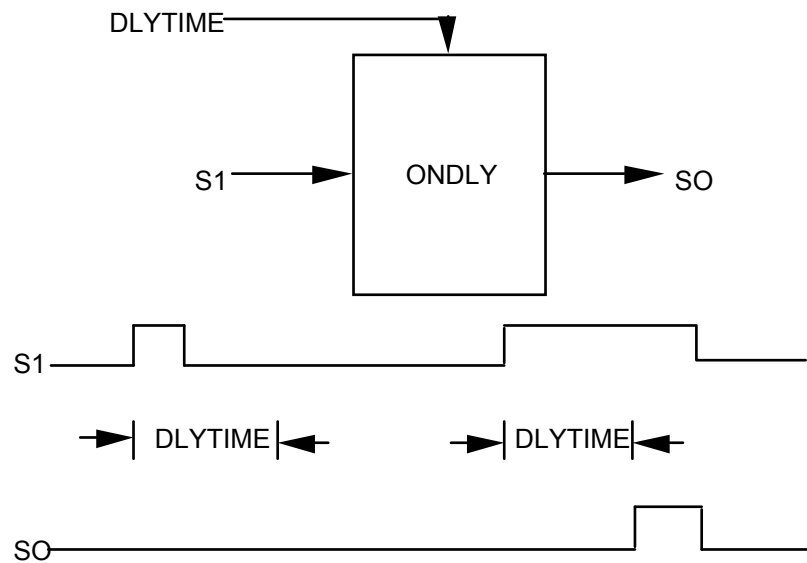

Off Delay

This logic algorithm delays the input signal supplied at the S1 input when the input signal is going from the ON to the OFF state. (There is no delay provided when the input changes from the OFF to the ON state.) When the input state changes from ON to OFF, an internal timer starts counting down the delay time specified by the DLYTIME parameter (in seconds). When it times out, the S1 input is monitored again, and if it is still OFF, the SO output is set to OFF. When the input state transitions to ON, the SO output is set to ON immediately, and the timer is shut off (if it is running). If the specified delay is less than or equal to one sample time (of the logic point), it is assumed to be equal to one sample time.

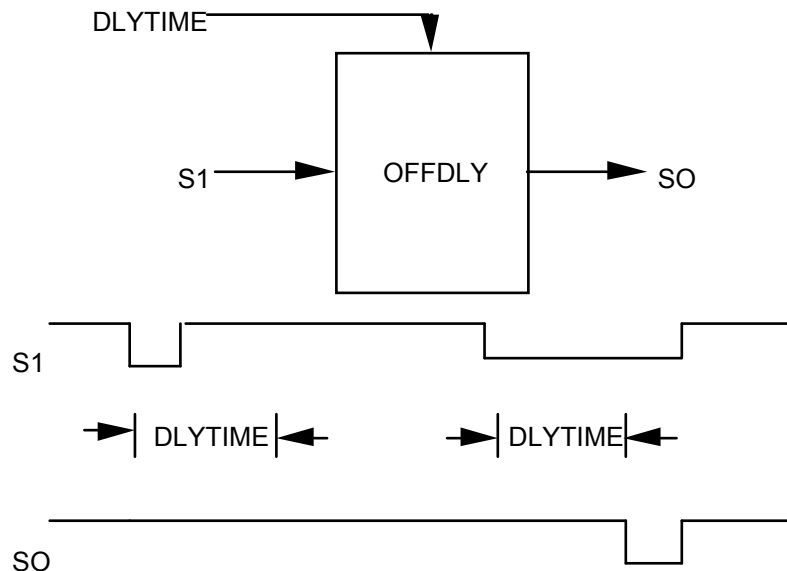


Watchdog Timer

This logic algorithm provides a "time out" capability to monitor other system functions or remote devices. The function or device monitored must set the watchdog reset flag FL(6) (of this logic point) to ON within a time interval specified (in seconds) by the DLYTIME parameter, otherwise it is assumed to have failed, and the SO output of the algorithm is set to ON. If the specified delay time is less than or equal to one sample time (of the logic point), it is assumed to be equal to one sample time. When the watchdog timer algorithm runs and if the FL(6) flag is ON, the internal timer is set equal to DLYTIME, and FL(6) and the output SO are both set to OFF. However, if FL(6) is OFF, the internal timer is decremented, and if it becomes zero, the SO output is set to ON. Because this algorithm always uses the FL(6) flag of the logic point as the reset input, only one Watchdog Timer algorithm should be configured for each logic point.

Flip-Flop

This algorithm provides the flip-flop function. The SO output is determined by the states of inputs S1 and S2 as follows.

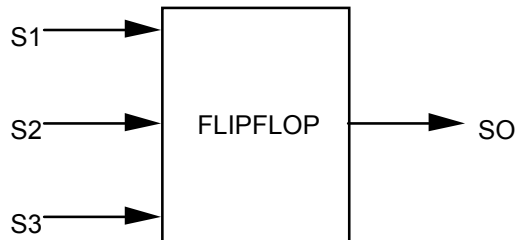


S1	S2	SO
OFF	OFF	Not changed
ON	OFF	OFF
OFF	ON	ON
ON	ON	S3 input

14 Logic Points

14.3 Logic Block Algorithms

Change Detect

This algorithm is used to detect changes in up-to-three inputs. The output SO is determined as follows.

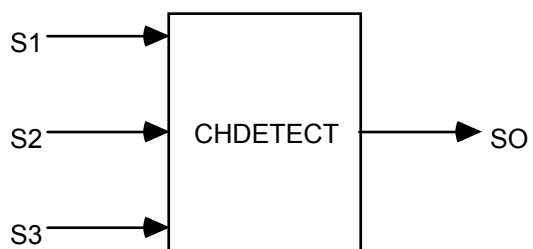

$SO = (S1 \neq S1_last_time)$

OR

$(S2 \neq S2_last_time)$

OR

$(S3 \neq S3_last_time)$

15. Process Module Data Point

15.1 Functional Overview


Purpose

Control strategies frequently need the flexibility of user programs for continuous, batch, or hybrid applications. A Process Module Data Point is the resource for execution of user-created programs written in Honeywell's Control Language (CL/HPM). CL/HPM is a member of Honeywell's family of advanced process-engineer oriented languages and is a powerful tool for advanced continuous control, sequential control, and computations. CL programs are self-documenting, which is an important feature when future modifications of control strategies are anticipated.

Description

The Process Module Data Point, as shown in the following figure, is the interface between the system and a CL/HPM (sequence) program that resides in the Process Module Data Point.

Figure 15-1 Process Module Data Point Functional Diagram

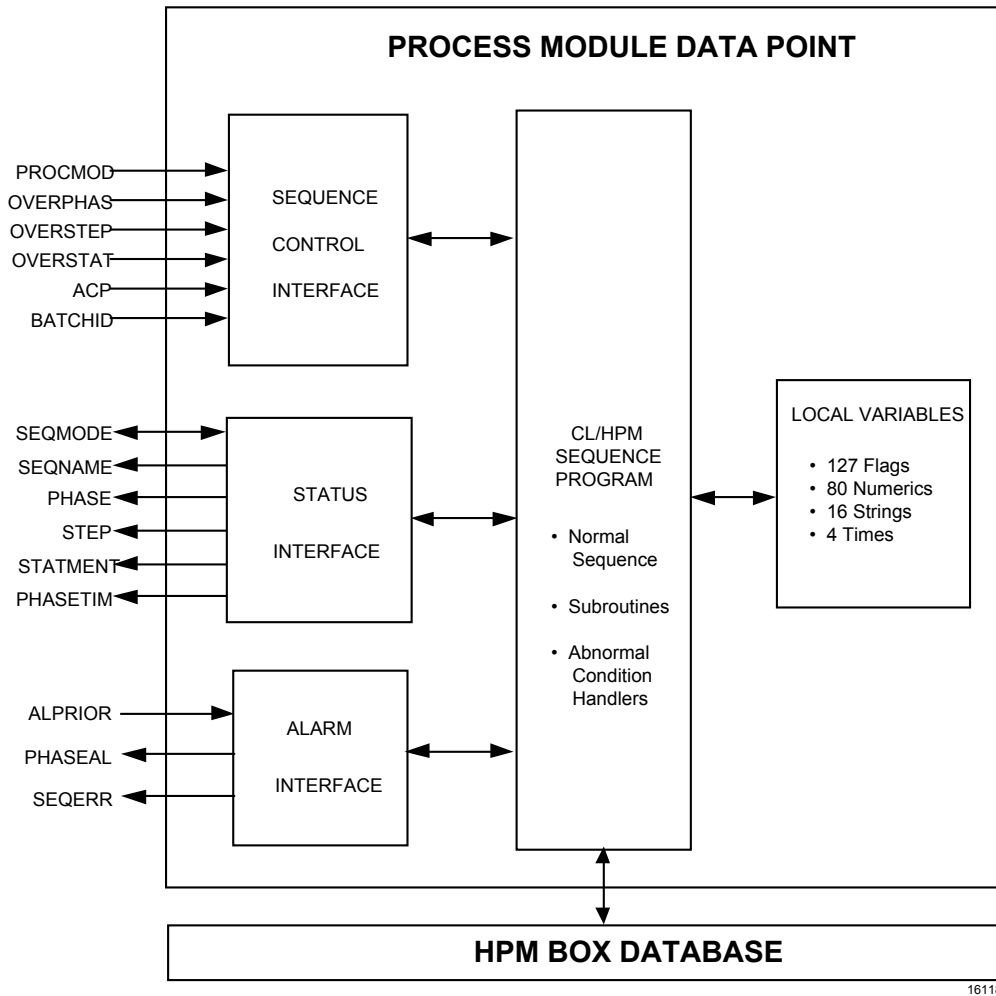

Use

The Process Module Data Point is the mechanism through which:

- an operator, a CL/AM block, a user-written CM program, or another sequence program can start and stop a sequence program and monitor the current status of a sequence program.
- sequence alarms (sequence errors, failures, and phase alarms) are reported to the system; an alarm priority can be assigned to sequence alarms.
- a sequence program can send information to an Advanced Control Point (ACP) in a Computing Module when implementing high-level control strategies.

Capacity

Total statement capacity depends on configuration. The maximum number of CL/HPM statements = $3(22000 - n)$ where n is the number of Memory Units used by data points (see “Determining Processing and Memory Capacity” in Section 49.4).

Using the Universal Station or the Universal Work Station, individual programs can be easily modified and reloaded without affecting the execution of regulatory control, logic blocks, and other user programs.

15.2 Sequence Programs Overview

To accomplish the desired sequence control, the sequence program can:

- **Monitor current process values** such as temperatures, pressures, and flows and current states of devices such as valves and motors, by—
 - accessing values from the local HPM database, and from any other node such as HPM, APM, PM, LM, or SM that is on the same UCN.
 - reading the values of almost all parameters in the HPM database except for character-string descriptors such as PTDESC (Point Descriptor), and input/output connections.
- **Control the process by using accessed values** to calculate new values and write them to the appropriate parameters, where the sequence program—
 - writes values into the local HPM database and into any other node such as HPM, APM, PM, LM or SM that is on the same UCN.

- writes values to all parameters in the HPM database except for calculated variables such as alarm flags and general configuration parameters such as PVALGID (PV Algorithm Identifier).
- **Use the variables** that reside in the local Process Module Data Point, including—
 - 127 local flag variables.
 - 80 local numeric variables.
 - eight 8-character string variables Point (can alternatively use four 32-character or two 64-character strings).
 - 4 time variables.
- **Use the variables** (flag, numeric, string, time, timer) that reside in another Process Module Data Point.
- **Use HPM Box resident variables** (flag, numeric, string, time, timer) within the same HPM, noting that—
 - CL programs cannot access HPM Box variables with an index of greater than 4,095.
 - Array points can be used to refer to those variables.
- **Start another sequence program or force an abnormal condition** in another Process Module Data Point as required.
- **Issue predefined or computed messages** to the operator to inform you of current process conditions and to provide instructions. (the operator can also override various portions of the sequence, as required).



ATTENTION

With R530, the compile time of a loaded CL/HPM sequence program is provided. Time and Date stamp information is shown on the Detail Display of the UCN ProcMod point. To access this page, select the target CONFIG PARAMS from the first page of the ProcMod Point Detail Display.


15.3 Unit Partitioning

Background

The user's process is usually partitioned into process units where the operators have the responsibility to control one or more process units. To support this type of partitioning, the HPM Process Module Data Points (sequence programs) can be partitioned on a process unit basis as shown in the following figure. This is accomplished by using the following three elements:

- The set of CL/HPM sequence programs that control individual process unit.
- The set of process monitoring and control elements that are used by the sequence program to control the operation of the process unit.
- Operating displays show various portions of the sequence programs. One example is the Module Summary Display, which shows the current status of the process modules on a process unit basis. Other displays are the Module Group and Module Detail displays which allows the operator to start and stop the sequence programs.

Figure 15-2 Sequence Program and Unit Partitioning

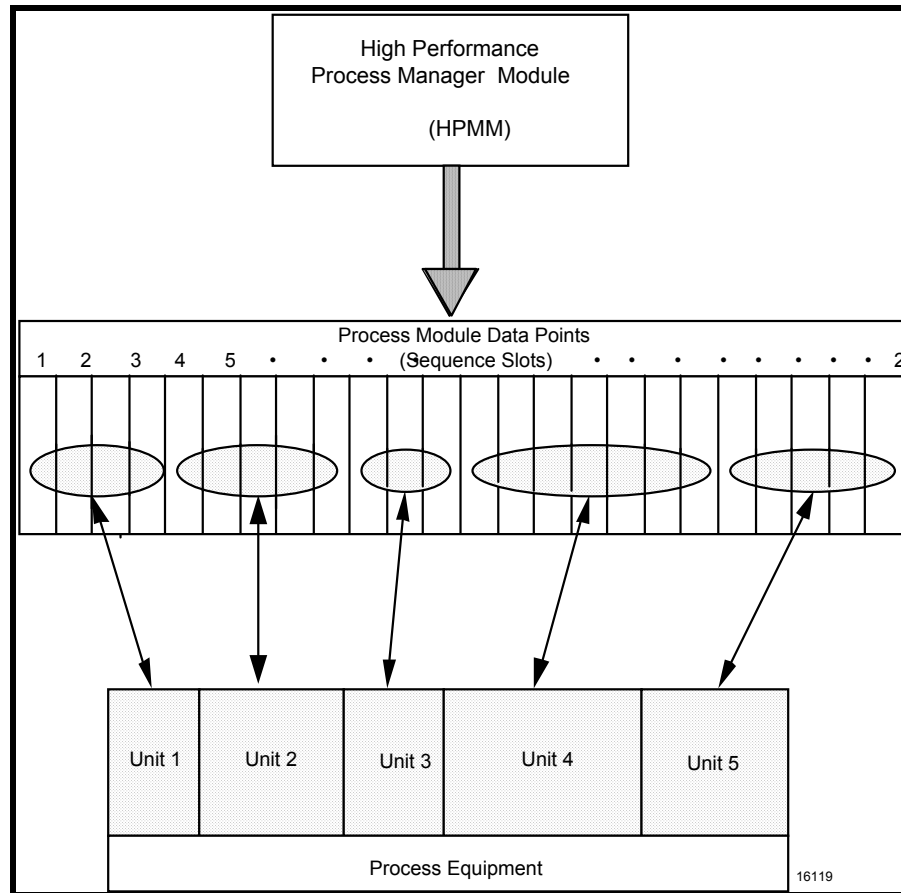

Consistent partition practices

Wherever possible, process unit partitioning should be consistent with the inherent boundaries in the system, such as:

- beginning and end points of major separable segments of a process.
- physical separations or classifications of process equipment components.

15.4 Writing sequence programs

Background

Sequence programs are written in CL/HPM and compiled at a Universal Station or through TPS Builder. At compilation time, each sequence program is bound to a specific Process Module Data Point (that is, a specific sequence slot) and is written to a separate object file. These files can be directly downline loaded through the NIM to the process module slots in the designated HPM.



ATTENTION

To prepare CL/HPM programs, refer to the *Control Language High-Performance Process Manager Reference Manual* To compile a CL/HPM program (binding it to a process module point) and load it into the HPM:

- using the Universal Station, refer to *Control Language High-Performance Process Manager Data Entry*.
 - using the TPS Builder, refer to the *TPS Builder Configuration Tool Guide*.
-

Sequence library

The Sequence Library contains the names of the sequence programs. The Sequence Library is divided into three sections, with each section having a maximum of 1000 entries. (The section is defined by the LIBRYNUM parameter.) A section of the library can be viewed by reconstituting the point, using \$NxxLiby where xx is the UCN number on which the NIM resides and y is the section number of the library.

Library entries can be made automatically by the CL Compiler, or they can be entered manually by the user. If the manual entry method is to be used, the user should first enter the names on the NIM Library Configuration Form, AP88-540. The LIBRYTXT parameter defines the allowable character set for the library entries.

Library 1 is reserved for sequence names; Libraries 2 and 3 are reserved for all other names. If the CL Compiler completely fills up Libraries 2 and 3, the compiler will begin entering the overflow information into Library 1, beginning with index number 1,000 and working down towards index number 2.

The sequence library resides in the NIM, and it is applicable to all the HPMs (or APMs, or PMs) on the same UCN.

Local variables

Each Process Module Data Point contains 127 local flags, 80 local numerics, 4 local time variables, and 16 local 8-character strings. The strings can alternatively be allocated as 8 16-character, 4 32-character, or 2 64-character strings. Flags are designated FL(1) to FL(127) and the numerics are designated NN(1) to NN(80). Times are designated TIME(1) to TIME(4) and Strings are designated STRn(mm) where n is the string length (8, 16, 32, 64) and mm is the specific string number. For example, STR8(15) for 8-character strings, STR16(7) for 16-character strings, and so on.

The primary purpose of the flags and numerics is to provide storage for recipe data and intermediate results. Time variables are used to record date/time information, and strings contain text strings that name or describe things. These local variables can be accessed by the sequence executing in the same process module in which they reside, or they can be accessed by any other sequence in the same HPM. The flags and numerics can also be accessed by all system functions, such as CL programs in the AM, Universal Station displays, and so on. They can be accessed as local variables by CL/HPM by using the AT clause. Refer to the *Control Language High-Performance Process Manager Reference Manual*

These local variables are accessed by the various system elements using the "Tagname.Parameter" convention where the Tagname is the name of the process module in which they reside, and the "Parameter" is the parameter name such as FL(15), NN(25), STR8(15), or Time(4). To store (write) into the local flags and numerics, the keylock position must equal or exceed the minimum access level specified in parameter SPLOCK.

Process module flags and numerics are set to the default values of OFF and NaN respectively, when the process module data point is deleted or when the HPM database is initialized to default values. Time and string variables are initialized to spaces and 0 seconds, respectively. The HPM database is set to default values on initial loading of the HPM Box data point and when the SCANRATE parameter or point mix changes in subsequent loads of the HPM Box data point. Process Module data point local flags and numerics are left unchanged during downloading of sequence programs or the process module data point itself to allow a record or history to exist between programs.

Flag, Numeric, String, Times, and Timer variables that reside in the HPM box are a different set of variables from the local flags, numerics, strings, and times. These variables are available to the sequence programs in this HPM and to the other sequence programs in the HPMs (or APM, or PMs) on the same UCN and, with some minor restrictions, to other system functions. They are described in Section 9 of this manual.


15.5 Sequence Program Structure

Parts of a sequence program

As illustrated in the following figure, each sequence program consists of program header and two main sections:

- data declaration section.
- execution section.

Figure 15-3 Sequence Program Structure

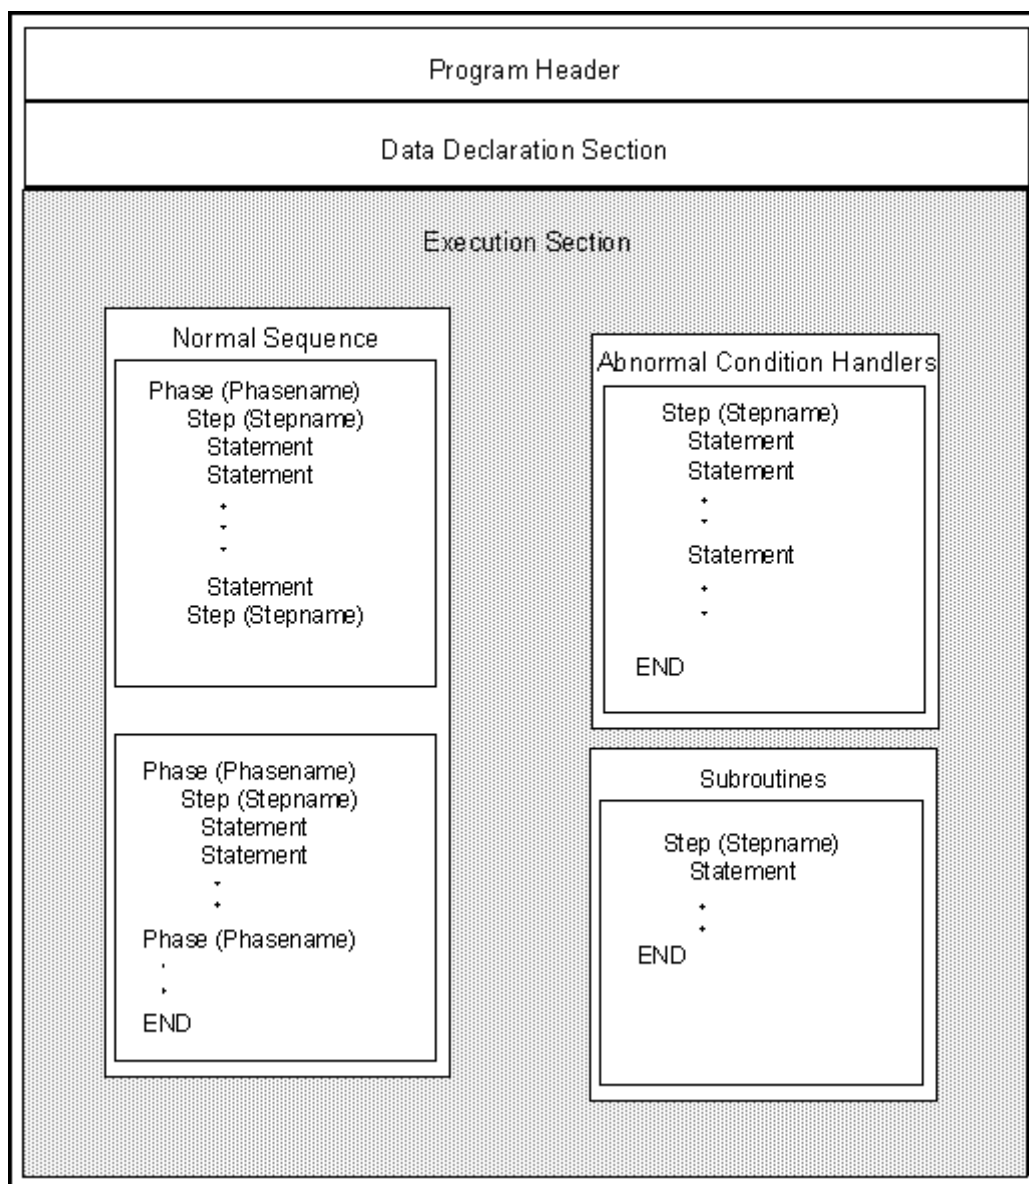

Data declaration

The data declaration section requires you to provide optional CL/HPM statements that relate user-defined names to HPM flags, numerics, strings, and times that declare the numeric constants, and that name the data points used in the program.

Execution declaration

The execution section consists of one-to-three parts:

- Normal Sequence (refer to **Error! Reference source not found.**) which—
 - is the main program that provides control when conditions in the process are normal (for example, the process is proceeding within acceptable limits and does not require special control actions) is divided into "Phases," "Steps," and "Statements" (as shown in Figure 15-3).
- Subroutines, which—
 - simplify the program structure and are used for executing repetitive functions, thereby reducing the programming effort and memory requirements.
 - can be called by the normal sequence, other subroutines, or abnormal condition handlers.
 - permit two levels of nesting for both normal and abnormal sequences (a runtime error is generated if the nesting level is violated).
 - are specific to one sequence program (that is, subroutines defined outside of the program and maintained in subroutine libraries are not supported in the High-Performance Process Manager).
- Abnormal-Condition Handlers (see **Error! Reference source not found.**), which—
 - provide corrective action when abnormal conditions are encountered.
 - detect abnormal conditions when the SEQEXEC value is Run, Pause, Fail, Error, or End.
 - suspends the normal sequence when an abnormal condition is detected and begins execution of the appropriate abnormal-condition handler.
 - are identified in the sequence program by the HANDLER statement, preceded by the name for the type of handler, and followed by the user-given handler name (for example, `HOLD HANDLER cool`down).
 - consist of steps and statements. Hold and Shutdown abnormal-condition handlers and an Emergency Shutdown handler.

15 Process Module Data Point

15.5 Sequence Program Structure

- have priority over each other and over the normal sequences.
- can be enabled or disabled anywhere within a Phase by using the ENB statement, which causes a suspend condition, but the new conditions to be monitored take effect immediately.
- can also be enabled or disabled by the phase header in the phase statement.



ATTENTION

The abnormal condition handlers and the normal sequence order of execution priority is as follows:

- Emergency Shutdown (Highest Priority).
- Shutdown.
- Hold.
- Normal Sequence (Lowest Priority).

The priority of a Restart Section is the same as the abnormal-condition handler that contains the Restart Section.

Table 15-1 Normal Sequence and Abnormal Condition Handler Component Definitions

Item	Definition
Normal Sequence	
Phase	A sequence program consists of a grouping of phases. A phase executes a major process function or marks a major process milestone, such as a charging phase or heat-up phase. Phase boundaries are key points of synchronization in the control program. A phase is identified in the sequence program by the PHASE statement, and consists of optional steps and statements.
Step	A step executes a minor process function such as opening a valve with associated checks and verification, or checking a temperature. At least one step is executed each time the sequence is executed. A step is visible at a Universal Station as a process milestone. It is identified in the sequence program by a STEP statement, and consists of an ordered set of CL/HPM statements. The step size is limited to a maximum of 255 statements.
Statement	One CL/HPM instruction. A statement performs an elementary action, such as commanding a valve to open, do arithmetic operations, fetch variables, and so on.

Item	Definition
<i>Abnormal-Condition Handlers</i>	
Hold	Executed on an abnormal condition that requires a partial shutdown and can be terminated by a restart section that is identified by the RESTART statement, followed by the handler's END statement
Shutdown	Executed on an abnormal condition that requires a systematic shutdown can be terminated by a restart section that is identified by the RESTART statement, followed by the handler's END statement
Emergency Shutdown	Executed on an abnormal condition that requires a complete, sudden shutdown and can be terminated by only the handler's END statement

15.6 Sequence Execution

Normal execution

Execution of the normal sequence can be initiated by:

- an operator from the Process Module Detail Display.
- another sequence, executing in another process module by using the INITIATE statement. Generally, this other sequence is a master or supervisory sequence; that is, a sequence program that initiates, monitors, and controls other sequences.
- a CL Block in an AM which changes the PROCMOD parameter value in the HPM to Strt (Start).
- a user-written program in a CM which changes the PROCMOD parameter value in the HPM to Strt (Start).



TIP

To manipulate the PROCMOD parameter successfully:

- its value must be Off and the value of SEQEXEC must be Loaded.
- the keylock position must equal or exceed the minimum access level specified in parameter CTLLOCK.

The value of PROCMOD can be changed to START from any keylock position regardless of the access level specified in CTLLOCK.

Execution of abnormal handlers

Enabled abnormal-condition handlers can be initiated by:

- a request from an operator.
- Predefined process condition detected by the sequence program at every preemption point, such as before executing a step.
- activation by a statement in the sequence (for example, INITIATE HOLD).
- an INITIATE statement from another sequence.
- a CL block in an AM.
- a user-written program in a CM.

15.7 Process Module Operating Status

The process module operational state represents the operational condition of a process module. The module state is represented through the PROCMOD parameter and the allowable states are listed and described in the following table. A state diagram is provided in the following figure.

Table 15-2 Process Module Operating States

State	Description
Off	Process module slot is not being processed. A sequence program can be assigned to a process module but it cannot be executed. The sequence execution mode is not applicable to this module state.
Norm (Normal)	The normal sequence program is running in the process module slot.
Hold	Process module is executing the hold abnormal-condition handler. Hold sequence may be initiated by one of the items listed in Execution of abnormal handlers.
Shdn (Shutdown)	Process module is executing the Shutdown abnormal-condition handler. Shutdown sequence can be initiated by one of the items listed in Execution of abnormal handlers. Shutdown has priority over Hold.


State	Description
Emsd (Emergency Shutdown)	Process module is executing the Emergency Shutdown abnormal-condition handler. Emergency Shutdown sequence can be initiated by one of the items listed in Execution of abnormal handlers.



ATTENTION

Parameter PROCMOD also contains the Strt (Start) and Stop states, which are transitional states that can be controlled by one of the items listed in Execution of abnormal handlers.

Figure 15-4 Process Module Operating States Relational Diagram

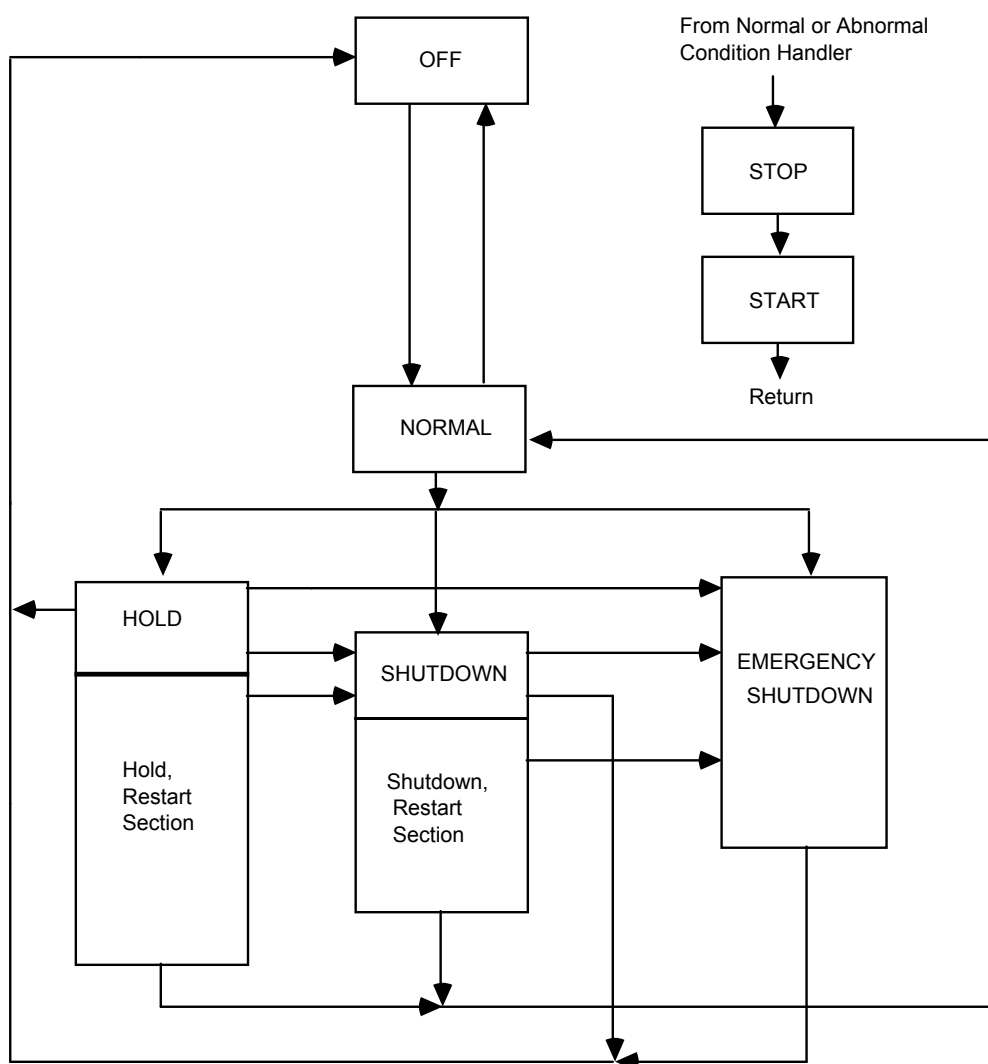

Sequence execution mode

The sequence execution mode defines the manner in which the sequence program is executed. The sequence execution mode is established through the SEQMODE parameter, and the allowable modes are listed and described in the following table.

Table 15-3 Sequence Execution Mode

Execution Mode	Description
Auto (Automatic)	Normal mode of operation. Sequence runs from beginning to end without operator intervention.
SemiAuto (Semi-Automatic)	Sequence stops at all PAUSE statements in the sequence. Sequence can be restarted by the operator.
SnglStep (Single-Step)	Normally used for debugging. Sequence is executed one step at a time. Sequence can be restarted by the operator.

15.8 Sequence Execution State

The sequence execution state represents the current state of the sequence program. These states are defined through parameter SEQEXEC and are listed and described in the following table. The following figure shows the possible state transitions of the sequence.

Figure 15-5 Sequence Execution State Transitions

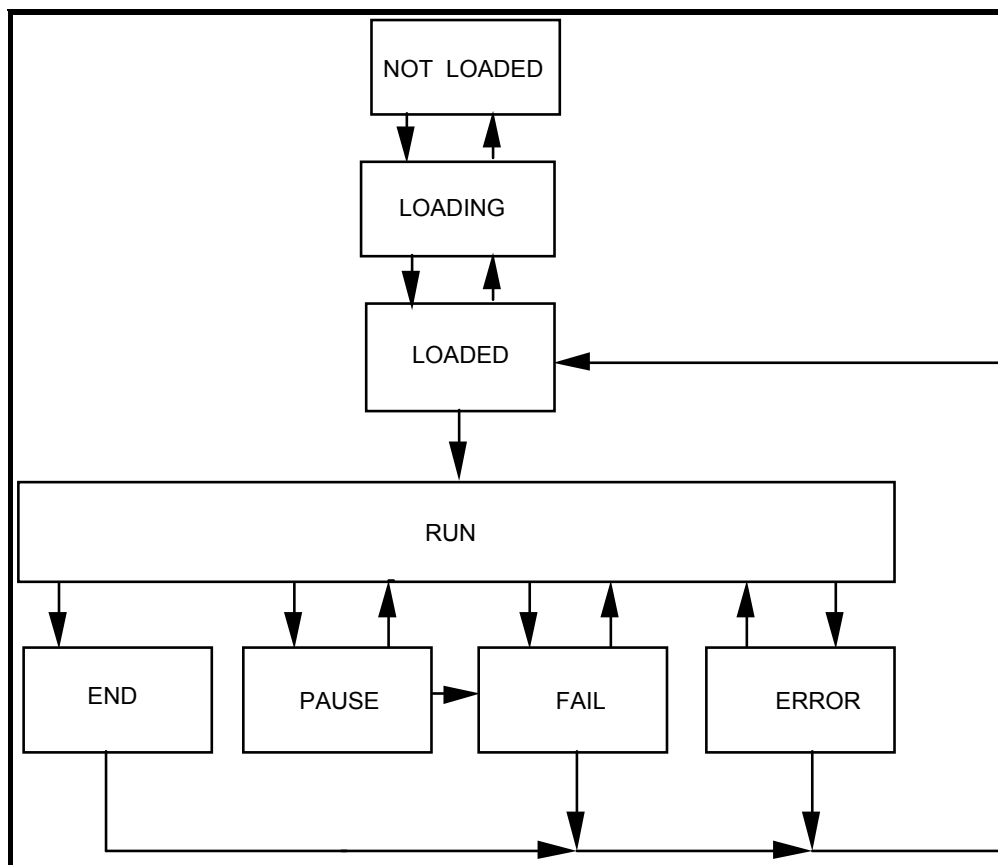


Table 15-4 Sequence Execution States

Execution State	Description	
NL (Not Loaded)	Initial state in which sequence has not been assigned to a process module. This state is automatically entered from the DLL state when loading has been aborted.	
DLL (Down-Line Loading)	Transient state during which the loading of the sequence into the process module slot is in progress.	
Loaded	Sequence program has been loaded into the process module slot. This state is automatically entered from the DLL state when loading has been completed.	
Run	Sequence program is running.	
Pause	Execution of the sequence is suspended because of the execution of a PAUSE statement, or the completion of a step when in the single-step mode. Sequence execution can be resumed by the operator.	
Fail	Sequence execution is suspended because of the detection of one of the failure conditions listed below. A system message that describes the failure condition is generated. Sequence execution can be resumed by the operator.	
	Failure Code	Definition
	165	Sequence has been stopped by the operator
	166	Attempt to start an abnormal-condition handler that has not been enabled and no lower-priority abnormal-condition- handler is enabled. Possibly using INITIATE Suggestions: • use INITIATE with a When Error clause.
	167	Not used
	168	Not used
	169	An attempt was made to start a sequence that was not loaded into the process module slot.

15 Process Module Data Point

15.8 Sequence Execution State

Execution State	Description	
	170	Communication error detected in READ/WRITE statement. Possible cause: • a READ/WRITE statement without a When Error Path fails a bad read. (a post store reports its own failure code.) Suggestions: • determine validity of the attempted fetch or store. • check actual presence of point.
	171	Communication error detected during an I/O Link access. This error is generated for all post-store problems. Possible cause: • IO Link poststore failed. • DI scan PV status is bad. Suggestions: • check I/O Link for reasons for bad post-store, or bad PV in DI scan.
	172	Range error has been detected. Possible cause: • box timer set point value greater than 32000. • illegal stores to Digital Composite parameters.

Execution State	Description	
	173	Store failure because of "rights" error. For example, an attempt was made to write to a parameter when the point was not in the proper mode. Possible cause: • other points reject stores. • attempt to write to box timer set-point or time base when state is in RUN. • attempt to start timer when PV is greater than SP. • attempt to INITIATE a lower priority handler while in a higher priority handler. Suggestion: • check state of point not accepting the store.
	174	An interlock error condition has been detected.
	175—255	Reserved for future use.
Error	Sequence execution is suspended because of the detection of one of the error conditions listed below. A system message that describes the error condition is generated. Sequence execution can be resumed by the operator	
	Failure Code	Definition
	101	Not used
	102	Array index error. Possible cause: • violated array index bound check. Suggestions: • check array bounds defined in the LOCAL. • statement or in the subroutine header.

15 Process Module Data Point**15.8 Sequence Execution State**

Execution State	Description	
	103	Illegal generated code. Possible cause: • could not find variable operator code in the reference list. • invalid statement header. • unsupported built-in function call. Suggestions: • contact Honeywell Technical Assistance Center.
	104	Illegal generated code referencing a parameter or variable. Possible cause: • bad box timer parameter code. • local numeric/flag index out of range. • invalid time base. Suggestions: • contact Honeywell Technical Assistance Center.
	105	Interpreter stack overflow. Possible cause: • Not enough stack depth. Suggestions: • contact Honeywell Technical Assistance Center.
	106	GO TO destination error. Possible cause: • invalid destination. Suggestions: • contact Honeywell Technical Assistance Center.

Execution State	Description	
	107	Key-level error. Possible cause: • tried store to read only parameter. • tried store with access level invalid. • system error. Suggestions: • contact Honeywell Technical Assistance Center.
	108	Configuration mismatch error. Possible cause: • may be system error. Suggestions: • contact Honeywell Technical Assistance Center.
	109	I/O Link prefetch overflow. Possible cause: • exceeded 12 I/O Link prefetches per step. Suggestions: • insert a new STEP in the code if several IOL references are made within this step.
	110	Subroutine nesting level error. Possible cause: • nesting of subroutine calls is more than two levels deep. Suggestions: • reduce nesting level of subroutine call to no more than two (a subroutine called from a normal or abnormal program can call only one more level of subroutine).

15 Process Module Data Point**15.8 Sequence Execution State**

Execution State	Description	
	111	Illegal value error. Possible cause: - illegal value detected when doing READ/WRITE or SET. Suggestions: - contact Honeywell Technical Assistance Center.
	112	FAIL statement was executed by the sequence. Suggestions: - restart. - make necessary changes, then resume execution at the next sequence statement.
	113	I/O Link prefetch buffers full. Possible cause: - IOL prefetch buffers full (tried to fetch IOL parameters 8 times in a row, with preemption each time was unsuccessful.) Suggestions - redistribute I/O Link fetches to another programming cycle. - insert WAITS to slow collection down. - break into additional STEPS.

Execution State	Description	
	114	I/O Link poststore buffers full. Possible cause: • IOL poststore buffers full (tried to fetch UCN parameters 8 times in a row, with preemption each time was unsuccessful.) Suggestions • redistribute I/O Link fetches to another programming cycle. • insert WAITS to slow collection down. • break into additional STEPS.
	115	UCN Link prefetch buffers full. Possible cause: • I/O prefetch buffers full (tried to fetch UCN parameters 16 times in a row, with preemption each time was unsuccessful.) Suggestions: • redistribute I/O Link fetches to another programming cycle. • insert WAITS to slow collection down. • break into additional STEPS.
	116	UCN Link poststore buffers full. Possible cause: • I/O poststore buffers full (tried to fetch UCN parameters 16 times in a row, with preemption each time was unsuccessful.) Suggestions: • redistribute I/O Link fetches to another programming cycle. • insert WAITS to slow collection down. • break into additional STEPS.

15 Process Module Data Point

15.9 Sequence Overrides

Execution State	Description	
	117—164	Reserved
End	Sequence execution has been completed as indicated by the execution of an END statement. This state is entered at the completion of a normal sequence or an abnormal condition handler (Hold, Shutdown, or Emergency Shutdown) sequence.	

15.9 Sequence Overrides

Operator displays

The process module operator displays allow you to perform phase, step, and statement overrides when the sequence execution state is Fail, Error, or Pause.

Illegal access

Attempts to access the override function from anywhere other than a Universal or GUS Station results in an error code of 107 (key-level error).

Restrictions

The overrides are not restricted by the value in CNTLOCK if the sequence execution state is Fail or Error.

Types of overrides

- **Phase Override**, which:
 - allows the user to skip execution of one phase after another, in forward or reverse order.
 - works only in the sequence for which it is invoked; it is implemented through the OVERPHAS parameter.
- **Step Override**, which:
 - allows the user to skip execution of one step after another, in forward or reverse order.
 - works only in the phase for which it is invoked; it is implemented through the OVERSTEP parameter.

Statement Override, which:

- allows user at a Universal Station to skip execution of one statement after another, in forward or reverse order.
- works only in the step for which it is invoked; it is implemented through the OVERSTAT parameter.

15.10 Sequence Alarms

Generation

Sequence alarms are generated when:

- process-module operational state is changed to Hold (HOLD), Shutdown (SHDN), or Emergency Shutdown (EMSD) as indicated by a change in the PROCMOD parameter. The PROCMOD parameter—
 - can be changed by entry into an abnormal condition handler or externally by operator, AM, and so on.
 - has a key level of Operator and can be written to from the LCN (by an operator, a CL/AM program, and so on), or by a CL/HPM program.
- sequence execution state is changed to Fail, Error, or End as indicated by a change in the SEQEXEC parameter. The SEQEXEC parameter—
 - has a key level of View only.
 - cannot be changed from the LCN or by a CL/HPM program.
- phase timer has elapsed as determined by the PHASETIM parameter

Priorities

The priority of the sequence alarm can be configured for each process module through the SEQPR parameter. The entry for this parameter may be:

- | | |
|-------------|------------|
| • Emergency | • High |
| • Low | • JnlPrint |
| • Printer | • Journal |
| • NoAction | |

15.11 Sequence Messages

Status messages

Sequence-status messages are issued when:

- Process Module operational state is changed.
- Sequence-execution mode is changed.
- Sequence-execution state is changed.
- Sequence begins a new phase.
- A sequence message is issued.

Operator messages

Two types of programmed operator messages can be generated by a sequence program:

- **Message with feedback**—A SEND statement with the confirmation option (WAIT) causes the sequence to be suspended until the message has been confirmed by the user at the Universal Station.
- **Message without feedback**—This message is a 1-way communication from the sequence to a destination, such as the Universal or GUS station.

These messages can be displayed at the Universal or GUS Station and/or logged on the printer, depending on how the user codes the message statement.



TIP

It is good practice to confirm any outstanding messages after a sequence failure before rerunning the sequence and before loading a new sequence.

15.12 Restart Option

Function

The restart option determines how the sequence program is started following a warm restart. A Warm restart is considered as being a transition from Idle to Run, or a short power interruption that does not change the HPM database. The restart options are include:

- Restart
- Off

Restart option

When the sequence-execution state is Run, the sequence program is started from the very beginning; otherwise, the process module operational state is changed to Off and the sequence-execution state is changed to Loaded (or Not Loaded if a sequence has not been loaded). If an abnormal handler is executing when the warm start occurs, execution begins from the beginning of the normal sequence and not from the abnormal handler. A sequence-state change event is issued to report the transition from Hold, Shutdown, or Emergency Shutdown to Normal.

Off

The process module operational state is changed to Off and the sequence-execution state is changed to Loaded (or Not Loaded if a sequence has not been loaded).

15.13 Parameters



REFERENCE - INTERNAL

For a complete list of the parameters associated with the Process Module Data Point, refer to the *PM Family Parameter Reference Dictionary*.

16. Regulatory PV Point

16.1 Regulatory PV Point Background

Features

While standard I/O functions such as engineering unit conversion and alarming are handled directly by the I/O Processors, Regulatory PV (RegPV) points provide an easy-to-use configurable approach for implementing PV calculations and compensation functions. PV processing provides a menu of selectable algorithms such as mass flow, totalization, and variable dead-time compensation.

Algorithms

The Regulatory PV Point (RegPV) supports the following algorithms:


- Data Acquisition (DataAcq) PV Algorithm, (see Section 17)
- Flow Compensation (FlowComp) PV Algorithm, (see Section 18)
- Middle of Three (Mid0f3) PV Algorithm, (see Section 1)
- High Low Average (HiLoAvg) PV Algorithm, (see Section 1)
- Summer PV Algorithm, (see Section 21)
- Variable Dead Time with Lead Lag (VDTLDLag) PV Algorithm, (see Section 0)
- Totalizer (Totalizr) PV Algorithm, (see Section 0)
- General Linearization (GenLin) PV Algorithm, (see Section 1)
- Calculator (Calcultr) PV Algorithm, (see Section 0)

16 Regulatory PV Point

16.1 Regulatory PV Point Background

Functional diagram

Figure 16-1 Regulatory PV Point Functional Diagram

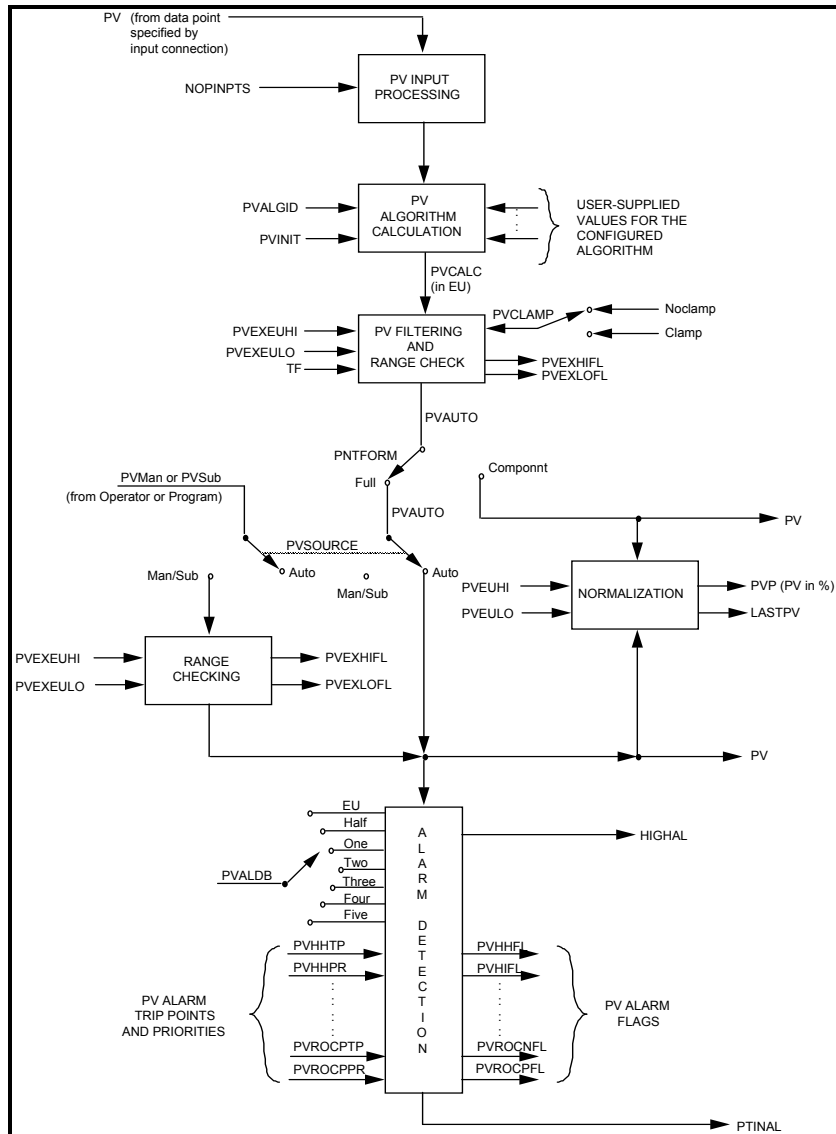

16.2 PV Input Connections

Purpose

PV input connections are used to specify the source(s) for the inputs to PV algorithms. A maximum of six PV input connections can be configured for an algorithm, as required by the individual PV algorithm. You may implement the input connections by using the "Tagname.Parameter" format.

Using the Tagname.Parameter format

When using the "Tagname.Parameter" format, the user must enter the tag name of the data point and the name of the parameter within that data point. The source parameter must contain a real number, integer, or Boolean quantity. The values provided by the input connection parameters are assigned to destination parameters within the RegPV point by the PIDSTN parameter. The destination parameters for these sources default to one for each input to the configured PV algorithm.

Relationship to algorithms

One input connection must be configured for each algorithm input, otherwise the point cannot be made active.

16.3 PV Algorithm Calculation

The configured PV algorithm accepts the values received through the PV input connections and produces the calculated PV value (PVCALC) plus its value status (PVAUTOST).

16.4 PV Range Check and Filtering

PV range

The PV range is configured in PVEULO and PVEUHI in a range from 0% to 100.0% of the engineering-units range. This is usually the normal operating range for the PV but it can extend into a configurable extended range, as defined by PVEXEULO and PVEXEUHI. The extended range is forced to be equal to or greater than the range defined by PVEULO and PVEUHI. PVCALC is generally constrained within PVEXEULO and PVEXEUHI, but the checks and constraints depend on the PV source. If PVSOURCE is:

- **Auto**, and if—
 - PVAUTOST contains Bad, PVSTS is Bad and no PV-range checks are made.
 - PVAUTO is outside the extended range and PV clamping (PVCLAMP) is not configured, the PV becomes a bad value and PVSTS is Bad; however, if PV clamping is configured, the PV becomes equal to the value of the violated range and PVSTS becomes Uncertain. In either case, the appropriate PV-range violation flag is set (PVEXLOFL or PVEXHIFL).
- **Man**—Any value from the Universal Station that is outside the extended range is not accepted. PVSTS is already uncertain because the source is Man.
- contains **Sub**—If a program stores a PV value outside the extended range, the appropriate PVEXLOFL or PVEXHIFL flag is set. PVSTS is already uncertain because the source is Sub.

Output clamping

If clamping of the output is specified by the PVCLAMP parameter, PV filtering is performed before the range check. If the value entered for PV filtering through the TF parameter is other than the default value of 0.0, a single-lag filter is applied to the PVCALC value to remove noise. If a filter value is not specified, PVAUTO contains the same value as PVCALC.

Last good PV value

Data-point parameter LASTPV always holds the last good value of the PV.

16.5 PV Value Status

The value in the PV value-status parameter, PVSTS, is determined as defined in the following table.

Table 16-1 PV Value Status Definitions

PV Value Status	Definition
Normal	PVSOURCE = Auto, PVAUTOST = Normal, and the PV value is within the range defined by PVEULO and PVEUHI
Uncertn	One of the following is indicated: • PVSOURCE = Man or Sub and the PV value does not equal NaN (that is, is a valid, real number). • PVSOURCE = Auto, and PVAUTOST = Uncertn. Note that PVAUTOST contains Uncertn if at least one of the required algorithm inputs is Uncertn and none of the required algorithm inputs is Bad. • PVSOURCE = Auto and the value in PVAUTO is outside the engineering-units range and is clamped.
Bad	The PV value is NaN, resulting from one of the following conditions: • PVSOURCE = Auto and PVAUTO = NaN. • PVSOURCE = Auto, the value in PVAUTO is out-of-range, and has not been clamped. • PVSOURCE = Sub or Man and the PV is stored as NaN.

16.6 PV Source Selection

Source

As illustrated in the Regulatory PV Point functional diagram figure, the source of the PV may be:

- PV processing.
- an operator input.
- a user-written program.

It is specified by the PVSOURCE parameter, whose value can be changed by an operator, a supervisor, an engineer, or a user-written program. The PVSOURCE parameter is configurable only if Full has been entered for the PNTFORM parameter.

Valid PV source values

PVSOURCE can have one of the values:

- **Auto**—PV is received from PV processing through the PV filtering function. The value is in PVAUTO and its status is contained in PVAUTOST. During normal operation, the PV source is Auto, and the PV and its value status (PVSTS) become equal to PVAUTO and PVAUTOST, respectively, before PV range checks are made. When the PV source is changed from Auto to Man or Sub, the PV remains at the last value until it is changed by the operator (Man) or a program (Sub), so it doesn't "bump." In Man or Sub, the status in PVSTS is Uncertn. When the PV source is changed from Man or Sub to Auto, the PV immediately goes to the PVAUTO value. This might cause a bump in the value unless it is changed gradually to the value in PVAUTO before changing the source.
- **Man**—The PV is entered by an operator, supervisor, or engineer at a Universal Station.
- **Sub**—The PV is entered by a user-written program. A program can store a bad value in PV, and if it does, PVSTS goes Bad.



TIP

You can prevent PV source changes by configuring OnlyAuto in PVSRCOPT. This fixes the source as Auto and the parameter PVSOURCE is removed from the point. Configuring All in PVSRCOPT allows normal PV source selection.

16.7 PV Alarm Detection

Implementation

The PV alarming function can be implemented only when Full has been entered for the PNTFORM parameter.

Alarms detected

The following types of alarms are detected during PV alarm processing:

- PV High/Low.
- PV High-High/Low-Low.
- PV Rate-of-Change Positive/Negative.
- PV Significant Change.
- BadPV.
- Deviation High (Note: Deviation High Alarm is applicable only to MidOf3 and HiLoAvg algorithm types).

Effect on alarm processing

PV source selection has no effect on alarm processing.

16.8 Deviation High alarm

Applicability

With TPN R683 the deviation high alarm has been introduced for HPM Regulatory PV points using Midof3 and HiLoAvg algorithms. Selective cutout, re-alarm and alarm delay options are applicable for the deviation high alarm.

Configuration

The deviation high alarm for Midof3 and HiLoAvg is disabled by default. The trip point for deviation high alarm can be entered in the DEVHITP parameter. If the absolute difference between any two inputs exceeds the set deviation trip point value a deviation high alarm is generated. Inputs which are active and whose status is 'Normal' or 'Uncertain' are considered for deviation alarming. Deviation high alarm can be enabled and priority can be set by using the DEVHIPR parameter. Thereby, the alarm can be viewed on the Alarm Summary or Event History. The DEVHIFL parameter is used as a flag to detect the generated alarm.

The deviation alarm is generated even if any of the inputs are force-selected. The alarm returns to normal when the deviation is less than the configured trip point minus a deadband equal to 10% of the trip point value.

17. Data Acquisition PV Algorithm

17.1 Functional Overview


Family

The Data Acquisition (DATAACQ) algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm normally accepts the input and places it, unchanged, in PVCALC (see the following figure). All of the other PV algorithms alter the input(s) in some way.

Figure 17-1 Data Acquisition PV Algorithm Functional Diagram

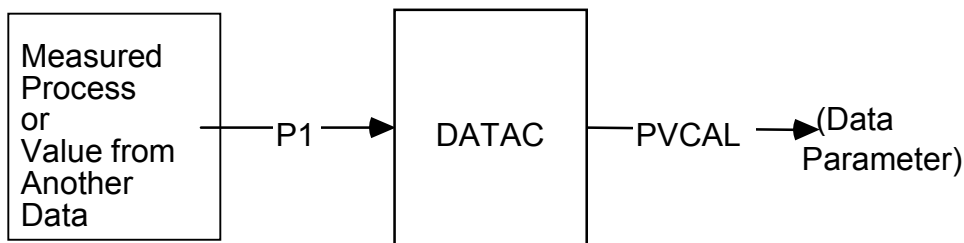

Inputs and outputs

The input to this algorithm and its output are in engineering units.

Use

The most common use of this algorithm is to provide a PV that has been through PV Input Processing, PV Algorithm Processing, PV Filtering, and PV Source Selection (see the previous figure). The value in PVCALC is filtered, and becomes PV, if the PV source is Auto.

The input can be a measured process-variable, or the calculated PV or calculated output of another data point.

17.2 Equations

Background

This algorithm has one equation form.

Equation legend

In the Data Acquisition equation:

- P1 contains the first input value.
- PVCALC contains the value that becomes the PV when PVSOURCE = Auto.

Equations

The operation is simply the replacement of the data point's calculated PV (PVCALC) with the value of the input:

$$\text{PVCALC} = \text{P1}$$

18. Flow Compensation PV Algorithm

18.1 Functional Overview


Family

The Flow Compensation (FLOWCOMP) algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm compensates a flow measurement for variations in temperature, absolute pressure, specific gravity, or molecular weight. The measured flow can be that of a gas, a vapor, or a liquid. An extended equation is provided for industrial steam-flow compensation, which includes factors that compensate for steam quality and compressibility.

Figure 18-1 Flow Compensation PV Algorithms

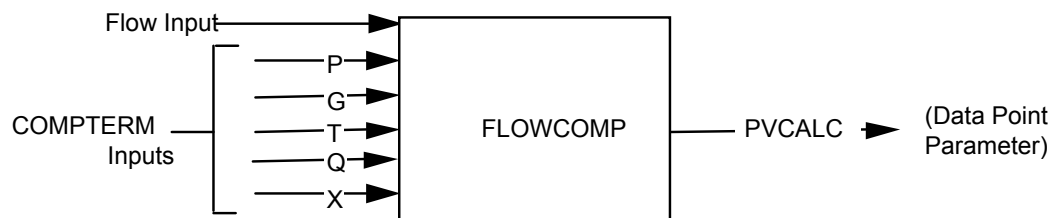

Simplified Equation

$$PVCALC = F * COMPTERM$$

Where F is uncompensated flow and
COMPTERM has five forms

- A: Liquids
- B: Gasses, Vapors
- C: Gasses, Vapors (Specific Gravity)
- D: Volumetric Flow of Gasses and Vapors
- E: Steam

Use

The uncompensated-flow input is typically a square-rooted, differential pressure measurement. Other direct-flow measurements can also be used. The square root should be extracted before the input to the data point, and the input value must be in engineering units. For process-connected inputs, the square root can be extracted in the IOP; conversion to EUs also takes place in the IOP.

The compensation is calculated from temperature, pressure, specific gravity, molecular weight, steam quality, or steam compressibility. Choice of inputs depends on the type of the equation selected. All of these inputs are obtained through PV input-connections.

18.2 Options and Special Features

Forms of flow compensation

The parameter PVEQN specifies one of five different equations for this algorithm. Each of these equations represents a different form of flow compensation by calculating the compensation term (COMPTERM) differently (see "Equations" in Section 18 for the actual equations).

Table 18-1 Flow Compensation Forms

Equation	Form of Flow Compensation
A	Primarily used for mass-flow or volumetric-flow compensation for liquids. Actual (measured or calculated) specific gravity is used as a compensation input.
B	Primarily used for mass-flow compensation of gas or vapor flows. Actual absolute temperature and pressure are used as compensation inputs.
C	Used for mass-flow compensation of gas or vapor flows. Actual specific gravity (measured or calculated), absolute temperature, and pressure are used as compensation inputs.
D	Principally used for volumetric-flow compensation for gas or vapor flows. Actual temperature, pressure, and molecular weight are used as compensation inputs. The molecular weight can be calculated by the Calculator algorithm, or a user written program in the AM or Computing Module (CM50/CM60).
E	Used for mass-flow compensation of steam flows in industrial applications. Actual temperature, pressure, specific gravity, steam compressibility, and steam quality are used as compensation inputs. This equation can also be used for "custody transfer" of gases or liquids.

Restart or point activation

On a cold or warm restart, or when this data point is activated, PVCALC is recalculated the next time the FLOWCOMP data point is processed.

Error handling

If the status of any of the input values is bad, PVCALC contains NaN and the PVAUTOST becomes Bad. If there are no bad inputs but the status of one or more of the inputs is "uncertain," the PVAUTOST becomes Uncertain.

Zero pressure reference

Parameter P0 compensates for ambient atmospheric pressure. Most pressure sensors measure pressure relative to the atmospheric pressure. If the pressure measurement is actually absolute, P0 must be set to a value of zero. The usual zero reference is a value for sea level. If the pressure sensor is at a significantly different elevation than sea level, P0 should be set to a more appropriate value. For example, Denver, Colorado has an average atmospheric pressure of about 12.2 psia. Standard sea-level atmospheric pressure is 14.696 psia. P0 contains the absolute value of ambient atmospheric pressure.

Units of measure

The absolute value of either U.S. Customary Units or SI (metric) units can be used. All inputs and parameters must be in engineering units of one system or the other. The typical value for P0 (see "Equations" in Section 18 for definition of this parameter) in U.S. Customary Units is 14.696 psia and in SI units it is 101.325 kPa. The typical T0 value is 459.69°F in U.S. Customary Units and 273.15°C in SI units.

Compensation term value

Typically, the COMPTERM value is near 1. It should never be zero or negative. The COMPLO and COMPHI limits are used to prevent unrealistic values of COMPTERM caused by incorrect inputs. Should the calculated value of COMPTERM go beyond one of these limits, the value is held (clamped) at that limit. You should estimate the range of COMPTERM by considering the most extreme input-conditions you expect. Also, you should set the PV range for this data point, by considering the largest compensated-flow value expected.

Custody transfer

Equation E can be used for "custody transfer" of gases or liquids. To do so, set parameter RX equal to one and specify the input connection to X to come from RX in this data point.

18.3 Equations

Background

You configure PVEQN for data point that uses the Flow Compensation algorithm to specify one of five equations. The equations select the compensation term. The basic equation is:

$$PVCALC = C * F * COMPTERM$$

Equation legend

For the basic equation:

- PVCALC =The output of this algorithm. It is selected as the PV for this data point when the PVSOURCE is Auto.
- C =Scale factor. The default value is 1.0.
- C1, C2 =Constants for correcting for assumed design conditions. Default value for each is 1.0.
- F =The uncompensated flow input. A square-rooted, differential pressure input.
- COMPTERM =The compensation term. This term differs in each of the five flow-compensation equations, A through E. Its value lies between the COMPLO and COMPHI limits, which are specified by the process engineer. If either limit parameter contains NaN, the corresponding limit check is not made.

For the COMPTerm equations (A through E):

- the following (in engineering units) are received through input connections—
 - G = Measured or calculated specific gravity or molecular weight.
 - P = Measured actual gage pressure.
 - T = Measured actual temperature.
 - X = Measured actual steam compressibility.
 - Q = Measured actual steam-quality factor.
- the following parameters are specified by the process engineer—
 - RG = Design specific gravity or reference molecular weight, in the same engineering units as G (Default value = 1.0).
 - RP = Design pressure, converted to an absolute value (Default value = 1.0).
 - RQ = Design steam quality factor, in the same units as Q (Default value = 1.0)
 - RT = Design temperature, converted to an absolute value (Default value = 1.0).
 - P0 = Factor to convert gauge pressure to an absolute value. Typically 14.696 psia or 101.325 kPa. Enter the absolute value of the number. Default value = 0. If the measured pressure is already an absolute value, enter 0.
 - T0 = Factor to convert Celsius and Fahrenheit temperatures to an absolute value. Typically 459.69°F or 273.15°C (use the absolute value of the number when entering a value in T0). Default value = 0. If the measured temperature is already an absolute value, enter 0.
 - RX = Reference steam compressibility, in the same engineering units as X. Default value = 1.0.

Equations



ATTENTION

These equations are performed using absolute values for pressure and temperature. You must convert temperatures and pressures to absolute values in order to use this algorithm.

Five forms of COMPTERM may be calculated using Equations A through E. Each are defined in the following table.

The COMPTERM computation depends on the value of the PVCHAR parameter. If PVCHAR = SqrRoot, then COMPTERM is as shown. If PVCHAR = Linear, then COMPTERM is determined without the square root function.

Table 18-2 Flow Compensation PV Algorithm Equations

Equation	Definition
A (Liquids)	$\text{COMPTERM} = \sqrt{\frac{G}{RG}}$
B (Gases & Vapors)	$\text{COMPTERM} = \sqrt{\frac{P+P_0}{RP} * \frac{RT}{T+T_0}}$
C (Gases & Vapors w/specific Gravity)	$\text{COMPTERM} = \sqrt{\frac{P+P_0}{RP} * \frac{RT}{T+T_0} * \frac{G}{RG}}$
D (Volume Flow of Gases & Vapors)	$\text{COMPTERM} = \sqrt{\frac{P+P_0}{RP} * \frac{RT}{T+T_0} * \frac{RG}{G}}$
E Steam	$\text{COMPTERM} = \sqrt{\frac{P+P_0}{RP} * \frac{RT}{T+T_0} * \frac{X}{RX} * \frac{RQ}{Q}}$

Compensating for assumed design conditions

Equation A can be used for either mass or volumetric compensation of liquid flows. The use depends on whether the measurement of uncompensated flow is a mass measurement or a volumetric measurement, and on the desired uncompensated-flow units. Here are three ways to use Equation A:

- Converting an uncompensated mass-flow to compensated mass-flow—
 - C1 and C2 are configured as 1.0.
- Converting an uncompensated, standard volumetric-flow to compensated mass-flow—
 - C1 is configured to equal the design density, referenced to standard conditions.
 - C2 is configured as 1.0.
- Converting uncompensated, standard volumetric-flow to compensated, standard volumetric-flow.



ATTENTION

When using Equation A to Convert uncompensated, standard volumetric-flow to compensated, standard volumetric-flow, if the variations in standard density caused by fluid-composition changes are significant, C2 is manipulated as:

- If the measured value of specific gravity at flow conditions is available, the actual specific gravity, referred to standard conditions, is calculated from that measurement by another data point and input to C2 through a general input connection.
- If actual specific gravity is measured by a lab, a numeric data-point could be used to hold the value and input to C1 through a general input connection.

For the latter case, another data point uses the lab value to calculate specific gravity at flow conditions and the result is input G.

18 Flow Compensation PV Algorithm

18.3 Equations

19. Middle of Three PV Algorithm

19.1 Functional Overview

Family

The Middle of Three PV algorithm is a member of the Regulatory PV algorithms.


Description

This algorithm provides a calculated PV (PVCALC) that is normally the middle value of three values from the PV input connections. PVAUTOST is Bad, only if all three inputs to this algorithm are bad. If at least one input is valid (normal or uncertain), the algorithm provides a valid value in PVCALC.

When configured with only two inputs, this algorithm serves as a high/low selector or input averaging block. These functions are selected by choosing the corresponding control equation (A, B or C as shown below).

If only one valid input value is available, it is selected. If only two valid input values are available, the selected value can be the highest or the lowest, or the average of the two, as specified when you select the equation to be used by this algorithm.

Figure 19-1 Middle of Three PV Algorithm Functional Diagram

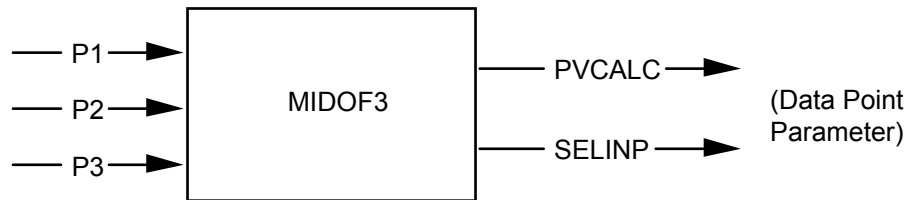

Normal Operation: $PVCALC = \text{Middle value for three input values.}$

With only two valid inputs:

Equation A: $PVCALC = \text{Highest of the two inputs}$

Equation B: $PVCALC = \text{Lowest of the two inputs}$

Equation C: $PVCALC = \text{Average of the two inputs}$

With only one valid input: $PVCALC = \text{Value of the input}$

$SELINP =$ The selected input, Select P1 through Select P3, except with only two valid inputs and Equation C, $SELINP$ contains None.

With TPN R683 a deviation high alarm has been introduced for MidOf3 algorithms. When the absolute difference between any two inputs exceeds the set deviation trip point value a deviation high alarm is generated.

Use

This algorithm is used to provide a reasonably secure $PVCALC$ when inputs are available from three redundant inputs, one or more of which may occasionally fail or provide erratic values. The Low Selector, High Selector, Average PV algorithm provides a somewhat similar function with up-to-six input connections.

19.2 Options and Special Features

Normal Operation with three valid inputs

Normal operation occurs if there are no inputs with a bad-value status. Inputs are treated as valid if their value status is either normal or uncertain.

If no two inputs have equal values:

- PV_{CALC} = the middle value of the three inputs, P_1 , P_2 and P_3 .
- SEL_{INP} = the selected input, $SelectP_1$ through $SelectP_3$.

If there are two inputs with equal values or if all three input values are equal:

- PV_{CALC} = the value for which there is at least one other equal.
- SEL_{INP} = the lowest-number input with an equal value, $SelectP_1$ through $SelectP_3$.

Error handling

PV_{AUTOST} becomes Uncertain only when the selected input is uncertain, or for equation C, when one of the inputs used for averaging is uncertain.

The PV_{AUTO} status is bad and PV_{CALC} becomes NaN when the status of all three inputs is bad.

19.3 Equations

Background

If three valid inputs are present, the equations have no meaning and the algorithm functions normally, as described in Normal Operation with three valid inputs. The equations specify what the algorithm is to do if one or more inputs have a bad-value status.

19 Middle of Three PV Algorithm

19.3 Equations

Equation legend

The following legend applies to all Middle of Three PV algorithms:

- PVCALC =** The output of this algorithm. It is selected as the PV for the data point when the PVSOURCE is Auto.
- P1, P2, and P3** The input values. The default value is NaN.
- SELINP =** The selected input, SelectP1 through SelectP3. If no input is selected or if PVCALC contains an average value, SELINP contains None.

Equations

The equations function as follows:

Input Status	Equation	Function
One (1) Bad	A	- PVCALC = Highest of the two input values - SELINP = The selected input, SelectP1 through SelectP3
	B	- PVCALC = Lowest of the two input values - SELINP = The selected input, SelectP1 through SelectP3
	C	- PVCALC = The average of the two input values - SELINP = None
Two (2) Bad	A, B, C	- PVCALC = the value of the valid input - SELINP = The selected input, SelectP1 through SelectP3
Three (3) Bad	A, B, C	- PVCALC = NaN - SELINP = None

20. High Low Average PV Algorithm

20.1 Functional Overview

Family

The High Selector, Low Selector, Average (HILOAVG) PV algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm does one of the following:




- Selects the input with the highest value.
- Selects the input with the lowest value.
- Calculates the average value of all valid inputs.

As illustrated in the following figure, the HILOAVG PV algorithm can accept up-to-six inputs. Valid inputs are those with a status that is "Normal" or "Uncertain." When the input selection functions are used, the number of the input that is selected is contained in a accessible parameter (SELINP).

20 High Low Average PV Algorithm

20.1 Functional Overview

Figure 20-1 High, Low, Average PV Algorithm Functional Diagram

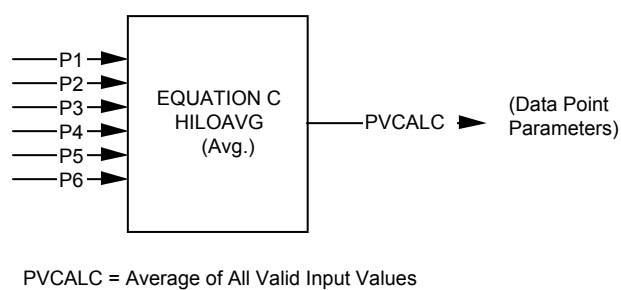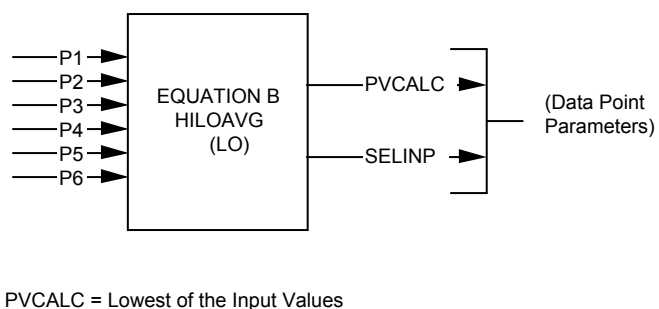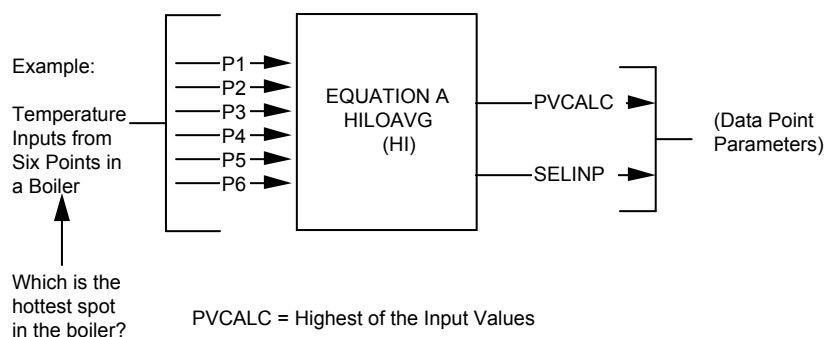

$$PVCALC = \frac{P1 + \dots + PN}{N}$$

Where N = the number of configured inputs

With TPN R683 a deviation high alarm has been introduced for HiLoAvg algorithms. When the absolute difference between any two inputs exceeds the set deviation trip point value a deviation high alarm is generated.

Use

One example of the use of this algorithm is shown at the top of the preceding figure. In this example, the high value-selector version of the algorithm is used to detect hot spots in a boiler or a reactor.

Either the high value-selector version or the low value-selector version can be used to detect production bottlenecks. For example, this algorithm might be used to notify the process operator that production is currently constrained by the speed of a gas compressor. One of the selector options might also be used to select the "safest" PV for control.

One use of the averaging option is in balancing furnace passes. In this application, the algorithm calculates the average of the outlet temperatures of the passes.

20.2 Options and Special Features

Forced selection

The data point can be configured to allow the Universal Station operator, a user-written program, or a general-input connection to force selection of one of the inputs. If the FRCPERM parameter is configured as:

- On, the forced-selection function is enabled and an operator or a user-written program can force the selection.
- Off, the forced-selection function is disabled.

The FSELIN parameter specifies the input to be selected, when selection is forced (SelectP1 through SelectP6).

Error handling

Except when forced selection is in effect (**Forced Selection**), inputs with a bad status are ignored and they do not make the PVAUTOST is Bad. For example, if the algorithm is configured as a 4-input high-selector and one of the inputs goes bad, the algorithm functions as a 3-input high-selector.

If the number of valid inputs (PVSTS is Normal or Uncertain) is less than the minimum number specified in parameter NMIN, PVALC becomes NaN and the PVAUTOST is bad.

PVAUTOST is changed to Uncertain under any of the following conditions:

- An input selection is forced and the status of that input is not bad (is normal or uncertain).
- Forced selection is not in effect, at least as many inputs as specified by NMIN are normal or uncertain, and the status of the selected one (Equation A or B) is uncertain.
- Equation C (averaging) is chosen, at least as many inputs as specified by NMIN are not bad (normal or uncertain), and the status of any of them is uncertain.

PVCALC becomes NaN and PVAUTOST becomes Bad under either of the following conditions:

- The selection of an input is forced and the status of that input is bad.
- Forced selection is not in effect, and there are fewer inputs with a status other than bad than are specified by NMIN.

Restart or point activation

On a cold or warm restart, or when this data point is activated, PVCALC is simply recalculated the next time this data point is processed.

20.3 Equations

Background

The High, Low, Average PV algorithm includes three equations options:

- Equation A, which selects the highest input value.
- Equation B, which selects the lowest input value.
- Equation C, which calculates the average of all valid inputs.

Equations

Equation A—High Selector:

- If FRCPERM and FORCE are both On, then
 - $PVCALC$ = the value of the input indicated by FSELIN
 - $SELINP$ = FSELIN
- If either FRCPERM or FORCE is Off, then
 - $PVCALC$ = the highest valid input
 - $SELINP$ = the selected input, SelectP1 through SelectP8

Equation B—Low Selector:

- If FRCPERM and FORCE are both On, then
 - $PVCALC$ = the value of the input indicated by FSELIN
 - $SELINP$ = FSELIN
- If either FRCPERM or FORCE is Off, then
 - $PVCALC$ = the lowest valid input
 - $SELINP$ = the selected input, SelectP1 through SelectP8

Equation C—Average:

- If FRCPERM and FORCE are both On, then
 - $PVCALC$ = the value of the input indicated by FSELIN
 - $SELINP$ = FSELIN
- If either FRCPERM or FORCE is Off, then
 - $PVCALC$ = (Sum of the valid inputs)/N
 - $SELINP$ = None

20 High Low Average PV Algorithm

20.3 Equations

21. Summer PV Algorithm

21.1 Functional Overview


Family

The Summer PV algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm calculates a PV (PVCALC) that is the sum of up-to-six input values. The input values can be scaled, the combined inputs can be scaled and a bias value can be added to the result.

Figure 21-1 Summer PV Algorithm Functional Diagram

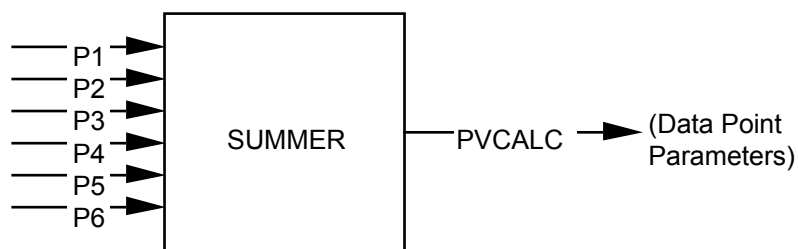

EQUATION B, simplified:

$$\text{PVCALC} = \text{P1} + \text{P2} + \dots + \text{P6}$$

Use

A typical use is the calculation of the rate at which a component of a raw product is entering a process unit, which is found by summing the proportion of the component in each of several input streams and multiplying by the stream flow rates. This algorithm can also be used to calculate a net heat loss by finding the difference between the heat inputs and heat outputs (the difference can be obtained by using a negative scale factor, for example, -1.0).

Other possible uses are mass-balance, heat-balance, and inventory calculations.

This equation can be used to scale and bias a single variable using Equation A.

21.2 Options and Special Features

Ensuring adequate PV range

Because the input values can be either positive or negative, as can the scale factors and bias values, the results in PVCALC can have a broad range of values. You should evaluate the worst-case values you expect to be in use, to establish the PV range. When you configure the data point, be sure to specify a PV range adequate to cover all expected values.

Error handling

If there are no inputs with a bad status and the status of at least one input is uncertain, PVAUTOST is Uncertain.

If the status of at least one input is bad, the PVAUTOST becomes Bad and PVCALC contains NaN.

Restart or point activation

On any type of restart or when this data point is activated, PVCALC is normally calculated.

21.3 Equations

Background

You can select one of two equations when you configure a data point that uses the Summer PV algorithm:

Equation legend

For both equations:

- **PV CALC** = The output of this algorithm. It is selected as the PV for this data point when the PV source is AUTOMATIC.
- **C** = The overall scale factor. Default = 1.0.
- **C1 through Cn** = The scale factors for P1 through Pn. Default = 1.0.
- **P1 through Pn** = The PV input values. Equation B is limited to six inputs. Default for all values is NaN.
- **D** = The overall bias. Default = 0.
- **n** = The number of PV inputs used. Default = 2.

Equations

Equation	Definition
A	$PV CALC = C * P1 + D$
B	$PV CALC = C * ((C1 * P1) + (C2 * P2) + . . . + (Cn * Pn)) + D$

21 Summer PV Algorithm

21.3 Equations

22. Variable Dead Time PV Algorithm

22.1 Functional Overview


Family

The Variable Dead Time with Lead-Lag Compensation PV algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm provides a calculated PV (PVCALC) in which value changes may be delayed from the time that the corresponding change occurred in the P1 input. Dynamic lead-lag compensation to the PV can also be provided. Lag compensation is available in combination with the delay or with no delay. The delay time can be fixed or can be varied as the value of an input varies.

Figure 22-1 Variable Dead Time PV Algorithm Functional Diagram

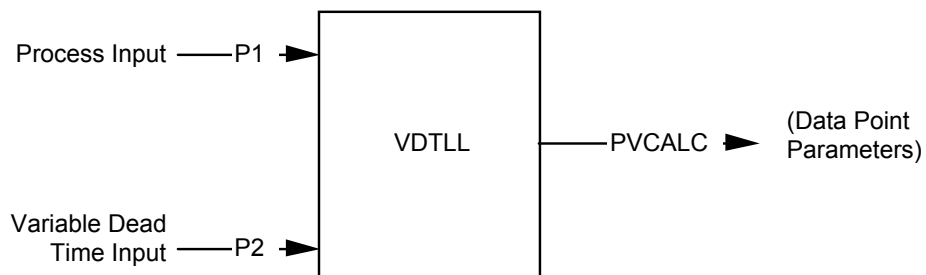

Equation A: One Lead and Two Lag Compensations

Equation B: Fixed Dead Time

Equation C: Variable Dead Time

Equation D: Variable Dead Time with Two Lag Compensations

22 Variable Dead Time PV Algorithm

22.2 Options and Special Features

Use

This algorithm is used for feedforward control and in process simulations. It may be used as the PV algorithm in a data point that uses the PID Feedforward control algorithm.

In a typical feedforward application, the PV provided by this algorithm serves as the feedforward PV. An operator can "cut out" this feedforward component by switching the PVSOURCE to Man.

22.2 Options and Special Features

Combinations of delay and lead-lag compensation

You select the combinations of delay, lead compensation, and lag compensation by selecting Equation A, Equation B, Equation C, or Equation D when configuring the data point. The equations function as follows:

Equation	Definition
A <i>(Lead-Lag)</i>	A change in the input value (P1) is subjected to one lead compensation and two lag compensations. If you specify a time constant of zero in the Lead Compensation time constant, TLD, Lag Compensation time constants, TLG1, or TLG2, the corresponding lead or lag compensation is suppressed. If you don't suppress the lead compensation, you must use at least one lag compensation.
B <i>(Fixed Dead Time)</i>	A change in the input value (P1) is delayed by a user-specified time. This data point must be made inactive in order to change the dead-time value (TD).
C <i>(Variable Dead Time)</i>	A change in the input value (P1) is delayed by a time period the duration of which varies as the inverse of P2-input value variations. The variable time period is determined by P2, the C1 and C2 scale factors, and bias values D1 and D2. The delay (or dead time) typically represents a delay in the process that depends on some variable in the process, such as flow, feed rate, or a conveyer-belt speed.
D Variable Dead Time <i>(w/Two Lags)</i>	A change in the input value (P1) is delayed as with Equation C and then receives lag compensation as specified by one or two time constants (TLG1, TLG2). This equation is useful for simulating a portion of a process that can be represented by a dead time and one or two lags. The cutoff feature applies as for Equation C.



TIP


Equations C and D have a cutoff feature that can simulate situations like a conveyor belt stopping. If the flow or speed value, represented by the P2 input, drops below a limit that you configure in the CUTOFFLM parameter, the value of the delayed P1 signal (DP1) goes to zero. (DP1 is not an external parameter.) When P2 again exceeds the CUTOFFLM value, DP1 resumes as a normal, delayed output. If you don't want this feature, configure CUTOFFLM as NaN. Note that DP1 is subject to scale factor C and bias value D.

Equation C can be used to produce a fixed delay time that can be changed while the data point is active.

Calculating dead-time

The delay (dead-time) of the input values is accomplished by a process that has the effect of shifting the values through a table in the HPM's memory. Values are shifted from one location in the table to the next, at intervals calculated to provide the desired delay.

Figure 22-2 Variable Dead-Time Functional Diagram

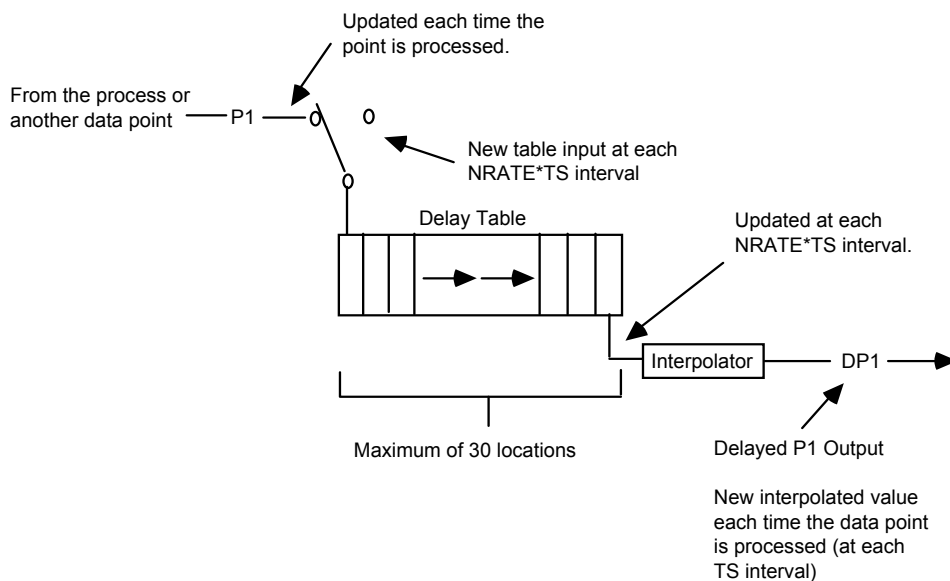

For an example of the delay-table operation, suppose that the P1-input value has been constant at 5.0 units for an hour. Assume that the specified delay time, TD, is 15 minutes and that the data point is processed every second; Time Sample (TS = 1/60) min. as determined by the SCANRATE parameter. At this time, the output of the interpolator is 5.0 units, all of the locations in the table contain a value of 5.0 units, and P1 contains a value of 5.0 units.

Now suppose that the input to P1 suddenly changes to 6.0 units. The interval at which new values are shifted through the table and the number of table locations in use have been set up so that it takes 15 minutes for the new value of 6.0 units to appear at the output of the interpolator.

Changing dead-time parameters

Variable delay-time (dead-time) parameters C1, C2, D1, and D2 in Equations C and D can be changed at a Universal Station while the data point is active. Note that the D1 value allows a supervisor or engineer to add a fixed delay time to the total variable delay time.

The C1 and C2 parameters are used to specify the time scale of the P2 value. D1 can be used to offset that scale. Note that the P2 value is inversely proportional to the variable time delay. Where P2 represents a flow rate or speed, when the flow or speed decreases, the time delay increases to simulate the effect of the reduced flow or speed.

Restrictions on dead-time

The minimum fixed delay-time (dead-time, Equation B) is equal to TS, the processing interval in minutes. Delay values greater than 32,000*TS are rejected.

For Equations C and D the minimum step-change in the TD value is equal to NLOC*TS. This is also the value of the smallest dead time (delay time). If the TDNEW value is less than zero, it is clamped to zero. Also, if TDNEW exceeds 32,000*TS, it is clamped to 32,000*TS.

Time-Constant recommendations

We recommend that the processing rate of a data point that uses this algorithm and Equation A or D must be at least ten times greater than the lead or lag break-point frequencies, so, divided by lead break-point frequency) be less than or equal to 10, so,

- TLG1 should be equal to or greater than $2 * TS$.
- TLG2 should be equal to or greater than $2 * TS$.
- |TLD| should be equal to or greater than $10 * TS$.

Both positive and negative lead times can be specified, so it is the absolute value of TLD that must be equal to or greater than $10 * TS$.

We recommend that the rate amplitude (lag break-point frequency divided by the lead break-point frequency) be less than or equal to 10 so, $|TLD|$ should be equal to or less than $10 * TLG1$.

Using Equation C or D for a fixed dead-time

You can use these variable delay-time (dead-time) equations to attain a fixed delay time by setting the value of C1 to 0 and adjusting the value of D1 to get the desired delay value. This permits changes of delay time from a Universal Station while the data point is active, but the resolution may be much less than using a fixed delay time (Equation B), where the delay can be changed only by making the point inactive and then active again.

Restart or point activation

On a cold start, a warm start, and when the data point is activated, the lead-lag dynamics are set to the steady state, and all values in the delay table are set to the current value of the P1 input. PVCALC is calculated as follows:

$$PVCALC = C * P1 + D$$

Error handling

For Equations C and D, if neither input has a bad-value status, but one or both has an uncertain-value status, PVAUTOST is Uncertn. Equations A and B don't use the P2 input, so for them, PVAUTOST is Uncertn only if the P1-value status (P1STS) is Uncertn.

For Equations C and D, if either input has a bad-value status, PVCALC becomes NaN and the PVAUTOST is Bad. For Equations A and B, when P1STS is Bad, it causes PVCALC to contain NaN and the PVAUTOST to be Bad.

When the input-value status is again normal or uncertain, the data point is initialized as for a cold start in Restart or point activation and the PVAUTO-value status becomes normal, or uncertain, as appropriate.

22.3 Equations

Background

You can select one of four equations when you configure a data point that uses the Variable Dead Time with Lead-Lag Compensation PV algorithm:

Equation legend

For all equations:

- **PVCALC** = The output of this algorithm. It is selected as the PV for this data point when the PV source is AUTOMATIC.
- **C** = The overall scale factor. Default value = 1.0.
- **C1** = Scale factor, TDNEW denominator. Default value = 1.0.
- **C2** = Scale factor for P2. Default value = 1.0.
- **CUTOFFLM** = Cutoff (zero-flow or zero-belt speed) limit. Default = 0.0.
- **D** = Overall bias. Default value = 0.
- **DP1** = The delayed P1 value. Not accessible to Universal Stations nor to user-written programs.
- **D1** = Bias value for the variable delay time. Default value = 0.
- **D2** = Bias for P2. Default value = 0.
- **P1** = The input value to which the delay and lead-lag compensation are applied.
- **P2** = The input value that changes the variable delay when Equation C or Equation D is used.
- **s** = The Laplace operator (notation only, not a parameter).
- **t** = The present time (notation only, not a parameter).
- **t-TD** = The present time minus the actual dead (delay) time (notation only, not a parameter).
- **TD** = The fixed time delay in minutes for Equation B. The actual variable delay time in minutes for Equations C and D. Default = 0.
- **TDNEW** = The calculated new (ideal) delay time in minutes for Equations C and D.

- TLD = Lead-compensation time constant in minutes. 0 = no lead. Default = 0.
- TLG1 = Lag-compensation time constant 1 in minutes. 0 = no lag. Default = 0.
- TLG2 = Lag-compensation time constant 2 in minutes. 0 = no lag. Default = 0.

Equations

Table 22-1 Variable Dead-Time PV Algorithm Equations

Equation	Definition
A	Lead Compensation with Two Lag Compensations. $PVCALC(s) = [C * \frac{1 + TLD * s}{(1 + TLG1 * s) * (1 + TLG2 * s)} * P1(s)] + D$
B	Fixed Delay Time. $DP1_t = P1_t - TD$ $PVCALC(s) = C * DP1 + D$
C	Variable Delay Time—if CUTOFFLM does not contain NaN and if P2 is less than CUTOFFLM, DP1 = 0; otherwise, calculate DP1 using: $DP1_t = P1_t - TD$ $TD = \frac{C1}{C2 * P2 + D2}$ $PVCALC(s) = C * DP1 + D$
D	Variable Delay Time with Two Lag Compensations. $TD = \frac{C1}{C2 * P2 + D2} + D1$ $DP1_t = P1_t - TD$ $PVCALC(s) = [C * \frac{1}{(1 + TLG1 * s) * (1 + TLG2 * s)} * DP1(s)] + D$

22 Variable Dead Time PV Algorithm

22.3 Equations

23. Totalizer PV Algorithm

23.1 Functional Overview


Family

The Totalizer (TOTALZR) PV algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm provides a time-scaled accumulation of an input value. The input value is typically a flow measurement. Either analog or pulse input can be selected through parameter ACCTYPE. The time-base can be seconds, minutes, or hours.

Figure 23-1 Totalizer PV Algorithm Functional Diagram

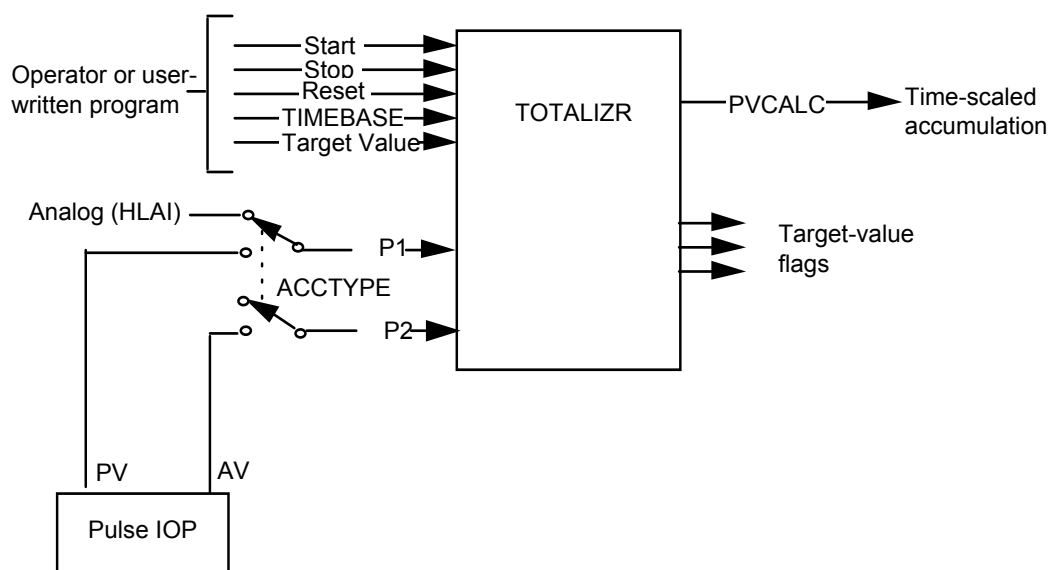

The accumulation can be started, stopped, and reset by commands from a Universal Station operator or from a user-written program. An operator or user-written program can establish a target value for the accumulation. Status indicators are available to indicate that the accumulation is near the target value, nearer to the target value, and is complete (has reached or exceeded the target value).

For situations where the flow transmitter may not be precisely calibrated near the zero-flow value, a zero-flow cutoff feature is provided that avoids accumulating negative flow values. When the flow is below a user-specified cutoff value, the input value is clamped to zero.

Use

The Totalizer PV algorithm accumulates periodic measurements over time. It is principally used to accumulate total flows, or in applications such as the measurement of ingredients that are blended. The accumulated value can be used for control or just as process history.


An example of TOTALIZER's use in control is determining how full a tank is, so that the flow into the tank can be shut off before it overflows. In such an application, the P1 input to TOTALIZER would be the PV of PID-flow controller.

Typical operation

The events in an operation that uses TOTALIZER might be as follows (see **Error! Reference source not found.**)

- The target value, which represents the desired total volume, is specified to the AVTV (displayed as the setpoint) parameter in the TOTALIZER point, by an operator at a Universal Station or by a user-written program.
- An operator or a user-written program issues a Reset command (using the COMMAND parameter) to the TOTALIZER point. This sets any accumulation value equal to RESETVAL.
- A Start command is issued to the TOTALIZER point. A logic slot or user program sets the setpoint to some value.
- When the first "slowdown" or "near-target" flag (ADEV1FL) comes on, it is read by logic or user program and reduces the setpoint.
- When the second "slowdown" or "near-target" flag (ADEV2FL) comes on, it is read by logic or user program and reduces the setpoint.
- When the accumulation reaches the target value (AVTV), filling is complete and the complete flag (AVTVFL) comes on. It is read by logic or user program and sets the setpoint = 0.

Figure 23-2 Using a Totalizer to Fill a Tank

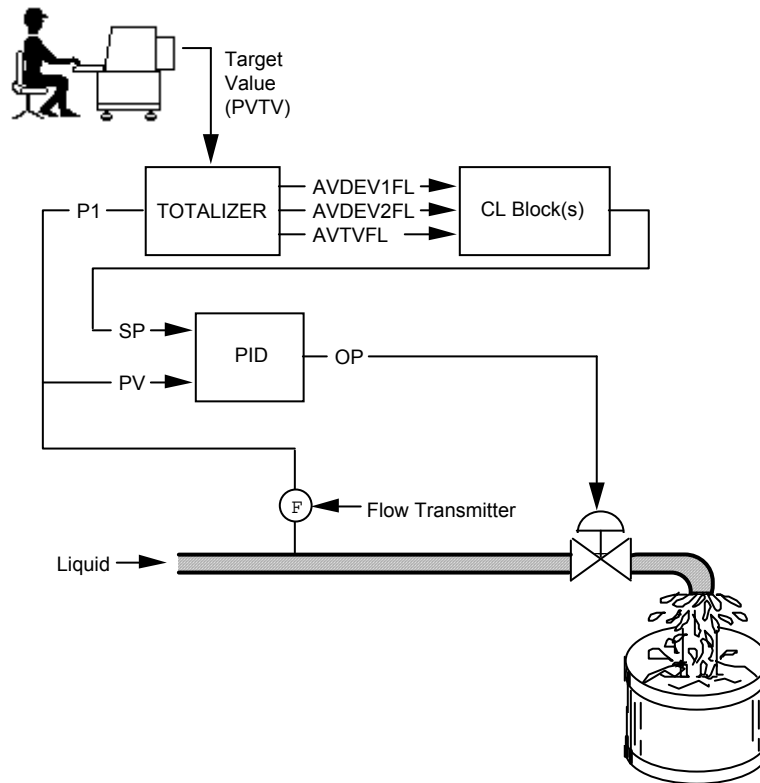

23.2 Options and Special Features

Time-Base

You specify the time base in seconds, minutes, or hours, in parameter TIMEBASE. This is the time base in which the flow measurement is made. For example, liters per second. This parameter only applies when ACCTYPE = ANALOG.

Engineering-units scaling

- Scale factor, C, can be used to convert from one set of engineering units to another, for example, from gallons per minute to barrels per minute.

Commands and States

Commands can be issued to the data point that is using TOTALIZR from a Universal Station or by a user-written program. These commands are written in the TOTALIZR point's COMMAND parameter.

The commands are as follows:

- None—No action.
- Start—Start the accumulation. STATE changes to Running.
- Stop—Stop the accumulation. STATE changes to Stopped.
- Reset—Reset the accumulated value to a user-specified value. This value is specified in parameter RESETVAL. If the accumulator is running, it continues from the reset value.

Command Flags

In addition to the above (enumerated) commands, explicit command flags are provided to reset, start, or stop the totalizer.

- RESETFL — Off to On transition causes the totalizer to be reset (see “Accumulated value before reset” in Section 23.2).
- STARTFL — Off to On transition causes the STATE of totalizer to be Running.
- STOPFL — Off to On transition causes the STATE of totalizer to be changed to Stopped.

The above flags are program-access level, so they can be written to by a Logic Point or a user-written program.

Accumulated value before reset

The reset command sets the PVCALC parameter equal to the reset value (RESETVAL). The value of PVCALC just prior to being reset is saved as the old accumulation value (OLDAV). This allows other system functions using the totalized value to be able to reset the totalizer without losing any "accumulation."

Range of Values

The accumulated value has a normal range of PVEULO to PVEUHI, where PVEUHI defines the point where the bar graph is at the 100% level, and PVEULO is the point where the bar graph is at the 0% level.

Clamping option

This algorithm will continue to totalize past PVEUHI until it reaches the value of PVEXEUHI. When it reaches PVEXEUHI, the following occurs:

- If NoClamp was selected, the PV is set to BadPV and displayed as NAN.
- If Clamp was selected, the PV is flagged as uncertain and clamped to PVEXEUHI.

In either case, the algorithm continues to accumulate a value in PVCALC until it is reset, regardless of the selection of NoClamp/Clamp.

Using scientific notation

Values are accumulated as integers, but displayed as real numbers. You can enter values using scientific notation; for example, 1,000,000 can be entered as 1E6. If the accumulated value exceeds the limit of displayable characters, it will be displayed in scientific notation.

Near-Zero cutoff

To prevent accumulation of negative flow values, where the flow transmitter may not be precisely calibrated near zero flow, you can specify a cutoff value in parameter CUTOFFLM. When the P1 value is below CUTOFFLM, it is replaced by zero. You can eliminate this feature by specifying NaN in CUTOFFLM.

Target-Value flags

The target value can be specified by an operator or a user-written program that is stored in AVTV. This feature can be disabled by storing NaN in AVTV.

When the accumulated value in PVCALC is equal to or greater than AVTV, the target-value-reached flag, AVTVFL, goes to On, indicating that the accumulation is complete.

Even if the accumulator has stopped, this check is made on each processing pass.

You can specify two other trip points in AVDEV1TP and AVDEV2TP, as deviations from AVTV. Each of them is associated with a flag:

- AVDEV1FL trips when—

$$PVCALC \geq AVTV - AVDEV1TP$$

- AVDEV2FL trips when—

$$PVCALC \geq AVTV - AVDEV2TP$$

When the PVAUTOST of the accumulated value is Bad, AVTVFL, AVDEV1FL, and AVDEV2FL are all Off.

Bad-Input and warm-restart Options

You can configure equations A through F for this algorithm, but instead of specifying the calculation, they specify combinations of the following five options:

- **Use Zero**—When the accumulator is running, if the input status P1STS (or P2STS for Pulse IOP) is Bad, the input value is replaced by zero and the accumulation continues with a PVAUTOST of Uncertn. When the input status is Normal, PVAUTOST remains Uncertn until a reset command is received. No special action by the operator is required.
- **Use Last Good Value**—When the accumulator is running, if the input status is bad, the input value is replaced by the last good value and the accumulation continues with PVAUTOST as Uncertn. When the input status is Normal, PVAUTOST remains Uncertn until a Reset command is received. No special action by the operator is required.
- **Set PVAUTOST Bad and Stop**—When the accumulator is running and the input status is bad, the value in PVCALC becomes NaN, PVAUTOST goes Bad, and the accumulator is stopped. If the PVSOURCE is Auto, a bad-PV alarm is generated. When the input status is again Normal, PVAUTOST remains Bad until the accumulator is started again. To restart the accumulation, the operator should estimate its value and use the Reset command (see “Commands and States” in Section 23.2) to establish that value, then use the Start command to restart the accumulation. The last accumulated value before the status went bad is in LASTPV.

- **Continue After a Warm Restart**—On a warm restart when the accumulator is running, the accumulation continues from the last PVCALC value. The PVAUTOST goes to uncertain (UNCERTN) and remains so until a Reset command is received.

When the Pulse Input IOP is used (ACCTYPE = PULSE), accumulation continues with the accumulated value count (AV) obtained from the IOP. The totalizer assumes that exactly one rollover of the IOP count has occurred, if necessary. The PVAUTOST goes to UNCERTN and remains so until a Reset command is received.

- **Set PVAUTOST Bad and Stop After a Warm Restart**—On a warm restart when the accumulator is running, the value in PVCALC becomes NaN, PVAUTOST goes Bad, and the accumulation is stopped. The operator must intervene to restart the accumulator.

These options are selected as follows:

Equation	Bad Input Handling	Warm Restart
A	Use Zero	Continue
B	Use Last Good Value	Continue
C	Set Bad and Stop	Continue
D	Use zero	Set Bad and Stop
E	Use Last Good Value	Set Bad and Stop
F	Set Bad and Stop	Set Bad and Stop

If the accumulator is stopped, the input status is ignored. If the accumulator is stopped on a warm restart, no special action by the operator is required.

Restart or point activation

When the TOTALIZR data point is activated, the PVCALC value becomes NaN, PVAUTOST goes Bad and the accumulator state is Stopped. If the PVSOURCE is Auto, this causes a bad-PV alarm and the operator must re-establish normal operation.

The processing that takes place for a warm restart is described in Bad-Input and warm-restart Options.

Error handling

PVAUTOST is Uncertain when

- The input status (P1STS or P2STS) is Uncertain.
- The input status is Bad and the "use zero" or "use last value" (Equation A, B, D, or E) is configured (see "Bad-Input and warm-restart Options" in Section 23.2).
- The data point is in a warm restart and the continue option (Equations A, B, or C) is configured (see "Bad-Input and warm-restart Options" in Section 23.2).

A Reset command is needed to return PVAUTOST status to Normal, provided the input status is Normal.

PVCALC contains NaN and the PVAUTOST is bad when

- The input status is Bad and the "set bad and stop" (Equation C or F) is configured.
- The data point is in a warm restart and is configured for "set bad and stop" (Equations D, E, or F) is configured.

A Reset command is needed to return PVAUTOST to Normal, provided the input status is Normal.

PV or AV selection

Either of the parameters AV or PV is available at the input of the Regulatory PV Totalizer algorithm. Normally AV is used, but only if all the following conditions are true—

- Pulse IOP is running.
- Point is active.
- IOP PV is not in lo cutoff.
- IOP PV is not clamped.
- IOP PV source is AUTO.
- there are no soft failures against the IOP slot.

Automatic PV reset

With TPN R684, HPM Totalizer RegPV points are provided with an option to automatically reset and restart the accumulation of PV value at specific configured intervals. The two point-based parameters - \$AUTROPT and \$AUTRTIM are used to configure the automatic PV reset.

\$AUTROPT – Automatic Reset Option

The \$AUTROPT (Automatic Reset Option) parameter is an enumeration. It provides the following options:

\$AUTROPT Value	Description
NONE	This is the default option indicating that the automatic reset is not configured for this point.
HOURLY	PV value resets every one hour from the configured automatic reset time.
8HOURS	PV value resets every 8 hours from the configured automatic reset time.
12HOURS	PV value resets every 12 hours from the configured automatic reset time.
DAILY	PV value resets every 24 hours from the configured automatic reset time.
WEEKLY	PV value resets every 7 days from the configured automatic reset time.
MONTHLY	PV value resets every month at the specified day and time as configured in the automatic reset time.
YEARLY	PV value resets every year at the specified day and time as configured in the automatic reset time.

\$AUTRTIM – Automatic Reset Time

The Automatic Reset Time (\$AUTRTIM) parameter is a time-based parameter. It indicates an offset value that is within the interval determined by the reset option parameter. With 0 00:00:00 being the lower limit for all options, the automatic reset functionality is active at 0 00:00:00, if the \$AUTROPT is set to a value other than NONE. The various offset values are as follows:

\$AUTROPT Value	\$AUTRTIM Value
NONE	N/A
HOURLY	Offset time to be set in minutes or seconds ranging from [0 00:00:00] to [0 00:59:59].
8HOURS	Offset time to be set in hours ranging from [0 00:00:00] to [0 07:59:59].
12HOURS	Offset time to be set in hours ranging from [0 00:00:00] to [0 11:59:59].
DAILY	Offset time to be set to any hour in the day ranging from [0 00:00:00] to [0 23:59:59].
WEEKLY	Offset time to be set to any day in the week ranging from [0 00:00:00] to [6 23:59:59].
MONTHLY	Offset time to be set to any day in the calendar month ranging from [0 00:00:00] to [30 23:59:59].
YEARLY	Offset time to be set to any day in the calendar year ranging from [0 00:00:00] to [365 23:59:59].



TIP

The \$AUTRTIM parameter goes invisible in PED when the \$AUTROPT parameter is set to NONE (default).

Configuring the Automatic Reset Option (\$AUTROPT) and the Automatic Reset Time (\$AUTRTIM) parameter

The steps to configure the \$AUTROPT and \$AUTRTIM parameters are as follows:

Step	Action
1	Build a Reg PV Process Point on the Network Interface Module.
2	Select HPM as the NODETYP.
3	Select TOTALIZR as the PVALGID and press Enter. The \$AUTROPT parameter is displayed on page 4 (NIM Reg PV Totalizer algorithm) of the PED display.
4	Select any one of the options for the \$AUTROPT parameter. Note: Once \$AUTROPT is set to a value other than NONE, \$AUTRTIM is visible.
5	Enter an Offset time for the \$AUTRTIM parameter. Note: The offset time selected must be within the time interval of the previously selected \$AUTROPT option in the format - DDD-HH:MM:SS.



TIP

- The automatic reset occurs at the UCN time. Reset time may be different from the time on the station if there is no clock master and if the nodes are in Local mode.
 - Program reset, Command driven reset and/or Operator reset does not have any impact on the automatic reset.
-

Change in Automatic Reset Option and Time

When the automatic reset function is active, if there is any change either in the option or the reset time then the next reset time is recalculated immediately. The next reset happens at the newly calculated time.

Automatic Reset and the UCN time change

The automatic reset function monitors the changes in the system time and recalculates the next reset time accordingly. This accommodates the UCN time change due to daylight-saving.

Changes to the accumulated value on automatic reset

When an automatic reset is configured, the accumulated value in PV is stored in OLDAV and the PV value is set equal to RESETVAL at the time of reset. Accumulation starts from then on until the next automatic reset or manual reset, depending on the configuration.

Resetting the PV value on the Last day of February

To reset the PV value on the last day of February irrespective of the year being a leap year or non-leap year, enter 59 for DDD of \$AUTRTIM. The automatic reset happens on the 29th of February in case of a leap year and on 28th of February in case of a non-leap year.

The following table illustrates this scenario:

Parameter	Configuration
\$AUTROPT	YEARLY
\$AUTRTIM	59-00:00:00

Resetting Totalizer PV value – WEEKLY

For the WEEKLY option, the days of the week corresponding to the DDD value of \$AUTRTIM are as follows:

DDD of \$AUTRTIM Value	Day of the Week
0	Sunday
1	Monday
2	Tuesday
3	Wednesday
4	Thursday
5	Friday
6	Saturday

Resetting Totalizer PV value - MONTHLY

If the number of days in a month is less than the offset configured, the reset happens on the last day of the month as per the calendar. The following table illustrates a scenario:

Parameter	Configuration
\$AUTROPT	MONTHLY
\$AUTRTIM	29-06:30:20

If the month is February and the year is a non-leap year, the reset occurs on 28th of February at 06:30:20.

Similarly, if the month is April, the reset occurs on the 30th of April.

HPM IDLE to RUN

When there is an IDLE to RUN transition for HPM, the PV value resets immediately if the time of transition is later than the pre-calculated reset time and the next reset time is recalculated.

The following table illustrates a scenario where HPM is in the IDLE state since 12:10:10 and transitioned to RUN at 12:45:00:

Parameter	Configuration
\$AUTROPT	HOURLY
\$AUTRTIM	0 00:20:30

The PV value resets immediately when HPM transitions from IDLE to RUN at 12:45:00. The next reset time is calculated as 13:20:30.



TIP

For the automatic reset functionality, the behavior of totalizer points during PTEXECST change from INACTIVE to ACTIVE is same as when HPM changes from IDLE to RUN.

23.3 Equations

Background

NormalText

Equation legend

For each of the equations:

- $PV_{CALC}(i)$ = The output of this algorithm from the current pass. It is selected as the PV for this data point when PV_{SOURCE} is Auto.
- $PV_{CALC}(i-1)$ = The accumulated value at the end of the last processing pass for this point.
- C = The scale factor. Can be used to convert from eng. units to different eng. units. Default value = 1.0
- (Time-scale) = $TS * 60$ if $TIME_{BASE}$ contains Seconds.
- TS if $TIME_{BASE}$ contains Minutes.
- $TS/60$ if $TIME_{BASE}$ contains Hours.
- TS = The data-point processing interval in minutes.
- P_n = The input value. Typically a flow rate.

Equations

Configure one of the Equations A through F for a TOTALIZR data point equation specifying the operating bad-input and warm-restart options according to Bad-Input and warm-restart Options.

For Analog Operation:

- For all equations, when the accumulator is running, the accumulated value in PV_{CALC} is calculated as follows:

$$PV_{CALC}(i) = PV_{CALC}(i-1) + C * (TIME-SCALE) * P_n$$

For Pulse Input Operation

- If pulse is selected through parameter ACCTYPE, operation is the same, except input from the Pulse IOP is supported as follows—
 - As the Totalizer PV algorithm functional diagram figure indicates, P1/P2 input is from the Pulse IOP.
 - Normally the P2 input (AV) is used as the accumulated value from the pulse IOP. It is a 32 bit unsigned integer and used to determine volume.
 - This method is more precise than if the Pulse IOP rate value is used.
 - Error handling selected by Equations A through F references the P2 input status.
- The PV Totalizer algorithm contains a single user-configurable constant (C) —

$$PVCALC = C * DELTA_AV + PVCALC_LAST_SAMPLE$$

When configuring the PV Totalizer algorithm for pulse operation, select ACCTYPE = PULSE. Then, define the pulse input source,

P1SRC(1) to be the PV parameter of the PI IOP. The HPMM software uses the entity specified for P1SRC(1) to establish the algorithm's second input (P2) except that it uses the parameter ID of **AV**.

23 Totalizer PV Algorithm

23.3 Equations

24. General Linearization PV Algorithm

24.1 Functional Overview


Family

The General Linearization (GENLIN) PV algorithm is a member of the Regulatory PV algorithms.

Description

This algorithm calculates a PV that is a function of the input. The function can be any that can be represented by up-to-12 continuous, linear segments. You specify the base value and slope of each segment. The input is compared with the input range of each segment and the output is set at the intersection of the input with the appropriate segment. See the following two figures, Figure 24-1 and Figure 24-2.

Figure 24-1 General Linearization PV Algorithm Functional Diagram

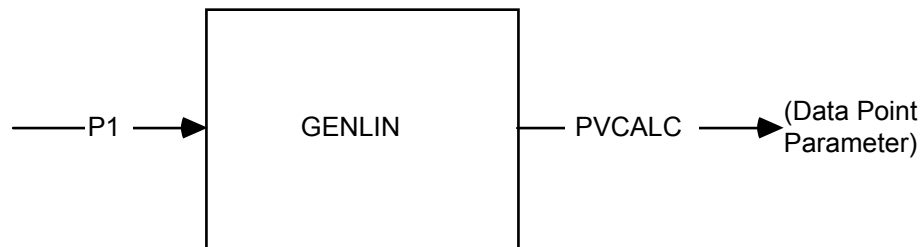

Use

This algorithm is typically used to provide a linearized PV (in engineering units) for a sensor with a nonlinear characteristic. This algorithm can also be used to characterize functions of a single variable, such as heat transfer vs. flow rate, or efficiency as a function of load. The algorithm is particularly useful when the relationship of the input to engineering units is empirically determined.

This algorithm supplements the standard linearization functions that are provided in the IOPs for standard temperature sensors and differential flow meters.

24.2 Options and Special Features

Restart or point activation

On a cold or warm restart, or when a data point using this algorithm is activated, PVCALC is recalculated the next time this data point is processed.

Error handling

If P1STS is Uncertn, PVAUTOST status becomes Uncertn.

If P1STS is Bad or if any of the segment coordinates (IN_i or OUT_i) contains NaN, PVAUTOST becomes Bad.

If any of the segment coordinate values (IN_i or OUT_i) contains NaN, a configuration alarm is generated.


Operator parameter changes

The SEGTOT, IN_i , and OUT_i parameters can be changed by the operator, but only if the data point that uses the GenLin algorithm is made inactive.

Parameter value restrictions

The input coordinate value parameters must be specified in ascending order from the smallest value to the largest.

Figure 24-2 General Linearization Operation Example

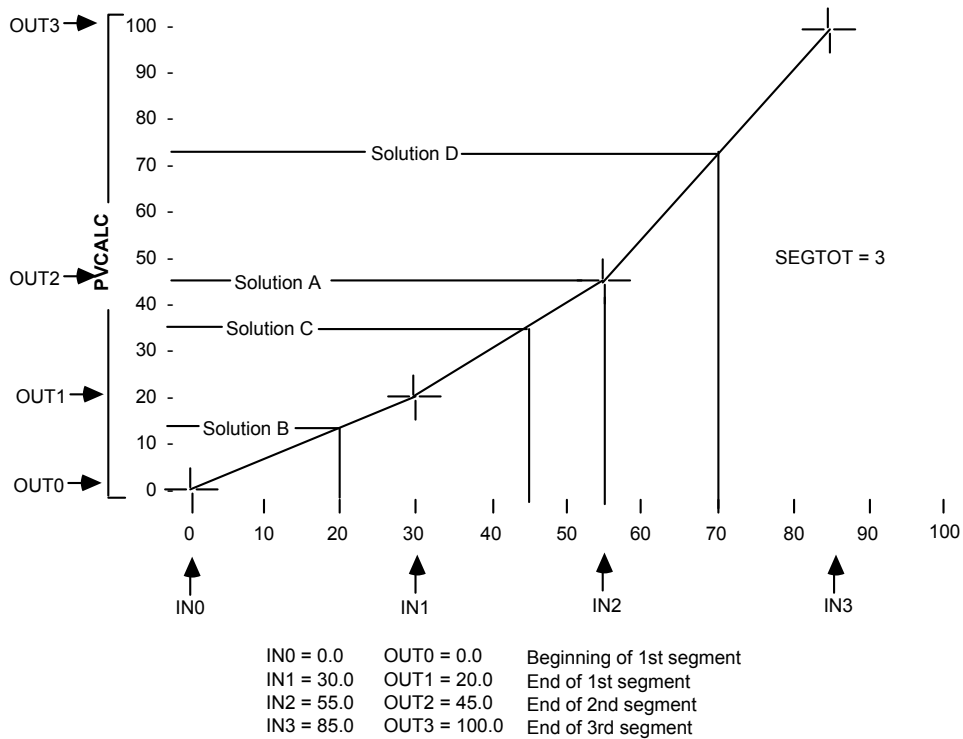

Solution A (P1 = IN2):

$$PVCALC = OUT2 = 45.0$$

Solution B (P1 > IN1):

$$PVCALC = \frac{OUT1 - OUT0}{IN1 - IN0} * (P1 - IN0) + OUT0 = \frac{20 - 0}{30 - 0} * (20 - 0) + 0 = 13.33$$

Solution C (P1 intersects any but 1st and last segment):

$$PVCALC = \frac{OUT(i+1) - OUTi}{IN(i+1) - INi} * (P1 - INi) + OUTi = \frac{45 - 20}{55 - 30} * (45 - 30) + 20 = 35.0$$

Solution D (P1 intersects the last segment):

$$PVCALC = \frac{OUT_{segtot} - OUT(segtot - 1)}{IN_{segtot} - IN(segtot - 1)} * [P1 - IN(segtot - 1)] + OUT(segtot - 1)$$

$$= \frac{100 - 45}{85 - 55} * (70 - 55) + 45 = 72.5$$

Segment extensions

The first and last segments are treated as if they indefinitely extended, so if P1 is less than IN₀ or greater than IN_{segtot}, PVCALC is computed by assuming that the slope of the appropriate segment continues to the intersection point.

24.3 Equations

Equation legend

For each equation:

- PVCALC = The output of this algorithm. It is selected as the PV for this data point when the PV source is AUTOMATIC.
- P1 = The input value.
- IN_(i) = Input value at the beginning of the intersecting segment.
- IN_(i+1) = Input value at the end of the intersecting segment.
- OUT_(i+1) = Output value at the end of the intersecting segment.
- segtot = A subscript indicating the user-entered value in SEGTOT.

Equations

Each time this algorithm is processed the input value P1 is compared with each segment, starting with the first and continuing until a segment is found that intersects with the input. When that segment is found, PVCALC is calculated as follows:

- If the P1 value is exactly equal to the input value at the beginning of any segment (P1 = IN_i, for i in a range from 0 to the value in SEGTOT),

$$PVCALC = OUT_1$$

- If P1 intersects the first segment (P1 < IN₁),

$$PVCALC = \frac{OUT_1 - OUT_0}{IN_1 - IN_0} * (P1 - IN_0) + OUT_0$$

- If P1 intersects any segment except the first one or the last one [IN_i < P1 < IN_(i+1)] for any i from 1 to segtot-2],

$$PVCALC = \frac{OUT_{(i+1)} - OUT_i}{IN_{(i+1)} - IN_i} * (P1 - IN_i) + OUT_i$$

- If P1 intersects the last segment [$P1 > IN_{(segtot-1)}$],

$$PVCALC = \frac{OUT_{segtot} - OUT_{(segtot-1)}}{IN_{segtot} - IN_{(segtot-1)}} * [P1 - IN_{(segtot-1)}] + OUT_{(segtot-1)}$$

24 General Linearization PV Algorithm

24.3 Equations

25. Calculator PV Algorithm

25.1 Functional Overview


Family

The Calculator (CALCULTR) PV algorithm is a member of the Regulatory PV algorithms.

Description

The calculator algorithm allows the user to write an equation to compute the PV and up to four intermediate results. The result from evaluating the expression is stored into PVCALC, which is then processed like any other PV algorithm.

Figure 25-1 Calculator PV Algorithm Functional Diagram

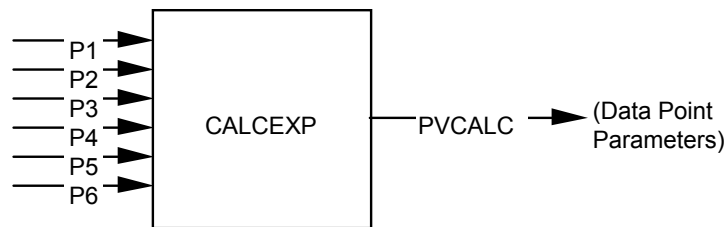

Accepts up to six inputs (POINT.PARAMETER).

Equation may be up to 60 characters long.

Up to 4 intermediate results

FORTTRAN-like syntax rules

High Select; Low Select; Average Select and Middle of 3 Select support

With TPN R683, the CALCEXP parameter of the HPM calculator points can accept up to 60 characters. All access mechanisms of CALCEXP parameter supports the revised length of the equation.

However, the CALCEXP parameter of the APM and PM calculator points can accept only up to 40 characters.



ATTENTION

If the equations are configured with more than 40 characters, the CPU consumption increases. Honeywell recommends users to apply due diligence in configuring the points with more than 40 characters.

Use

This algorithm can be used to perform any calculation or arithmetic function on up to six inputs, using up to four intermediate results. Additionally it can be used as a selector algorithm as noted above.

25.2 Options and Special Features

Configuring inputs

You may configure up-to-six inputs, using the "Tagname.Parameter" format for PISCR(n). The destination inputs can be assigned, using PIDSTN(n) for P1 through P6.

HI, LO, and AVG functions may have any number of inputs including constants.

Intermediate calculations

Up to four intermediate results can be calculated, for example:

```
C1=<expr_1>; C2=<expr_2>; C3 =<expr_3>;  
C4=<expr_4>;<expr_5>
```

The result of expr_5 is stored in PVCALC (because it has no equate associated with it). There is no restriction on the order in which the sub equations and the expression for PVCALC are specified.

If C1-C4 are expressions, they are recalculated every time the algorithm is processed.

User configurable results

If it is necessary, or desirable, to key user configurable constants into the equation, C1-C4 can be useful. C1-C4 can then be entered or modified by an operator through the detail displays, or by logic slots, or user program.

Equation length

The equation can comprise up to 60 characters including the subequations.

Syntax

FORTRAN syntax rules apply; up-to-five levels of nesting of expressions.

Error handling

If the calculated value of PVCALC is "bad," PVAUTOST is marked Bad. If the final value of PVCALC is a normal number, PVAUTOST is marked Uncertain if any input that is used in the calculation is uncertain or bad; otherwise it is set equal to Normal.

If the HI, LO, and AVG functions have bad inputs, they are ignored in the computation; if all inputs are bad, the result is marked bad. On MID3 function, if only one input is bad, the result is set equal to the average of the other two.

25.3 Equations

Background

The equation is specified at the time of point building and is loaded from the DEB without additional steps such as compilation or linking. Up-to-six inputs can be configured and stored into the destination parameters P1, P2 . . . P6.

Guidelines

The following general guidelines apply:

- The equation can be up to 60 characters long.
- FORTRAN-like syntax rules apply.
- Up to 5 levels of nesting of expressions.
- Free format real and mixed real and integer calculations permitted.
- Up to four intermediate results.
- The result of any expression that has no "equate" associated with it is stored into PVCALC.
- On point activation or warm restart PVCALC is initialized to the P1 input.

Supported operators and functions

Table 25-1 Supported Operators and Functions

Type	Operator/Function	Symbol
Operators	Divide Multiply Subtract Add	/ * - +
Arithmetic Functions	Absolute Square Square Root Natural Logarithm Base_10 Logarithm Exponent Sine Cosine Tangent Arc-tangent	ABS SQR SQRT LN LOG EXP SIN COS TAN ATAN
Special Functions	High Select Low Select Average Select Middle of Three	MAX MIN AVG MID3
Arithmetic Assignment Statement	Equate	=
Other	Separator	;

Equations

The equation can be up to 60 characters long. It is entered into the Parameter Entry Display in the port for the parameter CALCEXP. You can configure up to four intermediate expressions. The result of an expression not having an "equate" associated with it is stored in PVCALC.

Examples of use of this algorithm's equation:

```
(180.0/ (.15*P1)) + (P2+P3*LOG(P4))  
C1=P1*P2;C2=P4*MAX(0,C1,100);SQRT(C2*10)  
MAX (MID3 (P1,P2,P3) , MID3 (P4,P5,P6)  
(P1 * P2)/C1
```

25 Calculator PV Algorithm

25.3 Equations

26. Regulatory Control Points

26.1 Regulatory Control Point Background

Purpose

Regulatory Control (RegCtl) points are used to perform standard control functions by executing the algorithms that have been configured. Each control algorithm includes a wide range of configurable options to allow implementation of complex control strategies by a simple menu-select process. For example, initialization and windup protection are inherently provided for all point interconnections. Also, the capability to ramp a setpoint (by operator entry of a target value and ramp time) is configurable. Predefined and custom displays are available to support these control strategies. These standard support functions significantly simplify the implementation and use of sophisticated multi-loop control strategies. Increasingly advanced control strategies become practical as a result of the ease of HPM configuration.

Algorithms


The Regulatory Control (RegCtl) point supports the following algorithms:

- PID Control Algorithm, (see Section 1)
- PID w/Feedforward Control Algorithm, (see Section 28)
- PID w/External Reset-Feedback Control Algorithm, (see Section 29)
- PID Position Proportional Controller, (see Section 30)
- Position Proportional Control Algorithm, (see Section 31)
- Ratio Control Algorithm, (see Section 0)
- Ramp and Soak Control Algorithm, (see Section 33)
- Auto Manual Control Algorithm, (see Section 1)
- Incremental Summer, (see Section 1)
- Switch Control Algorithm, (see Section 1)
- Override Selector Control Algorithm, (see Section 37)
- Multiply Divide Control Algorithm, (see Section 1)
- Regulatory Control Summer Algorithm, (see Section 39)

26.2 Regulatory Control Point Functional Overview

Functional overview

Figure 26-1 Regulatory Control Point Functional Diagram

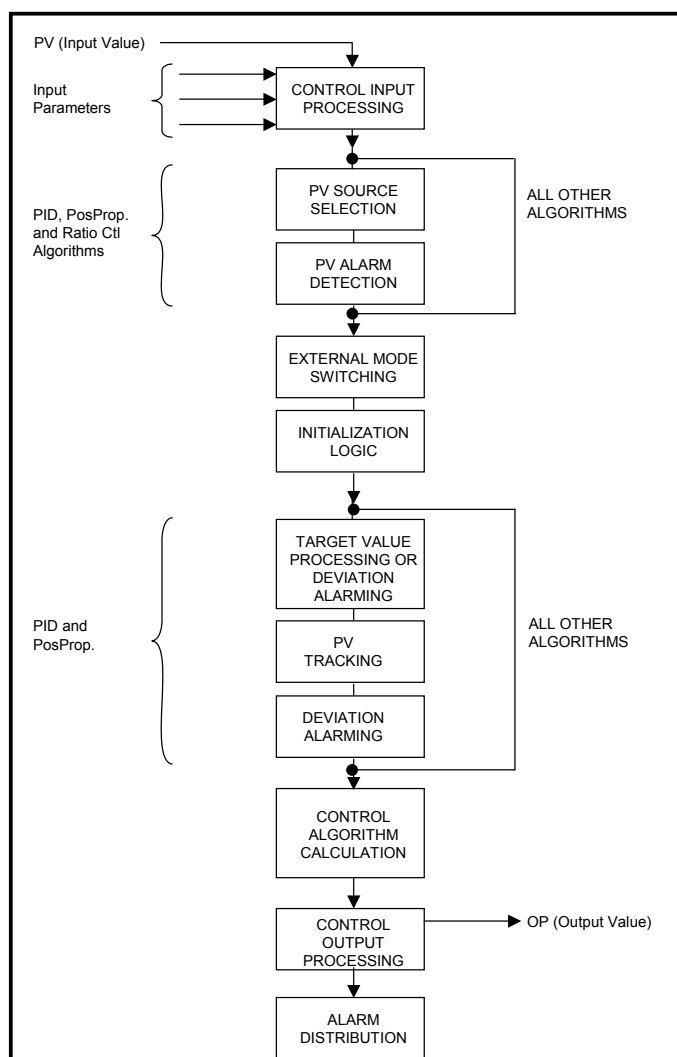



REFERENCE - INTERNAL

Descriptions of each step in the regulatory control point functional processing diagram are provided in the following topics.

- Control Input Processing.
- PV Source Selection.
- PV Alarm Detection.
- External Mode Switching.
- Initialization Logic.
- Target Value Processing or Deviation Alarming.
- PV Tracking.
- Deviation Alarming.
- Control Algorithm Processing.
- Control Output Processing.
- Alarm Distribution.

26 Regulatory Control Points

26.2 Regulatory Control Point Functional Overview

Operating modes


Table Regulatory Control point operating modes and figure Regulatory Control point mode structure define the operating modes and mode attributes applicable to the Regulatory Control point (RegCtl).

Separate flags are provided to indicate if the current mode is manual (MANMODFL), auto (AUTMODFL), cascade (CASMODFL), backup cascade (BCAMODFL), or if the mode attribute is Oper (OPRATRFL) or program (PRGATRFL). The modes and mode attributes can be used in conjunction with the logic slots to implement interlocks.

Table 26-1 Regulatory Control Point Operating Modes

Operating Mode	Definition
Manual (Man)	Provides the operator or the discontinuous program with direct control over the output value of the data point, regardless of any automatic control strategy.
Automatic (Auto)	Output value is computed by the configured RegCtl algorithm, and the setpoint comes from the local setpoint (LSP) location in the RegCtl point. An operator or a discontinuous program can change the setpoint value.
Cascade (Cas)	Data point receives its setpoint value from a primary data point.
Backup Cascade (Bcas)	Data point receives its setpoint value from a primary data point.

Figure 26-2Regulatory Control Point Mode Structure

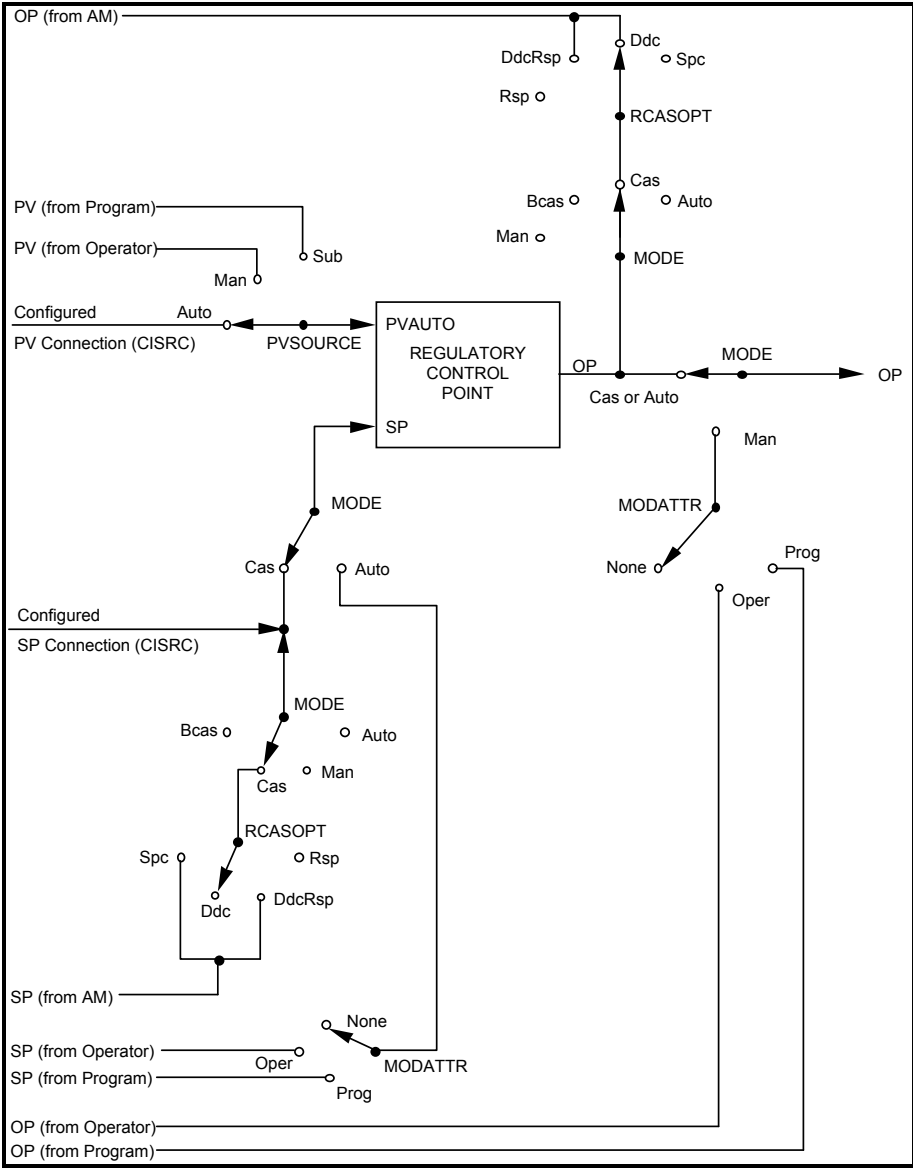

26 Regulatory Control Points

26.2 Regulatory Control Point Functional Overview

Normal Mode

The normal mode is the mode that is copied into the MODE parameter when the operator presses the NORM button. Also at that time, the content of the NMODATTR parameter is copied into the MODATTR parameter. This then becomes the mode for the data point. The possible entries for the normal mode are None, Man, Auto, Cas, and Bcas. The normal mode flag (NRMMODFL) indicates if the mode for the point is normal mode.

Attributes

The mode attribute, as defined in the following table, denotes who has the authority to change certain parameters of a data point, and is established through parameter MODATTR.

Table 26-2 Regulatory Control Point Mode Attributes

Mode Attribute	Definition
Operator	Operator Access Level—The Operator can supply the setpoint, output value, mode, ratio, and bias for a data point.
Program	Program Access Level—programs can supply the setpoint, output value, mode, ratio, and bias for a data point.
None	The mode does not have an attribute.

The normal mode attribute is the attribute that is copied into the MODATTR parameter when the NORM button is pressed. The possible entries for the NMODATTR parameter are Operator, Program, and None. The normal mode attribute flag (NRMATRFL) indicates if the point is in the configured normal mode attribute.



ATTENTION

An access level of Ccont (Continuous Control) allows supervisory control from an LCN module, such as the AM, to change the setpoint, output value, and mode of a data point.

Remote cascade handling

The HPM supports supervisory or DDC control for the PID algorithms from any remote device such as a computer (through the CG) or the AM. If the remote cascade connection is coming from a regulatory data point in the AM, it handles everything automatically; however, in all other cases (including the continuous CL programs in the AM directly writing to the HPM), you must ensure that the following conditions are handled:

- remote device must use the continuous control access-level (Ccont) parameter for writing to the SP, OP, and MODE parameters.
- remote device must also handle mode changes for closing the cascade.
- initialization to ensure bumpless mode transfers.
- windup protection.

26 Regulatory Control Points

26.2 Regulatory Control Point Functional Overview

Remote cascade options

The following table defines the remote cascade options provided by the RCASOPT parameter.

Table 26-3 Regulatory Control Point Remote Cascade Options

Option	Definition
Direct Digital Control (Ddc)	This option is configured by setting RCASOPT to Ddc. The AM control strategy writes to the OP output of the RegCtl point, when the RegCtl point is in Cas mode. The output limits are not applicable in this case. The SP cannot be written by the AM control strategy to the RegCtl point. If the control algorithm is a PID type and is configured for PV tracking, the SP is set equal to the PV when in Cas mode.
Direct Digital Control with Remote Setpoint (DdcRsp)	This option is available for only PID-type algorithms. It is configured by setting RCASOPT to DdcRsp. The AM control strategy writes directly to the OP output of the RegCtl point when it is in Cas mode. The output limits are not applicable. The AM can also write to the SP of the RegCtl point subject to the setpoint limits. PV tracking is not performed in Cas mode. This option is used primarily when a single PID controller in the HPM is used to back up a higher level control strategy running in the AM. The higher level control strategy writes to the OP and also provides the SP for the backup control strategy.
Remote Setpoint (Rsp)	This option is available for only PID-type algorithms and is configured by setting RCASOPT to Rsp. The AM control strategy writes to the SP through an AM general output connection, subject to the setpoint limits, when the RegCtl point is in the Auto mode and it is being initialized by its secondary (that is INITMAN flag is On). PV tracking is not performed in Auto mode when INITMAN is On, if Rsp is selected.



ATTENTION

The Remote Setpoint (Rsp) option is primarily used in a cascade control strategy where a RegCtl point serves as backup to a higher level control strategy running in the AM, and the higher-level control strategy provides the SP for the backup control strategy. In the backup strategy, the primary PID would be configured for the Rsp option (allowing the AM to specify the backup SP), and the secondary would be typically configured for Ddc or Spc control.

Remote cascade request

The remote cascade request flag (CASREQ) is set to Request but the actual mode is left unchanged when the RCASOPT parameter for the RegCtl point is configured for Spc, Ddc or DdcRsp. This happens when the operator or a discontinuous user program (for example, a sequence program) tries to change the mode to Cas.

The actual mode is changed to Cas only:

1. When the AM control strategy explicitly writes the mode to Cas (it should do this only after seeing a remote cascade request from the secondary).
2. If Spc is entered for the RCASOPT parameter, and the AM control strategy writes to the setpoint.
3. If Ddc or DdcRsp is entered for the RCASOPT parameter, and the AM control strategy writes to the output value OP of the RegCtl point.



ATTENTION

After CASREQ has been set to Request, any mode change causes CASREQ to be set to NotReq.

26 Regulatory Control Points

26.2 Regulatory Control Point Functional Overview

Remote cascade shed

The remote cascade shed mechanism in the HPM allows the user to substitute the local backup control strategy in the HPM for the AM control strategy if the AM or NIM fails.

When a RegCtl point that is configured for Spc, Ddc, or DdcRsp control is in Cas mode and the SP (if Spc) or the OP (if Ddc or DdcRsp) is not updated by the AM within a predefined time, the AM or the NIM is assumed to have failed. The backup control strategy is substituted by means of changing the mode to a pre-configured backup mode. The maximum time allowed between updates is specified by SHEDTIME (in seconds) and the backup mode is specified by SHEDMODE. Shedding to the backup mode can be disabled by setting SHEDTIME to 0.

When the mode is shed to the pre-configured shed mode, the remote cascade shed flag (RCASSHED) is set to On (mainly for indication at the Universal Station). Any subsequent mode changes automatically set the RCASSHED to Off. The remote cascade request flag is also set to On, which allows the AM to resume control at a later time without operator intervention.

Bad PV/Mode shed



ATTENTION

This function does not apply to the RampSoak, IncrSum, or RatioCtl algorithms.

The Regulatory Control parameter BADCTLOP determines if the mode sheds to manual on detection of a bad PV (or bad CV for algorithms that do not have a meaningful PV). For the definition of a bad PV, refer to BADPVFL in the *Parameter Reference Dictionary*.

The BADCTLOP parameter is configured on a per point basis as shown in the following table.

Table 26-4 Regulatory Control Point Bad PV/Mode Shed

BADCTLOP Selection	Output	SHED To (Mode)	Mode Attribute	Ext. Mode Switching	Comments
No Shed	Held	Held	N/A	N/A	Point resumes control after initializing on PV recovery.

BADCTLOP Selection	Output	SHED To (Mode)	Mode Attribute	Ext. Mode Switching	Comments
Shed Hold	Held	Manual	Operator	Disabled	Point is not automatically returned to the previous mode before shed to manual.
Shed Low	-6.9%				
Shed High	106.9%				
Shed Safe	Safe Op				Operator is not allowed to return to the previous mode until the bad control condition clears.

Safety Shutdown

This option allows you to implement safety interlocks that effectively shutdown a single control loop. The shutdown flag is set by a user-written program. When the shutdown flag (SHUTDOWN) is set to:

- **On**, the mode and the mode attribute are changed to Man and Oper, respectively, and the OP output is set equal to a predefined safe output value (SAFEOP), and—
 - the external-mode-switching enable state (ESWENBST) is disabled, if it is currently enabled.
 - as long as it is On, the MODE, MODATTR, ESWENBST, and OP parameter values cannot be changed.
- **Off**, the control loop must be manually restarted, and—
 - a Logic Point or CL program must be used to reset the Safety Shutdown Flag (from ON to OFF).



ATTENTION

If the point is already red tagged when the shutdown flag is turned On, the output value is not changed. Typically, the safe output value can be configured as 0% (if the valve is fully closed) or 100% (if valve fully open). In some cases it may be important to just hold the last value. This can be achieved by setting the SAFEOP parameter to NaN.

26.3 Control Input Connections

Use

Control input connections are typically used to assign "non-initializable" inputs to the configured control algorithm. They can be used to assign initializable inputs (see "Initializable inputs" in Section 26.3), but if initialization and windup protection are required, a control output connection from the primary point must be used.

Number and destination

The number of control input connections (NOCINPTS) and the destination parameter (CIDSTN) for each connection are defaulted based on the non-initializable inputs required by the control algorithm. (Refer to the individual control algorithm configuration form for the destination parameters within each algorithm) The control input connection-source parameter CISRC allows the user to specify the source of the input using the "Tagname.Parameter" format.

Sources

The inputs can be obtained from any source parameter that is a real number, an integer, or a Boolean state. (Boolean states are treated as real numbers by the algorithm. The Off state is equal to a real number of 0.0; the on state is equal to 1.0). For all RegCtl algorithms except PIDERFB, the point's control output connections are also considered input connections because the RegCtl point reads the output status before writing to it. A RegCtl point can have up to seven input and output connections that obtain non-I/O scan parameters from I/O Processors in the same HPM.

Initializable inputs

Generally, initializable inputs are stored with control output connections at the primary data point, and no input connections are required; however, in some cases it may be required to obtain initializable inputs with input connections (for example, when initialization and windup protection are not needed). To achieve this, the number of control inputs is allowed to be increased based on the initializable inputs of the control algorithm.

26.4 PV Source Selection

Applicability



ATTENTION

The PV Source Selection step in the Regulatory Control processing applies only to the Pid, PosProp, and RatioCtl algorithms.

Source

The source of the PV can be an analog input point, a PV algorithm, a Universal Station, or a user-written program.

Specified by

The source of the PV is specified by the PVSOURCE parameter, whose value can be changed by an operator, a supervisor, an engineer, or a user-written program.

Configuration

The PVSOURCE parameter is configurable only if the data point has been configured as a full point. PVSOURCE can have one of the values defined in the following table.

Table 26-5 Regulatory Control Point PV Source Selection Configuration

Value	Definition
Auto	PV is received from an analog input point or a PV algorithm. The value is in PVAUTO and its status is contained in PVAUTOST. During normal operation, the PV source is Auto, and the PV and its value status (PVSTS) become equal to PVAUTO and PVAUTOST, respectively, before PV range checks are made. When the PV source is changed from Auto to Man or Sub, the PV remains at the last value until it is changed by the operator (Man) or a program (Sub), so it doesn't "bump." In Man or Sub, the status in PVSTS is Uncertain. When the PV source is changed from Man or Sub to Auto, the PV immediately goes to the PVAUTO value. This might cause a bump in the value unless it is changed gradually to the value in PVAUTO before changing the source.
Man	The PV is entered by an operator, supervisor, or engineer at a Universal Station
Sub	The PV is entered by a user-written program. A program can store a bad value in PV, and if it does, PVSTS becomes Bad.



TIP

You can prevent PV source changes by entering OnlyAuto for the PVSRCOPT parameter. This fixes the source as AUTO and the parameter PVSOURCE is removed from the point. Configuring All in PVSRCOPT allows normal PV source selection.

26.5 PV Alarm Detection

Applicability



ATTENTION

The PV Source Selection step in the Regulatory Control processing applies only to the Pid, PosProp, and RatioCtl algorithms.

Configuration

Alarms for a RegCtl point can be configured only when the point has been configured as a full point. Alarm types supported by the RegCtl points are provided in the following table.

Table 26-6 Regulatory Control Point Bad PV Alarm Detection

Alarm Type	Algorithms
PV High/Low	Applicable to only the Pid, PosProp, and RatioCtl Regulatory Control point algorithms
PV High-High/Low-Low	Applicable to only the Pid, PosProp, and RatioCtl Regulatory Control point algorithms
PV Rate-of-Change Positive/Negative	Applicable to only the Pid, PosProp, and RatioCtl algorithms Applicable to only the Pid, PosProp, and RatioCtl Regulatory Control point algorithms
PV Significant Change	Applicable to only the Pid, PosProp, and RatioCtl Regulatory Control point algorithms
BadPV	Applicable to only the Pid, PosProp, and RatioCtl Regulatory Control point algorithms
Bad Control	Applicable to all Regulatory Control point algorithms
Deviation High/Low	Applicable to all Regulatory Control point algorithms
Advisory deviation	Applicable to all Regulatory Control point algorithms
Bad Output	Applicable to all Regulatory Control point algorithms



REFERENCE - INTERNAL

For detailed alarm information, refer to the *System Control Functions*.

26.6 External Mode Switching

Use and operation

External mode switching (EMS) is typically used to establish mode interlocks or, under certain process conditions, to restrict the use of a mode that invokes a higher level of control. External mode switching is an option and can be configured by entering Ems for the EXTSWOPT parameter. Mode changes made through external mode switching have no effect on the mode attribute of the data point, or on the normal mode and normal mode attribute of the point. When a mode change is made, the last values of the normal mode and normal mode attribute parameters stay in effect.

Flags

Each regulatory data point has three parameters that are used as flags to indicate the mode to which the point has been switched.

ESWAUTO (RegCtl)

ESWCAS (RegCtl)

ESWMAN (RegCtl)

Enabling EMS

When external mode switching is enabled by the operator or the program by setting the ESWENBST parameter to Enable, both:

- are prevented from changing the mode of the data point when the point is in the ESWMAN, ESWAUTO or ESWCAS mode as indicated in the following table.
- may disable external mode switching at any time by entering Disable for the ESWENBST parameter.

Table 26-7 Regulatory Control Point External Mode Switching

EXTSWOPT	ESWMAN	ESWAUTO	ESWCAS	Parameter's New Mode is...
<i>An Operator or Program <u>may</u> change the mode when...</i>				
EMS	X	X	X	Last Mode Requested
EMS	F	F	F	Previous Mode ¹
<i>An Operator or Program <u>may not</u> change the mode when...</i>				
not EMS	T	X	X	Man
not EMS	F	T	X	Auto ²
not EMS	F	F	T	CAS ²
1 The mode when the point was last processed.				
2 If the effective new mode is invalid for the control function, the mode will not change.				

26.7 Initialization Logic

Background

Initialization provides meaningful initial values in the data point parameters before processing is started or restarted. Separate mechanisms are provided to initialize:

- PV-related parameters.
- Control-related parameters.



CAUTION

Up to four output connections are permitted from a Regulatory Control point but the control output destinations must be all IOPs (AOs or pulse width modulated DOs) or all Regulatory Control inputs. The outputs cannot be a mix of IOPs and Regulatory Control inputs.

PV initialization purpose

The principal purpose of PV initialization is to set up starting values the first time the point is processed or the first time it is processed after recovering from a BadPV value status. PV initialization is useful for only functions involved in history collection or for dynamically varying values. Stated another way, PV initialization is required where the new value depends on the previous value.

Events causing PV initialization

The following events cause PV initialization:

- Point's execution state is changed to Active.
- HPM undergoes a warm or cold restart.
- PVAUTOST recovers from Bad value status.

Functions of PV initialization

PV initialization consists of the following functions:

- PVCALC is calculated from the PV inputs, using the steady-state portion of the equation.
- PVAUTO is made equal to PVCALC.
- No other PV processing is affected by PV initialization.



ATTENTION

With regards to PV initialization, please note that:

- calculations that don't involve time use the normal equation.
 - if PV filtering is configured, the filter dynamics are initialized to steady state.
-

Control initialization purpose

Control initialization allows normal control strategies to be re-established after they have been interrupted without "bumps" in the output to the process, and without the need for manual balancing of values to avoid such bumps.

Functions of control initialization

Control initialization compensates for changes that may have occurred since the normal control strategy was last operating. For example, an operator might have taken over control of the output to the process, so that it now has a value that is different than normal processing would calculate. The initialization procedures automatically readjust either the bias value in the data point(s) or an input to the data point(s) so that when normal control is reestablished, the output to the process does not move or "bump."

For the control algorithms, the new value is back-calculated for an input that absorbs any output change. This value and an initialization request are sent to the primary data point that provides the input. Thus, the primary absorbs the change and it must take similar action with its own primary, if it has one, so that the whole strategy can absorb the change.

Control initialization paths

By configuring a control output connection from one point (primary) to an initializable input to another point (secondary) an initialization path is created. It is along this initialization path that a value is transferred for use by a primary to absorb external process-upsets that may have occurred at the secondary.

Two or more active paths from a single primary to multiple secondaries are referred to as "fan out" connections. Where there are two or more control output connections from a primary to two or more secondaries and all of these outputs are indisposable, the primary goes into the initialization state.

The value that is to be protected from a bump (the value to back-calculate from) is obtained at the point's output or at the secondary's initializable input. When "fan out" connections to more than one output are used, the Regulatory Control output is initialized from the first disposable secondary.

At each point-processing pass, information is retrieved from all secondaries to which the data point has control output connections. The initialization data retrieved includes

- Initialization Request.
- Initialization Value.

Control initialization requests from a secondary

An initialization request from the secondary causes the control output connection on the primary to go to an "output indisposable" state, a condition where a newly generated output to the secondary has no effect on the secondary. A control output connection also has "output indisposable" status if an error has been detected when the initialization request and initialization value should have been received.

When all connections from a primary are in the "output-indisposable" state, the primary is forced to the initialized state. This causes the primary to set its initialization request. In turn, this may cause the control output connection of a preceding primary to assume the "output indisposable" state and may force that primary to be initialized as well. In this manner, the initialization state is propagated upstream to all interconnected primaries.

Control initialization state

During the initialization state, each point remains in that state until a disposable output connection is found. For points with:

- one control output connection, the primary sets its output value to the initialization value received from its secondary while in the initialized state.
- two or more control output connection, the primary sets its output value to the initialization value received from its secondary on the first processing pass when a disposable output connection is available.

When initialization is being performed for a control strategy, each data point's output is readjusted by back-calculating an initializable input or by an internal (bias) adjustment. When each point resumes normal calculations, the new output and the input value at its secondary are balanced and no bump occurs.

Indisposable outputs are not the only factor for triggering initialization. It is possible to force a back-calculation by writing to a point's output while it is in MANual mode, or a user program or a logic slot can set the control initialization flag in a point. For these cases, the point does not go to the initialization state but its primary may, because the point sent an initialization request to the primary.

Special handling is provided for connections to local I/O (for example, Analog Outputs or Digital Pulse Width Modulated Outputs). In the event that communication with the local output module is lost, the mode automatically goes to MANual to permit the operator to take control. When communication with the module is restored, back initialization to the output value occurs automatically. The operator can then return the strategy to the desired mode. This handling is triggered by loss of communications on the I/O link, failure of the I/O processor, or an I/O processor-detected power outage.

Events causing control initialization

The need to initialize a data point is indicated by external upsets that directly affect the point or it is indicated by an initialization request from a secondary data point.

Control initialization is caused by any of the following:

- A user program or logic slot has requested initialization (see “Control initialization forced by a program or logic slot” in Section 26.7).
- The point is active for the first time (an inactive to active transition).
- The point is executing the first time after a warm HPM restart.
- All control output connections were indisposable and now one or more output connections are disposable.
 - A control output connection is indisposable when a secondary has made an initialization request, or
 - A communication/configuration error has been detected in retrieving an initialization request and initialization value from a secondary.

Reasons a secondary data point requests initialization

The following are the reasons why a secondary data point sends an initialization request to its primary data point:

- The secondary isn't in Cas mode.
- The secondary is inactive.
- The initializable input to the secondary (the destination of the primary's control output connection) is not selected for a secondary that uses the Switch algorithm (configured for PV tracking) or the input is being bypassed by the Override Selector algorithm.
- The secondary is in the initialization state.

Control initialization of a point in the same HPM

For a primary and a secondary that are both in the same HPM, an enhancement is provided. This enhancement presents the operator with an immediate indication of initialization when a cascade strategy is opened or closed.

Control initialization forced by a program or logic slot

A user-written program or a logic slot can cause a data point to initialize by setting the data point's control initialization-request flag (CTRLINIT). The next time the point is processed, it initializes. CTRLINIT is cleared when the processing pass is complete. An initialization request is sent to its primary, thus propagating initialization up through the control strategy.

Limit checking during control initialization

Limit checks apply during initialization except for output rate-of-change limits.

Indication of initialization

The HMI display will indicate a data point is initializing when that point is viewed. INIT appears in the point-status field that is just below the mode indicator on a group display or a detail display.

26.8 Target Value Processing

Applicability



ATTENTION

Target Value Processing applies only to the Pid, PosProp, PIDPosPr, and RatioCtl algorithms.

Setpoint Handling

Setpoint handling takes place only if the configured control algorithm requires a setpoint. Setpoint-handling functions are as follows:

- Setpoint (SP) limits.
- SP Target-Value processing.
- PV Tracking.
- Deviation Alarming.
- Advisory Deviation-alarm processing.
- Ratio and bias options.
- Setpoint Restrictions.

Setpoint access restrictions in PID Algorithms

The table on the next page defines the activities that may write a value into the SP for PID-based regulatory control points. Also refer to Setpoint access restrictions in non-PID Algorithms as required.

Table 26-8 PID-Based Regulatory Control Algorithm Setpoint Access

MODE	BOX-IDLE or POINT ACTIVE or INITMAN	RCASOPT ATTRIB	PID Algorithms			
			PVTRK = ON		PVTRK = OFF	
			MODE ATTRB		MODE ATTRB	
			OPR	PRG	OPR	PRG
MAN	No	Any	I	I	Opr	Prg ¹
	Yes	Any	I	I	Opr	Prg ¹
Auto	No	Any	Opr	Prg ¹	Opr	Prg ¹
	Yes	None	I	I	Opr	Prg ¹
		SPC	I	I	Opr	Prg ¹
		DDC	I	I	Opr	Prg ¹
		DDCRSP	I	I	Opr	Prg ¹
		RSP	RC	RC	RC ¹	RC ¹
CAS	No	None	PC	PC	PC	PC
		SPC	RC	RC	RC	RC
		DDC	I	I	PC	PC
		DDCRSP	RC	RC	RC	RC
		RSP	PC	PC	PC	PC
	Yes	None	I	I	NCH	NCH
		SPC	I	I	NCH	NCH
		DDC	I	I	NCH	NCH

26 Regulatory Control Points
26.8 Target Value Processing

MODE	BOX-IDLE or POINT ACTIVE or INITMAN	RCASOPT ATTRIB	PID Algorithms			
			PVTRK = ON		PVTRK = OFF	
			MODE ATTRB		MODE ATTRB	
			OPR	PRG	OPR PRG	
		DDCRSP	I	I	NCH	NCH
		RSP	I	I	NCH	NCH
BCAS	No	Any	PC	PC	PC	PC
	Yes	Any	I	I	NCH	NCH
I — SP is being initialized, no change permitted. Opr — Operator from group or detail display. Prg — Discontinuous CL programs or sequence programs. PC — HPM cascade. Mainly the output connections from another control slot in this HPM or another HPM. RC — Remote cascade. These include: continuous CL programs on LCN, output connections from regulatory points in the AM, or user computers on the LCN. NCH — Operator from group or detail display. ¹ — Operator from group or detail display.						

Setpoint access restrictions in non-PID Algorithms

The following table defines the activities that may write a value into the SP for non-PID-based regulatory control points. Also refer to Setpoint access restrictions in PID Algorithms as required.

Table 26-9 Non-PID-Based Regulatory Control Algorithm Setpoint Access

MODE	BOX-IDLE or POINT ACTIVE or INITMAN	RCASOPT ATTRIB	MODE	
			OPR	PRG
Man	No	Any	I	I
	Yes		I	I
AUTO	No	Any	Opr	Prg ¹
	Yes	None	I	I
		SPC	I	I
		DDC	I	I
		DDCRSP	—	—
		RSP	—	—
CAS	No	Any	PC	PC
		SPC	RC	RC
		DDC	I	I
		DDCRSP	—	—
		RSP	—	—
	Yes	None	I	I
		SPC	I	I
		DDC	—	—

26 Regulatory Control Points

26.8 Target Value Processing

MODE	BOX-IDLE or POINT ACTIVE or INITMAN	RCASOPT ATTRIB	MODE	
			OPR	PRG
		DDCRSP	—	—
		RSP	—	—
BCAS	No	Any	PC	PC
	Yes	Any	I	I
I — SP is being initialized, no change permitted. Opr — Operator from group or detail display. Prg — Discontinuous CL programs or sequence programs. PC — HPM cascade. Mainly the output connections from another control slot in this HPM or another HPM. RC — Remote cascade. These include: continuous CL programs on LCN, output connections from regulatory points in the AM, or user computers on the LCN. NCH — Operator from group or detail display. ¹ — Operator from group or detail display.				

Setpoint limits

Setpoint limit parameters SPHILM and SPLOLM prevent setpoint values from exceeding user-configured high and low limit values. These limits are configured in the same engineering units as the SP and must be within the SP range plus extensions. Crossover of setpoint limits is not allowed. The configured setpoint limits also apply to the advisory-target value.

Setpoint limits are observed in initialization calculations. If the limits are violated by the SP value, anti-reset windup-status propagation is invoked.

Setpoint target-values

This option allows an operator or a user-written program to "ramp" the setpoint from the current value to a new value over a period of time. The option is configured through the Data Entity Builder by entering TV in setpoint option parameter SPOPT.

If the SP is to be ramped by...	then the mode attribute (MODATTR) must be...
an Operator	Oper
a User-Written Program	Prog

The standard process for entering and initiating a new SP target-value is: Once the procedure is complete, when RAMPTIME = 0, SP reaches the new value and the status in TVPROC changes to Off.

1. The desired new SP value in SPTV is entered.
2. The ramp time (in minutes) in RAMPTIME is entered.
3. Run is entered through TVROC.
4. The SP begins moving linearly toward the new value and the value in RAMPTIME decreases with time.



ATTENTION

Actions 1 and 2 cause the TVPROC parameter to go to Preset if the point is in the Auto mode, INITMAN is Off, and TVPROC is Off.

TVPROC (Action 3) can be changed to the Run state only from the Preset state.

While TVPROC contains either Preset or Run, SP high and low limits, and the SP high and low engineering-unit ranges can't be changed. The following applies to TVPROC if it is in the Run state:

If...	then the...
Mode is changed to Man	state goes to Preset
Mode is changed to Cas	state goes to Off
INITMAN is True	state goes to Preset
a store SP operation is performed	state is forced to Off

26 Regulatory Control Points

26.8 Target Value Processing

If...	then the...
SPTV > SP and the SP ¹ is Hi or LoHi	SP stops changing
SPTV > SP and the SP ¹ is not Hi or LoHi	SP ramping continues from the stop position ²
SPTV < SP and the output ¹ is Lo or HiLo	SP stops changing
none of the above are True	SP is ramped to SPTV ²

1 indicated by ARWNET parameter.

2 when SP is ramping, ARWNET is not shown of Group or Detail displays.

- SP may normally be inferred from the output windup status.
- ARWNET may be accessed from a custom display.

Tolerance Check

Release 530 and later provides a function called “SP/OP Tolerance Check.” This function uses two new parameters, called \$SPTOL and \$OPTOL, that allow you to configure an SP (setpoint) and an OP (output) tolerance value.

Manually entered values are checked against the specified tolerance. If the tolerance is violated in either a plus or a minus direction from the current set value, the operator is alerted with a beep from the keyboard and a warning message. Operator confirmation is required before the value is stored.

The tolerance check is made from the Detail Display, Group Display, and in schematic actors RS_SYS, CHG_ZONE, and USER_CZ.



ATTENTION

The SP/OP Tolerance Check applies to manually entered:

- SP and OP values for the AM, HG, and the NIM Regulatory Control points.
 - OP values for HG and NIM Analog Output points.
 - OP values for HG Analog Composite points.
-

Deviation Alarming

Configuration

Deviation (PV-SP) high and low alarms can be configured by using the alarm trip points provided by the DEVHITP and DEVLOTP parameters. In addition, alarm priorities can be established for these trip points by using the DEVHIPR and DEVLOPR parameters. Parameters DEVHIFL and DEVLOFL are used as flags to indicate that a deviation (high or low) alarm has been detected. This alarm returns to normal when the deviation (PV-SP) is less than or equal to the configured trip point minus a deadband equal to 10% of the trip point value.

Advisory deviation alarming

This option allows an operator to manually change the SP to a predetermined value. The predetermined value is usually calculated by a user-written program that stores the value in advisory setpoint parameter ADVSP rather than storing it directly in SP. Advisory-deviation alarming is selected by entering Asp for setpoint option parameter SPOPT.

This alarm type is available if the RegCtl point has been configured as a full point. When this option is selected, an alarm is generated if the difference between the PV and the value in ADVSP is greater than the trip-point value in ADVDEVTP. This alarm returns to normal when the difference between the PV and ADVSP is less than or equal to the value in ADVDEVTP minus a deadband equal to 10% of the trip-point value.

The following conditions must be true if advisory-deviation alarming is to function:

- SPOPT = Asp
- ADVDEVTP $\neq$ NaN
- ASPROC = Enable
- PV alarm status in PVVALST $\neq$ Bad
- Alarm-enable status in ALENBST $\neq$ Inhibit



ATTENTION

If the advisory-deviation alarm is present and the value of one of the above-listed configuration parameters is changed, the advisory-deviation alarm is reset.

If parameter ASPPROC = Disable, the value in ADVSP equals the value in SP.

Bad output alarm

The Regulatory Control point's Bad Output Alarm option (when enabled) generates a process alarm if one or more of the configured output connections to Analog Output or Digital Output points are broken. Broken means data cannot be pushed to a point. This alarm is cleared when all connections to the AO or DO points are good, or when the Bad Output Alarm Option is disabled.

Ratio and Bias options



ATTENTION

Ratio and Bias options apply only to the PID algorithms.

If SP target value processing or advisory deviation alarming is configured for a RegCtl point, the ratio/bias options cannot be configured for the same data point.

The ratio and bias options are configured by entering one of the following values in ratio and bias option parameter RBOPT:

- **FixRatBi**—Fixed Ratio and Bias
- **AutoRat**—Auto Ratio and Bias
- **AutoBi**—Fixed Ratio and Auto Bias

If one of these options is configured, the SP is modified before being used by the PID algorithm as follows (where SP_Store_Value is the setpoint before the modification):

$$\text{SP_Store_Value} * \text{RATIO} + \text{BIAS}$$

In normal operation (in Cas mode and INITMAN is Off), all three options work alike. RATIO and BIAS can be changed by a Universal Station operator or by user-written programs (depending on whether MODATTR contains Oper or Prog).

During initialization of this point, however, RATIO and BIAS can be changed only if they are not being initialized, based on the value in RBOPT, as follows:

- **FixRatBi**—The initialization value calculated for this point's primary is—

$$\text{RINITVAL} = (\text{SP} - \text{BIAS}) / \text{RATIO}$$

- **AutoRat**—RATIO is initialized as—

$$\text{RATIO} = (\text{SP} - \text{BIAS}) / \text{Store Value}$$

If either **RATIO** or **BIAS** attempt to go outside one of their limits, it is clamped at the limit, and **INITVAL** is calculated as defined in the following table.

Table 26-10 INITVAL Calculation with RATIO or BIAS Clamped

Ratio/Bias	Calculation
RATIO	$\text{INITVAL} = (\text{SP} - \text{BIAS}) / \text{RATIO}$...then AutoBi is initialized as: $\text{BIAS} = \text{SP} - (\text{Store_Value} * \text{RATIO})$
BIAS	$\text{INITVAL} = (\text{SP} - \text{BIAS}) / \text{RATIO}$

Ratio limits

You can configure high and low limits for the **RATIO** value that can be applied to the setpoint for Pid Algorithms. A Universal Station user with a Supervisor key can change these limits. An operator is not allowed to enter a value that exceeds these limits. If a user-written program attempts to store a value outside the limits, it is clamped to the limit. Crossover of these limits is prohibited.

You configure **RATIO** limit values using:

- **RTHILM**—Ratio high limit
- **RTLOLM**—Ratio low limit

Bias limits

Two user-setable Hi and Lo limits on the SP-related bias parameter are provided. Whenever operator or program entries are outside the limits, the entries are clamped to the closest limit. Crossover of limits is inhibited.

You can configure high and low limits for the **BIAS** value that can be applied to the setpoint for PID algorithms. A Universal Station user with a Supervisor key can change these limits. An operator is prohibited from entering a value exceeding these limits. A user-written program is clamped to the exceeded limit. Crossover of these limits is prohibited.

You configure **BIAS** limit values using:

- **BSHILM**—Bias high limit
- **BSLOLM**—Bias low limit

26.9 PV Tracking

Applicability



ATTENTION

PV Tracking applies only to the Pid algorithms.

Configuration

PV tracking is configured by entering Track for the PVTRACK parameter. During PV tracking, SP is set equal to PV whenever the cascade is broken by an operator or a program action, or the RegCtl point is a secondary (in a local cascade strategy) and the cascade is momentarily interrupted by a 1-shot initialization.

Occurrence

PV tracking occurs when:

- Mode is Man.
- Mode is Cas and RCASOPT is Ddc.
- INITMAN is On, and either the mode is not Auto, or RCASOPT is not Rsp.
- RegCtl point is being processed for the first time after becoming active.
- RegCtl point is a secondary within a local cascade-control strategy (inside the same HPM), and it is going through a 1-shot control initialization, which occurs when—
 - the control initialization-request flag CTRLINIT is On.
 - the point is being processed for the first time after the HPM state has changed to Run.
 - just recovering from a bad PV.
 - this slot has only one disposable secondary that just underwent 1-shot initialization.



ATTENTION

PV tracking (even if configured) is not done on return from a Bad PV.

26.10 Control Algorithm Calculation

Windup protection

PID algorithms are protected from windup caused by reset action. Windup status parameters are maintained that pass the status "upstream" to the primary points along the initialization path. Each PID algorithm checks its output windup status and takes appropriate action to prevent reset windup. These functions are standard and require no configuration by the user.

Windup status

The following parameters contain windup-status information:

- **ARWOP**—Output (OP) windup status.
- **ARWNET**—Windup status for SP or another initializable input.

When this point's ARWOP contains something other than Normal, integral control in the windup direction stops. Integral action in the other direction and P and D action continues.

For the remainder of the control subsystem, the windup status serves only as a warning, and not as a constraint. For example if the status in ARWNET is Lo, lowering SP won't have an immediate effect on the output of the final secondary; however, SP can be lowered if the SP low-limit has not yet been reached.

The values in the windup-status parameters indicate whether raising or lowering the associated parameter value will affect the output of the final secondary, as it should. The values for parameters ARWNET and ARWOP are as follows:

- **Normal**—Free to move in either direction.
- **Hi**—Free to move only in the lower direction.
- **Lo**—Free to move only in the upper direction.
- **HiLo**—Not free to move in any direction.

With R670 and later, when OUTIND is set to Reverse, the values of the displayed output and the related output parameters are changed. However, the value of the Output Indication does not affect the actual or the displayed values of the ARWOP parameter.

Windup status propagation

Windup status is propagated to ARWOP and ARWNET of the same point, and then from ARWNET of the secondary point to the primary point, and so on.

Propagation from secondary to primary is instantaneous if both are in the same process unit and the same HPM. Otherwise, it takes place on the next processing pass for each point.

26.11 Control Output Processing

Purpose

The primary task of control output processing is to make the control algorithm calculation available to the rest of the system (displays, printers, CL programs, other data points, and so on). Control algorithms are produced and provided in percent or engineering units (EUs) as needed.

Functions

Control output processing performs the following functions:

- Provides the output value in percent and EUs for displays, printing, CL programs, and for interpoint communications.
- Processes control output connections that send the output to the secondary data point after conversion to EUs.
- Constrains the output to the configured limits.
- Generates and propagates windup status as a result of a violation an output limit.

Accessible output parameters

The following table lists and defines the parameters which contain and provide significant output-processing information. All are accessible for displays and printing, and can be accessed by programs written in CL.

Table 26-11 Regulatory Control Point HMI Accessible Output Parameters

Parameter	Definition
CV	The result (calculated value) of calculation of the control algorithm, can be in percent or EU depending upon the control algorithm.
OP	The final control output, expressed as % of EU Range of the output.
OPEU	Final control output in Engineering Units.
CVEUHI	Output EU Range corresponding to 100% value of OP.
CVEULO	Output EU Range corresponding to 0% value of OP.

Initial control processing

During initial control processing, initialization data is fetched from the secondary points indicated by each control output connection.

The output engineering-unit range in CVEULO and CVEUHI is determined, based on the EU range of the secondary pointed to by the first active control output connection. If this connection has a communication or configuration error, the output range is set to bad and the point is aborted. If this happens, the CI connections and CO connections, scheduled for execution after initial control processing are not processed.

Normal computation

The normal computation process is as follows:

1. CV is calculated by the control algorithm.
2. OP is calculated from CV, with the units based on the range defined by CVEULO and CVEUHI. Note that the values in CVEULO and CVEUHI are determined by the engineering-units range of the secondary point to which the first active connection is made.
3. OP is checked for minimum output change, output rate-of-change, output high-limit, and output low-limit. If any of the limits is exceeded, the OP value is adjusted or clamped as applicable.
4. The windup status is set.

5. Each control output connection is processed individually. If the control output connection is disposable, then the—
 - corresponding value in the secondary point is made equal to OP, if the destination parameter is OP, otherwise it is made equal to OPEU.
 - OP or OPEU value is transferred to the secondary's destination parameter, subject to applicable limits on the destination parameter (for example, SP limits).

In Manual Mode

When in manual mode (MAN):

1. OP is set (in percent) by an operator or by a user-written program, depending on the attribute.
2. Each control output connection receives normal processing, as described above. Remaining process is as defined under "Normal Computation."

From secondary data-point

When initializing because of a request from a secondary data-point:

1. If all of the control output connections are indisposable, CV is initialized to its last value. When the first disposable control output connection becomes available, the CV is back-calculated (% to EU conversion if the destination parameter is OP) from the destination parameter of the secondary.
2. OP is calculated from CV, based on CVEULO and CVEUHI.

Output High and Low Limits

You configure high- and low-limit values for the RegCtl point output using parameters OPHILM and OPLOLM . These limits are expressed as a percentage of the output range and the limit values can range from -6.9% to 106.9%. A Universal Station user with a Supervisory key can change these limits. Crossover of these limits is not permitted.

When an output limit is reached or exceeded, windup status is propagated up through cascade strategies.

Output Rate-of-Change Limits

You can configure a maximum rate of change in percent-per-minute for output values of RegCtl points using the OPROCLM parameter. The effect of this limit is to reduce excessive rates of change in the output, to the limit. The smallest limit can't be less than 0.1 percent per point-processing interval. The default value for the limit is NaN, which eliminates the limit check.

Typically, the output rate-of-change limit is used to match the slew rate of the final control element to the control dynamics.

Use caution when setting the value of OPROCLM. This value should be set before loop tuning has taken place. When done this way, tuning accommodates any slow down in response time caused by rate limiting. If OPROCLM is changed after a loop has been tuned, it is possible for poor loop dynamics or even instability to result.

Note that when a choice is available, rate limiting should be applied to PID algorithms (PID, PIDFF, and PIDERFB) rather than regulatory control algorithms of other types. The PID algorithms support special processing to prevent windup of the CV during rate limiting. Other algorithms cannot provide this special processing.

Output Minimum-Change Limit

You can configure a minimum output-change value for RegCtl points using parameter OPMCHLM. This value is a percentage of the output-value range. If the absolute difference between the output value at one processing pass and the next doesn't equal or exceed the minimum change, the earlier value is maintained. A Universal Station user with a Supervisory key can change the minimum output-change value.

The default minimum output-change value is NaN, which eliminates the minimum change check.

This feature is used to minimize "wear and tear" on the final control device.

Output Limiting in Manual Mode

Control output connections are used to establish initializable cascade connections between the output of the RegCtl point output and other points. Control output connections are accomplished through parameter CODSTN. To assign the RegCtl output to the parameter of another data point, the user can choose from one of the following two output connection conventions (Tagname.Parameter or hardware reference address):

Tagname.Parameter

or

!MTmmSss.Parameter

Where:

1. MT is the IOP type (AO or DO).
2. mm is the IOP number in the HPM file, from 1 to 40.

3. **ss** is the slot number from 1 to 8 for analog outputs, and from 1 to 16 for digital outputs.
4. **Parameter** is the parameter in the AO, DO, or Fieldbus FBCM point to which this output value is to be written.
5. for Fieldbus, the parameter can be any of the following, as long as it exists in the specific function block—
 - **CASIN** (for AO and PID FBCM)
 - **RCASIN** (for AO and PID FBCM)
 - **ROUT** (for PID FBCM)
 - **SEL1** (for selector FBCM)
 - **SEL2** (for selector FBCM)
 - **SEL3** (for selector FBCM)

Up-to-four output connections can be configured for a RegCtl point. Initialization and wind-up protection are supported for multi-output configurations.



ATTENTION

Fieldbus does not support a control connection output when the Regulatory Control point is configured for the PIDERFB algorithm.

The RegCtl data point can write the output value to only the following destination parameters:

1. **SP**, **RATIO**, **X1**, **X2**, **X3**, and **X4** parameters of another RegCtl data point in the same HPM. When a control output connection is made to the **RATIO** parameter, the ratio high and low limits on the secondary are used as its engineering unit range. Also the secondary should be configured for a ratio bias option of auto ratio and placed in Program Cascade mode for the initialization to work correctly.
2. **X1** parameter of a RegCtl data point in another HPM or APM on the same UCN.
3. **SP** parameter of a RegCtl point in another HPM, APM, or PM on the same UCN.
4. **OP** parameter of an analog output point in the same HPM. The component form of the output connection can be used to connect to an AO point that has been configured as a component point. The following restrictions apply:

- The total number of control input and output connections fetching data from the I/O Processors must not exceed seven (prefetch limit updated in R600).
 - The analog output slot must be configured as a component point.
 - The output destinations cannot be a mix of IOPs and RegCtl points.
5. OP parameter of a digital output point that has been configured for pulse-width modulation in the same HPM.
- The total number of control input and output connections fetching data from the I/O Processors must not exceed seven (prefetch limit updated in R600).
6. Any addressable parameter of any accessible slot if the configured control algorithm is PidERFB.



ATTENTION

When a Regulatory Control point output is connected to the setpoint of a RegCtl point in another HPM, APM, or PM on the same UCN, it counts as one input and one output for the purpose of limiting the number of input/output connections going across HPMs.

Output High/Low alarms

With R510 and later software, an Output High or Output Low alarm is set when a Regulatory Control point's output value (OP) exceeds the configured high or low alarm limit. The alarm is removed when the value of OP returns toward normal past a configurable deadband.

The following parameters deal with the Output Alarms and are configurable for each point:

1. OPHITP/OPLOTP contain the Output High/Low Alarm trip points.
2. OPHIPR/OPLOPR contain the Output High/Low Alarm priorities.
3. OPHAFL/OPLAFL contain the Output High/Low Alarm flags.
4. OPALDB contains a deadband for the Output Alarms.

The output alarms are only available for Regulatory Control points configured as full points and are disabled if the trip points are not specified.

Tolerance Check



REFERENCE - INTERNAL

A Tolerance Check function applies (Release 530 and later) to the OP. For details of this function, refer to Tolerance Check under Regulatory Control Points, Target Value Processing.

Output Indication

The OUTIND parameter defines how the output of a regulatory data point is to be displayed at the Universal Station. The output display is determined by the selection of the value range, which can be:

- Direct = A 4 mA output from this data point is displayed as 0% at the Universal Station. A 20 mA output is displayed as 100%.
- Reverse = A 20 mA output from this data point is displayed as 0%. A 4 mA output is displayed as 100%.

With R670, when the value of OUTIND parameter is set to Reverse, the output indication for the output alarm trip points (OPHITP and OPLOTP) and output limits (OPHILM and OPLOLM) are reversed. The output indications for output alarm priorities (OPHIPR and OPLOPR), output alarm flags (OPHAFL and OPLAFL), and output limit exceeded flags (OPHIFL and OPLOFL) are swapped.

This option is applicable to the following regulatory-control point parameters:

Regulatory Control Point Parameters	If OUTIND = Direct, the value of the parameter is displayed as	If OUTIND = Reverse, the value of the parameter is displayed as
OPHITP (OP High Trip Point)	Output High Trip point value	Displayed OPHITP value =100.0% - Output Low Trip point value
OPLOTP (OP Low Trip Point)	Output Low Trip point value	Displayed OPLOTP value =100.0% - Output High Trip point value
OPHIPR (OP High Alarm Priority)	Output High Alarm Priority value	Output Low Alarm Priority value
OPLOPR (OP Low Alarm Priority)	Output Low Alarm Priority value	Output High Alarm Priority value
OPHAFL (OP High Alarm Flag)	Output High Alarm Flag value	Output Low Alarm Flag value

Regulatory Control Point Parameters	If OUTIND = Direct, the value of the parameter is displayed as	If OUTIND = Reverse, the value of the parameter is displayed as
OPLAFL (OP Low Alarm Flag)	Output Low Alarm Flag value	Output High Alarm Flag value
OPHILM (OP High Limit)	Output High Limit value	100% - Output Low Limit value
OPLOLM (OP Low Limit)	Output Low Limit value	100% - Output High Limit value
OPHIFL (OP High Flag)	Output High Limit Exceeded Flag value	Output Low Limit Exceeded Flag value
OPLOFL (OP Low Flag)	Output Low Limit Exceeded Flag value	Output High Limit Exceeded Flag value
SAFEOP (Safe Output)	Safe Output value	100.0% –Safe Output Value

CAUTION

When using the OUTIND parameter, Honeywell recommends you to carefully design the logic of the affected parameters as described below:

For nodes on the LCN:

Before setting the value of OUTIND to Reverse, ensure the AM/CL programs, the schematics, and the TPS applications can accommodate the modified behavior of these parameters.

For xPM nodes on the same UCN:

xPM CL programs, peer-to-peer connections, and connections within a box directly interact with the actual values of the xPM parameters.

Therefore, there is a difference between the actual values used in the UCN xPM nodes and the displayed values of the affected parameters that are shown on the LCN nodes.

26.12 Override Control

Purpose

Override control strategies are primarily used for multivariable constraint control. In such a strategy, control of a single process variable is based on one of two or more PVs. These

multiple PVs are referred to as "constraints." A selector algorithm selects the PV to be used for control. When a different PV is selected, the former PV has been overridden—the new PV has constrained the others.

Most often, with override control, the objective is to achieve the best possible control of a PV without violating any of the constraints. The manipulated variable is driven by the output of an Override Selector algorithm that selects the highest or the lowest of up to four inputs. A PID that is in a cascade strategy (but is not selected) is prevented from winding up with the help of override initialization. In the rest of this section, the term "O/R selector" is used to mean an Override Selector control algorithm that is configured for external initialization. Refer to the detailed description of the Override Selector algorithm in this section.

Applications

The following are example applications for override control:

- **Boiler Control**, in a typical strategy—
 - the constraint on the fuel flow (SP of the fuel-flow PID controller) may be that it cannot exceed the actual air flow, multiplied by a ratio (which may be computed by the O₂ controller).
 - In this case, the fuel flow is the primary PV to be controlled and the actual air-flow PV is the "constraint".
- **Heating**, in some applications—
 - it may be desirable to control the temperature of the feed (the primary PV) as well as possible, without ever letting the temperature of the hottest part of the pot (or the heat exchanger) exceed a safe limit.
 - In this case, the safe limit on the pot temperature is the "constraint".
- **Oven Temperature-Control**, in a typical application—
 - temperatures can be measured at several places in the oven, and it may be desirable to control all these PVs by controlling one valve.
 - One PID controller can be used for each PV, and the PID controller representing the PV that is farthest from its SP can be allowed to control the valve.
 - In this case, there is no primary PV, because all the PVs have the same importance and each PID controller represents a constraint on the others.

Status and feedback

Regulatory Control algorithm data points and Override Selector Control algorithms contain the parameters provided to support O/R strategies.

Table 26-12 Regulatory Control Override Control Status and Feedback Parameters

Algorithm	Parameter	Override Status or Definition
Regulatory Control	PTORST	- NotCon – The point is not connected to an O/R selector. Strictly, it means that this point is not on an initializable path to an O/R Selector or it is now being initialized. PTORST defaults to this value. - Sel – The point is a part of an O/R control strategy and is now selected. - NotSel – The point is part of an O/R control strategy and is not selected by the O/R selector.
	OROPT	- When On, the feedback value is propagated to non-selected primaries of the override selector algorithm. - When Off, the feedback value is not propagated. However, non-selected primaries are kept from winding up by propagating a windup status opposite of the OrSel equation (Hi-Lo) in addition to the OrSel point windup status (ARWNET) to the non-selected primaries. This windup status propagation prohibits the non-selected primaries of the OrSel from winding up in the direction opposite of the OrSel selection equation.
Override Selector	OROFFSET	- When On, PID output is initialized to: Feedback Value + Gain * Error. - When Off, PID output is initialized to only the Feedback value.



ATTENTION

The status in PTORST becomes NotCon when:

- the point is returned from inactive to active status.
- it undergoes a cold start.
- it is initialized.

Processing example



ATTENTION

There must be at least one PID controller in the O/R strategy.


The override status (Feedback Value) can be propagated to a maximum of five primaries.

All points downstream of the O/R selector are processed at their specified interval.

The override portion of the control strategy includes the Override Selector point and all points "upstream" from it. In this example, the points named TAG-A, TAG-B, TAG-C, TAG-D, and TAG-E constitute the O/R strategy.

1. All points upstream of the O/R selector are processed on normal cycles (highest slot index to lowest). In the example, the points can be processed in TAG-D, TAG-A, TAG-B, TAG-C order. Their PV and control algorithms are executed normally. The next point to be processed is the O/R selector (TAG-E in the example). It selects one input. Assume input X2 is selected.
2. The O/R selector then propagates appropriate O/R status to each one of its own initializing primaries. It also propagates the O/R-feedback value to the non-selected, initializing primaries. In the example, TAG-E propagates O/R status of Sel to TAG-C because input X2 is selected, and O/R-status Notsel to TAG-B. Further, TAG-E propagates the O/R-feedback value to the non-selected, initializing primary, TAG-B. TAG-D does not receive the O/R status nor the feedback value because it is not an initializing primary.
3. Each primary (provided it is in Cas mode), in turn, propagates O/R status to its own primaries (if any). It also propagates O/R feedback upstream, if it is not selected. In the example, TAG-B would propagate Notsel and an O/R feedback value to TAG-A.
4. The propagation upstream continues until there are no more primaries. The output of any PID in a cascade chain, connected to a non-selected input of the O/R selector is initialized to override-feedback value, plus gain times deviation (PV-SP) if OROFFSET is On. If OROFFSET is Off, it is initialized to the override-feedback value. Because TAG-A contains a PID algorithm and is not selected, it undergoes O/R initialization.
5. The whole cycle is repeated.

Figure 26-3 Override Control Strategy Example

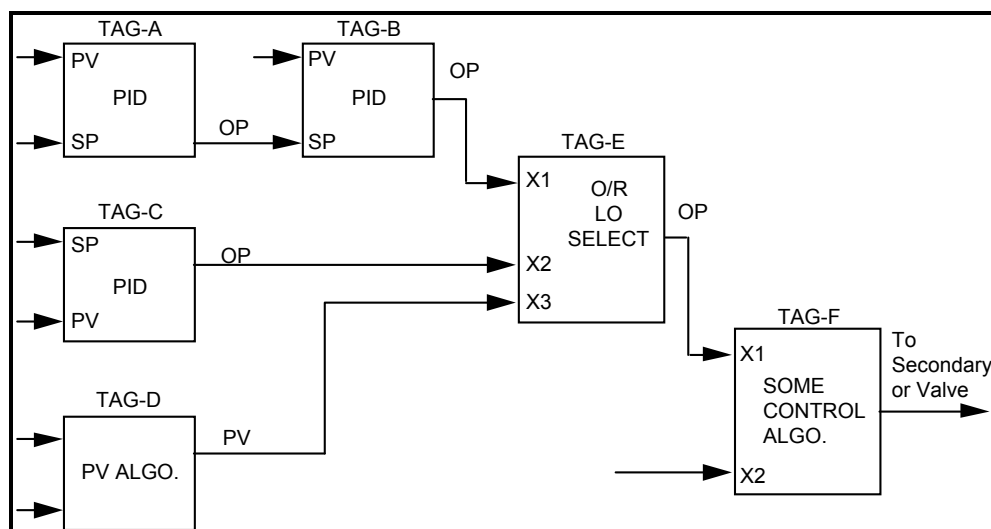

Multiple override selectors in a strategy

When multiple override selectors are included in a control strategy, the O/R-feedback propagation is initiated by only the most downstream O/R selector.

In the example override control strategy defined in Override Control, if TAG-F were also an O/R selector, the O/R strategy would consist of points TAG-A, TAG-B, TAG-C, TAG-D, TAG-E, and TAG-F. O/R propagation would be initiated by TAG-F and not TAG-E, as before.

Initialization in an override strategy

When a cascade is broken in an override strategy, initialization propagation supersedes override propagation.

In the example override control strategy defined in Override Control, if point TAG-B is placed in Man mode, it doesn't propagate O/R status or an O/R-feedback value to TAG-A. TAG-A's O/R status then is Notcon.

Guidelines for using override control

Follow these guidelines to configure properly functioning override strategies:

- **Proportional and Derivative Action on PIDs—**
 - PIDs in an override scheme may be configured with proportional and derivative action on SP.
 - use of these actions should be carefully considered because undesired results may occur, such as momentary oscillation caused by "kicks" in the error.
- **Boundaries—**
 - the entire O/R strategy must be within the same HPM.
 - the number of primaries for initiating the O/R strategy must be less-than or equal to 5.
- **Fanout—**
 - fanout control output connections are not allowed in an O/R strategy.
 - all primaries upstream from the O/R-selector point can have only one control output connection.

27. PID Control Algorithm

27.1 Functional Overview

Family

The PID control algorithm is a member of the Regulatory Control algorithms.

Purpose

The PID algorithm is used as a controller that either directly moves a control device (valve) in the process, or provides an input to another data point.

Description

The PID control algorithm is a regulatory control function that operates as a proportional-integral-derivative (PID) controller. You can choose one of two forms of this algorithm: the interactive (or real) form and the non-interactive (or ideal) form.

It operates to reduce error in the control loop to zero. Error is represented by the difference between the process variable in percent (PVP) and the setpoint in percent (SPP). The control-algorithm output value (CV) is also calculated as a percentage of the configured engineering-units range for the data point that uses this algorithm.

This algorithm supports all remote cascade options. PV source selection is supported if the point is configured "full."

Inputs and outputs

As shown in the following figure, the PID algorithm requires only one input connection. The default for number of input connections is 1; however, it can be increased to 2, allowing the SP to be fetched with an input connection. When the SP is fetched, the normal operating mode of the point is usually affected.


Input sources for a secondary include another data point on the same UCN, an AM data point, or a point properly configured in another CM with proper access level. If the remote cascade connection is coming from a regulatory data point in the AM, it handles everything automatically.

27 PID Control Algorithm

27.1 Functional Overview

The output of this algorithm is normally "floating," because of the dynamics of the integral and derivative terms. Internally, the output is calculated as increments of output change, but the increments are accumulated to provide a full-value output, thus simplifying the techniques used to achieve "bumpless" outputs when modes or tuning constants are changed.

Figure 27-1 PID Control Algorithm Functional Diagram

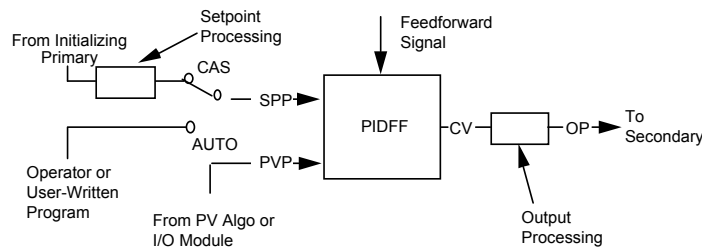

PID Forms: Interactive (Real)
Noninteractive (Ideal)

Equations:

- A: Full PID
- B: PI on error, D on PV change only
- C: I on error, PD on PV change only
- D: Integral control only

Feedforward Action: Additive, Scale and Add
Multiplicative; Scale and Multiply

Use

If the HPM's PID point is:

- a primary for another data point in the same or another HPM (including APMs and PMs), then its output is connected to the SP of the other data point (through Tagname.Parameter).
- directly controlling a valve, then its output is connected to:
 - the output of an Analog or Digital IOP through "Tagname.Parameter", or
 - the hardware reference address !A0mmSss.OP or !D0mmSss.OP (where mm is the IOP card number in the HPM, and ss is the slot number of the output on the IOP card).
- a secondary for another data point, then it can be configured to receive an input from another source.



ATTENTION

In all other cases (including the continuous CL programs in the AM directly writing to the HPM), the you must take care to assure:

- the remote device must.
 - use "continuous_control" access level for stores to SP, OP, and MODE parameters.
 - handle mode changes for closing the cascade.
 - initialization for bumpless mode transfers.
 - windup protection.
-

27.2 Options and Special Features

Interactive and Non-interactive PID forms

During configuration, you select from one of the following two forms:

- **Interactive (Real) Form**, which emulates traditional pneumatic-PID controllers. The advantage of this form is that the poles (lags) and zeros (leads), both of which must be real, can be easily placed. In this form—
 - P, I, and D terms are calculated as the sum of P and I, multiplied by D.
 - D interacts in the time domain with the P and I terms.
- **Non-interactive (Ideal) Form**, which is often called the digital-computer version of the PID controller. In this form —
 - P, I, and D are added in the time domain.
 - D is added as a damped derivative to limit peak amplitude.

Engineering Unit ranges

The PV engineering unit range (PVEULO and PVEUHI) must be specified. The setpoint engineering unit range (SPEULO and SPEUHI) always follows the PV range. The output engineering unit range (CVEULO and CVEUHI) is derived from the secondary if the number of output connections is greater than 0, otherwise it must be specified.

Control terms

You select the combinations of proportion, integral, and derivative control terms by choosing Equation A, B, C, or D. The equations function as follows (see “Equations” in Section 27.3):

- **Equation A—**
 - all three terms (P, I, and D) act on the error (PV - SP).
- **Equation B—**
 - proportional (P) and integral (I) terms act on error (PV - SP).
 - derivative (D) acts on PV changes.
 - used to eliminate derivative spikes in control action that occur with quick changes in the setpoint.
- **Equation C—**
 - integral (I) term acts on error (PV - SP).
 - proportion (P) and derivative (D) terms act on PV changes.
 - provides the smoothest and slowest response to setpoint changes.
- **Equation D—**
 - integral (I) control only.

Single term control

When you use equation A, B, or C, the integral or derivative terms can be eliminated by setting their time constants to 0. Setting both T1 and T2 to 0 results in only proportional control.

Use Equation D to achieve only integral control.

Direct and Reverse control action

When configuring a data point that uses the PID algorithm, you can select direct-control action or reverse-control action. You can also change the control action through the detail display if you have an engineer's key, or a user-written program can change the control action. The control action can be changed at the Universal Station or by a program, only while the data point is in Man mode. The attribute must be appropriate (Oper or Prog) for the change to be accepted.

Changing the control action effectively changes the sign of the gain. With direct action, an increase in PV increases output; with reverse action, an increase in PV decreases output.



TIP

Control Action	If the PVP...	the Error...	and the CV...
<i>Direct</i>	↑ Increases	↑ Increases	↑ Increases
<i>Reverse</i>	↑ Increases	↑ Increases	↓ Decreases

PV tracking

PV tracking is typically chosen when the data point is a secondary in a cascade control strategy, because it allows the PID to resume control with no error, after the point has been in Man mode or is initialized.

It can also be used when the data point is the ultimate primary point. In such a case, a startup procedure could be used where the point is started in Man mode and the valve manually adjusted to bring the PV close to the desired value, and the data point would then be switched to Auto.

PV tracking (even if configured) is not done on return from a Bad PV.

PV tracking is configured by setting PVTRACK to Track. If configured, SP is set equal to PV when the cascade is broken by an operator, a program action, or when this data point is a secondary in a local cascade strategy and the cascade is momentarily interrupted by one-shot initialization; that is, when the following conditions exist:

- the data point that uses this algorithm is in Man mode.
- the mode of this data point is Cas and RCASOPT = Ddc.
- INITMAN = On, and either the—
 - mode is not Auto, or
 - RCASOPT is not Rsp.

- the first time the data point is processed after becoming active.
- this slot is a secondary within a local (inside the same HPM) and is going through 1-shot control initialization.



ATTENTION

1-shot control initialization occurs when:

- the control initialization request flag (CTRLINIT) is On.
 - this slot is being processed for the first time after the HPM state has changed to RUN (OK).
 - this slot has just recovered from a bad PV.
 - this slot has only one disposable secondary that just underwent 1-shot initialization.
-

Gain options

When configuring a data point that uses the PID algorithm, and equations A, B, or C, you can choose any of the four gain options listed in the following table.

Table 27-1 Pid Control Algorithm Gain Options

Gain Option	Description
Linear Gain	The most commonly used gain option. You set the gain, K, in the chosen equation. The default value for K is 1.
Gap Gain Modification¹	Used to reduce the sensitivity of the control action when the PV is in a narrow band (gap) around the setpoint. The size of this band is specified by the user. K, as used in the chosen equation is derived as follows: • if $(SP - GAPLO) \leq PV \leq (SP + GAPHI)$, then— $K = KLIN * KGAP$ • if PV is outside the gap, then— $K = KLIN$ If the resulting value in K exceeds 240.0, it is clamped at 240.0.

Gain Option	Description
Nonlinear Gain Modification²	Provides control action proportional to the square of the error, rather than the error itself. The gain, K, used by the chosen equation, is derived as follows: $K = KLIN * KNL$ or... $KNL = NLFM + \frac{NLGAIN * (PVP - SPP)}{100}$
External Gain Modification³	Compensates for nonlinear-process gain. The gain, K, used by the chosen equation, is modified by an input value that can be from the process, from a PV calculated from a process input by a PV algorithm, or from a user-written program. K is derived as follows: $K = KLIN * KEXT$ If the resulting value in K exceeds 240.0, it is clamped at 240.0.
¹ KLIN = Linear-gain parameter, in percent-per-percent. Range is 0.0 to 240.0, and the value is tuned at a Universal Station. Default = 1.0. KGAP = Gain-modification factor, specified by the user. Range is 0.0 to 1.0. Default = 1.0. GAPLO = Bottom limit of the gap in the same engineering units as the PV. Can be any value ≥ 0.0. Default = 0. GAPHI = Upper limit of the gap in the same engineering units as the PV. Can be any value ≥ 0.0. Default = 0. ² KLIN = Same as for gap gain. KNL = Nonlinear-gain modifier. NLFM = Nonlinear-gain form. 0 or 1, as specified by the user. Default = 1. ³ NLGAIN = Nonlinear gain, specified by the user. Value ranges from 0.0 to 240.0.default = 0. PVP = PV in percent. SPP = SP in percent.	



TIP

Regarding the External Gain Modification option:

- when used to compensate for nonlinear-process gain the PID gain may be tuned independently of the operating point of the process. For example—
 - In controlling the level in a tank whose cross section is not constant, the gain could be modified to compensate for the nonlinear rate of level change that is caused by the changing shape of the tank.
 - The General Linearization PV algorithm (subsection 7.9.8) could be used to compute the inverse of the level-change characteristic, and the resulting PV could be used to modify the level-control gain.
- it is possible to use this option for multiplicative-feedforward control, but the PID with Feedforward-control algorithm is a better choice as it provides a better operator interface and better recovery from a "bad" feedforward input.

Windup handling

When the output of this algorithm reaches the user-specified output limits, or reaches the setpoint limits of the data point's secondary, or when a woundup-status indication is received from the secondary, the PID algorithm stops calculating the integral term but the calculation of the proportional and derivative terms continues.

This is the same way that windup conditions are handled in Basic Controllers, Multifunction Controllers, and Extended Controllers.

Output suppression

This feature suppresses output "kicks" when switching to cascade (Cas) mode.

Without this suppression feature, the first setpoint change after switching from Man or Auto to Cas mode could cause a sudden move (kick) in the output because of the proportional or derivative terms. This "kick" occurs when, for some reason, the primary data point's output is not initialized, and an abrupt change in the setpoint occurs when Cas mode resumes.

To suppress this "kick," the proportional and derivative terms are not calculated the first time the PID data point is processed after changing to Cas mode.



TIP

This feature is especially useful when the PID point is one of two or more secondaries of its primary data point. When this data point is changed to Cas mode, even if the primary is not initialized, the output of this data point does not bump the first time it is processed.

Initializing PID Output Without Affecting Dynamics

A logic slot or a user-written program in the HPM, AM, or a CM (FORTRAN or Pascal) can store a value in the CV parameter of the PID data point, even while the algorithm is doing its normal, incremental PID calculation. This may change the full-value output of the data point, but it has no effect on the continuing incrementation or decrementation of the output. It is possible, therefore, for a user-written program to initialize a PID output without affecting the dynamics of the PID calculations, and without initializing the output of the primary data point.



TIP

As an example of the usefulness of this feature, consider a single PID that is controlling temperature by controlling the flow of either gas or oil. This PID's output is connected to both flow controllers, but only one secondary is in cascade at any time.

When a change from one fuel to the other is made:

- the user-written program initializes the output of the temperature-controller PID by storing a new, full-value output in CV
- the cascade connection is switched from one to the other, and the dynamic compensation of the flow of the new fuel proceeds
- the value stored in CV is the setpoint of the new secondary in percent (SPP)

Through this technique, the full-value output of the primary has been initialized without affecting its dynamic calculations, so the fuel switchover is quick and smooth.

Restrictions and recommendations for some values

The following are restrictions and recommendations for some of the values used with this algorithm:

Restrictions

- 1 The specified engineering units range for the PV also applies to the SP

Recommendations

- 1 For best performance, we recommend that the integral (T1) and derivative (T2) time constants be within the following ranges:
 - $T1 > 20.0 * TS$
 - $T2 > 100.0 * TS$ for the interactive (real) form of the PID
 - $T2 > 10.0 * TS$ for the non-interactive (ideal) form of the PID
 - 2 For the interactive form of the PID, if:
 - $T1 > 0$ but $< 2.0 * TS$, it is clamped to $2.0 * TS$
 - $T2 > 0$ but $< 10.0 * TS$, it is clamped to $0.0 * TS$
-

Bias options

Ratio control can be achieved by modifying the setpoint input to the PID algorithm by a RATIO of some other process point that is stored to through a control output connection, for example, a fuel-to-air ratio in furnace control (it can also be accomplished with the Ratio Control algorithm. When configuring a PID data point, you can select one of the following options for modifying the setpoint through the RBOPT parameter:

- No ratio or bias
- Fixed ratio and bias
- Auto ratio (fixed bias)
- Auto bias (fixed ratio)

If you select one of the ratio and bias options, configured or operator-entered ratio and bias values are used to modify the setpoint (by multiplying it by the ratio and adding the bias value) only while the data point is in Cas mode. In Auto mode, the ratio calculation does not occur because this option is intended to receive the process value to be modified by the ratio, only from another data point (which can happen only in the Cas mode).

The "Auto ratio and Auto bias" options adjust the ratio or bias while the data point is in Auto or Man modes, or is undergoing initialization, so that when it returns to Cas mode, the new SP won't "bump" the process. With:

- **Auto ratio**, the operator can—
 - change only bias; ratio is calculated to maintain the same setpoint when the mode is changed to Cas.
 - change the ratio in Cas mode.
- **Auto bias**, the operator can—
 - change only ratio; bias is calculated to maintain the same setpoint when the mode is changed to Cas.
 - change the bias in Cas mode.

Modification of the setpoint by a ratio and a bias is actually handled by setpoint processing rather than by the PID algorithm. It is applied to only PID setpoints.

These options allow this one algorithm to perform PID Ratio, PID Auto Ratio, and PID Auto Bias functions.

The parameters used for these options are RBOPT, RATIO, BIAS, RTHILM, RTLOLM, BSHILM, and BSLOLM.

Operating modes

The PID algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas – If RCASOPT = Spc or Ddc or DdcRsp

Remote Cascade options

All Remote Cascade Options are supported: Spc, Ddc, DdcRsp and Rsp.

Restart or Point Activation

On a warm restart, or when the data point is activated, initialization takes place.

Error Handling

If the status of the PV value goes bad, the CV value is changed to bad (NaN) and the data point remains in the current mode. When the PV-value status returns to normal, the CV value is initialized and the PID dynamics are returned to a steady state. An initialization request and initialization value is sent to the primary data point.

27.3 Equations

Background

You can select one of four equations when you configure a data point that uses the PID control algorithm. Each equation differs in the interactive and non-interactive forms of the algorithm. The following tables provide a description of each equation and its Interactive (Real) and Non-interactive (Ideal) forms. The following equations are supported:

- Equation A where – P, I, and D act on the error
- Equation B where – P and I act on the error, D acts on PV changes
- Equation C where – I acts on the error, and P and D act on PV changes
- Equation C where – Integral (I) control only is supported

Equation legend

When reviewing these equations, please note that:

- CV = output of the PID algorithm, full value in percent
- a = for the—
 - Interactive form, a constant equal to $0.1 \cdot \frac{1}{a}$ is the high-frequency gain or rate amplitude
 - Non-interactive form, a constant equal to $\frac{1}{16}$
- PVP = process variable in percent
- SPP = setpoint in percent
- S = laplace operator
- T1 = integral time constant in minutes per repeat for interactive form
- T2 = derivative time constant in minutes



REFERENCE - INTERNAL

Certain restrictions and recommendations apply to the integral and derivative time constants, refer to *Restrictions and recommendations for some values* for more information.

Tuning Conversions from Interactive to Non-Interactive PID

PID algorithms are implemented from the following transfer functions:

Interactive PID

$$\frac{CV_{(s)}}{e_{(s)}} = K \frac{(T_1 s + 1)(T_2 s + 1)}{T_1 s (\alpha T_2 s + 1)} \quad (1)$$

Non-Interactive PID

$$\frac{CV_{(s)}}{e_{(s)}} = K_{ni} \left(1 + \frac{1}{T_I s} + T_D \frac{s}{(\alpha T_{df} s + 1)} \right) \quad (2)$$

If the rate limiters are ignored the transfer functions take on the following forms:

Interactive PID

$$\frac{CV_{(s)}}{e_{(s)}} = K \frac{(T_1 s + 1)(T_2 s + 1)}{T_1 s} \quad (3)$$

Non-Interactive PID

$$\frac{CV_{(s)}}{e_{(s)}} = K_{ni} \left(1 + \frac{1}{T_I s} + T_D s \right) \quad (4)$$

Equation (3) can be arithmetically manipulated to obtain the form of equation (4) by multiplying out the nominator and then converting to a sum:

$$\frac{CV_{(s)}}{e_{(s)}} = K \frac{T_1 T_2 s^2 + (T_1 + T_2)s + 1}{T_1 s}$$

$$\frac{CV_{(s)}}{e_{(s)}} = K \left(\frac{T_1 T_2 s^2}{T_1 s} + \frac{(T_1 + T_2)s}{T_1 s} + \frac{1}{T_1 s} \right)$$

$$\frac{CV_{(s)}}{e_{(s)}} = K \left(\frac{T_1 T_2 s}{T_1} + \frac{(T_1 + T_2)}{T_1} + \frac{1}{T_1 s} \right)$$

$$\frac{CV_{(s)}}{e_{(s)}} = K \frac{T_1 + T_2}{T_1} \left(\frac{T_1 T_2 s}{T_1 + T_2} + 1 + \frac{1}{(T_1 + T_2)s} \right)$$

$$\frac{CV_{(s)}}{e_{(s)}} = K \left(1 + \frac{T_2}{T_1} \right) \left(1 + \frac{1}{(T_1 + T_2)s} + \frac{T_1 T_2}{(T_1 + T_2)} s \right) \quad (5)$$

Comparing the respective coefficients of equations (4) and (5) gives the Non-Interactive PID tuning coefficients in terms of the Interactive PID tuning parameters:

$$K_{ni} = K \left(1 + \frac{T_2}{T_1} \right); \quad T_I = T_1 + T_2;$$

Equation A

Table 27-2 Pid Control Algorithm - Equation A

Equation A
Description: P, I, and D act on the error
Interactive (Real) Form: $CV_s = K * \left[\frac{1 + T1 * s}{T1 * s} * \frac{1 + T2 * s}{1 + a * T2 * s} * (PVP_s - SPP_s) \right]$
Non-interactive (Ideal) Form: $CV_s = K * \left[\frac{1 + T1 * s}{T1 * s} * \frac{1 + T2 * s}{1 + a * T2 * s} * (PVP_s - SPP_s) \right]$

Equation B

Table 27-3 Pid Control Algorithm - Equation B

Equation B
Description: P and I act on error, D acts on PV Used to eliminate derivative spikes in control action that occur with quick changes in the setpoint
Interactive (Real) Form: $CV_s = K * \left[\frac{1 + T1 * s}{T1 * s} * \frac{1 + T2 * s}{1 + a * T2 * s} * PVP_s - \frac{1 + T1 * s}{T1 * s} * SPP_s \right]$
Non-interactive (Ideal) Form: $CV_s = K * \left[\left(\frac{1 + T1 * s}{T1 * s} + \frac{(T2 * s)}{1 + a * T2 * s} \right) * PVP_s - \frac{1 + T1 * s}{T1 * s} * SPP_s \right]$

Equation C

Table 27-4 Pid Control Algorithm - Equation C

Equation C
Description: I acts on error, P and D act on PV Provides the smoothest and slowest response to setpoint changes
Interactive (Real) Form: $CVs = K * \left[\frac{1 + T1 * s}{T1 * s} * \frac{1 + T2 * s}{1 + a * T2 * s} * PVPs - \frac{1}{T1 * s} * SPPs \right]$
Non-interactive (Ideal) Form: $CVs = K * \left[\left(\frac{1 + T1 * s}{T1 * s} + \frac{(T2 * s)}{1 + a * T2 * s} \right) * PVPs - \frac{1}{T1 * s} * SPPs \right]$

Equation D

Table 27-5 Pid Control Algorithm - Equation D

Equation D
Description: Integral control, only
Interactive (Real) Form: $CVs = \frac{1}{T1 * s} * (PVPs - SPPs)$
Non-interactive (Ideal) Form: $CVs = \frac{1}{T1 * s} * (PVPs - SPPs)$

27.4 Initialization


When the output destination of the primary is to the secondary, initialization occurs as follows:

- When the control initialization request flag (CTRLINIT) is on.
- When this slot is being processed for the first time after the HPM state (APMMSTS) has changed to Run or OK.
- When this slot is just recovering from a Bad PV.
- When this slot has only one disposable secondary that just underwent 1-shot initialization.
- When the output is indisposable (when the mode of the secondary slot is not in Cas).

27.5 Override Feedback Processing

When a PID point's secondary uses an Override Selector algorithm then the actions described in the following table occur.

Figure 27-2 Override Feedback Processing Diagram

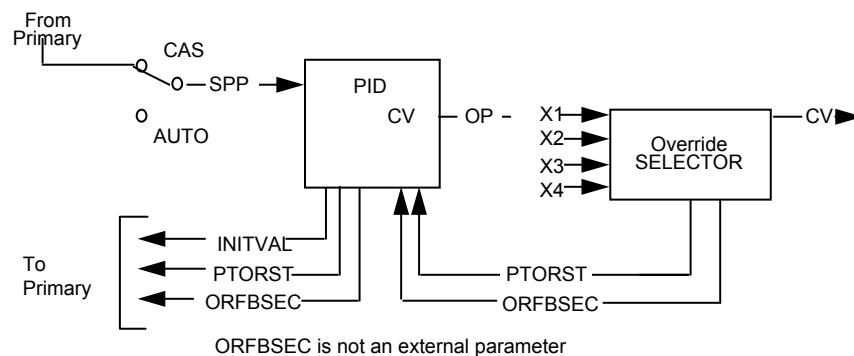

Action	Description
1	When override feedback is propagated, override status is returned in PTORST to the PID point as one of the following: • Not Connected • Selected • Not Selected
2	When the PID point is processed, if the status is returned as— • Not Connected, then there is no action • Not Selected <i>and</i> if the PID point's mode is Auto or Cas <i>and</i> CV is not equal to NaN, then— – in Direct-Control if OROFFSET = On ($CV = ORFBSEC^{**} + GAIN * ERROR$) the PID point's CV is initialized as $CV = ORFBSEC + K * (PVP - SPP)$ – in Reverse-Control if OROFFSET = On ($CV = ORFBSEC^{**} + GAIN * ERROR$) the PID point's CV is initialized as $CV = ORFBSEC - K * (PVP - SPP)$ (where $K * (PVP - SPP)$ = offset value for Equations A, B, and C; $K = 1$ for Equation D)



ATTENTION

The following important notes apply to Override Feedback processing:

- When the PID point is Not Selected and is in Cas mode an override-feedback value is calculated as follows and sent to the primary:
 - If RBOPT is not equal to NoRatBi, then $ORFB = \frac{PV - BIAS}{RATIO}$
- If RBOPT is equal to NoRatBi, then $ORFB = PV$.
- The not connected/not selected/selected status received from the PID's secondary, is also sent on to the primary.
- If the offset value is in such a direction that it causes the non-selected PID to become selected, the offset values will be set to 0.0.

* ORFBSEC is not an external parameter

27.6 Control Output Connection

Control outputs can be to the following destinations:

- SP, RATIO, X1, X2, X3, and X4 parameters of another control slot in the same HPM box[†].
- When output connections are made to RATIO, the secondary mode should be Cas and MODATTR should be PROGRAM and RBOPT should be AutoRat.
- SP of a control slot in another HPM (or APM or PM) box on the same Universal Control Network[†].
- X1 input of a control slot in another HPM (or APM) on the same Universal Control Network.



ATTENTION

[†] Such a connection counts as one output and one input for the purpose of limiting the number of UCN connections.

When output connections are not to any of the above, they can be to

- OP parameter of an analog output slot inside an AO IOP in the same HPM box*. AO point must be configured as a component point.
- OP parameter of a digital output slot (configured for DOWTYPE = PWM) in the same HPM box*.
- Any addressable parameter of any accessible slot if the control algorithm is PID with external reset feedback.



ATTENTION

Output does not go to a device on the Data Hiway (MC, EC, CB).

* See "Control Output Connection", for restrictions and additional information

28. PID w/Feedforward Control Algorithm

28.1 Functional Overview

Family

The PID with Feedforward control algorithm is a member of the Regulatory Control algorithms.

Purpose

The PID with Feedforward (PIDFF) control algorithm is used as a controller that either directly moves a control device (valve) in the process, or provides an input to another data point. It is identical to the PID Control Algorithm, Purpose, except as defined below herein.

Description

The PID Feedforward Control Algorithm (PIDFF) is a regulatory control function that, like the PID Control Algorithm, Description, operates as a proportional-integral-derivative (PID) controller except that it:

- accepts a—
 - feedforward signal to be added to, or multiplied by, the algorithm's incremental output, before the full-value output is accumulated.
 - value that is representative of some condition in the process, to be combined with the PID's incremental output before the full-value output is accumulated.
- lets you combine a feedforward signal with the PID output without using another data point or algorithm to do it.

This algorithm supports all remote cascade options. PV source selection is supported if the point is configured "full."




REFERENCE - INTERNAL

For operational additional operational details of the PID with Feedforward (PIDFF) Control Algorithm, refer to PID Control Algorithm, Functional Overview.

Inputs and Outputs

As shown in the following figure, the PIDFF algorithm requires two input connections (from PV processing and FF inputs). The inputs can be increased to three, allowing the SP to be fetched with an input connection.

Figure 28-1 PIDFF Control Algorithm Functional Diagram

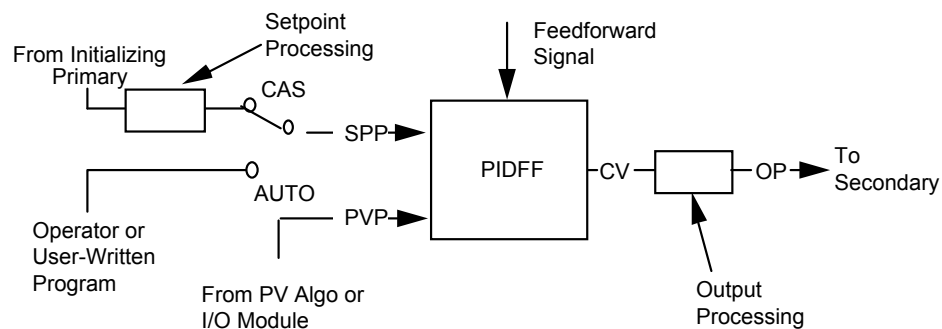

PID Forms: Interactive (Real)
Noninteractive (Ideal)

Equations:


- A: Full PID
- B: PI on error, D on PV change only
- C: I on error, PD on PV change only
- D: Integral control only

Feedforward Action: Additive, Scale and Add
Multiplicative; Scale and Multiply

Feedforward

The feedforward signal can be obtained from an analog-input point, and it is often subjected to dead-time compensation or lead-lag compensation before being connected to the FF input of this algorithm. That compensation can be provided by algorithms such as the Variable Dead-Time with Lead-Lag Compensation PV. The following figure shows an example of such a strategy.

Figure 28-2 PIDFF Control Algorithm in Feed Heater Example

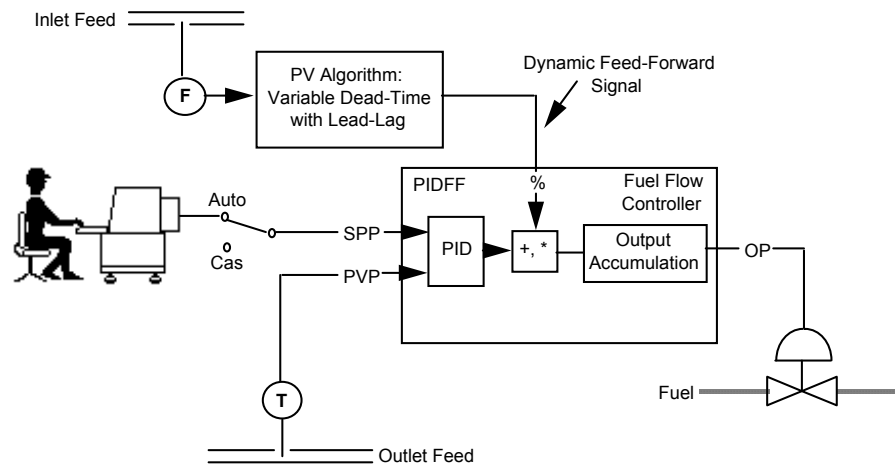

In this example, if:

- **Additive-feedforward** action is chosen, the feedforward signal is:
 - multiplied by a user-specified scale factor (KF).
 - then added to the incremental output of the PID computation.
- **Multiplicative feedforward** action is chosen, the feedforward signal is:
 - multiplied by the scale factor (KF).
 - then multiplied by the full value output of the PID computation.



TIP

Additive-feedforward action, as shown in the example, would permit you to use the scale factor that could be used to convert an engineering-units input to a percentage.

Multiplicative feedforward action is typically used to compensate for variations in process gain that are caused by changes in throughput.

For example if the feed rate is doubled in a heating application twice the amount of fuel might be required, which is the equivalent to doubling the process gain.

Use

The use of the PID Feedforward Control Algorithm (PIDFF) is the same as the PID Control Algorithm, Use.

28.2 Options and Special Features

Relationships to the PID control algorithm

All of the following PID Control-algorithm options and special features apply to the PID Feedforward Algorithm:

- Interactive and Non-interactive PID forms
- Engineering Unit ranges
- Control terms
- Single term control
- Direct and Reverse control action
- PV tracking
- Gain options
- Windup handling
- Output suppression
- Initializing PID Output Without Affecting Dynamics
- Restrictions and recommendations for some values
- Bias options
- Operating modes

Remote cascade options

- Restart or Point Activation
- Error Handling
- Restart or Point Activation
- Error Handling

Add or Multiply Action

Parameter FFOPT is configured to specify whether the feedforward signal is to be added to the incremental PID output or multiplied by it.

Bypassing Feedforward Control Action

An operator or a user-written program can bypass the feedforward action by one of the following:

- If the feedforward signal comes from a PV algorithm, switch the PV source for the data point that is using the PV algorithm to Man (if you do this and the PV is changed while the PVSOURCE is Man, the feedforward signal is affected). To resume feedforward action, switch the PVSOURCE back to Auto.
- If the feedforward signal comes from a control algorithm, switch the mode of the data point that is using the control algorithm to Man (if you do this and the output (OP) is changed while the source point is in manual, the feedforward signal is affected). To resume feedforward action, switch back to Normal mode (Auto or Cas).

Feedforward Signal Value Status

If the value status for the feedforward signal goes bad, the feedforward component of the output value is frozen at the last good value and normal PID processing continues.

When the value status of the feedforward signal returns to normal, normal feedforward action resumes. This does not cause a bump in the output because any change from the last good value is internally absorbed and the PID dynamics are not affected. The floating, full-value output continues as if there was no feedforward change but the contribution of the feedforward action continues from that time.

Operating Modes

The PIDFF algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas — If RCASOPT = Spc or Ddc or DdcRsp

Remote Cascade Options

All Remote Cascade Options are supported: Spc, Ddc, DdcRsp and Rsp.

28.3 Equations

Background

The available equations in the PID with Feedforward (PIDFF) control algorithm are identical to the those of the PID algorithm except that they include the following functions:

- Additive action
- Multiplicative action



REFERENCE - INTERNAL

Refer to the following for information concerning equations in the PID control algorithm:

- Background.
 - Equation A where – P, I, and D act on the error.
 - Equation B where – P and I act on the error, D acts on PV changes.
 - Equation C where – I acts on the error, and P and D act on PV changes.
 - Equation C where – Integral (I) control only is supported.
-

Equation legend

When reviewing these equations, please note that:

- **CV** = Full-value output in percent, PID combined with feedforward action.
- **CVPID** = The full value output before the multiplicative term. This is an internal parameter and is not available to displays nor to user-written programs.
- **CVPID** = The full value output before the multiplicative term. This is an internal parameter and is not available to displays nor to user-written programs.
- **DELCV** = The incremental output of PID computation. Default = N/A.
- **BFF** = Bias value for multiplicative action. Default = 0.
- **FF** = The feedforward input signal, from a control-input connection. Normally from a parameter with a percentage value. Default = N/A.
- **FF lgv** = Last good value for the FF input (notation only, not a user-visible parameter).
- **KFF** = Scale factor applied to FF. Normally the source parameter is in units of percent. However, if it isn't, KFF can be used as an EU to percent conversion factor. In this case, KFF is set to the following where EUHI and EULO correspond to the EU range of the source parameter.

$$\frac{100}{\text{EUHI} - \text{EULO}}$$

- **n** and **n-1** = Notation to indicate the value this pass (n) and the preceding pass (n-1).

Additive action

When additive action is used, the feedforward signal is applied to the incremental output of the PID computation using the equation:

$$CV_n = CV_n + DELV + KFF * (FF_n - FF_{n-1})$$



ATTENTION

If the status of...

Then...

FF_n or FF_{n-1} is bad

$$CV_n = CV_{n-1} + DELV$$

Multiplicative action

When multilicative action is used:

- the feedforward signal is applied to the incremental output of the PID computation using the equations:

$$CVPID = CVPID + DELCV$$

$$CV = CVPID * (KFF * FF_{lgv} + BFF)$$

- CV is a read only parameter for CL programs.
- the back calculation of CVPID keeps CV unchanged preventing a bump.



ATTENTION

If the status of...

then...

FF_n or FF_{n-1} is bad

$$CV = CVPID * (KFF * FF_n + BFF)$$

FF_n is OK and FF_{n-1} is bad

$$CVPID = \frac{CV}{(KFF * FF_n + BFF)}$$

If the result of $(KFF * FF_n + BFF)$ is less than 0.01, it is clamped at 0.01.

28.4 Initialization

Background

Initialization in the PID with Feedforward (PIDFF) control algorithm is identical to the PID control algorithm except that it includes the following functions:

- Additive action
- Additive action
- Multiplicative action



REFERENCE - INTERNAL

Refer to the following for information concerning Initialization in the PID control algorithm:

- Background.
 - Equation A where – P, I, and D act on the error.
 - Equation B where – P and I act on the error, D acts on PV changes.
 - Equation C where – I acts on the error, and P and D act on PV changes.
 - Equation C where – Integral (I) control only is supported.
-

28.5 Override Feedback Processing

Background

Override-feedback for the processing for the PIDFF control algorithm is the same as described for the PID algorithm in Override Feedback Processing, unless a if multiplicative action is configured. In this case, a feedforward term is added to the output calculations for Direct control and Reverse control.

Direct control

In Direct-Control, if OROFFSET is:

- On ($CV = ORFBSEC * + GAIN * ERROR$) the PIDFF point's CV is initialized as—

$$CV = ORFBSEC + K * (KFF * FF + BFF) * (PVP - SPP)$$

- Off ($CV = ORFBSEC * + GAIN * ERROR$) the PIDFF point's CV is initialized as—

$$CV = ORFBSEC + K * (KFF * FF + BFF)$$



ATTENTION

ORFBSEC is the override-feedback value from the secondary in percent.

Reverse control

In Reverse-Control, if OROFFSET is:

- On ($CV = ORFBSEC * + GAIN * ERROR$) the PIDFF point's CV is initialized as—

$$CV = ORFBSEC - K * (KFF * FF + BFF) * (PVP - SPP)$$

- Off ($CV = ORFBSEC * + GAIN * ERROR$) the PIDFF point's CV is initialized as—

$$CV = ORFBSEC - K * (KFF * FF + BFF)$$



ATTENTION

ORFBSEC is the override-feedback value from the secondary in percent.

28 PID w/Feedforward Control Algorithm
28.5 Override Feedback Processing

29. PID w/External Reset-Feedback Control Algorithm

29.1 Functional Overview



REFERENCE - INTERNAL

Refer to the following for information concerning:

- [PID Control Algorithm, Functional Overview.](#)
- [PID w/Feedforward Control Algorithm, Functional Overview.](#)

Family

The PID with External Reset-Feedback control algorithm is a member of the Regulatory Control algorithms.

Purpose

The PID with External Reset-Feedback (PIDERFB) control algorithm is used as a controller that either directly moves a control device (valve) in the process, or provides an input to another data point. It is identical to the PID Control Algorithm, Purpose, except as defined herein.

Description

The PID with External Reset-Feedback (PIDERFB) algorithm is a regulatory control function that, like the PID Control Algorithm, Description, operates as a proportional-integral-derivative (PID) controller except that it accepts a:

- reset-feedback signal from another data point
 - typically the PV of the secondary PID data point that is receiving its setpoint from this data point.
 - to be combined with the PID's incremental output, before the full-value output is accumulated.
- tracking-value signal.

29 PID w/External Reset-Feedback Control Algorithm

29.1 Functional Overview

The intent of this algorithm is to prevent windup when it has a secondary data point, typically a PID point that may or may not be responding to the output of this data point.



TIP

The PID with External Reset-Feedback algorithm also permits you to integrate third-party hand/auto stations to an HPM control strategy.



REFERENCE - INTERNAL

For additional information regarding:

- details of the PID with External Reset-Feedback (PIDERFB) Control Algorithm, refer to PID Control Algorithm, Functional Overview.
 - the use and integration of hand/auto stations with the HPM, refer to the topic Hand/Auto Stations, for the PIDERFB control algorithm.
-


Inputs and Outputs

As shown in the figure below the PIDERFB algorithm requires three input connections:

- from PV Processing (PVAUTO).
- RFB (Reset Feedback Value)—typically from the PV of another data point which is receiving its setpoint from this data point.
- TRFB (Tracking Value)—typically the PV or SP of another data point that is receiving its setpoint from this data point.

The number of inputs can be increased to four, allowing the SP to be fetched with an input connection.

Figure 29-1 PIDERFB Control Algorithm Functional Diagram

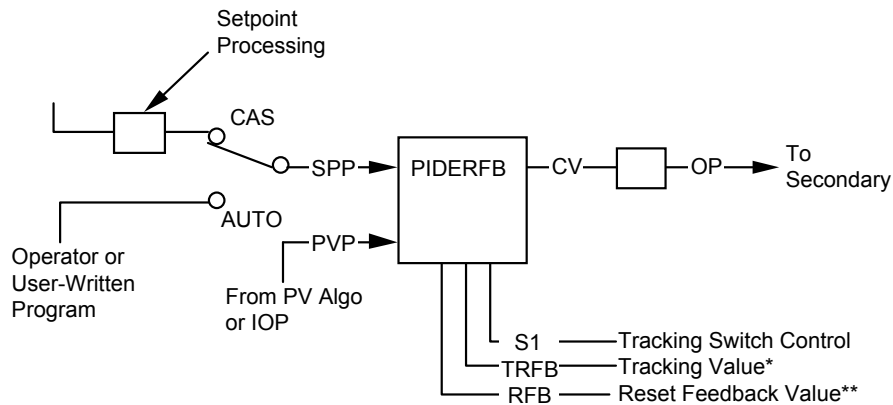

* Typically PV or SP of Secondary PID

PID Forms: Interactive (Real)
Noninteractive (Ideal)

** Typically PV of Secondary PID

Equations: A: Full PID
B: PI on error, D on PV change only
C: I on error, PD on PV change only
D: Integral control only

Reset Feedback Action: Scaled, integrated CV - RFB deviation is added to incremental PID output before full-value output accumulation.

Output destination can be to a secondary data point in the HPM or to any desired destination using control output connection (that is, any addressable parameter of any accessible slot).

The tracking switch-control signal (S1) is usually stored with an output connection from a Logic slot (or a program). If the switch control is On, the CV value from this data point is replaced by the tracking value. If, for some reason, the secondary is not using the output of this data point, S1 can be set to On by logic external to the PIDERfb, which causes this point's CV to track the secondary's PV. When the secondary begins to accept OP from this point for control, S1 is set to Off (by the external logic), and CV is then at the same value as the controlled variable (PV), so there is no bump and normal control can resume.


29 PID w/External Reset-Feedback Control Algorithm

29.2 Options and Special Features

PIDERFB sample application

In a simple application, both the reset-feedback signal and the tracking value may come from the PV of the secondary data-point.

Figure 29-2 PIDERFB Control Algorithm Example Application

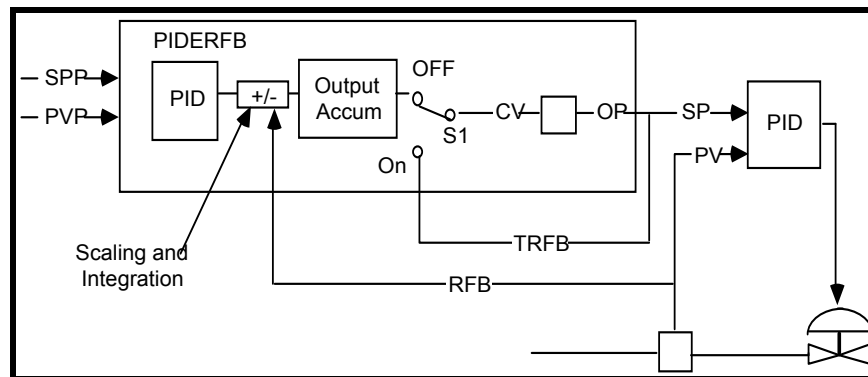

29.2 Options and Special Features

Relationships to the PID control algorithm

All of the following PID Control-algorithm options and special features apply to the PID Feedforward Algorithm:

- Interactive and Non-interactive PID forms
- Control terms
- Single term control
- Direct and Reverse control action
- PV tracking
- Gain options
- Output suppression
- Restrictions and recommendations for some values
- Bias options
- Operating modes

- Remote Cascade options
- Restart or Point Activation
- Error Handling

Error Handling, RFB and TRFB inputs

If S1 is Off, and the reset-feedback input has a bad value, the data-point mode doesn't change and the CV value goes bad (NaN). When the RFB input is again good, the CV value is initialized (see "Initialization" in Section 29) and the dynamic terms are returned to a steady state. If configured for external initialization, an initialization request is sent to the primary data point.

If S1 is On, and the tracking-value input has a bad value, the data-point mode doesn't change and the CV value goes bad (NaN). When the TRFB input is again good, the CV value is initialized (see "Initialization" in Section 29) and the dynamic terms are returned to a steady state. If so configured, an initialization request is sent to the primary data point.

Output connections

The output of this algorithm can be to any desired destination using control output connections.



ATTENTION

Note the following with regards to output connections with the PIDERFB algorithm:

- Fieldbus does not support a control connection output when the Regulatory Control point is configured for the PIDERFB algorithm.
 - Initialization and windup protection normally associated with control output connections are not performed with this algorithm. That is, initialization occurs only when S1, the tracking switch-control signal, is true.
 - Output connections store the value of the OP after converting to engineering units.
 - See "Control Output Connection" in Section 27.6, for restrictions on the number of output connections and destinations for this algorithm.
-

Engineering Unit ranges

PV Engineering unit range (PVEULO and PVEUHI) and the output engineering unit range (CVEULO and CVEUHI) must be specified. The SP engineering unit range (SPEULO and SPEUHI) always follows the PV range.

Operating modes

The PIDERFB algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas — If RCASOPT = Spc or Ddc or DdcRsp

Remote Cascade Options

All Remote Cascade Options are supported: Spc, Ddc, DdcRsp and Rsp.

29.3 Hand/Auto Stations

Functions

The functions listed in the following table are supported by the HPM to integrate a third-party hand/auto station.

Table 29-1 Hand/Auto Station Functions

Function	Description
Output	Ability to manipulate the output of the hand/auto station (when in Auto position) from the PID, and to initialize the PID output to allow the hand/auto station to switch bumplessly to auto position.
Mode	Indication that the hand/auto station is in "hand" (or Local Manual) position at the group display of the PID driving the output.
PV and SP	Indication of PV and SP at the hand/auto station, and optionally the ability to raise or lower the PID SP from the hand/auto station. PV and SP may be from the PID driving the output, or from a different PID. For example, in a single loop case, the PV, SP and output all come from the same PID, but in case of a temperature flow cascade, the PV and SP come from the temperature controller, and the output is driven by the flow controller.

Interface requirements

In order for the interface to be generic (to allow support for hand/auto stations from many different vendors), all signals are wired into the HPM through analog and digital IOPs. This requires a total of two AI slots, one AO slot, and two DI slots in addition to the requirements if no hand/auto station support is desired.

The I/O signals listed in the following table must be supported by the third-party hand/auto station.

Table 29-2 Hand/Auto Station I/O Signals

I/O signals	Description
PV_IN	Analog input used to display the PV value on the hand/auto station. The signal from the analog transmitter is wired into this input as well as to the HPM through an AI IOP.

29 PID w/External Reset-Feedback Control Algorithm

29.3 Hand/Auto Stations

I/O signals	Description
CV_IN	Analog input from the controller. It represents the control value position requested by the HPM's PID.
CV_OUT	Analog output. This output drives the control valve. When the hand/auto station is in auto position, CV_OUT should track the CV_IN input; when in local manual position, it can be manipulated by the raise/lower keys.  CV_OUT is also fed back to the HPM through an AI IOP for initialization of the PID output. The corresponding AI FTA must not be grounded (the zero-ohm resistor to ground at the FTA should be removed). Also the output current drive capability of the hand/auto station must be sufficient to handle an additional 250 ohm resistor used to convert 4-20 milliamps to 1-5 volts.
MAN_STS	Digital output indicating that the hand/auto station is in local manual position.
SP_IN	Analog input used to display the SP value on the hand/auto station. The setpoint of the HPM's PID controller is connected to this input through an AO IOP.
SP_OUT	Analog output generated by the hand/auto station to change the SP value of the HPM's SP.
SP_CHNG	Digital output requesting the HPM to accept a new SP (equal to SP_OUT) from the hand/auto station.



ATTENTION

SP_IN and SP_CHNG are not required if SP raise/lower capability is not supported.

Configuration and wiring

The figures “Hand/Auto Station control configuration and wiring diagram “ and “Hand/Auto Station logic point configuration and wiring diagram “ illustrate the control function configuration and wiring necessary to interface a third-party Hand/Auto Station to the HPM using the PIDERFB algorithm.

Figure 29-3 Hand/Auto Station Control Configuration and Wiring Diagram


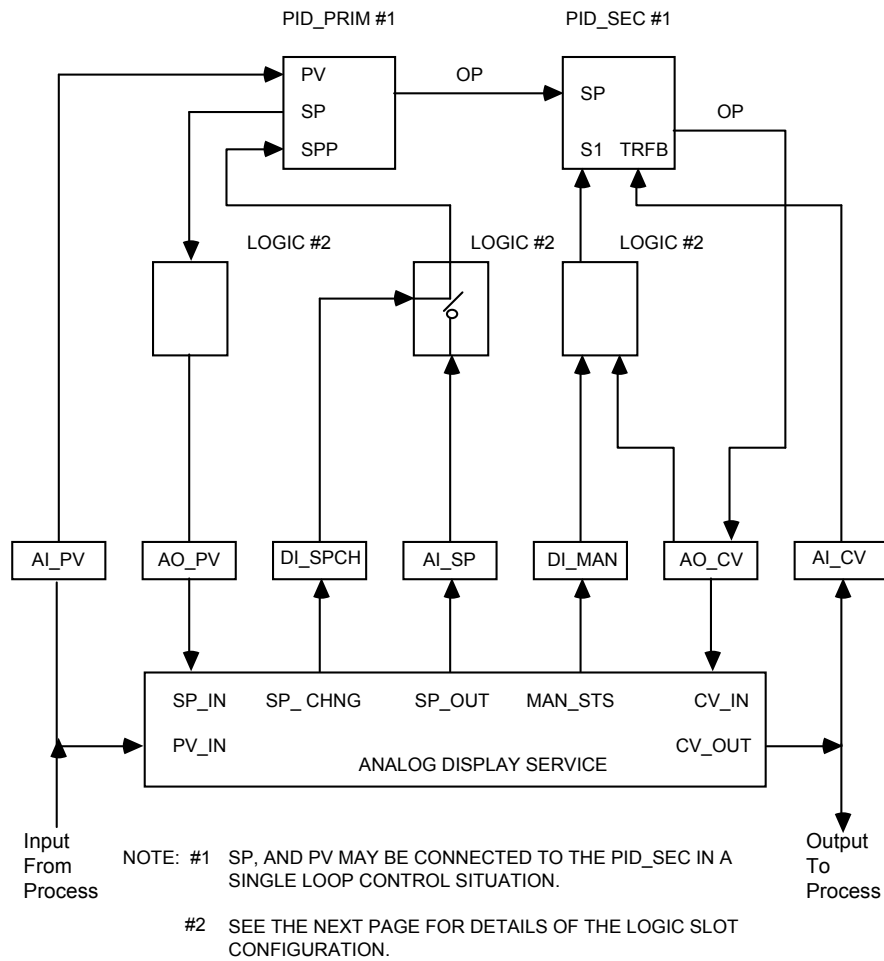


Figure 29-4 Hand/Auto Station Logic Point Configuration and Wiring Diagram

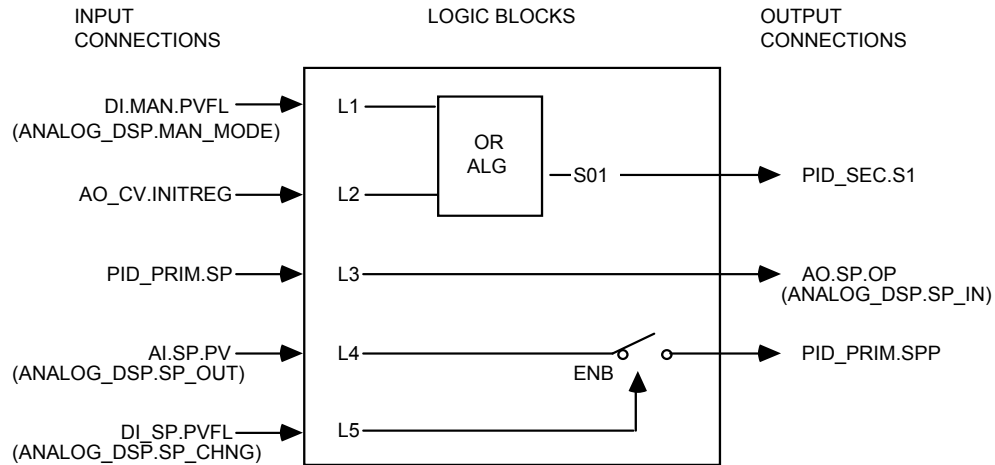

29.4 Equations

Background

The available equations in the PID with External Reset-Feedback (PIDERFB) control algorithm are identical to those of the PID algorithm except with regard to the tracking switch control feature (S1).



REFERENCE - INTERNAL

Refer to the following for information concerning equations in the PID control algorithm:

- Background.
- Equation A where – P, I, and D act on the error.
- Equation B where – P and I act on the error, D acts on PV changes.
- Equation C where – I acts on the error, and P and D act on PV changes.
- Equation C where – Integral (I) control only is supported.

Tracking Switch Control impact

If the Tracking Switch Control is active (value of S1 = On), then each parameter

If S1 is...	the Equation is...	then...
On	A, B, C, or D	$CV = \frac{TRFB - CVEULO}{CVEUHI - CVEULO} * 100$
Off	A, B, or C	$CVRFB(s) = K * \frac{K1}{T1 * s} * (rfb(s) - CV(s))$
	D	$CVRFB(s) = K * \frac{1}{T1 * s} * (rfb(s) - CV(s))$ $CV = CVPID + CVRFB$

Where:

- CV = Full-value output in percent, PID combined with CVRFB.
- CVPID = The incremental output of the PID computation. This is an internal parameter and is not available to displays nor to user-written programs.
- CVRFB = The scaled, integrated deviation of RFB from CV. This is an internal parameter and is not available to displays nor to user-written programs.
- K = Gain.
- K1 = External, reset-feedback gain.
- RFB = The external, reset-feedback signal in engineering units. Default = NaN.
- rfb =
$$= \frac{RFB - CVEULO}{CVEUHI - CVEULO} * 100$$
- s = The Laplace operator.
- S1 = The switch-control flag. Default = Off.
- TRFB = The tracking value in engineering units. Default = NaN.
- T1 = The integral term in minutes per repeat.

29.5 Initialization

Background

Initialization normally associated with output connections is not performed with this algorithm. Output connections store the value of the OP (after converting to engineering units based on CVEULO and CVEUHI) to the secondary.

29.6 Override Feedback Processing

Background

Override-feedback for the processing for the PIDERFB control algorithm is the same as described for the PID algorithm.



TIP

Use of PIDERFB in override strategies is not recommended.

30. PID Position Proportional Controller

30.1 Functional Overview

Family

The PID Position Proportional control algorithm is a member of the Regulatory Control algorithms.

Purpose

The PID Position Proportional (PIDPOSPR) control algorithm is typically used in place of the Position Proportional Control Algorithm, Purpose, to operate a motor driven valve without position feedback.


Description

The PID Position Proportional (PIDPOSPR) control algorithm consists of two parts:

- PID Control Algorithm, Description.
- Position Proportional Control Algorithm, Description.

The PIDPOSPR Control Algorithm is a regulatory control function that can be viewed as a normal PID Control Algorithm joined in cascade with a Position Proportional Control Algorithm. The PIDPOSPR functions the same as the PID algorithm except that it does not support OP (and OP related parameters OPEU, OPHILM, and so on) and CV (and CVEUHI, CVEULO). The end part of the algorithm behaves exactly as a POSPROP algorithm. The POSPROP component, which uses the `del_cv` of the normal PID as its PV to generate raise and lower pulses, behaves exactly as a Position Proportional Control Algorithm.

Figure 30-1 PID Position Proportional Control Algorithm Functional Diagram

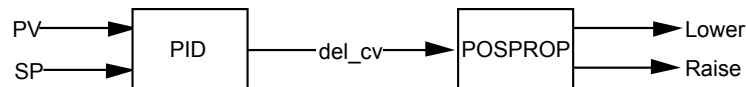

30.2 Options and Special Features

Modes

The PIDPOSPR algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas — If RCASOPT = Spc or Ddc or DdcRsp



ATTENTION

When the Mode is:

- Man—output pulses are issued on operator demand.
 - Auto, Cas, Bcas—normal computation is performed.
-

Remote Cascade Options

Only the SPC option is supported.

Output Manipulation in Manual Mode

In Manual mode, the output can be manipulated from the group and detail displays using the Raise/Lower keys. At the time of configuration, you must define "manual output pulse time (MANOPTIM)." When the operator presses the Raise key (single up-arrow), raise output pulse of width equal to MANOPTIM is issued. When the operator presses the fast raise key (double up-arrow), raise output pulse to width equal to 10 times MANOPTIM is issued. Lower output pulses can be similarly generated.

Windup Feedback Limit Switches

Output high and low flags can be fetched using the input connection parameters Output High and low Flag Input Source (OPHISRC) and (OPLOSRC), respectively. These flags serve the same function as the similar flags for POSPROP.

Local Manual Support

The Local Manual state is supported and it can be fetched with an input connection using the input parameter Local Manual Source (LMSRC).

Analog Output Related Parameters

Parameters related to the analog output value do not apply and are defaulted to the same values as those similar parameters in the PosProp algorithm.

Safety Shutdown

The Shutdown flag, when turned on, causes the mode to go to MAN with OPR attribute and the output is derived based on the value of a new parameter SAFOPCMD as defined in the following table.

Table 30-1 PIDPOSPR Safety Shutdown SAFOPCMD Parameter Value

If SAFOPCMD is...	then...
Idle	No more output pulses are issued.
Raise	Raise pulses are issued until the PV is $\geq$ EUHI, or OPHIFL is ON. If the PV is bad, the test for PV $\geq$ EUHI is ignored.
Lower	Lower pulses are issued until the PV is $\leq$ EUHI, or OPLOFL is ON. If the PV is bad, the test for PV $\leq$ EUHI is ignored.

Bad PV/Mode Shed

For PidPosPr (and PosProp) algorithms, Shed Hold, Shed Low, High, and Shed Safe are interpreted as defined in the following table

Table 30-2 PIDPOSPR Bad PV/Mode Shed

Item	Interpretation/Action
BADCTLOP	Action taken for PIDPosPr (and PosProp).
No Shed	IDLE, No more output pulses are issued.
Shed Hold	IDLE.
Shed High	Raise, Raise pulses are issued until $PV \geq EUHI$ or OPHIFL is ON. If the PV is bad, the test for $PV \geq EUHI$ is ignored.
Shed Low	Lower, Lower pulses are issued until the $PV \leq EUHI$ or OPLOFL is ON. If the PV is bad, the test for $PV \leq EUHI$ is ignored.
Shed Safe	Handled like Shutdown based on the value of SAFOPCMD.

30.3 Equations

Background

Only one equation is available for the PIDPOSPR algorithm. It is calculated as defined in Equations, if CYCLE_TIMER has expired.

Equation legend

When reviewing the Equations, please note that:

Item	Definition
ACCUMULATED_DEL_CY	= Accumulations of del_cv (of the PID part) during this cycle.
K1	= Gain constant for the POSPROP part of the algorithm. It is renamed K1 (was K for the POSPROP algorithm) to avoid confusing it with the PID gain constant K.
DEADBAND	= Error deadband in percent (range = 0.0 to 100.0; default = 5.0).
OPHIFL	= High output windup flag.
OPLOFL	= Low output windup flag.
RAISRATE	= Raise stroke rate in percent per second. Default = 100.0% per second. Range > 0.0.
LOWRRATE	= Lower stroke rate in percent per second. Default = 100.0% per second. Range > 0.0.
RAISETIM	= Raise pulse time in seconds. Default = N/A. Clamped to the lower of MAXPULSE or CYCLETIM. If smaller than MINPULSE, no pulse is issued.
LOWERTIM	= Lower pulse time in seconds. Default = N/A. Clamped to the lower of MAXPULSE or CYCLETIM. If smaller than RP*MINPULSE, no pulse is issued.
RT	= Deadtime ratio (Default = 1).

30 PID Position Proportional Controller

30.3 Equations

Item	Definition
DEADTIME	= Additional pulse time required to overcome friction in the motor when it begins to move or change direction. It is added to the computed pulse time except when the pulse issued last cycle time was in the same direction (as the pulse this time) and the pulse width was equal to CYCLETIM. Default = 0.0.

Equations

When the conditions of the following table are met, PIDPSOPR raise/lower pulse width equation can be used to determine the pulse raise or lower pulse width issued by the PISPOSPR algorithm.

Table 30-3 PIDPOSPR Raise/Lower Equation Decision

If...	then...
((ACCUMULATED_DEL_CV > DEADBND) AND (OPHIFL = OFF))	Issue a raise pulse
((ACCUMULATED_DEL_CV < DEADBND) AND (OPHIFL = OFF))	Issue a lower pulse



ATTENTION

If neither of the above are true, then the cycle timer will be reset to the beginning.

Table 30-4 PIDPSOPR raise/lower pulse width equation (RAISETIM)

If PIDPOSPR indicates...	then a pulse width equal to the following is issued...
Raise	$\text{RAISETIM} = K1 * \frac{\text{ACCUMULATED_DEL_CV}}{\text{RAISRATE}} + \text{DEADTIME}$
Lower	$\text{RAISETIM} = K1 * \frac{\text{ACCUMULATED_DEL_CV}}{\text{RAISRATE}} + \text{DEADTIME}$

31. Position Proportional Control Algorithm

31.1 Functional Overview

Family

The Position Proportional control algorithm is a member of the Regulatory Control algorithms.


Purpose

The Position Proportional (POSPROP) control algorithm is used to pulse two digital outputs to drive the process variable toward the setpoint.

Description

As illustrated in the following figure, the POSPROP algorithm would typically be used to step a valve open or closed, to raise or lower a rotary device, or to move plates of a pulp mill refiner together or apart.

Figure 31-1 POSPROP Example Control Strategy

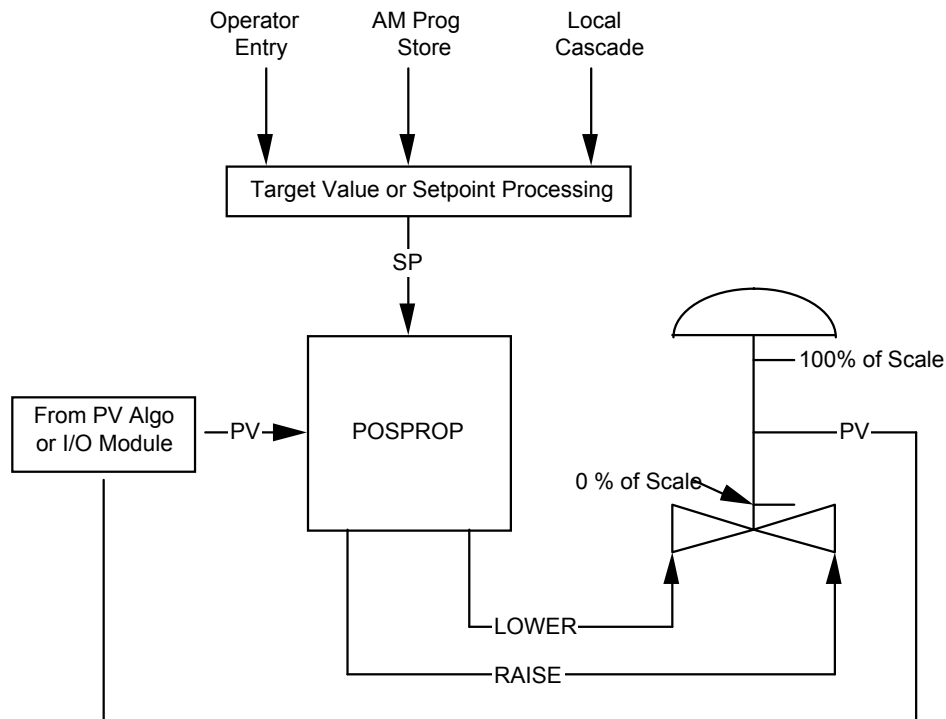


Inputs and outputs

The POSPROP algorithm requires only one input and the number of inputs is defaulted to one. However, the SP can be fetched with an input connection. PV Source selection is supported if the point is configured as a full point. The Advisory (ASP) and Target Value (TV) options of SPOPT (Setpoint Option) are supported.

Digital outputs are pulsed at a time interval specified by the CYCLETIME parameter and the pulse width is proportional to the error signal.

The Raise/Lower digital outputs are stored to the destinations specified by the parameters RAISDSTN and LOWRDSTN, respectively. The only valid output destinations are to pulsed (but not PWM type) digital outputs. The pulse can be ONPULSE or OFFPULSE.

Figure 31-2 POSPROP Control Algorithm Functional Diagram

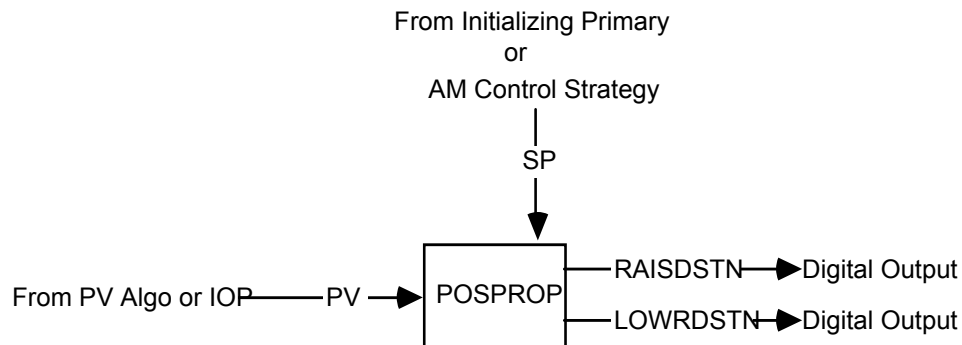

31.2 Options and Special Features

Modes

The PIDPOSPR algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas — If RCASOPT = Spc or Ddc or DdcRsp



ATTENTION

When the Mode is:

- Man—output pulses are issued on operator demand.
 - Auto, Cas, Bcas—normal computation is performed.
-

Output Manipulation in Manual Mode

In Manual mode, the output can be manipulated from the group and detail displays using the Raise/Lower keys. At the time of configuration, you must define "manual output pulse time (MANOPTIM)." When the operator presses the Raise key (single up-arrow), raise output pulse of width equal to MANOPTIM is issued. When the operator presses the fast raise key (double up-arrow), raise output pulse to width equal to 10 times MANOPTIM is issued. Lower output pulses can be similarly generated.

Windup Feedback Limit Switches

Output high and low flags can be set to indicate the status of the limit switches representing the valve position. When OPHIFL is set, the Raise output pulses are not generated. When OPLOFL is set, Lower output pulses are inhibited.

OPHIFL and OPLOFL are usually set by output connections on Logic slot based on limit switch feedback (brought into the system through digital inputs) from the process.



ATTENTION

In manual mode, the operator can manipulate the output Raise/Lower pulses regardless of the status of the OPHIFL and the OPLOFL.

Raise/Lower Output Destinations

The Raise/Lower digital outputs are stored to the destinations specified by RAISDSTN and LOWRDSTN, respectively. The only valid outputs are to ONPULSE or OFFPULSE of digital outputs configured as Status type.

Engineering Unit Ranges

The PV Engineering unit ranges (PVEULO and PVEUHI) must be specified. The setpoint engineering unit range (SPEULO and SPEUHI) always follows the PV range. The output engineering unit range (CVEULO and CVEUHI) does not apply.

Analog Output Related Parameters

The standard control slot parameters that are normally related to the analog output value do not apply because analog outputs are not valid destinations for outputs from this algorithm. Other parameters associated with analog outputs cannot be fetched or stored by any system function. Internally, they are defaulted such that they do not have any effect on the system functions.

Table 31-1 Analog Output Related Parameters

Parameter	Internal Default
CV	NaN
CVEUHI	100.0
CVEULO	0.0
OP	-6.9% of Full Scale
OPEU	N/A
OPHILM	105.0%
OPLOLM	-5.0%
OPROCLM	NaN
OPMCHLM	0.0
SAFEOP	N/A
NOCOPTS	1
INITMAN	Off

31.3 Equations

Background

Only one equation is available for the POSPROP algorithm. It is calculated as defined in Equations, if CYCLE_TIMER has expired.

Equation legend

When reviewing the Equations, please note that:

Item	Definition
PVP	= PV in percent.
SPP	= SP in percent.
DEADBAND	= Error deadband in percent (range = 0.0 to 100.0; default = 5.0).
OPHIFL	= High output windup flag.
OPLOFL	= Low output windup flag.
CYCLETIM	= Cycle time in seconds. Range: 0.25 to 1000.0; Default = 10.0.
RAISRATE	= Raise stroke rate in percent per second. Default = 100.0% per second. Range > 0.0.
LOWRRATE	= Lower stroke rate in percent per second. Default = 100.0% per second. Range > 0.0.
RAISETIM	= Raise pulse time in seconds. Default = N/A. Clamped to the lower of MAXPULSE or CYCLETIM. If smaller than MINPULSE, no pulse is issued.
LOWERTIM	= Lower pulse time in seconds. Default = N/A. Clamped to the lower of MAXPULSE or CYCLETIM. If smaller than RP*MINPULSE, no pulse is issued.
K	= Gain constant. Range = 0.0 to 10.0; Default = 1.0.
RP	= Pulse ratio (Default = 1).
RT	= Deadtime ratio (Default = 1).

Item	Definition
DEADTIME	= Additional pulse time required to overcome friction in the motor when it begins to move or change direction. It is added to the computed pulse time except when the pulse issued last cycle time was in the same direction (as the pulse this time) and the pulse width was equal to CYCLETIM. Default = 0.0.
MAXPULSE	= Maximum pulse time limit. If computed pulse time is greater than this, it is clamped to the lower of MAXPULSE or CYCLETIM. Default = 60 seconds.
MINPULSE	= Minimum pulse time limit for raise pulse. If computed pulse is smaller than this, no pulse is issued. Default = 0.0 seconds.

Equations

When the conditions of the following table are met, the table POSPROP raise/lower pulse width equation can be used to determine the pulse raise or lower pulse width issued by the POSPROP algorithm.

Table 31-2 POSPROP Raise/Lower Equation Decision

If...	then...
$(PVP < (SPP - DEADBAND)) \text{ AND } (OPHIFL = Off)$	Issue a raise pulse
$(PVP > (SPP + DEADBAND)) \text{ AND } (OPLOFL = Off)$	Issue a lower pulse



ATTENTION

If neither of the above are true, then the cycle timer will be reset to the beginning.

Table 31-3 POSPROP Raise/Lower Pulse Width Equation

If the table "POSPROP raise/lower equation decision" indicates...	then a pulse width equal to the following is issued...
Raise RAISETIM	$\text{RAISETIM} = K * \frac{(\text{SPP} - \text{PVP})}{\text{RAISRATE}} + \text{DEADTIME}$
Lower LOWERTIM	$\text{LOWERTIM} = K * \frac{(\text{PVP} - \text{SPP})}{\text{LOWRRATE}} + (\text{RT} * \text{DEADTIME})$

31.4 Initialization

Raise and lower outputs

The Raise and Lower outputs are either set to OFF (or their normal states) and the cycle is restarted when forward calculation is resumed after initialization.

Setpoint

The SP is set equal to the PV (subject to the setpoint limits) when any of the following conditions exist:

- the mode is Man.
- the slot is being processed for the first time after becoming active.
- this slot is a secondary within a local (inside the same HPM box) cascade control strategy, and it is going through one-shot control initialization.



ATTENTION

The one-shot control initialization occurs:

- when the control initialization request flag (CTRLINIT) is On,
- when this slot is being processed for the first time after the HPM state has been changed to RUN (Ok),
- when just recovering from a bad PV.

The position proportional control algorithm is forced to initialize when outputting to a digital output point that has its INITREQ parameter = ON.

31 Position Proportional Control Algorithm

31.4 Initialization

32. Ratio Control Algorithm

32.1 Functional Overview

Family


The Ratio Control control algorithm is a member of the Regulatory Control algorithms.

Description

The Ratio Control (RATIOCTRL) algorithm calculates a setpoint for a PID algorithm that is the desired ratio of a controlled variable to an uncontrolled variable. The value of the controlled variable is maintained at a specified ratio of the value of the uncontrolled variable. The data point that uses this algorithm usually uses Calculator PV algorithm to calculate the measured value of the ratio for displays and reports.

This Ratio-control algorithm has several advantages, including the display of the actual ratio attained as calculated by the Calculator PV algorithm and direct control of the ratio through the SP of the Ratio algorithm.

Figure 32-1 RATIOCTRL Algorithm Functional Diagram

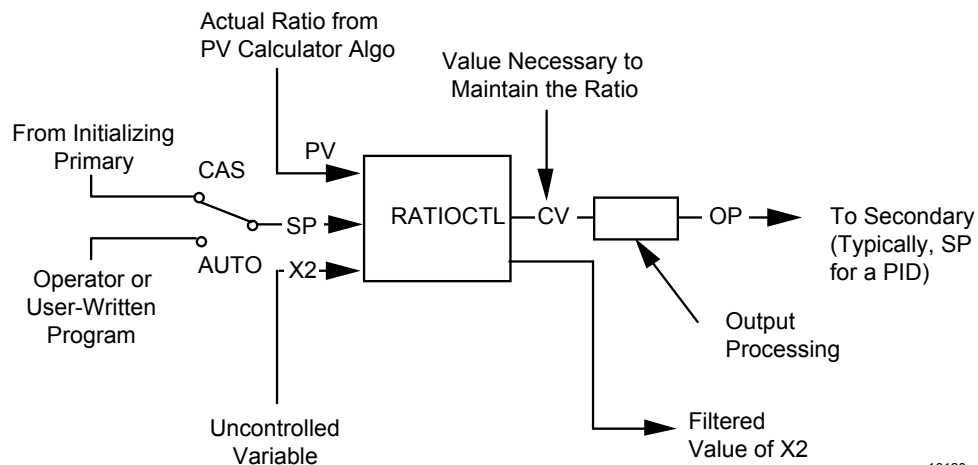

32 Ratio Control Algorithm

32.1 Functional Overview



TIP

Ratio control can also be accomplished with the ratio-bias options of the PID Control Algorithm or PID w/Feedforward Control Algorithm.


Application

The RATIOCTL algorithm is typically used in the control of the flow of a gas or fluid, as a ratio of an another flow. For example, in a furnace, the air supply might be controlled as a ratio of the fuel supply. If more heat is required to maintain combustion efficiency, the fuel flow is increased and the air flow can be increased as a ratio of the fuel-flow increase.

The following figure shows an example of such an application. In this example, the:

- data point that uses the Ratio-control algorithm also uses the Calculator PV algorithm to calculate the actual ratio achieved, for display or printing.
- Calculator PV should use the filtered value (X2FILT) of the uncontrolled variable.

Figure 32-2 Ratio Control Example Application

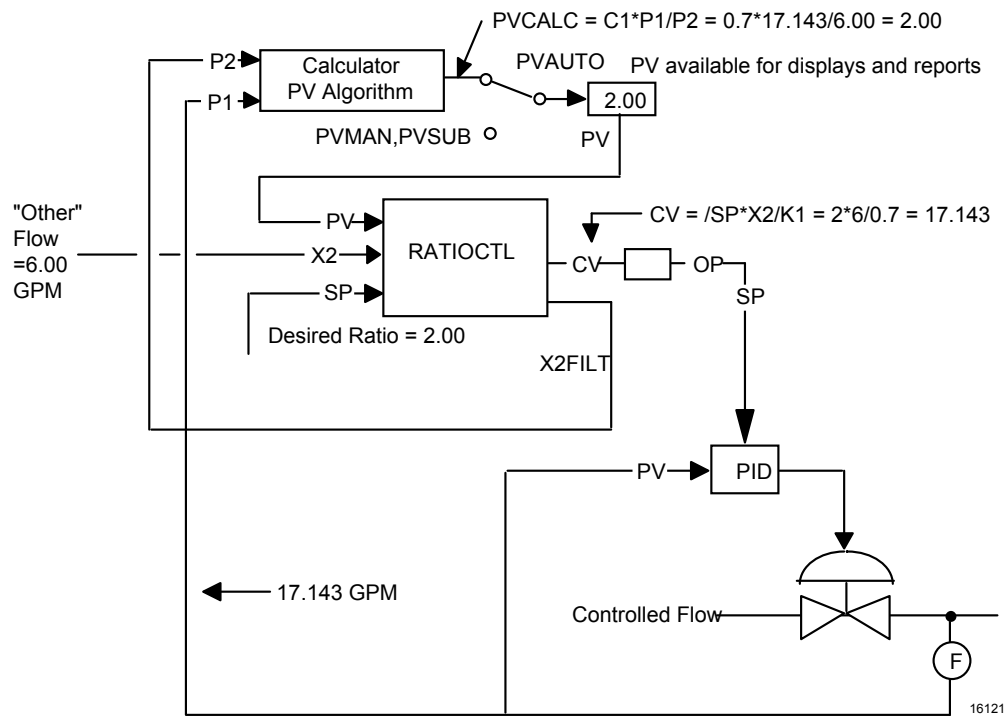

To evaluate this example, see "Equations" in Section 32.3 and you will note that the same scale factor, 0.7, is used for P1 in the PV algorithm and for K1 in the Ratio-control algorithm. The resulting scaled ratio between the "other" flow and the controlled flow is $2.00 / 0.7 = 2.857$, so if the "other" flow is 6.00 gallons per minute, the controlled flow must be $6.00 * 2.857 = 17.143$ gallons per minute.

The 0.7 scale factor is used for C1 and K1 in the example. This illustrates that the same scale factors and bias values must be used with the PV algorithm and the Ratio-control algorithm ($K1 = C1$, $K2 = C2$, $B1 = C3$, and $B2 = C4$). This is so that the actual ratio calculated by the PV algorithm will be the same as the desired ratio (2.00) when the loop is stable. If the scale factor in C1 and K1 were 1.0, the controlled flow would stabilize at the "other" flow, multiplied by the ratio. In the example, the controlled flow would be $6.00 * 2.00 = 12.00$ gallons each minute. In any case, the controlled flow stabilizes at a value equal to the "other" flow, multiplied by the desired ratio, as modified by any scale factors other than 1.0 or any bias values other than 0.

32.2 Options and Special Features

Control input connections

This algorithm requires two input connections, for PV processing and X2. The number of input connections is defaulted to 2; however, it can be increased to 3, allowing the SP to be fetched with an input connection.

Engineering unit ranges

The PV engineering unit range (PVEULO and PVEUHI) must be specified. The setpoint engineering unit range (SPEULO and SPEUHIU) always follows the PV range. The output engineering unit range (CVEULO and CVEUHI) is derived from the secondary if the number of output connections is greater than 0; otherwise, it must be specified.

Role of the Calculator PV algorithm

Any data point that uses RATIOCTL should use the Calculator PV algorithm (7.7.9). X2FILT, the filtered value of the uncontrolled variable X2 is connected to P2 and the variable controlled by the PID algorithm is connected to P1. The scale factors and bias values in the Calculator PV algorithm must have the same values as their counterparts in the Ratio Control algorithm:

RATIOCTL	CALCULATOR
K1	C1
K2	C2
B1	C3
B2	C4

Thus, Calculator can calculate the actual (measured) ratio attained, and when the PVSOURCE is Auto, that value is available in the PV parameter of the data point for use on displays and reports.

Operating Modes

The RATIOCTL algorithm operates in the following modes:

- Man
- Auto
- Cas
- Bcas—if RCASOPT = Spc

Remote cascade options

Only the Spc option is supported.

Restart or Point Activation

On a cold or warm restart or when the RATIOCTL data point is activated, initialization takes place.

Error Handling

If the value status of the X2 input is bad, the CV value is changed to bad (NaN). The data point remains in the same mode. When the X2 input again has normal status, initialization takes place as described.

Operator entered bias

In R600 or later, the Algorithm includes an operator entered bias. This Bias parameter (BO) value is added after all other calculations to obtain the CV for print. For equivalent operation when migrating from PRE R600 Releases set BO = 0.0.

X2 filter

At the X2 input to the Ratio Control block, the value of the uncontrolled variable is filtered by a single lag filter. Parameter X2TF determines The X2 filter time (0 - 60 minutes) and X2FILT is the filtered value of X2. The X2FILT value appears on the point detail display. This filter is active only if the point is in the AUTO or CASC mode.

When X2TF is set for 0.0 minutes lag time, X2 is not filtered as was the case for the algorithm prior to Release 500.

The default value of X2TF = 0.0.

32.3 Equations

Background

The available equations with the Ratio Control Algorithm are:

- Calculator PV
- Ratio Control

Equation legend

When reviewing the equations, please note that for the:

- Calculator PV equation—
 - PV_{CALC} = The calculated, actual ratio achieved.
 - $C1$ = $P1$ scale factor. Must equal $K1$ of the $RATIOCTL$ algorithm Default value = 1.0.
 - $C2$ = $P2$ scale factor. Must equal $K2$ of the $RATIOCTL$ algorithm Default value = 1.0.
 - $C3$ = Bias constant $P1$ input. Should be the same value as $B1$ in the $RATIOCTL$ algorithm (Default value = 0).
 - $C4$ = Bias constant $P2$ input. Should be the same value as $B2$ in the $RATIOCTL$ algorithm (Default value = 0).
 - $P1$ = The controlled process variable (Source should be the same as the PV of the PID controller that is $RATIOCTL$'s secondary).
 - $P2$ = The filtered value ($X2FILT$) of the uncontrolled process variable (If there is a PID-controller controlling this other flow, the PV of that PID could be the source for $P2$ and $X2$).
- Ration Control equation—
 - B = The overall bias value (= $BO + BI$).
 - BI = Internal bias.
 - BO = Fixed output bias.
 - CV = The calculated output in engineering units.
 - SP = The desired ratio input.

- X2FILT = The filtered value of the uncontrolled process variable X2.
- BI = Internal Bias.
- B1 = Bias constant. Should be the same value as C3 in the CALCULTR PV algorithm. Default = 0.
- B2 = Bias constant for the X2 input. Should be the same value as C4 in the CALCULTR PV algorithm (Default = 0).
- K1 = The ratio scale factor. Must equal C1 of the CALCULTR PV algorithm.
- K2 = The scale factor for X2. Must equal C2 of the CALCULTR algorithm.

Equations

The equations used in the Ratio Control algorithm are defined in the following table.

Table 32-1 Ratio Control Algorithm Equations

Algorithm	Equation
Calculator PV	$PVCALC = \frac{(C1 * P1 + C3)}{(C2 * P2 + C4)}$
Ratio Control	$CV = \frac{SP * (K2 * X2FILT + B2) - BI}{K1} + B$

32.4 Initialization

Operation

When the data point is initialized, an initialization request is sent to the primary, and the initialization value to be applied by the primary to the SP input is calculated and sent to the primary.

Initialization ramping bias

The bias (B) is made up of two components, BO and BI, where BO is the operator entered bias and BI is the internal bias. Parameter RATE1 specifies the decay rate for the Internal Bias, BI. The value of BI is set during the algorithms initialization and decays to zero at a rate defined by RATE1.

If RATE1 is set to NaN, the initialization ramping value is set to 0.0 and the initialization value for the primary is determined by back calculation compatible with Pre-R500 functions. (When migrating from R4xx or R5xx to R600, the fixed bias term BO should be defaulted to 0.0.) When RATE1 = NaN, then:

$$INITVAL = \frac{K1 * (CV - BO) + BI}{K2 * X2FILT + B2}$$

If RATE1 is set to a non-zero value, and the Ratio Control block is in Cascade mode, the SP value is back calculated. During initialization, an internal bias that is equal to the difference between the old CV value and the new CV value is added to the output calculation to produce a bumpless output. Internal Bias (BI) is calculated as follows (where CV_{old} is the last calculated CV value before initialization):

$$BI = CV_{old} - \frac{SP * (K2 * X2FILT + X2) - BI}{K1} - BO$$

If the primary accepts the initialization value (INITVAL), then BI turns out to be zero.

If the primary does not accept the initialization value, then BI turns out to be non-zero. If not zero, the internal bias (BI) decays at the rate specified by RATE1. RATE1 is specified in engineering units per minute. If RATE1 = 0, then BI does not decay but remains fixed.

If the Ratio Control block operates in Auto mode during initialization when the mode changes from manual to auto, the internal bias (BI) is added to the output. BI decays at the rate specified by RATE1 as described for Cascade mode.

The default value of RATE1 = NaN.


32.5 Override Feedback Processing

When the data point's secondary uses an Override Selector algorithm, the following functions take place if the RATIOCTL algorithm if it is in Cas mode:

- the override status is sent to the primary data point in PTORST (Point Override Status).
- If the status in PTORST is not selected, a feedback value, calculated as follows, is sent to RATIOCTL's primary data point (where ORFBSEC is the override-feedback value received from the secondary data point)

$$ORFB = \frac{K1 * (ORFBSEC - B) + BI}{K2 * X2FILT + B2}$$

Figure 32-3 Override Feedback Processing

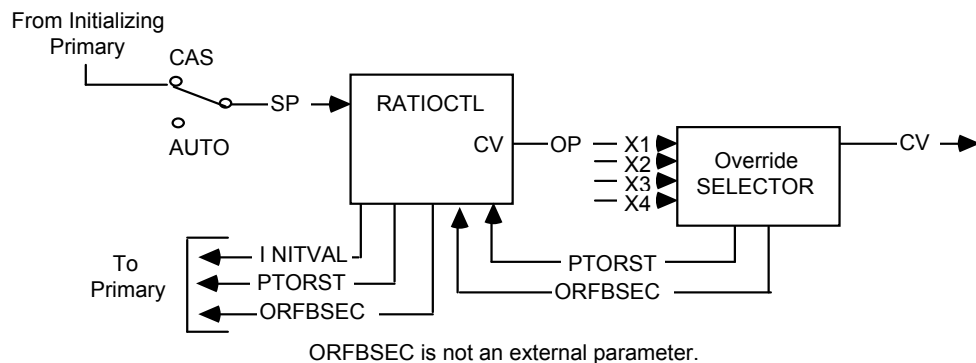

32 Ratio Control Algorithm

32.5 Override Feedback Processing

33. Ramp and Soak Control Algorithm

33.1 Functional Overview

Family

The Ramp and Soak (RAMPSOAK) control algorithm is a member of the Regulatory Control algorithms.

Description


This algorithm is typically used as a setpoint programmer. It produces an output that consists of up to 12 alternate ramps and soak periods—a total of 24 segments. Twelve pairs should be enough to cover most applications commonly encountered; however, if longer ramp and soak sequences are required, four such algorithms can be configured to push to a control switch algorithm. Then, using logic, the switch could select one of the ramp and soak algorithms.

When not used in connection with the switch algorithm, output from this algorithm is usually used as the setpoint for a secondary data point that uses a PID algorithm to control a process variable, according to the ramps and soak periods. The PV of a data point that uses RAMPSOAK is normally the PV of the PID point.

33 Ramp and Soak Control Algorithm

33.1 Functional Overview

Figure 33-1 Ramp and Soak Control Algorithm Functional Diagram

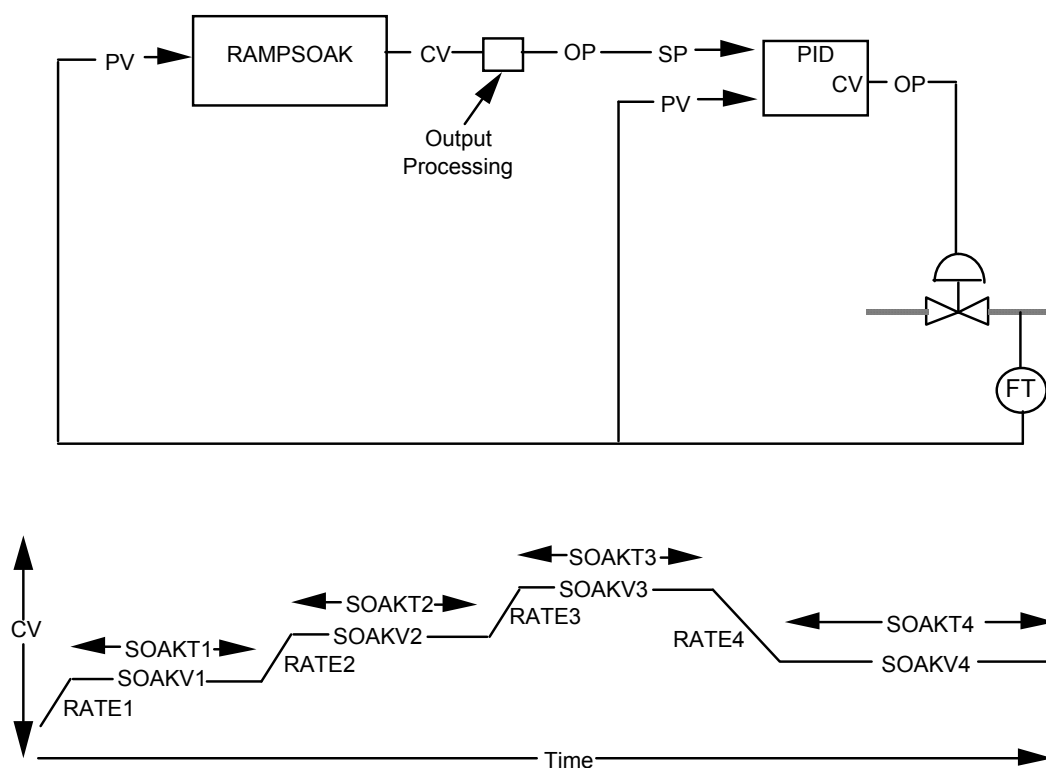

Application

RAMP SOAK is principally used for automatic temperature cycling in furnaces and ovens. It can also be used for automatic startup of units, and for simple batch-sequence control where the batch sequence is part of a process that is otherwise a continuous process.

Sequencing

The Ramp and Soak control algorithm supports both Single and Cyclic sequencing.

Once started, the configured sequence of ramps and soak periods repeats itself, if it is not stopped by an operator or by a user-written program. A Universal Station operator can put the point in Man mode to freeze the sequence, and then return it to Auto to continue the sequence.

A configuration parameter called cycle option (CYCLEOPT = Single or Cyclic) is provided that optionally permits the cycle to stop after completing a single cycle. This works as follows:

- CYCLEOPT = Single
 - When the mode is changed from Man to Auto, the algorithm cycles through the configured rampsoak sequence until the last soak segment is completed. At this point, the mode is switched back to Man and the current segment ID is set to RAMP1 (the first segment). Another sequence can now be executed by simply switching the mode back to Auto.
- CYCLEOPT = Cyclic
 - When the mode is changed from Man to Auto, the algorithm cycles through the configured rampsoak sequence until the last soak segment is completed. At this point, the current segment ID is set to RAMP1 (the first segment) and the whole cycle is repeated.

Operational modes

The operating modes establish the operating state of the RAMPSOAK algorithm as follows:

- Man mode, where—
 - the sequence is stopped and the ramp/soak timers are not running.
 - the Ramp and Soak actions are suspended.
 - this allows the user to enter starting output value for the Ramp/Soak profile and to change the value during profile.
 - the timers are stopped and hold the last value.
 - the value in CV is replaced by the OP value (after converting to EUs).

33 Ramp and Soak Control Algorithm

33.1 Functional Overview

- SP = CV (SP doesn't affect the output but can be seen at Universal Stations and user-written programs).
- Auto mode, where—
 - the sequence is running.
 - If the current segment is a ramp, and if the guaranteed ramp conditions are OK, CV changes at the ramp rate. Should the CV overshoot the next soak value, it is clamped at that value and, the remaining soak-time (REMSOAKT), the current-segment (CURSEGID), and the mark timers and flags are updated.
 - If the guaranteed ramp conditions are not OK, the mark timers are stopped.
 - If the current segment is a soak, and if the point just changed from Man to Auto, or just started the soak segment, and the guaranteed soak time conditions are not OK then, the soak timer doesn't start, CV remains at its last value, the mark timers are stopped.



ATTENTION

If the polarity of the ramp rate is opposite to the soak target value, the output jumps to the soak target value. That is, the ramp segment for this ramp/soak cycle is omitted and the next segment is invoked.

Changing remaining Soak Time and Current Segment

When the RAMPSOAK point is in Man mode, an operator at a Universal Station can change the remaining soak time (REMSOAKT) if the current segment is a soak.

Also, when the point is in Man mode, an operator can change the current segment (CURSEGID).

When the mode is returned to Auto the sequence continues, as modified by these changes. If the segment was changed, the sequence resumes with the new segment, which can be a ramp or a soak.

Because changes to these parameters don't change the mark functions (see “Mark Timer functions” in Section 33.1), except if CURSEGID is a lower segment than the mark segment (SnSEGID), operators should not be allowed to change REMSOAKT or CURSEGID when the mark functions are configured.

Guaranteed Soak-Time

This feature guarantees that the PV is at the proper soak value before the soak-time measurement begins.

If, when a soak segment begins or is resumed by switching from Man to Auto, the PV is not within a user-specified deviation (MXSOKDEV) from the SP value (SP always equals CV), the soak timer doesn't start. When the deviation is within the MXSOKDEV value, the timer is started and continues, even if the deviation again exceeds MXSOKDEV.

Because the PV could be above or below SP, it is the absolute value of the deviation that is checked against MXSOKDEV.

To bypass this check you can change MXSOKDEV to NaN.

The soak timer can also be kept from starting when HOLDCMD is On. This allows you to use a Logic Slot to set HOLDCMD to hold the soak timer until some other condition is met.



ATTENTION

HOLDCMD also affects the guaranteed ramp function.

Guaranteed Ramp Rate

This feature guarantees that the PV keeps up with the desired value indicated by SP (SP always tracks CV).

You can specify a maximum ramp-deviation value in MXRMPDEV. There are two conditions that cause the ramp to stop to wait for the PV to catch up with SP. They are


- $RATE_n > 0$ and $PV < (SP - MXRMPDEV)$
- $RATE_n < 0$ and $PV > (SP + MXRMPDEV)$

These checks are bypassed if MXRMPDEV contains NaN.

Another condition that stops the ramp is HOLDCMD containing On. You can use a logic slot to set HOLDCMD to stop or hold the ramp until some condition that you specify is met.


The content of HOLDCMD also affects the guaranteed soak-time feature.

Figure 33-2 Wait Time Between Phases

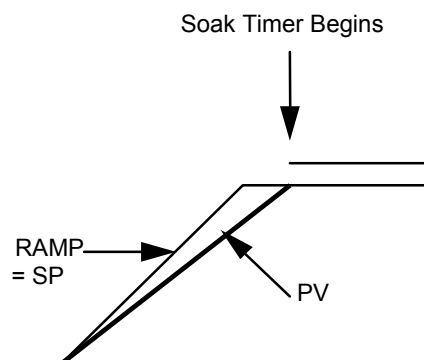

By assuring that PV = proper soak value, the user is assured of, for example, the proper wait time between phases of a warm up or that temperature is held for the proper length of time during heat treating.

Figure 33-3 Ramping Waits for the Process

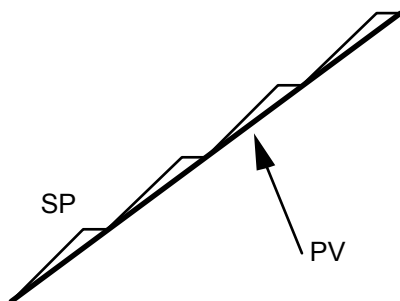

By ensuring that the ramping "waits" for the process to catch up, we never have a large error caused by setpoint change.

Mark Timer functions


Two flags are provided with the RAMPSOAK algorithm to indicate to other data points that a specified time has elapsed from the beginning of a specified ramp segment or soak segment. These mark-timer flags are S1 and S2.

Each of these flags has three associated parameters that specify the segment in which the flag is set On, the time counted from the beginning of the segment, and the time from the beginning of the segment until the end time (when the flag is set Off). These parameters are listed in the following table.

Table 33-1 Mark Timer Parameters

Flag	Segment	Beginning Time	End Time
S1	S1SEGID	S1BGNTIM	S1ENDTIM
S2	S2SEGID	S2BGNTIM	S2ENDTIM

Figure 33-4 Ramp/Soak Mark Timers

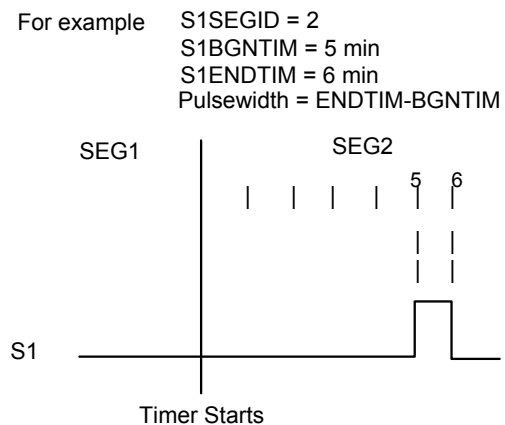

NOTE

- S1BGNTIM must be less than or equal to S1ENDTIM. (Same is true for S2 parameters.)
- S1ENDTIM is not required to terminate the marker within the segment specified by S1SEGID. For example, if Segment 2 is only 5.5 minutes long, then the marker will remain on until 6 minutes after the start of Segment 2 (which is 0.5 minutes into Segment 3).

33 Ramp and Soak Control Algorithm

33.1 Functional Overview

The S1 or S2 flag is turned on at the number of minutes after the specified segment begins, as is specified in SnBGNTIM. The corresponding flag is turned Off at the number of minutes after the specified segment begins, as specified in SnENDTIM.

The following functions also take place:

- At the end of the last segment in the sequence, the S1 and S2 flags are turned Off and the timers are reset.
- When a ramp or a soak segment is held up by the guaranteed-ramp or the guaranteed-soak functions, the mark timers are suspended.
- The mark timers suspend when the data point is in Man mode and the S1 and S2 flags are unchanged.
- If the remaining soak time (REMSOAKT) is changed (in Man mode), the mark timers are not affected.
- If the current segment (CURSEGID) is changed (in Man mode) to a segment that is earlier than or equal to a segment specified by SnSEGID, the corresponding mark flag goes to Off and its timers are reset. If a later segment is specified in CURSEGID, the flags and timers are not affected.

Long sequences


A sequence of more than 12 ramp and soak segments can be attained by interconnecting RAMPSOAK points. A Logic Slot can be used with a Switch Algorithm (see “

Switch Control Algorithm” in Section 1) to select any of the four RampSoak Algorithm data points.

Longer sequences can be accomplished by setting the S1 Mark Flag at the end of the last soak segment (S1 must be on for at least one sample time).

A Logic point reads the S1 Mark Flag and, using a pulse Logic Block (Pulse width can be one sample time), sets the corresponding S input on the Switch Algorithm. This causes the next RampSoak to become selected and all non-selected RampSoaks are INIT. The Switch Algorithm should be configured for tracking and Equation B.

Figure 33-5 Using a Logic Slot to Achieve Additional Rampsoak Segments

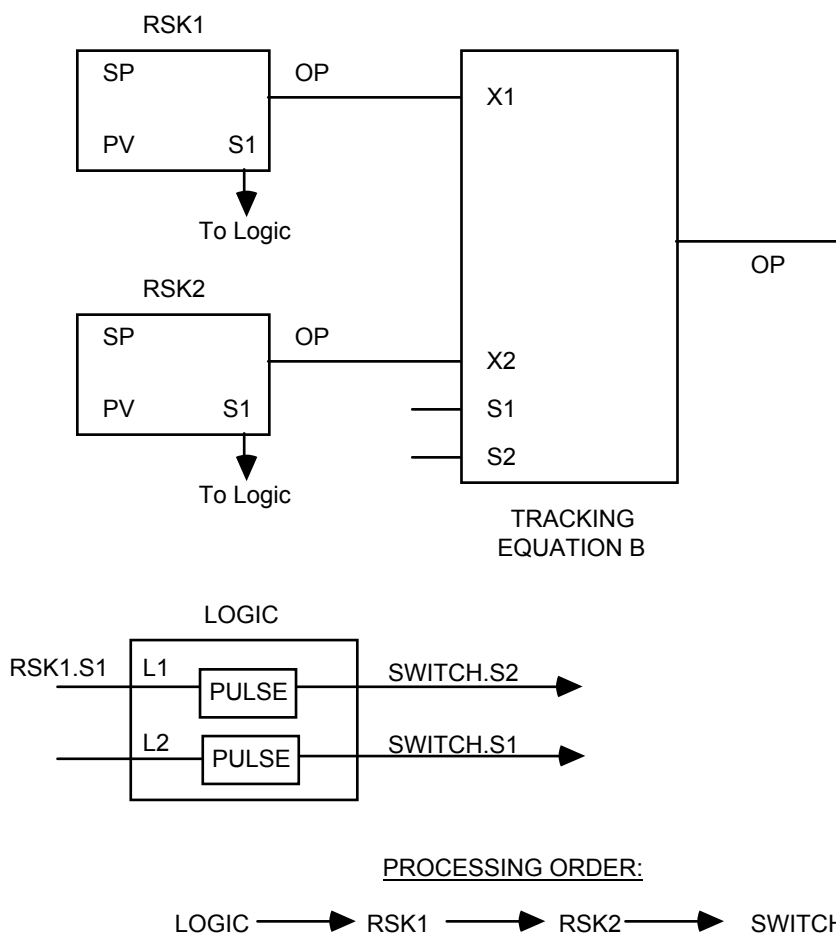

Engineering unit ranges

Engineering Unit Ranges; Setpoint , Output and Deviation Limits

The PV engineering unit range (PVEULO and PVEUHI) and the output engineering unit range (CVEULO and CVEUHI) must be specified. The setpoint engineering unit range (SPEULO and SPEUHI) always follows the PV range.

If the RAMPSOAK data point uses a PV algorithm, the setpoint EU range is the same as the PV EU range, and can't be differently configured. You should configure this point's PV EU range to be the same as the SP EU range of the secondary point that is receiving this point's output.

Output and Deviation limits

Output limits are defaulted to -6.9% to 106.9% and cannot be changed. Deviation limits (MXRMPDEV and MXSOKDEV) apply to all segments in the sequence.



ATTENTION

Setpoint limits are not available.

Restart or point activation

On a cold restart, a warm restart, or when the data point is activated, the mode goes to Man and the CV value is NaN. All timers are reset, and the current segment ID is made equal to the first ramp segment.

No special action occurs on a hot restart and the operation continues from where it was.

Control input connections

The ramp soak control algorithm requires only one control input connection (for PV). The number of control input connections is fixed at one.

In a typical application, the output of this algorithm provides the SP of a secondary controller (which is usually a PID control algorithm). The PV of the secondary controller is then fetched with a control input connection into the PV of the RAMPSOAK. If used in some different way such that the PV is not available from the secondary, the PV of the RAMPSOAK should be fetched from its own SP parameter.

33.2 Equations

There are no configurable equations for the RAMPSOAK algorithm. The ramp and soak segments are specified in the following:

- Number of ramp/soak segment-pairs in the sequence—NORSSEQ (Default = 2).
- Ramp Rates, EUs per minute—RATE1 through RATE12 (Default = NaN).
- Soak values—SOAKV1 through SOAKV12 (Default = NaN)
Soak times, in minutes—SOAKT1 through SOAKT12 (Default = 0).

34. Auto Manual Control Algorithm

34.1 Functional Overview


Family

The Auto Manual control algorithm is a member of the Regulatory Control algorithms.

Description

In cascade mode, this algorithm calculates a control output that is equal to the input value plus a bias value. The bias value is normally provided by an operator. In manual mode, the output is controlled by an operator or a user-written program.

Figure 34-1 Auto Manual Control Algorithm Functional Diagram

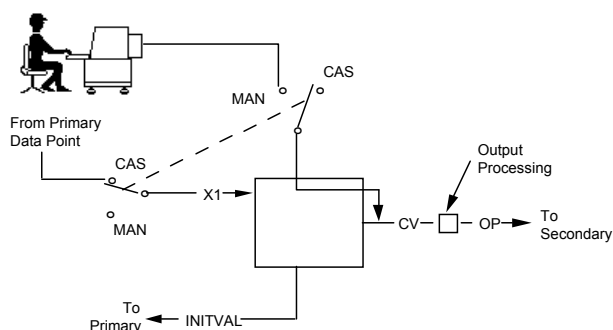

$$CV = X1 + B$$

Where :

X1 = Input (usually from a Primary PID controller)

$$B = BO + BI$$

B = Overall Bias, consisting of:

Equation A:

BO = Operator-entered bias = $K \cdot X2$ for Equation B

BI = Initialization Bias Component

34 Auto Manual Control Algorithm


34.1 Functional Overview

Equation A is designed to provide "bumpless" returns to cascade operation, even though its primary data point may not accept the initialization value from the AUTOMAN data point. Equation B provides automatic balancing of the biases between several auto manual stations and "bumpless" closing of cascades, with ramping of the initialization component.

Use

The AUTOMAN control algorithm typically serves as the ultimate secondary data point in a cascade-control strategy. As such it directly drives the control element (valve) through an analog output slot (a slot using a PID algorithm).

Figure 34-2 AUTOMAN Serving as Ultimate Secondary in a Fan-Out Configuration

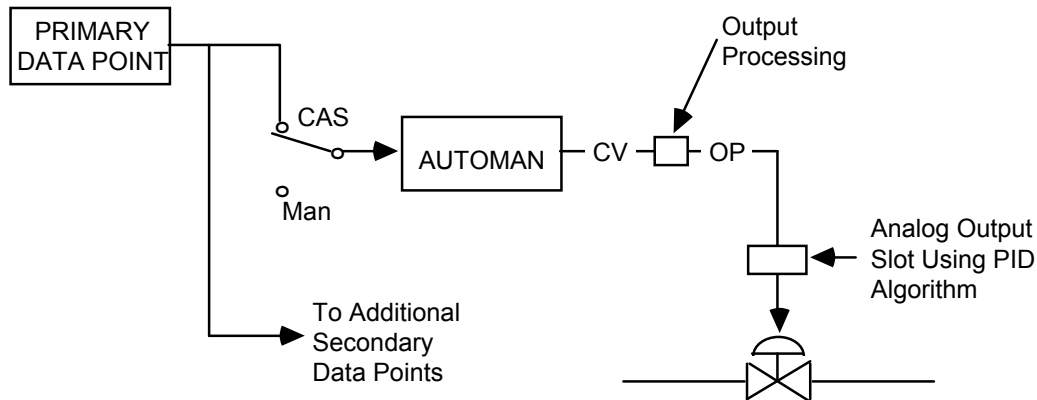

This algorithm is very useful for a secondary data point that is one of two or more secondaries of the same primary data point (a "fan-out" configuration). In such a configuration, AUTOMAN can provide a "bumpless" output even if its primary doesn't accept AUTOMAN's initialization request, but accepts one from one of its other secondaries. This might happen because the AUTOMAN point is temporarily out of the cascade because it is inactive or because it is in Man mode.

For an example of output from a PID controller to two auto manual stations, see the example under "Equation B" in Section 34.3).

You cannot write to the X1 parameter of this algorithm from an AM using a control output connection.

34.2 Options and Special Features

Bumpless returns to cascade

To support the use of this algorithm as one of the secondaries in a fan-out configuration, special handling of the bias value is provided. When the data point is configured for external initialization, the bias value, B, consists of two components (where B0 = the internal adjustment-value range, usually 0, and BI = the internal storage for operator-entered or program entered bias values).

$$B = B0 + BI$$

When the user or a program enters a bias value in B while in cascade operation, that value goes to B0 and BI is forced to zero. BI is an internal parameter that cannot be accessed by a user. B cannot be entered in Equation B.

When the cascade connection is broken (in Man mode, initialization-manual input, and so on) a value is calculated for the primary to initialize to, as follows:

$$INITVAL = CV - B0$$

When cascade operation resumes, the value in BI is calculated as follows (where Opprim = the actual output value from the primary data point (X1 input)):

$$BI = INITVAL - OPprim$$

If the primary data point did accept AUTOMAN's initialization value, BI turns out to contain zero. If the primary did not accept INITVAL, BI contains a value that causes CV to contain the value it had just before the cascade closed. In either case, CV does not "bump."

If BI has a value other than zero, then internal bias behavior depends on the value specified by the user in the RATE1 parameter. RATE1 is specified in engineering units-per-minute or NaN. If RATE1 is set to NaN, then the internal bias instantaneously changes to 0 and may cause a bump in the output. If a positive value is entered in RATE1, the value of BI ramps to zero at a rate specified in the RATE1 parameter. Thus, while the output doesn't "bump" it does ramp to the new value called for by the input from the primary.

Operating modes

The AUTOMAN algorithm supports three operating modes:

- Man
- Cas
- Bcas if RCASOPT = Ddc

Remote cascade options

Only the Ddc option is supported.

Engineering unit ranges

You must configure the X1 input range in XEULO and XEUHI. The output engineering unit ranges (CVEULO and CVEUHI) always follow the X input ranges.

Restart or point activation

On a cold or warm restart or when the data point is activated, initialization takes place as described under Bumpless returns to cascade. On a hot restart, initialization does not occur.

Error handling

If the X1 input has a bad-value status (or Equation B and X2 is bad), the CV value is bad but the data point remains in the same mode. When the bad input returns to normal, CV is recalculated and an initialization request is sent to the primary.

34.3 Equations

Background

This algorithm has two equations.

Equation legend

For Equation A

- $B = B0 + BI$

For Equation B:

- CV = Control algorithm output in Engineering Units
- X1= Initializable input pushed from primary
- B = Bias Value, and
- $B = (K * X2) + BI$
- X2 = input connection fetched with input connection #1
- BI = Initialization Bias Component

Equation A

Equation A is as follows:

$$CV = X1 + B$$

X1 is the input that is typically pushed from the primary PID controller and B is the overall bias, which consists of the operator set bias component (BO) and the initialization bias component (BI).

This form of the equation requires NO input connection. The number of input connections is defaulted to 0; however, it can be increased to 1, allowing the X1 input to be fetched with an input connection (X1 fetched by connection number 1).

Equation B

Equation A is as follows:

$$CV = X1 + B$$

X1 is the input that is typically pushed from the primary PID controller and B is the overall bias, which consists of the automatic bias adjustment ($K * X2$) and the initialization bias component (BI). X2 is fetched with an input connection (#1) from a calculated input. Bumpless closing of cascades is provided the same as in Equation A (with ramping of the initialization component). The overall Bias B is a read-only parameter and cannot be stored to.

Equation B requires only one input connection — X2. The number of input connections is defaulted to one; however, it can be increased to two, allowing the X1 input to be fetched with input connection #2.

Equation examples

If a PID controller outputs to two auto manual stations, the operator may want the total required offset between the outputs of the two auto manual stations to be distributed equally above and below the PID's output. The operator can store the bias (= half the required offset) to the first auto manual station (configured for Equation A). The second auto manual must be configured with Equation B, have K of -1.0, and get its X2 input from the B0 parameter of the first one. Thus, whenever the operator changes B0 of the first auto manual point, the bias of the second point tracks automatically.

Alternately, the strategy could be configured so that the bias value is held in a numeric. Each auto manual point would then fetch the numeric value into its X2 input. In this configuration, bias balancing is achieved by setting K on the two auto manual stations to +0.5 and -0.5, respectively.

34.4 Initialization

Initialization value = CV - B. For additional information, refer to Bumpless returns to cascade.


34.5 Override Feedback Processing

When the data point's secondary uses an Override Selector algorithm, the following functions take place:

- If this point is in Cas mode, Override Status PTORST is returned to this point through special processing.
- If that status is "not selected," an override-feedback value is calculated as follows, and it is passed on to the AUTOMAN data point's primary.

$$\text{ORFB} = \text{ORFBSEC} - B$$

Figure 34-3 AUTOMAN Override Feedback Processing

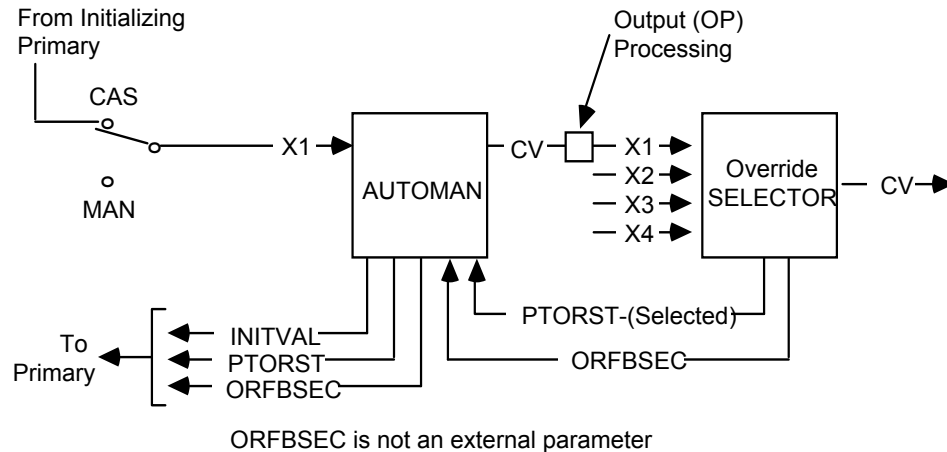

34 Auto Manual Control Algorithm

34.5 Override Feedback Processing

35. Incremental Summer

35.1 Functional Overview


Family

The Incremental Summer control algorithm is a member of the Regulatory Control algorithms.

Description

This algorithm calculates the sum of the incremental changes in up to four input values. The output is obtained by adding the sum of the changes in all inputs, after each input is multiplied by a scale factor.

Figure 35-1 Incremental Summer Control Algorithm Functional Diagram

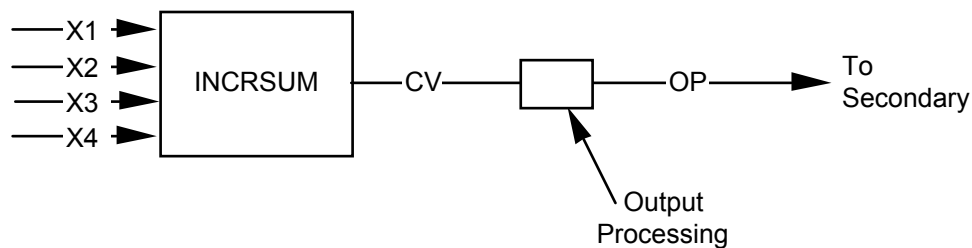

Equation:


$$CV = (\text{last value}) + \text{sum of changes in all inputs}$$

Inputs and outputs

This algorithm requires no input connections. The number of input connections is defaulted to 2, but it can be increased to up to four. For each input connection, the user must also specify the destination parameter, X1, X2, X3 or X4.

The primaries usually use PID algorithms, and are connected to an INCRSUM data point. The output from the INCRSUM data point is connected to the secondary. This is sometimes referred to as a "fan-in connection."

Figure 35-2 Incremental Summer Input and Output Connections

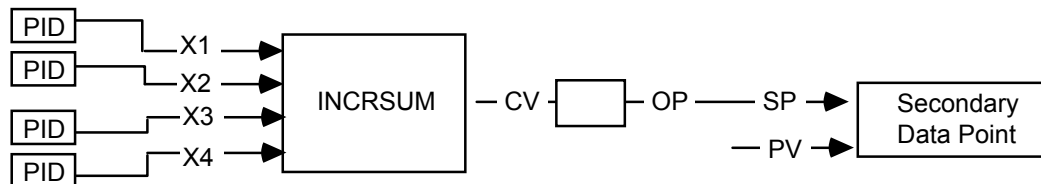

Use

This algorithm is typically used where more than one primary data point is used to manipulate the setpoint of the same secondary data point.

35.2 Options and Special Features

Handling inputs from PID outputs

Special handling of the outputs of PID data points is necessary in the Incremental Summer, because it is the dynamic operation of the PID that is significant—the full-value output is not significant. As the process variables change, PID outputs have no direct relation to the input, therefore they are said to be "floating." The incremental summer responds only to changes in the PID outputs, and calculates a full-value output to be applied to the control device (valve) in the process or to the secondary data point.

While the PID algorithms handle SPs, PVs, and outputs as percentages of the configured range, the Incremental Summer performs its calculations in engineering units.

To prevent a primary PID point in Auto or Cas mode from winding-up beyond its own output limits, every time the Incremental Summer point is processed it changes the PID's output value to its own CV value after converting to percent. This does not affect the dynamic changes in the PID outputs.

If a primary PID is in Man mode, the PID's CV is not changed by the Incremental Summer.

Certain restrictions apply to the PID points that are the Incremental Summer point's primaries. Each must:

- have only one control-output connection.
- reside in the same HPM box.
- be a normal PID or a PID Feedforward.

Engineering unit ranges

You must configure the X-input ranges in XEULO and XEUHI. The output engineering unit ranges (CVEULO and CVEUHI) always follow the X input ranges.

Changing the output with user written programs

User-written CL programs in the AM or user-written programs in a Computing Module can directly store new values in the CV parameter of the Incremental Summer's data point while the Incremental Summer point is in BCas mode, or if in CAS mode and RCASOPT is not = DDC, and normally operating. This causes a shift in the CV value but the dynamic changes continue, because the Incremental Summer dynamically increments or decrements CV each time the point is processed.

Operating modes

This algorithm operates only in Man and Cas modes, and in Bcas if RCASOPT = Ddc. Because the output of each PID primary tracks the OP output value of the INCRSUM data point, switching this point from Man to Cas does not "bump" the process.



ATTENTION

The dynamic correction calculated by a PID primary appears as a change in that data point's output after it is processed again and the Incremental Summer actually uses this change as its input. The full-value outputs of PIDs connected to the Incremental Summer have no meaning.

Remote cascade options

Only the Ddc option is supported.

Restart or point activation

On a warm restart, or point activation, initialization takes place as described under Initialization.

Bad control handling

When an input becomes bad (= NaN), it is not used in the calculation. No bad control alarm is generated. When the bad input returns to a normal value, its use in the output computation is resumed in the CV calculation without "bumping" the value. This feature allows adding multiple feedforward signals to the output of a PID controller.



ATTENTION

If a single feedforward input is needed, the PID feedforward control algorithm should be used.

35.3 Equations

Equation legend

When CV is calculated:

- CV(n) = Current full value of the output of this algorithm in engineering units.
- CV(n-1) = Past full value from the data point (value from the last time the data point was processed).
- m = The number of inputs actually used (m = 1 through 4).
- K1 through Km = User-specified scale factors (gains). K1 through K4 default to 1.0.
- X1(n) through Xm(n) = Current values of each X input in use.
- X1(n-1) through Xm(n-1) = Past value of each X input (value from the last time the data point was processed).

Equations

CV is calculated as follows:

$$\begin{aligned} \text{CV}(n) &= \text{CV}(n-1) + K1 * [X1(n) - X1(n-1)] \\ &+ K2 * [X2 - X2(n)(n-1)] \\ &\quad \cdot \\ &\quad \cdot \\ &\quad \cdot \\ &+ Km * [Xm(n) - Xm(n-1)] \end{aligned}$$

35.4 Initialization

Initialization occurs in Man mode when the output is indisposable, or when recovering from a bad CV value (NaN), as follows:

- An initialization request is sent to all primary data points (up-to-four).
- The Incremental Summer's CV value and past values are initialized as—

$$CV(n-1) = CV$$

$$X1(n-1) = X1$$

⋮

⋮

⋮

$$Xm(n-1) = Xm$$

35.5 Override Feedback Processing

Override control strategies

If the Incremental Summer's secondary is an Override Selector data point, and its Override Status (PTORST) is not selected, the CV of the INCRSUM data point is set equal to the override feedback value. During the next pass of forward calculation, the incremental summer computes its CV in the normal fashion.



TIP

This is very useful for cases where several feedforward signals are added to the output of a PID controller (the addition done by the incremental summer algorithm) and the overall result is fed to an override selector. Because the output of the PID controller tracks the output of the incremental summer, which in turn tracks the output of the override selector when not selected, the output of the PID controller is prevented from winding up when not selected by the override.

35 Incremental Summer

35.5 Override Feedback Processing

36. Switch Control Algorithm

36.1 Functional Overview


Family

The Switch control algorithm is a member of the Regulatory Control algorithms.

Description

This algorithm operates as a single-pole, 4-position rotary switch. An operator, a user-written program, or user-configured logic can change the position of the switch, thereby selecting any one of the four inputs to be the control-algorithm output value, CV.

Figure 36-1 Switch Control Algorithm Functional Diagram

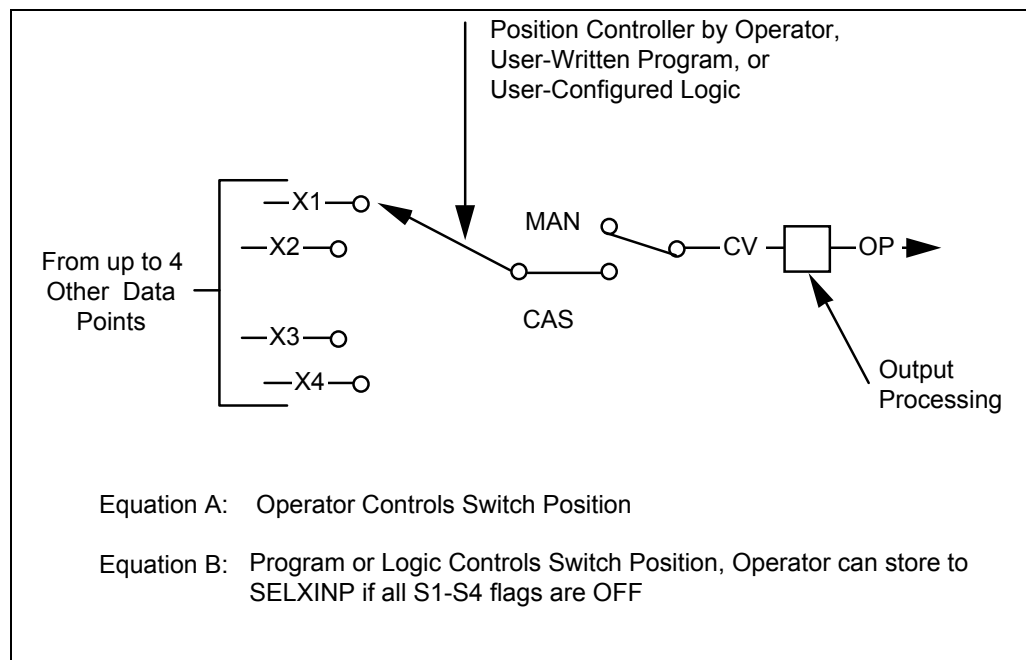

You cannot write to X1 from an AM Regulatory point using a control output connection.

Inputs and outputs

This algorithm requires no input connections. The number of input connections is defaulted to 2; however, it can be increased to up to 4. For each input connection, the user must also specify the destination parameter as X1, X2, X3 or X4.

36 Switch Control Algorithm


36.1 Functional Overview

Use

The Switch control algorithm is used to allow the operator to alter control strategies by selecting any of four inputs to be passed on to the output, if Equation A is chosen. If Equation B is chosen, a Logic Slot can change the switch position, or the operator can store to SELXINP if all four input selection flags (S1, S2, S3, and S4) are Off.

You can use SWITCH to select inputs from differing sources and to pass them on to a single destination or you can use more than one SWITCH data point to switch a single source to differing destinations. The following figure shows an example of each of these situations.

Figure 36-2 Switch Control Algorithm Examples

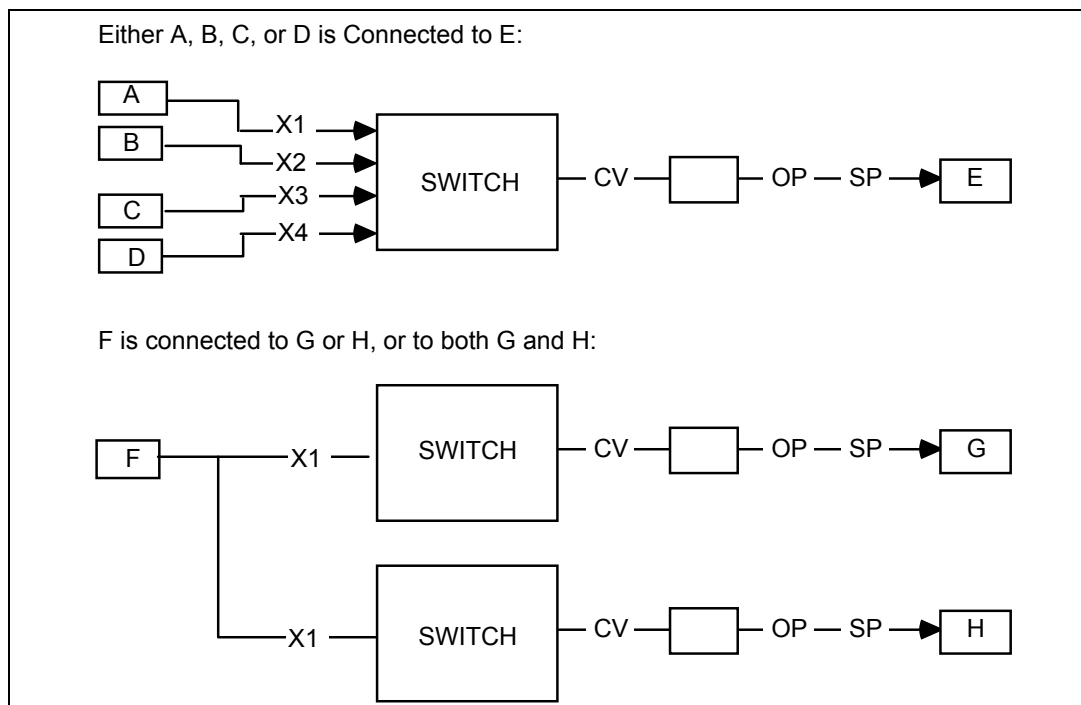

36.2 Options and Special Features

Engineering unit ranges

The X-input engineering unit ranges (XEULO and XEUHI) must be specified for X-inputs. The output engineering unit ranges (CVEULO and CVEUHI) always follow the X-input ranges.

Switch position control

The Switch control algorithm provides two equations:

- **Equation A – Operator Switching**, where an operator can change the switch position by—
 - altering the value in SWITCH data-point parameter SELXINP—The value in SELXINP specifies the Xn input selected. The corresponding S1, S2, S3, or S4 switch indicator goes On and the other three switch indicators go Off.
 - changing the desired switch indicator from Off to On—When one of the S1, S2, S3, or S4 indicators is changed to On, all others go Off. SELXINP then indicates the position selected.



TIP

Changing the desired switch indicator from Off to On is very useful when operating with custom displays. The displays can be built to allow the operator to see the positions and strategies selected unless S1 through S4 are all OFF.



ATTENTION

When the configuration is changed from Equation B to Equation A, ensure the following:

- No external connections exist for S1, S2, S3, or S4 connections of the switch.
 - If connections exist from external sources, ensure that these connections are active and are On.
-

- **Equation B – Automatic Switching**, where logic or user written programs switch between inputs—
 - turning an S1, S2, S3, or S4 indicator On does not turn the others Off.
 - the switch position is changed by storing On and Off in the S1-S4 parameters as defined in the following table.

Table 36-1 SELXINP Parameter Status

S1	S2	S3	S4	Xn	SELXINP
On	–	–	–	X1	SELECTX1
Off	On	–	–	X2	SELECTX2
Off	Off	On	–	X3	SELECTX3
Off	Off	Off	On	X4	SELECTX4
Where "–" means On or Off does not affect the switch position. S1 has the highest priority, S4 has the lowest.					



ATTENTION

In the HPM, an operator is allowed to change the switch position, by storing to the SELXINP parameter when configured for Equation B, if all input selection flags (S1, S2, S3 or S4) are Off.

Tracking

You may configure the SWITCH algorithm for the tracking option, which causes non-selected inputs to track the selected input value. This allows the switch position to be changed without "bumping" the output.

When tracking option is configured, the primaries connected to non-selected inputs can be initialized. Should one of the primaries not accept the initialization value from the SWITCH data point, the output may bump when that input is selected. (A primary might not accept an initialization value because it has more than one secondary and accepts initialization from one of its other secondaries.)



ATTENTION

For the tracking option to work, the Switch input must come from an HPM primary Regulatory Control point. The output destination from the RegCtl point must specify the Switch point (that is, the Switch input must be pushed from the RegCtl point).

When SWITCH is included in an override control strategy, the tracking option must be configured.

Operational modes

The Switch-control algorithm operates in the following modes:

- Man
- Cas
- Bcas if RCASOPT = Ddc

Remote cascade options

Only the Ddc option is supported.

Restart or point activation

On a cold or warm restart, or when the SWITCH data point is activated, initialization takes place, as configured (see "Initialization" in Section 36.4).

On a hot restart, normal operation resumes with no initialization.

Error handling

If a selected input has a bad-value status, the CV value goes bad (NaN), but the operating mode does not change. When the status of the selected input is again good, CV is recalculated, an initialization request is sent to the primary data point.

36.3 Equations

Background

The Switch control algorithm provides two equations:

- **Equation A – Operator Switching**, where an operator can change the switch position.
- **Equation B – Automatic Switching**, where logic or user written programs switch between inputs.

Equation legend

In Equations A and B:

- $n = 1, 2, 3, \text{ or } 4$.
- CV = The control output value in engineering units.
- $SELXINP$ = The selected-input. Default = SelectX1.
- $S1$ through $S4$ = Switch indicators.
- M = The number of inputs configured. Default = 2.

Equations

Equations A and B:

$$CV = X_n$$



ATTENTION

Equations A and B differ in controlling aspect of the switch position. For additional details, refer to Switch position control.

36.4 Initialization

When an initializing condition occurs, an initialization request is sent to the selected primary and the initialization value is the present CV value.

If the tracking option is configured (see “” in Section 36.2), the non-selected primaries are continually initialized.

36.5 Override Feedback Processing

If this data point's secondary is an Override Selector point and if this point is in Cas mode, when override-feedback processing takes place, override status and an override value are passed to this point's primary. The status is in parameter PTORST.

If PTORST indicates not selected, the value passed to the selected primary in ORFB is equal to the value received from the secondary in ORFBSEC.

36 Switch Control Algorithm

36.5 Override Feedback Processing

37. Override Selector Control Algorithm

37.1 Functional Overview

Family

The Override Selector control algorithm is a member of the Regulatory Control algorithms.

Description


The Override Selector Algorithm is used with up-to-four PID inputs, all of which are initializable. The input with the highest value or the input with the lowest value is selected and passed on to the output of this data point. The algorithm can operate as a simple selector or an override option can be configured that prevents PID points in an override-control strategy from winding up.

If the override option is configured (OROPT = On), an operator can put the ORSEL point in a bypass state and any of the inputs can be bypassed; that is, not used in the algorithm calculation. Four logical parameters are provided to select the input to be bypassed. These parameters are BYPASSX1, BYPASSX2, and so on. There is an additional parameter, BYPASS. When BYPASS = On, the input Xn for which BYPASSXn is On is initialized (equal to the selected input) and not used in the calculation of the output. When all four inputs are bypassed, the output is maintained at the last values.

All bypass parameters can be stored by the operator, or any system function, but only the BYPASS parameter is available for changing at the group display level.

To ensure proper loop initialization, the OROFFSET parameter should be set to On when OROPT = On.

Figure 37-1 Override Selector Control Algorithm Functional Diagram

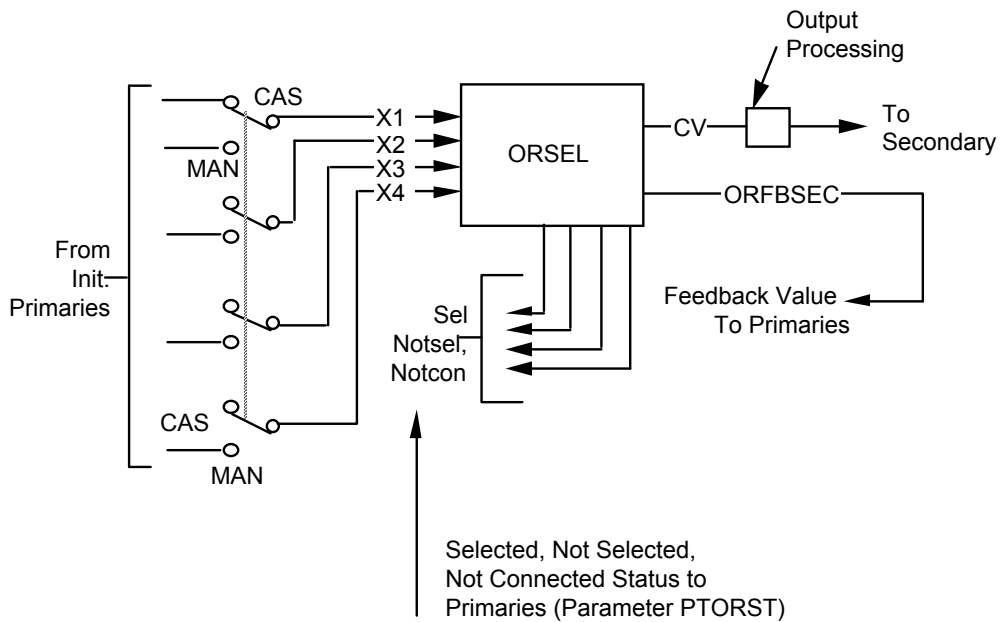

Equation A: HI Selector
Equation B: LO Selector

Inputs and outputs

This algorithm requires no input connections. The number of input connections is defaulted to 0; however, it can be increased to up to 4. For each input connection, a destination parameter X1, X2, X3 or X4 must be configured.

Use


This algorithm can be used, without the override option, as a simple selector that selects either the highest or the lowest of the connected and active inputs. With the override option, it is used for override-control strategies where a process variable is measured and normally controlled, but where another variable is selected to constrain the controlled variable, under a specified condition. This is often referred to as "multivariable-constraint control."

The figure Override control strategy example illustrates an override strategy. The X1 input to the ORSEL point is normally selected and applied as the setpoint to the fuel-flow controller. If the value of the air flow multiplied by some ratio exceeds the fuel-flow setpoint, the air flow constrains the fuel flow.

In a strategy like that illustrated in the following figure, Equation A, the override option is configured. PID data points connected to non-selected inputs are prevented from "winding up" by forcing their outputs to track the override feedback signal (ORFBSEC).

The simple selector (override option not configured) can be set up to initialize one input, but not all inputs, by using control-input connections for the inputs that are not to be initialized, and by using a control-output connection from the point that is connected to the input to be initialized.

Figure 37-2 Override Control Strategy Example

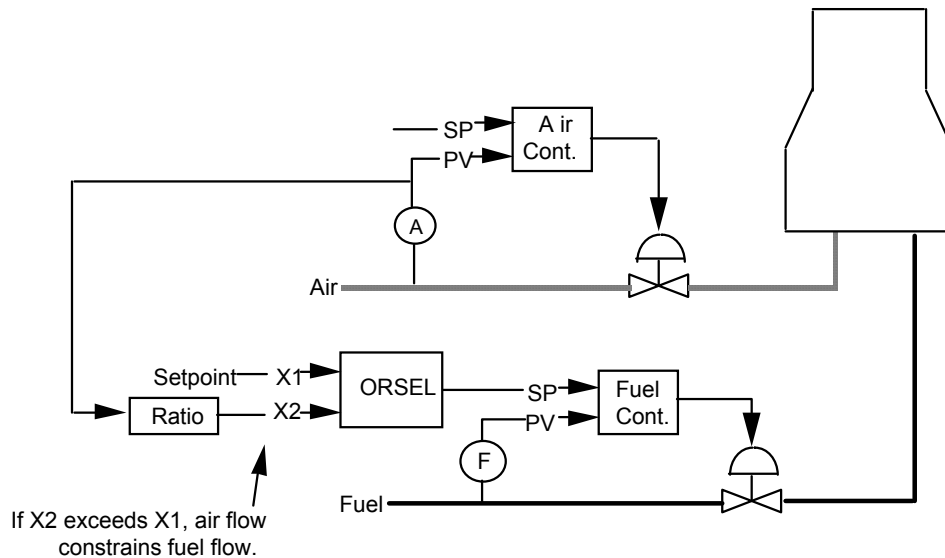

37.2 Options and Special Features

Bypass

When configured as an override selector, any of the inputs X1, X2, X3, and X4 can be individually bypassed (not used in the algorithm calculation). Four logical parameters are provided to select the input to be bypassed. These parameters are BYPASSX1, BYPASSX2, BYPASSX3, and BYPASSX4. An additional parameter, BYPASS is provided. When BYPASS is On, the input Xn for which BYPASSXn is On is initialized (set equal to the selected input) and not used in the calculation of the output. When all four inputs are bypassed, the output is maintained at the last value.

These parameters are available only when the override option is configured (OROPT = On).

All bypass parameters can be stored by the operator, or any system function, but only BYPASS is available for changing at the group display level.



ATTENTION

When a selected input is bypassed, all parameters go through 1-shot initialization.

Engineering unit ranges

The engineering-units ranges for the X1 through X4 inputs must be configured in parameters XEUHI and XEULO. These parameters contain the high and low values for the range, which is the same for all four inputs. The output engineering unit ranges (CVEULO and CVEUHI) always follow the X-input range.

Operating modes

Because a data point that uses ORSEL is always a secondary to at least one other data point, this algorithm operates only in the following modes:

- Cas
- Man
- Bcas if RCASOPT = Ddc

Remote cascade options

Only the Ddc option is supported.

Restart or point activation

On a warm restart, or on activating the data point, the CV is initialized to the value returned from the secondary and an initialization request is sent to all of the primaries.

Error handling

In Cascade mode with BYPASS Off, if any input has a Bad-Value status, CV's value is bad (NaN) and the mode doesn't change when the CV value goes bad. Also, in Cascade mode with BYPASS On, any non-bypassed input (BYPASSXn=Off) that has a Bad-Value status causes CV to go bad (NaN).

If a bad input, that was causing CV to be Bad, returns to Normal, CV returns to normal, CV is made equal to OP, and all bypassed primaries are initialized (see "Initialization" in Section 37.4).

Processing order

Processing order is always important, but especially for the ORSEL strategy. ORSEL functions will not work properly if point processing order is incorrect.

37.3 Equations

Background

The Override Selector control algorithm provides two equations:

- **Equation A**—Select the higher of the connected, active inputs.
- **Equation B**—Select the lower of the connected, active inputs.

Equation legend

For either equation:

- CV = The control-algorithm output in engineering units.
- X1 through X4=The four available inputs.
- M = The number of inputs configured. Default = 2.
- SELXINP = The selected input; SelectX1 through SelectX4.



ATTENTION

With SELXINP if more than one input has the highest (EqA) or the lowest (EqB) value, the lower-numbered input is selected.

For example, if X2 and X3 have exactly the same highest value (EqA) SELXINP contains SelectX2.

Equations

In Equation A:

CV = highest of X1 through Xm

In Equation B:

CV = lowest of X1 through Xm

37.4 Initialization

Initialization requests from secondary points are ignored as long as the ORSEL output is disposable.

If the ORSEL is initialized because it is in Manual mode, the output is indisposable, or it has just returned from bad control status, CV is made equal to INITVAL from the secondary, and SELXINP is set to None. When the ORSEL is in Manual mode, an initialization request is passed on to all primaries with an initialization value equal to CV. When the ORSEL is initializing because the output is indisposable or it is returning from bad control, an initialization request is passed on to all primaries whose input are bypassed (BYPASS = On and BYPASSXn = On) with an initialization value equal to CV.

37.5 Override Feedback Processing

Background

If the override option is configured, PID points connected to non-selected inputs are prevented from "winding up" by forcing their outputs to track the override-feedback signal (ORFBSEC).

Override offset

A configuration parameter called Override Offset (OROFFSET = On) is provided to control the behavior of any PIDs connected to the non-selected inputs. If Override Offset is configured, the output of the PID whose override status is not selected is set equal to the override feedback value, plus gain times error (after converting to percent). If the override offset is not configured, the output of the PID whose override status is not selected is set equal to the override feedback value (after converting to percent).

Override feedback initiation

If the override option is configured for the ORSEL point and the ORSEL point is in Cas mode and not initializing, it propagates override-feedback information to its primary points and on "upstream."

When BYPASS is Off, the appropriate NotCon, Sel, NotSel status is given to ORSEL's primaries in PTORST, and the override-feedback value that is passed to the primaries is calculated as (where ORFBSEC, an internal parameter, is the feedback value from the secondary):

$$\text{ORFBSEC} = \text{CV}$$

If, under the above conditions, BYPASS is On, the status sent to the primary connected to the non-bypassed selected input is Sel, NotCon is sent to the bypassed primaries and they are all initialized. NotSel is set to the non-bypassed non-selected primaries.

If there is more than one Override-Feedback data point in a strategy, only the one nearest the final control element (the "most downstream" point) initiates override feedback.

Override feedback propagation

Override-feedback propagation is the passing of status and feedback values, from the initiating Override Feedback Selector, "upstream" through one or more other data points.

If a "downstream" Override Feedback Selector requests status and value propagation, an "upstream" Override Feedback Selector" propagates the value and status "upstream," only if each of the following is true:

- it is configured as an Override Selector (override configured).
- it is in Cas mode.
- its output is disposable.

When these conditions are met (where PTORST = Point Override Status, SEL = selected, and ORFBSEC = feedback value from the secondary):

If...	then...	else...
PTORST = SEL	ORFB = CV	ORFB = ORFBSEC

PTORST status sent to the selected primary is the same as that received from the secondary. If BYPASS is:

- **False**, the status to all other primaries is NotSel.
- **True**, non-selected inputs are initialized, so the status sent to them is NotCon.

38. Multiply Divide Control Algorithm

38.1 Functional Overview


Family

The Multiply/Divide (MULDIV) control algorithm is a member of the Regulatory Control algorithms.

Description

The Multiply/Divide algorithm calculates a control output (CV) by multiplying and dividing combinations of three inputs: X1, X2, and X3.

Figure 38-1 Multiply/Divide Control Algorithm Functional Diagram

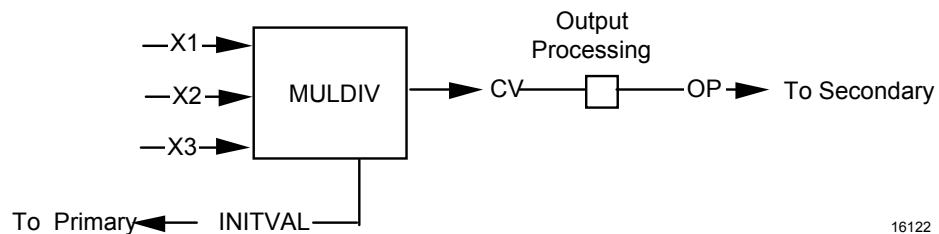

16122

Each of the three input variables can be multiplied by a scale factor, and then a bias value added to them. For example, input X1 can be multiplied by a scale factor K1 and a bias value of B1 added to the result. In a similar way, input X2 can be multiplied by K2 and bias value B2 added and X3 can be multiplied by K3 with B3 added.

The resulting product can also be multiplied by an overall scale factor K and an overall bias B added.



ATTENTION

X1 is an initializable input.

X2 and X3 can be used only as inputs and their data cannot be stored from another source. Their data has to be fetched.

Inputs and outputs

For equations A, B, and C, the number of input connections is defaulted to 1. It can be increased to 2 allowing the X1 input to be fetched with an input connection. X1 is fetched by connection number 2.

38 Multiply Divide Control Algorithm

38.2 Options and Special Features

For equations D and E, the number of input connections is defaulted to 2. It can be increased to 3, allowing the X1 input to be fetched with an input connection. X1 is fetched by connection number 3.

Use

This algorithm is normally part of a cascade control strategy. Typically, its primary is a data point that is using a PID algorithm, and its secondary is another data point that is also using a PID algorithm. The Multiply/Divide algorithm can also provide an input to an Override Selector algorithm.

38.2 Options and Special Features

Ramping bias

The ramping rate for the internal bias is specified by the RATE1 parameter which is configured in terms of engineering units per minute. When RATE1 is set to 0, the internal bias BI does not decay and remains fixed. If RATE1 is set to NaN, the internal bias BI does not decay but instantaneously changes to 0 during initialization. This will cause a bump in the output.

Engineering unit ranges

The X input range is configured by XEULO and XEUHI. The output range CVEUHI and CVEULO is derived from the secondary if the number of output connections is greater than 0. Otherwise it must be configured.

Operational modes

The RegCtl Multiply/Divide algorithm operates in the following modes:

- Man
- Cas
- Bcas if RCASOPT = Ddc

Remote cascade options

Only the DDC option is supported.

Error handling

If any of the inputs have a bad value, the CV value is bad but the point remains in the same mode. When the bad input returns to normal, CV is recalculated and an initialization request is sent to the primary.

38.3 Equations

Background

The Multiply/Divide algorithm can be configured using anyone of five equations.

Equation legend

For each equation:

- CV = Current full value of the output of this algorithm in engineering units.
- K = Overall scale factors (gain). The default is 1.0.
- K1 through K3 = User-specified scale factors (gains) for inputs X1 through X3. The default is 1.0.
- X1 through X3 = Current values of each X input in use.
- B1 through B3 = User-specified bias for inputs X1 through X3. The default is 0.
- B = Overall bias (see “Initialization” in Section 38.4). The default is 0.

Equations

The Multiply/Divide algorithm can be configured using the equations defined in the following table.

Table 38-1 Multiply/Divide Equations (CV)

Equation	Description
A	$CV = K * (K1 * X1 + B1) * (K2 * X2 + B2) + B$
B	$CV = K * \frac{(K1 * X1 + B1)}{(K2 * X2 + B2)} + B$
C	$CV = K * \frac{(K2 * X2 + B2)}{(K1 * X1 + B1)} + B$
D	$CV = K * \frac{(K1 * X1 + B1) * (K3 * X3 + B3)}{(K2 * X2 + B2)} + B$
E	$CV = K * \frac{(K2 * X2 + B2) * (K3 * X3 + B3)}{(K1 * X1 + B1)} + B$

38.4 Initialization

Background

Input X1 is an initializable input and initialization is accomplished with an internal ramping bias. The Bias B is made up of two components, BO and BI, where BO is the operator entered bias and BI is the internal bias component. The internal bias decay rate parameter RATE1 specifies the decay rate of the internal bias BI.

Normal cascade operation

During normal cascade operation, when a user enters a bias B, the value goes into BO and BI is set to zero. When the cascade is broken, input X1 goes into initialization.

Initialization and ramping bias equations

The following table lists the initialization and internal ramping bias equations used with Equations A through E. The internal ramping bias value BI is calculated when the cascade operation resumes (where CV_{last} is the last calculated CV before initialization).



ATTENTION

For Equation A, if the Primary:

- accepts the INITVAL, then the value of BI turns out to be 0.
- does not accept INITVAL, the BI turns out to be a non-zero value that would cause a bumpless CV output. Then BI will decay to zero at the rate specified by RATE1 which is specified in terms of engineering units per minute.

Table 38-2 Multiply/Divide Initialization Equations (INITVAL)

Equation	Description
Equation A	
Initialization	$INITVAL = \frac{(CV - B0)}{K * (K2 * X2 + B2)} - B1$
Internal ramping bias	$BI = CV_{last} - K * (K1 * X1 + B1) * (K2 * X2 + B2) - B0$
Equation B	
Initialization	$INITVAL = \frac{(CV - B0)}{K} * (K2 * X2 + B2) - B1$
Internal ramping bias	$BI = CV_{last} - K * \frac{(K1 * X1 + B1)}{(K2 * X2 + B2)} - B0$
Equation C	

38 Multiply Divide Control Algorithm

38.4 Initialization

Equation	Description
Initialization	$\text{INITVAL} = \frac{\frac{K * (K2 * X2 + B2)}{(CV - B0)} - B1}{K1}$
Internal ramping bias	$\text{BI} = \text{CV}_{\text{last}} - K * \frac{(K2 * X2 + B2)}{(K1 * X1 + B1)} - B0$
Equation D	
Initialization	$\text{INITVAL} = \frac{\left(\frac{(CV - B0)}{K} * \frac{(K2 * X2 + B2)}{(K3 * X3 + B3)} \right) - B1}{K1}$
Internal ramping bias	$\text{BI} = \text{CV}_{\text{last}} - K * \frac{(K1 * X1 + B1) * (K3 * X3 + B3)}{(K2 * X2 + B2)} - B0$

38.5 Override Feedback Processing

Background

When the point's secondary uses an override selector algorithm, the following function takes place. If the point is in Cascade mode, override status PTORST is returned to this point through special processing. If the status is not selected, an override feedback value is calculated as follows and it is passed to the primary of the Multiply Divide Algorithm.

Override feedback equations

The feedback value calculations for each of the equations are defined in the following table.

Table 38-3 Multiply/Divide Override Feedback Equations (ORFB)

Equation	Description
A	$ORFB = \frac{\frac{(ORFBSEC - B)}{K * (K2 * X2 + B2)} - B1}{K1}$
B	$ORFB = \frac{\frac{(ORFBSEC - B)}{K} * (K2 * X2 + B2) - B1}{K1}$
C	$ORFB = \frac{\frac{K * (K2 * X2 + B2)}{(ORFBSEC - B)} - B1}{K1}$
D	$ORFB = \frac{\left(\frac{(ORFBSEC - B)}{K} * (K2 * X2 + B2) \right)}{(K3 * X3 + B3)} - B1$
E	$ORFB = \frac{\frac{(K2 * X2 + B2) * (K3 * X3 + B3)}{(ORFBSEC - B)} - B1}{K1}$

38 Multiply Divide Control Algorithm

38.5 Override Feedback Processing

39. Regulatory Control Summer Algorithm

39.1 Functional Overview


Family

The Regulatory Control Summer control algorithm is a member of the Regulatory Control algorithms.

Description

As illustrated in the following figure, the Regulatory Control Summer algorithm calculates a control output (CV) by summing up to four inputs: X1, X2, X3, and X4.

Figure 39-1 Regulatory Control Summer Functional Diagram

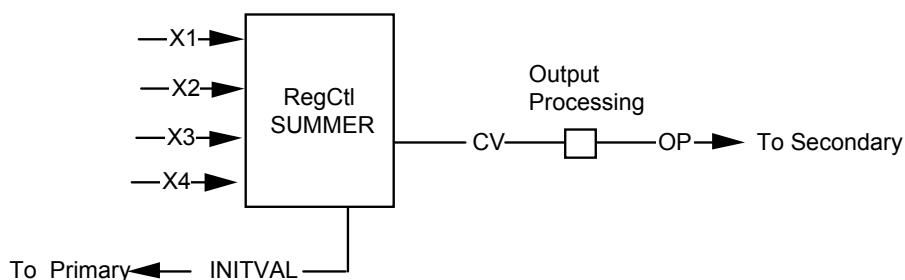

Each of the inputs can be scaled by their gains K1, K2, K3, and K4. The output can be scaled by an overall gain K and overall bias value B can be added to the result.

If only one input (X1) is used, then only the overall gain parameter K and the overall bias B are configurable.



ATTENTION

X1 is an initializable input.

X2, X3 and X4 can be used only as inputs and their data cannot be stored from another source. Their data has to be fetched.

Inputs and outputs

The number of input connections is defaulted to: (number of inputs – 1). It can be increased by 1, allowing X1 to be fetched using an input connection.

Use

This algorithm is normally part of a cascade control strategy. It can be used to calculate a sum of up to four control inputs. It can provide an input to an override-selector algorithm.

39.2 Options and Special Features

Ramping bias

The ramping rate for the internal bias is specified by the RATE1 parameter which is configured in terms of engineering units per minute. When RATE1 is set to 0, the internal bias BI does not decay and remains fixed. If RATE1 is set to NaN, the internal bias BI does not decay but instantaneously changes to 0 during initialization. This will cause a bump in the output.

Engineering unit ranges

The X input range is configured by XEULO and XEUHI. The output range CVEUHI and CVEULO is derived from the secondary if the number of output connections is greater than 0. Otherwise it must be configured.

Operational modes

The Summer algorithm operates in the following modes:

- Man
- Cas
- Bcas if RCASOPT = Ddc

Remote cascade options

Only the DDC option is supported.

Error handling

If any of the inputs have a bad value, the CV value is bad but the point remains in the same mode. When the bad input returns to normal, CV is recalculated and an initialization request is sent to the primary.

39.3 Equations

Background

The equations used when processing Regulatory Control Summer algorithm depends on the number of configured inputs.

Equation legend

For both equations:

- CV = Current full value of the output of this algorithm in engineering units.
- K = Overall scale factors (gain). The default is 1.0.
- K1 through K4 = User-specified scale factors (gains) for inputs X1 through X4. The default is 1.0.
- X1 through X4 = Current values of each X input in use.
- B = Overall bias (see “Initialization” in Section 39). The default is 0.

Equations

For Regulatory Control Summer algorithms configured for:

- one (1) input, the equation is—

$$CV = K * X1 + B$$

- two (2) to four (4) inputs, the equation is (where n = the number of inputs)—

$$CV = K * (K1 * X1 + K2 * X2 \dots + Kn * Xn) + B$$

39.4 Initialization

Initializable input

Input X1 is an initializable input and initialization is accomplished with an internal ramping bias.

Bias

The Bias B is made up of two components, BO and BI, where BO is the operator entered bias and BI is the internal bias component. the internal bias decay rate parameter RATE1 specifies the decay rate of the internal bias BI.

Cascade

When the cascade is:

- broken—
 - input X1 goes into initialization
 - the initialization value to the primary is calculated as:

$$\text{INITVAL} = \frac{((CV - BO) K) - K2 * X2 \dots Kn * Xn}{K1}$$

- resumes—
 - the internal ramping bias value BI is calculated (where CV_{last} is the last calculated CV before initialization):

$$BI = CV_{\text{last}} - K * (K1 * X1 + K2 * X2 \dots Kn * Xn) - BO$$



ATTENTION

When only the X1 input is used, the following equations apply:

$$\begin{aligned}\text{INITVAL} &= \frac{(CV - BO)}{K} \\ BI &= CV_{\text{last}} - K * X1 - BO\end{aligned}$$

39.5 Override Feedback Processing

Background

When the point's secondary uses an override selector algorithm:

- If the point is in Cascade mode, override status PTORST is returned to this point through special processing.
- If the status is not selected, an override feedback value is calculated as follows and it is passed to the primary of the Summer.

Override feedback value

The feedback value for equations with:

- one (1) input, the equation is—

$$ORFB = \frac{ORFBSEC - B}{K}$$

- two (2) to four (4) inputs, the equation is (where n = the number of inputs)—

$$ORFB = \frac{\frac{(ORFBSEC - B)}{K} - K2 * X2 \dots - Kn * Xn}{K1}$$

39 Regulatory Control Summer Algorithm

39.5 Override Feedback Processing

40. Output SWITCH Select Algorithm

40.1 Functional Overview


Family

The Output Select algorithm (OPSELECT) is a member of the Regulatory Control algorithms. The OPSELECT regulatory control algorithm has been added to the HPM in R650.

Description

This algorithm allows you to implement a control strategy that switches one input to one of four different outputs, as specified by the \$SELCTOP parameter. An operator, a user-written program, or user-configured logic can change the output selected by \$SELCTOP. The algorithm operates as a single pole, 4-position rotary switch as shown in the following figure.

Figure 40-10 P SELECT Control Algorithm Functional Description

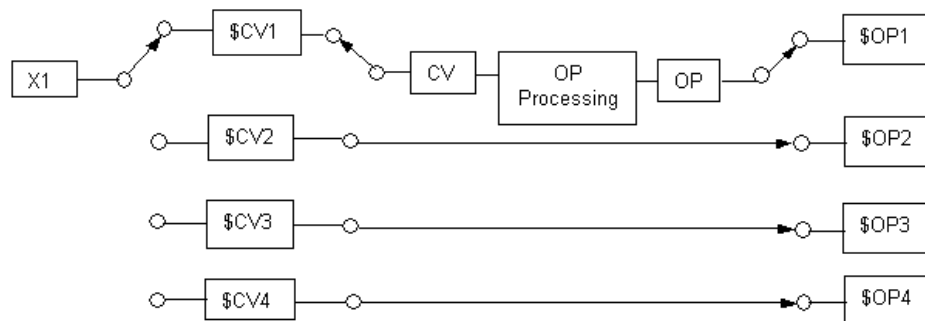

In the figure shown above, the user control strategy provides the output value to the X1 input. The X1 input can be connected to any one of 4 outputs. Typically, the outputs are connected to analog output points (AO.OP), or to the inputs of other regulatory control points (such as SP inputs of PID regulatory control points).

For the default configuration shown above, The X1 input is connected to \$CV1 which becomes the overall CV for the OPSELECT algorithm. The CV undergoes output processing to determine the overall output value OP that becomes the OP of the selected output. OP is calculated from CV which is stored into \$OP1 (OP of the selected output).

40 Output SWITCH Select Algorithm

40.1 Functional Overview

In the default configuration, the \$SELCTOP parameter value SELOP1 selects \$OP1 as being the algorithm output value. Additionally, when \$OP1 is selected by parameter \$SELCTOP, flag S1 of the regulatory control point is set to ON.

The OP values of the unselected outputs are calculated from their CV values. The CV values of the unselected outputs are set to their default values (\$CDEF2-\$CDEF4) that are configured by the user.

In this case, the unselected outputs (\$OP2-\$OP4) are set to default values that are specified by parameters \$CDEF2-\$CDEF4, respectively. (The \$CDEF1 parameter provides the default value for \$OP1 when \$OP1 is unselected). Additionally, the flags (S2-S4) of the unselected outputs are set to OFF, to indicate that \$OP2-\$OP4 have not been selected.

As an example, if the user changes the value of \$SELCTOP parameter to SELOP3, then the \$OP3 value becomes the algorithm output value and outputs \$OP1, \$OP2, and \$OP4 are set to their default values as specified by parameters \$CDEF1, \$CDEF2, and \$CDEF4. In addition, flag S3 is set to ON and flags S1, S2, and S4 are set to OFF.

The user can also change the values of flags S1-S4 to select the respective output, as described later in this section.

Inputs and Outputs

Control Input Connections

The OPSELECT algorithm does not require input connections because another regulatory control point can write a value to parameter X1.

By default, the number of input connections (NOCINPTS) is 0. However, it can be changed to 1 in which case, the user must specify the destination parameter as X1.

Number of Output Connections

Using the parameter \$NOPCONN, you can specify the number of output connections (total number of PUSH and FETCH connections) configured for the OPSELECT regulatory control point. A maximum number of 4 output connections can be configured.

Control Output Connections

The number of control output connections (NOCOPTS) parameter:

- Specifies the number of control-output PUSH connections that can be configured for the OPSELECT point (for example, if the connection is made to the SP input of a PID point).
- Should be equal to or less than the number of output connections specified by the \$NOPCONN parameter.
- Determines the order of PUSH/FETCH outputs based on the configuration. The number assigned to the NOCOPTS parameter specifies the number of PUSH outputs and the remaining outputs become FETCH outputs.

The control output PUSH connection can be connected either to valid destination parameters of another regulatory control point, or to valid parameters of IOPs.



ATTENTION

You cannot combine the regulatory control point and IOP point output PUSH connection for the same OPSELECT point.



ATTENTION

A difference between the OPSELECT regulatory control point and other regulatory control points is that the control outputs of most regulatory control points can have up to 4 connections, but the OPSELECT algorithm can have only one output connection for each \$OPn.

The \$SELCTOP parameter value cannot be changed to a non-configured output position. For example, if \$NOPCONN=3, \$SELCTOP cannot be set to SELOP4 because only 3 connections are configured. This restriction is also applicable to flags S1-S4). If OPSELECT point is not able to drive the output to the selected output, BADOc<n>FL is ON and the bad output connection alarm is activated.



ATTENTION

Bad output connection checks are not performed for the non-selected outputs.

Unselected Outputs

The OPSELECT regulatory control point provides parameters \$CDEF1-\$CDEF4. With these parameters, the user can specify the default values for the four outputs when the outputs are unselected. The values of the parameters can be set by an engineer, by a user-written CL program.

For example, if the selected output is \$OP1, then the 4 output CV values are set as follows:

$$\text{\$CV1} = \text{X1} + \text{B}$$

$$\text{\$CV2} = \text{\$CDEF2}$$

$$\text{\$CV3} = \text{\$CDEF3}$$

$$\text{\$CV4} = \text{\$CDEF4}$$

If the selected output is changed to \$OP2, then the 4 output CV values change to the following values:

$$\text{\$CV1} = \text{\$CDEF1}$$

$$\text{\$CV2} = \text{X1} + \text{B}$$

$$\text{\$CV3} = \text{\$CDEF3}$$

$$\text{\$CV4} = \text{\$CDEF4}$$

Bumpless Output Transfer

The OPSELECT regulatory control point provides bumpless output transfer when you change the selected output using the ramping bias function. Because unselected outputs do not support the ramping bias function, a bump occurs in the output when changing from the selected to the unselected state.

Output Hold Option

When the selected output is changed, an unselected output can be configured to hold the last value by specifying its default value \$CDEFn as NaN. The initial value of \$CVn = NaN when \$CDEFn = NaN.

For example, if \$CDEF1 = NaN, output \$CV1 holds the last value when the selected output is changed from 1 to 2.


Bias

To configure the operator-entered bias value (BO), enter the bias value in parameter B. This value is also BO value. Whenever B is changed, the internal bias BI is forced to zero.

Cascade Scenario

A typical cascade strategy using the OPSELECT algorithm is shown in the following figure. The output of a PID block is connected to the input of OPSELECT, and the outputs of OPSELECT are connected to 4 analog output points.

Figure 40-2 Switching Example

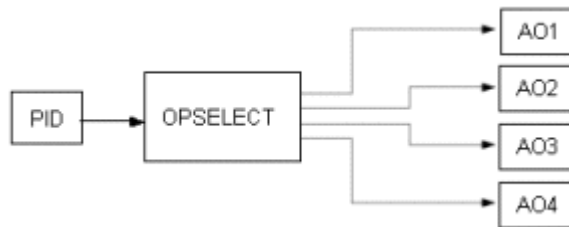

The output of the PID is channeled to AO2 by setting \$SELCTOP = SELOP2. If OPSELECT is in cascade mode, the OPSELECT propagates the windup status of the selected output (\$OP2) to the PID block.

Use

The regulatory control OPSELECT function performs the output switching function. This algorithm is normally part of control strategy that switches one input to any one of up to four different outputs.

40.2 Options and Special Features

Modes

The OPSELECT regulatory control point can be operated in the manual or cascade mode. The mode attribute parameter (MODATTR) can be configured for operator, program, or none.

Manual mode

In manual mode, the operator controls the selected output by changing the value of output value OP.

Cascade mode

In cascade mode, the CV of the selected output (\$CV1, \$CV2, \$CV3 or \$CV4) is set to a value $X1 + B$.

$$\$CV_n = X1 + B$$

where,

\$CV_n is the CV of the selected output

$$B = BO + BI$$

where,

B = Bias value

BO = Operator entered bias value

BI = Initialization bias component

Ramping Bias

The ramping rate for the internal bias is specified by the RATE1 parameter (configured as engineering units per minute). Ramping bias is applicable only to the selected output.

When RATE1 is set to 0.0 (default value), the internal bias BI remains fixed. If RATE1 is set to NaN, then the internal bias BI does not ramp but instantaneously changes to 0 during initialization. This may cause a bump in the output.

If an OPSELECT regulatory control point is configured with a default value (0.0) for RATE1 and loaded, and when the point is set to the CAS mode, or output switching is done in the CAS mode, the output will not ramp but remains at the same value. However, initialization bias is calculated and whenever the user changes the value of RATE1, the selected output starts ramping.

Engineering Unit Ranges

The X1 input range is specified by the range parameters XEUHI and XEULO. The output engineering range values (CVEUHI and CVEULO) track the X1 input range values. When the XEUHI or XEULO value is changed and the value of any \$CDEFn is crossing the new limit (either high or low), then a configuration error message is displayed and the new value for XEUHI or XEULO is not stored.

Windup Handling

This algorithm supports the regulatory control windup propagation function. When the selected output value exceeds the user specified limits, the appropriate windup status is propagated upstream so that any PID blocks in the cascade chain does not windup.

OP Limits

The OP value of the selected output is limited by OPHI and OPLO limits configured by the user. Similar to the other regulatory control functions, OPSELECT regulatory control point supports OP minimum-change limiting and OP rate-of-change limiting functions. However, rate-of-change and minimum-change limiting are not processed on the first scan whenever switching occurs whenever \$SELCTOP is changed, and the first OP receives the value of the selected secondary, and then the OPHI and OPLO are applied to the OP.

Point Activation

When the OPSELECT regulatory control point is activated after a cold start, the outputs \$CV1, \$CV2, \$CV3 and \$CV4 are initialized to NaN.

40.3 Equations

Background

The OPSELECT regulatory control point supports two equations, Equation A and Equation B.

Equation A

If equation A is configured, an operator at the Universal Station can change the switch position by using any one of the following methods.

- By altering \$SELCTOP parameter value. The value of \$SELCTOP specifies the selected output. In addition, one of the four flags (S1, S2, S3 or S4), that represent the selected output is set to ON and the other three switches are set to OFF.
- By changing the desired flag (S1, S2, S3 or S4) from OFF to ON. When one of the flags is set to ON, the other three flags are set to OFF and the \$SELCTOP parameter indicates the selected output.

For example, if the OPSELECT regulatory control point is configured for equation A, the operator can connect input X1 to output \$CV1 by setting \$SELCTOP = SELOP1. The S1 flag is set to ON and the other three flags (S2, S3 and S4) are set to OFF. The overall CV of the algorithm is equal to \$CV1 and the overall OP value is calculated based on the value of CV. The output of selected output \$OP1 is set equal to the overall OP.

The CV's of the unselected outputs are set to their default values (that is, \$CV2 = \$CDEF2, \$CV3 = \$CDEF3, and \$CV4 = \$CDEF4). \$OP2 is calculated from \$CV2, \$OP3 is calculated from \$CV3, and \$OP4 is calculated from \$CV4.

To change the selected output from 1 to 2, the operator can either change the setting of \$SELCTOP to SELOP2 or change the setting of flag S2 from OFF to ON.

Equation B

Equation B is primarily intended for automatic switching of outputs using CL programs.

If the OPSELECT regulatory control algorithm is configured for equation B, the switch position can be changed by storing to the \$SELCTOP parameter only if all the flags (S1–S4) are OFF. Setting one flag to ON does not set the other flags to the OFF state. The switch position may be selected by setting the flags to ON and OFF as shown in the following table.

S1	S2	S3	S4	\$SELCTOP
ON	X*	X	X	SELOP1
OFF	ON	X	X	SELOP2
OFF	OFF	ON	X	SELOP3
OFF	OFF	OFF	ON	SELOP4
OFF	OFF	OFF	OFF	Remains at last selected value**

*X indicates ON or OFF.

**If the flags change to a state where all are OFF, the selected output remains at the last setting.

For example, the OPSELECT regulatory control point is configured for equation B so that the regulatory control point can be controlled by a CL program. The X1 input can be connected to \$CV1 by setting S1 = ON and the other three flags (S2, S3 and S4) can be set to OFF or ON because S1 has the highest priority and S4 has the lowest priority.

To change the selected output from 1 to 2, either set S1 = OFF and S2 = ON or set all the flags (S1-S4) to OFF and then set \$SELCTOP = SELOP2. If all the flags are set to OFF, the selected output initially remains unchanged at SELOP1. The selection changes to SELOP2 only when the \$SELCTOP parameter is set to SELOP2. All the flags have to be initially set to OFF because with equation B, \$SELCTOP can be stored only if all the flags are OFF.

Red Tag

If REDTAG or SHUTDOWN is ON, then the output cannot be switched by operating \$SELCTOP or by operating S1-S4, because output changes are not allowed.

40.4 Initialization

Input X1 is an initializable input and it is initialized using an internal ramping bias if the selected output is indisposable.

For example, if output 2 is selected and the analog output slot AO2 is inactive, the OPSELECT regulatory control point goes into the initialization state (INIT). This state is propagated upstream to the PID block which also goes into the initialization state and an initialization value (INITVAL) equal to $CV - BO$ is propagated to the PID block.

If AO2 is activated, the cascade operation resumes and the initialization bias ($BI = INITVAL - X1$) is calculated.

If the PID block output initializes to INITVAL, then BI is set to zero. If the PID does not initialize to INITVAL, BI contains a non-zero value and results in a bumpless \$CV2 output.

If BI contains a value other than zero, the internal bias behavior depends on the value specified in the RATE1 parameter. The value of BI ramps to zero at a rate configured in RATE1 (engineering units per minute).



ATTENTION

Although this algorithm has 4 output connections, only the status of the selected output determines the INITMAN state of this algorithm.

41. Box Data Points

41.1 Box Data Point Background

Global variables

The HPM provides the following global variables:

- 16,384 Flag variables.
- Up to 16,384 Numeric variables.
- Up to 16,384 8-character String variables.
- Up to 4096 Time variables.
- 64 Timer variables.

The full 16,384 flags and 64 timer variables are always present. Numerics, strings, and times are configured by HPM Node Specific Configuration parameters such as NSTRING (number of strings). Configuration is determined by considering the Memory Units needed for your system. Box global variables do not require any PUs. Some specific types of points (for example, Process Module) provide similar local variables.

Box Data Point Types

The HPM supports the following Box Data Points:

- Box Flag
- Box Timer
- Box String
- Box Numeric
- Box Time



ATTENTION

With TPN R682, you can take a backup of box parameters and restore all the values later. The backup and restore option can be accessed through the target BOX PARAM BACKUP RSTR in the DEB. In DEBEC, the commands “BPB” and “BPR” can be used for backup and restore operations respectively.

41 Box Data Points

41.1 Box Data Point Background

42. Box Flag Data Point

42.1 Functional Overview

Family

The Box Flag data point is a member of the HPM Box Data Points.

Description

A Box Flag Data Point is a 2-state (On and Off) point that is used for storing a Boolean value. The value can be supplied by the operator, by the sequence program, by an output connection from another HPM point, by any HPM (or PM) box on the same UCN, or by a node on the LCN. There are 16384 Flag Data Points (slots) available in an HPM box. The first 2047 flag points are tagable and can be configured as Full or Component points. The first 4095 Box Flags are accessible from the LCN. The remaining flags must be accessed through an array point.

Flag data points are not scheduled and only off-normal alarms are processed. Their states change when they are accessed by other functions such as an operator or a user-written program.


Tag name

Flag points do not require a tag name. They can be accessed by !BOX.fl(i) or \$NMxxNyy.fl(i) where xx is the network number and yy is the HPM node number. After configuration, flag variables are initialized to Off. A functional diagram of the Flag Data Point is shown in the following figure.

As shown in this figure, the input to the flag point is provided by parameter PVFL, which can be On or Off. PVFL will set the flag-point PV state to the same state as PVFL. The PV is then available as an output from the flag point and its current state can be accessed by other points in the HPM and in the system.

PVFL will also light the STATE1 and STATE0 boxes on the Universal Station Displays, depending on its state. If PVFL is On, the STATE1 (upper) box will be lighted; if PVFL is Off, the STATE0 (lower) box will be lighted.

Figure 42-1 Box Flag Data Point Functional Diagram

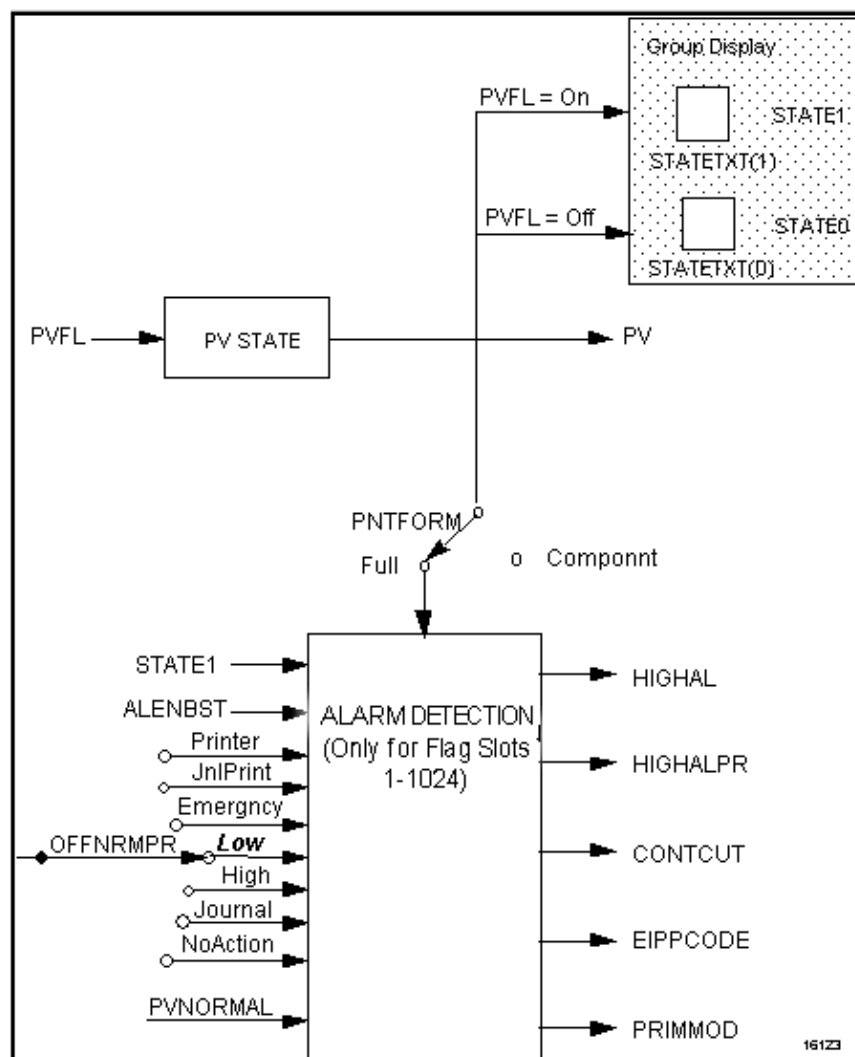

Alarming

The first 1024 flag points (slots) can be configured for off-normal alarming. An alarm will be generated when the PV of the flag point is changed from STATE0 (Off) to STATE1 (On)

43. Box Numeric Data Point

43.1 Functional Overview

Family

The Box Numeric data point is a member of the HPM Box Data Points.

Description

Numeric Data Points store numeric values that can be used for batch/recipe operations, or they can be used as a scratch pad to store the intermediate results of calculations. The values in a numeric point are real numbers that have been entered by the operator, or by a sequence program, or other system elements. Box Numeric Data.

Point types

Up to 16,384 Numeric slots can be configured as part of each HPM box. Numeric slots do not require a tag name. They can be accessed by !BOX.nn(i) or \$NMxxNyy.nn(i) where xx is the network number and yy is the HPM node number. After configuration, numeric variables are initialized to NaN. An Array point must be used to access index numbers greater than 4095 over the LCN.

With R660, the first 2047 numeric slots can be configured as alarmable points when they are configured as Full points. If they are to be configured as Component points, there is no alarming capability.

Access


These points are accessible to the sequences in the same HPM box, to any HPM (or APM or PM) box on the same UCN, and to any node on the LCN. The first 2047 Numeric points are tagable and can be configured as named data points. The first 4095 Box Numerics are accessible from the LCN. The remaining Numeric variables can be accessed through an array point.

Non-alarmable numeric data points are not scheduled and are not processed. Their parameter values change when they are accessed by a system activity, such as by an operator or a sequence program.

Alarming

With R660, PV trip point alarming capability is available for HPM Box Numeric data points. By using the \$NNUMALM parameter in the HPM Box Data Point you can specify the maximum number of HPM Box Numeric slots that are to be processed for PV trip point alarming.

Figure 43-1 Box Numeric Data Point Functional Diagram

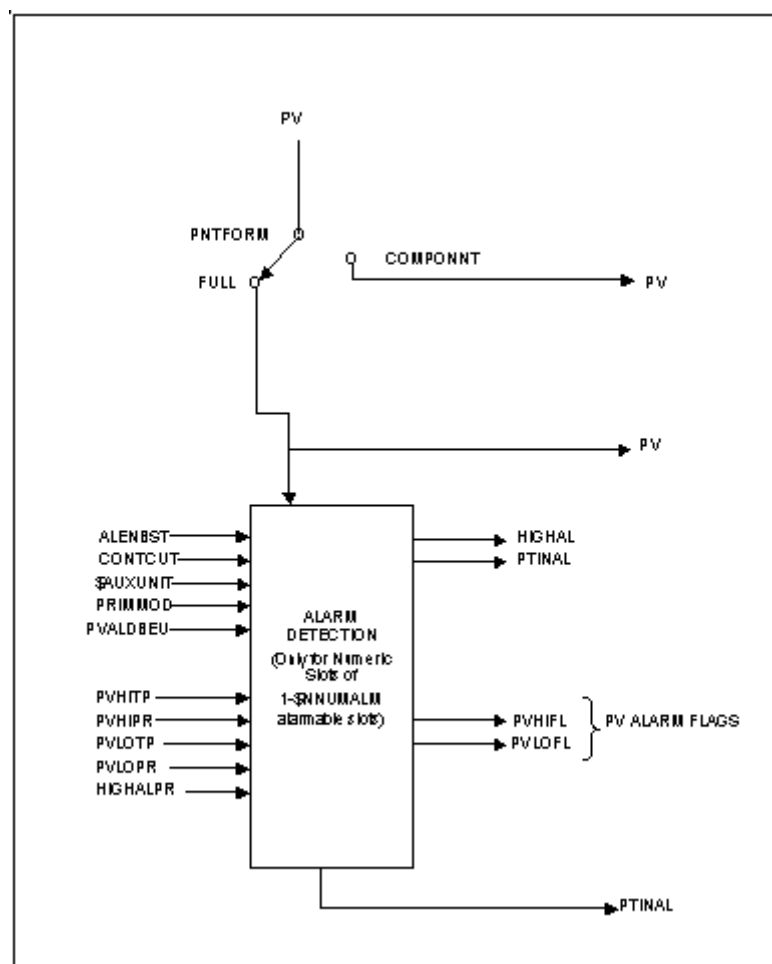



ATTENTION

To use the new feature, please note the following:

- For a new node: The default value for \$NNUMALM parameter is set to 0.
- For an existing node (after migrating to R660 software): Idle the HPM, reconstitute the HM Box Data Point, and change the value of the \$NNUMALM parameter to the desired number of alarmable numeric points in the HPM Box Data point. The value of the parameter can be changed in the Parameter Entry Display. After changing the parameter, load the revised HPM Box Data Point into the HPM and then start up the HPM.
- If a NIM receives more than 50 numeric-point alarms within 5 seconds, the reporting of the remaining alarms is delayed.



REFERENCE - INTERNAL

For additional information on the alarming parameters, refer to the *PM Family Parameter Reference Dictionary*.

43 Box Numeric Data Point

43.1 Functional Overview

44. Box Timer Data Point

44.1 Functional Overview


Family

The Box Timer data point is a member of the HPM Box Data Points.

Description

The Box Timer Data Point allows the operator and the sequence program to time the process events, as required. This type of data point keeps track of the elapsed time after the timer has been started and provides an indication when the elapsed time has reached the predefined limit.

Figure 44-1 Box Timer Data Point Functional Diagram

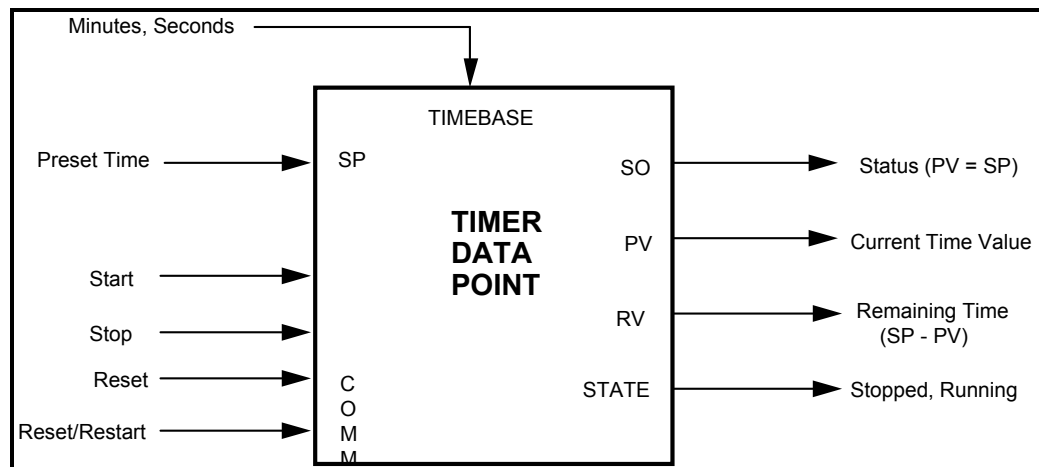

Point types

Box Timer Data Points are component points and cannot be configured as full points.

Points per box

There are 64 Timer Data Points in each HPM Box, and like box numeric and flag points, timer data points do not require a tag name. These points are accessible to the sequences in the same HPM box, to any HPM (or APM or PM) box on the same UCN, and to any node on the LCN. A functional diagram of the Timer Data Point is shown in this section.

44 Box Timer Data Point

44.1 Functional Overview

Use

To use a Timer Data Point, an operator or the sequence program loads a preset time value (the length of time that the timer is to run in seconds or minutes) into parameter SP. Once the preset value is entered, the timer is started by setting parameter COMMAND to Start. (The timer can also be stopped, reset, or reset and restarted through the COMMAND parameter.)

Time

The time value in PV starts at zero and increments toward the preset time value when the timer is processed. (The timer is processed once each second.) The RV parameter indicates the time remaining until the timer reaches its limit (SP - PV). When PV = SP, the status parameter SO is set to On to indicate that the time limit has been reached. The values in PV and SP can range from 0 to 32000 seconds or minutes, as configured.

Parameters

To access, use !BOX.TMSP(n) or !BOX.TMCMDB(n).

45. Box Time Data Point

45.1 Functional Overview

Family

The Box Time data point is a member of the HPM Box Data Point.

Description

Time variables may be used to store date/time information such as the date machinery was put in service, when the machinery was serviced last, when the machinery was last used, and so on.

Time variables

The HPM box provides up to 4096 global Time variables. The maximum limit is determined by the Node Specific Configuration parameter NTIME (number of times). Time variables are not configurable with a tag name.

Access

They can be accessed by !BOX.TIME(i) or \$NMxxNyy.TIME(i) where xx is the network number and yy is the HPM node number. The first 4095 Box Times are accessible from the LCN. An array point must be used to access number 4096. After configuration, time variables are initialized to 0.

45 Box Time Data Point

45.1 Functional Overview

46. Box String Data Point

46.1 Functional Overview

Family

The Box String data point is a member of the HPM Box Data Points.

Description

String variables can be used to store descriptive text data such as the brand name or model of machinery, who to contact for service, and so on.

Variables per box

The HPM box provides up to 16,384 8-character String variables. The upper limit is determined by the Node Specific Configuration (box) parameter NSTRING (number of strings). The first 4095 Box Strings are accessible from the LCN. An array point must be used to address strings with an index of greater than 4095.

Tag names

String variables are not configurable with a tag name.

Access

They can be accessed by !BOX.STRn(i) where n is the string length or \$NMxxNyy.STRn(i) where xx is the network number and yy is the HPM node number.

Initialization

After configuration, string variables are initialized to spaces.

46 Box String Data Point

46.1 Functional Overview

47. Array Points

47.1 Array Background

Description

Array points provide access to two sources of data:


- HPM box global variables.
- external data from/to Serial Interface devices.

HPM box global variables

An Array point can:

- an Array point can define a section of the box variables as its own data (see the following figure).
- access to single variables over the LCN is limited by the upper index (4095), but using an Array point you can access upper Flag, Numeric, String, and Time variables.
- the Array point can access and fetch string data in lengths of 8, 16, 32, or 64 characters.

Figure 47-1 Array Point Access to Box Global Variables

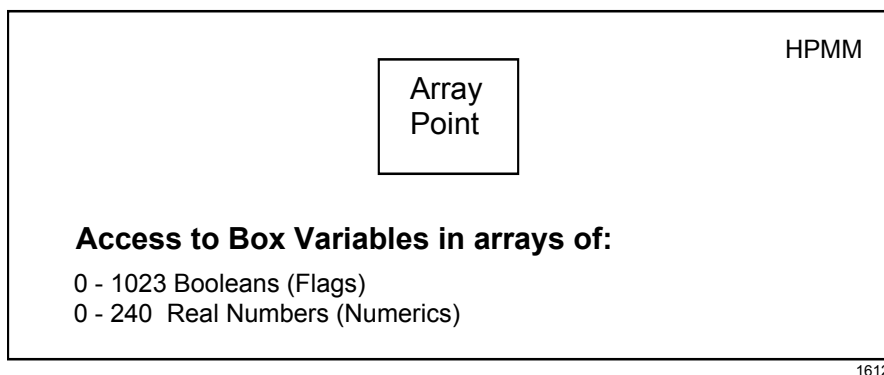

47 Array Points

47.1 Array Background


External data from/to serial interface devices

An Array point can:

- scan and image (read) large quantities of data from a Serial Interface (SI) IOP can be scanned and imaged (read).
- be used as if it were local data to the Array point (see the following figure).
- write through the Serial Interface.

Figure 47-2 Serial Interface to an Array Point

HPM

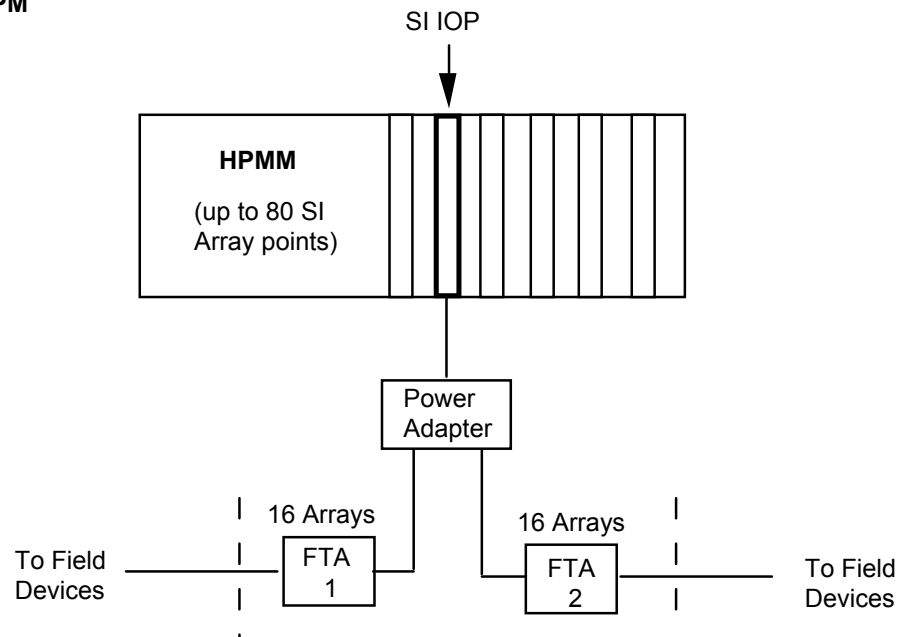

Each Array point can contain up to 512 Booleans (Flags), or 16 Reals (Numerics) or 32 Integers (Numerics), or 64 byte-sized Integers (Numerics), or 64 ASCII Characters (Strings)

16125

47.2 Node Specific Configuration Requirements

Parameters

Array point configuration begins with HPM Node Specific Configuration. You can allocate up to 256 array points through the parameter NARRSLOT. Other Node Specific Configuration parameters that affect the Array point are—

- NNUMERIC - the number of Box Numerics (in multiples of 16) that you want available.
- NSTRING - the number of Box Strings that you want available (in multiples of 16).
- Note that Box Strings are only available as 8-character strings.
- NTIME - the number of Box Times (in multiples of 32) that you want available.
- SCANPER - if you intend to access Serial Interface data, this parameter specifies the period at which the HPMM scans SI data and maps it to the Array points.

Maximum number of points

The HPMM can scan SI IOP data at three rates and this determines the maximum number of Array points with SI connections that you can have are defined in the following table.

Table 47-1 Maximum Si/Array Points

SCANPER	Max. # of SI/Array Points
1 Second	80
0.5 Second	40
0.25 Second	20

Module type

Finally, you must select SI as the Module Type on the IO Module Configuration pages for each SI IOP board that you wish to implement.

Note that 16,384 box flags are always available. The number of variables of each particular global box variable data type available to an Array point is further limited by configuration parameters for the Array point.

47 Array Points

47.3 Array Parameter Names

47.3 Array Parameter Names

Data elements in the Array point are referred to by the Array point tagname, type of variable and index number (i). For example ARR01.FL(9). The complete list is provided in the following table.

Table 47-2 Array Parameter Names

Variable	Parameter
Flags	FL(i)
Numerics	NN(i)
Strings	STRn(i)
Times	TIME(i)

In the case of strings, n refers to the string length, 8, 16, 32, or 64. For example STR32(4).

47.4 Array Point Use with HPM Box Global Variables

Configuration

When the External Data Option parameter (EXTDATA) on the Array point configuration screen form is set to NONE, the Array point parameters provide indirect access to flag, numeric, string, and time HPM box global variables.

Note that an Array point is just a convenient way of referring to related data; the actual data comes from the HPM box global variables (in this case). When accessing one of these variables by the Array point tag name, the HPM translates the request to a specific HPM box global variable.

When accessing the HPM box global variables, each Array point allows the configuration as defined in the following table.

Table 47-3 HPM Box Global Variables

Box Global Variable	Number of Elements	Array Point Starting Index	Range of Starting Index	Range of Array Size
Flags	1–16,384	FLSTIX	1–16,384	0–1023

Box Global Variable	Number of Elements	Array Point Starting Index	Range of Starting Index	Range of Array Size
Numerics	1–NNUMERIC	NNSTIX	1 to NNUMERIC	0–240
Strings	1–NSTRING	STRSTIX	1 to NSTRING	0–240
Times	1–NTIME	TIMESTIX	1 to NTIME	0–240

String length


The Array point parameter STRLEN specifies string length as 8, 16, 32, or 64 characters and this determines the format in which strings are presented on the Array point Detail Display. Regardless of the value of STRLEN, Array point string data can still be referenced using the STR8, STR16, STR32, or STR64 formats.

The following figure shows how longer character string lengths can be fetched from the 8-character format HPM box global string variables (provided that the access requested is within the configured section). For example, if the Array point string starting index is set to 301 and adequate HPM box string variables are configured (in 8-character format), a request for the 64 character Array point parameter STR64(2) will fetch Box.STR8(309) through Box.STR8(316). If only part of a longer character string can be fetched, the available portion is fetched. An array index error results when none of the requested string is available.

47 Array Points

47.4 Array Point Use with HPM Box Global Variables

Figure 47-3 String Array with Starting Index Set to 301

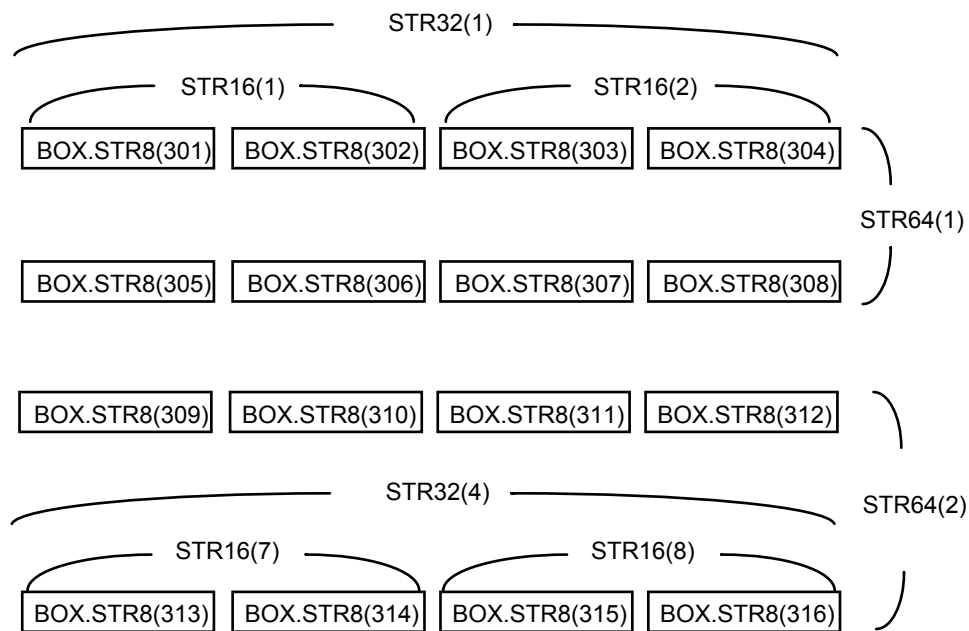

Descriptors

You can enter 4 descriptors up to 64 characters long, 1 for each type of variable. These descriptors are typically used to describe the array variables. They appear on the Array point Detail Display. Refer to the *Process Operations Manual* for examples.

Access Lock

Parameter SPLOCK determines store access to the variables. Configuration choices are Operator, Supervisor, Engineer, or Program.

Array point example

Array point ARR100 is configured to represent the ingredients necessary to make product X. The parameters are configured as follows:

Parameter	Meaning	Example Entry
PTDESC	point descriptor	"Product X ingredients"
FLSTIX	flag starting index	0
NFLAG	number of flags in array	0
NNSTIX	numerics starting index	2001
NNUMERIC	number of numerics in array	75
STRLEN	string length	16
STRSTIX	strings starting index	1001
NSTRING	number of strings in array	75
TIMESTIX	times starting index	0
NTIME	number of times in array	0
SPLOCK	set point lock	Operator
NNDESC	numeric descriptor	"Product X Ingredient Amounts"
STRDESC	strings descriptor	"Product X Ingredient Descriptions"

The 75 numerics list the amounts of all possible ingredients. The 75 strings describe each ingredient. The descriptor entries (for NNDESC and STRDESC in this case) subsequently appear on the point Detail Display and describe the ingredients.

Additional Array points could be configured to store other attributes of each of the 75 ingredients, such as specific gravities, and so on.

After loading the Array point, the parameters AR100.STR16(1 to 75) can be used to refer to the ingredients for Product X. The parameters AR100.NN(1 to 75) can be used to refer to the amount of each ingredient for Product X.

47 Array Points

47.5 Serial Interface to Array Points

On the Detail Display, array variables appear in a table numbered from 1 through the end of the array. Note that by choosing the starting index to end in 1 in the above examples, the box variables and array variables correspond more conveniently. For example, ARR100.NN(70) is mapped to box variable NN(2070) and appears on the Detail Display as N0070.

47.5 Serial Interface to Array Points

Background


When the Array point's EXTDATA parameter is set to IO_FL, IO_NN, or IO_STR, (flags, numerics, or strings, respectively), communications is through the Serial Interface (SI) and the point is often referred to as an SI Array point. A maximum of 80 Array points can interface with SI IOP modules depending on the box parameter SCANPER.

External data access

The Array point accesses external data from the serial device through its Flag, String, and Numeric parameters. For each Array point, only one type of variable (Strings, Flags, or Numerics) can be used for Serial Interface communications. Non-selected parameters still refer to the HPM Box variables. For example, if the EXDATA selection is IO_FL, the number and starting index for flags refers to Serial Interface data through the selected FTA, while numeric, string, and times references from this array point are to the HPM box variables.

The following illustrates communications between the Array point and the serial IO subsystem. The plug in FTA module adapts I/O requirements for the specific serial interface.

Figure 47-4 Signal Path Between SI Subsystems and Array Point

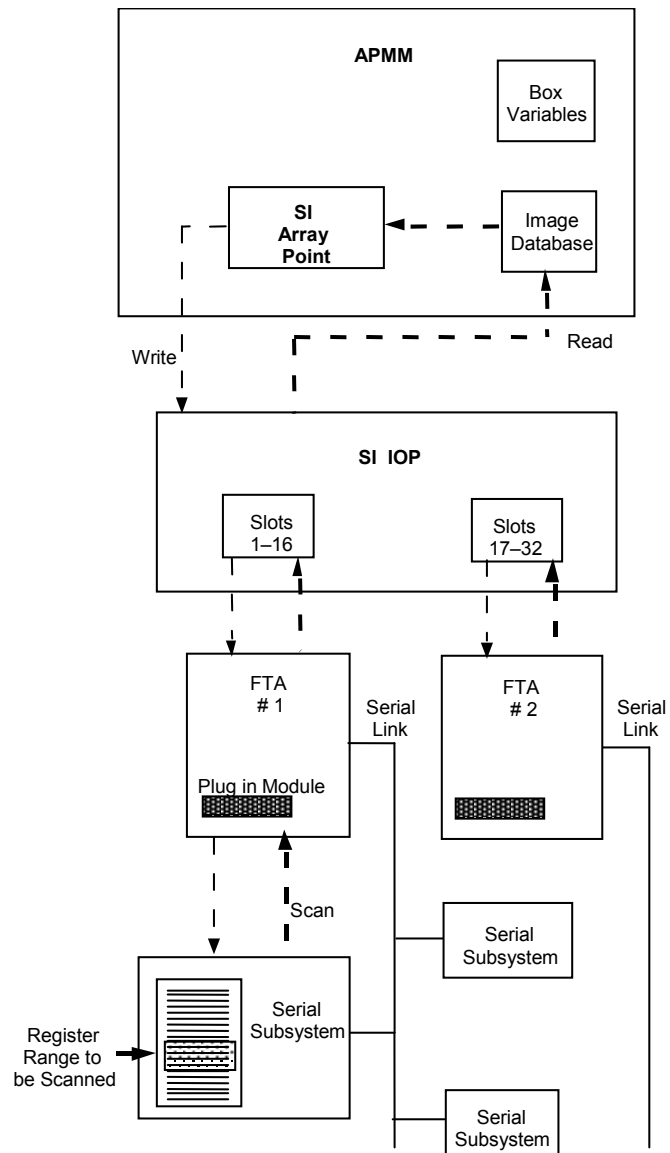

47 Array Points

47.5 Serial Interface to Array Points

Serial interface IOP slots

The SI IOP module has 32 slots available. Up to 16 slots can communicate through FTA number 1, and up to 16 slots can communicate through FTA number 2. An array point automatically communicates through any available slot on the SI IOP connected to the FTA specified during Array point configuration.

Accessing SI array data

Serial Interface IOP data mapped to an Array point is accessed through the Array point Numeric(NN(i)), Flag (FL(i)), and String (STRn(i)) parameters.

Because the HPMM regularly scans data from the Serial Interface, read access to SI Array data does not require an IOL prefetch cycle (that is, CL programs are not delayed while data is being fetched).

SI array point configuration

When the Array point is configured to obtain input from a serial interface (EXTDATA = IO_FL, IO_NN, or IO_STR), additional parameters appear on the configuration screen form. These are:

- the SI IOP module number IOPNUM.
- the FTA number, 1 or 2 FTANUM.
- the serial link device address DEVADDR.
- FTA scan priority, low or high SCANPRI.

PTEXECST Parameter for HPM SI array points

With R670, SI Array points are provided with the PTEXECST parameter to set the point ACTIVE or INACTIVE. The new parameter is stored in the HPM database checkpoint file and the value of PTEXECST is restored on loading the checkpoint.

This parameter is similar to the PTEXECST parameter available in other point types. You can disable the serial communication for the specified array point using the PTEXECST parameter. This does not affect any other parameters of the array point.



ATTENTION

PTEXECST parameter is applicable only to the array points configured for serial communication and is not applicable if EXTDATA is set to NONE.

Accessing the PTEXECST parameter

The keylock access to the PTEXECST parameter is Supervisor. The default value is INACTIVE on point load. You can change the PTEXECST parameter to ACTIVE or INACTIVE by any one of the following ways:

- DATACHNG schematic.
- CL programs.
- Detail Display of a point.
- Alter Parameters function.
- ACT/INACT command from Command Processor.
- Custom Schematics.

You can view this parameter using the following tools:

- System Documentation Tool.
- Find Names.

Read/Write access for this parameter is provided through:

- Network Gateways to other LCNs.
- TPS applications that are capable of parameter access.

Access errors

If you access the PTEXECST parameter when the EXTDATA of an SI Array point is set to NONE, the following error messages are displayed.

Access Method	EXTDATA	Error Message
Schematic	NONE	Unable To Access Point/P
Command Processor	NONE	Cannot Activate/Inactivate Pt
CL program	NONE	Parameter PTEXECST not on this data point
Alter Parameters	NONE	(29) PARAM ID ERROR

47 Array Points

47.5 Serial Interface to Array Points

PTEXECST states

The states of the PTEXECST parameter are as follows:

- **Inactive:** If an SI Array point is set to INACTIVE, the serial communication between the SI Array point and the device is stopped. The data parameters (FL [], NN [], or STR []) return bad values (-----) as in the case of a communication failure. The communication with the serial device is suspended, but the configuration of the SI Array point is retained. In the INACTIVE state, no soft failure or system error is reported. If the point is set back to ACTIVE, you need not change the configuration. The preserved values are restored on activation. If more than one point is connected to one device, all the points are to be set to INACTIVE for stopping the communication.
- **Active:** If the PTEXECST of an SI Array point (configured for a particular device) is set to ACTIVE, the configuration is downloaded to the FTA and the serial communication is established. In the ACTIVE state, the point can report communication errors, if any.

Journal entries

If the PTEXECST parameter is changed using the DATACHNG schematic, a Detail Display, the Command Processor or the Alter Parameters function, the changes are journaled in the Process Change Journal and the Process Alarm Journal. Any changes made through AM/CL are logged in the journal specified in the AM/CL debugger.

Loading an SI Array point

You cannot load an SI array point if the PTEXECST is ACTIVE. However, the point can be loaded with PTEXECST as ACTIVE if the HPM or the SI IOP is IDLE.

Switching off the serial device

Before switching off a serial device, set all the associated SI Array points to INACTIVE. If all the points are inactivated, there are no soft failures on the FTA and SI IOP. The IOP Status Display shows no errors or soft failures and the system status LED does not blink. The SI IOP Detail Display indicates, “No array points are configured to this FTA” as the FTA error status. No error is displayed if the point is set to INACTIVE before the device is turned off.

Deleting an SI Array point

Before deleting an SI Array point, set the PTEXECST parameter to INACTIVE.

Migration

When migrating to R670, the default value of the PTEXECST parameter is automatically set to ACTIVE. With R670, when an APM checkpoint is migrated to an HPM, the PTEXECST parameters of the SI Array points are automatically set to ACTIVE. If a pre-R670 checkpoint is restored, the value of PTEXECST parameter is automatically set to ACTIVE.

Disabling an SI Array point

The communication to the device is disabled only if all the SI Array points connected to the same device are set to INACTIVE. The configuration of the INACTIVE points are downloaded to the FTA and the FTA stops communicating with these points. It does not affect the other ACTIVE points configured for the same FTA and the device. Communication errors and soft failures are reported when the serial device has at least one ACTIVE point.

In a multi-drop scenario, if all the array points connected to one device are set to INACTIVE, the device stops reporting any communication errors. However, the serial communication is not disturbed on the active devices. These active devices in the multi-drop can report communication errors.

Modbus and Allen-Bradley interface parameters

An SI Array point typically interfaces with an AEG Modicon Generic Modbus Controller or an Allen-Bradley programmable logic controller. Other devices that use the Modicon RTU protocol may communicate through the Modbus Controller to an SI Array point. Your Honeywell representative can provide a list of qualified devices.

47 Array Points

47.5 Serial Interface to Array Points

AUXDATA Parameters

These parameters are for use with the Generic Modbus interface. They should be set to NaN (dashes) when communicating with an Allen-Bradley PLC. Likewise, when the Modbus interface is being used, the AB_DATA parameters should be set to NaN.

Parameter	Specifies
AUXDATA1	Modbus Coil Keep Alive Address
AUXDATA2	Wait time before message retry
AUXDATA3	EIA protocol and modem control
AUXDATA4	Baud rate and Parity

Allen-Bradley data parameters

These parameters are for use with the Allen-Bradley interface. They should be set to NaN (dashes) when communicating with a Modbus. Likewise, when the Allen-Bradley interface is being used, set AUXDATA parameters to NaN.

The following table is only a general overview of the AB_Data parameters.

Parameter	Specifies
AB_DATA1	The PLC family
AB_DATA2	The PLC file number
AB_DATA3	The Data type
AB_DATA4	The Scan rate

Array Type and Size

Most of the remaining SI Array parameters considerations deal with a starting index and array size (number of flags, numerics or strings).

When used with the Serial Interface, the starting index parameters: FLSTIX (Flag), NNSTIX (Numeric), or STRSTIX (String) refer to a register address in the serial device. This register is scanned over the appropriate range as set by the array size.

The concept of array type, size, and starting index is the same as described for mapping to HPM box variables, but for Serial Interface data, the limits are as follows:

Array Type	Array Size	Starting Index Range
Flag	0 -512	0 - 99,999
Numeric (real)	0 – 16	0 - 99,999
Numeric (integer)	0 – 32	0 - 99,999
String	0 -8*	0 - 99,999
* 64 characters maximum configured any way from eight 8-character strings to one 64-character string		

47.6 Status and Error Checking

Status reporting

Several Array point parameters are provided for status reporting. Error information appears on the Array Point Detail displays and the SI IOP Detail Status display, or can be tested with CL. The following parameters should be checked periodically:

- BADPVFL provides an overall database status (ON = bad). The overall status is bad when there are communication problems or the SI module is in Idle. When the overall status is bad, an attempt to access numeric, flag, or string data results in a bad access status. Consequently, CL programs should check BADPVFL or INITREQ before using SI data.
- INITREQ, when set to ON, indicates that the write to the SI module cannot be completed.
- ERRCODE provides an 8-character error string.



ATTENTION

Note that BADPVFL and INITREQ are always OFF if not using SI data (EXTDATA = None).

47.7 Read-Back Check for Device Control/Digital Composite Points

Device Control or Digital Composite points can have digital output connections through an SI/Array point to a field subsystem. The field device or its interface may interrupt or change the output and not provide any indication of the change.

If flag data is mapped back from the SI/Array point, a digital output read-back check determines the actual value of the output. After a new output state is stored to the digital output connections, the read-back check is delayed for a time period equal to the feedback-time parameter (FBTIME) or 4 seconds, whichever is greater. This delay allows the SI/Array output enough time to reach even a slow responding field device before causing a Command Disagree alarm (see “Any transitions in the PV input state can be used for triggering event-initiated processing of points in the Application Module (AM). It is configured by entering EIP for the event-report-option parameter EVTOPT. The user must enter the tag name of the AM or CM point using the EIPPCODE parameter.

Commanded State (OP)” in Section 0 and “Alarms” in Section 48.4).

If a discrepancy then exists between OPFINAL and OP, the operator is advised. If OPFINAL does not agree with any of the defined states, its state is displayed as NONE.

47.8 CL Notes

All Array point data (flags, numerics, and so on) can be accessed by a CL program (without impacting IOL prefetch limitations). Refer to the *Control Language/Advanced Process Manager Reference* manual for additional information.

The CL/HPM compiler issues a warning when external Array point data (data read from a Serial Interface) is used in a LOCAL declaration. This is done because the data is not truly local, but resides in the external device connected to the Serial Interface IOP.

48. Device Control Points

48.1 Functional Overview

Purpose

The Device Control (DevCtl) point provides a way to manipulate a device, typically a motor, and a way to view the strategy through a single point. In addition, this point helps the operator to graphically trace the source of an interlock condition.

You can allocate up to 160 Device Control points (NDEVSLLOT) or combinations of standard and fast DevCtl (NFASTDEV) points during Node Specific Configuration.

Features

Some of the features of the device control point are as follows:


- Permits a custom logic design (within the strategies provided by the device control point) of an interlocked motor control strategy.
- Allows configuration of a seal-in circuit function.
- Allows configuration of a state change function.
- Accommodates single- and dual-speed single direction motors, reversible single-speed motors and motor-operated valves.

Description

The following figure is a block diagram of the Device Control Point. It can be thought of as a combination Digital Composite Point, Logic Point, and Regulatory PV Data Acquisition point. The left side of this drawing provides a concept of the input processing capabilities, while the right side of the drawing illustrates the output concept.

48 Device Control Points
48.1 Functional Overview

Figure 48-1 Device Control Point Functional Diagram

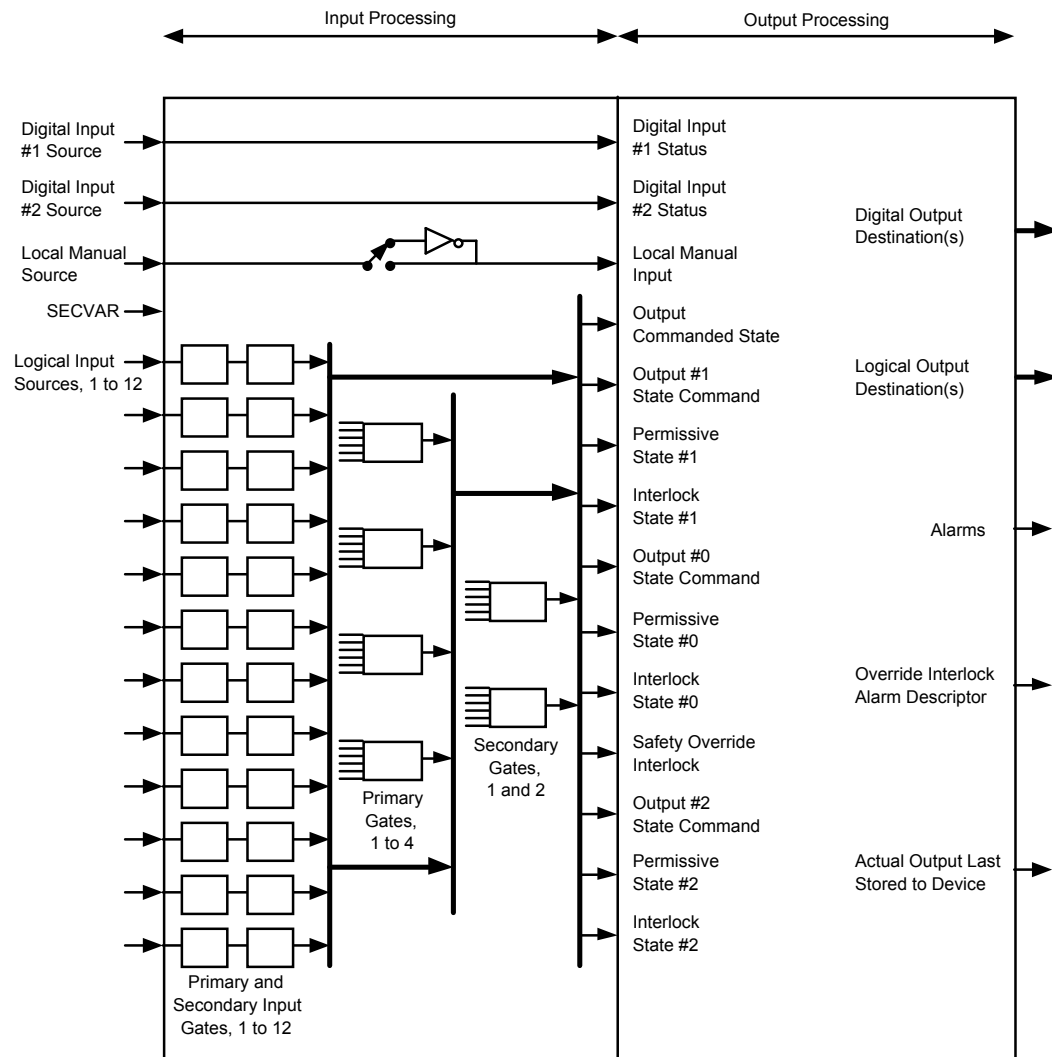

Digital composite section

Two digital inputs, a Local Manual input, and the Digital Output(s) make up the Digital Composite part of the point as shown in the upper part of the preceding figure. All of the properties of the Digital Composite point described in Section 4 apply to this part of the Device Control point.

Logic section

The left side of the preceding figure shows how up to 12 logic inputs are brought into the point. The gates that follow allow the inputs to be inverted, delayed, compared, and so on. The resulting signals can drive other gates, interlocks, permissives, or output commands.

Two logic outputs can be configured to output most real or logical data from the point.

Regulatory PV section

An analog input referred to as the secondary variable (SECVAR) is provided. It is typically used to monitor motor current. You can configure alarms to indicate when this input exceeds specified limits and you can accumulate statistics on levels and durations for this input.

Processing order

The DevCtl point processing order should be regarded as: the regulatory PV section first, then the logic section, and finally the digital composite section.

48.2 Input Connections

Digital inputs

Up to two digital inputs connections can be allocated with NODINPTS (number of Digital Inputs). The input source is defined by DISRC(1) and DISRC(2), which are thereafter referred to as D1 and D2. The input source(s) can be specified as a tag name.parameter or a hardware reference address. Allowable sources are:

- Digital Input Points —PV
- Digital Output Points —SO
- Logic Slot gate outputs
- PM Box Flags —PV
- Logic Slot Flags
- ProcMod Flags
- DevCtl Flags
- Array Point Flags

48 Device Control Points

48.2 Input Connections

These sources must be in the same HPM box as the Device Control point. The PV state is calculated from the inputs the same way as for a Digital Composite Point.


Other configuration for this section such as box color, and so on is the same as for a Digital Composite Point. You can specify the PV states, options, and alarming.

Logic inputs

The following figure presents a simpler way of looking at just the Logic Inputs, their associated gates, how the outputs can be routed, and possible destinations.

Looking at the logic gates in the following figure, you should note the concept of Primary or Secondary *Input* Gates and Primary or Secondary gates. This terminology is used throughout the following discussions and on the point configuration screens.

Figure 48-2 Logic Gates and Destinations

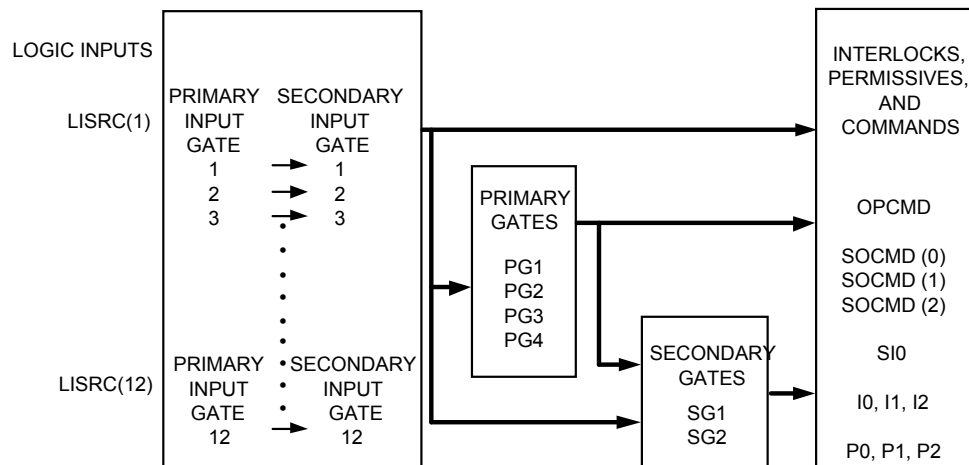

You can designate up to 12 Logical inputs (NOLINPTS) and enter an 8-character ASCII descriptor for each input (LIDESC(n) where n is 1–12). The ASCII descriptor can be changed by a CL program or a person with Engineer access level.

Each input source is specified by Logic input source parameter LISRC(n) and you can use:

- any Boolean, integer, enumeration, self-defining enumeration, or real parameter from within the HPM, or another UCN node.
- the PV flag or BADPVFL for a Digital Input point from within the HPM.
- the SO or INITREQ parameters for a Digital Output point from within the HPM.
- any IOP parameter (up to a maximum of six).

Logic inputs (LISRC(1) – LISRC(12)) are referenced within the configuration pages as L1 – L12.

The parameter LIBADOPT allows substitution of Off, On, or the last good value (Hold) in case a logic input goes bad.



ATTENTION

Every logic input that you specify must eventually be used to drive some output, permissive, or interlock.


Primary and secondary logic input gates

- **Algorithms—**
 - The following figure shows the various choices for the Primary Input Gate algorithm (parameter PIALGID(n)) and the Secondary Input Gate algorithm (parameter SIALGID(n)).
- **Primary Input Gate Algorithms—**
 - **Null** means the input is passed unchanged to the output.
 - **Comparison** algorithms for the Primary Input Gate such as GT, GE, and so on compare the input to parameter PINN(n) where n is the gate number. PINN(n) contains a real number entry of your choice. Algorithms ending in 2 such as GT2, GE2, and so on, compare the input to a primary input source specified by PISRC(n) where n is the gate number. This allows you to compare the configured input to one of the logic inputs (L1 – L12). Gate(n) output goes true when the comparison succeeds.
 - **In_Set** algorithm compares the gate input with a table of ten numerics (NNINSET(n)) and the output goes true if the input equals any value in the set. You must enter the ten numeric values which can range from 0 to 32,767.

Primary Input gates that use comparison algorithms can have a deadband value (PIDEADBD(n)) for each gate:

- For GT, GT2, GE, GE2, LT, LT2, LE, or LE2 gates, the deadband only applies on a true to false comparison. For example, assume that one of these gates is configured for L1 (input) greater than 50 and the deadband value = 5. The gate output goes true when L1 is greater than 50, but does not go false unless L1 falls below 45.
- For EQ, EQ2, NE, and NE2 gates, the deadband value defines the range of comparison. For example, an EQ gate is configured with input numeric PINN(n) = 6 and deadband parameter PIDEADBD(n) = 2. The output is true when the input source is between 4 and 8.

Figure 48-3 Primary and Secondary Logic Input Gate

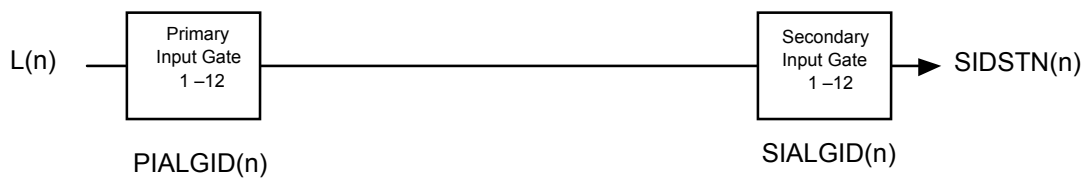

Algorithms

- | | |
|-------------------------------|---|
| • NULL | • INVERT |
| • GT - Greater than PINN(n) | • GE - Greater than or equal to PINN(n) |
| • LT - Less than PINN(n) | • LE - Less than or equal to PINN(n) |
| • EQ - Equal to PINN(n) | • NE - Not equal to PINN(n) |
| • GT2 - Greater than PISRC(n) | • GE2 - Greater than or equal PISRC(n) |
| • LT2 - Less than PISRC(n) | • LE2 - Less than or equal PISRC(n) |
| • EQ2 - Equal to PISRC(n) | • NE2 - Not equal to PISRC(n) |
| • IN_SET | • NULL |
| • DLY - Delay | • ONDLY - On Delay |
| • OFFDLY - Off Delay | • PULSE |
| • MAXPULSE | • MINPULSE |

Secondary input gate algorithms

These include various types of delays. Your entry (0 – 8000 seconds) in parameter SIDLYTIM(n) determines the delay (per gate).


- **Delay**—The Delay algorithm causes a one cycle delay of the input value (at the execution rate of the point). Parameter SIDLYTIM does not apply to this gate.
- **On Delay**—On Delay starts counting when the input switches from Off to On. If the input is still On when the time runs out, the output is set to On. When the input signal switches Off, the output is set to Off immediately and the timer (if running) is stopped.
- **Off Delay** —Off Delay starts counting when the input switches from On to Off. If the input is still Off when the timer runs out, the output is set to Off. When the input signal switches On, the output is set to On immediately and the timer (if running) is stopped.
- **PULSE** —Pulse provides a fixed pulse output when the input switches from Off to On. The pulse width is specified by SIDLYTIM(n). Another output pulse cannot be generated until the preceding pulse has completed.
- **MAXPULSE**—MAXPULSE provides a pulse output when the input switches from Off to On. If the input switches Off before the specified time, the output is also set to Off immediately. If the input stays On longer than the timer period, the output pulse shuts Off at the end of the timer period.
- **MINPULSE**—MINPULSE provides a pulse output when the input switches from Off to On. If the input switches Off before the specified timer period, the output is extended until the period is over. If the input stays On longer than the timer period, the output pulse follows the input pulse.

Secondary input gate destinations

The output destination from each Secondary Input Gate is specified by SIDSTN(n).

- None (gate not used).
- Interlocks SI0, I0, I1, or I2.
- Permissive Interlocks P0, P1, or P2.
- OPCMD, SOCMD0, SOCMD1, or SOCMD2.
- Primary Gates PG1, PG2, PG3, or PG4.
- Secondary Gates SG1 or SG2.

Figure 48-4 Secondary Input Gate

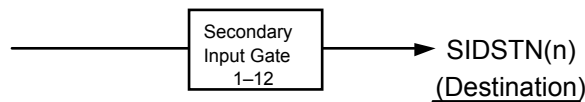

ATTENTION

Every Secondary Input Gate that you configure must have an output destination specified.

Primary and secondary logic gates

You can configure up to four Primary Gates (NOPGATE) and up to two Secondary Gates (NOSGATE). Each gate can have up to six inputs. The inputs are determined by specifying them as destinations from other gates. It isn't necessary to use these gates if you do not need the functions they provide.

The following figure illustrates the Primary and Secondary Gate algorithm, lists the algorithm choices.

Figure 48-5 Primary and Secondary Logic Gates



Table 48-1 Primary and Secondary Logic Gate Algorithms

Primary Logic Gate Algorithms		Secondary Logic Gate Algorithms	
AND	PAND	AND	PAND
OR	POR	OR	POR
NAND	PNAND	NAND	PNAND
NOR	PNOR	NOR	PNOR
XOR	PXOR	XOR	PXOR

Primary Gate Inputs—Inputs to the Primary Gates can only come from Secondary Input Gates. Up to six inputs is available.

Secondary Gate Inputs—Inputs to the Secondary Gates can come from any of the 12 Secondary Input Gates or any of the four Primary Gates.

Primary and Secondary Gate Algorithms—both the Primary and Secondary Gates have identical algorithms. Algorithms beginning with a P have a pulsed output when the gate is enabled. Pulse width is specified by parameter PGPLSWTH(n) for Primary Gates or SGPLSWTH(n) for Secondary Gates. Pulse width can range from 0–8000 seconds.

Primary and secondary gate destinations




ATTENTION

Every Primary and Secondary Gate must have an output destination specified.

Primary Gate Destinations—Parameter PGDSTN(n) directs outputs from Primary Gate n to any one of the destinations shown in the following figure.

- None (gate is unused).
- Interlocks SI0, I0, I1, or I2.
- Permissive Interlocks P0, P1, or P2.
- OPCMD, SOCMD0, SOCMD1, or SOCMD2.
- Secondary Gates SG1 or SG2.


Figure 48-6 Primary Logic Gate Destinations

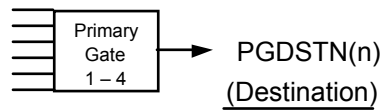

Secondary Gate Destinations—Parameter SGDSTN(n) directs outputs from Secondary Gate n to any one of the destinations shown in the following figure.

- None (gate is unused).
- Interlocks SI0, I0, I1, or I2.
- Permissive Interlocks P0, P1, or P2.
- OPCMD, SOCMD0, SOCMD1, or SOCMD2.
- Secondary Gates SG1 or SG2.


Figure 48-7 Secondary Logic Gate Destinations

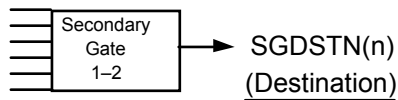

Detail display presentation

A graphic representation of the logic connections is presented on the point's detail display. The Detail display of logic configuration shown in the following figure is typical of the Override Interlock section of this display. The Logic Input descriptors you choose (LIDESC(n)) appear instead of the numbered inputs shown in the example. Heavy lines indicate power flow and allow the operator to determine which input is driving an interlock such as shown in the following figure, where Input _7 is driving the override interlock.

Figure 48-8 Detail Display of Logic Configuration

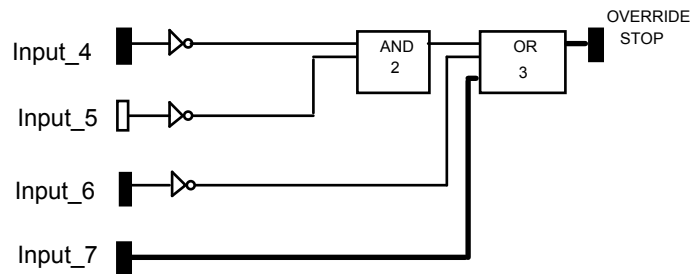

Secondary input variable input

This Regulatory PV section of the DevCtl point provides an analog input for a Secondary Variable (SECVAR). The Secondary Variable input connection is specified by parameter SVSRC as a tag name, parameter or hardware address reference. Typically this input is used to monitor motor current, flow rate, valve position, and so on.

During configuration you can specify-

- descriptors—(SVDESC and SVEUDESC).
- the high/low engineering unit range—(SVEUHI/SVEULO).
- the target value (setpoint)—(SVTV).
- the high and high high trip point—(SVHITP and SVHHTP).


You can also specify the alarm priorities, an alarm deadband, and the secondary variable alarm mask time. Mask time (MASKTIM) specifies the time from 1–1000 seconds that alarms are inhibited after an output change.

Several historical items related to the Secondary Variable can be accumulated and reported on the Maintenance Statistics Display section of the point's Detail Display. These are—

- the peak value of the secondary variable on the last run.
- the duration of the first peak above the full load high trip limit.
- the time that the secondary variable is continuously greater than its high trip limit.

The following figure shows how the Secondary Variable appears on the point detail display. The thick bar represents the actual value. The lower vertical dash represents the target value (SVTV). The Secondary Variable high alarm priority trip point in percent (SVHITPP) and high high alarm trip point in percent (SVHHTPP) are represented by the other two small vertical dashes.

Figure 48-9 Secondary Variable Representation on the Point Detail Display

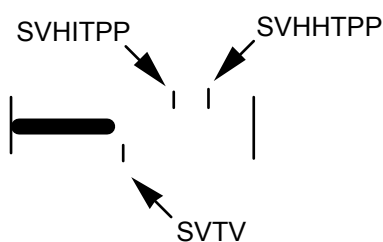

The colors of SVHITPP and SVHHTPP are described in the following table.

Table 48-2 SVHITP and SVHHTP Colors

Network Config. Red Color Alarm Priority	SVHITP Color			SVHHTP Color		
Two Alarm Colors	SVHIPR =			SVHHPR =		
	Low	Hi	Emg.	Low	Hi	Emg.
Low	Red	Red	Red	Red	Red	Red
High	Yel	Red	Red	Yel	Red	Red
Emergency	Yel	Yel	Red	Yel	Yel	Red
Three Selectable Alarm Colors	Depends on color selected in NCF			Depends on color selected in NCF		

When SVHITPP is configured = SVHHTPP, a single vertical dash represents both values. Its color is determined in the same way as for SVHHTPP. The Red Color Alarm Priority is configured during the Console Data part of Network Configuration.

The bar graph color for the Secondary Variable in percent (SVP) depends on the Secondary Variable High alarm Flag, the High High alarm Flag, and the Secondary Variable High and High High alarm priorities.

If the two-color alarm option is selected in the Network Configuration File (NCF), SVP color is described in the following table.

Table 48-3 SVP Bar Graph Color Chart

	Condition	Result		
1	If SVHIFL and SVHHFL are both FALSE	SVP color is Cyan		
2	If SVHIFL is TRUE, then the following table determines when SVP color is RED			
	Network Configuration Red Color Alarm Priority =	SVHIPR =		
	Low High Emergency	Low Red N/A N/A	Hi Red Red N/A	Emg Red Red Red
3	If SVHHFL is TRUE, then the following table determines when SVP color is RED.			
	Network Configuration Red Color Alarm Priority =	SVHHPR =		
	Low High Emergency	Low Red N/A N/A	Hi Red Red N/A	Emg Red Red Red
4	For all other conditions	SVP color is Yellow		

If the three color alarm option was selected in the NCF, the SVP color is based on the color choices in the NCF.

Local Manual Input

Parameter LMSRC allows you to designate a logical input for the local manual signal. The source can be specified as a tag name, parameter or as a hardware reference address. Parameter LMREV permits the input to be inverted.

When the LOCALMAN flag is true, it indicates that the device's state is being controlled directly by external hardware. The Device Control point's output tracks the PV (the actual state of the device). When the device is taken out of Local/Manual, the output of the point matches the current state of the device being controlled.

48.3 Output Connections

Digital outputs

The number of digital outputs (up to three) is determined by parameter NODOPTS. State Outputs destinations for STxOPy (where x = 0, 1, 2 and y = 1, 2, 3) are assigned by parameter DODSTN(n) where n = 1–3 (depending on the number of outputs configured).

Acceptable destinations are:

- Digital Output Point–Latched Output
- Logic Slot Flag
- Process Module Slot Flag
- Array Point Flag
- Digital Output Point–Pulsed Output
- HPM Box Flag
- Device Control Slot Flag

Destinations

Destinations are specified as a tag name, parameter or a hardware address and they must be in the same HPM as the Device Control point. If a hardware address is used, it must have one of the following forms (where nnnn = 1 to 16,384):

!BOX.FL(nnnn)

!D0mmSss.S0

Output commands

There are two ways to command the output:

- when MODATTR = Operator, the operator can command it.
- when MODATTR = Program, a Logic point or CL program can command it.

OPCMD controls State 0 and State 1. SOCMD(n) controls State 0, State 1, and State 2.

Inputs to OPCMD or SOCMD can come from any of the following logic gates:

- the Primary Gates.
- the Secondary Gates.
- the Secondary Input Gates.

logic gates. Both OPCMD or SOCMD can be configured to drive the output, but you should use only one of these on a given point. When interlock logic does not drive OPCMD or SOCMD, they can be written from outside (for example from a Logic point, a CL Program, and so on)

CAUTION Do not configure two different logic outputs to drive OPCMD and SOCMD of the same Device Control Point.

The state of OP is calculated from signals generated by the primary and secondary gates through OPCMD or SOCMD, as well as LOCALMAN and REDTAG.

OP can be commanded to state 1 or state 0 using the OPCMD parameter. When OPCMD is commanded ON, OP is set to state 1. When OPCMD is commanded OFF, OP is set to State 0. OPCMD can be used when three states are defined, but will only command OP to state 1 or state 0.


SOCMD(i) provides a command for each state (i = 0, 1, or 2). Unlike OPCMD, the output state is commanded when SOCMD(i) goes from OFF to ON. For example, if SOCMD(1) is commanded ON, State 1 goes true. Then if SOCMD(0) is commanded ON, State 0 is commanded. It does not matter that the logic for SOCMD(1) is still commanding an ON condition. In order to return to State 1, SOCMD(1) must command an OFF, and then an ON condition.

Interlocks Permissives and Overrides

The ON command is sent to the output only if the permissives and interlocks are in a state to permit the output. If the ON state is allowed, ON becomes the Output Final OPFINAL output. OP and OPFINAL may be different; for example, if the seal in option is activated.

The following figure illustrates the interlock system associated with the Device Control Point's digital outputs. This illustration is described thoroughly in Section 4 for the Digital Composite point and is reproduced here for convenience.

Figure 48-10 Interlocks and Permissives Functional Diagram

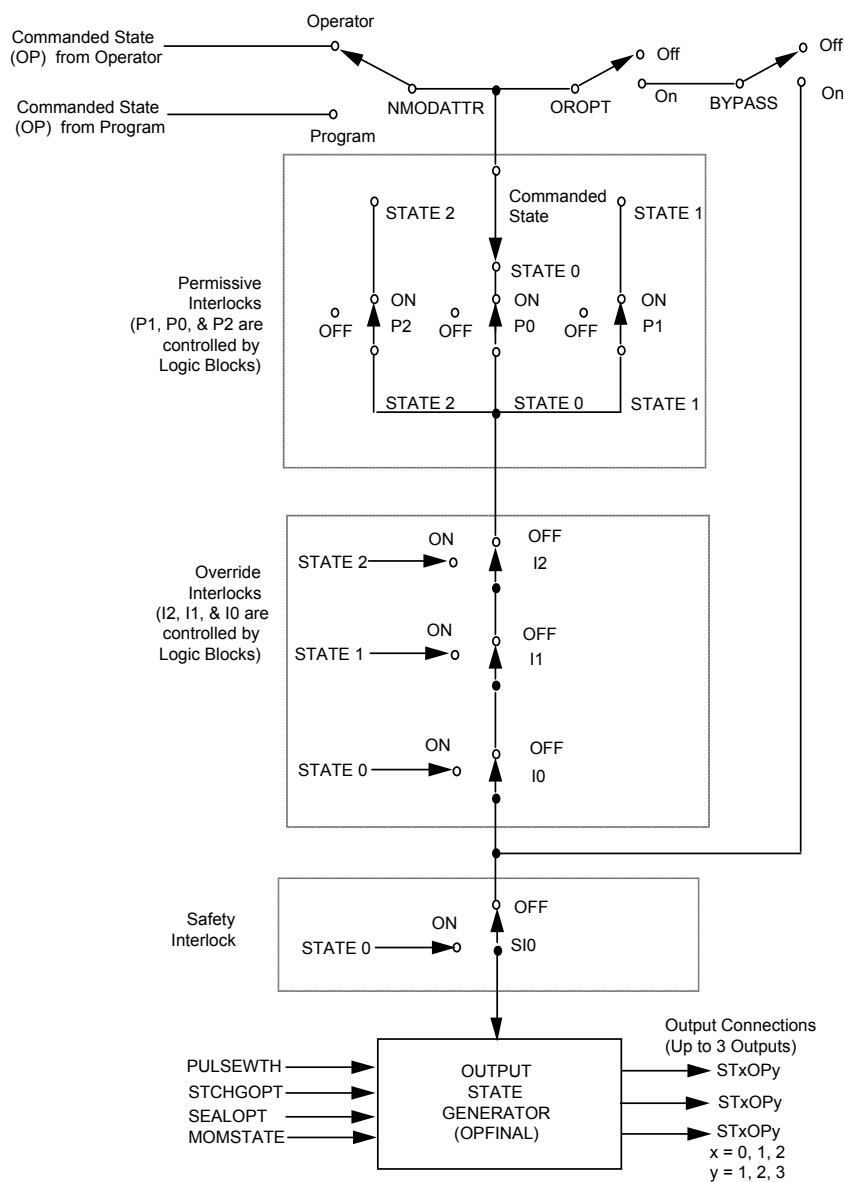

Seal-in —If the seal-in circuit is configured, it will unlatch the digital output contacts on detection of the PV not following the output command as happens on a device drop out (for example, a stopped motor). This condition is true any time the PV is not in state 1 or state 2 and either a command disagree alarm or an uncommanded state change alarm is present.

If the seal in option is enabled when the above condition is detected, the output destinations are set to the state corresponding to OP of state 0, but OP is not altered. The actual state commanded to the output destinations can be observed on the lower part of the group display as OPFINAL. OPFINAL appears in reverse video when not equal to OP.

Inputs—Inputs to the interlocks can come from the output of —

- any of the Secondary Input Gates.
- any of the Primary Gates.
- either of the Secondary Gates.


Inputs to the interlocks can also be written to from outside if not driven by any interlock logic (like OPCMD and SOCMD(n). Parameter LOGICSRC allows you to enter the name of an external point (if any) that is controlling interlocks and permissives. The entry then appears on the Detail Display.

Break Before Make Option—When OP is commanded from State 1 to State 2 (that is, from forward to reverse), or from State 2 to State 1, OP will first go to State 0 (that is, stop) and remain there for a configured pause time before going to the commanded state.

Digital outputs on the detail display

The following figure shows how the commanded digital output appears on the detail display for a two state and for a three state output.

Figure 48-11 Output Indicators on the Point Detail Display

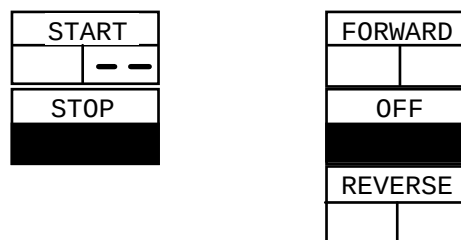

The right half of any state box (when filled) indicates the commanded state. The left half of any state box (when filled) indicates the PV has changed to that state.


Two dashes in a state box means that operator commands for that state are not permitted. This can be caused because an interlock is active, when a program is controlling the point, or the permissive for the state is off.

Logic output connections

The Device Control point can have up to two (NOLOPTS) Logic Output connections.

The following figure illustrates the Logic Output connection strategy. LOSRC is the logic source, LOENBL is the flag that enables the gate, and LODSTN is the output destination.

Figure 48-12 Logic Output Connections

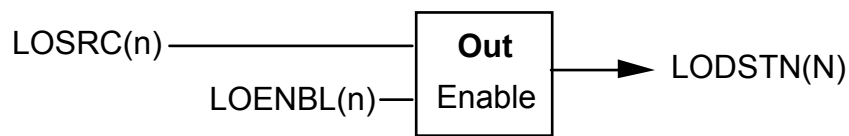

LOSRC(n), the logic source can come from—

- L1–L12, the logic inputs.
- FL1–F12, the local flags (you can set FL7–FL12 Off or On).
- NN1–NN8, the local numerics (you can enter the values).
- D1 or D2, the digital inputs.
- P0, P1, or P2, permissive interlocks.
- SI0, I0, I1, or I2, Safety and other Status Overrides.
- PISO1–PISO12, Primary Input Gate output value.
- SISO1–SISO12, Secondary Input Gate status output.
- PGSO1–PGSO4, Primary Gate status output.
- SGSO1–SGSO2, Secondary Gate status output.
- PINN1–PINN12, Primary input comparison numerics.
- SECVAR, the secondary variable.

LOENBL(n), the output enable signal can come from—

- L1–L12, the logic inputs.
- FL1–F12, the local flags.
- D1 or D2, the digital inputs.
- P0, P1, or P2, permissive interlocks.
- SI0, I0, I1, or I2, Safety and other Interlock Overrides.
- PISO1–PISO12, Primary Input Gate output value.
- SISO1–SISO12, Secondary Input Gate status output.
- PGSO1–PGSO4, Primary Gate status output.
- SGSO1–SGSO2, Secondary Gate status output.

LODSTN(n), the destination point.parameter to which the output is pushed can be either an ASCII tag name or the hardware address of a point. The destination parameter can be any type parameter (a conversion is made internally to write the correct data type to the destination). If a hardware address is used it must be of the form !BOX, !AOmmSss, or !DOmmSss, where mm is an Analog output or Digital Output IOP module number and ss is the slot number within that module.

48.4 Alarms

The Device Control Point provides the following alarms:

- BADPVFL, Bad process variable alarm.
- BADSVFL, Bad secondary variable alarm.
- CMDDISFL, Command disagree alarm.
- CMDFALFL, Command fail alarm.
- OFFNRMFL, PV off normal state alarm.
- OVRDI0FL, OVRDI1FL, OVRDI2FL, Override interlock alarms.
- OVRDSIFL, Safety Override alarm flag.
- SVHHFL, Secondary variable high high alarm.
- SVHIFL, Secondary variable high alarm.
- UNCMDFL, Uncommanded state alarm.

BADPVFL indicates that a digital input has detected a bad PV value.

CMDDISFL, the command disagree flag indicates that the field device did not go to the commanded state within the allowed time.

CMDFALFL, the command fail alarm (also called the crack timer) is generated if the PV does not change within the time specified by the command fail timeout parameter (CMDFALTM) after the OP is commanded to a new state. This alarm is useful for motor driven valves with states of OPEN, INBETWEN, and CLOSED. Alarm priority for the command fail alarm is determined by the Command Disagree Priority (CMDDISPR) parameter.

OFFNRMFL indicates that an Off Normal alarm has been detected.

The Secondary Variable high and high high alarms indicate the analog input SECVAR has exceeded the configured limits and BADSVFL indicates the input value is NaN.

UNCMDFL, the uncommanded state alarm indicates that a field device changed state without being command to do so.

The override interlock alarms and the safety override alarm indicate that an override is active. Also refer to the Override descriptor description below.

Override interlock alarm descriptor

When an interlock is tripped, the Device Control point traces the cause of the interrupt and presents the logic descriptor LIDESC(n) for that input on the Detail Display just above the MAN/P-MAN indicator.

48.5 Maintenance Statistics

If the Maintenance Support Option is enabled (MAINTOPT = ON), various maintenance statistics are calculated and displayed on the maintenance page of the point's Detail Display. These statistics are available as standard parameters so they can be accessed by CL programs, schematics, and so on, and can be saved on a history module.

A program can reset the maintenance statistics at any time by setting the point's reset flag parameter (RESETFL) to ON. The operator can only reset the statistics when the point is in REDTAG.

During configuration, you can enter a maximum time allowed. The parameter MAXTIMnH, n = 0, 1 or 2 sets the maximum time in hours. The maximum number of transitions allowed into each state since the last reset is configured with parameter MAXTRANn (where n = 0, 1 or 2). There is no alarming if the values are exceeded, but CL programs can compare maximum specified values with accumulated values.

The Maintenance Statistics are presented in a plain English format. In addition, the display contains a REDTAG target.

If you select the REDTAG target and press ENTER, the point's REDTAG parameter is set to ON and a RESET target appears. Selecting the RESET target (and pressing ENTER) resets the points maintenance statistic values. If you select REDTAG, (and press ENTER) the REDTAG condition clears and the RESET target disappears.

48 Device Control Points
48.5 Maintenance Statistics

49. HPM Control Performance

49.1 Background

Control loops

The High-Performance Process Manager is a high-performance device capable of an assured rate of 800 regulatory control loops per second. Users can customize their control configuration to meet the application requirements.

Parallel processing architecture

The parallel processing architecture of the High-Performance Process Manager allows the control processing capability of the HPM to be totally independent of other HPM functions such as data requests for HPM data from the Network Interface Module and other UCN devices, the number of I/O points built and alarming functions. Therefore, only two factors must be considered when configuring the control processing: **control slot type** and the scheduled frequency of execution, otherwise referred to as **scan rate**.

49.2 Control Slot Types

The following control slot types are resident in the High-Performance Process Manager Module.

Slot Type	Max No. of Points (Slots)	Applicable Parameter
Digital Composite	999	NDCSLOT
Device Control	400	NDEVSLOT
Logic Slot	400	NLOGSLOT
Process Module	250	NPMSLOT
Regulatory PV	400	NPVSLOT
Regulatory Control	250	NCTLSLOT
Array	500	NARRSLOT



REFERENCE - INTERNAL

For more information on any of these slot types, refer to the appropriate sections of this document.

- [Section 13, Digital composite point](#)
- [Section 14, Logic points](#)
- [Section 15, Process Module points](#)
- [Section 16, Regulatory PV point](#)
- [Section 26, Regulatory Control point](#)
- [Section 47, Array points](#)
- [Section 48, Device Control point](#)
- [HPM Control Functions and Algorithms manual.](#)

Point mix

The point mix is defined by specifying the number of slots of each type using the NDCSLOT, NLOGSLOT, NPMSLOT, NPVSLOT, NCTLSLOT, NDEVSLLOT, and NARRSLOT parameters that are found on the UCN/PM Configuration Form. This configuration form allows the user to specify the particulars of the HPM Box Data Point.

Slot number for each point type

The slot numbers for each point type range from 1 to the user-specified maximum number listed in the above chart. For example, if NPVSLOT is set to 35, the RegPV points can be configured in any RegPV slot from slot 1 to slot 35. Similarly, if NLOGSLOT is set to 40, the logic points can be configured to run in any logic slot from slot 1 to slot 40. The point types and slot numbers are used for the initial configuration of a data point and for specifying the processing order.

49.3 Scan Frequency

Background

Regulatory type (RegPV, RegCt1) and digital type (DigComp, DEVCTL, and Logic) slots can be configured for scanning at different rates as specified by the SCANRATE parameter and by the Fast Slots parameters. SCANRATE deals with the base scan rate for all points of a certain type. The Fast Slots parameters allow a specified number of regulatory or digital type slots to be processed at a quarter second rate without regard to the base scan rate for the rest of the group. These are HPM Box Data Point parameters.

Array points are not processed (require zero PUs) so they are not affected by the SCANRATE parameter.

Scan rate

The scan rates indicate the number of times that all slots of that particular type (except Fast Slots) are scanned and processed each second. For example, a scheduled frequency of 1/4 sec for the regulatory slots indicates that all the regulatory slots in this HPM will be scanned and processed four times each second. The scan rate has an impact on the number of slots that can be processed as described in Determining Processing and Memory Capacity.

The following chart contains the scheduled frequency of the respective entries for the SCANRATE parameter.

Table 49-1 Scheduled frequency of SCANRATE parameters

SCANRATE Parameter Entry	Scheduled Frequency		
	<i>RegCtl, RegPV</i>	<i>Logic, DigComp, DevCTL</i>	<i>ProcMod</i>
Reg1Log1	1 sec	1 sec	1 sec/ 500 ms
Reg1Log2	1 sec	1/2 sec	1 sec/ 500 ms
Reg1Log4	1 sec	1/4 sec	1 sec/ 500 ms
Reg2Log2	1/2 sec	1/2 sec	1 sec/ 500 ms
Reg2Log4	1/2 sec	1/4 sec	1 sec/ 500 ms
Reg4Log4	1/4 sec	1/4 sec	1 sec/ 500 ms

Note : The cycle time for ProcMod is decided by \$NSFPMS parameter.

Fast slots parameters

Fast Slots parameters allow a specified number of the regulatory control, regulatory PV, digital composite, or logic slots to be processed at a quarter second rate without regard to the scan rate for the rest of the group. When fast slots are specified, they are the lower numbered slots for that type. For example, if there are 50 regulatory control slots and 15 are specified as Fast (NFASTCTL = 15), then slots 1-15 are scanned every quarter second, and slots 16-50 are scanned at the rate specified by the parameter SCANRATE. The Fast Slots parameters are defined in the following table.

Table 49-2 Fast slots parameters

Parameter	Max. Number	Description
NFASTCTL	200	Number of Fast Regulatory Control slots
NFASTDC	999	Number of Fast Digital Composite slots
NFASTPV	200	Number of Fast Regulatory PV slots
NFASTLOG	200	Number of Fast Logic slots
NFASTDEV	200	Number of Fast Device Control slots
\$NSFPMS	100	Number of Semi Fast Process Module slots

If the SCANRATE parameter is configured for four times per second, then all of the points for those types are scanned at the quarter second rate. The number of fast slots is forced to the same as the total number of slots for that type (provided that the total number of slots is less than or equal to the maximum number of fast slots). For example, if SCANRATE = REG1LOG4, then the number of Fast Logic slots parameter (NFASTLOG) are set equal to the number of Logic slots (NLGSLOT).



ATTENTION

With TPN R684, the limit of HPM Regulatory PV slots and fast Regulatory PV slots are increased from 125 to 400 and 125 to 200, respectively. This increase in the range allows the users to increase the value of NPVSLOT and NFASTPV.



TIP

The PERIOD parameter shows the processing period in seconds. Refer to the *High-Performance Process Manager Parameter Reference Dictionary* for additional information.

Point processing executive

The point processing executive in the HPMM runs at quarter-second (or 250 milliseconds) intervals or "cycles." (Each quarter second cycle is further divided into two sub cycles to provide a breakpoint for database synchronization.) Slot scheduling


determines the assignment of slots to cycles and the ordering within a cycle. This operation is automatically performed at the load of the box data point.

The processing load is distributed as evenly as possible between the four cycles using the following logic:

- All of the 1/4 second slots are processed in every cycle.
- 50% of the processing load of the 1/2 second slots is processed in cycles 1 and 3; the other 50% in cycles 2 and 4.
- 25% of the processing load of the 1 second slots is processed in each of the four cycles.

Processing order

The processing order of the slots within a cycle is determined based on the point type as follows (from left to right):

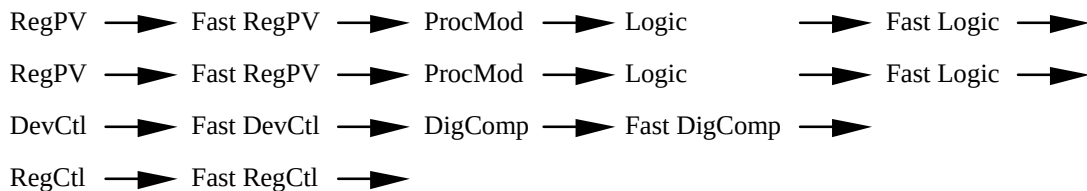

Within each point type, the slots are processed in the descending order of the slot number (that is, from highest slot number, down to one).

Fieldbus Link Active Schedule

For fieldbus points, a Link Active Schedule (LAS) for processing the points in one or more control loops on a fieldbus segment is created by the TPS Builder. (A fieldbus segment is sometimes referred to as a “link”.) The time period for execution of control loops on a link is configurable and can range from 0.25 seconds to 1.0 hour. The minimum execution time for a control loop depends on the number of points in the control loop. The execution schedule for point processing on a fieldbus link is shown on the Link Active Schedule created by the TPS Builder after the points in the control loop have been configured.

The Fieldbus IOP supports a maximum of four fieldbus links. Each fieldbus link has its own Link Active Schedule.

49 HPM Control Performance

49.3 Scan Frequency

The fieldbus LAS is independent of the HPM scan cycle. During the HPM scan cycle the HPM can read values from or write values to the fieldbus points through the Fieldbus IOP in the same manner as for any other IOP.

For more information about the Link Active Schedule, refer to the *TPS Builder Fieldbus Implementation* document.

I/O Data Scanning

The frequently used I/O parameters in the following table are automatically scanned in the HPMM.

I/O Point Type	Scanned Parameters	IOP Scan Period
Analog Input	PV, PVSTS, PVHHFL, PVLLFL, PVHIFL, PV, PVSTS, PVHHFL, PVHIFL, PVLOFL, PVLOFL, PVLLFLPVLLFL, PVROCNFL, PVROCPFL, BADPVFL	1/4 second for HLAI, 1/4 second for FBUS AI LLAI, PI, and STIM 1/2 second for LLMUX & RHMUX
Digital Input	PVFL, BADPVFL	1/4 sec for DI and DISOE, FBUS DI
Digital Output	SO and INITREQ	1/4 sec for DO and DO_32



ATTENTION

CL programs or control functions running in the HPMM do not require an I/O Link prefetch when reading any of the scanned parameters, and thus I/O Link prefetch related restrictions do not apply.

Scanned parameters in error cases

Reading any of the scanned IOP data never generates a communication error even if the IOP is failed. The following table summarizes the value of the scanned parameters in error cases and when the I/O module itself is in IDLE state or the point is INACTIVE.

Error Condition	Module Type	Default Data
Module Idle/ Point Active	HLAI, LLA I, PI, LLMUX, RHMUX, STIM, FBUS AI	PV = NaN PVSTS = Bad All alarm flags = OFF

Error Condition	Module Type	Default Data
Module Fail/ Communication Error	DI, DISOE, FBUS DI	PVFL = OFF (INPTDIR = Direct) PVFL = ON (INPTDIR = Reverse) BADPVFL = ON
	DO, DO_32	SO = Last Value INITREQ = ON
	HLAI, LLAI, PI, LLMUX, RHMUX, STIM, FBUS AI	PV = NaN PVSTS = Bad Alarm flags = OFF Alarm flags = Last Value (Comm Err)
	DI, DISOE, FBUS DI	PVFL = OFF (INPTDIR = Direct) PVFL = ON (INPTDIR = Reverse) BADPVFL = ON
Wire Cut	DO, DO_32	SO = Last Value INITREQ = ON
	HLAI, LLAI, PI, LLMUX, RHMUX, STIM, FBUS AI	PV = NaN PVSTS = Bad All alarm flags = OFF
	DI, DISOE, FBUS DI	PVFL = OFF (INPTDIR = Direct) PVFL = ON (INPTDIR = Reverse) BADPVFL = ON
	DO, DO_32	SO = Last Value INITREQ = ON

49.4 Determining Processing and Memory Capacity

Processing units

The processing power of the HPM control processor is measured in terms of "Processing Units (PUs)." Each control processor has an assured rate of 800 PUs per second. Each slot type consumes a certain amount of PUs subject to the scheduled frequency.

Processing units relationship to scheduled frequency

The relationship between the scheduled frequencies and the Processing Units for the slot types are contained in the following table. Please note that slots use more Processing Units at faster frequencies.

Slot Type	Pus per Second at Scheduled Frequencies		
	<i>1/4 Second</i>	<i>1/2 Second</i>	<i>1 Second</i>
Digital Composite	0.4 PU	0.2 PU	0.1 PU
Device Control	4 PU	2 or 4 PU	1 or 2 PU
Logic	4 PU	2 PU	1 PU
Process Module	N/A	2 or 4 PU	1 or 2 PU
Regulatory PV	4 PU	2 PU	1 PU
Regulatory Control	4 PU	2PU	1 PU
Array	0 PU	0 PU	0 PU
String	0 PU	0 PU	0 PU
Timer	0 PU	0 PU	0 PU
Flag	0 PU	0 PU	0 PU
Numeric	0 PU	0 PU	0 PU
Numeric (w/PV Alarming)	1/40 PU	1/40 PU	1/40 PU

Note: With TPN R684, the number of PUs consumed by the configured HPM Regulatory PV point type increases with the increase in the value of NPVSLOT and NFASTPV. HPM needs these extra processing units to execute the additional HPM Regulatory PV slots.

Process Module points

When configuring each HPM, you can choose how many processing units are allocated for its Process Module points.

If SEQPROC equals...	then...
1_PU	one PU is allocated per Process Module point per scan and up to 200 Process Module points can be scheduled in a single quarter-second cycle.
2_PU	two PUs are allocated per Process Module point per scan and up to 100 Process Module points can be scheduled in a single quarter-second cycle.

In batch applications where many small sequences are needed and you want all of them loaded at the same time, 1_PU is the appropriate choice for parameter SEQPROC.



ATTENTION

Process module points in software releases R230 (and earlier) always used two processing units, therefore, parameter SEQPROC should be set to 2_PU if updating from R230 and earlier versions.

With R682, you can process the Process Module points every 500ms. The process module points to be scanned twice a second must be placed in the lower numbered slots. These points are configured for twice a second execution by the parameter \$NSFPMS (Number of Semi Fast Process Module Points) in the HPM Node Specific Configuration. HPM must be in idle state to modify the value of \$NSFPMS. When the HPM is set to RUN state the points are automatically processed twice a second. Note that you must modify and compile the sequence programs, and load them to the corresponding points for the rearrangement of the slots to take effect.

49 HPM Control Performance

49.4 Determining Processing and Memory Capacity

HPM requires more Processing Units to execute this scan. The following is the PU consumption for twice a second execution of Process Module points.

If SEQPROC equals...	then...
1_PU	two PUs are allocated per Process Module point per scan and up to 100 Process Module points can be scheduled in a single quarter second cycle.
2_PU	four PUs are allocated per Process Module point per scan and up to 50 Process Module points can be scheduled in a single quarter second cycle.

The number of Process Module points processed twice a second is restricted to a maximum of 100 points.



ATTENTION

Both NIM and HPM must be loaded with R682 for the scan to function. Any configuration error with mismatch in personality can lead to system failure or abnormal behavior.

Memory unit capacity

HPMM capacity is measured in terms of Memory Units. For the point database and sequence programs, the maximum capacity is 22,000 Memory Units (MU) allocated as defined in the following table.

Table 49-3 Memory unit capacity

Slot Type	Memory Units Per Point
Digital Composite	5
Logic	15
Process Module	15
Regulatory PV	12
Regulatory Control	13
String	1/8 (Note 1)
Sequence Programs	1
Numerics	1/16 (Note 1)
Numerics (w/PV Alarming)	1/4 (Note 1)
Flags	0
Device Control	30
Array	8
Times	3/32 (Note 1)
Timer	0
Note 1: 8 strings = 1 MU 16 Numerics = 1 MU 4 Numerics (w/PV Alarming) = 1 MU 32 Times = 3 MU	



49 HPM Control Performance

49.4 Determining Processing and Memory Capacity

Memory unit constraints

Any mix of the slot types can be used, but the mix is subject to the following constraints

- Point mix used must not exceed 800 Processing Units or 22,000 Memory Units per HPM.
- Absolute number of each slot type per HPM cannot exceed the maximum shown in the following table (regardless of the available PUs).

Table 49-4 Memory unit constraints

Slot Type	Maximum Number	Comments
Digital Composite	999	
Device Control	400	
Process Module	250	
Regulatory PV	400	With TPN R684
Regulatory Control	250	
Logic	400	
Array	500	80 external max.
Numeric	16,384	First 2047 can have tags
Numeric w/PV Alarming	2047 or NNUMERIC	Whichever is less
String	16,384	
Time	4096	
Timer	64	
Flag	16,384	2047 can have tags

Note: With TPN R684, the number of MUs consumed by the configured HPM Regulatory PV point type increases with the increase in the value of NPVSLOT. HPM needs these extra memory units to store the additional HPM Regulatory PV slots.

Processing and memory capacity examples



ATTENTION

Invalid configurations are displayed as errors when the information is being loaded into the HPM through the Universal Station or GUS.

Example 1

The following illustrates a possible configuration, showing the PU calculations.

Point Type	Points	Freq	PUs/Slot	Total PUs/Slot Type
Regulatory PV	100	1 sec	1 PU	$100 \times 1 = 100 \text{ PU}$
Process Module	200	1 sec	1 PU	$200 \times 1 = 200 \text{ PU}$
Logic	100	1 sec	1 PU	$100 \times 1 = 100 \text{ PU}$
Device Control	150	1 sec	1 PU	$150 \times 1 = 150 \text{ PU}$
Digital Composite	300	1 sec	0.1 PU	$300 \times .1 = 30 \text{ PU}$
Regulatory Control	150	1 sec	1 PU	$150 \times 1 = 150 \text{ PU}$
Total PUs for this HPM				730 PUs

Example 2

The following illustrates a possible configuration, showing the PU calculations.

Point Type	Points	Freq	PUs/Slot	Total PUs/Slot Type
Regulatory PV	40	1/2 sec	2 PU	$40 \times 2 = 80 \text{ PU}$
Process Module	100	1 sec	1 PU	$100 \times 1 = 100 \text{ PU}$
Logic	25	1/4 sec	4 PU	$25 \times 4 = 100 \text{ PU}$
Device Control	50	1/4 sec	4 PU	$50 \times 4 = 200 \text{ PU}$
Digital Composite	150	1/4 sec	0.4 PU	$150 \times .4 = 60 \text{ PU}$
Regulatory Control	80	1/2 sec	2 PU	$80 \times 2 = 160 \text{ PU}$
Total PUs for this HPM				700 PUs

49 HPM Control Performance

49.4 Determining Processing and Memory Capacity

Example 3

The following illustrates a possible configuration, showing the PU calculations.

Point Type	Points	Freq	PU/Slot	Total PUs/Slot Type
Regulatory Control	100	1 sec	1 PU	$100 \times 1 = 100 \text{ PU}$
Fast Regulatory Control	50	1/4 sec	4 PU	$50 \times 4 = 200 \text{ PU}$
Total PUs for Reg Ctrl points				250 PUs
Note: If you have 100 RegCtrl points and 50 Fast Reg Ctrl points, the total PUs for Reg Ctrl points is 250. This is because the 50 Fast Reg Ctrl points is actually part of the 100-Reg Ctrl points. Fast Regulatory Control points are processed four times a second.				
Process Module (SEQPROC = 1_PU)	200	1 sec	1 PU	$200 \times 1 = 200 \text{ PU}$
Semi-fast Process Module	100	1/2 sec	2 PU	$100 \times 2 = 200 \text{ PU}$
Total PUs for Process Module points				300 PUs
Total PUs for this HPM				550 PUs
Note: If you have 200 process module points and 100 semi-fast process module points, the total PUs for process module points is 300. This is because the 100 semi-fast process module points are actually part of the 200 process module points. Semi-fast process modules points are processed twice a second.				

49.5 Overrun Handling

Background

The HPM has the capability to handle most configurations of up to 800 PU without encountering an overrun. Overruns occur when a specific task cannot be completed in the allowed time. The following overruns are possible in the HPMM:

- Point Processing.
- I/O Link Access.
- UCN Access (Peer-to-Peer Communication).

Point processing overrun

A point processing overrun occurs when the slots that are scheduled to be processed during any subcycle cannot be finished within the allocated time of 125 msec. When this occurs, all the points are processed to completion (nothing is aborted), but the following subcycle is delayed until the next 125 msec subcycle. Also, the current hour point processing-overrun counter is incremented by 1.

One of the primary causes of point processing overruns is several long sequence programs that are processing on the same subcycle. If a point processing overrun occurs for four seconds in a row (on any subcycle within each second), a point processing overload soft failure is generated. The soft failure is reset when an overrun does not occur for eight seconds.

For each subcycle, the current hour and previous hour point processing-overrun counters are maintained in the HPMM and displayed on the UCN Detailed Status Displays to help track down the cause of the overrun.

I/O link access overrun

This type of overrun occurs when parameter read or write access requests, from slots residing in the HPMM to I/O Processors in the same HPM, are not completed within a cycle time. This indicates that too many parameter access requests were attempted through the I/O link within the last cycle (250 msec). When this occurs, point processing is delayed by 125 msec and the I/O link overrun counter is incremented by 1. This continues until the requested data becomes available.

The anticipated average number of I/O link accesses (from HPMM points within the same HPM) is 120 parameters for each 250 msec cycle. Access overruns can be expected when the number of I/O link accesses exceeds 200 parameters for each 250 msec cycle.

49 HPM Control Performance

49.5 Overrun Handling

If an I/O link overrun occurs for four seconds in a row (on any cycle within each second), an I/O link access-overload soft failure is generated. The soft failure is reset when an overrun does not occur for eight seconds.

Although most IOL activity is periodic and can be accounted for, there are some functions that are less predictable. These functions include event and alarm collection, point configuration, checkpoint save/restore and synchronization of IOPs. IOL overruns and blank displays may be experienced if any of these activities becomes excessive.

For each cycle, the current hour and previous hour I/O link access-overrun counters are maintained in the HPMM and displayed on the UCN Detailed Status Displays to help track down the cause of the overrun.

I/O link bandwidth considerations

The amount of I/O Link bandwidth available for I/O scanning per second is divided into 1000 units called Link Units (LUs). A Link Unit is roughly equivalent to one parameter read or one parameter write per second.

.

Link unit calculations

AI, DO and DI PV connections, including point status and alarms, are scanned and therefore not counted in the point processing section of the sheet.

Except for Serial Interface Modules, which are configurable, PV scan times are fixed at 1/4 second (except the LLMUX and RHMUX scan time is 1/2 second) and AOs are not scanned. Digital Composite and Device Control Outputs only change when commanded. The resulting DO connection load can be estimated from the maximum number of commanded state changes per second.

Every parameter write from either a CL sequence or the UCN is followed by an unpredictable number of write message status reads. This number depends on several system variables. On the average, it has been observed to take approximately three LUs.

Table 49-5 HPM Link Unit Calculation Sheet

<u>PV and Event Status Scan</u>				
I/O Module	# IOPs	LUs		
AO, AO16, SI	X	2	=	
DI, DISOE, DI24V	X	9	=	
DO, DO32	X	7	=	
LLAI, PI	X	14	=	
LLMUX, RHMUX	X	20	=	
HLAI, SDI, STI	X	22	=	
Each secondary IOP*	X	2	=	
		Subtotal		
<u>Point Processing & SI Scan</u>				
Type	# Pts.	LUs		
CL prefetches	X	1	=	
CL poststores	X	4	=	
AO connections (.25s)	X	8	=	
AO connections (.5s)	X	4	=	
AO connections (1s)	X	2	=	
DO connections (.25s)	X	4	=	
DO connections (.5s)	X	2	=	
DO connections (1s)	X	1	=	
SI Array Point Scan (.25s)	X	16	=	
SI Array Point Scan (.5s)	X	8	=	
SI Array Point Scan (1s)	X	4	=	
SI Array Element Write (.25s)	X	4	=	
SI Array Element Write (.5s)	X	2	=	
SI Array Element Write (1s)	X	1	=	
		Subtotal		
<u>UCN Parameter Access</u>				
Type	# Pts.	LUs		
Read (.5s)	X	2	=	
Read (1s)	X	1	=	
Write (.25s)	X	16	=	
Write (.5s)	X	8	=	
Write (1s)	X	4	=	
		Subtotal		
		Total	=	LUs
*Redundant IOP		Max	=	1000 LUs



TIP

To prevent I/O Link overruns, the total LUs consumed per second should not exceed 1000.

HPM link unit monitoring

Page 2 of the HPM Local UCN Statistics display provides a convenient way to check I/O Link Unit usage. The statistic I/O LINK BANDWIDTH FREE displays the percent free (of the 1000 LUs available). This display is illustrated in the *High Performance Process Manager Service* manual along with some suggestions on correcting Link Unit overruns. Also, I/O Link overrun counts are displayed for each 1/4-second cycle on the HPM Scheduling Display.

UCN access overrun

This type of overrun occurs when parameter read or write access requests to other HPMs (or other nodes) on the same UCN are not completed within the given time (0.75 seconds).

When this type of access overrun occurs, the UCN access-overrun counter is incremented by 1, but point processing is not delayed. The sequence programs that access data from other UCN devices remain suspended until a response becomes available (or a communication time-out occurs). For input connections at RegPV, RegCtl, and logic slots that require data from the UCN, the last fetched value is used until new data becomes available, or a time-out occurs.

If the UCN access overrun occurs for 8 seconds in a row (on any cycle within each second), a UCN access-overload soft failure is generated. The soft failure is reset when an overrun does not occur for 16 seconds.

For each subcycle, the current hour and previous hour UCN access-overrun counters are maintained in the HPMM and appear on the UCN Detailed Status Displays to help track down the cause of the overrun.

Peer-to-peer UCN overruns and soft failures

Two consecutive peer-to-peer time-outs are required to count as a UCN overrun. More than one UCN overrun in 8 consecutive seconds causes a soft failure. The soft failure automatically clears when 16 consecutive seconds do not contain any UCN overruns.

The following figure illustrates the HPM Scheduling Display. This display can be accessed through the HPM Status Display/Detail Display target; then under CONTROL CONFIGURATION, choose SCHEDULE INFO.



TIP

Check this display for overruns, especially if your process module points contain a large number of statements per step (as long as all of the sequences in a subcycle average out to 20 statements per step, no overruns will occur).

When observing this display, note that:

- Along the left side, the type of point and execution order appears.
- The four 1/4 second cycles and their subcycles divide the display into columns.
- The numbers in each column represent the point slots.
- All of the points in a subcycle run consecutively in descending order (compare to the drawing in 3.1.2.3).
- Overruns (if any) for the point processing executive (PPX) and the I/O Link (IOL) appear across the bottom for the cycle or subcycle affected.

Figure 49-1 Display for Peer to Peer UCN overruns and soft failures

Process Module points are processed twice a second

26 May 11 10:59:00 2
 NETWORK VIEW <>

Control Config	Cycle 1		Cycle 2		Cycle 3		Cycle 4	
	1a	1b	2a	2b	3a	3b	4a	4b
	From-To	From-To	From-To	From-To	From-To	From-To	From-To	From-To
PV	75- 40							
Fast PV	39- 1		39- 1		39- 1		39- 1	
PM	76- 48	47- 1						
SmFst PM								
Log		50- 41	40- 21					
Fast Log		20- 1	20- 1		20- 1		20- 1	
DV			127-124	123- 71	70- 46	45- 1		
Fast DV								
DC						55- 2		
Fast DC		1- 1		1- 1		1- 1	1- 1	
Ctl						118-118	117- 93	92- 41
Fast Ctl		40- 1		40- 1		40- 1		40- 1
Tim								64- 1
Flg								1024- 1
Num	280-	560-	840-	1087-	1327-	1567-	1807-	2047-
	1	281	561	841	1088	1328	1568	1808
o CrHr PPX	0	0	0	0	0	0	0	0
v PrHr PPX	0	0	0	0	0	0	0	0
r CrHr IOL		0		0		0		0
n PrHr IOL		0		0		0		0
UCN 1	P/S PRIMARY UCN CHANNEL CHANNELA FILE POS FILE_2							
NODE 19	STATUS PF_IOL UCN AUTO SWAP ENABLE							
TYPE HPM	PKGOPT REDUN_2F							

49.6 Performance Monitoring

The Toolkit displays are available to check various performance statistics. These displays show the number of nodes requesting and responding, and the percent of time the HPM Communications and Controller CPUs are not busy. They also show the maximum, minimum, and average request/response times for transactions between peer nodes and other statistics. Section 10 of the *Engineer's Reference Manual* explains how to use the Toolkit displays.

A peer-to-peer communication efficiency statistic is displayed on the Control Configuration page of the HPM Detail Display. Also refer to the *HPM Implementation Guidelines* for other performance information.

49.7 UCN Device Resource Utilization Display

With R680, the number of available/consumed PUs, MUs and IOL bandwidth can be viewed through the **UCN Device Resource Utilization** display. The display can be accessed through the target UCNDEVUT in the PERFMENU or CONTROL CONFIG in the Control Configuration Display of xPM.

The schematic displays the following resource utilization statistics for each slot type:

- Total number of PUs, MUs and IOL bandwidth consumed by the HPM node.
- Maximum number of PUs, MUs and IOL bandwidth available for a HPM node.
- Number of free units in PUs, MUs and IOL bandwidth for a HPM node.
- % loaded.

The free units in PUs, MUs and IOL bandwidth are indicated in different colors as follows:

- If the free unit is greater than 30%, the value is backlit in green.
- If the free unit is between 20% and 30%, the value is backlit in yellow.
- If the free unit is less than 20%, the value is backlit in red.

In addition to the Resource Utilization statistics, the schematic displays the following:

- Link to IOPMDATA, control configuration, and the schedule information schematic for the selected HPM node.
- Number of points configured per slot type.
- Point mix of the selected HPM node.
- Available PUs, MUs and IOL bandwidth.

Section 21 of the *Process Operations Manual* explains how to view the UCN Device Resource Utilization Display. Section 10 of the *Engineer's Reference Manual* explains the details of the displays.

49 HPM Control Performance

49.7 UCN Device Resource Utilization Display

50. Database Considerations

50.1 Background

Point mix and scan rate

The point mix and the scan rate are configured as a part of the HPM Box Data Point. The term Point Mix refers to the number of points and box variables. The Scan Rate parameter specifies the Regulatory/Logic scan cycle. The box data point is accessed from the Node Specific Configuration display.

Changing the point mix and scan rate

The HPMM box state must be IDLE in order to load changes to the point mix or scan rate.

When changes are made to the point mix or scan rate in the HPMM, points that exist in both the old and new point mixes are preserved. Therefore, changes can be made to the point mix or scan rate without defaulting the currently loaded point database.

CAUTION

To prevent the accidental removal of points in the HPM, all configured points (system entities) that are being removed due to a reduction in the point mix must be deleted. This action will ensure that the points (and tagnames) are removed from the NIMs as well.

Untagged box numerics used by points or CL programs could be inadvertently deleted by reducing the number of box numerics.

Careful consideration must be taken before reducing the number of slots of any type in an HPM with points built or tagged from multiple remote NIMs. Because the point database is distributed between the HPM and the NIM and because the tagname resides in the NIM portion of the database, if the user fails to delete a configured point that is being removed before reducing the point mix, the tagname will remain on the remote NIM(s). At this time, an attempt to delete the point or access its point detail display will fail because the HPM and NIM databases are no longer synchronized. In this situation, in order to delete any such point(s), first change the NIM load scope parameter (LOADSCOP) to NIMONLY, then delete the point(s), and then reset the NIM load scope to its previous state.

50 Database Considerations

50.1 Background

Backup and Restore box parameters

With TPN R682, you can take a backup of the box parameters to a file and later use the file for restoring the values. The backup and restore option is available in xPM and is also applicable for HPM simulator box parameters.

The backup and restore option is available for the following box parameter type:

- STRINGS
- NUMERICS
- FLAGS
- TIMES

You can take a backup or restore for box parameters through DEB and DEBEC. In DEB you can perform a backup or restore operation using the BOX PARAM BACKUP RSTR target. In DEBEC you can use the command “BPB” and “BPR” for backup and restore operations respectively.

xPM must be in run state (IDLE, OK) to perform backup/restore. Multiple users can save backups in different locations. You can take a backup of the same parameter from different workstations at the same time. Similar to other DEB functionalities, file manager errors are reported, if the same file is selected by more than one user at the same time.



REFERENCE - INTERNAL

Refer to the *Data Entity Builder Manual* for information on how to backup and restore box parameters.

Loading Box data point configurations

When you attempt to load the HPM Box Data Point configuration to the HPMM, the point mix/scan rate combination is validated versus the criteria listed below. If any of these criteria are not met, the Box Data Point is not loaded to the HPM and an appropriate error message is displayed at the Universal Station or GUS. Also note these considerations:

- The requested number of points of a given type cannot exceed the maximum number of points allowable for that point type (refer to Determining Processing and Memory Capacity).
- The number of MU's required by the new point mix and any currently loaded CL programs cannot exceed the HPMM's user database maximum size (refer to Determining Processing and Memory Capacity).
- The total number of PU's required by the point mix/scan rate combination cannot exceed the HPMM's maximum processing capacity (refer to Determining Processing and Memory Capacity).
- Tagnames cannot exist in the local NIM database. Any currently configured points (slots with tagnames) cannot be removed by a reduction in the point mix (unless the tagname resides on a remote NIM only). Before reducing the number of slots of any type, first delete all points in the slot range being eliminated.
- Regulatory Control, Regulatory PV, Device Control, Digital Composite or Logic points that are being removed due to a reduction in the number of points of that type must have a point execution state (PTEXECST) of INACTIVE. Note that the point execution state parameter is set to the default value of INACTIVE if the point was properly deleted from the system.
- Process Module points that are being removed due to a reduction in the number of points must not have currently loaded CL programs (SEQEXEC should = NL). Note that a loaded CL program is automatically removed by first deleting the Process Module point from the system.

50 Database Considerations

50.1 Background

- Box variables that are removed due to a reduction in the number of box variables cannot be mapped into any existing Array point that will remain in the new point mix.



TIP

If changes are not required in the point mix, the HPM Box Data Point can be loaded while in the RUN state. For example, a new I/O Processor can be added without interrupting control by simply loading the HPM box data configuration (with the new I/O Processor added) while in the RUN state).

Point building relationship to box configuration

Point building follows box Configuration. Each point is configured to run in a slot inside the HPMM. The first time through a power-up cycle (HPMM box state transition from ALIVE to IDLE), the database of each slot (included in the default point mix) is defaulted to a null configuration. You can build or load a point configuration into each slot. When a point is deleted, the database of the slot containing the point is defaulted to the null configuration.

51. Point Execution State

51.1 Background

Slot processing in the HPMM is performed only when the HPMM box state is RUN. Only those slots whose point execution state (PTEXECST) is Active are processed. The point's execution state must be Inactive in order to modify any of the configuration parameters (for example, engineering unit range, PV or control algorithm ID, input/output connections, and so on). When a point is made Inactive, all the calculated variables (like PV, CV, alarms, and so on) are set to their default values ("NaN" for real numbers and OFF for Logical). The point execution state cannot be changed back to Active until all the configuration parameters are specified.

51.2 Run-Idle-Run Transition

The following table defines the effect on data points when the HPMM is switched from RUN to IDLE and back to RUN.

Data Points	Effect of RUN
Logic Blocks	Execution halts, then resumes once box is running again.
CL Programs	Execution stops. Program needs to be restarted once PM is running again. Refer to parameter RSTROPT.
Timers	The timer stops and needs to be restarted once the box is running. Time accumulation starts from where it left off unless reset deliberately.
Other Point Types	Processing stops and outputs are held. Processing resumes when the HPM is running again.

51.3 Warm/Cold Restart

Starting an HPM

The HPM is started through the HPM Status display. Warm/Cold startup refers to the behavior of algorithms under initialization. When going from the idle to run state, the operator can choose between warm and cold startup (for each HPM). After a checkpoint restore, either a warm or cold startup is possible.

Cold startup

Usually requires operator intervention, that is, the operator must change some point states from manual to their normal operating mode. On a cold startup, all Regulatory Control points that output to the field go to manual mode. For Regulatory Control points that drive other Regulatory Control points (even in another HPM), a cold start does not cause a change from the previous mode.

Warm startup

If you choose warm startup, Regulatory Control points remain in the previous mode and are back-initialized for a bumpless transfer to automatic control with their previous output value.

Power-up Restart

If RAM memory was not lost since the previous operation, a power-up restart is possible without reloading the program. In this case, the HPM will return to its previous Idle/Run state. If the state is Run, all points behave as if a cold restart was performed.

Point behavior during startup

Some points behave differently during startup regardless of the startup mode:

Regulatory PV Totalizer points—you can configure the point to continue or stop accumulation on restart (see parameter PVEQN).

Process Module point—you can configure sequence execution to restart from the beginning or remain off and be restarted by the operator (see parameter RSTROPT).

Regulatory Control Ramp Soak—Point is always set to Manual mode.

Status conditions

The following table summarizes the important status conditions for Warm/Cold restart functions.

Point Type	Parameter	Status After...		
		Power Off/On	Cold Start	Warm Start
Regulatory Control (except Ramp/Soak) Outputs to IOP	MODE	Manual	Manual	Last Mode (Back-initializes; goes on control)
Regulatory Control (except Ramp/Soak) Outputs to another RegCtl point	MODE	Manual	Last Mode ¹	Last Mode. (Back-initializes; goes on control)
Regulatory Control Ramp Soak	MODE	Manual	Manual	Manual
Regulatory PV Totalizer² PVEQN = A, B, C	PV	Cont. Totalizing	NaN	Cont. Totalizing
	PVSTS	Uncertn	Bad	Uncertn
	STATE	Running	Stopped	Running
Regulatory PV Totalizer PVEQN = D, E, F	PVSTS	Bad	Bad	Bad
	STATE	Stopped	Stopped	Stopped
Process Module RSTROPT = Restart	SEQEXEC	Run	Run	Run
	PROCMOD	Norm	Norm	Norm
Process Module RSTROPT = Off	SEQEXEC	Loaded	Loaded	Loaded
	PROCMOD	Off	Off	Off
Timer	PV	Last Good Value ³	Last Good Value ³	Last Good Value ³
	STATE	Stopped	Stopped	Stopped

- 1) Control is halted by the final point in then cascade which always outputs to an IOP.
- 2) Count may be inaccurate if rollover occurs in IOP.
- 3) The last good value can come from HPM RAM memory if battery power is continuously available; otherwise, from the last checkpoint stored on the History Module.

51 Point Execution State
51.3 Warm/Cold Restart

52. Peer-to-Peer Communication

52.1 Background

Peer-to-peer communication allows information to be passed between devices on the UCN and can be initiated from the High-Performance Process Manager, the Advanced Process Manager, the Process Manager, the Logic Manager, or the Safety Manager.

52.2 Implementation

Mechanisms for implementation

The HPM provides the following two convenient mechanisms for implementing peer-to-peer communications functions:

- Input Connections.
- Output Connections.
- CL Read/Write Statement.

Both communication mechanisms offer location-independent access to data from another UCN device using the "Tagname.Parameter" notation.

Refer to for a summary of peer-to-peer communications.

Input connections

The RegPV, RegCtl, DevCtl, and Logic slots can use standard input connections to obtain data from other UCN devices. When such a connection is configured, it is scanned at the rate of twice per second, regardless of the scan rate of the slot in which it is configured. The data obtained is saved internally and used (more than once if the slot is running faster than twice a second) until the next time that it needs data. Peer-to-peer data is requested .75 seconds before it is needed. The data obtained from another UCN device can therefore be up to .75 second old by the time it is used. A maximum of 100 input connections can be configured for each HPMM.



TIP

We recommend that input connections be used for continuous peer access that requires a 1/2 second update (see "Run-Idle-Run Transition" in Section 51.2).

Output connections

The RegCtl, DevCtl, and Logic slots can use standard output connections to provide outputs to other UCN devices. Output connections are processed when the slot is processed, thus outputs are updated four times per second, two times per second, or once per second depending on the point processing rate. The number of output connections per HPMM is not limited.



TIP

We recommend that output connections be used for regulatory-control cascades between UCN devices (see “Run-Idle-Run Transition” in Section 51.2).

Table 52-1 Peer-to-peer implementation summary

Peer-to-Peer Mechanism	Configuration Limits (Per HPM)	Handling of Failure/Recovery of Peer Node	Recommended
Input Connections	100 distinct parameters used by points, not including CL Read.	Analog On failure, bad value (NaN) is substituted.	Use for continuous (1/2 second) update of data required for RegPV, RegCtl, DevCTL, or Logic Slots.
		Digital Addressed by Logic Slot. On failure, ON, OFF, or last value is substituted based on user configuration. On recovery from failure, accessed values are then used.	
Output Connections	Not limited	Regulatory Control Cascade Primary initializes.	Use for regulatory control cascades between nodes.
		Logic Output Store does not occur. On recovery from failure, regulatory control clears initialization and resumes control. Subsequent output changes are stored on transition.	

Peer-to-Peer Mechanism	Configuration Limits (Per HPM)	Handling of Failure/Recovery of Peer Node	Recommended
CL Read Statement	16 values per Process Module Data Point per second	If requested read transaction not completed, CL program branches to specified error location. Program fails when error option not used. On failure recovery, program behavior is based on user code, or requires operator interaction if failed.	Use for on-demand data required by CL programs. Use for continuous (1 second) update of data required for RegPV, RegCtl, DevCTL, or Logic Slots.
CL Write Statement	16 values per Process Module Data Point per second	Same as above.	Same as above. (Use of Read or Write statements is based on user preference)

CL/HPM configuration limits

Characteristics and configuration limits for CL/HPM read/write peer access are as follows:

- A user-written CL/HPM sequence program executing in the HPMM can use explicit read/write statements to read parameter values from other UCN devices and write parameter values to other UCN devices.
- Any time a read/write statement is executed, the sequence program is suspended until the following cycle when the response becomes available (normally one second).



TIP

We recommend that the CL read/write technique be used for on-demand peer access, and for continuous peer access that requires a 1-second update.

52.3 Restrictions

Point type restrictions

Certain restrictions exist on the type of data that can be accessed through peer-to-peer communication. These restrictions vary with the point type. The following table defines the type of data that can be accessed for each point type or connection type.

52 Peer-to-Peer Communication

52.3 Restrictions

Connection Type	Allowed Data
RegCtl.CISRC	No restrictions
RegCtl.CODSTN	RegCtl.SP and RegCtl.X1
RegPV.PISRC	No restrictions
Logic.LISRC	No restrictions
Logic.LODSTN	No restrictions
DevCTL.LISRC	No restrictions
DevCTL.LODSTN	No restrictions
DigComp	No Peer-to-peer connections allowed
DevCtl	No Peer-to-peer connections allowed
ProcModl Read Statement	No restrictions
ProcModl Write Statement	No restrictions

Performance related limits

In addition to the configuration constraints, there are performance-related limits on parameter access that affect the overall peer-to-peer throughput capability. Actual performance for each HPM varies depending on specific system configuration; however, any HPM should be capable of handling a total load of up to 1000 parameters per second.

In addition to parameter throughput-related constraint, the number of devices concurrently communicating to a single High-Performance Process Manager is another factor that influences performance.

The interaction of the above constraints must be considered primarily in applications in which an extreme communication load is continuous. In this type of application, the following configuration recommendations maximize peer-to-peer throughput capability.



TIP

Adopt a single approach for all peer-peer communications; use either input/output connections or CL read/write statements. If a 1-second update is adequate and cascade interconnection is not required, the CL read/write approach offers increased capability (quantity/throughput) for peer data access.

For CL read/write approach:

- consistently use same method (either CL reads or CL writes).
 - the Process Module Data Points that are continually affecting peer-to-peer communication should be grouped on the same 1/4-second cycle.
-

52 Peer-to-Peer Communication

52.3 Restrictions

53. Hardware References

53.1 Hardware Reference Addressing

Referencing I/O point parameters

The HPM allows the referencing of parameters of I/O points (AO, DI, DO) on a hardware basis within the same HPM using the standard input/output hardware connection reference syntax (user-written sequence programs can reference DI points). This type of addressing does not affect the point count in the NIM and these “untagged” references can be quickly built, but there are several disadvantages. Untagged points are not easily visible in the system so you must use the Command Processor Find Names function to see the connections. Note that operating displays cannot include untagged points.

Untagged references

The use of untagged references is not recommended, however, if there might be a reason to use them or some may be present in an existing system. If you use them keep good records.

Hardware reference address format

The hardware reference address point format is

`!MTmmSss.Parameter`

Where:

- MT is the IOP type such as AO, DI, DO, or PI.
- mm is the number of the IOP card (1-40) in the card file.
- ss is the input or output slot number on the specified IOP card.
- Parameter is the parameter whose value is to be written to by an output connection, or a parameter whose value is to be read by an input connection.



TIP

Standard status displays are available to show which points are associated with each hardware module.

53 Hardware References

53.1 Hardware Reference Addressing

The following are examples of hardware reference addresses:

Hardware	Address Example
AO Processor Output	!AO12S03.OP OP parameter of Slot #3 of AO Processor #12
DI Processor PV	!DI05S07.PVFL PVFL parameter of Slot #7 of DI Processor #5
DO Processor Output (Status or Latched)	!DO15S12.SO SO parameter of Slot #12 of DO Processor #15
DO Processor ON Pulse Command	IDO15S12.SO ONPULSE parameter of Slot #12 of DO Processor #15
DO Processor OFF Pulse Command	!DO15S12.OFFPULSE OFFPULSE parameter of Slot #12 of DO Processor #15



ATTENTION

The AI address !AimmSss.Parameter is not supported because the analog input point does not have a useable default database.

Find Names function

You can use the Find Names function to provide the node number, module type, point type, and slot number for all connections. This function is especially helpful to find the hardware reference points. Refer to the *Command Processor* manual for information on the Find Names utility.

53 Hardware References

53.1 Hardware Reference Addressing

54. Redundancy

54.1 Background

The HPM can contain optional redundant HPMM modules and certain types of optional redundant IOP modules (currently HLAI, STIM, AO, DI, DISOE, and DO modules). During HPM Node Specific configuration, the user specifies which modules are redundant and, for IOPs, the file/card locations of the redundant partners. Refer to *"HPM Operational Considerations"* in the *High-Performance Process Manager Implementation Guidelines* manual for more information.



REFERENCE - INTERNAL

Refer to *"HPM Operational Considerations"* in the *High-Performance Process Manager Implementation Guidelines* manual for more information.

54.2 IOP Module Switchover

If a redundant HPMM module or synchronized redundant IOP module fails, switchover is automatic and transparent to the user (input and set output operations are unaffected). Data acquisition, alarming, and control strategies are automatically managed by the system.

54.3 HPM Redundancy Parameters

The principal parameters that pertain to HPM redundancy are:

- | | | |
|--------------|--------------|------------|
| • ACTPRIM | • IOMFILEA/B | • POSITION |
| • FTACONN | • IOREDOPT | • SYNCHSTS |
| • IOMCARDA/B | • PKGOPT | • WITHBIAS |



REFERENCE - INTERNAL

Refer to these parameters in the *PM Family Parameter Reference Dictionary* for additional information.

54 Redundancy

54.3 HPM Redundancy Parameters

55. Point Reservation

55.1 Background

To support batch applications, you need to be able to reserve certain points that represent shared devices for particular batches. The HPM allows CL programs to reserve Regulatory Control, Regulatory PV, Logic, Digital Composite, Device Control, Process Module, and Array points for exclusive use.

55.2 Establishing Point Reservation

Point reservation is accomplished using a 16-character string parameter (USERID). This string has special logic so that two programs cannot reserve the same point at the same time. This string can always be stored by the operator, but a program can only store a nonblank string when the USERID itself is currently blank. This should eliminate race conditions.

To keep programs from failing, storing an invalid string does not generate an error; it will just not do anything. The program should read the string back after the store to verify that it was accepted. To handle retries, a given value of the string can be stored any number of times. All blanks can be stored at any time to release the point. Programs must be careful not to release points that other programs or the operator have reserved. A special string starting with three or more dashes may be used to indicate that a point cannot be reserved and only the operator can clear this string.

55 Point Reservation
55.2 Establishing Point Reservation

56. Status Messages

56.1 Availability

The Status Message function is available for RegCtl, RegPV, Logic, DigComp, DevCtl, ProcMod, and Array points. One table of messages is configurable for each NIM.

56.2 Configuration

During UCN Node Configuration for the NIM, you can enter up to 15 Message Text Items, (MSGTXT(n)). The entry is an 8-character ASCII string. Message text item 0 defaults to NONE and is not configurable. The actual number of Message Text items that you can enter is determined by parameter NMSGTXT, the number of Message Text items.

56.3 Operator Interaction

On the point's Detail display, the operator can select STSMMSG and choose any message from the table of Message Text items that appears. That Message Text item then replaces the current contents of STSMMSG and, if nothing of higher priority is currently displayed, appears as a comment at the lower left of the display. The Status Message also appears in place of the "Red Tag" message when Red Tag is on.

56.4 CL Interaction

If a point is not in Red Tag, a CL program can store a message (in STSMMSG). When Red Tag is on, only the engineer or supervisor can store the message.

56 Status Messages

56.4 CL Interaction

57. Mode and Mode Attribute Selection List

57.1 Background

This R630 function allows an engineer to remove the MODE/MODATTR selections from the operator's standard-display MODE selection lists. This prevents the data point from being placed in the wrong mode and from having the wrong mode attribute assigned. This function is implemented using the \$MODESEL parameter.

57.2 Configuration

This function is implemented by the user configuring a mode selection list using the \$MODESEL parameter to determine the applicable modes and mode attribute. During normal operation, the mode selection list is displayed on the standard displays (Detail, Group, Standard Change Zone, Enhanced Change Zone, GUS Faceplate, GUS Group, and GUS Change Zone) when the mode is selected.

However, changes to the control mode parameters using AM/CL and custom schematics remain unaffected.

The \$MODESEL parameter can be modified from a custom schematic with Engineer key level access or from AM/CL.

Any change made to the \$MODESEL parameter affects the value of MODEAPPL, that is, if \$MODESEL is configured to disallow the AUTO mode, then the corresponding boolean in the MODEAPPL parameter will be reset to FALSE. The mode attribute entry (PROG) in the mode selection list can be disallowed by setting \$MODESEL(5) to FALSE.

57 Mode and Mode Attribute Selection List

57.2 Configuration

The allowable modes and mode attribute that can apply to an HPM point are dependent on the point types as shown in the tables below. Any of these modes can be configured so that the mode is not shown on the mode selection list.

Analog Output	Digital Composite	Device Control	
Allowable Modes/Mode Attribute			
Man	Man	Man	
Cas	Prog	Prog	
Prog			
Regulatory Control			
Control Algorithms			
Null	Rampsoak	AutoMan	PID
		IncrSum	PIDErFb
		MulDiv	PIDFF
		OrSel	PIDPosPr
		Summer	PosProp
		Switch	RatioCtl
Allowable Modes/Mode Attribute			
Man	Man	Man	Man
Prog	Auto	Cas	Auto
	Prog	Bcas	Cas
		Prog	Bcas
			Prog

PID	Fieldbus		PECM	SECM
	FBCM			
	AO	AI		
	Allowable Modes			
Man	Man	Man	Auto	N/A
Auto	Auto	Auto	OOS	
Cas	Cas	Normal		
Bcas	Bcas	OOS		
Normal	Normal			
Rcas	Rcas			
Rout	Rout			
OOS	OOS			



ATTENTION

The PROG mode attribute is not applicable to Control Module (CM) points.

By default, all the modes and mode attributes applicable for a point are allowed in the mode selection list.



ATTENTION

The MAN, AUTO, and NORM keys on the operator keyboard do not function if the desired mode change (MAN or AUTO or the value contained in NMODE) has been disallowed from the mode selection list.



ATTENTION

If parameter EXTSWOPT (External Mode Switching Option) is enabled, its restrictive qualities will take precedence over \$MODESEL.

57 Mode and Mode Attribute Selection List
57.2 Configuration

Honeywell

Honeywell Process Solutions
1860 W. Rose Garden Lane
Phoenix, AZ 85027 USA