

Implementation Startup & Reconfiguration—1

Native Window System Message Directory

SW09-607
R660
03/2013

Notices and Trademarks

Copyright 2007 by Honeywell International S rl.
Release 660 March, 2013

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell is a registered trademark of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

The following standard document conventions may be used in this document. Check Section 1 for conventions unique to this document.

Item	Convention	Meaning
<KEYCAPS>	Pointed brackets around a term	A key on a computer keyboard
[TARGET]	Square brackets around a term	For touch screen monitors, an area that can be touched to invoke a system action
entry data	Courier bold text	Data you enter into the system
screen/program data	Courier text	Screen or program data

Honeywell Process Solutions
1860 W. Rose Garden Lane
Phoenix, AZ 85027 USA
1-800 822-7673

About This Document

References

Hardware references

Document Title	Binder Number	Binder Name
<i>Five/Ten-Slot Module Service</i>	3060-2	LCN Service - 2
<i>History Module Service</i>	3060-2	LCN Service - 2
<i>Dual Node Module Service</i>	3060-2	LCN Service - 2
<i>Process Manager/Advanced Process Manager Service</i>	3061-1	PM/APM/HPM Service
<i>LCN Guidelines - Implementation, Troubleshooting, and Service</i>	3025	LCN Installation
<i>High-Performance Process Manager Service</i>	3061-1	PM/APM/HPM Service
<i>Logic Manager Service</i>	3073	LM Service

General References

Document Title	Binder Number	Binder Name
<i>Application Module Form Instructions</i>	3035-1	Implementation/Application Module - 1
<i>Application Module Forms</i>	3031	Implementation/Configuration Forms
<i>Application Module Algorithm Engineering Data</i>	3035-1	Implementation/Application Module - 1
<i>Maintenance Test Operations</i>	3060-1	LCN Service - 1
<i>Process Operations Manual</i>	3050	Operation/Process Operations
<i>Engineer's Reference Manual</i>	3030-2	Implementation/Startup & Reconfiguration - 2
<i>CM50S Release 5.0 User Manual</i>	3039-2	Implementation/CM50S - 2
<i>Application Module Control Functions</i>	3035-1	Implementation/Application Module - 1
<i>System Maintenance Guide</i>	3060-1	LCN Service - 1

Support and Other Contacts

United States and Canada

Contact: Honeywell Solution Support Center
Phone: 1-800-822-7673
Calls are answered by dispatcher between 6:00 am and 4:00 pm Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.
Facsimile: 1-973-455-5000
Mail: Honeywell TAC, MS L17
1860 W. Garden Lane
Phoenix, AZ, 85027 USA

Europe, Middle East, and Africa (EMEA)

Contact: Honeywell TAC-EMEA
Phone: +32-2-728-2345
Facsimile: +32-2-728-2696
Mail: TAC-BE02
Hermes Plaza
Hermeslaan, 1H
B-1831 Diegem, Belgium

Pacific

Contact: Honeywell Global TAC – Pacific
Phone: 1300-364-822 (toll free within Australia)
+61-8-9362-9559 (outside Australia)
Facsimile: +61-8-9362-9564
Mail: Honeywell Limited Australia
5 Kitchener Way
Burswood 6100, Western Australia
Email: GTAC@honeywell.com

India

Contact: Honeywell Global TAC – India
Phone: +91-20- 6603-9400
Facsimile: +91-20- 6603-9800
Mail: Honeywell Automation India Ltd
56 and 57, Hadapsar Industrial Estate
Hadapsar, Pune –411 013, India
Email: Global-TAC-India@honeywell.com

Korea

Contact: Honeywell Global TAC – Korea
Phone: +82-80-782-2255 (toll free within Korea)
Facsimile: +82-2-792-9015
Mail: Honeywell Co., Ltd
4F, Sangam IT Tower, , B4-4Block
1590, DMC Sangam-dong, Mapo-gu
Seoul, 121-835, Korea
Email: Global-TAC-Korea@honeywell.com

People's Republic of China

Contact: Honeywell Global TAC – China
Phone: +86- 21-2219-6888
800-820-0237
400-820-0386
Mail: Honeywell (China) Co., Ltd
33/F, Tower A, City Center, 100 Zunyi Rd.
Shanghai 200051, People's Republic of China
Email: Global-TAC-China@honeywell.com

Singapore

Contact: Honeywell Global TAC – South East Asia
Phone: +65-6580-3500
Facsimile: +65-6580-3501
+65-6445-3033
Mail: Honeywell Private Limited
Honeywell Building
17, Changi Business Park Central 1
Singapore 486073
Email: GTAC-SEA@honeywell.com

Taiwan

Contact: Honeywell Global TAC – Taiwan
Phone: +886-7-536-2567
Facsimile: +886-7-536-2039
Mail: Honeywell Taiwan Ltd.
17F-1, No. 260, Jhongshan 2nd Road.
Cianjhen District
Kaohsiung, Taiwan, ROC
Email: Global-TAC-Taiwan@honeywell.com

Japan

Contact: Honeywell Global TAC – Japan
Phone: +81-3-6730-7160
Facsimile: +81-3-6730-7228
Mail: Honeywell Japan Inc.
New Pier Takeshiba, South Tower Building,
20th Floor, 1-16-1 Kaigan, Minato-ku,
Tokyo 105-0022, Japan
Email: Global-TAC-JapanJA25@honeywell.com

Elsewhere

Call your nearest Honeywell office.

World Wide Web

Honeywell Solution Support Online:

<http://www.honeywell.com/ps>

Training Classes

Honeywell Automation College:

<http://www.automationcollege.com>

Contents

1.	Introduction	23
1.1	Overview	23
	Purpose	23
	Intended audience	23
	Sections removed from this document	23
1.2	Finding Information Quickly	24
	Technical assistance	24
	Available resources	24
1.3	Responding to Alarm Conditions	24
	Description	24
	Where to begin	24
	Alarm annunciation	24
	Console Status display alarms	25
	LCN module alarms	25
	The operator's responsibility	25
	The engineer's responsibility	26
2.	SMCC Maintenance Recommendation Messages	27
2.1	Definitions of SMCC and Error Messages	27
	SMCC	27
	Maintenance Recommendation Messages	27
2.2	Maintenance Recommendation Messages Format	27
	Messages description	27
	Messages on output device	27
	Example messages on output device	27
	Message components	28
	Message component descriptions	28
	Error-type codes	29
3.	Error Message Listing	35
3.1	About Error Messages	35
	Messages on the Universal Station	35
	Hardware and software status displays	35
	Alphabetical listing	35
3.2	Available Information	35
	Error messages format	35
	MESSAGE IN BOLDFACE TYPE	35
	Accessing Message Listing	35
3.3	Messages Directory Listing	36
	>1 DUALOUT STORE	36
	&E CONTROL ITEM MISSING	36
	8 HOUR SHIFTS, TYPE THE DIGIT 8 FOLLOWED BY SPACE OR COMMA, 21 TIMES	36
	@ EXISTS - SELECT OVERWRITE OPTION IF DESIRED	36
	@ INDIRECT TYPE NOT AVAILABLE	36
	@ NOT LOADED	36
	@ NULL AND @ VALID ENTITIES @ UNUSED RECORDS AND @ VALID RECORDS	36
	A CHANGE TO ANOTHER INSTALLATION UNIT MUST BE INSTALLED FIRST	36
	A DESCRIPTOR MAY CONTAIN ANY CHARACTER ON THE ENGINEERING KEYBOARD.	36

AN HM VALIDATOR HAD AN INTERNAL ERROR	37
ABORT ON BREAK	37
ABORT ON ERROR	37
ABORT ON ERROR AT SOURCE LINE @	38
Abstract from Newer Version	38
Abstract VER Mismatch	38
ACCESS LEVEL ERR	38
ALGO MUST BE DDC	38
ALGO MUST BE SPC	38
ALGORITHM ERR	38
ALL DISK DRIVES ON HM HAVE FAILED	39
ALM CONF MISMTCH	39
ALREADY BUILT	39
AN AREA NAME MAY CONSIST OF NONE TO 8 ALPHANUMERIC CHARACTERS, OR UNDERBAR	39
A UNIT ID CONSISTS OF 1 OR 2 DIGITS OR CAPITAL LETTERS AND MUST BE UNIQUE	39
AND SELECTING IF DUMP FILES WILL ALSO BE ON THE VOLUME	39
ANL OUT MODULCTL	39
ANY 24 CHARACTERS, RESERVED FOR THE USER	39
AREA DATA BASE FILE MUST BE SPECIFIED	39
AREA NAMES MUST BE LEGAL IDENTIFIERS	40
ARITHMETIC OVERFLOW	40
ASSIGN AREAS TO THIS VOLUME	40
ASSIGN HIWAYS, VOLUME SIZE, NBR FILES FOR CONTROL LANGUAGE-DISCONTINUOUS	40
ATTR ID ERR	40
ATTRIBUTE ID ERR	40
BACKGROUND CL QUEUE FULL	40
BAD CHARACTER FOR SELECT STRING	40
BAD REC.ID: -- IN INPUT NCF AT REC. NO:----.	40
BAD VALUE	40
BASE ALGO ID ERR	40
BATCH NAME	40
BLIND_REC TYPE EXPECTED	40
BOOLEAN TYPE EXPECTED	41
BOOT LOADER DISK ERROR, USED SECONDARY DRIVE FOR BOOT LOAD	41
BOX FAILURE	41
BOX INVALID	41
BREAK ENABLE FAILED	41
BUILDING FORM	41
*** BUSY ***	41
BUSY	41
BUTTON FILE MISSING OR WRONG REVISION. BUTTONS INOPERABLE	41
CANNOT COMPILE SUBPICTURE	42
CANNOT CONF INIT	42
CANNOT CONF TRCK	42
CANNOT DELETE RESERVED ENTITY ID	42
CANNOT DO LOAD WITH OVERWRITE AND MAKE THIS CHANGE	42
CANNOT FIND POINT	42
CANNOT LOAD EQ OBJ	42
CANNOT RETRANSLATE PICTURE	42
CF FILE INIT FAILED	43
CF FILE OPEN FAILED	43
CG RECOVERED ONE CABLE TO ULP	43
CG COMMUNICATIONS TO ULP HAVE FAILED	43
CG STARTUP, ESTABLISHING COMMUNICATIONS TO ULP	43
CHECK THE SYSTEM LOAD - 5/10/20/60 SEC HISTORY COLLECTION CYCLE OVERRUN	43
CHG INVALID	43
CLOSE CF FILE FAILED	43
CLOSE WORKING FILE FAIL	43
CO NOT CONFIG	44
COMMA EXPECTED	44
COMMAND LINE EXCEEDED 80 CHARACTERS (R610)	44
COMPARISON OF LOCAL NCF FILE AND SAME OBJECT FILE IN THE NCF HAD DISCREPENCIES	44

COMPILE ERROR	44
COMPLETE	44
CONF FORC IN EFF	45
CONFIG MISMATCH	45
CONFIG NORM MODE	45
CONFIG Y SOURCE	45
CONFIGURATION FILE INTEGRITY CHECK MODULE IS RUNNING	45
CONFIGURE BURST BUFFER SIZE IF EITHER PROCESS OR SYSTEM UNIT JOURNALS ASSIGNED	45
CONFIGURE THE GDF FILES ON THE SYSTEM VOLUME	45
CONFIGURE THE HM OFF-LINE PERSONALITY ON THE LOCAL VOLUME	46
CONSECUTIVE OPERANDS ILLEGAL	46
CORRUPTED VOLUME DIRECTORY	46
COULD NOT ATTACH CUST SEGMENT @ TO ENTITY	46
COULD NOT CONVERT INT ENTITY ID TO EXTERNAL	46
COULD NOT ESTABLISH ENTITY @	46
COULD NOT FIND ENTITY @ ON NET	46
COULD NOT GET PARAMETER	46
COULD NOT LOAD ENTITY @	46
COULD NOT RELOAD ENTITY @	46
COULD NOT SEND PARAMS TO ENTITY @	46
CREATE WORKING FILE FAIL	46
CREATING A NEW NCF.CF FILE	46
CRITICAL DISPLAY COULD NOT BE COPIED TO MEMORY AT STARTUP	46
CS INDEX RANGE	47
CTL STATE BASIC	47
CTL STATE READ	47
CTL STATE TEST	47
CTRL LOCK ERROR	47
CURSOR NOT IN PORT OR PICK	47
CUSTOM ENUMERATIONS WERE NOT LOADED- REVISION MISMATCH	47
CUSTOM NAME LIBRARY/CUSTOM GDF MISMATCH	48
CUSTOM NAME LOAD ABORTED - COULD NOT GET REVISION FROM PEER	48
CUSTOM NAME LOAD HAD A FILE I/O ERROR <xx>	48
CUSTOM NAME LOAD ABORTED - ERROR WHILE LOADING MEMORY	48
CUSTOM PARAMETER LISTS WERE NOT LOADED - REVISION MISMATCH	48
CUSTOM PARAMETERS WERE NOT LOADED - REVISION MISMATCH	48
CUSTOM SEGMENT NAME NOT FOUND	49
CUSTOM SEGMENT TOO LARGE	49
CUSTOM SEGMENTS WERE NOT LOADED - REVISION MISMATCH	49
CUSTOM STANDARD PARAMETER DUPLICATE XREF CREATION FAILED	49
CUSTOM SYSTEMS MSF FILE ERROR	49
CUSTOM SYSTEMS MSF UTILITIES NOT LOADED	49
CVB SIZE FOR FAST PROCESS <xxxx> OR MORE MUST BE IN NCF	49
DATA ACCESS ERROR	50
DATA ENTRY TIME OUT	50
DATA ERROR	50
DATA NOT AVAILABLE	50
DATA PNT TOO BIG	50
DATA Point <pointname> NOT FOUND – ALL NODES NOT OPERATIONAL	50
DATA REALM	50
DATA TRUNCATED DUE TO STORAGE/PORT OVERFLOW	50
DATA TYPE ERR	50
DATE EXPECTED	50
DATE OR TIME EXPECTED	51
DEFAULT TRUNCATED	51
DEV NOT IDLE	51
DEVICE RESET	51
DEVICE UNAVAILABLE @	51
DIRECTORY ATTRIBUTES OF FILE CORRUPTED (71)	51
DISK CAPACITY EXCEEDED	51
DISK CONTROLLER ERROR	51
DISK DRIVE SET OFFLINE	51

DISK NUMBER - IS FULL FOR CH, UNIT ID: ---.	52
DISPLAY DATA BASE ERROR	52
DISPLAY IS MISSING OR INACCESSIBLE	52
DISPLAY NOT CONFIGURED	52
DUPL_DIR_CHK	52
DUPLICATE ENTITY. TWO POINTS HAVE THE SAME NAME	52
DUPLICATE ENTITY @ OF TYPE @ IN UNIT @ REALM @	52
DUPLICATE CL/D HIWAY NUMBER: --	52
DUPLICATE CONTINUOUS HISTORY UNIT ID: ---	52
DUPLICATE ENTITY (entity) IN UNIT (uuu) ON NODE (nnn)	52
DUPLICATE JOURNAL MANAGER UNIT ID: ---	52
DUPLICATE LOAD/DUMP PHYSICAL NODE TYPE: ----	53
DUPLICATED PARAMETER ID	53
DUPLICATE SUBPICTURE NAME ALREADY EXISTS IN PICTURE	53
DURATION EXPECTED	53
END OF PORT ENCOUNTERED	53
ENGINEER'S KEYLOCK MUST BE ENABLED TO USE THIS COMMAND	53
ENTER 0 IF SHIFT ONE BEGINS AT MIDNIGHT	53
ENTER 0 IF THE WEEK BEGINS AT MIDNIGHT	53
ENTER A NUMBER OF NON-ZERO FIELDS EQUAL TO THE NUMBER OF SHIFTS PER WEEK	53
ENTER FROM 1 TO 63 EXISTING UNIT IDS IN START-UP ORDER, SEPARATED BY COMMA OR SPACES	53
ENTER IN THE HOST BUILD MODE. MUST MATCH THE SYSTEM ID AS INSTALLED IN THE HARDWARE	53
ENTER THE DAY OF THE WEEK IN WHICH THE STARTING HOUR IS	53
ENTER THE FIRMWARE TYPE	54
ENTER THE FIRMWARE VERSION	54
ENTER THE MEMORY ALLOCATION (KB) PER UNIT OF RESOURCE CONTROL	54
ENTER THE MINIMUM ACCEPTABLE REVISION NUMBER OF THE PERSONALITY	54
ENTER THE MINIMUM ACCEPTABLE BOARD REVISION NUMBER	54
ENTER THE MINIMUM ACCEPTABLE FIRMWARE REVISION NUMBER	54
ENTER THE REQUIRED MEMORY SIZE FOR THE PERSONALITY IN KILOBYTES	54
ENTER THE REQUIRED VERSION OF THE PERSONALITY	54
ENTITY DATA CORRUPT - DELETE AND REWRITE @	54
ENTITY DATA IN IDF CORRUPTED @	54
ENTITY DOESNT EXIST @	54
ENTITY ID	54
ENTITY ID ERR	55
ENTITY ID ERROR	55
ENTITY ITEM EXPECTED	55
ENTITY NAME	55
ENTITY NOT FOUND	55
ENTITY TYPE	55
ENTITY TYPE DIFFERS FROM ORIGINAL TYPE FOR ENTITY @	55
ENUMERATION TYPE EXPECTED	55
EQ_LIST TIME OUT	55
EQ OBJ FILE CORRUPTED	55
EQ OBJ FILE NOT FOUND	56
EQ OBJ NOT USED IN ABST	56
EQ OBJ TIME STMP MISMATCH	56
EQUAL SIGN EXPECTED	56
ERR:@, @	56
ERROR - PLEASE TRY AGAIN	56
ERROR - UNDEFINED ACTOR REFERENCED	56
ERROR IN DISPLAY INVOCATION	56
ERROR IN HANDLING REQUEST	56
ERROR IN PARSE OF EXPRESSION	56
ERROR OCCURRED WHILE DRAWING DISPLAY	56
***** ERROR RECORDING ABORTED *****	57
ERROR WITH BOTH CTL TRKS - SECTOR xxxxxxxx	57
ERRORS	57
ERRORS - SEE @.EF FILE	57

EU SPAN TO SMALL	57
EXCEEDED MAXIMUM EQUIPMENT LISTS LOADED INTO THE PICTURE EDITOR	57
EXCEEDED MAXIMUM NUMBER OF ENTITIES ALLOWED IN IDF	57
EXT BUILD INV	57
EXT MODE SW ENBL	57
EXTERNAL LOAD MODULE NOT FOUND: <xxxxxxxxxx>	57
EXTERNAL LOAD MODULES ADDED STACK OUT OF RANGE:<xxxxxxxxxx>	57
FAIL : @@ nn	58
FAIL : HM nn	58
FAIL : HM nn	59
FAILED ENTITY CONV TO EXTERNAL -ENT.PARAM(N) EMT	59
FAILED INDEX CONV TO EXTERNAL -ENT.PARAM(N) FMT	59
FAILED PARAM CONV TO EXTERNAL -ENT.PARAM(N) FMT	59
FAILED PARAM CONV TO EXTERNAL -PARAM(N) FORMAT	60
FAILURE	60
FILE DOESNT EXIST @	60
FILE NOT FOUND	60
*** FILE TOO LARGE TO DISPLAY-PRINT IT ***	60
FILE STORAGE EXCEEDED FOR VIRTUAL VOL: ----	60
FIRMWARE REVISION MISMATCH	60
FLOPPY NUMBERS MAY RANGE FROM 1 TO 20 AND MAY NOT BE DUPLICATED IN A CONSOLE	60
FLOPPY REMOVED DURING FILE UPDATE @	60
FUNCT LVL ERR	60
FUNCT SET QUALIF	61
FUNCTION IS ONLINE	61
FUNCTION LEVEL	61
FUNCTION NOT IMPLEMENTED	61
FUNCTION REQUEST NOT IMPLEMENTED	61
FUNCTION SET	61
FUNCTIONALLY DISABLED	61
GDF DATA TYPE DOES NOT MATCH LOADED/STORED DATA TYPE	61
HARDWARE REVISION MISMATCH	61
HEAP DRAM THRESHOLD EXCEEDED BY----- WORDS	61
HI LIM: @ @ LO LIM: @ @	61
HISTORY WILL BE LOST	62
HIWAY ACCESS FAL	62
HIWAY FAILURE	62
HIWAY NUMBER MAY RANGE FROM 1 TO 20 AND MUST BE UNIQUE ON THE NETWORK	62
HM CHECKER FOUND ERRORS. SEE NCF.ER FILE	62
HM CHECKER RUNNING	62
HM CHECKPT. DISK ERR, AUTO Cpn INTERVAL SET TO 4 HOURS	62
HM DISK ERROR ON STARTUP	62
HM DISK DRIVE INVALID DEVICE TYPE	62
HM INITIALIZATION ALREADY RUNNING	63
HM INITIALIZATION CAN'T RUN DUE TO HM COMM ERROR	63
HM INITIALIZATION CAN'T RUN DUE TO HM PRODUCE ERROR	63
HM INITIALIZATION CAN'T RUN DUE TO HM REVIEW ERROR	63
HM INITIALIZATION CAN'T RUN DUE TO HM REVIEW TIMEOUT	63
HM INITIALIZATION COMPLETE	63
HM INITIALIZATION NOT COMPLETE DUE TO FILE MANAGER ERROR-RELOAD HM-INIT	63
HM INITIALIZATION NOT COMPLETE DUE TO ABORT REQUEST	64
HM INITIALIZATION NOT COMPLETE DUE TO INIT FAILURE	64
HM INITIALIZATION NOT COMPLETE DUE TO INTERNAL ERROR - RELOAD HM INIT	64
HM INITIALIZATION NOT COMPLETED WITHIN 1 MINUTE (REVIEW)	64
HM INITIALIZATION NOT COMPLETED WITHIN 100 MINUTE TIMEOUT PERIOD	65
HM INITIALIZATION NOT INITIATED DUE TO INACCESSIBLE NCF	65
HM INITIALIZATION NOT INITIATED DUE TO INVALID NCF	66
HM INITIALIZATION NOT INITIATED DUE TO NETWORK COMM ERROR	66
HM INITIALIZATION NOT INITIATED, HM VALIDATION FAILED - CHECK FOR HM MISMATCH	67
HM INITIALIZATION NOT INITIATED, HM VALIDATION FAILED - OTHER THAN HM MISMATCH	67
HM INITIALIZATION PARTIALLY COMPLETE, HALTED DUE TO ERROR FOUND IN NCF	68
HM INITIALIZATION RUNNING	68

HM LOCAL NETWORK CONFIGURATION FILE (NVCF) IS NOT ACCESSIBLE	68
IDB BUSY	68
IDB ID	69
IDB NOT BUILT	69
IDB VALBUF CONS	69
IDF @ REPACKED - FILE HAS @ WORDS AFTER REPACK	69
IDF @ USAGE - FILE HAS @ WORDS TOTAL	69
IDF FULL @ - REPACK OR START A NEW IDF	69
IDF MAY HAVE BEEN CORRUPTED @	69
IEEE CONVERT ERROR	69
ILL COUNTR STATE	69
ILL TIMER STATE	69
ILLEGAL ADD OPERATION	69
ILLEGAL BAR DESCRIPTION	70
ILLEGAL BEHAVIOR	70
ILLEGAL CHAR IN TEXT @	70
ILLEGAL CHARACTER IN TIME OR DATE	70
ILLEGAL CHECKPOINT PHYSICAL NODE TYPE: ----	70
ILLEGAL COORDS ON COMMAND LINE	70
ILLEGAL COPY OPERATION	70
ILLEGAL DEFINE OPERATION	70
ILLEGAL DELETE OPERATION	70
ILLEGAL ENTRY	70
ILLEGAL FILE NAME	70
ILLEGAL FORMAT FOR EXPRESSION	70
ILLEGAL MODIFY OPERATION	70
ILLEGAL MOVE OPERATION	71
ILLEGAL OPTION	71
ILLEGAL PAGE NUMBER	71
ILLEGAL PALETTE NUMBER	71
ILLEGAL PATHNAME	71
ILLEGAL PRINT OPTION	71
ILLEGAL PROMPT QUESTION	71
ILLEGAL RECORD IN ABSTRACT	71
ILLEGAL REPLACE OPERATION	71
ILLEGAL SCALE FACTOR ENTERED	71
ILLEGAL SCALE OPERATION	71
ILLEGAL SELECT OPERATION	71
ILLEGAL SET OPERATION	71
ILLEGAL SUBPICTURE NAME	71
ILLEGAL TARGET ACTION	72
ILLEGAL TARGET SHAPE	72
ILLEGAL TYPE	72
ILLEGAL TYPE FOR INDEX	72
ILLEGAL USE OF WILD CARD	72
ILLEGAL VALUE	72
ILLEGAL VARIABLE	72
ILLEGAL VERB	72
ILLEGAL VIRTUAL VOLUME IDENTIFICATION: ----	72
ILLOGICAL CONDITION @	72
INCOMPATIBLE OPERAND TYPES	72
INCOMPLETE INFORMATION - CANNOT LOAD DATA FOR @	73
INCORRECT ACTOR USAGE	73
INCORRECT USE OF VERTICES	73
INDETERMINATE KERNEL ERROR OCCURRED	73
INDETERMINATE SOFTWARE ERROR OCCURRED	73
INHIBIT STATUS	73
INIT & TRK EXCL	73
INIT ERR	73
INIT ERROR	73
INITIALIZATION	73
INITIALIZED	73

INP & OUT REQUIR	73
INSUFFICIENT INFORMATION—CANNOT LOAD DATA FOR (entity)	74
INSUFFICIENT INFORMATION TO WRITE THIS DATA	74
INSUFFICIENT MEM	74
INTEGER NUMBER RANGE IS-32768 TO 32767œ	74
INTEGER TYPE EXPECTED	74
INTERNAL DISPLAY INVOCATION ERROR	74
INV BOX STATUS	74
INV CHARZTN TYPE	74
INV CTL ALGO	74
INV CTL ALGO ID	75
INV DB INDEX	75
INV DEST POINTID	75
INV MODE ATTR	75
INV NO CTL INPTS	75
INV NO CTL OUTPUT	75
INV NO PV INPUTS	75
INV PV ALGO	75
INV PV ALGO ID	76
INV RBOPT	76
INV STRUCT PAR	76
INV TARGET STATE	76
INVALID	76
INVALID ALGO EQU	76
INVALID CONTROL ITEM	76
INVALID CTL ALGO	76
INVALID DATA TYPE	76
INVALID DEST PAR	77
INVALID DEVICE VARIABLE	77
INVALID ENTITY NAME	77
INVALID ENTRY	77
INVALID IDENTIFIER	77
INVALID KEY : CANNOT DELETE PAGE ONE DATA (PICTURE EDITOR BUILD-TIME MESSAGE). PRESS <ENTER> TO CONTINUE	77
INVALID MODE	77
INVALID MODE	77
INVALID PV ALGO	77
INVALID ENTITY INDEX FOR @	77
INVALID ENTRY	77
INVALID PATHNAME @	78
INVALID PATHNAME SUFFIX @	78
INVALID POINT REALM (R610)	78
INVALID POINT TYPE (R610)	78
INVALID TIME OR DATE	78
INVESTIGATE CORRUPTED WINCH DISC DR	78
INVESTIGATE DEGRADED WINCH DISC DR	78
IOL PF TBL FULL	78
IPT&OUT BOX MISM	79
IS NOT PRESENT/POWERED OFF	79
IS OK	79
IS OFFLINE	79
ITEM ERRORS	79
ITEM NO.	79
ITEM NOT PROCES	79
JFP CONVERT ERR	79
JOB ID	79
JOB QUE DISABLED	79
LMT OR RANGE ERR	80
LMT OR RNG XOVR	80
LOAD DIRECTIVE FILE DUPLICATE KEYWORD FOUND:<xxxxxxxxxxx>	80
LOAD DIRECTIVE FILE INCORRECT SIZE ON: <nnnnnnnnnn>	80
LOAD DIRECTIVE FILE NUMBER OUT OF RANGE: <nnnnnnnnnn>	80

LOAD DIRECTIVE FILE NOT FOUND	80
LOADING DISPLAYS INTO MEMORY	80
LOADING OVERLAY	80
LOCAL NAME CODE	81
LOCAL ROUTE CODE	81
LOCATION DIFFERS FROM ORIGINAL LOCATION FOR ENTITY @	81
LOGICAL NODE ID	81
LOSS OF VIEW. No communications to Native Window	81
LOWER CASE LETTERS WILL BE CONVERTED TO UPPER CASE	81
LOWER RANGE VIOLATION	81
LPN_NVCF.MM FILE ACCESS ERROR	81
LPN_NVCF.MM FILE INCORRECT FORMAT ERROR	81
LPN_NVCF.MM TO NCF.CF FILE COMPARISON ERROR	82
LRC ERR-PNT BLD	82
MAKE ACTIVE	82
MAX IDB EXCEEDED	82
MAX SUB PARAMETERS EXCEEDED	82
MAXIMUM NUMBER OF VARIANT LIMBS (90) EXCEEDED	82
MEDIA IS NOT MOUNTED OR INITIALIZED	82
MEMORY UNAVAILABLE	82
MISSING CLOSING COMMENT PARENTHESIS	82
MISSING ENTITY INDEX	83
MISSING SELECTION LIST FILE	83
MISSING STRING DELIMITER	83
MOD/BOX [xx] HWY/UCN [yy] COMBINATION INVALID (R610)	83
MODE ATTR ERR	83
MODE ERR	83
MODE KEYLOCK ERR	83
MODE NOT ALLOWED	83
MODE NOT LEGAL	83
MOUNT VOLUME FAILURE @	84
MUST ACCESS ASCS	84
MUST CONF INIT	84
MUST CONF TRACK	84
MUST DESELECT OBJECT(S) BEFORE ADDING NEW ONES	84
MUST SCHED PNT	84
NAMED ENTITY @ DOESNT EXIST IN FILE @	84
NAMED ITEM DOESN'T EXIST @	84
NCF FILE I/O ERROR	84
NCF.CF FILE NOT ACCESSIBLE	85
NCF FILE PRINTING	85
NCF FILE REVISION ERROR	85
NCF NOT FOUND ON NET>&ASY	85
NCF OR LOAD DIRECTIVE FILE SYNTAX ERRORS PREVENT STARTUP	85
NCF WORKING FILE CORRUPTED, DELETE IT	85
NETWORK CONFIGURATION FILE CORRUPTED	85
NETWORK CONFIGURATION FILE (NCF) FORMAT IS INCORRECT	85
NETWORK CONFIGURATION FILE (NCF) NOT ACCESSIBLE	86
NEW SUBPICTURE NAME TOO LONG - OVERFLOWS VARIANT TEXT PORT	86
NIL PTR	86
NO BACKWARD DISPLAY	86
NO BASE SEG	87
NO BUILD ENTITY TO PRINT	87
NO CASE SEL MTCH	87
NO COMMAND TO EXECUTE - SET UP COMMAND AND ENTER TO EXECUTE FIRST TIME	87
NO COMMAND TO RECALL	87
NO DISPLAY TO RECALL	87
NO DISPLAY TO SPLIT	87
NO ENTITIES FOUND IN IDF @	87
NO ENTITIES FOUND IN NODE @	87
NO EQUIPMENT LISTS ARE CURRENTLY LOADED	87
NO FORWARD DISPLAY	87

NO LOWER REGION TO PAGE	87
NO MATCH FOR SELECTION LIST ITEM	87
NO OFF NODE REF	88
NO OF CTLOP ZERO	88
NO PARAM. ENTRY DISPLAY STATUS TO RECALL	88
NO PARAM. ENTRY DISPLAY TO RECALL	88
NO PNT KNOWN-DO	88
NO PRIMARY	88
NO SOPL/TRD RV20	88
NO VALUE	88
NO WALKBACK OPTION FROM THIS DISPLAY	88
NO. OF ELEMENTS	88
NO. OF ITEMS	89
NO. OF STORES	89
NODE NUMBER ERROR OR INVALID CONSOLE ERROR	89
NODE NUMBER RANGE IS 0 TO 64. A VALID NODE TYPE FOR CHECKPOINT IS REQUIRED.	89
NODE/UNIT UNAVAILABLE	89
NON RECOV DATA ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	89
NON RECOV DEVICE ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	89
NON RECOV ERR, 1 CTL TRK - SECTOR XXXXXXXX	89
NON RECOV FAB ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	89
NON RECOV SAT ERROR - SECTOR xxxxxxxx - vol>filename.ex	89
NON RECOV PDB ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	90
NON RECOV VVID ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	90
NON RECOV VVAT ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX	90
NON VISIBLE PARAMETER ERROR	90
NOT A REAL NUMBER	90
NOT A VALID DATA REALM	90
NOT A VALID ENTITY ID @	90
NOT A VALID INDEX	90
NOT A VALID NAME	90
NOT A VALID NAME COMBINATION FOR NAME.PARAMETER(INDEX) FORM	90
NOT A VALID PARAMETER ID	91
NOT A VALID STATE	91
NOT A VALID UNIT	91
NOT ALL NODES AN	91
NOT AN INTEGER NUMBER	91
NOT AVAILABLE ON NODE STARTUP	91
NOT BASE ENT ID	91
NOT COMPOS ENTID	91
NOT CUST DESC	91
NOT ENOUGH MEMORY	91
NOT ENOUGH PHYSICAL MEMORY	91
NOT FREE VARIABLE	92
NOT IN CS	92
NOT LOCAL TYPE	92
NOT MAN OR INACT	92
NOT VERIFIABLE	92
NOTHING TO CANCEL	92
NOTHING TO CENTER	92
NOTHING TO ENTER	92
NOTHING TO INSTALL	92
NOTHING TO LOAD	92
NOTHING TO PAGE	92
NOTHING TO WRITE	93
NULL CTL ALGO ID	93
NULL PV ALGO ID	93
NUMBER INVALID	93
NUMBER OF VVs PER DISK EXCEEDED:	93
NUMBER OF DISK XFERS/SEC = --IS TOO HIGH	93
NUMBER OF FILES EXCEEDED FOR VIRT. VOL: ----	93
NUMBER OF VIRTUAL VOLUMES EXCEEDED AT: ----	93

OBJECT(S) ARE NOT SCALABLE	93
OBJECT(S) INVALID FOR FFLS	93
OBJECT(S) OFF DRAWING SURFACE	93
OCCURRENCES EXCEEDED LIMIT FOR HOUR (PFPSHLDT)	94
OFF NODE ACES ER	94
OFF-NODE REQUEST ITEMS OVERFLOWED-EXCESS FLAGGED AS COMM ERR	94
OFF-NODE REQUESTS APPROACHING MAXIMUM (MEMCVBLM)	94
OFF-NODE REQUESTS OVERFLOWED-EXCESS FLAGGED AS COMM ERRORS (FPP CVB)	94
OFF-NODE REQUESTS OVERFLOWED-EXCESS FLAGGED AS COMM ERRORS (IPP CVB)	94
OK	94
OK WITH ITEM ERR	94
OPR CHG NOT PERM	94
OPERATOR ABORTED LOAD	95
OUT OF FILE SPACE @	95
OUT OF MEMORY	95
OVERLAY FILE ACCESS OR LOADING ERROR, MOUNT TIMEOUT, OR ABORTED	95
OVERLAY/PERSONALITY LOGICAL ERROR - REQUESTED OVERLAY NOT SYSGENED	95
OVERLAY/PERSONALITY VERSION/REVISION MISMATCH-CHECK FLOPPY(S) USED	95
PAR ID ERR	95
PAR TYPE ERR	95
PARAM ID	95
PARAM IN INIT	95
PARAM NOT LOADED	96
PARAM QUALIFIER	96
PARAM UNAVAIL	96
PARAMETER @ DOESN'T EXIST ON POINT @	96
PARAMETER CONTENT CONVERSION TO EXTERNAL FAILED	96
PARAMETER ENTRY DATA NOT ENTERED	96
PARAMETER NOT FOUND	96
PARAMETER UNAVAILABLE FOR CHANGE	96
PED DOES NOT EXIST	96
PERSONALITY NOT FOUND	97
PHYSICAL NODE ALREADY EXISTS -- DELETE NODE FIRST	97
PHYSICAL NODE STATE INCONSISTENT -- CORRECT AND TRY AGAIN	97
PICTURE ABSTRACT OVERFLOW	97
PNT NOT AVAILABLE	97
PNT NOT ESTABLISH	97
PNT NOT SECONDRY	97
PNT STATUS ERR	97
PNT TYPE INVALID	97
POINT ACTIVE	98
POINT IN SERVICE	98
POINT PROCESSING OVERRUNS ABOVE LIMIT (IPOVRTHR)	98
POINT PROCESSING OVERRUNS APPROACHING ABORT LIMIT (AMOVRABT)	98
POINT PROCESSING OVERRUNS EXCEED LIMIT (AMOVRABT)	99
POSSIBLE NCF CORRUPTION	99
PREFETCH ITM ERR	99
PRINTER NOT CONFIGURED	99
PRINTER NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE	99
PRINTING STOPPED DUE TO BREAK	99
PRINTING STOPPED DUE TO ERROR RECOVERY	99
PRIOR EQ_LIST EXECUTING	99
PRIOR FUNCTION NOT COMPLETED	99
PROCESSING ENTITY: @(@)	99
PROCESS JOURNAL # OF EVENTS = 0 FOR UNIT --.	99
PVSOURCE INVALID	100
QUAL TYPE ERR	100
READ ONLY PAR	100
REAL NUMBER RANGE IS 10\9-1E99	100
REAL TYPE EXPECTED	100
RECORD NUMBER EXCEEDED 65535 LIMIT	100
RECOV DISK DATA ERROR	100

RED TAG	100
RED TAG ERR	100
RED TAG ON	101
REDUNDANCY BUFFER INCREASE <xx> BLOCKS OR MORE MUST BE IN NCF	101
REDUNDANT NODES MUST BE ENTERED ONE AFTER THE OTHER, OR ZERO IF NOT CONFIGURED.	101
REFERENCED DDB CANNOT BE FOUND	101
REPEAT LAST KEYSTROKE TO CONTINUE	101
REQUESTED ABSTRACT CORRUPTED	101
REQUEST ID	101
RETURN TO ASSIGN UNITS AND NUMBER OF GROUPS DISPLAY	101
REV NO MISMATCH	101
RUN HVTS FAILED SPC WINC CTLR	101
SEARCH INCOMPLETE	101
SEARCHING NETWORK CONFIGURATION FILE FOR A MATCHING NAME OR NUMBER ERROR	102
SEGMENT ID	102
SELECT HONEYWELL ENGINEERING DATA, ACTION ON DISK ERROR OR RESOURCE ALLOCATION	102
SELECT IF HM DUMP VOLUME IS TO BE CONFIGURED ON THIS HM	102
SELECT THE BASIS FOR THE PERIOD OF A MONTH	102
SELECT THE BAUD RATE OF THE DATALINK(S)	102
SELECT THE CONTACT(S) TO BE ACTIVATED FOR EACH OF THE INDICATED EVENTS	102
SELECT THE DEFAULT START-UP MODE OF THE MODULE	102
SELECT THE ERROR RECOVERY ACTION TO BE AUTOMATICALLY TAKEN UPON THE DETECTION OF AN ERROR ON THE INDICATED VOLUME	102
SELECT THE LEVEL OF ACCESS ALLOWED WITHOUT A KEY	102
SELECT THE LOWEST ACCESS LEVEL WHICH IS TO BE NECESSARY TO ACTIVATE EACH OF THE INDICATED OPERATIONS	102
SELECT THE LOWEST ALARM PRIORITY WHICH HAS THE RED COLOR ASSOCIATION	102
SELECT THE OFF-PROCESS PERSONALITIES FOR WHICH THE MODULE WILL CONTAIN THE PERSONALITY IMAGE	102
SELECT THE PERIOD OF THE CONTINUOUS HISTORY USER AVERAGE GROUPS	103
SELECT THE SYSTEM RAISE/LOWER RATE	103
SELECT THE TYPE OF DATA WHICH IS TO BE SAVED FOR THE INDICATED CONTINUOUS HISTORY GROUP	103
SELECT THE TYPE OF NODE TO BE CONFIGURED	103
SELECT THE UNIT FOR WHICH THE UNIT JOURNAL SIZES ARE TO BE CONFIGURED	103
SELECT YES IF THE SYSTEM HAS BATCH ID'S	103
SELECT YES IF THE SYSTEM VOLUME WILL INCLUDE ALL GDF FILES	103
SELECT YES IF THERE IS TO BE AN OPERATOR KEYBOARD ON THE STATION	103
SELECT YES IF THERE IS TO BE A TOUCH SCREEN ON THE STATION	103
SELECT YES IF THERE IS TO BE AN ENGINEER'S KEYBOARD ON THE STATION	103
SELECT YES IF THIS HISTORY GROUP IS TO BE ARCHIVED	103
SELECT YES ON THE MODULE WHICH WILL CONTAIN THE SYSTEM FILES	103
SELECT YES ON THE MODULE WHICH WILL CONTAIN THE SYSTEM JOURNALS	103
SELECTION LIST EMPTY	103
SELF DEFINING ENUMERATION STATES MAY NOT BE CHANGED - @ NOT RELOADED	104
SEQUENCE NAME NOT IN CHECKPOINTED LIBRARY	104
SEQUENCE MUST BE RECOMPILED WITH LATEST COMPILER	104
SERIAL NO ERR	104
SET CASCADE ENBL	104
SLOT INVALID	104
SOURCE LINE @	104
SP LOCK ERROR	104
START DATE IS AFTER STOP	104
START TIME IS AFTER STOP	104
STARTUP ERROR - HISTORY FILE NOT FOUND	105
STATE CHNG INVLD	105
STATION NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE	105
STD DISPLAY <DDDDDDDD> NOT FOUND AT STRTUP, CANNOT BE INVOKED	105
STORE INV-CASREQ	105
STORE INVALID	105

STORE NOT PERMIT	105
STRING LENGTH TOO LONG	105
STRING TRUNCATED	105
STRING TYPE EXPECTED	106
STRUCT PAR GETER	106
SUBPICTURE DATA TYPE MISMATCH	106
SUBPICTURE NOT FOUND	106
SUBPICTURE TEXT SIZE INCOMPATIBLE WITH CURRENT TEXT MODE	106
SUBSCRIPT ERR	106
SUBSCRIPT RANGE	106
SYMBOL TABLE SIZE EXCEEDED	106
SYNCHRONIZE DESTIN. ERROR - SECTOR XXXXXXXX	106
SYNCHRONIZE SOURCE ERROR - SECTOR XXXXXXXX	106
SYNTAX ERROR	106
SYNTAX ERROR DETECTED	107
SYSTEM DRAM THRESHOLD EXCEEDED BY ----- WDS	107
SYSTEM ERR	107
SYSTEM JOURNAL/ARJ # OF EVENTS NOT ENTERED	107
SYSTEM UNIT JOURNAL MUST BE ASSIGNED TO THIS NODE PAIR TO ASSIGN JOURNALS	107
SYSTEM VOLUME &ASY VOLUME FULL OR VOLUME NOT FOUND	107
TARGET NOT IN IDLE	107
TEMPLATE IDF NAME MISSING	107
TEMPLATE ITEM EXPECTED	107
THE ARCHIVE REPLAY VOLUME IS DEFINED BY THE NUMBER OF FILES VOLUME FILE SIZE	107
THE AREA NAME MUST HAVE PREVIOUSLY BEEN ENTERED INTO THE FILE	108
THE CHECKPOINT VOLUME IS CONFIGURED BY SELECTING THE PHYSICAL NODES THAT APPLY AND THEIR NUMBER OF PROCESS POINTS AND UNITS	108
THE CONSOLE NUMBER MAY RANGE FROM 1 TO 10	108
THE CONTINUOUS HISTORY VOLUME IS CONFIGURED BY SELECTING UP TO 60 UNITS AND THEIR NUMBER OF GROUPS UP TO A MAXIMUM LIMIT OF 150 GROUPS	108
THE FILE SIZE MAY BE 0 TO 2000 KILOBYTES	108
THE HIWAY NUMBER MAY RANGE FROM 0 TO 20. IF NOT ZERO, IT MUST BE ASSIGNED	108
THE HOST BUILD MODE HAS BEEN SET	108
THE KEY LOCK MUST BE IN THE ENGINEERS POSITION TO USE THIS FUNCTION	108
THE MAXIMUM WIDTH OF A PRINTED LOG IN CHARACTERS. MUST RANGE FROM 80 TO 132	108
THE NODE PAIR MAY RANGE FROM 1 TO 20. SELECT VOLUME CONFIGURATION TARGET ON THE MAIN MENU TO REVIEW OR CONFIGURE THE NODE PAIR	108
THE NUMBER OF DATA LINKS MAY BE 1 OR 2	108
THE NUMBER OF DISKS MAY BE 1 OR 2	108
THE NUMBER OF EVENTS IN THIS JOURNAL MUST RANGE FROM 100 TO 9999	108
THE NUMBER OF FILES MAY BE 1 TO 20	109
THE NUMBER OF FILES MAY BE 0 TO 999	109
THE NUMBER OF FILES MAY BE 1 TO 999	109
THE NUMBER OF FILES MAY BE 0 TO 9999	109
THE NUMBER OF FILES MAY BE 0 TO 2000	109
THE NUMBER OF GROUPS MAY RANGE FROM 1 TO 150. THE TOTAL OF ALL ENTRIES MUST NOT EXCEED 150	109
THE NUMBER OF POINTS MUST BE ZERO FOR THE HG/NIM, AND UP TO 2000 FOR CM 60 AND AM109	109
THE NUMBER OF PRE-ARCHIVE HOURS MAY RANGE FROM 0 TO 999	109
THE NUMBER OF PRINTED LINES PER PAGE. THE DEFAULT IS 66	109
THE NUMBER OF SHIFTS PER WEEK CAN RANGE FROM 1 TO 42. THE DEFAULT FOR 8 HOUR SHIFTS IS 21	109
THE NUMBER OF UNITS MUST BE 0 FOR THE HG/NIM, AND 63 MAX FOR CM 60 AND AM	109
THE PROCESS JOURNAL VOLUME IS CONFIGURED BY SELECTING UP TO 36 UNITS AND THEIR NUMBER OF EVENTS FOR PROCESS ALARMS, PROCESS CHANGES, AND OPERATOR MESSAGES	109
THE PROGRAM IMAGE VOLUME IS CONFIGURED BY SELECTING THE NODE TYPES THAT APPLY	109
THE REDUNDANT NODE MUST NOT BE CONFIGURED BEFORE CONFIGURATION	110
THE REQUESTED ON LINE NCF FILE INSTALLATION WAS COMPLETED	110
THE SIZE OF THE BURST BUFFER MAY BE 200 TO 9999 EVENTS	110
THE SYSTEM MUST HAVE TWO CLOCK PADDLE BOARDS, AND THEY MUST BE AMONG THE FIRST FOUR NODES CONFIGURED	110

THE TOTAL NUMBER OF URC UNITS (TRANSFER BUFFERS) MUST NOT EXCEED 16	110
THE TYPE 1 DISK SIZE IS 27600 KB. THE TYPE 2 DISK IS 66247 KB; TYPE 3 DISK IS 136944	110
THE UNIT ID MUST EXIST IN THE CONFIGURATION FILE, AND MUST NOT BE DUPLICATED ON THIS FORM	110
THE UNIT ID MUST EXIST IN THE CONFIGURATION FILE, AND MUST NOT BE DUPLICATED ON THIS FORM. UNIT ID SY SHOULD NOT BE USED	110
THE UNIT, NUMBER OF FILES, AND FILE SIZE FOR BATCH HISTORY DATA POINT	110
THE VIRTUAL VOLUME ID MUST HAVE ONE ALPHA CHARACTER UNDERBAR MAY APPEAR IN POSITION 2 OR 3	110
THE VOLUME NAME HAS AT LEAST ONE ALPHABETIC CHARACTER AND NO SPECIAL CHARACTERS	110
THE VOLUME SIZE MAY BE 0 TO 27000 KILOBYTES	110
THE VOLUME SIZE MAY BE 0 TO 40000 KILOBYTES	110
THE VOLUME SIZE MAY BE 1 TO 27000 KILOBYTES IF CONFIGURED	111
THE WORKING FILE IS BEING CREATED (OR REPACKED)	111
THESE PICKS ARE USED TO SELECT ONE OF THE HISTORY MODULE NODE PAIRS	111
THESE PICKS ARE USED TO SELECT ONE OF THE NODES	111
THIS ASSIGNMENT HAS BEEN GIVEN TO ANOTHER NODE PAIR	111
THIS NAME OR NUMBER IS ALREADY ASSIGNED IN ANOTHER NODE	111
THIS NODE (AND ITS REDUNDANT PARTNER) WERE DELETED	111
THIS NODE IS CONFIGURED FOR CHECKPOINTING AS ANOTHER TYPE	111
TIME EXPECTED	111
TIMER IS RUNNING	111
TO CHANGE AN EXISTING NODE: IT MUST BE DELETED AND THEN BE REBUILT	111
TO DELETE THE SELECTED NODE, SELECT THE DELETE PICK AND PUSH ENTER	111
***** TOO MANY ERRORS *****	111
TOO MANY CONSTANTS IN EXPRESS	112
TOO MANY PRIMRYS	112
TREND PEN UNIT NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE	112
UNABLE TO DEFINE LOGICAL DEVICE	112
UNABLE TO LMT CK	112
UNABLE TO MOUNT NCF VOLUME	112
UNABLE TO OPEN NCF FILE	112
UNABLE TO READ AREA DATABASE	112
UNABLE TO READ CONSOLE DATA	112
UNABLE TO READ ENTITY @	113
UNABLE TO READ UNIT DIRECTORY FILE	113
UNABLE TO RESET ANNUNCIATOR OR BACKLIGHTS	113
UNASSIGNED DEVICE VARIABLE	113
UNIT	113
UNIT DIFFERS FROM ORIGINAL UNIT FOR ENTITY @	113
UNIT ID SY IS PREASSIGNED	113
UNIT INSTANCE NOT EXIST	113
UNIT NOT CONFIGURED	113
UNIVERSAL STATION SHUT DOWN IN PROGRESS	113
UNKNOWN COMM ERR	114
UNKNOWN ENTITY TYPE	114
UPDATING DDB INFORMATION	114
UPPER RANGE VIOLATION	114
USER IDB ID	114
USER MEMORY ALLOCATION EXCEEDED ON STARTUP	114
USER MEMORY RESERVED <XX> BLOCKS OR MORE MUST BE IN NCF	114
VALIDATION ERROR - LPN_NVCF.MM FILE NOT ACCESSIBLE	114
VALIDATION INTERNAL ERROR	114
VALUE CLAMPED	114
VALUE ERR	115
VALUE MUST BE GREATER THAN @	115
VALUE MUST BE LESS THAN @	115
VALUE OF @	115
VALUE RANGE ERR	115
VALUE UNAVAILABLE BASED ON PREVIOUS SELECTIONS - PARAM RETURNED TO DEFAULT	115

VARIABLE ID TYPE EXPECTED	115
VARIABLE TOO LONG	115
VERIFICATION IN PROGRESS	115
VERIFY SECTOR REASS SPC WINC DR 5	115
VERSION IS INVALID: TRANSLATE OR COMPILE	115
VIRTUAL VOLUME SIZE EXCEEDS DISK SIZE FOR XX	115
VISIBLE VARIABLE TOO LONG FOR FORMAL PARAMETER LIST	116
VOLUME NAME, NUMBER OF FILES, AND SIZE FOR USER VOLUMES	116
***** WAIT *****	116
WARNING - MODULES INACTIVE LOAD MAY HAVE CREATED DUPLICATE NAME @	116
WARNING - USING UNINSTALLED WORKFILE	116
WARNING! NO FLOPPY DEVICES ARE DEFINED IN THIS STATION	116
WARNING! PED MODIFIED. REPEAT KEYSTROKE TO IGNORE WARNING	116
WARNING: A CONTROL MODULE THAT IS SHUTDOWN WILL REQUIRE RELOADING	116
WARNING: EXCEEDED 60 SECOND CYCLE	116
WARNING: FOLLOWING HOST BUILD INSTALL, ALL NODES ON THE NETWORK MUST BE RESET AND RELOADED WITH THE NEW NCF. PUSH F2 A SECOND TIME TO CONTINUE	117
WARNING: SELECTED CONTROL MODULE AND ALL OF ITS IOPs WILL BE TAKEN OFF CONTROL	117
WARNING: THE CONTROL MODULE AND ALL OF ITS IOPs WILL BE TAKEN OFF CONTROL	117
WARNING: THE CONTROL MODULE WILL BE TAKEN OFF CONTROL	117
WARNING: THE PHYSICAL NODE DELETED DOES NOT EXIST ON THE NETWORK	118
WARNING: THE SELECTED IOP WILL BE TAKEN OFF CONTROL	118
WARNING—USING UNINSTALLED WORKFILE	118
WF & CF FILES DONT MATCH	118
WF FILE OPEN FAILED	118
WF FILE WRITE FAILED	118
WORKING FILE CORRUPTED	118
WORKING FILE IS IN USE	118
WRITING OBJECT FILE	119
WRITING SOURCE FILE	119
Y CANNOT BE LSP	119
Y MUST OWN LSP	119
Other messages	120
 4. Unalarmed Abnormal Conditions	 121
4.1 Introduction	121
Description	121
4.2 Conditions	121
HM WILL NOT AUTOBOOT TO A STATUS OF "OK"	121
HM WILL NOT LOAD	121
HM GOES OFF LINE (INIT STATUS) WITH WINCHESTER ERROR HANDLER MESSAGES	122
 5. File Manager Status Return Values	 123
5.1 Overview	123
Code locations	123
Usage	123
5.2 Value Definitions	124
Listing	124

6.	Data Access Status Values	129
6.1	Overview	129
	Description	129
6.2	Value Definitions	129
	Listing	129
7.	System Error Journal Messages	141
7.1	Overview	141
	Message format	141
7.2	AM Error Messages	143
	Error Message Format	143
	Interpretation and Remedies	143
7.3	HG Error Messages	146
	Summary of HG Error Messages	146
7.4	Other HG Errors	165
	Overview	165
	DH_STORE errors	165
	EV_NORM error	165
	DH_RETRV errors	166
	DHI Driver error	166
	CP_CHKPT error	167
7.5	HM Error Messages	168
	Summary of HM Error Messages	168
7.6	NIM Error Messages	182
	Summary of NIM Error Messages	182
7.7	US Error Messages	203
	Summary of US Error Messages	203
8.	Module LED Error Displays	231
8.1	Introduction	231
	Overview	231
8.2	LED Error Codes	231
	Error code listing	231

Tables

Table 1 Operator Response to System Alarms	25
Table 2 Maintenance Recommendation Message components.....	28
Table 3 Error-Type Code Explanation	29
Table 4 HM Loading Error Conditions.....	121
Table 5 File Manager Status Values.....	124
Table 6 AM Errors and Remedies.....	143
Table 7 HG Error Message Summary.....	146
Table 8 HM Error Message Summary	168
Table 9 NIM Error Message Summary	182
Table 10 US Error Message Summary	203
Table 11 LED Error Codes.....	231

Figures

Figure 1 Maintenance Recommendation Message format	28
Figure 2 System Error Journal Message Format.....	141

1. Introduction

1.1 Overview

Purpose

This document is a resource to help you determine the meaning of messages that appear on system displays.

Intended audience

This document is intended to be used by system engineers and maintenance personnel.

Sections removed from this document

Redundant sections have been removed from the current document. The sections removed and the location of the information are as follows:

- Computing Modules Users should refer to the CM50S User Manual (CM11-530) Appendix A, Status and Error Codes.
- Detail Node Status Displays (previously Section 7)—Information about Status Detail Display that formerly appeared in this section can be found in the *Process Operations Manual*, Section 13.
- Execution Time (Runtime) Errors (previously Section 9)—The information about runtime errors can be found in the *Application Module Control Functions*.
- LCN Node Failure Data Gathering Procedure (previously Section A)—For more information about LCN Node Failure Data Gathering, see the (paper) *System Maintenance Guide*, subsection 3.3.2.

1.2 Finding Information Quickly

Technical assistance

If a message displays on your system that you feel may have significant ramifications and is not listed in this document, call the Honeywell Technical Assistance Center at (800) 822-7673 if your site is in the United States. If you are located outside the United States, contact your assistance hotline.

Available resources

You can also use the TPS electronic documentation (CD-ROM-based) to help you understand why a message is being displayed. Honeywell's TPS electronic documentation is CD-ROM-based and presents LCN/UCN documentation in an on-line format for the personal computer. Use the full-text search feature for finding information quickly.

1.3 Responding to Alarm Conditions

Description

As the TPS System operator or engineer, you must not only be able to interpret displayed messages, but also know how to respond to the system once a message appears, especially if there is an associated alarm.

The procedures discussed here are basic steps that operators or engineers take when responding to alarm conditions. For more detailed information regarding operator procedures, turn to the *Process Operations Manual* or the *Engineer's Reference Manual* for information about engineering procedures.

Where to begin

The starting point for error recovery begins either with the System Status or Console Status displays. The System Status display shows the following information: LCN cable status, NCF version presently being used, LCN device status, and process network status. The Console Status display shows the console device status. From these displays, you may proceed to other module-specific displays that report the status of UCN, Hiway, and LCN devices.

Alarm annunciation

Alarm conditions for the Operator Console, LCN and UCN modules, Data Hiways, and process-connected devices are annunciated on the Universal Station. The annunciation process includes the closing of alarm contacts for the external annunciator, and the blinking of either the **<CONS STAT>** or **<SYST STAT>** key. The **<CONS STAT>** key blinks if an alarm condition is in a console device (Universal Station, printer, recorders or disk drives), while the **<SYST STAT>** key blinks if an alarm condition is in a non-console device (History Module, Application Module, or Computer Module). Once the situation that caused the alarm is corrected, LEDs are no longer lit.

Console Status display alarms

The Console Status display shows failures to the Universal Station, if system peripherals require service, or if maintenance is needed for the Universal Station. If the MAINT column on the display shows “YES,” a maintenance recommendation message is available in SMCC 2— SMCC Maintenance Recommendation Messages, page 9.

Maintenance recommendation messages are described in 2— SMCC Maintenance Recommendation Messages, page 9. If this is the case, the operator must select the station, then the [MAINT INFO] target, and report the situation to the maintenance engineer.

LCN module alarms

Each module associated with the LCN is shown on the LCN Overview display, and in turn has its own status detail display. Failures on the Gateways, History Module, Application Module, and Computer Module are shown in detail with the associated LCN module status display.

The operator’s responsibility

These are the steps the operator needs to take when responding to a system alarm. Be prepared to give details to the maintenance engineer to help troubleshoot the situation.

Table 1 Operator Response to System Alarms

Step	Action
1	Silence the horn by pressing the SIL key.
2	Call up the System Status display by pressing the SYST STAT key.
3	After reviewing the messages on the System Status display to interpret where in the system the alarm condition is occurring, proceed to one of the following displays: • Console Overview • Console Status • Gateway Status • History Module Status • Application Module Status • Computing Module Status • Process Network Status (hiway or UCN)
4	Acknowledge the alarm by pressing the ACK key.
5	Report hardware failures to the maintenance engineer.
6	Restart the device if required.

The engineer's responsibility

In general, the engineer steps into alarm situations once they have been acknowledged and reported by the operator. Often, the engineer must resolve why an alarm situation has occurred. More specifically, the engineer is responsible for the following:

- Examining checkpoint data
- Restarting devices
- Loading databases for the LCN and UCN
- Maintaining Hiway Status, Box Status, and UCN displays

2. SMCC Maintenance Recommendation Messages

2.1 Definitions of SMCC and Error Messages

SMCC

All process-connected boxes located on the UCN and Data Hiway have self-test capability for diagnosing failures. On occasion, module failures can occur that bypass this built-in testing. The system provides maintenance software called the System Maintenance Control Center (SMCC) to diagnose module failures not diagnosed by self-testing. The SMCC monitors failures for the LCN and operations on the UCN, Data Hiway, and process-connected boxes.

Maintenance Recommendation Messages

Error messages describing module failures from the SMCC are called Maintenance Recommendation Messages. These messages can either be printed from the Real-Time Journal, System Maintenance Journal, Active Maintenance Journal, or viewed on Node/Gateway displays. The SMCC is accessed through the Universal Station or Universal Work Station and is an overlay to the Engineering Personality, or to the engineering portion of the Universal Personality.

2.2 Maintenance Recommendation Messages Format

Messages description

Maintenance Recommendation Messages use a variable format that can include up to 13 fields, depending on the nature of the message. Messages describe the time and date the recommendation was made, which module or Optimum Replaceable Unit (ORU) is affected, what action is recommended, the identity of the node originating the recommendation, and a code number of the failure type. Most messages indicate a specific ORU to be investigated or replaced, but some require further investigation in order to isolate the problem to a particular ORU.

Messages on output device

The content of the message varies according to the output device. Messages displayed on a Universal Station end at column 80; therefore, the source identifier and error-type code (as shown in the following example) are not shown. Printouts from either the System Maintenance Journal or Active Maintenance Recommendations Journal display include cause identifier and descriptive text, but not the error-type code.

Example messages on output device


Example messages on an output device look like this:

```
1137 08 Jul 90 147 US 35 SLOT 03 REPLACE FAILED FLP DISC CTRL      QLT 37
1142 08 Sep 90   1 US 35 TEST FAILED MODULE                        SEH 03
1900 05 Oct 90  27 HM 01 SLOT 05 REPLACE FAILED LCNI BOARD        OPT 07
2358 21 Dec 90  34 US 02 SLOT 01 REPLACE FAILED MCPU CONTROLLER   QLT 03
2359 30 Dec 90  35 AM 10 TEST FAILED MODULE                        SEH 01
1800 01 Jun 91  28 HG 11 SLOT 04 TEST FAILED HIWAY                HG 00
```

Message components

The following figure shows the basic parts of the Maintenance Recommendation Messages, and the tables following define the parts. The column numbers are the fixed-field starting locations. Starting locations of other fields depend on the length of preceding fields.

Figure 1 Maintenance Recommendation Message format

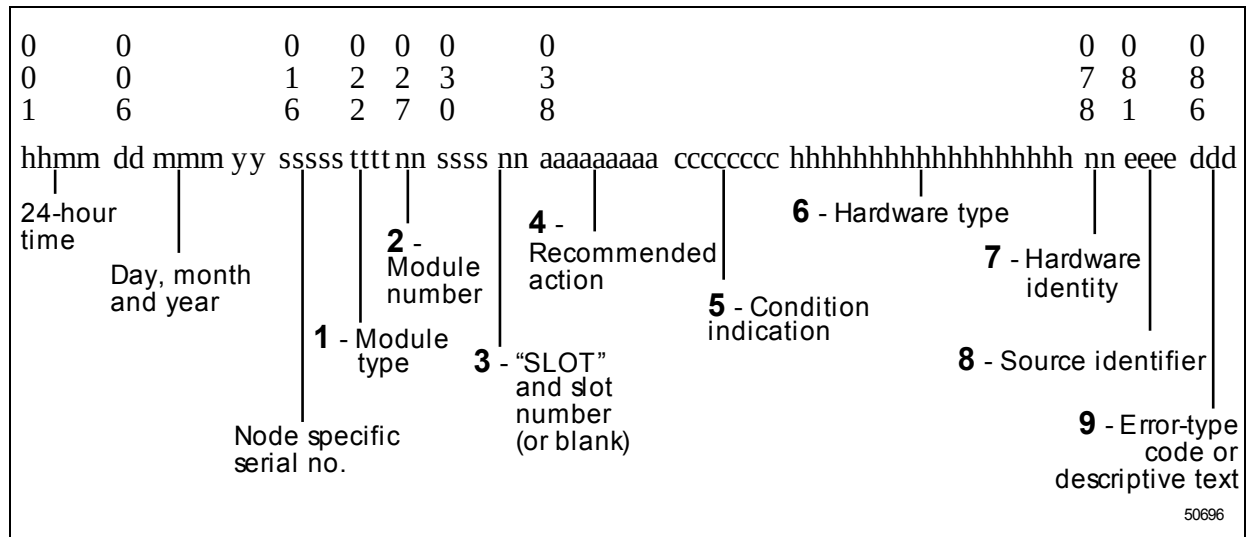

Message component descriptions

The following table describes the Maintenance Recommendation Message components shown in Figure 1.

Table 2 Maintenance Recommendation Message components

Description Number	Description Name	Description Categories
1	Module Type	US, HM, AM, HG, NIM, CIU
2	Module Number	1 through 64
3	Slot Number	1 through 10 (may be used to differentiate between several items that are connected to one controller.)
4	Recommended Action	TEST, REPLACE, VERIFY, INSTALL, RESET, ENABLE SWAP, INVESTIGATE, RESTART, FORMAT, CONFIGURE, RELOAD, ANALYZE, REMOVE, MANUAL_LD, RECOVER, RECONFIG_HM, RUN_HVTS
5	Condition Indication	MARGINAL, SUSPECT, MISSING, FAILED, CONNECTED_TAC, DISCONNECTED_TAC, CLEARED_MAINTENANCE_RECOMMENDATION, ERASED, PARTIAL, FULL, ANALYZED, SHUTDOWN, CORRUPTED, DEGRADED, UNKNOWN_DEVICE, HISTORY_OVERLOADED, BAD_SECTOR, SECTOR_REASSIGNED

Description Number	Description Name	Description Categories
6	Hardware Type	Describes the hardware module or subsystem
7	Hardware Identity	1 through 63 (may be of box, hiway, etc.)
8	Source Identifier	HM, HG, SEH, OPT, QLT, OPA
9	Error-Type Code	A code number identifying the specific failure as described in the following table.

Error-type codes

The following table explains the error-type codes that may appear in the Maintenance Recommendation Message (Item 9 in Figure 1).

Table 3 Error-Type Code Explanation

Source Identifier	Error Code	Description
System Error Handler SEH	000	Communication error, second party is known
	001	Communication error, second party is not known
	002	Intermediate error buffer overflow
	003	Node Administrator status broadcast timeout
	004	Resource error
	005	Controller error
	006	Unit error
	007	Illogical condition
On-Process Tests OPT	008	Distribute only
	000	LCNI CRC generator failure
	001	LCNI CRC checker failure
	002	LCNI synchronization error
	003	LCN communication error, second party unknown
	004	LCN communication error, second party known
	005	Memory hard single bit failure
	006	Memory EDAC failure
	007	Memory scrubber failure
	008	Memory single bit soft error
	009	Winchester EDAC failure
	010	Keyboard port error
	011	Color printer parallel port error
	012	CLI loopback, good data error
	013	CLI loopback, bad data failure
	014	Fan status bad
	015	Data parity error
	016	Bus grant ack time out
	017	Data transfer time out
	018	Module bus data comp error

SMCC Maintenance Recommendation Messages
Maintenance Recommendation Messages Format

Source Identifier	Error Code	Description
Hiway Gateway HG	000	HGSE hiway fail
	001	HGSE poll fail
	002	HGSE swap fail DHI
	003	HGSE swap fail HTD
	004	HGSE HSA fail A
	005	HGSE HSA fail B
	006	HGSE hiway dead
	007	HGSE request active too long
	008	HGSE hiway errors threshold exceeded
	009	HGSE box errors threshold exceeded
	010	Check box diagnostics display
Quality Logic Tests QLT	000	RS232 port failed self-test
	001	MCPU data parity error
	002	MCPU bus grant ack timeout
	003	MCPU data transfer timeout
	004	MCPU module bus data comp error
	005	MCPU power not good
	006	TPS hiway fail
	007	Undefined
	008	TPS swap fail DHI
	009	TPS swap fail HT
	010	TPS HSA fail Cable A
	011	TPS HSA fail Cable B
	012	TPS hiway dead
	013	TPS request active too long
	014	TPS hiway errors threshold exceeded
	015	TPS box errors threshold exceeded
	016	TPS check box diagnostics display
	017	SIO module bus parity error
	018	SIO operational status semaphore bit
	019	SIO controller in reset state
	020	PIC VDG2 failed
	021	PIC parallel port failed
	022	PIC keyboard interface failed
	023	PIC serial port failed
	024	PIC serial expansion failed
	025	PIC VDG1 failed
	026	LCNI media dead
	027	LCNI transceiver B failed
	028	LCNI transceiver A failed
	029	WDC drive 1 power failed
	030	WDC drive 0 power failed
	031	WDC drive 1 failed
	032	WDC drive 0 failed
	033	WDC drive not present
	034	Self-test failed
	035	Undefined
	036	FDC power failed, drives 3 and 2

Source Identifier	Error Code	Description
Quality Logic Tests QLT (Continued)	037	FDC power failed, drives 1 and 0
	038	FDC drive 3 failed
	039	FDC drive 2 failed
	040	FDC drive 1 failed
	041	FDC drive 0 failed
	042	FDC drive not present
	043	Undefined
	044	Firmware detected error
	045	TPS timeout
	046	TPS loopback failure
	047	TPS valid BCH test failure
	048	TPS BCH generation test fail
	049	TPS invalid BCH test failure
	050	TPS poll test failure
	051	SIO trend pen power failure
	052	SIO illegal PIU and trend connected
	053	TPS listen error threshold
	054	TPS grant error threshold
	055	PDG video device or port failed
	056	PDG keyboard device or port failed
	057	PDG serial printer device or port failed
	058	PDG serial expansion device or port failed
	059	AMR module bus data parity error
	060	AMR bus error during kernel write
	061	AMR redundant bus parity error
	062	AMR redundant RAM parity error
	063	EMPU watchdog timeout
	064	Invalid PLCG receive FIFO ID
	065	Modem failure
	066	Token bus chip failure
	067	MCPU watchdog timeout
History Module HM	000	Nonrecoverable sector on 1 CTL Track
	001	Recoverable VVID sector
	002	Nonrecoverable VVID sector
	003	Recoverable VVAT sector
	004	Nonrecoverable VVAT sector
	005	Recoverable SAT sector
	006	Nonrecoverable SAT sector
	007	Recoverable PDB sector
	008	Nonrecoverable PDB sector
	009	Recoverable FAB data sector
	010	Nonrecoverable FAB data sector
	011	Recoverable configuration error
	012	HM error code spare 1
	013	HM error code spare 2
	014	HM error code spare 3
	015	Disk error
	016	Disk set off-line

SMCC Maintenance Recommendation Messages

Maintenance Recommendation Messages Format

Source Identifier	Error Code	Description
On Process Analysis OPA	000	FD Overflow track zero
	001	FD Sector count too large
	002	FD Logical sector number bad
	003	FD Write normal track zero
	004	FD Logical sector not on disk
	005	FD Check volume ID
	006	FD CCB format error
	007	FD CRC data error
	008	FD Miss AD mark data error
	009	FD Write protection error
	010	FD CRC error ID field
	011	FD Miss AD mark ID field
	012	FD Sector not found
	013	FD Unformatted diskette
	014	FD Uninitialized diskette
	015	FD Door opened while busy
	016	FD Seek error
	017	FD Illegal command
	018	FD Write track 0 error
	019	FD Sector-count error
	020	FD Door opened during seek
	021	FD Seek timeout
	022	FD Device fault
	023	FD Not ready after spin
	024	FD Local error
	025	FD Buffer overrun
	026	FD Controller IC fail
	027	FD Buffer overload
	028	FD IOCB aborted
	029	FD IOCB format error
	030	FD Controller-interrupt error
	031	FD Disk drive not ready
	032	FD Bus error 1
	033	FD Bus error 2
	034	FD Bus error 3
	035	WD Logical sector error
	036	WD Logical volume offset error
	037	WD Sector count error
	038	WD Write normal track zero
	039	WD Recoverable EDAC
	040	WD Nonrecoverable EDAC
	041	WD Address EDAC error
	042	WD Header error
	043	WD No data mark
	044	WD Seek error
	045	WD Write normal track 0
	046	WD Protected operation error
	047	WD Sequencer timeout
	048	WD Drive power fail
	049	WD Drive write fault

Source Identifier	Error Code	Description
On Process Analysis OPA (Continued)	050	WD Drive not ready
	051	WD Buffer overrun
	052	WD Buffer overload
	053	WD IOCB aborted
	054	WD IOCB illegal command
	055	WD Controller fault
	056	WD Controller interrupt error
	057	WD Illegal Command
	058	WD Bus error 1
	059	WD Bus error 2
	060	WD IOCB format error
	061	WD CCB format error
	062	Excess soft EDAC errors
	063	All floppies failed
	064	All Winchesters failed
	065	PIO Local bus error
	066	PIO Status bus write parity
	067	PIO Module bus error
	068	PIO Parity during DMA read
	069	PIO Integrity feature failure
	070	PIO Illegal command
	071	PIO CCB error
	072	PIO IOCB error
	073	PIO Illogical condition
	074	PIO Controller fault
	075	PIO Continuous interrupts
	076	PIO Common error spare 1
	077	PIO Common error spare 2
	078	PIO Common error spare 3
	079	PIO Common error spare 4
	080	PIO Common error spare 5
	081	PIO CLI Command register busy
	082	PIO CLI Channel busy
	083	PIO CLI Lost command complete interrupt
	084	PIO CLI Lost send channel complete interrupt
	085	PIO CLI Header search error in basic
	086	PIO CLI Header search error in transport
	087	PIO CLI Illegal DLE in text
	088	PIO CLI Illegal DLE in header
	089	PIO CLI Receive data overflow
	090	PIO CLI Illegal control character received
	091	PIO CLI Receive underrun
	092	PIO CLI Integrity feature failure
	093	SCSI recovered error
	094	SCSI medium error
	095	SCSI hardware error
	096	SCSI aborted command

3. Error Message Listing

3.1 About Error Messages

Messages on the Universal Station

The error messages all appear at the Universal Station screen either during interactive operations or on display of an error file. The messages that appear vary according to the personality load.

Hardware and software status displays

The status of individual hardware and software components within an LCN node are also depicted on status displays. Individual components, or “objects,” are invoked by selecting the [STATUS DETAIL] target on the Console or Node Status display. Status Detail displays are described in more detail in the *Process Operations Manual*, Section 13, Node Status Detail Displays.

Alphabetical listing

The error messages are arranged in alphabetical order, with the following exceptions:

The sorting algorithm used in preparing this document treats spaces and other special characters as low-sequence alphabetics; therefore, the result is not a traditional dictionary sort of words and abbreviations. For example, in this section "NO WALKBACK" precedes "NODE," and "A CHANGE" precedes "ABORT."

The special character "@" is used to represent variable data such as entity or parameter names.

3.2 Available Information

Error messages format

Message information includes the message, its definition, and a recovery action, and looks like this:

MESSAGE IN BOLDFACE TYPE

DEFINITION—A statement of the meaning or cause of the message that may include identification of the message source (for example, DEB for Data Entity Builder or CONF for Configurator). The definition is supplied if available.

Accessing Message Listing

Any steps that may be required to recover from the situation being displayed. May identify the type of operation. A recovery action is supplied if available.

If you are using electronic documentation, click on the red arrow at the end of this section to access the alphabetical listing of all messages. From the listing, click on a message of interest for details about it. From elsewhere in the electronic documentation, access the messages listing by selecting **Messages** from the Glossary pop-up menu.

3.3 Messages Directory Listing

>1 DUALOUT STORE

DEFINITION—Only one dual output store is permitted for each request (HG).

RECOVERY—Retry the output store.

&E CONTROL ITEM MISSING

DEFINITION—Source file for DEB exception build is missing &E control line. The Exception Build command found a new &T, &X or &M item, which indicates the start of a new source file, but it did not find a &E item to indicate the end of the old source file.

RECOVERY—Check your source file, insert the &E item at the proper place, and retry.

8 HOUR SHIFTS, TYPE THE DIGIT 8 FOLLOWED BY SPACE OR COMMA, 21 TIMES

RECOVERY—CONF Help message.

@ EXISTS - SELECT OVERWRITE OPTION IF DESIRED

DEFINITION—Entity "@" exists on LCN. May not actually exist in box

RECOVERY—Select DEB overwrite option and load.

@ INDIRECT TYPE NOT AVAILABLE

DEFINITION—The entity.parameter "@" that would tell the type of the current parameter is not available.

RECOVERY—Make sure the entity.parameter combination is available (that is, loaded) on the LCN (DEB operation).

@ NOT LOADED

DEFINITION—Point name "@" not loaded by destination node. This phrase is appended to other messages.

RECOVERY—Set proper status to allow point to load (DEB operation)

@ NULL AND @ VALID ENTITIES @ UNUSED RECORDS AND @ VALID RECORDS

DEFINITION—Status of IDF in terms of unused versus used area (DEB operation).

A CHANGE TO ANOTHER INSTALLATION UNIT MUST BE INSTALLED FIRST

DEFINITION—NCF has uninstalled changes.

RECOVERY—Install the NCF changes already made (CONF operation).

A DESCRIPTOR MAY CONTAIN ANY CHARACTER ON THE ENGINEERING KEYBOARD.

RECOVERY—Help message (CONF operation).

AN HM VALIDATOR HAD AN INTERNAL ERROR

DEFINITION—The HM's memory may have been temporarily exhausted or the HM's local Network Volume Configuration File, LOC NVCF, may be corrupted. The node number printed out with the message on the Real Time Journal indicates which HM reported the error.

RECOVERY—

1. To eliminate the possibility that the HM's memory may have been temporarily exhausted, try restarting the HM by turning its power off, then back on again. Wait a few minutes. If the error message reappears, go to step 2.
2. To eliminate the possibility of any HM in the network having a corrupted LOC NVCF, do the following. On the Engineer's Main Menu, select UTILITIES and then select COMMAND PROCESSOR. To copy LOC NVCF from HM to a floppy or cartridge disk, key in a command of CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> . "nn" is the HM's node number. "np" is the HM's node-pair number. "?" is the floppy or cartridge-drive number. "VVVV" is the Volume-ID of the floppy or directory on the cartridge that LOC NVCF is to be copied to. Press <ENTER>. If the LOC NVCF of each HM copies without error, go to step 3, else go to step 4.
3. Turn power off, and then turn power on to each HM that shows a status of OK. If you get an error message on the Real Time Journal, look it up and follow the message's error-recovery procedures. After correcting any problems with any of the HMs, initialize and reload the HM reporting the original error by repeating Tasks 14 through 16 in the System Startup Guide. Be aware that initializing the HM destroys all data on the HM. If the error message reappears, go to step 4.
4. Reformat the Winchester disks by running HVTS on each HM that would not copy to removable media. Note that all data on the HM is destroyed. Initialize and reload the HM by performing Tasks 14-16 in the *System Startup Guide*. If the error message reappears, go to step 5.
5. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

ABORT ON BREAK

DEFINITION—During the presentation of a "WAIT" message on the bottom of the screen, the break button (CTL HELP) was pressed, aborting the command execution in progress. If CTL is held and BREAK pressed, the command execution (or printing) is terminated.

RECOVERY—None, in the sense of continuation. The command may be restarted from the beginning, after adjusting an entity list, for example. (DEB operation).

If you want to execute the aborted command, press COMND to recall the command, check the data on the Command Display, and press ENTER. This starts command execution at the beginning, not where the break occurred.

ABORT ON ERROR

DEFINITION—An error occurred during command execution that prevented completion of the operation. (DEB operation). Check for other error indications, including an Error File (.EF) and any other error messages. As applicable, check your selection-list file, exception-build (.EB) source file, and template points in an IDF.

ABORT ON ERROR AT SOURCE LINE @

DEFINITION—While executing an Exception Build command, line "@" in the .EB source file was found to have an error that prevented completion of the operation.

RECOVERY—Carefully recheck your source file, particularly the line(s) indicated. Also check for any other error indications, including other error messages

Abstract from Newer Version

DEFINITION—Attempted to use a schematic built or translated to newer release (Picture Editor build-time message).

Abstract VER Mismatch

DEFINITION—The schematic software version is not compatible with the equipment list software version (Picture Editor run-time message).

ACCESS LEVEL ERR

DEFINITION—The access level of the user is too low for this store request.

RECOVERY—A higher access level must be used to change the parameter. If access level is point-build, reload the point with the necessary changes.

ALGO MUST BE DDC

DEFINITION—Stores to the output (OP) of a regulatory point by an AM, requires the algorithm (ALGIDDAC) to be of DDC type. The following algorithms are classified as DDC:

BC, MC	PIDCMA & PIDCM
EC:	PIDDDC, PIDDDCSP, LEADLAGS, SELOVDDC, LEADLAGM

RECOVERY—Change ALGIDDAC to a DDC-type algorithm consistent with the desired control strategy.

ALGO MUST BE SPC

DEFINITION—Stores to the setpoint (SP) of a regulatory point by an Application Module require the algorithm (ALGIDDAC) to be of the SPC type. The following algorithms are classified as SPC:

BC, MC:	PIDSPC
EC:	PIDNORM, PIDRATIO, AUTRATIO, AUTOBIAS, PIDNONLN, PIDEFB, EXTRATBI, SQRTPROD, ECSUMR, MULTDIV, INCRMTL, RAMPSOAK

RECOVERY—Change ALGIDDAC to an SPC-type algorithm consistent with the desired control strategy.

ALGORITHM ERR

DEFINITION—The requested algorithm (ALGIDDAC) is not supported by that box type.

RECOVERY—Change to a valid algorithm for that box type.

ALL DISK DRIVES ON HM HAVE FAILED

DEFINITION—None of the drives associated with the History Module are accessible. The object state is set to FAIL (HM Detail Node message).

ALM CONF MISMTCH

DEFINITION—An alarm format value is rejected because of the current configuration of the point. Often occurs when storing the digital alarm format (DIGALFMT) to command disagree (CMDDIS) alarming because of many restrictions for that alarm format.

RECOVERY—Recheck the point's configuration.

ALREADY BUILT

DEFINITION—Item specified already exists, cannot build it (CONF operation).

AN AREA NAME MAY CONSIST OF NONE TO 8 ALPHANUMERIC CHARACTERS, OR UNDERBAR

RECOVERY—Help message (CONF operation).

A UNIT ID CONSISTS OF 1 OR 2 DIGITS OR CAPITAL LETTERS AND MUST BE UNIQUE

RECOVERY—Help message (CONF operation).

AND SELECTING IF DUMP FILES WILL ALSO BE ON THE VOLUME

RECOVERY—Help message (CONF operation).

ANL OUT MODULCTL

DEFINITION—MC regulatory slots 9-16 can be associated with an analog output (ANALGCARD = SEL). When this connection is made, the MODE corresponding to the associated analog output point is no longer valid (it is displayed as MOD). This message occurs if the user attempts to change the MODE of such an analog output point.

ANY 24 CHARACTERS, RESERVED FOR THE USER

RECOVERY—Help message (CONF operation).

AREA DATA BASE FILE MUST BE SPECIFIED

DEFINITION—Missing pathname of area database work file. An attempt was made to execute a Load command, a Select Area command, or an Install Area Command, and something other than an area database name was found in the port where the area database file name was expected.

RECOVERY—Use "Select Area" to set pathname before area configuration starts (DEB operation). Check the pathnames on the Command Display and correct, as necessary. The path form is

NET>&Dnn>AREAnn, or
\$Fn>&Dnn>AREAnn

Where NET = History Module
 \$Fn = Removable media drive number n
 nn = Area Number, 01 through 10

Refer to the command descriptions in section 7.2 of the *Data Entity Builder Manual* for more information on the area database pathname form.

AREA NAMES MUST BE LEGAL IDENTIFIERS

RECOVERY—Help message (CONF operation).

ARITHMETIC OVERFLOW

DEFINITION—An actor attempted to perform an arithmetic operation that resulted in a number too large to store. This can also be caused by dividing by zero (Picture Editor run-time message).

ASSIGN AREAS TO THIS VOLUME

RECOVERY—Help message (CONF operation).

ASSIGN HIWAYS, VOLUME SIZE, NBR FILES FOR CONTROL LANGUAGE-DISCONTINUOUS

RECOVERY—Help message (CONF operation).

ATTR ID ERR

DEFINITION—Parameter attribute requested does not exist on point or parameter specified (DEB operation).

ATTRIBUTE ID ERR

DEFINITION—This HG message indicates that a software error exists outside the HG.

BACKGROUND CL QUEUE FULL

DEFINITION—The CL Request Queue is full. The object state is set to WARNING
(Bkgrnd Queue Detail Node message).

BAD CHARACTER FOR SELECT STRING

DEFINITION—In R400, attempted to use unacceptable character inside SELECT “string” (Picture Editor build-time message).

BAD REC.ID: -- IN INPUT NCF AT REC. NO:----

RECOVERY—Delete and rebuilt NCF.WF (CONF operation).

BAD VALUE

DEFINITION—An invalid entry was input (Picture Editor run-time message).

BASE ALGO ID ERR

DEFINITION—Software error (AM).

BATCH NAME

DEFINITION—Batch does not exist (CONF operation).

BLIND_REC TYPE EXPECTED

DEFINITION—A blind record is an internal record often used with trends (Picture Editor build-time message).

BOOLEAN TYPE EXPECTED

DEFINITION—An actor requires a Boolean value. This error is often seen when using an actor like R_BOOL, RS_LOC, or RS_SYS (Picture Editor run-time message).

BOOT LOADER DISK ERROR, USED SECONDARY DRIVE FOR BOOT LOAD

DEFINITION—The file manager boot loader detected an error during node startup accessing the primary disk drive. The boot loader then attempted to use the secondary disk drive for startup. If this drive was not synchronized, the boot loader used an obsolete personality. The drive number displayed depicts which one is in error. The object state is set to SEVERE (HM Detail Node message).

RECOVERY—Reload the History Module using removable media containing an old personality.

BOX FAILURE

DEFINITION—Request could not be executed because of apparent box failure. May be caused by either communication problems or box failure.

BOX INVALID

DEFINITION—The box invalid error is returned while a process point is being loaded under the following three circumstances:

1. The box number is less than 1 or greater than 63.
2. The box number has been assigned to an added HG (that is, BOXASSN = ADDEDHG).
3. The box number corresponds to a box type that does not support the type of point being loaded.

RECOVERY—Reenter a valid box number at the DEB.

BREAK ENABLE FAILED

DEFINITION—Attempt to enable Break key during multiple-point operations failed (DEB operation).

RECOVERY—Check keyboard/PIC board hardware.

BUILDING FORM

RECOVERY—Wait for message to change (CONF operation).

***** BUSY *****

DEFINITION—Operation in progress (DEB prompt).

RECOVERY—Wait for "busy" to clear.

BUSY

DEFINITION—Could not do configuration operation because of temporary overload somewhere, try again (CONF operation).

BUTTON FILE MISSING OR WRONG REVISION. BUTTONS INOPERABLE

DEFINITION—Area Manager attempted to read and load the Button file into memory, and the file does not exist, or was the wrong version. The object state is set to WARNING (Button_File Detail Node message).

CANNOT COMPILE SUBPICTURE

DEFINITION—Has an &name in the schematic (Picture Editor build-time message).

CANNOT CONF INIT

DEFINITION—Changes to certain regulatory point parameters are prohibited when initialization is configured (that is, INITCONF = INIT).

RECOVERY—Set INITCONF = NOINIT

CANNOT CONF TRCK

DEFINITION—Changes to certain regulatory point parameters are prohibited when PV tracking is configured (that is, PVTRACK = TRACK).

RECOVERY—Set PVTRACK = NOTRACK

CANNOT DELETE RESERVED ENTITY ID

DEFINITION—An attempt was made to delete a reserved entity. All reserved entities exist in all systems and they cannot be deleted (DEB operation).

RECOVERY—Recheck the tag name for the point you were trying to delete. Only reserved entity names can begin with "\$".

CANNOT DO LOAD WITH OVERWRITE AND MAKE THIS CHANGE

DEFINITION—Data change desired cannot be made after point is loaded. While attempting to load an entity by overwriting an existing entity, a value change was encountered that prevented loading the entity.

RECOVERY— Recheck the changes made to this entity. You cannot change the point type, the unit, or the hiway and then reload. You might be able to delete the existing entity and then reload, but if it is a data point, you must also delete and reload all of this point's secondaries and all points it refers to (DEB operation). See section 9.4 of the *Data Entity Builder Manual* for guidance in deleting and reloading entities.

CANNOT FIND POINT

DEFINITION—Tag name entered does not exist (Picture Editor run-time message).

CANNOT LOAD EQ OBJ

DEFINITION—The specified equipment list cannot be loaded because of a file error (Picture Editor run-time message).

CANNOT RETRANSLATE PICTURE

DEFINITION—Schematic has already been translated (Picture Editor build-time message).

CANNOT TRANSLATE INTERNAL ENTITY ID TO EXTERNAL

DEFINITION—While trying to reconstitute an AM point with CDS data point parameters, at least one tag was deleted, so there was no external name. The parameter value will show up as blanks in the PED.

CF FILE INIT FAILED

RECOVERY—Correct File Manager Status reported on-line 2; may need to replace NCF.CF (CONF operation).

CF FILE OPEN FAILED

RECOVERY—Correct File Manager Status reported on-line 2; may need to replace NCF.CF (CONF operation).

CG RECOVERED ONE CABLE TO ULP

DEFINITION—One of two links is operational to the Upper Level Processor, therefore, communications still exist to the Computer Gateway. The object state is set to WARNING (CG_Link_Objt Detail Node message).

CG COMMUNICATIONS TO ULP HAVE FAILED

DEFINITION—Occurs when a non-redundant link is lost or when both redundant cables are lost. The Computer Gateway then becomes inoperable. Redundant BISYNC cable can be restored one link at a time. The object state is set to SEVERE (CG_Link_Objt Detail Node message).

CG STARTUP, ESTABLISHING COMMUNICATIONS TO ULP

DEFINITION—Communications to the ULP are not yet possible because either the Computer Gateway is loading, or there are no functional links to the ULP. The object state is set to WARNING (CG_Link_Objt Detail Node message).

CHECK THE SYSTEM LOAD - 5/10/20/60 SEC HISTORY COLLECTION CYCLE OVERRUN

DEFINITION—The History Module was not able to collect the amount of data as configured for the history collection cycle. This may be caused by a temporary overload condition in either the History Module, or data owner node. This message is normally seen only during heavy load periods in the History Module or data owner node. The object state is set to WARNING (HM Detail Node message).

RECOVERY—If this message displays excessively, either reduce the amount of history being collected, or reduce the load that is presently on the data owner nodes.

CHG INVALID

DEFINITION—Current configuration or point state does not allow the parameter value to be changed (AM).

RECOVERY—Check Application Module Forms Instructions and AM Algorithm Engineering Data.

CLOSE CF FILE FAILED

RECOVERY—Make sure &ASY is mounted and unprotected if needed; may need to replace NCF.CF (CONF operation).

CLOSE WORKING FILE FAIL

RECOVERY—Correct File Manager Status reported on-line 2; may need to delete and rebuild NCF.WF (CONF operation).

CO NOT CONFIG

DEFINITION—Control output connection parameter is not filled in or contains an illegal value (AM).

RECOVERY—Rebuild the point with valid control output connection.

COMMA EXPECTED

DEFINITION—Possibly a semicolon has been placed where a comma should be or a comma has been omitted (Picture Editor build-time message). Example: S_BOOL(BOOL01;ON)

COMMAND LINE EXCEEDED 80 CHARACTERS (R610)

DEFINITION—A command line has exceeded 80 characters – rare, but a possibility (DEB operation).

SrcFileLineNum: 0004

LS V1>DEMOX.EL 88 07 AM SWITCH FLAG

COMMAND LINE EXCEEDED 80 CHARACTERS

COMPARISON OF LOCAL NCF FILE AND SAME OBJECT FILE IN THE NCF HAD DISCREPENCIES

DEFINITION—This error can be caused by the HM's volume configuration data being corrupted. It can also be caused by the HM's volume configuration data in the System-HM's NCF being different from the volume configuration data in this HM's LOC NVCF. The node number printed out with the message on the Real Time Journal indicates which HM reported the error.

RECOVERY—

1. Did someone install a newly changed NCF on the System HM that changed the volume configuration of the HM that gave the error message, or did someone forget to initialize and restart the HM that gave the error message? If not, go to step 2. If so, initialize and load the HM by repeating Tasks 14-16 in the *System Startup Guide*. If the error message reappears, go to step 2.
2. Select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Key in the following copy command CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> where "nn" is the HM's node number, "np" is the HM's node-pair number, "?" is the floppy or cartridge drive number, and "VVVV" is the Volume-ID of the floppy or directory on the cartridge disk that LOC NVCF is to be copied to. Press <ENTER>. If LOC NVCF copies without error, go to step 3, else go to step 4.
3. Run HVTS on the HM to reformat the Winchester disks. Note that any data you had on the HM is destroyed. When the disks are reformatted, initialize the HM by performing Tasks 14-16 in the *System Startup Guide*. If the error message reappears, go to step 4.
4. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

COMPILE ERROR

RECOVERY—Try verify command to see if the problem is with the symbol table, then recompile. If you still get the error probably the problem is in a subpicture (Picture Editor build-time message).

COMPLETE

RECOVERY—Request successfully completed (CONF operation).

CONF FORC IN EFF

DEFINITION—The following EC regulatory parameters associated with the setpoint (SP) must match their PV counterparts for certain algorithms:

- SPEUHI must be equal to PVEUHI
- SPEULO must be equal to PVEULO
- SPCHAR must be equal to PVCHAR
- SPFORMAT must be equal to PVFORMAT
- SPTEMP must be equal to PVTEMP

When one of the PV-related parameters changes, the HG forces the corresponding setpoint-related parameter for the same value for those algorithms in which forcing is in effect. If the user attempts to change one of the setpoint-related parameters in the same situation, this message is returned.

RECOVERY—Change the PV-related parameter, and the setpoint-related parameter will track the value.

CONFIG MISMATCH

DEFINITION—This is a general error message when a problem is found with a point's configuration. Either there is a conflicting definition or there is something missing.

RECOVERY—If the configuration problem is not obvious, it may be useful to reload the point.

CONFIG NORM MODE

DEFINITION—Normal mode attribute is not configured; therefore, set to NONE (AM, PM, APM).

RECOVERY—Configure NMODATTR to a value other than NONE.

DEFINITION—Normal mode is not configured; therefore, set to NONE.

RECOVERY—Configure NMODE to a value other than NONE.

CONFIG Y SOURCE

DEFINITION—In order to change certain regulatory points to local cascade mode, the Y-input source (SPSIGNAL, SPSLTSRC) must be configured. If not, the HG returns this error message.

RECOVERY—Reload the point with necessary changes.

CONFIGURATION FILE INTEGRITY CHECK MODULE IS RUNNING

RECOVERY—Wait for message to change (CONF operation).

CONFIGURE BURST BUFFER SIZE IF EITHER PROCESS OR SYSTEM UNIT JOURNALS ASSIGNED

RECOVERY—Help message (CONF operation).

CONFIGURE THE GDF FILES ON THE SYSTEM VOLUME

RECOVERY—Help message (CONF operation).

CONFIGURE THE HM OFF-LINE PERSONALITY ON THE LOCAL VOLUME

RECOVERY—Help message (CONF operation).

CONSECUTIVE OPERANDS ILLEGAL

DEFINITION—(Picture Editor build-time message).

CORRUPTED VOLUME DIRECTORY

DEFINITION—A corrupted volume was found in the drive, and a state change detected. The object state is set to WARNING (HM Detail Node message).

COULD NOT ATTACH CUST SEGMENT @ TO ENTITY

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT CONVERT INT ENTITY ID TO EXTERNAL

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT ESTABLISH ENTITY @

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT FIND ENTITY @ ON NET

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT GET PARAMETER

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT LOAD ENTITY @

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT RELOAD ENTITY @

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

COULD NOT SEND PARAMS TO ENTITY @

DEFINITION—Data access error; see first part of message for meaning (DEB operation).

CREATE WORKING FILE FAIL

RECOVERY—Correct File Manager Status reported on-line 2; may need to delete and rebuild NCF.WF (CONF operation).

CREATING A NEW NCF.CF FILE

RECOVERY—Wait (CONF operation).

CRITICAL DISPLAY COULD NOT BE COPIED TO MEMORY AT STARTUP

DEFINITION—A critical schematic display is missing. The Universal Station state is set to FAIL (Mem_Displays Detail Node message).

CS INDEX RANGE

RECOVERY—Parameter doesn't exist in list collected; probably bug (DEB operation).

CTL STATE BASIC

DEFINITION—Returned when an access level of Continuous Control or Program attempts to read or write an HG point with either the hiway control state (HWYCTLST) or the box functional state (BOXFSTAT) for that box set to BASIC.

RECOVERY—Check the hiway control state for that hiway and the box-functional state for that box. If read/write access is to be performed by either of these access levels, set both HWYCTLST and BOXFSTAT to FULL.

CTL STATE READ

DEFINITION—Returned when an access level of Continuous Control or Program attempts to write to an HG point with either the hiway-control state (HWYCTLST) or the box-functional state (BOXFSTAT) for that box set to READ.

RECOVERY—Check the hiway-control state for that hiway and the box-functional state for that box. If read/write access is to be performed by either of these access levels, set both HWYCTLST and BOXFSTAT to FULL.

CTL STATE TEST

DEFINITION—Returned when an attempt is made to access a parameter from an HG point with either:

- The hiway control state (HWYCTLST) for that hiway set to TEST, or
- The box-functional state (BOXFSTAT) for that box set to TEST

RECOVERY—The TEST mode is used when SMCC is performing tests on the hardware. When SMCC testing is through, the HWYCTLST and appropriate BOXFSTATs will be reset to normal operating values.

CTRL LOCK ERROR

DEFINITION—Timers and counters have a control lock parameter (CTLLOCK) associated with them. When set to NOTPERM, this prevents the Operator access level from reset, start, or stop of timers and counters.

RECOVERY—Use a higher-access level to change the parameter.

CURSOR NOT IN PORT OR PICK

DEFINITION—HELP was pressed when the cursor was not in a pick or a port. Use of HELP button applies only for pick or port (DEB operation). The DEB must find the cursor in a pick or a port to determine what type of help information is desired.

RECOVERY—Move cursor to desired pick or port.

CUSTOM ENUMERATIONS WERE NOT LOADED- REVISION MISMATCH

DEFINITION—Occurs when the revision used by the network does not match the revision of the Custom Names files being loaded. May be a result of old SE/SP files being copied from a backup, or the load is from old files on removable media. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM NAME LIBRARY/CUSTOM GDF MISMATCH

DEFINITION—

1. When you compile Custom Data Segment (CDS), you generate a GDF (Global Description File,.GD) for the CDS. On reconstitute, if the pathname to the GDF has changed or if the GDF has been manually deleted, it will not be found.
2. If you are building an AM point, the System Volume (&EC>SYS_VOL.EC) that contains the GDF for the entity type may not have been run. The GDF (Global Description File) under the History Module does not match the version of software the system is running.
3. The .SE and .SP files may be wrong on the NCF (Network Configuration File) of these nodes.

RECOVERY—The recovery actions are related to their like numbered definitions:

1. Call TAC.
2. Reinstall the GDF that matches the current version of system software.
3. Install correct version of your .SE and .SP files from the &ASY directory on the HM.

CUSTOM NAME LOAD ABORTED - COULD NOT GET REVISION FROM PEER

DEFINITION—Occurs when other nodes on the network are asked which revision was used when Custom Names files were loaded. May result from Review time out, memory unavailable, or an error on Review. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM NAME LOAD HAD A FILE I/O ERROR <xx>

DEFINITION—This message displays when a FMRB is unavailable, or a file cannot be opened, read, or written to. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM NAME LOAD ABORTED - ERROR WHILE LOADING MEMORY

DEFINITION—Custom Names file can be read, but problems developed while data was being moved into the memory record. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM PARAMETER LISTS WERE NOT LOADED - REVISION MISMATCH

DEFINITION—Occurs when the revision used by the network does not match the revision of the Custom Names files being loaded. May be a result of old SE/SP files being copied from a backup, or that the load is from old files on removable media. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM PARAMETERS WERE NOT LOADED - REVISION MISMATCH

DEFINITION—Occurs when the revision used by the network does not match the revision of the Custom Names files being loaded. May be a result of old SE/SP files being copied from a backup, or that the load is from old files on removable media. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM SEGMENT NAME NOT FOUND

DEFINITION—

1. During execution of a Read to PED command, a custom segment that is referenced by one of the points in the IDF could not be found on this LCN. This is caused by using on one system an IDF with custom names that was created on another system. The custom files on the two systems will always be different, and IDFs with custom names cannot be transported to another system. For more information, see *Control Language/Application Module Data Entry*.
2. The SEGMENTS.SP file differs from the AM's database, possibly because old SE and SP files were not copied back after an upgrade. This can happen if you did not copy the SE and SP files after an upgrade. The error is caused because the custom segment name is actually stored in the point record of the AM's database.

CUSTOM SEGMENT TOO LARGE

DEFINITION—

1. A CDS was attached prior to R620 when changes were made as to how time variables are handled in the PED. Time variables now count against the total number of "loaded" parameters that the DEB can handle, which is approximately 1440. To fix this problem, you will have to load a station with a release prior to R620 and make the CDS size smaller.
2. A change was made to a CDS, complied with -OCD, and now the GD file is too large.

RECOVERY—In both cases, you will need to divide the CDS into two CDSs.

CUSTOM SEGMENTS WERE NOT LOADED - REVISION MISMATCH

DEFINITION—Occurs when the revision used by the network does not match the revision of the Custom Names files being loaded. May be a result of old SE/SP files being copied from a backup, or that the load is from old files on removable media. The object state is set to WARNING (Custom Names Detail Node message).

CUSTOM STANDARD PARAMETER DUPLICATE XREF CREATION FAILED

DEFINITION—Message displays when memory is not available for a copy, or when the custom parameter database has been corrupted. The object state is set to WARNING (Dup Par XRef Detail Node message).

CUSTOM SYSTEMS MSF FILE ERROR

DEFINITION—MSF is a small internal subsystem (multisectioned file). Error in reading a .QO file with EQLISTs (Picture Editor build-time message).

CUSTOM SYSTEMS MSF UTILITIES NOT LOADED

DEFINITION—Runtime backplane software not available—EQLIST-related (Picture Editor build-time message).

CVB SIZE FOR FAST PROCESS <xxxx> OR MORE MUST BE IN NCF

DEFINITION—Occurs when CVB Size is less than what was saved in the Application Module database previous to Release 300. The object state is set to WARNING (LCN Config Detail Node message).

DATA ACCESS ERROR

DEFINITION—Parameter does not exist for selected point (Picture Editor run-time message).

DATA ENTRY TIME OUT

DEFINITION—This message appears when no input is received into an input port within two minutes (Picture Editor run-time message).

DATA ERROR

DEFINITION—A data error was found in a file within the drive. The object state is set to WARNING (HM Detail Node message).

DATA NOT AVAILABLE

DEFINITION—Data does not exist for the given point and time (history) (Picture Editor run-time

DATA PNT TOO BIG

DEFINITION—Trying to load an AM point larger than 16089 words. You cannot link to a data point because it is too large. For example, you may have added to entity arrays after the point was originally and successfully linked because you are trying to cure CONFIG errors during runtime by unlinking and trying to relink the block in question.

RECOVERY—You need to reduce the size of the data point to link to it. For the above example, you would null out the entity arrays and attempt to relink the blocks on a trial and error basis until it is relinked—the linker will not pre-calculate the maximum size of a point should all of the parameters in an array of type entity be used at the same time.

DATA Point <pointname> NOT FOUND – ALL NODES NOT OPERATIONAL

DEFINITION—The node was too busy to load the point.

DATA REALM

DEFINITION—Data realm doesn't exist.

RECOVERY—Re-enter correctly (DEB operation).

DATA TRUNCATED DUE TO STORAGE/PORT OVERFLOW

DEFINITION—A mismatch in reconstituted or default data on the form on which it appears.

RECOVERY—If reconstituted and revised GDFs are used, re-enter data in abbreviated form. If default data is used, contact Honeywell giving point type and options used (DEB operation).

DATA TYPE ERR

DEFINITION—Value to store doesn't match type of parameter (for example, string to be stored but parameter is a real data type).

RECOVERY—Recompile display or CL (DEB operation).

DATE EXPECTED

DEFINITION—An actor requires a date value (Picture Editor run-time message). This error is often seen when using an actor like R_DATE, RS_LOC, or RS_SYS.

DATE OR TIME EXPECTED

DEFINITION—The requested time base is incorrect (Picture Editor run-time message).

DEFAULT TRUNCATED

DEFINITION—A default value specified in GDF for a parameter does not fit in form port (DEB operation).

RECOVERY—Contact Honeywell for record point-type and options selected.

DEV NOT IDLE

DEFINITION—The Multifunction Controller must be in idle state before the loading of any process points except for regulatories (DEB).

RECOVERY—Place the MC into idle.

DEVICE RESET

DEFINITION—Returned when attempting to access a parameter that is not accessible when box status is RESET.

RECOVERY—No entry is allowed; enable processing in the box.

DEVICE UNAVAILABLE @

DEFINITION—Cannot access the physical device named in pathname. The device named in a pathname on a Command Display cannot be found on the network (DEB operation).

RECOVERY—Check name and status of nodes. Recheck device ID numbers, correct the pathname, and retry. It is possible that the device (a printer, a removable media drive, an HM) is not operating or is not connected to the network.

DIRECTORY ATTRIBUTES OF FILE CORRUPTED (71)

RECOVERY—Verify the read-write protection on your removable media, or verify copying procedure to removable media.

DISK CAPACITY EXCEEDED

RECOVERY—Reduce the size of one or more volumes; for example, move a volume to a less crowded disk, reduce the size of some file or volume, reduce the number of points or units assigned, or delete user volumes (CONF operation).

DISK CONTROLLER ERROR

DEFINITION—There is a failure within the SPC or WDC controller. The object state is set to FAIL (HM Detail Node message).

DISK DRIVE SET OFFLINE

DEFINITION—The operator set the drive off-line. The object state is set to WARNING (HM Detail Node message).

RECOVERY—Resynchronize the drive.

DISK NUMBER - IS FULL FOR CH, UNIT ID: ---.

RECOVERY—Reassign unit to another HM (CONF operation).

DISPLAY DATA BASE ERROR

DEFINITION—A display database variable has not been initialized (Picture Editor run-time message).

DISPLAY IS MISSING OR INACCESSIBLE

DEFINITION—This error occurs whenever a display cannot be retrieved by the Area Manager.

DISPLAY NOT CONFIGURED

DEFINITION—A key or target was selected to call up a nonexistent display (Picture Editor run-time message).

DUPL_DIR_CHK

DEFINITION—Duplicate Volume/Directory. This function checks the LCN for duplicate volumes/directories after the HM boots. If no duplicates are found, the status remains in the OK state. If duplicates are found, the function will remain active in the SEVERE state until duplicate directories are removed from the LCN. This condition may cause file access problems to occur.

RECOVERY—Remove duplicate volumes/directories from the HM so that each volume and directory has a unique name on the network.

DUPLICATE ENTITY. TWO POINTS HAVE THE SAME NAME

RECOVERY—Delete one (DEB operation).

DUPLICATE ENTITY @ OF TYPE @ IN UNIT @ REALM @

DEFINITION—Duplicate entity names exist - delete unwanted entity by using unit, data realm option (DEB operation).

DUPLICATE CL/D HIWAY NUMBER: --

RECOVERY—Delete the CL/D hiway assignment from one of the HM pairs (CONF operation).

DUPLICATE CONTINUOUS HISTORY UNIT ID: ---

RECOVERY—Delete the unit continuous history assignment from one of the HM pairs (CONF operation).

DUPLICATE ENTITY (entity) IN UNIT (uuu) ON NODE (nnn)

DEFINITION—While executing a command such as Reconstitute or Print Entities, two entities were found with the same entity name.

You need to use the Delete (system entity) command to delete one of these entities. If this is a data point to be renamed, you must delete all of this point's secondary points, all points it refers to, and then rebuild them.

DUPLICATE JOURNAL MANAGER UNIT ID: ---

RECOVERY—Delete the unit journal manager assignment from one of the HM pairs (CONF operation).

DUPLICATE LOAD/DUMP PHYSICAL NODE TYPE: ----

RECOVERY—Delete the node-type load/dump assignment from one of the HM pairs (CONF operation).

DUPLICATE NAME – COULD NOT ESTABLISH ENTITY OFF NODE

DEFINITION—The AM was too busy. Retry and enter again.

DUPLICATED PARAMETER ID

DEFINITION—During execution of the Exception Build command, the source file was found to specify a change for the same parameter in a point more than once.

DUPLICATE SUBPICTURE NAME ALREADY EXISTS IN PICTURE

DEFINITION—The command RE SUB A B would give this error if B already exists in schematic (Picture Editor build-time message).

DURATION EXPECTED

DEFINITION—An actor requires a duration value (Picture Editor run-time message). This error is often seen when using the actor R_DUR.

END OF PORT ENCOUNTERED

DEFINITION—This message appears if you enter an empty port (Picture Editor run-time message).

ENGINEER'S KEYLOCK MUST BE ENABLED TO USE THIS COMMAND

RECOVERY—Turn keylock to engineer (either DEB or CONF operation).

ENTER 0 IF SHIFT ONE BEGINS AT MIDNIGHT

RECOVERY—Help message (CONF operation).

ENTER 0 IF THE WEEK BEGINS AT MIDNIGHT

RECOVERY—Help message (CONF operation).

ENTER A NUMBER OF NON-ZERO FIELDS EQUAL TO THE NUMBER OF SHIFTS PER WEEK

RECOVERY—Help message (CONF operation).

ENTER FROM 1 TO 63 EXISTING UNIT IDS IN START-UP ORDER, SEPARATED BY COMMA OR SPACES

RECOVERY—Help message (CONF operation).

ENTER IN THE HOST BUILD MODE. MUST MATCH THE SYSTEM ID AS INSTALLED IN THE HARDWARE

RECOVERY—Help message (CONF operation).

ENTER THE DAY OF THE WEEK IN WHICH THE STARTING HOUR IS

RECOVERY—Help message (CONF operation).

ENTER THE FIRMWARE TYPE

RECOVERY—Help message (CONF operation).

ENTER THE FIRMWARE VERSION

RECOVERY—Help message (CONF operation).

ENTER THE MEMORY ALLOCATION (KB) PER UNIT OF RESOURCE CONTROL

RECOVERY—Help message (CONF operation).

ENTER THE MINIMUM ACCEPTABLE REVISION NUMBER OF THE PERSONALITY

RECOVERY—Help message (CONF operation).

ENTER THE MINIMUM ACCEPTABLE BOARD REVISION NUMBER

RECOVERY—Help message (CONF operation).

ENTER THE MINIMUM ACCEPTABLE FIRMWARE REVISION NUMBER

RECOVERY—Help message (CONF operation).

ENTER THE REQUIRED MEMORY SIZE FOR THE PERSONALITY IN KILOBYTES

RECOVERY—Help message (CONF operation).

ENTER THE REQUIRED VERSION OF THE PERSONALITY

RECOVERY—Help message (CONF operation).

ENTITY DATA CORRUPT - DELETE AND REWRITE @

DEFINITION—The write to IDF of this entity failed and not enough information is present to read any data, that is, there is no data actually in the file, only the name.

RECOVERY—Delete from IDF, rebuild, and write to IDF (DEB operation).

ENTITY DATA IN IDF CORRUPTED @

DEFINITION—Entity corrupted because of HM or floppy failure during write operation.

RECOVERY—Read to PED, check all data for correctness and write back to IDF (DEB operation).

ENTITY DOESNT EXIST @

DEFINITION—Referenced entity not established or node-owning entity is inoperative.

RECOVERY—Check name used and system status display (DEB operation).

ENTITY ID

DEFINITION—Point does not exist (DEB operation).

RECOVERY—Check that the module that "owns" the entity has a status of OK. Check the entity name. If an IDF is involved, check that you used the right pathname for the IDF that has this entity.

ENTITY ID ERR

DEFINITION—Entity doesn't exist or not valid type for operation requested (DEB operation).

ENTITY ID ERROR

DEFINITION—The internal entity number either does not exist or points to incorrect data. The probable cause is that the entity or parameter has been deleted (Picture Editor run-time message).

ENTITY ITEM EXPECTED

DEFINITION—The Exception Build command expected an entity name item (&N (name)) following the template name (&X or &M), but the entity name was not found, so this point could not be processed (DEB operation).

RECOVERY—Recheck your source file to see that you do have an &N (name) item for every new point you are building. Also verify that the name is legal (see Parameter Name in the Parameter Reference dictionaries).

ENTITY NAME

DEFINITION—Incorrectly entered name syntax (DEB operation).

ENTITY NOT FOUND

DEFINITION—Tag name entered does not exist (Picture Editor run-time message).

ENTITY TYPE

DEFINITION—Wrong point type for operation requested (DEB operation).

ENTITY TYPE DIFFERS FROM ORIGINAL TYPE FOR ENTITY @

DEFINITION—Load with overwrite cannot change point entity type. During a load with the overwrite option, the entity being reloaded was found to be of a different type than the original entity, so this entity could not be loaded (DEB operation).

RECOVERY—If you want the entity to be a different type, delete the original entity and then load the new one. If this is a data point, you must also delete and reload all of this point's secondaries. See section 9.4 of the *Data Entry Builder Manual* for guidance in deleting and reloading entities

ENUMERATION TYPE EXPECTED

DEFINITION—If in a target, most common cause: forgot to do a get enumeration (Picture Editor build-time message).

EQ_LIST TIME OUT

DEFINITION—During the processing of the EQ_LIST actor, time out has occurred (Picture Editor run-time message).

EQ OBJ FILE CORRUPTED

DEFINITION—The specified equipment list contains bad data (Picture Editor run-time message).

EQ OBJ FILE NOT FOUND

DEFINITION—The specified equipment list object file is not found in the search paths specified in the area database path names catalog (Picture Editor run-time message).

EQ OBJ NOT USED IN ABST

DEFINITION—The specified equipment list in an EQ_LIST actor was not loaded in the schematic at compile time (Picture Editor run-time message).

EQ OBJ TIME STMP MISMATCH

DEFINITION—An equipment list object file (.QO) other than the one referenced in the LOADEQ command is found at display callup (Picture Editor run-time message). Check .QO files in directories of Pathname Catalog.

EQUAL SIGN EXPECTED

DEFINITION—Exception Build source should have equal sign.

RECOVERY—Add equal sign to source (DEB operation).

ERR:@, @

DEFINITION—Partial message where "@" is a phrase giving error. During exception building, in processing a parameter, an equal sign was expected to specify a parameter change but it was not found, so this point cannot be processed (DEB operation)

RECOVERY—Check your source file to be sure that all parameter changes include the equal sign, and that parameter names and values are separated from other names and values by at least one space.

ERROR - PLEASE TRY AGAIN

DEFINITION—An error has been detected in one or more items of entered data.

RECOVERY—Correct entries in the ports outlined in red, and re-enter (CONF operation).

ERROR - UNDEFINED ACTOR REFERENCED

DEFINITION—Occurs when the target interpreter encounters a call to an undefined actor.

ERROR IN DISPLAY INVOCATION

DEFINITION—This occurs as a result of an MMI Kernel display invocation error.

ERROR IN HANDLING REQUEST

DEFINITION—This occurs when a context graph routine returns to the MMI Kernel and a new context has not been requested. For example, an error incorrectly handled in a graph.

ERROR IN PARSE OF EXPRESSION

DEFINITION—(Picture Editor build-time message).

ERROR OCCURRED WHILE DRAWING DISPLAY

DEFINITION—Occurs when the abstract interpreter encounters an error.

******* ERROR RECORDING ABORTED *******

DEFINITION—Too many errors occurred during multiple-entity DEB operation.

RECOVERY—Fix identified errors and rerun or break IDF into multiple files.

ERROR WITH BOTH CTL TRKS - SECTOR xxxxxxx

DEFINITION—This error occurs when data corruption, or hard disk errors have occurred on both disk drive control tracks (HM Detail Node message).

RECOVERY—Reformat and initialize the disk drive, or replace it depending on the error.

ERRORS

DEFINITION—Error occurred, see secondary status for detail (CONF operation).

ERRORS - SEE @.EF FILE

DEFINITION—Errors occurred during DEB command operation.

RECOVERY—Display or print error file and correct errors recorded (DEB operation).

EU SPAN TO SMALL

DEFINITION—PVEUHI and PVEULO must be greater than .001 (AM).

RECOVERY—Change PVEUHI or PVEULO so that span is greater than .001.

EXCEEDED MAXIMUM EQUIPMENT LISTS LOADED INTO THE PICTURE EDITOR

DEFINITION—Eight Equipment Lists, maximum (Picture Editor build-time message).

EXCEEDED MAXIMUM NUMBER OF ENTITIES ALLOWED IN IDF

DEFINITION—No more entities can be stored in this IDF.

RECOVERY—Start a new IDF (DEB operation).

EXT BUILD INV

DEFINITION—Point cannot be built, must perform create-batch operation (DEB operation).

EXT MODE SW ENBL

DEFINITION—Certain EC configuration changes are prohibited when external mode switching (EMS) is activated.

RECOVERY—Set EMS to DISABLE.

EXTERNAL LOAD MODULE NOT FOUND: <xxxxxxxxxx>

DEFINITION—Existing external load module from the & directory cannot be mounted, or file cannot be opened. The object state is set to FAIL (AM Detail Node Status message).

EXTERNAL LOAD MODULES ADDED STACK OUT OF RANGE: <xxxxxxxxxx>

DEFINITION—While the Application Module is loading, external load modules are found to have stack values out of range. The object state is set to SEVERE (AM Detail Node Status message).

FAIL : @@ nn

With an LED Error Code of -190 ("@" is a node-type other than HM and "nn" equals node number)

DEFINITION—This error may indicate an out-of-revision board.

RECOVERY—

1. Check the Real Time Journal for a node crash message ("hh:mm:ss nnnn \$\$NODE ADMIN CRASH DET- NODE ADMIN 42 OFF- NODE ADMIN 1 xx 60001" where nnnn represents the node number and xx is the slot number). If this message is present, call for a technician to replace or update the board, else go to step 2.
2. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

FAIL : HM nn

With an LED Error Code of -176 ("nn" equals node number)

DEFINITION—This error can be caused by failure of the HM's shutdown function or by the inability of the failed HM to load certain software from Winchester disk into HM node memory.

RECOVERY—

1. Reset the HM until its status is POWER ON as shown on the System Status display. Be aware that initializing the HM destroys all existing data on the HM. Initialize and load the HM by performing Tasks 14-16 in the *System Startup Guide*. If the HM fails again, go to step 2.
2. To eliminate the possibility of missing software, select UTILITIES on the Engineer's Main Menu and tssh select FILE MANAGER UTILITIES. Key in the following catalog command: CAT NET>!9np>*. * where "np" is the HM's node pair number. Press <ENTER>. If LOC NVCF and other files are present, go to step 3, else go to step 4.
3. To see if LOC NVCF is corrupted, select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Key in CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> where "nn" is the HM's node number, "np" is the HM's node pair number, "?" is the floppy drive number, and "VVVV" is the Volume ID of the floppy that LOC NVCF is to be copied to. Press <ENTER>. If LOC NVCF copies to floppy without error, go to step 5 else go to step 4.
4. To eliminate the possibility of a bad Winchester disk surface, rename the HM's LOC NVCF.MM file and copy the LOC NVCF.MM file from your &ASY floppy onto the HM. Retry the HM restart or software load operation. If it works, go to step 6 else go to step 5.
5. Run HVTS on the HM to reformat the Winchester disks. Note that any data you had on the HM is destroyed. Then initialize and load the HM by performing Tasks 14-16 in the *System Startup Guide*. If the error message reappears, go to step 7.
6. Log that HVTS should be run on the HM at some future time. After HVTS has been run, the HM must be reinitialized by repeating Tasks 14-15 in the *System Startup Guide*.
7. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

FAIL : HM nn

With an LED Error Code of -190 ("nn" equals node number)

DEFINITION—At system start-up, this error is usually caused by an inconsistent Network Configuration. After start up, this error is usually caused by a software or hardware design error. Each HM carries a time stamp indicating the time and date that NCF data was installed to that HM. If a HM's time stamp is different than the Time-stamp of the NCF being accessed, the inconsistency causes the HM to fail. After system start up, this error is usually caused by a software or hardware design error.

RECOVERY—

1. Check the Real Time Journal for a node crash message ("hh:mm:ss nnnn \$\$NODE ADMIN CRASH DET- NODE ADMIN 42 OFF- NODE ADMIN 1 xx 60001" where nnnn represents the node number and xx is the slot number). If this message is present, call for a technician to replace or update the board, else go to step 2.
2. Check to see if the Winchester disks have just been reformatted by having HVTS run on them. If HVTS has been run, go to step 3, else go to step 4.
3. Initialize and load the HM by repeating Tasks 14-16 in the *System Startup Guide*. If the HM still fails, go to step 6.
4. If you installed a newly changed NCF to the System-HM, go to step 5, else go to step 6.
5. If the newly installed NCF modified the configuration of the failed HM, initialize and restart the HM by repeating Tasks 14-16 in the *System Startup Guide*, else go to step 6. Be aware that initializing the HM destroys all existing data on the HM. If the HM still fails, go to step 6.
6. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

FAILED ENTITY CONV TO EXTERNAL -ENT.PARAM(N) EMT

DEFINITION—An reconstituted parameter of type "entity.parameter" failed conversion of its "entity" position to an external format (DEB operation). Entity may have been deleted after the entity being reconstituted was loaded.

RECOVERY—Check if entity name is correct, owning node operational and contains point desired. List points on a node as a check.

FAILED INDEX CONV TO EXTERNAL -ENT.PARAM(N) FMT

DEFINITION—A reconstituted parameter of type "entity.parameter" failed conversion of the parameter index to its external format (DEB operation).

RECOVERY—None. Implies software problem.

FAILED PARAM CONV TO EXTERNAL -ENT.PARAM(N) FMT

DEFINITION—A reconstituted parameter of type "entity.parameter" failed to convert its "parameter" portion to an external format (DEB operation).

RECOVERY—None. Implies software problem.

FAILED PARAM CONV TO EXTERNAL -PARAM(N) FORMAT

DEFINITION—A reconstituted parameter of type "parameter ID" failed to convert its content to an external format (DEB operation).

RECOVERY—None. Implies software problem.

FAILURE

DEFINITION—Could not initiate, something wrong with request; possibly too large, definition of CDS has too many parameters (DEB operation).

FILE DOESNT EXIST @

DEFINITION—Named file does not exist in specified volume (DEB operation).

RECOVERY—Check your pathname(s), volume used, file name (spelling and suffix), check that you have the right removable medium mounted in the correct drive, and try again.

FILE NOT FOUND

RECOVERY—You can press the <ESC> key and list the files in the directory, then press <CTL><HELP> to return to the Picture Editor (Picture Editor build-time message).

***** FILE TOO LARGE TO DISPLAY-PRINT IT *****

DEFINITION—Evident (DEB prompt).

FILE STORAGE EXCEEDED FOR VIRTUAL VOL: ----

RECOVERY—Reduce the size of the virtual volume (CONF operation).

FIRMWARE REVISION MISMATCH

DEFINITION—At least one board in the loading node has firmware that is not up to the minimum revision required for that board.

RECOVERY—Ensure all firmware revisions are at the minimum revision or greater. Minimum revisions are listed in the NCF file and can be obtained through SMCC.

FLOPPY NUMBERS MAY RANGE FROM 1 TO 20 AND MAY NOT BE DUPLICATED IN A CONSOLE

RECOVERY—Help message (CONF operation).

FLOPPY REMOVED DURING FILE UPDATE @

DEFINITION—The volume was dismounted (that is, floppy removed by hardware error). The files were automatically closed (CONF operation).

RECOVERY—Retry operation leaving floppies in drive.

FUNCT LVL ERR

DEFINITION—Type of request not valid for point requested (this probably means a programming bug has been uncovered in DEB operation).

FUNCT SET QUALIF

DEFINITION—Internal only (bug in DEB operation).

FUNCTION IS ONLINE

DEFINITION—HM history functions (On-process Analysis, Journal Manager, etc.) are operational. The object state is set to OK (HM Detail Node message).

FUNCTION LEVEL

DEFINITION—Internal only (bug in DEB operation).

FUNCTION NOT IMPLEMENTED

DEFINITION—A spare ("empty") selection box or main menu has been selected (DEB operation).

FUNCTION REQUEST NOT IMPLEMENTED

DEFINITION—This occurs when an attempt is made to request an OPR function on a non-intersection EP node.

FUNCTION SET

DEFINITION—Function set doesn't exist (DEB operation).

RECOVERY—Re-enter correctly.

FUNCTIONALLY DISABLED

DEFINITION—A history function has encountered a disk error, and shut itself down. The object state is set to SEVERE (HM Detail Node message).

GDF DATA TYPE DOES NOT MATCH LOADED/STORED DATA TYPE

DEFINITION—For a parameter, the type of data in the box when reconstituted does not match its type as defined in GDF (DEB operation).

RECOVERY—Database inconsistent with current GDFs.

HARDWARE REVISION MISMATCH

DEFINITION—At least one board in the loading node has hardware that is not up to the minimum revision required for that board.

RECOVERY—Ensure all hardware revisions are at the minimum revision or greater. Minimum revisions are listed in the NCF file and can be obtained through SMCC.

HEAP DRAM THRESHOLD EXCEEDED BY----- WORDS

RECOVERY—Reduce the number of URCs (CONF operation).

HI LIM: @@ LO LIM: @@

DEFINITION—Gives correct high and low limit values (DEB operation).

HISTORY WILL BE LOST

DEFINITION—For Release 510 and later systems, when loading a history group, if any point currently historized by the group would be deleted from the group as a result of the load, a warning is issued. The complete message identifies the unit number (xx) and group number (n): \$CHxx(n) HISTORY WILL BE LOST - Press <F5> Overwrite To Continue If Desired.

RECOVERY—You can cancel the operation or press function key F5 to overwrite and continue.

HIWAY ACCESS FAL

DEFINITION—Indicates that values expected by the HG were unavailable from the hiway.

RECOVERY—Check for a problem with the data hiway. May be caused by software problem.

HIWAY FAILURE

DEFINITION—Request cannot be executed because of data-hiway failure.

RECOVERY—Correct the data hiway problem.

HIWAY NUMBER MAY RANGE FROM 1 TO 20 AND MUST BE UNIQUE ON THE NETWORK

RECOVERY—Help message (CONF operation).

HM CHECKER FOUND ERRORS. SEE NCF.ER FILE

DEFINITION—This message means that you have configured values for an HM function or file space that have exceeded the limits of the HM.

RECOVERY—Select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Print the NCF.ER file. Correct any errors reported by repeating, as required, Tasks 7-15 in the *System Startup Guide*. This action reconfigures &ASY and then initializes all HMs to the new &ASY data. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM CHECKER RUNNING

RECOVERY—Wait until the HM Checker is finished (CONF operation).

HM CHECKPT. DISK ERR, AUTO Cpn INTERVAL SET TO 4 HOURS

DEFINITION—An error was encountered while reading the Checkpoint Interval Definition file during node startup (HM Detail Node message).

RECOVERY—Repair or replace the disk drive containing the Checkpoint Interval Definition file.

HM DISK ERROR ON STARTUP

DEFINITION—Disk error occurred on History Module during startup procedure. The object state is set to SEVERE (HM Detail Node message).

HM DISK DRIVE INVALID DEVICE TYPE

DEFINITION—Pinning for SPC interface pinned for cartridge drives (removable media), which is an invalid type for fixed media (HM).

RECOVERY—Repin the SPC interface for correct media.

HM INITIALIZATION ALREADY RUNNING

DEFINITION—Someone at another US has started initialization of the HM that you are working on.

RECOVERY—Find out who should be initializing the HM. If it is you, press the HM's reset button until you get HM status of POWER ON on the System Status display at the US and then repeat Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION CAN'T RUN DUE TO HM COMM ERROR

DEFINITION—This error is caused by corruption of the HM Initialization Personality program after it has been loaded into the HM.

RECOVERY—Initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION CAN'T RUN DUE TO HM PRODUCE ERROR

DEFINITION—This error is caused by corruption of the HM Initialization Personality program after it has been loaded into the HM.

RECOVERY—Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION CAN'T RUN DUE TO HM REVIEW ERROR

DEFINITION—This error is caused by corruption of the HM Initialization Personality program after it has been loaded into the HM.

RECOVERY—Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION CAN'T RUN DUE TO HM REVIEW TIMEOUT

DEFINITION—This error is caused by corruption of the HM Initialization Personality program after it has been loaded into the HM.

RECOVERY—Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION COMPLETE

RECOVERY—None needed (CONF operation).

HM INITIALIZATION NOT COMPLETE DUE TO FILE MANAGER ERROR-RELOAD HM-INIT

DEFINITION—This error may be caused by a software design error, corruption of the HM Init personality that was loaded from some source, or by a bad Winchester disk that was the source of that load. Note that this error was reported by the HM indicated by the node number printed out with the message on the Real Time Journal.

RECOVERY—

1. Reset the failed HM until it shows a status of POWER ON on the System Status display.

2. Use the factory-supplied floppy labeled &HMI or the cartridge that contains &HMI and repeat Task 14 in the *System Startup Guide*. This loads the HM Init personality from a floppy/cartridge disk, not from the Winchester disk. Then repeat Task 15 to initialize the HM. If the error message does not reappear, the HM's Winchester disk, from which the HM Init personality was loaded just before the error message appeared, may be bad. Have HVTS run on the HM that was the source of the HM Initialization Personality (&HMI) loaded to the HM that gave the original error.

HM INITIALIZATION NOT COMPLETE DUE TO ABORT REQUEST

DEFINITION—This message is usually caused by someone issuing a request to abort HM Initialization from another US on the network.

RECOVERY—Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT COMPLETE DUE TO INIT FAILURE

DEFINITION—This error may be caused by a software design error or by trying to initialize an HM that has power to its Winchester disks turned off or that has the HM on-process personality loaded.

RECOVERY—

1. If you attempted to initialize the wrong HM, go to step 2, otherwise check that power is on to both the HM chassis and to the HM's Winchester disks. Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
2. If you erroneously tried to initialize an HM with the HM on-process personality loaded and running, restart that HM by performing steps 16.140-16.170 in Task 16 of the *System Startup Guide*. Reset the HM you really wanted to initialize until it shows a status of POWER ON; then initialize that HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT COMPLETE DUE TO INTERNAL ERROR - RELOAD HM INIT

DEFINITION—The HM being initialized shows a status of "FAIL : HM" and the error message above is printed out on the Real Time Journal.

RECOVERY—

1. Push the Reset button on the failed HM until the HM shows a status of POWER ON on the System Status display at the US.
2. Initialize the HM by repeating system start up Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT COMPLETED WITHIN 1 MINUTE (REVIEW)

DEFINITION—The Network Configurator timed out waiting for a response from the HM Initialization personality in the HM.

RECOVERY—

1. Push the Reset button on the failed HM until the HM shows a status of POWER ON on the System Status display at the US.
2. Initialize the HM by repeating system start up Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT COMPLETED WITHIN 100 MINUTE TIMEOUT PERIOD

DEFINITION—This error is caused by the inability of the HM Initialization personality to properly format the HM's Winchester disks.

RECOVERY—

1. Push the Reset button on the failed HM until the HM shows a status of POWER ON on the System Status display at the US.
2. Initialize the HM by repeating system start up Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT INITIATED DUE TO INACCESSIBLE NCF

DEFINITION—The HM you are trying to initialize cannot access the NCF from your primary &ASY floppy or cartridge disk or from the System HM.

RECOVERY—

1. Make sure that power is on for the floppy/cartridge drive or to the System HM (both chassis and disk power) that contains &ASY. If power is on, go to step 2. If power is off to the System HM, turn the power on and wait until the System HM autoboots and shows a status of OK. Initialize the other HM by repeating Tasks 14 and 15 in the *System Startup Guide*.
2. To check that the NCF exists and is accessible, select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. If &ASY is on floppy or cartridge disk, key in a command of CAT \$F?>&ASY>NCF where "?" is the floppy/cartridge drive number. If, however, &ASY is on the System HM, key in a command of CAT PN:nn>&ASY>NCF where "nn" is the node number of the System HM. Then press <ENTER>. If NCF.CF lists out as being on the &ASY media, go to step 6, else go to step 3.
3. Use your backup copy of the latest version of &ASY as the network data source and initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If you have a backup copy of &ASY and the HM initializes with it, go to step 4, else go to step 7.
4. If you are successful in initializing the HM using &ASY from your backup floppy or cartridge, there is either a problem with the &ASY you were originally using or there is a problem with the System HM. If you were accessing &ASY from floppy or cartridge when the error message first occurred, make a copy of your backup &ASY floppy/cartridge and label your primary &ASY copy as being unusable. If you were accessing &ASY from the System HM when the error message first appeared, go to step 5.
5. To eliminate the possibility of a bad Winchester disk surface on the System HM that holds NCF.CF, rename the System HM's NCF.CF file and recopy NCF.CF from your backup copy of the &ASY floppy or cartridge disk according to Task 16 in the *System Startup Guide*. Initialize the HM

that originally gave the error message by repeating Tasks 14 and 15 in the *System Startup Guide*. If the HM initializes, go to step 6, else go to step 7.

6. Log that HVTs should be run on the System HM at some future date. After HVTs has been run, the System HM must be reconfigured by repeating Tasks 12-17 in the *System Startup Guide*.
7. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT INITIATED DUE TO INVALID NCF

DEFINITION—The HM you are trying to initialize detected invalid data in the NCF being accessed from the floppy/cartridge or from the System HM.

RECOVERY—

1. Press the reset button on the HM until its status is equal to POWER ON. Initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the HM does not initialize or the error message reappears, go to step 2.
2. To eliminate the possibility that the NCF data is corrupted on the System HM, insert your latest backup copy of &ASY on floppy or cartridge disk into the appropriate drive and copy it to the System HM. Press the reset button on the HM that you were trying to initialize when the error message first appeared. Do this until the HM's status is equal to POWER ON on the System Status display at the US. Initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the HM does not initialize and the error recurs, go to step 3.
3. To eliminate the possibility of a bad Winchester disk surface on the System HM, rename the NCF.CF file on the System HM and then recopy NCF.CF from your latest backup copy of &ASY floppy or cartridge disk onto the System HM. The rename eliminates the use of disk sectors that could be bad. If the rename and copy does not cure the problem, go to step 4. If the rename and copy cures the problem, log that at some future date the System HM needs to be reformatted and reinitialized and have the appropriate software copied to it. Press the reset button on the HM that you were trying to initialize when the error message first appeared. Do this until that HM's status is equal to POWER ON on the System Status display at the US. Initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 4.
4. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT INITIATED DUE TO NETWORK COMM ERROR

DEFINITION—This error is usually caused by the failure of a HM other than the one you are trying to initialize.

RECOVERY—

1. First, check to see if any HM other than the one you are trying to initialize has failed. If so, restart that HM.
2. Initialize the HM that you were trying to initialize when the error first occurred by repeating Tasks 14-15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION NOT INITIATED, HM VALIDATION FAILED - CHECK FOR HM MISMATCH

DEFINITION—When any HM begins initialization, all HMs in the network are checked for an HM mismatch. HM mismatch occurs whenever there is a difference between how an HM's LOC NVCF indicates that the HM is currently configured and how the NCF.CF on the &ASY floppy/cartridge disk or on the System HM indicates that the HM is configured.

RECOVERY—

1. Retry the HM Initialization by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 2.
2. Did you initialize and/or restart all HMs after making changes to the NCF on the &ASY volume? If you did, go to step 3. If you didn't, restart any HMs whose volume configuration was not changed on the NCF and initialize any HMs whose volume configuration was changed. Restart according to Task 16, at steps 16.140-16.170, in the *System Startup Guide*, and initialize according to Tasks 14 and 15 in the same document. If the error message reappears, go to step 3.
3. Is the &ASY volume being used on floppy or cartridge disk? If not, go to step 4. If you do not have a backup copy of the &ASY floppy/cartridge, go to step 5. If you have a backup copy, replace &ASY in the drive and initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the HM still does not initialize, go to step 5.
4. For each HM that shows a status of OK, check that the volume configuration file, LOC NVCF, is not corrupted by copying each HM's LOC NVCF to floppy or cartridge disk. Select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Key in the following CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> where "nn" is the HM's node number, "np" is the HM's node-pair number, "?" is the floppy/cartridge-drive number, and "VVVV" is the Volume-ID that LOC NVCF is to be copied to. Press <ENTER>. If each HM's LOC NVCF copies to floppy/cartridge without error, go to step 6, else go to step 5.
5. Be aware that running HVTS next destroys all data on the HM. Have HVTS run on the HM that would not copy to floppy/cartridge. Then initialize the HM by performing Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 6.
6. Before performing this step you may wish to collect data according to the *System Maintenance Guide*, subsection 3.3.2 (paper document). and call Honeywell for assistance. This step requires you to start up most of your system again. If you choose to continue, save checkpoints for all nodes and boxes to floppy or cartridge disk. Copy all user files from your System-HM to floppy or cartridge disks. Start-up your system again by repeating Tasks 1-17 in the *System Startup Guide*.

HM INITIALIZATION NOT INITIATED, HM VALIDATION FAILED - OTHER THAN HM MISMATCH

DEFINITION—An HM's memory may temporarily be exhausted or the LOC NVCF file that is supposed to be on the HM may be inaccessible.

RECOVERY—

1. Check to see if HM's memory was temporarily exhausted. Retry HM initialization by repeating Tasks 14-15 in the *System Startup Guide*. If the error message reappears, go to step 2.
2. For each HM that shows a status of OK, check that the volume configuration file, LOC NVCF, is not corrupted by copying each HM's LOC NVCF to floppy or cartridge disk. Select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Key in the following: CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> where "nn" is the HM's node number, "np" is the HM's node-pair number, "?" is the drive number, and "VVVV" is the Volume-ID that LOC NVCF is to be copied to. Press <ENTER>. If each HM's LOC NVCF copies without error, go to step 4, else go to step 3.

3. Be aware that running HVTS next destroys all data on the HM. Have HVTS run on the HM that would not copy to floppy/cartridge, then initialize the HM by performing Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 4.
4. Collect data concerning the problem using the *System Maintenance Guide*, section 3.3.2 (paper document).

HM INITIALIZATION PARTIALLY COMPLETE, HALTED DUE TO ERROR FOUND IN NCF

DEFINITION—This error is usually caused by this HM's volume-configuration parameters in NCF.CF file in &ASY on floppy/cartridge disk or on the System-HM exceeding the capacity of this particular HM.

RECOVERY—

1. Make sure all Winchester disks on this HM are properly connected and powered up. Initialize the HM by repeating Task 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 2, else go to step 3.
2. Using the backup copy of the latest &ASY floppy or cartridge disk, initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 2, else go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM INITIALIZATION RUNNING

RECOVERY—Wait for the HM INITIALIZATION COMPLETE message.

HM LOCAL NETWORK CONFIGURATION FILE (NVCF) IS NOT ACCESSIBLE

DEFINITION—The local NVCF file may be corrupted. The NVCF is the Network Volume Configuration File that holds data built from the configuration data previously entered and written to &ASY during Network Configuration. NVCF data defines a given HM's functions, volumes, and volume sizes. Note that this error was reported by the HM indicated by the node number printed out with the message on the Real Time Journal.

RECOVERY—

1. To check that the HM's volume configuration file, LOC NVCF, is not corrupted, select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. Key in a copy command of CP PN:nn>!9np>LOC NVCF.MM \$F?>VVVV>LOC NVCF> where "nn" is the HM's node number, "np" is the HM's node pair number, "?" is the floppy/cartridge drive number, and "VVVV" is the Volume ID that LOC NVCF is to be copied to. Press <ENTER>. If the HM's LOC NVCF copies to floppy/cartridge without error, go to step 3, else go to step 2.
2. Running HVTS next destroys all data on the HM. Run HVTS on the HM to reformat the Winchester disks, then initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 3.
3. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

IDB BUSY

RECOVERY—Internal only (bug in DEB operation).

IDB ID

RECOVERY—Internal only (bug in DEB operation).

IDB NOT BUILT

RECOVERY—Internal only (bug in DEB operation).

IDB VALBUF CONS

RECOVERY—Internal only (bug in DEB operation).

IDF @ REPACKED - FILE HAS @ WORDS AFTER REPACK

DEFINITION—Status of IDF file "@" after repack operation (DEB operation).

IDF @ USAGE - FILE HAS @ WORDS TOTAL

DEFINITION—Gives the total size of IDF file (DEB operation).

IDF FULL @ - REPACK OR START A NEW IDF

DEFINITION—A maximum of 255 points can be saved in an IDF (DEB operation).

RECOVERY—NOTE—Watch size when using HM so that IDF can be backed up to floppy or cartridge. IDF should preferably be 1000-1500 sectors in size.

IDF MAY HAVE BEEN CORRUPTED @

DEFINITION—Data in the IDF file "@" is inconsistent and/or flagged as corrupted. A floppy, cartridge, or HM failed during IDF "WRITE" operation (DEB operation).

RECOVERY—Read each point from IDF into DEB PED, check if OK and rewrite to IDF.

IEEE CONVERT ERROR

DEFINITION—HG unable to convert MC "numeric" value to IEEE floating point format.

RECOVERY—Contact Honeywell IAC Engineering.

ILL COUNTR STATE

DEFINITION—Attempt to either change AVFORMAT or RESET a timer while the counter or MC analog input with accumulation point is running.

RECOVERY—Stop the counter or accumulator.

ILL TIMER STATE

DEFINITION—Attempt to either change the preset or reset a timer while it is running.

RECOVERY—Stop the timer.

ILLEGAL ADD OPERATION

DEFINITION—Add with no operand or add with a bad option (Picture Editor build-time message).

ILLEGAL BAR DESCRIPTION

DEFINITION—(Picture Editor build-time message).

ILLEGAL BEHAVIOR

DEFINITION—(Picture Editor build-time message).

ILLEGAL CHAR IN TEXT @

DEFINITION—Non-printable character in text file (DEB operation).

RECOVERY—Make sure using right file for input to print command.

ILLEGAL CHARACTER IN TIME OR DATE

RECOVERY—Correct time or date field (DEB operation).

ILLEGAL CHECKPOINT PHYSICAL NODE TYPE: ----

RECOVERY—Check checkpoint-volume configuration (CONF operation).

ILLEGAL COORDS ON COMMAND LINE

DEFINITION—Coordinates cannot be negative (Picture Editor build-time message). Example: SEL -10
-10 1000 1000

ILLEGAL COPY OPERATION

DEFINITION—You must have a “from” and a “to” select points (Picture Editor build-time message).

ILLEGAL DEFINE OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL DELETE OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL ENTRY

DEFINITION—Usually caused by a typo or a wrong command (Picture Editor build-time message).
Example: E S SUB1 SUB1 should be RE S SUB1 SUB2

ILLEGAL FILE NAME

DEFINITION—COM with Path that omitted filename (Picture Editor build-time message). Example:
NET>PICS.

ILLEGAL FORMAT FOR EXPRESSION

DEFINITION—(Picture Editor build-time message).

ILLEGAL MODIFY OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL MOVE OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL OPTION

DEFINITION—The character(s) following the command name are not legal for that command (Picture Editor build-time message).

ILLEGAL PAGE NUMBER

DEFINITION—(Picture Editor build-time message).

ILLEGAL PALETTE NUMBER

DEFINITION—Legal Palette numbers are 0 – 16 (Picture Editor build-time message).

ILLEGAL PATHNAME

DEFINITION—Name too large or doesn't follow Pathname conventions (Picture Editor build-time message).

ILLEGAL PRINT OPTION

DEFINITION—(Picture Editor build-time message).

ILLEGAL PROMPT QUESTION

DEFINITION—(Picture Editor build-time message).

ILLEGAL RECORD IN ABSTRACT

DEFINITION—(Picture Editor build-time message).

ILLEGAL REPLACE OPERATION

DEFINITION—You must specify an old subpicture (SUB1) and a new subpicture (SUB2) (Picture Editor build-time message). Example: RE S SUB1 SUB2

ILLEGAL SCALE FACTOR ENTERED

DEFINITION—(Picture Editor build-time message).

ILLEGAL SCALE OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL SELECT OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL SET OPERATION

DEFINITION—(Picture Editor build-time message).

ILLEGAL SUBPICTURE NAME

DEFINITION—(Picture Editor build-time message).

ILLEGAL TARGET ACTION

DEFINITION—(Picture Editor build-time message).

ILLEGAL TARGET SHAPE

DEFINITION—(Picture Editor build-time message).

ILLEGAL TYPE

DEFINITION—(Picture Editor build-time message).

ILLEGAL TYPE FOR INDEX

DEFINITION—(Picture Editor build-time message).

ILLEGAL USE OF WILD CARD

DEFINITION—(Picture Editor build-time message).

ILLEGAL VALUE

DEFINITION—Value is out of range or otherwise improper (AM) or an enumeration value entered for a parameter is illegal under the current conditions of the point (HG).

RECOVERY—Enter a legal value.

ILLEGAL VARIABLE

DEFINITION—This error can result from several causes:

- A syntax problem: IF INT01 >> INT02 THEN SET RED
- A user DDB file was not loaded before compiling
- In a subpicture, the type of a generic value was changed (&TAG.parameter) but other occurrences of the former type still exist (Picture Editor build-time message)

ILLEGAL VERB

DEFINITION—(Picture Editor build-time message). Example: SP PICT (SP is not a PE command. S(space)P is required)

ILLEGAL VIRTUAL VOLUME IDENTIFICATION: ----

RECOVERY—Rename the virtual volume (CONF operation).

ILLOGICAL CONDITION @

DEFINITION—An unresolvable software condition detected; '@' is a number code (DEB operation).

RECOVERY—Contact Honeywell TAC. Give condition number, operation in progress, copies of files used.

INCOMPATIBLE OPERAND TYPES

DEFINITION—(Picture Editor build-time message).

INCOMPLETE INFORMATION - CANNOT LOAD DATA FOR @

DEFINITION—Errors in data or missing data (DEB operation).

RECOVERY—Correct/complete entity data in PED.

INCORRECT ACTOR USAGE

DEFINITION—(Picture Editor build-time message).

INCORRECT USE OF VERTICES

DEFINITION—(Picture Editor build-time message).

INDETERMINATE KERNEL ERROR OCCURRED

DEFINITION—Used for certain MMI Kernel errors occurring during display invocation.

INDETERMINATE SOFTWARE ERROR OCCURRED

DEFINITION—This message is invoked by several contexts when an error occurs. There is no easy way to distinguish which context called it.

INHIBIT STATUS

DEFINITION—Internal error (bug in DEB operation).

INIT & TRK EXCL

DEFINITION—Attempt to change the setpoint with both INITCONF and PVTRACK "turned on."

RECOVERY—If a setpoint change is still desired, change the point configuration so that either INITCONF = NOINIT or PVTRACK = NOTRACK.

INIT ERR

DEFINITION—Requested action cannot be performed while the point is undergoing initialization.

RECOVERY—Get the point out of initialization.

INIT ERROR

DEFINITION—The selected parameter cannot be changed because the point is in initialization mode (Picture Editor run-time message).

INITIALIZATION

DEFINITION—Selected parameter cannot be changed with point in current mode (Picture Editor run-time message).

INITIALIZED

DEFINITION—Point parameter has never been processed, (for example, PV on a point asked for immediately on startup) (DEB operation).

INP & OUT REQUIR

DEFINITION—Attempt to set a digital alarm format of a digital input point to command disagree (DIGALFMT = CMDDIS). Allowed only with digital composite points.

RECOVERY—Enter a valid digital alarm format.

INSUFFICIENT INFORMATION—CANNOT LOAD DATA FOR (entity)

Data was missing from the PED set when an attempt was made to load the data.

Go back to the PED Status Display (CTL/F8). Find the PED display that has missing data, key in the missing data, and press ENTER. When the PED status line indicates no errors and no missing data, retry the Load command.

INSUFFICIENT INFORMATION TO WRITE THIS DATA

DEFINITION—An entity name needs to be supplied to do a write (DEB operation).

RECOVERY—If this is a data point, at least the entity name must be entered. If this is a reserved entity, enough information must be entered to identify which entity it is. The first few parameters are enough. Enter entity name on page 1 of PED and ENTER. If no entity name requested, complete unit, area, hiway, and box data as appropriate and ENTER.

INSUFFICIENT MEM

DEFINITION—No working memory available (DEB operation). In the NIM, this could mean that all 8000 points are already implemented.

RECOVERY—Try again.

INTEGER NUMBER RANGE IS-32768 TO 32767œ

DEFINITION—Out-of-range value (DEB operation).

RECOVERY—Correct value.

INTEGER TYPE EXPECTED

If in a target, most common cause: forgot to do a get integer (Picture Editor build-time message). An actor requires an integer value (Picture Editor run-time message). This error is often seen when using an actor like R_INT, RS_LOC, or RS_SYS.

INTERNAL DISPLAY INVOCATION ERROR

DEFINITION—This signals an internal MMI Kernel error, and is a fatal return from invoking a display routine.

INV BOX STATUS

DEFINITION—Box state conflicts with the request.

RECOVERY—Check the box state for RESET, IDLE, etc., and set to the appropriate state.

INV CHARZTN TYPE

DEFINITION—Indication of database corruption in a hiway box.

RECOVERY—Contact Honeywell IAC Engineering.

INV CTL ALGO

DEFINITION—Selected control algorithm is not valid for current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV CTL ALGO ID

DEFINITION—Selected control algorithm is not valid (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV DB INDEX

DEFINITION—Indication of software error.

RECOVERY—Contact Honeywell IAC Engineering.

INV DEST POINTID

DEFINITION—The destination parameter tag name is not valid or the process point is "not fully configured" due to configuration error.

RECOVERY—Specify a valid tag name or rebuild tag.

INV MODE ATTR

DEFINITION—The source of the requested action is not valid (operator, program, etc.). Selected parameter cannot be changed with point in current mode.attribute (Picture Editor run-time message).

RECOVERY—Check AM Algorithm Engineering Data.

INV NO CTL INPTS

DEFINITION—Number of control inputs is not valid for the current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV NO CTL OUTPUT

DEFINITION—Number of control outputs is not valid for current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV NO PV INPUTS

DEFINITION—Number of PV inputs is not valid for the current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV PV ALGO

DEFINITION—Selected PV algorithm is not valid for current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV PV ALGO ID

DEFINITION—Selected PV algorithm is not valid (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV RBOPT

DEFINITION—Selected ratio/bias option is not valid (AM).

RECOVERY—Check Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data. Rebuild point.

INV STRUCT PAR

DEFINITION—Software error (AM).

INV TARGET STATE

DEFINITION—Target value processor state is not valid for the requested action (AM).

RECOVERY—Set the target value processor to the proper state. See the *AM Algorithm Engineering Data*.

INVALID

DEFINITION—An invalid entry was input (Picture Editor run-time message).

INVALID ALGO EQU

DEFINITION—Software error (AM).

INVALID CONTROL ITEM

DEFINITION—Specified control line "& " invalid. The Exception Build command found "&" in the source file, followed by an illegal character (DEB operation).

RECOVERY—Check your source file. The valid control items are &T, &X, &M, &V, &C, and &E. Correct the control line.

INVALID CTL ALGO

DEFINITION—Software error (AM).

INVALID DATA TYPE

DEFINITION—The data type of the parameter does not match the actor that is using it (Picture Editor run-time message). This can happen for the following reasons:

- A point that the schematic references has been deleted.
- A point has been deleted and loaded back without recompiling the schematic that references the point.
- UNKNOWN was used for the data type of a generic variable (&A.PV), but the actual type does match the actor that is using it.
- An invalid index is used when referencing an element of an array.

INVALID DEST PAR

DEFINITION—The destination parameter specified is not valid for current configuration (AM).

RECOVERY—Check Application Module Forms and Forms Instructions.

INVALID DEVICE VARIABLE

DEFINITION—During execution of a DEB Command File, an invalid device declaration was encountered. Device declarations must be one of V1 through V50 or P1 through P10.

INVALID ENTITY NAME

DEFINITION—The EI_ENT actor checks that the string name is a valid entity name (Picture Editor run-time message).

INVALID ENTRY

DEFINITION—Data entered was not valid (Picture Editor run-time message).

INVALID IDENTIFIER

DEFINITION—A reference was made to an illegal identifier, such as \$PRSTS- - (Picture Editor run-time message).

INVALID KEY : CANNOT DELETE PAGE ONE DATA (PICTURE EDITOR BUILD-TIME MESSAGE). PRESS <ENTER> TO CONTINUE

DEFINITION—This applies to R400 and later where targets, conditions, and variants have more than one page.

INVALID MODE

DEFINITION—Current mode is not valid for the requested action (AM).

RECOVERY—Check the AM Algorithm Engineering Data.

INVALID MODE

DEFINITION—Selected parameter cannot be changed with point in current mode (Picture Editor run-time message).

INVALID PV ALGO

DEFINITION—Software error (AM).

INVALID ENTITY INDEX FOR @

DEFINITION—Entity index value out-of-range (DEB operation).

RECOVERY—Correct index value.

INVALID ENTRY

DEFINITION—Data used is not valid for this parameter (DEB operation).

RECOVERY—Use help information to see data form.

INVALID PATHNAME @

DEFINITION—Pathname that does not conform to standard pathname syntax (DEB operation).

RECOVERY—Correct pathname to desired file.

INVALID PATHNAME SUFFIX @

DEFINITION—Specified suffix incorrect for use specified (DEB operation).

RECOVERY—Correct suffix of file name or remove and allow DEB to internally set suffix.

INVALID POINT REALM (R610)

DEFINITION—The specified point realm is not valid. Valid point realms are AM, HG, NIM and CIU. Point types may not be specified until a point realm has been identified. Caret (^) position indicates where error has occurred.

```
SrcFileLineNumb: 0006
LS V1>DEMOX.EL 88 07 SWITCH
                        ^
```

INVALID POINT REALM

INVALID POINT TYPE (R610)

DEFINITION—The specified point type is not one of the point type choices for the specified point realm. Caret (^) position indicates where error has occurred.

```
SrcFileLineNumb: 0010
LS V1>DEMOX.EL 88 07 AM HG
                        ^
```

INVALID POINT TYPE

INVALID TIME OR DATE

DEFINITION—Data or time data entered is invalid in value or form (DEB operation).

RECOVERY—Use help to see proper format.

INVESTIGATE CORRUPTED WINCH DISC DR

DEFINITION—A corrupted volume was detected in the disk drive. If a redundant drive does not exist, all volume data may be lost (HM Detail Node message).

RECOVERY—Report situation to hardware engineer.

INVESTIGATE DEGRADED WINCH DISC DR

DEFINITION—A hard disk error has been encountered for one or more files. The volume and file name where the error is located on the drive is displayed. The maintenance recommendation message provides the error's sector address (HM Detail Node message).

IOL PF TBL FULL

DEFINITION—The PM Input/Output Prefetch Table is Full. This is returned by the PED when attempting to load a logic point that is referencing an excessive number of PM IOP parameters. The maximum is 4.

RECOVERY—Use HELP screen or/and refer to the Logic Input Connections subsection, of the Configuring the Logic Point section, of the *PM/APM Control Functions and Algorithms Manual*.

IPT&OUT BOX MISM

DEFINITION—Attempt to assign a digital alarm format to command disagree (DIGALFMT = CMDDIS), but the input box (BOXNUM) and output box (OUTBOXNM) numbers are different.

RECOVERY—Assign the same box number to BOXNUM and OUTBOXNM (DEB).

IS NOT PRESENT/POWERED OFF

DEFINITION—Occurs when the on-line HM personality detects power loss to a drive after startup. The object state is set to SEVERE (HM Detail Node Message).

IS OK

DEFINITION—Indicates the disk drive is running without errors. The object state is set to OK (HM Detail Node Message).

IS OFFLINE

DEFINITION—The drive has been set off-line by the operator. The object state is set to SEVERE (HM Detail Node Message).

ITEM ERRORS

DEFINITION—Request successful but individual items have errors (DEB operation).

DEFINITION—Some part of the data is missing or incorrect; for example, if you reference an enumeration that does not exist or a member of the enumeration does not exist (Picture Editor run-time message).

ITEM NO.

DEFINITION—Internal only (bug in DEB operation).

ITEM NOT PROCES

DEFINITION—Cannot reduce the number of CL slots (CLSLOT) for AM Regularoty, Switch, and Custom points. After the point has been loaded, you cannot reduce the number of CLs.

JFP CONVERT ERR

DEFINITION—The HG was unsuccessful in converting IEEE floating-point format to MC "numeric" form.

RECOVERY—Contact Honeywell IAC Engineering.

JOB ID

DEFINITION—Internal only (bug in DEB operation).

JOB QUE DISABLED

DEFINITION—Communication path disabled. Request too soon after startup. Node initialization incomplete (DEB operation).

LMT OR RANGE ERR

DEFINITION—Parameter value exceeds range limit (AM or HG).

RECOVERY—Check range and enter value within range.

DEFINITION—An attempt was made to change the value of a clamped parameter beyond the range limit (Picture Editor run-time message).

LMT OR RNG XOVR

DEFINITION—Limit or range value cross (AM).

RECOVERY—Check limit or range values.

LOAD DIRECTIVE FILE DUPLICATE KEYWORD FOUND:<xxxxxxxxxx>

DEFINITION—While reading the Load Directives, the Application Module found duplicate key words of either: HEAP, STACK, or BKG_STACK. The PhysicalNode object is set to SEVERE (AM Detail Node message).

LOAD DIRECTIVE FILE INCORRECT SIZE ON: <nnnnnnnnnn>

DEFINITION—While reading the Load Directives, the Application Module found the file was the incorrect size. The PhysicalNode object is set to SEVERE (AM Detail Node message).

LOAD DIRECTIVE FILE NUMBER OUT OF RANGE: <nnnnnnnnnn>

DEFINITION—While reading the Load Directives, the Application Module found the file number was out of range. The PhysicalNode object is set to SEVERE (AM Detail Node message).

LOAD DIRECTIVE FILE NOT FOUND

DEFINITION—The external load directive file from the &CLX directory could not be found. The PhysicalNode object is set to FAIL (AM Detail Node message).

LOADING DISPLAYS INTO MEMORY

DEFINITION—This Status Detail Display WARNING message refers to the schematics and Free Format Logs identified as memory resident in the Area Database Pathname Catalog. You can view the results of this loading by doing the following: select the [SYSTEM MENU] target from the Engineering Personality Main Menu, select the [ORGANIZATIONAL SUMMARY MENU] target, select the SCHEMATIC/[FFL TITLES] target, and finally select the [DISPLAY] target. The names in yellow under the heading Title Summary-Schematic FFL have loaded into the station's memory. The names in cyan did not load because

1. The loading is still in progress. This display does not update; it must be recalled to verify additional schematics have loaded, or that the loading is complete.
2. The names were not found in the specified search pathnames
3. There was not enough memory available (R400 limit is 72 Kwords).

LOADING OVERLAY

DEFINITION—Primary function selected on main menu is being loaded to memory (Engineering Personality Environment).

LOCAL NAME CODE

DEFINITION—Internal only (bug in DEB operation).

LOCAL ROUTE CODE

DEFINITION—Internal only (bug in DEB operation).

LOCATION DIFFERS FROM ORIGINAL LOCATION FOR ENTITY @

DEFINITION—Load with overwrite cannot change "owning node" or location of entity in LCN (DEB operation).

RECOVERY—Delete and load if location change desired.

LOGICAL NODE ID

DEFINITION—Internal only (bug in DEB operation).

RECOVERY—Add selection list file.

LOSS OF VIEW. No communications to Native Window

DEFINITION—The COMM object state is set to SEVERE (US Detail Node message). It is an indication that the operator station resources have become “frozen” for a period longer than 10 seconds and a timeout has occurred when a response from the CRT has not been received. This message will appear on all stations on the same console as the “frozen” station.

RECOVERY—The station is “frozen” and is not communicating with the LCN. Use a different station to view and/or control LCN activities.

LOWER CASE LETTERS WILL BE CONVERTED TO UPPER CASE

RECOVERY—Help message (DEB operation).

LOWER RANGE VIOLATION

DEFINITION—Value out of low-limit bound (DEB operation).

RECOVERY—Correct value.

LPN_NVCF.MM FILE ACCESS ERROR

DEFINITION—A startup error occurred while accessing the local NVCF configuration file. The object state is set to FAIL (HM Detail Node message).

RECOVERY—Attempt startup procedure again. If you get this same error for a second time, report situation to the system engineer.

LPN_NVCF.MM FILE INCORRECT FORMAT ERROR

DEFINITION—A startup error occurred while accessing the local NVCF configuration file, and has most likely has been corrupted. The object state is set to FAIL (HM Detail Node Message).

RECOVERY—Initialize the History Module.

LPN_NVCF.MM TO NCF.CF FILE COMPARISON ERROR

DEFINITION—A startup error occurred while accessing the local NVCF configuration file, and indicates that the History Module configuration file does not match the global NCF file (HM Detail Node Message).

RECOVERY—Report situation to the system engineer.

LRC ERR-PNT BLD

DEFINITION—Inconsistent local routing code for point build (DEB). Indicates a software error outside HG.

RECOVERY—Contact Honeywell IAC Engineering.

MAKE ACTIVE

DEFINITION—Point is inactive (AM).

RECOVERY—Change point activity status.

MAX IDB EXCEEDED

DEFINITION—Too many parameter lists selected in building display (max 100) (DEB operation).

MAX SUB PARAMETERS EXCEEDED

DEFINITION—Maximum is 16 formal parameters and 16 user-visible parameters (Picture Editor build-time message).

MAXIMUM NUMBER OF VARIANT LIMBS (90) EXCEEDED

DEFINITION—You have created a variant with too many limbs (or branches) (Picture Editor build-time message).

MEDIA IS NOT MOUNTED OR INITIALIZED

DEFINITION—The media is not inserted or mounted, or during an operation that writes to the removable media, some malfunction caused the disk to be dismounted and the files closed. This could happen if the disk was removed from the drive before a write operation, such as a Multiple Load to an area database file, was completed. This corrupts the data on the disk. The disk should never be removed until the Operation Complete prompt appears.

RECOVERY—Check that the disk is mounted in the drive. You may need to recreate the file that was being written.

MEMORY UNAVAILABLE

DEFINITION—Memory could not be obtained for data structures used by FNPM to process the list of possible sequence program names or to process an individual sequence program.

MISSING CLOSING COMMENT PARENTHESIS

DEFINITION—There are two main reasons for this error inside of conditions, targets, and variants:

1. If you omit the right brace (}) from a comment.
2. If you try to continue a comment across a page break (Picture Editor build-time message).

MISSING ENTITY INDEX

DEFINITION—The entity specified requires an index (DEB operation).

RECOVERY—Specify index.

MISSING SELECTION LIST FILE

DEFINITION—Multiple-operation command required a selection list (DEB operation).

MISSING STRING DELIMITER

DEFINITION—Exception Build source data for string is missing a delimiter (for example, "string data") (DEB operation).

RECOVERY—Recheck your source file. Each parameter change must be separated by at least one space and all user-defined character strings must be enclosed in quotes

MOD/BOX [xx] HWY/UCN [yy] COMBINATION INVALID (R610)

DEFINITION—The combination of MOD/BOX and HWY/UCN is invalid, typically because one or both have not been configured into the system. In this example, 88 is not a value box address.

```
SrcFileLineNumb: 0002
LS V1>DEMOX.EL 88 07
MOD/BOX [88] HWY/UCN [07] COMBINATION INVALID
```

MODE ATTR ERR

Parameter change by requesting source not permitted under current setting of the point's mode attribute (MODATTR).

RECOVERY—Change MODATTR to the desired value (OPERATOR or PROGRAM).

MODE ERR

DEFINITION—Requested action is not allowed in the current mode (AM).

RECOVERY—Check Application Module Forms Instructions, and AM Algorithm Engineering Data. Change mode.

MODE KEYLOCK ERR

DEFINITION—Mode-permission parameter (MODEPERM) is set to NOTPERM, prohibiting operator-access level from changing the operating mode (MODE).

RECOVERY—A higher-access level must be used to change MODE.

MODE NOT ALLOWED

DEFINITION—Requested mode is not supported by the configured algorithm.

MODE NOT LEGAL

DEFINITION—Requested mode is not currently legal (AM).

RECOVERY—Check Application Module Forms Instructions, and AM Algorithm Engineering Data.

MOUNT VOLUME FAILURE @

DEFINITION—Unusual error occurred when attempting to issue the mount volume request (DEB operation).

RECOVERY—If using floppies, open door and reseat floppy. If using cartridges, remove, reinsert the cartridge.

MUST ACCESS ASCS

DEFINITION—Internal error (bug in DEB operation).

MUST CONF INIT

DEFINITION—Changes to certain regulatory point parameters are prohibited when initialization is not configured (INITCONF = NOINIT).

RECOVERY—Set INITCONF = INIT.

MUST CONF TRACK

DEFINITION—Changes to certain regulatory point parameters are prohibited unless tracking is configured (PVTRACK = TRACK).

RECOVERY—Set PVTRACK = TRACK.

MUST DESELECT OBJECT(S) BEFORE ADDING NEW ONES

DEFINITION—You already had an object selected (Picture Editor build-time message).

MUST SCHED PNT

DEFINITION—Point must be scheduled (AM).

RECOVERY—Rebuild the point and select a period other than NOTSCHED.

NAMED ENTITY @ DOESNT EXIST IN FILE @

DEFINITION—IDF "@" does not contain named entity (DEB operation).

RECOVERY—Check file name used.

NAMED ITEM DOESN'T EXIST @

DEFINITION—This parameter does not exist on the point at this time during exception build. This could be because it is not in the template point or because another parameter controls how many of this type of parameter values exist, and that parameter's value has not been changed. (DEB operation).

RECOVERY—Insert &C when starting to change parameters on a new display. Check sequence of the parameters; they should be in the same order as they appear on the form.

NCF FILE I/O ERROR

DEFINITION—There was a problem opening, reading, or closing the NCF file. The file may be corrupt.

RECOVERY—Restore a working copy of the NCF.CF file.

NCF.CF FILE NOT ACCESSIBLE

DEFINITION—The Network Configuration file was not accessible during node startup (HM Detail Node message).

NCF FILE PRINTING

RECOVERY—Wait or abort (hit break key) (CONF operation).

NCF FILE REVISION ERROR

DEFINITION—The NCF file that is attempting to be loaded does not match the current configuration.

RECOVERY—The current NCF file must be used to load nodes.

NCF NOT FOUND ON NET>&ASY

DEFINITION—The NCF file was not found during a cross-console load.

RECOVERY—Ensure that the NCF.CF file exists in the &ASY directory or restore a working copy of the NCF.CF file.

NCF OR LOAD DIRECTIVE FILE SYNTAX ERRORS PREVENT STARTUP

DEFINITION—After external load directive file errors have occurred and the PhysicalNode object is set to the SEVERE state, the PhysicalNode transitions to the FAIL state and displays this message. The Application Module then fails (AM Detail Status message).

NCF WORKING FILE CORRUPTED, DELETE IT

DEFINITION—Bad data is in the file (CONF operation).

RECOVERY—Delete NCF working file.

NETWORK CONFIGURATION FILE CORRUPTED

DEFINITION—Bad data is in the file (CONF operation).

RECOVERY—Replace NCF file from backup copy that you previously saved.

NETWORK CONFIGURATION FILE (NCF) FORMAT IS INCORRECT

DEFINITION—The HM has detected an incorrect file format when attempting to access the Network Configuration File. Note that the HM that reported this error is indicated by the node number printed out with the message on the Real Time Journal.

RECOVERY—

1. To eliminate the possibility that the NCF data is corrupted on the System HM, insert your latest backup copy of &ASY on floppy or cartridge disk into the appropriate drive and recopy it to the System HM. Then go to step 2.
2. Power off and power on the HM that reported the error in the Real Time Journal and check the journal for the same error message. If the error message reappears, go to step 4, else go to step 3 and initialize the HM that reported the error.
3. Be aware that initializing the HM next destroys all data on the HM. Initialize the HM by repeating Tasks 14 and 15 in the *System Startup Guide*. If the error message reappears, go to step 4.

4. To eliminate the possibility of a bad Winchester disk surface on the system HM, rename the &ASY volume on the system HM and then recopy &ASY from your latest backup copy of &ASY on floppy or cartridge disk to the system HM. The rename eliminates the use of disk sectors that could be bad. Power off and power on the HM that reported the error in the Real Time Journal and check the journal for the same error message. If the error no longer exists, log that at some future date the HM that originally gave the error message needs to have HVTs run, be initialized and have appropriate software copied to it. If the rename and copy did not cure the problem, go to step 5.
5. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

NETWORK CONFIGURATION FILE (NCF) NOT ACCESSIBLE

DEFINITION—The HM cannot access the Network Configuration File from either floppy/cartridge disk or the system HM. The HM that reported this error is indicated by the node number printed out with the message on the Real Time Journal.

RECOVERY—

1. Check that power is on to the Winchester disk on the system HM or that the &ASY floppy or cartridge disk is inserted in the proper drive and that power is on for the drive. If power was on as required, go to step 2, else go to step 3.
2. To check that the NCF exists and is accessible, select UTILITIES and then select FILE MANAGER UTILITIES on the Engineer's Main Menu. If &ASY is on floppy or cartridge disk, key in a command of CAT \$F?>&ASY>NCF where "?" is the floppy/cartridge drive number. If &ASY is on the system HM, key in the following command
CAT PN:nn>&ASY>NCF where "nn" is the node number of the system HM. Then press <ENTER>. If NCF.CF lists out as being on the &ASY media, go to step 3, else go to step 5.
3. If NCF is being accessed from your &ASY floppy/cartridge disk, mount your backup copy of &ASY in the appropriate drive and go to step 4. If NCF is being accessed from the system HM, rename NCF.CF on the system HM and copy NCF.CF from your &ASY floppy/cartridge to the system HM and then go to step 4.
4. Power off the HM that reported the error and then power it on. If the error message reappears on the Real Time Journal, go to step 5. If renaming and copying NCF.CF to the system HM fixed the problem, log the fact that HVTs should run on the system HM at some future date. If using the backup copy of &ASY fixed the problem, make a copy of the backup &ASY to a fresh floppy or cartridge and label the original &ASY disk as unusable.
5. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

NEW SUBPICTURE NAME TOO LONG - OVERFLOWS VARIANT TEXT PORT

DEFINITION—Pre-R400, if you replaced a subpicture that had a short name with a subpicture that had a longer name, you could exceed the available space in the port (Picture Editor build-time message).

NIL PTR

DEFINITION—Internal error (bug in CONF operation).

NO BACKWARD DISPLAY

DEFINITION—Display on view is currently seen in total (DEB operation).

NO BASE SEG

DEFINITION—Internal error (bug in DEB operation).

NO BUILD ENTITY TO PRINT

DEFINITION—No parameter entry display to be printed (DEB operation).

RECOVERY—Select a build activity, read an entity from an IDF, or reconstitute an entity from a node.

NO CASE SEL MTCH

DEFINITION—Software error (AM).

NO COMMAND TO EXECUTE - SET UP COMMAND AND ENTER TO EXECUTE FIRST TIME

RECOVERY—Do not use F5 until command has been used once (DEB operation).

NO COMMAND TO RECALL

DEFINITION—No command has been executed since DEB entered.

RECOVERY—Set up proper command and execute once, then use F5 to recall.

NO DISPLAY TO RECALL

DEFINITION—No display command has been used, so no display data exists to recall (DEB operation).

NO DISPLAY TO SPLIT

DEFINITION—No PED on display or created (DEB operation).

NO ENTITIES FOUND IN IDF @

DEFINITION—Attempt to list entities in an IDF found that IDF exists but contains no entities (DEB operation).

NO ENTITIES FOUND IN NODE @

DEFINITION—Attempt to list entities in a node found that no entities were established (loaded) in node (DEB operation).

NO EQUIPMENT LISTS ARE CURRENTLY LOADED

DEFINITION—(Picture Editor build-time message).

NO FORWARD DISPLAY

DEFINITION—Display on view is currently seen in total (DEB operation).

NO LOWER REGION TO PAGE

DEFINITION—Display in DEB has not been split.

NO MATCH FOR SELECTION LIST ITEM

DEFINITION—One or more items in selection list specified could not be found during command execution (DEB operation).

NO OFF NODE REF

DEFINITION—Loading an AM point with a CDS entity parameter containing a tag name unavailable on the system. The missing tag may have been deleted or the data owner is isolated.

NO OF CTLOP ZERO

DEFINITION—Number of control outputs is not valid (AM).

RECOVERY—Check configuration (see Application Module Forms and Forms Instructions, and AM Algorithm Engineering Data). Rebuild point.

NO PARAM. ENTRY DISPLAY STATUS TO RECALL

DEFINITION—PED not established by selecting point type, or reconstituting, or not read in from IDF (DEB operation).

NO PARAM. ENTRY DISPLAY TO RECALL

DEFINITION—PED not set up from point type menu, or reconstituting, or read in from IDF (DEB operation).

NO PNT KNOWN-DO

DEFINITION—Point name exists but point not built (DEB operation).

RECOVERY—Build point.

NO PRIMARY

DEFINITION—A contact cutout rank (CCRANK) of SECONDARY has been assigned without specifying a primary (CCPRIPNT).

RECOVERY—Assign an entity ID to the CCPRIPNT parameter and reload the point.

NO SOPL/TRD RV20

DEFINITION—In MC Revision 20, SOPL memory and trend memory are mutually exclusive.

RECOVERY—Either assign SOPLMEM = NOSOPL or assign BOXTREND = NOTREND and reload the box configuration.

NO VALUE

DEFINITION—The HG has not been able to access the data in one of its data pools. Probable software error.

RECOVERY—Contact Honeywell IAC Engineering.

NO WALKBACK OPTION FROM THIS DISPLAY

DEFINITION—Cannot "walkback" from help or file displays (DEB operation).

NO. OF ELEMENTS

DEFINITION—Internal error (bug in DEB operation).

RECOVERY—Cannot access node, may be down (DEB operation).

NO. OF ITEMS

DEFINITION—Internal error (bug in DEB operation).

NO. OF STORES

DEFINITION—Internal error (bug in DEB operation).

NODE NUMBER ERROR OR INVALID CONSOLE ERROR

DEFINITION—The node being loaded is not configured in the NCF.

RECOVERY—Ensure that the node is showing the proper node number and that the node number is configured appropriately in the NCF.

NODE NUMBER RANGE IS 0 TO 64. A VALID NODE TYPE FOR CHECKPOINT IS REQUIRED.

RECOVERY—Help message (CONF operation).

NODE/UNIT UNAVAILABLE

RECOVERY—Point was not loaded because a checkpoint was currently in progress. Try again in a couple of seconds; probably auto checkpoint save was in progress.

NON RECOV DATA ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming disk errors and provides the operator with data concerning the error type, its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV DEVICE ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming device errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV ERR, 1 CTL TRK - SECTOR XXXXXXXX

DEFINITION—Appears while alarming 1 CTL TRK disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV FAB ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming FAB disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV SAT ERROR - SECTOR xxxxxxxx - vol>filename.ex

DEFINITION—Appears while alarming SAT disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV PDB ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming PDB disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV VVID ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming VVID disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object state is set to SEVERE (HM Detail Node Message).

NON RECOV VVAT ERROR - SECTOR XXXXXXXX - VOL>FILENAME.EX

DEFINITION—Appears while alarming VVAT disk errors and provides operator with data concerning its sector address, and the volume/file name where it was encountered. This data may not be available, and appears only as a journal message. The object set is set to SEVERE (HM Detail Node Message).

NON VISIBLE PARAMETER ERROR

DEFINITION—(Picture Editor build-time message).

NOT A REAL NUMBER

DEFINITION—Contains illegal characters (DEB operation).

RECOVERY—Correct value.

NOT A VALID DATA REALM

DEFINITION—Data realm used in delete of duplicate point is invalid (DEB operation).

RECOVERY—Check spelling of data realm given in duplicate-point error message.

NOT A VALID ENTITY ID @

DEFINITION—Entity name is invalid form or length, or has illegal characters (DEB operation).

RECOVERY—Correct name.

NOT A VALID INDEX

DEFINITION—Not an integer index or index out of bounds (DEB operation).

RECOVERY—Correct index value.

NOT A VALID NAME

DEFINITION—Illegal format, length, or characters in name (DEB operation).

RECOVERY—Correct name.

NOT A VALID NAME COMBINATION FOR NAME.PARAMETER(INDEX) FORM

DEFINITION—Incorrect format, use help (DEB operation).

RECOVERY—Correct value.

NOT A VALID PARAMETER ID

DEFINITION—Specified parameter name cannot be identified with valid system parameters (DEB operation). Using Alter Parameters with an incorrect parameter name.

RECOVERY—Check spelling and use only existing names.

NOT A VALID STATE

DEFINITION—Name of state used is not one of the defined states (DEB operation).

RECOVERY—Use only a defined state name.

NOT A VALID UNIT

DEFINITION—Named unit is not in list of system units (DEB operation).

RECOVERY—Check spelling.

NOT ALL NODES AN

DEFINITION—Not all nodes responded (answered), search is incomplete. Part of network could not be interrogated (DEB operation).

NOT AN INTEGER NUMBER

DEFINITION—Contains illegal characters or fractional part (DEB operation).

RECOVERY—Correct value.

NOT AVAILABLE ON NODE STARTUP

DEFINITION—HM personality detected that drive was not available during node startup process, or the drive may not be present because the node lacks disk redundancy. The object state is set to OK (HM Detail Node Message).

NOT BASE ENT ID

DEFINITION—Internal error (bug in DEB operation).

NOT COMPOS ENTID

DEFINITION—Internal error (bug in DEB operation).

NOT CUST DESC

DEFINITION—Internal error (bug in DEB operation).

NOT ENOUGH MEMORY

DEFINITION—(Picture Editor build-time message).

NOT ENOUGH PHYSICAL MEMORY

DEFINITION—The node does not contain enough physical memory to load the requested personality.

RECOVERY—Ensure all memory boards are in place; add memory if necessary. The user may also try to load a personality that requires less memory.

NOT FREE VARIABLE

DEFINITION—Stores to the local setpoint or the hiway value of regulatory points are permitted only for those algorithms that do not use LSP or HWY for control. These are referred to as free variables and may be used at the operator's discretion.

NOT IN CS

DEFINITION—Parameter doesn't exist in list collected (DEB operation).

NOT LOCAL TYPE

DEFINITION—Internal error (bug in DEB operation).

NOT MAN OR INACT

DEFINITION—Requested change is allowed only when the point is in manual mode or is inactive (AM).

RECOVERY—Change mode or point activity status.

NOT VERIFIABLE

DEFINITION—Internal error (bug in DEB operation).

NOTHING TO CANCEL

DEFINITION—Display on view cannot be canceled (DEB operation).

RECOVERY—Use F1 to restore PED or F9 to return to previous menu.

NOTHING TO CENTER

DEFINITION—The cursor is not between the middle and end of the display on which the cursor resides or the display is fully visible (DEB operation).

NOTHING TO ENTER

DEFINITION—PED not on display (DEB operation).

RECOVERY—Use F1 to return to PED or read data into PED by read, reconstitute, or select a point type.

NOTHING TO INSTALL

DEFINITION—No area database has been set up (CONF operation).

RECOVERY—Configure area database before install.

NOTHING TO LOAD

DEFINITION—No PED data to load (DEB operation).

NOTHING TO PAGE

DEFINITION—Display is fully visible (DEB operation).

NOTHING TO WRITE

DEFINITION—No PED data to write to a file (DEB operation).

NULL CTL ALGO ID

DEFINITION—Control Algorithm must be other than null (AM).

RECOVERY—Check configuration. Rebuild point.

NULL PV ALGO ID

DEFINITION—PV Algorithm must be other than null (AM).

RECOVERY—Check configuration. Rebuild point.

NUMBER INVALID

DEFINITION—Flags, timers, logic blocks, and numerics in the Multifunction Controller are sometimes referred to as internal variables, each with its internal-variable number. This error message is issued when the HG finds one of these numbers out of range, indicating severe HG database corruption.

RECOVERY—The HG must be reloaded with the null database (&HGC) and completely rebuilt.

NUMBER OF VVs PER DISK EXCEEDED:

RECOVERY—Reduce the number of VVs assigned to the HM (CONF operation).

NUMBER OF DISK XFERS/SEC = --IS TOO HIGH

RECOVERY—Reduce the number of URCs (CONF operation).

NUMBER OF FILES EXCEEDED FOR VIRT. VOL: ----

RECOVERY—Reduce the number of files assigned to the virtual volume (CONF operation).

NUMBER OF VIRTUAL VOLUMES EXCEEDED AT: ----

RECOVERY—Reduce number of virtual volumes (CONF operation).

OBJECT(S) ARE NOT SCALABLE

DEFINITION—Subpictures, text, and targets are not selectable (Picture Editor build-time message).

OBJECT(S) INVALID FOR FFLS

DEFINITION—Free format logs can have values, variants, text, and subpictures (Picture Editor build-time message).

OBJECT(S) OFF DRAWING SURFACE

DEFINITION—Object(s) are off the screen to the left or down. Fortunately, when this occurs the compiler selects this object(s) so that it can be moved back into the viewing area (Picture Editor build-time message).

OCCURRENCES EXCEEDED LIMIT FOR HOUR (PFPSHLDT)

DEFINITION—Occurs when the Application Module cannot immediately get data from another node. The node containing the data may be failing over, or a performance problem could be delaying data return. The object state is set to WARNING (Hold Breath Detail Node message).

RECOVERY—Do a performance analysis for all nodes that have values accessed by the Application Module.

OFF NODE ACES ER

DEFINITION—Not able to access parameter from another node (AM).

RECOVERY—Internal error. Check nodes on the net.

OFF-NODE REQUEST ITEMS OVERFLOWED-EXCESS FLAGGED AS COMM ERR

DEFINITION—The number of Off Node requests exceeds 1000 for each point cycle. Object state is set to SEVERE (FPP Off Node Detail Node message).

RECOVERY—Use the schedule dumper to determine which combination of points require too many Off-Node parameters. You may then reschedule points to create a more balanced load.

OFF-NODE REQUESTS APPROACHING MAXIMUM (MEMCVBLM)

DEFINITION—The FPP CVB size is approaching user-configurable limits during the processing cycle. Limits are specified in the MEMCVBLM parameter as configured through the NCF configurator. Object state is set to SEVERE (FPP CVB Detail Node message).

OFF-NODE REQUESTS OVERFLOWED-EXCESS FLAGGED AS COMM ERRORS (FPP CVB)

DEFINITION—The FPP CVB size has exceeded user-configurable limits during the processing cycle. Limits are specified in the MEMCVBLM parameter as configured through the NCF configurator. Object state is set to SEVERE (FPP CVB Detail Node message).

OFF-NODE REQUESTS OVERFLOWED-EXCESS FLAGGED AS COMM ERRORS (IPP CVB)

DEFINITION—This message is the same as the FPP CVB error message, except it acknowledges that the IPP CVB size has exceeded user-configurable limits. Limits are specified in the MIPCVBLM parameter as configured through the NCF configurator. Object state is set to SEVERE (IPP CVB Detail Node message).

OK

DEFINITION—Request successful (various sources).

OK WITH ITEM ERR

DEFINITION—Request successful, some items in list have individual errors (DEB operation).

OPR CHG NOT PERM

DEFINITION—Requested action is keylocked with access level other than Operator (AM).

RECOVERY—Check access level.

OPERATOR ABORTED LOAD

DEFINITION—The operator selected "X" to abort when prompted for input.

RECOVERY—None. The user must start the load process again.

OUT OF FILE SPACE @

DEFINITION—Value "@" has insufficient room to save specified file (DEB operation).

RECOVERY—Use a different volume.

OUT OF MEMORY

DEFINITION—No available free memory (DEB operation).

RECOVERY—Notify Honeywell—record information on operation in progress, data in PED being built, and copies of files used.

OVERLAY FILE ACCESS OR LOADING ERROR, MOUNT TIMEOUT, OR ABORTED

DEFINITION—Error in accessing file, error while reading file, or operator aborted operation at mount value message (Engineering Personality environment).

RECOVERY—If floppy read error, try backup set of floppies.

OVERLAY/PERSONALITY LOGICAL ERROR - REQUESTED OVERLAY NOT SYSGENED

DEFINITION—Should never happen with product. Cause during testing is that special SYSGENS do not include all overlays (Engineering Personality environment).

RECOVERY—Correct SYSGEN to include if overlay is required.

OVERLAY/PERSONALITY VERSION/REVISION MISMATCH-CHECK FLOPPY(S) USED

DEFINITION—Version/revision of overlay file being used does not match required version (Engineering Personality environment).

RECOVERY—Use correct overlay file or reload with known, consistent, personality/overlay floppy or cartridge disk set.

PAR ID ERR

DEFINITION—Parameter does not exist on point specified (DEB operation).

PAR TYPE ERR

DEFINITION—Parameter type is not valid for operation requested, for example, cannot store the parameter "name" (DEB operation).

PARAM ID

DEFINITION—Parameter doesn't exist on point (DEB operation).

PARAM IN INIT

DEFINITION—Ratio or bias are being initialized because of autoratio or autobias (AM).

RECOVERY—Change RBOPTION parameter.

PARAM NOT LOADED

DEFINITION—During point build, a subset of parameters called "structural parameters" is loaded first to the HG. If any of these fails to load, all remaining parameters are not loaded.

RECOVERY—Correct the structural parameter that failed to load and reload the point.

PARAM QUALIFIER

DEFINITION—Parameter not an array, or index out of range or wrong type (DEB operation).

RECOVERY—Rebuild display.

PARAM UNAVAIL

DEFINITION—Cannot find path to point containing parameter; node is down (DEB operation).

PARAMETER @ DOESN'T EXIST ON POINT @

DEFINITION—During exception building, a parameter was found in the source file that was not found in the template point (DEB operation).

RECOVERY—Carefully check your source file. Either an &C item was not provided for the parameters in a PED, or the parameter changes were not specified in the same order as the parameters appearing on the configuration forms and on the PEDs.

PARAMETER CONTENT CONVERSION TO EXTERNAL FAILED

DEFINITION—A reconstituted parameter value in its internal format fails to convert to an external format (DEB operation).

RECOVERY—None. Implies software problems.

PARAMETER ENTRY DATA NOT ENTERED

DEFINITION—ENTER must be hit before any write/load operation (DEB operation).

RECOVERY—Remember ENTER may bring in new data that is NOT entered. Check status of PED (F8).

PARAMETER NOT FOUND

DEFINITION—Specified reference parameter not found on point specified (DEB operation).

RECOVERY—Check parameter used.

PARAMETER UNAVAILABLE FOR CHANGE

DEFINITION—Selected parameter in error file exists on point but is not a "buildable" parameter and cannot be displayed (DEB operation).

RECOVERY—Parameter value automatically set to default value.

PED DOES NOT EXIST

DEFINITION—Tried to "WRITE" to IDF and PED not established (DEB operation).

PERSONALITY NOT FOUND

DEFINITION—Unable to read the personality files from the media.

RECOVERY—Try loading the personality using a different drive or another set of media.

PHYSICAL NODE ALREADY EXISTS -- DELETE NODE FIRST

RECOVERY—Delete node (CONF operation).

PHYSICAL NODE STATE INCONSISTENT -- CORRECT AND TRY AGAIN

RECOVERY—Correct and try again (CONF operation).

PICTURE ABSTRACT OVERFLOW

The schematic is too large (Picture Editor build-time message).

PNT NOT AVAILABLE

DEFINITION—When reloading a box/slot configuration and either the box type or any slot types are changed, the following must be true:

- If changing box type, there must be no process points currently configured to that box.
- If changing a slot type, there must be no process points currently configured to that slot.

RECOVERY—Before changing box type or slot type, delete all process points configured to that box or slot.

PNT NOT ESTABLISH

DEFINITION—Occurs when attempting to call up the detail display for a process point whose point load has failed.

RECOVERY—Correct the point load problems and reload the point.

PNT NOT SECONDRY

DEFINITION—When a contact cutout rank (CCRANK) of secondary is assigned to a point, you must also specify which point is to be its primary (CCPRIPNT). A request to fetch or store CCPRIPNT when CCRANK is not secondary results in this error message.

RECOVERY—Change either CCRANK or CCPRIPNT value to conform to the above requirements and reload the point.

PNT STATUS ERR

DEFINITION—The status of the process point disallows access to the requested parameter.

RECOVERY—Check the hiway status, the box status, and/or the slot status from which the point status is determined.

DEFINITION—The module or box where the point resides has failed; no entry is allowed (Picture Editor run-time message)

PNT TYPE INVALID

DEFINITION—Attempt to load a process point that is not supported by the specified box.

RECOVERY—Check the hiway number and/or box number entered at the DEB.

POINT ACTIVE

DEFINITION—Operation invalid while point is active (DEB operation).

RECOVERY—Change point state.

POINT IN SERVICE

DEFINITION—Operation illegal while point is in service; must take out of service (DEB operation).

POINT PROCESSING OVERRUNS ABOVE LIMIT (IPOVRTHR)

DEFINITION—This message reflects overrun conditions for points run by the Internet Point Processor. A similar error message occurs for a FPP CVB object. The message is displayed when any of the following situations occur:

1. The points scheduled to run in the Application Module exceeds the amount of time available.
2. The number of points with CL has an overload of work.
3. The value prefetched from another node is taking too much time. The object state is set to WARNING (IPP Overrun Detail Node message).

RECOVERY—

1. Check the PFPSEVER parameter to see if it is high. This parameter counts the number of times another node is returning data late. If this parameter is high, part of your problem has been identified.
2. Use the schedule dumper to evaluate point loads.
3. Determine which CLs are taking an excessive amount of time. If there are CLs in this category, consider moving them to the background processor using the background insertion point.

POINT PROCESSING OVERRUNS APPROACHING ABORT LIMIT (AMOVABT)

DEFINITION—This message reflects overrun conditions for points run by the Fast Point Processor, a similar message occurs for an IPP CVB object. The message is displayed when any of the following situations occur:

1. The points scheduled to run in the Application Module exceeds the amount of time available.
2. The number of points with CL has an overload of work.
3. The value prefetched from another node is taking too much time. The object state is set to SEVERE (FPP Overrun Detail Node message).

RECOVERY—

1. Check the PFPSEVER parameter to see if it is high. This parameter counts the number of times another node is returning data late. If this parameter is high, part of your problem has been identified.
2. Use the schedule dumper to evaluate point loads.
3. Determine which CLs are taking an excessive amount of time. If there are CLs in this category, consider moving them to the background processor using the background insertion point.

POINT PROCESSING OVERRUNS EXCEED LIMIT (AMOVRABT)

DEFINITION—The number of overruns has exceeded the AMOVRABT limit. The object state transitions from SEVERE to FAIL, and the Application Module crashes. Refer to the POINT PROCESSING OVERRUNS APPROACHING ABORT LIMIT message for additional information (FPP Overrun Detail Node message).

POSSIBLE NCF CORRUPTION

DEFINITION—An error occurred when trying to open, read, or close the NCF file.

RECOVERY—Restore a working copy of the NCF.CF file.

PREFETCH ITM ERR

DEFINITION—Internal error message that implies an HG software error.

RECOVERY—Contact Honeywell IAC Engineering.

PRINTER NOT CONFIGURED

DEFINITION—The print request could not be honored because the requested printer is not configured (Picture Editor run-time message).

PRINTER NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE

RECOVERY—Help message (DEB operation).

PRINTING STOPPED DUE TO BREAK

DEFINITION—Operator-aborted print (DEB operation).

RECOVERY—None needed.

PRINTING STOPPED DUE TO ERROR RECOVERY

DEFINITION—See companion message for more information (DEB operation).

PRIOR EQ_LIST EXECUTING

DEFINITION—Prior EQ_LIST actor is still processing and not yet finished (Picture Editor run-time message).

PRIOR FUNCTION NOT COMPLETED

DEFINITION—A previous function or activity must complete before another can be started (Picture Editor run-time message).

PROCESSING ENTITY: @(@)

DEFINITION—A generic message displayed during batch operations to track progress (DEB operation).

PROCESS JOURNAL # OF EVENTS = 0 FOR UNIT --.

RECOVERY—Configure the Process Journal for the unit (CONF operation).

PVSOURCE INVALID

DEFINITION—The PV source of a process point must be set to manual before Operator, Supervisor, or Engineer access level requests to store to its PV are accepted. Similarly, the PV source must be set to substituted before Continuous Control or Program access level requests to store to the PV are accepted.

RECOVERY—Change PVSOURCE to the appropriate value.

DEFINITION—Selected parameter cannot be changed with point in current PV source (Picture Editor run-time message).

QUAL TYPE ERR

DEFINITION—Parameter is not an array, or the index supplied is not valid (DEB operation).

READ ONLY PAR

DEFINITION—Stores to this parameter are not allowed.

DEFINITION—The selected parameter is for viewing only and cannot be changed (Picture Editor run-time message).

REAL NUMBER RANGE IS 10\9-1E99

DEFINITION—Value out-of-range (DEB operation).

RECOVERY—Correct value.

REAL TYPE EXPECTED

DEFINITION—If in a target, most common cause: forgot to do a get real (Picture Editor build-time message).

DEFINITION—An actor requires a real value (Picture Editor run-time message). This error is often seen when using an actor like R_REAL, RS_LOC, or RS_SYS.

RECORD NUMBER EXCEEDED 65535 LIMIT

DEFINITION—You have attempted to either open/save an .EB file from the text editor, or to load an EB file using the Exception Build command when the file has more than 64K records.

RECOV DISK DATA ERROR

DEFINITION—A hard disk error was encountered while accessing one or more files. The object state is set to WARNING (HM Detail Node message).

RED TAG

DEFINITION—All output entries are disallowed because the point is “Red-Tagged” (Picture Editor run-time message).

RED TAG ERR

DEFINITION—Attempt to change the output (OP) or the operating MODE (except to manual) while the point is red-tagged.

RECOVERY—If acceptable, change REDTAG = OFF.

RED TAG ON

DEFINITION—Output changes are not permitted while the point is red-tagged.

RECOVERY—Change point state from red tag.

REDUNANCY BUFFER INCREASE <xx> BLOCKS OR MORE MUST BE IN NCF

DEFINITION—Occurs when Redundancy Buffer is less than what was saved in the Application Module database previous to Release 300. The object state is set to WARNING (LCN Config Detail Node message).

REDUNDANT NODES MUST BE ENTERED ONE AFTER THE OTHER, OR ZERO IF NOT CONFIGURED.

RECOVERY—Help message (CONF operation).

REFERENCED DDB CANNOT BE FOUND

DEFINITION—This occurs when a referenced DDB cannot be found.

REPEAT LAST KEYSTROKE TO CONTINUE

DEFINITION—Used to override warning messages (CONF operation).

REQUESTED ABSTRACT CORRUPTED

DEFINITION—(Picture Editor build-time message).

REQUEST ID

DEFINITION—Internal error (bug in DEB operation).

RETURN TO ASSIGN UNITS AND NUMBER OF GROUPS DISPLAY

RECOVERY—Help message (CONF operation).

REV NO MISMATCH

DEFINITION—You have attempted to load another point in that node with the same CDS descriptor name, but different time stamp. There cannot be two different CDS descriptions with the same name in the same node at one time.

RECOVERY—Use Find Names to identify which points have CDS descriptors, and then use the List File Attributes (LS) to find out the time stamp of the file(s). The applicable point(s) must be deleted and rebuilt, which may require taking the process off-line. Refer to the *Data Entity Builder* manual for precautions in deleting points.

RUN HVTS FAILED SPC WINC CTLR

DEFINITION—There is a failure in either the SPC or WDC controllers. The object state is set to FAIL (HM Detail Node message).

SEARCH INCOMPLETE

DEFINITION—Could not search all nodes (some are down); did not find point in nodes searched (DEB operation).

DEFINITION—An attempt was made to retrieve information that is not available, such as \$PRSTS99 (Picture Editor run-time message).

SEARCHING NETWORK CONFIGURATION FILE FOR A MATCHING NAME OR NUMBER ERROR

RECOVERY—Wait for message to change (CONF operation).

SEGMENT ID

DEFINITION—Internal error (bug in DEB operation).

SELECT HONEYWELL ENGINEERING DATA, ACTION ON DISK ERROR OR RESOURCE ALLOCATION

RECOVERY—Help message (CONF operation).

SELECT IF HM DUMP VOLUME IS TO BE CONFIGURED ON THIS HM

RECOVERY—Help message (CONF operation).

SELECT THE BASIS FOR THE PERIOD OF A MONTH

RECOVERY—Help message (CONF operation).

SELECT THE BAUD RATE OF THE DATALINK(S)

RECOVERY—Help Message (CONF operation).

SELECT THE CONTACT(S) TO BE ACTIVATED FOR EACH OF THE INDICATED EVENTS

RECOVERY—Help Message (CONF operation).

SELECT THE DEFAULT START-UP MODE OF THE MODULE

RECOVERY—Help Message (CONF operation).

SELECT THE ERROR RECOVERY ACTION TO BE AUTOMATICALLY TAKEN UPON THE DETECTION OF AN ERROR ON THE INDICATED VOLUME

RECOVERY—Help Message (CONF operation).

SELECT THE LEVEL OF ACCESS ALLOWED WITHOUT A KEY

RECOVERY—Help Message (CONF operation).

SELECT THE LOWEST ACCESS LEVEL WHICH IS TO BE NECESSARY TO ACTIVATE EACH OF THE INDICATED OPERATIONS

RECOVERY—Help Message (CONF operation).

SELECT THE LOWEST ALARM PRIORITY WHICH HAS THE RED COLOR ASSOCIATION

RECOVERY—Help Message (CONF operation).

SELECT THE OFF-PROCESS PERSONALITIES FOR WHICH THE MODULE WILL CONTAIN THE PERSONALITY IMAGE

RECOVERY—Help Message (CONF operation).

SELECT THE PERIOD OF THE CONTINUOUS HISTORY USER AVERAGE GROUPS

RECOVERY—Help Message (CONF operation).

SELECT THE SYSTEM RAISE/LOWER RATE

RECOVERY—Help Message (CONF operation).

SELECT THE TYPE OF DATA WHICH IS TO BE SAVED FOR THE INDICATED CONTINUOUS HISTORY GROUP

RECOVERY—Help Message (CONF operation).

SELECT THE TYPE OF NODE TO BE CONFIGURED

RECOVERY—Help Message (CONF operation).

SELECT THE UNIT FOR WHICH THE UNIT JOURNAL SIZES ARE TO BE CONFIGURED

RECOVERY—Help Message (CONF operation).

SELECT YES IF THE SYSTEM HAS BATCH ID'S

RECOVERY—Help Message (CONF operation).

SELECT YES IF THE SYSTEM VOLUME WILL INCLUDE ALL GDF FILES

RECOVERY—Help Message (CONF operation).

SELECT YES IF THERE IS TO BE AN OPERATOR KEYBOARD ON THE STATION

RECOVERY—Help Message (CONF operation).

SELECT YES IF THERE IS TO BE A TOUCH SCREEN ON THE STATION

RECOVERY—Help Message (CONF operation).

SELECT YES IF THERE IS TO BE AN ENGINEER'S KEYBOARD ON THE STATION

RECOVERY—Help Message (CONF operation).

SELECT YES IF THIS HISTORY GROUP IS TO BE ARCHIVED

RECOVERY—Help Message (CONF operation).

SELECT YES ON THE MODULE WHICH WILL CONTAIN THE SYSTEM FILES

RECOVERY—Help Message (CONF operation).

SELECT YES ON THE MODULE WHICH WILL CONTAIN THE SYSTEM JOURNALS

RECOVERY—Help Message (CONF operation).

SELECTION LIST EMPTY

DEFINITION—Specified selection list for DEB command operation is empty.

RECOVERY—Build correct list or don't specify a list in command.

SELF DEFINING ENUMERATION STATES MAY NOT BE CHANGED - @ NOT RELOADED

DEFINITION—Customer-supplied state names cannot be changed by reloading point (DEB operation).

RECOVERY—Delete point and load. NOTE this breaks all references to "old" point before delete.

SEQUENCE NAME NOT IN CHECKPOINTED LIBRARY

DEFINITION—FIND NAMES PM/APM The name of the sequence currently being processed has not been put in the NIM library. That means that the sequence was compiled without the compiler's —UL (Update Library) switch, OR that the NIM has not been checkpointed (FNPM is not reading the latest NIM checkpoint.)

SEQUENCE MUST BE RECOMPILED WITH LATEST COMPILER

DEFINITION—FIND NAMES PM/APM In the case of the PM sequence being processed, it must have been compiled by at least a R300 CL compiler. If the CL compiler that the sequence was compiled with was older than R300, this error message is displayed. This obviously does not apply to APM.

SERIAL NO ERR

DEFINITION—Point requested is no longer in system (DEB operation).

RECOVERY—Display or CL-referencing point must be recompiled.

SET CASCADE ENBL

DEFINITION—The remote cascade enable flag (RCASENB) must be set to ON before changing mode to remote cascade (corresponds to COMPUTER mode in earlier systems).

RECOVERY—Set RCASENB to ON.

SLOT INVALID

DEFINITION—The specified slot number (SLOTNUM or OUTSLTNM) being loaded by the DEB is not valid for the box or point type.

RECOVERY—Assign a legal slot number and reload the point.

SOURCE LINE @

DEFINITION—Exception Build source-line number "@" has syntax errors (DEB operation).

RECOVERY—Correct line.

SP LOCK ERROR

DEFINITION—The operator access level cannot change the preset value (PRESET) of a timer or counter when PRESLOCK = NOTPERM.

RECOVERY—A higher-access level must be used to change PRESET.

START DATE IS AFTER STOP

DEFINITION—The requested time base is incorrect (Picture Editor run-time message).

START TIME IS AFTER STOP

DEFINITION—The requested time base is incorrect (Picture Editor run-time message).

STARTUP ERROR - HISTORY FILE NOT FOUND

DEFINITION—The on-line History Module personality has detected a missing history file during node startup, disabling the associated history function. The object state is set to SEVERE (HM Detail Node message).

RECOVERY—Report the situation to the system engineer.

STATE CHNG INVLD

DEFINITION—An attempt to change operational state (PROCMOD) of a Multifunction Controller when prohibited.

STATION NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE

RECOVERY—Help Message (DEB operation).

STD DISPLAY <DDDDDDDD> NOT FOUND AT STRTUP, CANNOT BE INVOKED

DEFINITION—The Area Manager could not find a Standard Abstract at startup. The object state is set to SEVERE (Mem_Displays Detail Node message).

STORE INV-CASREQ

DEFINITION—Attempt to change certain parameters while remote-cascade mode is requested (RCASREQ = REQUEST). RCASREQ is displayed on group and detail displays as "-C" to the right of the MODE.

RECOVERY—If acceptable, store the current mode again to clear the remote cascade request.

STORE INVALID

DEFINITION—Attempt to use one of the override commands (OVERPHAS, OVERSTEP, or OVERSTAT) in a Multifunction Controller while the operational state (PROCMOD) and/or the sequence-execution state (SEQEXEC) is not in the appropriate state.

STORE NOT PERMIT

DEFINITION—Current operating conditions or the current configuration of the point prohibit the requested parameter change.

STRING LENGTH TOO LONG

DEFINITION—String length of entered data is longer than allowed (DEB operation).

RECOVERY—Abbreviate or rephrase description or name.

STRING TRUNCATED

DEFINITION—ASCII text was longer than allowed. Characters dropped off of end (DEB operation).

RECOVERY—Redefine parameter definition (CDS) or port size (display), then input a string within the limits.

STRING TYPE EXPECTED

DEFINITION—If in a target, most common cause: forgot to do a get string (Picture Editor build-time message).

STRUCT PAR GETER

DEFINITION—Software error (AM).

SUBPICTURE DATA TYPE MISMATCH

DEFINITION—The data type of a parameter in a subpicture is different than in the main schematic. The usual cause is an incorrect type was given for a generic reference in a subpicture (&TAG.parameter) (Picture Editor build-time message).

SUBPICTURE NOT FOUND

DEFINITION—(Picture Editor build-time message).

SUBPICTURE TEXT SIZE INCOMPATIBLE WITH CURRENT TEXT MODE

DEFINITION—(Picture Editor build-time message).

SUBSCRIPT ERR

DEFINITION—Array index out-of-range (DEB operation).

SUBSCRIPT RANGE

DEFINITION—Index on parameter or point out-of-range (DEB operation).

DEFINITION—An array index was used outside the bounds of an array (Picture Editor run-time message).

SYMBOL TABLE SIZE EXCEEDED

DEFINITION—(Picture Editor build-time message).

SYNCHRONIZE DESTIN. ERROR - SECTOR XXXXXXXX

DEFINITION—A target volume cannot be resynchronized because a disk error has occurred. The object state is set to WARNING (HM Detail Node message).

RECOVERY—Report situation to the system engineer.

SYNCHRONIZE SOURCE ERROR - SECTOR XXXXXXXX

DEFINITION—An on-line volume cannot be used to synchronize its failed copy, and is usually caused by a hard disk error. The object state is set to WARNING (HM Detail Node message).

RECOVERY—Report situation to the system engineer.

SYNTAX ERROR

DEFINITION—The wrong kind of value has been entered; for example, if the input requires POINT.PARAMETER, and you enter only a point name (Picture Editor run-time message).

SYNTAX ERROR DETECTED

DEFINITION—(Picture Editor build-time message).

SYSTEM DRAM THRESHOLD EXCEEDED BY ----- WDS

RECOVERY—Reduce the number of URCs (CONF operation).

SYSTEM ERR

DEFINITION—Indication of HG-software error.

RECOVERY—Contact Honeywell IAC Engineering.

SYSTEM JOURNAL/ARJ # OF EVENTS NOT ENTERED

RECOVERY—Configure the System Journal.

SYSTEM UNIT JOURNAL MUST BE ASSIGNED TO THIS NODE PAIR TO ASSIGN JOURNALS

RECOVERY—Help Message (CONF operation).

SYSTEM VOLUME &ASY VOLUME FULL OR VOLUME NOT FOUND

RECOVERY—If volume not mounted, mount it. If volume full, delete extra files. If volume full and no extra files, no recovery possible (CONF operation).

TARGET NOT IN IDLE

DEFINITION—The message appears when selecting the [SHUTDOWN] target from the UCN status display, with the primary PM/APM/HPM selected. (R430 and later)

EXECUTION—By pressing the <ENTER> key or target, shut down of the PM/APM/HPM is attempted. If the primary PM/APM/HPM selected is not in the IDLE state, the TARGET NOT IN IDLE message appears.

IMPLICATION—One must first IDLE the primary PM/APM/HPM before being allowed to SHUTDOWN the control module.

TEMPLATE IDF NAME MISSING

DEFINITION—When using &X in exception build, IDF file name that contains template point is required (DEB operation).

RECOVERY—Complete &X control line.

RECOVERY—Help Message (CONF operation).

TEMPLATE ITEM EXPECTED

DEFINITION—Exception Build source-file should have identified a template point here for &M or &X control line (DEB operation).

RECOVERY—Add template specification or check sequence of lines. When you use &X or &M, you must define a template entity as the first control item in a source file.

THE ARCHIVE REPLAY VOLUME IS DEFINED BY THE NUMBER OF FILES VOLUME FILE SIZE

RECOVERY—Help Message (CONF operation).

THE AREA NAME MUST HAVE PREVIOUSLY BEEN ENTERED INTO THE FILE

RECOVERY—Help Message (CONF operation).

THE CHECKPOINT VOLUME IS CONFIGURED BY SELECTING THE PHYSICAL NODES THAT APPLY AND THEIR NUMBER OF PROCESS POINTS AND UNITS

RECOVERY—Help Message (CONF operation).

THE CONSOLE NUMBER MAY RANGE FROM 1 TO 10

RECOVERY—Help Message (CONF operation).

THE CONTINUOUS HISTORY VOLUME IS CONFIGURED BY SELECTING UP TO 60 UNITS AND THEIR NUMBER OF GROUPS UP TO A MAXIMUM LIMIT OF 150 GROUPS

RECOVERY—Help Message (CONF operation).

THE FILE SIZE MAY BE 0 TO 2000 KILOBYTES

RECOVERY—Help Message (CONF operation).

THE HIWAY NUMBER MAY RANGE FROM 0 TO 20. IF NOT ZERO, IT MUST BE ASSIGNED

RECOVERY—Help Message (CONF operation).

THE HOST BUILD MODE HAS BEEN SET

DEFINITION—Operator set host build mode.

RECOVERY—Install (F2), restart network.

THE KEY LOCK MUST BE IN THE ENGINEERS POSITION TO USE THIS FUNCTION

DEFINITION—Change key position (DEB operation).

RECOVERY—Repeat request.

THE MAXIMUM WIDTH OF A PRINTED LOG IN CHARACTERS. MUST RANGE FROM 80 TO 132

RECOVERY—Help Message (CONF operation).

THE NODE PAIR MAY RANGE FROM 1 TO 20. SELECT VOLUME CONFIGURATION TARGET ON THE MAIN MENU TO REVIEW OR CONFIGURE THE NODE PAIR

RECOVERY—Help Message (CONF operation).

THE NUMBER OF DATA LINKS MAY BE 1 OR 2

RECOVERY—Help Message (CONF operation).

THE NUMBER OF DISKS MAY BE 1 OR 2

RECOVERY—Help Message (CONF operation).

THE NUMBER OF EVENTS IN THIS JOURNAL MUST RANGE FROM 100 TO 9999

RECOVERY—Help Message (CONF operation).

THE NUMBER OF FILES MAY BE 1 TO 20

RECOVERY—Help Message for archive display (CONF operation).

THE NUMBER OF FILES MAY BE 0 TO 999

RECOVERY—Help Message for area data (CONF operation).

THE NUMBER OF FILES MAY BE 1 TO 999

RECOVERY—Help Message for CL/MC storage (CONF operation).

THE NUMBER OF FILES MAY BE 0 TO 9999

RECOVERY—Help Message for batch history (CONF operation).

THE NUMBER OF FILES MAY BE 0 TO 2000

RECOVERY—Help Message for user file storage (CONF operation).

THE NUMBER OF GROUPS MAY RANGE FROM 1 TO 150. THE TOTAL OF ALL ENTRIES MUST NOT EXCEED 150

RECOVERY—Help Message (CONF operation).

THE NUMBER OF POINTS MUST BE ZERO FOR THE HG/NIM, AND UP TO 2000 FOR CM 60 AND AM

RECOVERY—Help Message (CONF operation).

THE NUMBER OF PRE-ARCHIVE HOURS MAY RANGE FROM 0 TO 999

RECOVERY—Help Message (CONF operation).

THE NUMBER OF PRINTED LINES PER PAGE. THE DEFAULT IS 66

RECOVERY—Help Message (CONF operation).

THE NUMBER OF SHIFTS PER WEEK CAN RANGE FROM 1 TO 42. THE DEFAULT FOR 8 HOUR SHIFTS IS 21

RECOVERY—Help Message (CONF operation).

THE NUMBER OF UNITS MUST BE 0 FOR THE HG/NIM, AND 63 MAX FOR CM 60 AND AM

RECOVERY—Help Message (CONF operation).

THE PROCESS JOURNAL VOLUME IS CONFIGURED BY SELECTING UP TO 36 UNITS AND THEIR NUMBER OF EVENTS FOR PROCESS ALARMS, PROCESS CHANGES, AND OPERATOR MESSAGES

RECOVERY—Help Message (CONF operation).

THE PROGRAM IMAGE VOLUME IS CONFIGURED BY SELECTING THE NODE TYPES THAT APPLY

RECOVERY—Help Message (CONF operation).

THE REDUNDANT NODE MUST NOT BE CONFIGURED BEFORE CONFIGURATION

RECOVERY—Help Message (CONF operation).

THE REQUESTED ON LINE NCF FILE INSTALLATION WAS COMPLETED

RECOVERY—None needed (CONF operation).

THE SIZE OF THE BURST BUFFER MAY BE 200 TO 9999 EVENTS

RECOVERY—Help Message (CONF operation).

THE SYSTEM MUST HAVE TWO CLOCK PADDLE BOARDS, AND THEY MUST BE AMONG THE FIRST FOUR NODES CONFIGURED

RECOVERY—Help Message (CONF operation).

THE TOTAL NUMBER OF URC UNITS (TRANSFER BUFFERS) MUST NOT EXCEED 16

RECOVERY—Help Message (CONF operation).

THE TYPE 1 DISK SIZE IS 27600 KB. THE TYPE 2 DISK IS 66247 KB; TYPE 3 DISK IS 136944

RECOVERY—Help Message (CONF operation).

THE UNIT ID MUST EXIST IN THE CONFIGURATION FILE, AND MUST NOT BE DUPLICATED ON THIS FORM

RECOVERY—Help Message (CONF operation).

THE UNIT ID MUST EXIST IN THE CONFIGURATION FILE, AND MUST NOT BE DUPLICATED ON THIS FORM. UNIT ID SY SHOULD NOT BE USED

RECOVERY—Help Message (CONF operation).

THE UNIT, NUMBER OF FILES, AND FILE SIZE FOR BATCH HISTORY DATA POINT

RECOVERY—Help Message (CONF operation).

THE VIRTUAL VOLUME ID MUST HAVE ONE ALPHA CHARACTER UNDERBAR MAY APPEAR IN POSITION 2 OR 3

RECOVERY—Help Message (CONF operation).

THE VOLUME NAME HAS AT LEAST ONE ALPHABETIC CHARACTER AND NO SPECIAL CHARACTERS

RECOVERY—Help Message (CONF operation).

THE VOLUME SIZE MAY BE 0 TO 27000 KILOBYTES

RECOVERY—Help Message for image volume, area database volume and archive replay volume (CONF operation).

THE VOLUME SIZE MAY BE 0 TO 40000 KILOBYTES

RECOVERY—Help Message for user storage (CONF operation).

THE VOLUME SIZE MAY BE 1 TO 27000 KILOBYTES IF CONFIGURED

RECOVERY—Help Message for CL/MC storage (CONF operation).

THE WORKING FILE IS BEING CREATED (OR REPACKED)

RECOVERY—Wait (CONF operation).

THESE PICKS ARE USED TO SELECT ONE OF THE HISTORY MODULE NODE PAIRS

RECOVERY—Help Message (CONF operation).

THESE PICKS ARE USED TO SELECT ONE OF THE NODES

RECOVERY—Help Message (CONF operation).

THIS ASSIGNMENT HAS BEEN GIVEN TO ANOTHER NODE PAIR

RECOVERY—Delete assignment from other node pair or, do not assign this node pair (CONF operation).

THIS NAME OR NUMBER IS ALREADY ASSIGNED IN ANOTHER NODE

RECOVERY—Delete this name or number from the other node or assign not in this node (CONF operation).

THIS NODE (AND ITS REDUNDANT PARTNER) WERE DELETED

RECOVERY—None needed (CONF operation).

THIS NODE IS CONFIGURED FOR CHECKPOINTING AS ANOTHER TYPE

RECOVERY—Delete node from HM checkpoint volume (CONF operation).

TIME EXPECTED

DEFINITION—An actor requires a time value (Picture Editor run-time message). This error is often seen when using an actor like R_TIME, RS_LOC, or RS_SYS.

TIMER IS RUNNING

DEFINITION—The operator has attempted to reset a timer while it is running.

RECOVERY—If resetting this timer is still desired, stop the timer then reset it.

TO CHANGE AN EXISTING NODE: IT MUST BE DELETED AND THEN BE REBUILT

DEFINITION—You cannot change an existing node (CONF operation).

RECOVERY—Delete node.

TO DELETE THE SELECTED NODE, SELECT THE DELETE PICK AND PUSH ENTER

RECOVERY—Help Message (CONF operation).

******* TOO MANY ERRORS *******

DEFINITION—Too many errors occurred during DEB exception build.

RECOVERY—Break exception build into multiple files; or fix the errors shown, then run exception build on list of entities to be built.

TOO MANY CONSTANTS IN EXPRESS

DEFINITION—The maximum is six. See *Picture Editor Reference Manual*, Appendix C—Expressions (Picture Editor build-time message).

TOO MANY PRIMRYS

DEFINITION—Too many points configured to push the output to the same secondary point. Limit is four primaries (AM).

RECOVERY—Check and change the configuration or control strategy.

TREND PEN UNIT NUMBERS MAY RANGE FROM 1 TO 10 AND MAY NOT BE DUPLICATED IN A CONSOLE

RECOVERY—Help Message (CONF operation).

UNABLE TO DEFINE LOGICAL DEVICE

DEFINITION—The LCN was unable to configure a device defined in the NCF.

RECOVERY—Ensure that all devices exist and are configured properly in the NCF.

UNABLE TO LMT CK

DEFINITION—Indirect limit specified for check on store is unavailable or wrong type. May have to revalidate CDS (DEB operation).

UNABLE TO MOUNT NCF VOLUME

DEFINITION—When loading a node using an alternate data source, the volume could not be mounted on the specified drive.

RECOVERY—Insert the expected media into the proper device (drive) or redirect the data source.

UNABLE TO OPEN NCF FILE

DEFINITION—The NCF cannot be opened or read. This message will occur only on HM boot and/or load. Therefore, the only time this message will be seen is through SMCC.

RECOVERY—Ensure that the NCF.CF file exists in the &ASY directory or restore a working copy of the NCF.CF file.

UNABLE TO READ AREA DATABASE

DEFINITION—The area database file is corrupt or does not exist.

RECOVERY—Restore a working copy of the area database into the area directory.

UNABLE TO READ CONSOLE DATA

DEFINITION—Unable to read console information from the NCF file.

RECOVERY—Restore a working copy of the NCF.CF file.

UNABLE TO READ ENTITY @

DEFINITION—Entity data in IDF corrupted such that nothing can be read (DEB operation).

RECOVERY—Rebuild and "WRITE" entity.

UNABLE TO READ UNIT DIRECTORY FILE

DEFINITION—Unable to read Unit information from the NCF file.

RECOVERY—Restore a working copy of the NCF.CF file.

UNABLE TO RESET ANNUNCIATOR OR BACKLIGHTS

DEFINITION—An error occurred when attempting to reset the annunciator or backlights.

RECOVERY—Check the installation of the annunciator board and/or call the Honeywell Technical Assistance Center.

UNASSIGNED DEVICE VARIABLE

DEFINITION—During execution of a DEB Command File, a device was named that was not declared at the beginning of the Command File. For example, V3 may have been used when only V1 and V2 are declared above.

UNIT

DEFINITION—Unit doesn't exist (DEB operation).

UNIT DIFFERS FROM ORIGINAL UNIT FOR ENTITY @

DEFINITION—Load with overwrite cannot change point's unit (DEB operation).

RECOVERY—Delete and load if unit change desired.

UNIT ID SY IS PREASSIGNED

RECOVERY—Help Message (CONF operation).

UNIT INSTANCE NOT EXIST

DEFINITION—Specified unit instance is not found in the equipment list object file (Picture Editor run-time message).

UNIT NOT CONFIGURED

DEFINITION—

1. Entered ID does not exist or is not assigned to the station's Area (Picture Editor run-time message).
2. Unit added to an area and not all stations have done an area change.

UNIVERSAL STATION SHUT DOWN IN PROGRESS

DEFINITION—Occurs when a US is shutdown from another node by use of the Console Status Display.

UNKNOWN COMM ERR

DEFINITION—Cannot communicate with other node, but don't know why. May be caused by temporary overload (DEB operation).

UNKNOWN ENTITY TYPE

DEFINITION—Invalid entity type name in the &T command. Refer to Appendix B in the Data Entity Builder Manual for a list of all valid entity types.

UPDATING DDB INFORMATION

DEFINITION—Refers to DDB variables (Picture Editor build-time message). If you have a small file, you won't see this message.

UPPER RANGE VIOLATION

DEFINITION—Value out of high-limit bound (DEB operation).

RECOVERY—Correct value.

USER IDB ID

DEFINITION—Internal error (bug in DEB operation).

USER MEMORY ALLOCATION EXCEEDED ON STARTUP

DEFINITION—The database the Application Module was trying to load at startup was too large for available memory. The PhysicalNode state is FAIL (AM Detail Status message).

USER MEMORY RESERVED <XX> BLOCKS OR MORE MUST BE IN NCF

DEFINITION—Occurs when Reserved User Memory is less than what was saved in the Application Module database previous to Release 300. The object state is set to WARNING (LCN Config Detail Node message).

VALIDATION ERROR - LPN_NVCF.MM FILE NOT ACCESSIBLE

DEFINITION—A disk error occurred during startup when the system was validating the local NVCF configuration file. The object state is set to FAIL (HM Detail Node message).

RECOVERY—Reattempt node startup. If the message displays again, report situation to the system engineer.

VALIDATION INTERNAL ERROR

DEFINITION—The file manager received an illogical response when validating the local NVCF configuration file. The object state is set to FAIL (HM Detail Node message).

RECOVERY—Reattempt node startup. If the message displays again, report situation to the system engineer.

VALUE CLAMPED

DEFINITION—Value is out-of-range. Value is stored and clamped value is returned (AM).

RECOVERY—Check the range and select parameter value within the range.

VALUE ERR

DEFINITION—Value out-of-range specified as legal for point store (DEB operation).

VALUE MUST BE GREATER THAN @

DEFINITION—Value out-of-range (DEB operation).

RECOVERY—Correct value.

VALUE MUST BE LESS THAN @

DEFINITION—Value out-of-range (DEB operation).

RECOVERY—Correct value.

VALUE OF @

DEFINITION—Partial message appended to limit violation; "@" is value violated (DEB operation).

RECOVERY—Correct value entered to pass limit checks.

VALUE RANGE ERR

DEFINITION—Value exceeds legal store units specified for parameter (DEB operation).

VALUE UNAVAILABLE BASED ON PREVIOUS SELECTIONS - PARAM RETURNED TO DEFAULT

DEFINITION—This is a legal value, but is not one of the possible values at this time. Previous values set cause this value either to not be available for change or to have only a subset of values available. User attempted to set it to other value. Its value has been returned to its default. Error occurs on XBUILD or READ and can occur in reconstitute in the event of GDF changes (DEB operation).

VARIABLE ID TYPE EXPECTED

DEFINITION—To the Picture Editor, a variable ID type is a point.parameter (Picture Editor build-time message).

VARIABLE TOO LONG

DEFINITION—(Picture Editor build-time message).

VERIFICATION IN PROGRESS

DEFINITION—(Picture Editor build-time message).

VERIFY SECTOR REASS SPC WINC DR 5

DEFINITION—This message documents which sector the defective disk was reassigned to by the systems engineer (HM Detail Node message).

VERSION IS INVALID: TRANSLATE OR COMPILE

DEFINITION—This occurs if an attempt is made to invoke a pre-R300 abstract.

VIRTUAL VOLUME SIZE EXCEEDS DISK SIZE FOR XX

RECOVERY—Reduce the size of the virtual volume (CONF operation).

VISIBLE VARIABLE TOO LONG FOR FORMAL PARAMETER LIST

DEFINITION—Maximum is 32 characters (Picture Editor build-time message).

VOLUME NAME, NUMBER OF FILES, AND SIZE FOR USER VOLUMES

RECOVERY—Help Message (CONF operation).

******* WAIT *******

DEFINITION—Multiple operations in progress.

RECOVERY—"BREAK" key aborts DEB operations at next "whole" entity starting point.

WARNING - MODULES INACTIVE LOAD MAY HAVE CREATED DUPLICATE NAME @

DEFINITION—System cannot verify uniqueness of entity "@" if all nodes not operational (DEB operation).

WARNING - USING UNINSTALLED WORKFILE

DEFINITION—An area database workfile already exists on floppy (CONF operation).

RECOVERY—Warning - may be old file that doesn't match area database you are trying to alter.

WARNING! NO FLOPPY DEVICES ARE DEFINED IN THIS STATION

DEFINITION—No floppy devices have been configured for this station (if first loaded) on console (Engineering Personality environment).

RECOVERY—Load those stations with floppy devices first.

WARNING! PED MODIFIED. REPEAT KEYSTROKE TO IGNORE WARNING

DEFINITION—Change has been made to PED and hasn't been written to IDF or loaded. Operation attempted destroys the PED (DEB operation).

RECOVERY—Write PED entity to IDF or repeat keystroke and data in PED lost.

WARNING: A CONTROL MODULE THAT IS SHUTDOWN WILL REQUIRE RELOADING

DEFINITION—The warning message (R430 volumes/directories) appears when selecting the [SHUTDOWN] target from the UCN status display (or the PM/APM/HPM status display), with the primary PM/APM/HPM selected.

EXECUTION—On pressing the <ENTER> key or target, the PM/APM/HPM is put into the ALIVE state (only if the selected

PM/APM/HPM is already in the IDLE state). If a secondary PM/APM/HPM exists, failover will occur, causing the primary PM/APM/HPM (secondary before failover) to remain in the IDLE state, while the secondary PM/APM/HPM (primary before failover) shows ALIVE.

IMPLICATION—The process was taken off control due to the IDLE state of the PM/APM/HPM. Therefore, before shutdown is executed, you should confirm the validity of the PM/APM/HPM's latest checkpoint.

WARNING: EXCEEDED 60 SECOND CYCLE

DEFINITION—The History Module (HM) is being overloaded.

RECOVERY—Use the System Performance (Toolkit) Displays to trend the disk transfers and CPUFREE for the HM in question. See the *Engineer's Reference Manual*, System Performance Displays section.

Note if the disk transfers are very high or CPUFREE is very low at the time the overload occurs. Then, contact the Honeywell Technical Assistance Center with this detailed information for further assistance.

WARNING: FOLLOWING HOST BUILD INSTALL, ALL NODES ON THE NETWORK MUST BE RESET AND RELOADED WITH THE NEW NCF. PUSH F2 A SECOND TIME TO CONTINUE

RECOVERY—If you really wish to install the new configuration, push F2 a second time (CONF operation).

WARNING: SELECTED CONTROL MODULE AND ALL OF ITS IOPs WILL BE TAKEN OFF CONTROL

DEFINITION—The warning message appears when selecting the [IDLE] target from the UCN status display, with the primary PM/APM/HPM selected. (R430 and later)

EXECUTION—By pressing the <ENTER> key or target, the selected PM/APM/HPM and all associated IOPs are put in the IDLE state.

IMPLICATION—When the control module and all of its OIPs are taken off control,

- Control processing comes to a halt;
- Logic processing comes to a halt;
- Sequence programs stop executing;
- Digital composites controlling motor start/stops halt.

WARNING: THE CONTROL MODULE AND ALL OF ITS IOPs WILL BE TAKEN OFF CONTROL

DEFINITION—The warning message appears when you select the [IDLE] target from the PM/APM/HPM status display, with the ALL MODULES selected. (R430 and later)

EXECUTION—After pressing the <ENTER> key or target, the PM/APM/HPM and all IOPs are put into the IDLE state.

IMPLICATION—When the control module is taken off control,

- Control processing comes to a halt;
- Logic processing comes to a halt;
- Sequence programs stop executing;
- Digital composites controlling motor start/stops halt.

WARNING: THE CONTROL MODULE WILL BE TAKEN OFF CONTROL

DEFINITION—The warning message appears when you select the [IDLE] target from the PM/APM/HPM status display, with the primary PM/APM/HPM selected. (R430 and later)

EXECUTION—After pressing the <ENTER> key or target, the selected PM/APM/HPM is put into the IDLE state.

IMPLICATION—When the control module is taken off control,

- Control processing comes to a halt;
- Logic processing comes to a halt;
- Sequence programs stop executing;
- Digital composites controlling motor start/stops halt.

WARNING: THE PHYSICAL NODE DELETED DOES NOT EXIST ON THE NETWORK

DEFINITION—Node never added to network (CONF operation).

RECOVERY—Apply power to node.

WARNING: THE SELECTED IOP WILL BE TAKEN OFF CONTROL

DEFINITION—The warning message appears when you select the [IDLE] target from the PM/APM/HPM status display, with a single IOP selected. (R430 and later)

EXECUTION—When you press the <ENTER> key or target, the selected IOP is put in the IDLE state.

IMPLICATION—When the IOP is taken off control, view/control of the process through the IOP is suspended.

WARNING—USING UNINSTALLED WORKFILE

DEFINITION—A load or reconstitute of an area database entity is to or from an area database work file (.WA) that has not been installed yet. This warning occurs the first time the .WA file is accessed in this session. The session ends when the .WA file is installed.

RECOVERY—Recheck your records or use the Command Processor functions to look at the time stamps on your .WA and .DA area files. You may be loading a new area entity to a work file that does not match the area database now in use. If so, use the Command Processor to delete the old .WA file and load your new area entities into a new work file.

WF & CF FILES DONT MATCH

RECOVERY—Correct File Manager Status reported on-line 2; need to delete and rebuild NCF.WF or replace NCF.CF (CONF operation).

WF FILE OPEN FAILED

RECOVERY—Correct File Manager Status reported on-line 2; may need to delete and rebuild NCF.WF (CONF operation).

WF FILE WRITE FAILED

RECOVERY—Correct File Manager Status reported on-line 2; may need to delete and rebuild NCF.WF (CONF operation).

WORKING FILE CORRUPTED

RECOVERY—Correct File Manager Status reported on-line 2; need to delete and rebuild NCF.WF (CONF operation).

WORKING FILE IS IN USE

DEFINITION—Someone else is working on the NCF (CONF operation).

WRITING OBJECT FILE

DEFINITION—This indicates a successful compile (Picture Editor build-time message).

WRITING SOURCE FILE

DEFINITION—When you compile, the Picture Editor writes the source file, unless it encounters a fatal compile error such as objects off the drawing surface (Picture Editor build-time message).

Y CANNOT BE LSP

DEFINITION—Some mode changes are prohibited on certain regulatory points if the point's Y-input is configured to its own local stipend.

Y MUST OWN LSP

DEFINITION—Some mode s to its own local setpoint.

Other messages

Information on other types of message is also available:

SMCC Maintenance Recommendation Messages, page 27.

Unalarmed Abnormal Conditions, page 121

File Manager Status Return Values, page 123

4. Unalarmed Abnormal Conditions

4.1 Introduction

Description

The following error conditions do not have specific alarms associated with them. They are shown with observable conditions followed by suggested remedial actions.

4.2 Conditions

HM WILL NOT AUTOBOOT TO A STATUS OF "OK"

DEFINITION—The HM's autoboot software may be missing or the HM's reset button may have been pressed when it shouldn't have been.

RECOVERY—

1. To eliminate the possibility of someone accidentally pressing the HM's reset button, turn HM power off, then on. If, after several minutes, the HM does not show a status of OK, indicating a successful autoboot, go to step 2.
2. To eliminate the possibility of missing autoboot software, select UTILITIES on the Engineer's Main Menu and then select FILE MANAGER UTILITIES. To display boot-files on the screen, key in a catalog command of **CAT PN:nn>!9np>*. *** where nn is the HM's node number and np is the HM's node-pair number. Press <ENTER> and check that WDBOOT.BO is there. If it is there, go to step 4, else go to step 3.
3. To get a valid boot record written to the HM, go perform Tasks 14-16 in the *System Startup Guide*. Make sure you write the boot record in Task 16. If the HM still fails to autoboot, go to step 4.
4. Collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

HM WILL NOT LOAD

DEFINITION- The most common conditions that can cause software not to load or copy to an HM and the recovery procedures for each condition are as follows:

Table 4 HM Loading Error Conditions

Condition	Recovery
HM Status is not POWER ON	Press Reset until status is POWER ON
Winchester disks are powered off	Turn power on to disks
HM-chassis is powered off	Turn chassis-power on
HM has insufficient memory	Call for assistance
HM has a hardware failure	Have the hardware fixed
Source floppy or cartridge drive failure	Have the floppy/cartridge drive fixed

Condition	Recovery
Source floppy or cartridge drive power is off	Turn source drive power on
In a single-US network, the US was loaded with the HM's power "off".	Reload the single US with the HM's power "on".

RECOVERY—Correct the problem as indicated and retry loading the HM. If you still cannot load the HM, collect data concerning the problem using the System Maintenance Guide, subsection 3.3.2 (paper document).

HM GOES OFF LINE (INIT STATUS) WITH WINCHESTER ERROR HANDLER MESSAGES

DEFINITION—This condition is accompanied by Winchester disk error-handler messages that appear on both the Real-Time Journal and on the US displays. The condition is caused by the HM detecting bad sectors on the Winchester disk. Note that error-handler messages on the Real-Time Journal carry the node number of the HM that caused this condition.

RECOVERY—

1. As soon as possible, take the HM out of service and run HVTS to reformat the disk and make sure the Winchester-disk surface to be used in the future is good. After the HM is taken out of service and HVTS is run on it, go to step 2.
2. After HVTS has been run, initialize and reload the HM by repeating Tasks 14-16 in the *System Startup Guide*. If running HVTS and initializing the HM does not correct the condition, collect data concerning the problem using the *System Maintenance Guide*, subsection 3.3.2 (paper document).

5. File Manager Status Return Values

5.1 Overview

Code locations

File Manager status return values (error codes) appear anywhere you can perform file operations. File manager status values may appear in the Command Processor, System Error Journal (a return value in a CL call, for example), CM50S file transfer (a fm_status return value, for example), Computer Gateway, Network Gateway, among other locations.

Usage

The status value appears where there is a limited amount of room for error messages. In these cases only the status value itself appears; there is no text string to accompany the value to explain its meaning. In other cases a text string appears defining the error and with it is the status value, which may allow further definition of the error. It would appear on the Command Processor, for example, as the following:

VOLUME SPECIFIED NOT FOUND (53)

Use the following list for additional information when diagnosing problems, and keep a record of these status values and text strings if you call the Honeywell Technical Assistance Center.

5.2 Value Definitions

Listing

The following table lists possible File Manager status values returned when performing file operations.

Table 5 File Manager Status Values

Value	Definition
0	The I/O operation is still in progress. This value is displayed only when there is more than one I/O request to a resource. Once the first I/O operation completes, the value is replaced.
1	The user program attempted to read or write beyond the end of the file. This error can occur when using calls in the File I/O extension; however, it should never be returned with the built-in CDS_Read or CDS_Write subroutines. If it does, report the error as a problem your Honeywell support representative.
2	A response from a remote node to a file manager request has not been received in the allotted time. This can happen when an HM goes down. One retry has been performed at a lower level before this return.
3	The HM reported a physical error; there probably is a bad spot on the HM.
4	The file may be corrupted; delete the file.
5	The volume may be corrupted.
6	The device type is not compatible with the command you entered.
7	The HM driver reported a hardware time-out error.
8	An illegal or invalid command has been requested.
9	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
10	The number of concurrent open files is at its maximum. Ten retries have been performed at a lower level before this return.
11	The number of concurrent open files is at its maximum. Ten retries have been performed at a lower level before this return.
12	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
13	The file is currently reserved for some other operation (for example, attempting to open a file on a device which is being initialized).
14	The device is currently reserved for some other operation. For example, you are attempting to open a file on a device that is being initialized.
15	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
16	Conflicting options have been selected in the File Manager request (for example, contiguous file opened by the File I/O extension subroutine call File\$Open).
17	The file name or file extension used in a request is invalid.

Value	Definition
18	An effort was made to install a file in a directory, which already contains a file with the same name.
19	The specified file name was not found in the directory.
20	The physical device associated with the virtual volume or virtual device could not be found. This can occur when a device is not included in the system generation.
21	The request is prohibited, due either to a file protection attributes conflict or to a file access privilege violation. Possible on CDS read/write or File\$Open_File.
22	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
23	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
24	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
25	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
26	Insufficient space available on the medium to perform the request.
27	There is insufficient HM memory available to perform the request. This can occasionally happen; however, 10 retries have been performed at a lower level before this return. Thus, if this problem occurs frequently, it should be reported to your Honeywell support representative.
28	An attempt to create a new file failed because it would have exceeded the maximum number of files per volume.
29	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
30	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
31	The record being read is larger than the maximum record size.
32	The requested volume or device does not have initialized media. For example, a drive does not contain a floppy or cartridge, or a floppy drive does not contain an initialized volume.
33	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
34	An operation requiring that the file be closed was attempted on a file that was open (for example, deletion of an open file).
35	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
36	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
37	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
38	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.

Value	Definition
39	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
40	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
41	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
42	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
43	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
44	Variable length record on a write with a length of zero (0) or an attempt to rewrite a variable length record with the incorrect size.
45	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
46	An operation requiring the file to be open was attempted on a closed file.
47	This error value should never be returned. If it occurs, report the error as a problem to your Honeywell support representative.
48	The device has an error that is not a timeout or a hardware error. For example, the unit is offline, there is a parameter error, or your request has been refused.
49	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
50	The files specified in the Safe_Rename subroutine call are not on the same volume.
51	Not an error; the request completed successfully.
52	The volume name specified in the File Manager call is syntactically incorrect.
53	The volume specified in the pathname was not found.
54	A request was made to access a volume that existed on two different nodes.
55	An attempt was made to define a volume alias on a specified volume that was already defined.
56	An attempt was made to remove a volume alias on a specified volume that does not exist.
57	The logical device identifier used in a request could not be found.
58	The software attempted to define a device identifier that was already defined.
59	The local physical node has insufficient memory available to satisfy the request. If this happens frequently, your Honeywell support representative should be notified.
60	The local physical node has insufficient memory available to satisfy the request. This request is retried 10 times at a lower level before the return. If this happens frequently, your Honeywell support representative should be notified.
61	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
62	The software does not presently support this function.

Value	Definition
63	The attributes of the source and destination file are not compatible for a given copy operation (for example, linked vs. contiguous).
64	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
65	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
66	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
67	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
68	The volume name in the call is invalid.
69	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
70	The option you have requested is not supported by the current keylock switch. For example, you were trying to create a volume on the History Module from a Universal Station with the key switch in the OPER position.
71	The directory of the source file of a copy operation has been corrupted.
72	An attempt was made to assign a virtual volume alias to a volume that already has the maximum number of aliases (63) assigned to it.
73	The software has exceeded the maximum number of tracks allowed on a device. There is a possible wrong disk type defined in the Volume Configuration. Check the label on the drive and verify the type in the Customer Release Guide.
74	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
75	The software has accessed a failed device.
76	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
77	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
78	The volume currently is being synchronized. This request is retried 10 times before the return. If it occurs frequently, it should be reported to your Honeywell support representative.
79	This value denotes a software problem. If it occurs, report the error to your Honeywell support representative.
80	The wrong revision software, or incorrect NCF is being used.
81	You are trying to delete an alias associated with a directory that is not empty. In order to delete an alias, there must be no files left in the directory. First delete all files, and then delete the alias.
82	A redundant operation was attempted on a device that is not redundant.
83	The redundant device is not available. For example, the device has either failed or shutdown.

File Manager Status Return ValuesValue Definitions

Value	Definition
84	The transition state of the device is not valid. For example, you have selected the disk state to be offline when it was already offline.
85	The operation you have selected is optional software that has not been purchased.
86	The device address you entered is out of range. Check the device address and retry.
87	File or directory descriptors have not been enabled. They are enabled using the -FD option of the Create Volume command.
88	The remote LCN system has not issued a connect to establish communication with the local LCN system.
89	The local LCN system has not issued a connect to establish communication with the remote LCN system.
90	Read permission was not enabled at the remote LCN system.
91	Read/write permission was not enabled at the remote LCN system.
92	Remote LCN does not exist as specified by the local LCN.
93	Communication to remote LCN system was not possible due to a missing connect from either the local or remote LCN system.

6. Data Access Status Values

6.1 Overview

Description

The following LCN data access status codes apply to the individual point.parameter values and are included in the data returned to the ACP by the user interface routines (variously as STATUS_TABLE, VALUE_STATUS, STORE_STATUS or DATA_ACCESS_STATUS values).

6.2 Value Definitions

Listing

The following table lists possible Data Access status values.

Value	Definition
1	Value out of range, clamped value stored and clamped value returned
2	String was too long, truncated value was stored
3	Initialization warning
4	End of history-data file
5	End of user-specified samples or time
6	User-allocated buffer is full
7	No ACP connected
8	Checkpoint partial restore
9	UCN Number Fast Points Clamped
10	Array string truncated on fetch
11	Data overlaps with other array point data warning
12	Parameter Access OK (item valid)
13	Access level invalid (HG)
14	Invalid algorithm for controller type
15	Algorithm must be DDC (tried OP store)
16	Algorithm must be SPC (tried SP store)
17	Value type presented for store was not the expected type
18	Bias is undergoing initialization
19	Both init and tracking cannot be configured
20	HG box status is failed
21	HG box not configured

Data Access Status ValuesValue Definitions

Value	Definition
22	Mode must be manual
23	Cannot convert numeric variable to IEEE
24	Cannot convert numeric variable to JFP
25	Cannot reset timer unless stopped
26	Cascade request flag must be set
27	Change not permitted by operator
28	Cascade enable flag must be set (for change to computer mode)
29	Configuration mismatch error
30	Control output connection not configured
31	Current mode disallows mode change
32	Current mode disallows store
33	Failure of device where entity resides
34	Device where entity resides is in reset
35	Engineering unit span is too small
36	Given subscript is not implemented in entity
37	External mode switching is enabled
38	External switching option is not selected
39	Fatal error: no match for case selector
40	HG hiway status is failed
41	Hiway access failure
42	Illegal value
43	Init cannot be configured
44	Init must be configured
45	Value cannot be changed because of initialization
46	Invalid internal variable number
47	Invalid algorithm ID in base segment
48	Invalid algorithm equation
49	Invalid control algorithm ID error
50	Invalid destination parameter
51	Invalid destination point ID
52	Invalid mode
53	Invalid mode attribute

Value	Definition
54	Invalid pb option
55	Invalid point for point build
56	Invalid sp option
57	Invalid target value processor state
58	Max structural parameter exceeded error
59	Mode attribute error
60	Invalid PV control algorithm combination
61	Duplicate batch ID
62	Current mode does not allow parameter value to be changed
63	Mode illegal for this point type
64	Mode keylock error
65	Mode not allowed with configured algo
66	Mode not currently legal
67	Mode not man or point active
68	Must have digital output
69	Currently there is no value for this parameter
70	Nocopts must be zero to change coptype
71	Normal attribute is not configured
72	Normal mode is not configured
73	Value cannot be changed, because parameter
74	Number of outputs must exceed zero
75	Entry only possible in off-process personality
76	Output is undergoing initialization
77	Operator override is required for store
78	Parameter cannot be changed
79	Parameter index is invalid
80	Parameter is invalid
81	Parameter is undergoing initialization
82	Parameter is not configured
83	Parameter is not valid for the configured control algorithm
84	Parameter is not valid for the configured PV algorithm
85	Status of entity is partial error

Data Access Status ValuesValue Definitions

Value	Definition
86	Point must be inactive
87	Point is red tagged
88	Point is undergoing initialization
89	Point is not available to point build
90	Definition of point is not complete enough to make point valid
91	Point not secondary
92	Point status error (HG status is in error)
93	Point type is invalid (HG configuration error)
94	PPS only active points error
95	Process box restore in operation
96	Process module off
97	PV source disallows PV change (HG cannot change PV)
98	Ratio is undergoing initialization
99	Read only parameter (HG cannot write)
100	Red tag error (all output entries are blocked)
101	Secondary has too many primaries
102	Secondary must be off node
103	Secondary point has no primary
104	HG slot number invalid
105	Source of request is invalid (HG change is prohibited)
106	Source of Y is not configured (HG change to casc mode is invalid)
107	SP is undergoing initialization
108	SP is undergoing PV tracking
109	Store not allowed with spc connection
110	Store not permitted
111	Store not permitted from off point
112	Subscript error
113	System error (HG data handler detected)
114	Tracking cannot be configured
115	Entry prohibited because of tracking
116	Tracking must be configured
117	Duplicate

Value	Definition
118	Y cannot be configured to own LSP
119	Point type ID error
120	Segment class error
121	Invalid control algorithm error
122	Invalid PV algorithm error
123	Segment size exceeds maximum segment size
124	Memory unavailable
125	Get memory error
126	Structural parameter missing
127	Structural parameter maximum violated
128	Invalid cc rank
129	Store not permitted while casreq
130	Analog output used for modulating control
131	Y must be configured to own lsp
132	Store not permitted unless free variable
133	Control lock error
134	Point not primary
135	Off node parameter access error
136	Memory allocation error
137	Unit mismatch
138	Point must be scheduled
139	Before after period incompatible
140	Integer value required
141	Invalid PV equation
142	Invalid ctl equation
143	Invalid number of PV inputs
144	Invalid number of ctl inputs
145	Invalid number of ctl outputs
146	Invalid PV algorithm ID
147	Invalid ctl algorithm ID
148	Invalid PV algorithm
149	Invalid ctl algorithm

Data Access Status ValuesValue Definitions

Value	Definition
150	Invalid rb option
151	PV algorithm ID cannot be null
152	CTL algorithm ID cannot be null
153	PV algorithm ID structural parameter fetch error
154	CTL algorithm ID structural parameter fetch error
155	RB option structural parameter fetch error
156	SP option structural parameter fetch error
157	PV equation structural parameter fetch error
158	Control equation structural parameter fetch error
159	Number of PV inputs structural parameter fetch error
160	Number of ctl inputs structural parameter fetch error
161	Number of ctl outputs structural parameter fetch error
162	Copctype structural parameter fetch error
163	Structural parameter fetch error
164	Invalid structural parameter
165	Configuration error
166	Number of ctl outputs is zero
167	Fetch not permitted
168	Change restricted to engineering personality
169	Change restricted to on process personality
170	Access level error
171	Attribute ID error
172	Function level error
173	Parameter ID error
174	Parameter qualifier type error
175	Parameter type invalid
176	Prefetch item error
177	Data type error
178	Rev 20 disallows both SOPL and trend memory
179	Limit or range exceeded
180	Limit or range crossover
181	Inconsistent lrc for point build

Value	Definition
128	Point build HG only
183	Must configure enough cl slots for standard actions
184	Point must be inactive or ready
185	Point not active or not configured in a History Group
186	No batch slot or no slot of sufficient size is available
187	Number of concurrent batches not established
188	Only active or inactive allowed
189	Prototype must have cls to be cloned
190	Only one dual output store permitted per request
191	Illegal timer state
192	Illegal counter state
193	Invalid number of ainpts
194	Invalid number of ordstns
195	Invalid number of orvals
196	Not enough contiguous memory
197	Data point is too large
198	Point is local manual
199	Group not configured error
200	Process Manager-IOL communications error
201	Process Manager-IOL resource error
202	Process Manager-TVR too small
203	Process Manager-Calibration in progress
204	Process Manager-Command not supported
205	Process Manager-function not implemented
206	Process Manager-IOL pre-fetch table full
207	Process Manager-IOL post-store table full
208	Process Manager-max point processing rate exceeded
209	Process Manager-no pre-fetch connections for selected slot
210	Process Manager-only one connection allowed to IOL
211	Process Manager-Pre-fetch buffer overflow
212	Process Manager-Post-store buffer overflow
213	Process Manager-ptexecst or modlstat inconsistent

Data Access Status ValuesValue Definitions

Value	Definition
214	Process Manager-point in alarm
215	Process Manager-PPX task not started
216	Alarm configuration mismatch
217	Control state read error
218	Control state basic error
219	Control state test error
220	Input and output required
221	Input and output box mismatch
222	Current state disallows operational state change
223	Configuration forcing in effect
224	Current procmod disallows store
225	Device must be in idle
226	Device must be in reset
227	Illegal box protocol
228	Invalid box status
229	Invalid characterization type
230	Invalid database index
231	Parameter not loaded
232	PV source invalid
233	Event overload
234	SP lock error
235	Improper access level
236	Invalid attribute ID
237	No such entity ID
238	No such function level in data owner
239	Initialization value
240	Communication path to data owner is disabled
241	Invalid parameter ID
242	Improper parameter qualifier type
243	Given parameter type is invalid for the requested operation
244	Prefetch item error
245	Serial number in point ID does not match

Value	Definition
264	Value type presented for store was not of the expected type
247	Invalid store value supplied
248	Subscript out of rang
249	Unable to perform specified limit check on store value
250	Value out of range, store not performed
251	Path to parameter cannot be completed
252	Bad data returned (input was bad)
253	Total value size exceeded (The sizes of data for the elements in this DDT add up to more than can be handled by LCN data access mechanisms. The DDT must be redesigned.)
254	Value envelope in user-supplied buffer is inconsistent with the value returned
255	Process Manager—PPX task not terminated
256	Process Manager—PMM scan rate must be null
257	Process Manager—PMM scan rate must not be null
258	Process Manager—WM invalid
259	Process Manager—WM insufficient data
260	Process Manager—WM invalid state
261	Process Manager—scan table overflow
262	Process Manager—calculator syntax error
263	Process Manager—calculator expression too big
264	Process Manager—permissive error
265	Process Manager—interlock error
266	Process Manager—UCN communication error
267	Process Manager—entity ID error
268	Process Manager—slot checkpoint exceeds available extension memory
269	Process Manager—invalid state pa status
270	Process Manager—invalid for secondary pa status
271	Process Manager—checksum bad
272	Process Manager—invalid sequence execution state
273	Process Manager—invalid process module stat
274	Process Manager—abnormal handler not available
275	Process Manager—sequence program must be loaded
276	Process Manager—sequence program exceeds configured slot size

Data Access Status ValuesValue Definitions

Value	Definition
277	Process Manager—no confirmable message pending
278	Process Manager—fatal sequence code errors
279	Process Manager—communications error
280	Process Manager—UCN encode error
281	Process Manager—UCN reception error
282	Process Manager—UCN transmit error
283	Process Manager—communication error
284	UCN data unavailable, target node status error
285	Process Manager-point is shutdown
286	Cannot leave current block
287	Cannot leave current step
288	Cannot leave current phase
289	Process Manager-target node local error
290	Illegal LM redundancy state
291	NG string scan error
292	NG enum scan error
293	NG cannot convert blind record scan error
294	NG enum array scan error
295	Illegal off network reference error
296	NG self-defining-enumeration scan error
297	NG self-defining-enumeration array scan error
298	NG scan members request error
299	NG security no access error
300	NG security store access error
301	Dump in progress
302	NG version revision mismatch
303	Error command not valid for on process personality {IO Simulation package}
304	Error command not valid for simulation personality {IO Simulation package}
305	Process Manager-IOL scan max limit exceeded
306	Process Manager-IOL scan cycle limit exceeded
307	State must be pause
308	State must be run or pause

Value	Definition
309	State must be idle or pause
310	Array mapping violation
311	Delete not allowed while func blocks assigned
312	Control output write not permitted
313	LC address alias mismatch
314	Parameter resource file contention {HM unavailable due to file resource contention}
315	Parameter resource busy {HM unavailable due to unavailable resource}
316	Writes not permitted
317	Files incompatible {when the key and perslock don't match}
318	Invalid target {when the IOP is not of the loadable type}
319	Max connections exceeded
320	Throw away parameter {prevent HG parameter from appearing in EB files}
321	State must be idle or run
322	Fieldbus brdp all handles in use
323	Fieldbus brdp handle not in service
324	Fieldbus brdp write outstanding
325	Fieldbus brdp write not outstanding
326	Fieldbus brdp invalid layer service handle
327	Cannot Reduce Slots Points Exist in NIM
328	Fieldbus fms initiate err
329	Fieldbus fms vfd err
330	Fieldbus fms appl err
331	Fieldbus fms def err
332	Fieldbus fms resource err
333	Fieldbus fms service err
334	Fieldbus fms access err
335	Fieldbus fms od err
336	Fieldbus fms other err
337	Fieldbus nma comref err
338	Fieldbus sys management err
339	Fieldbus loader err
340	Fieldbus startup err

Data Access Status ValuesValue Definitions

Value	Definition
341	Fieldbus runtime err
342	Fieldbus stack err
343	Fieldbus fileerr
344	Fieldbus ccr busy
345	Fieldbus no seg ccrs available
346	Fieldbus file datasize returned does match db
347	Fieldbus unexpected fbreq state
348	PA ok no data
349	Fieldbus brdp timeout
350	AM Rolling Average buffer span err
351	AM Rolling Average freq span err
352	AM Rolling Average buffer freq err
353	AM Rolling Average freq gt buffer
354	AM Rolling Average freq period err
355	AM Rolling Average buffer memory err


7. System Error Journal Messages

7.1 Overview

Message format

The error message reported in the System Error Journal appears as follows:

Figure 2 System Error Journal Message Format

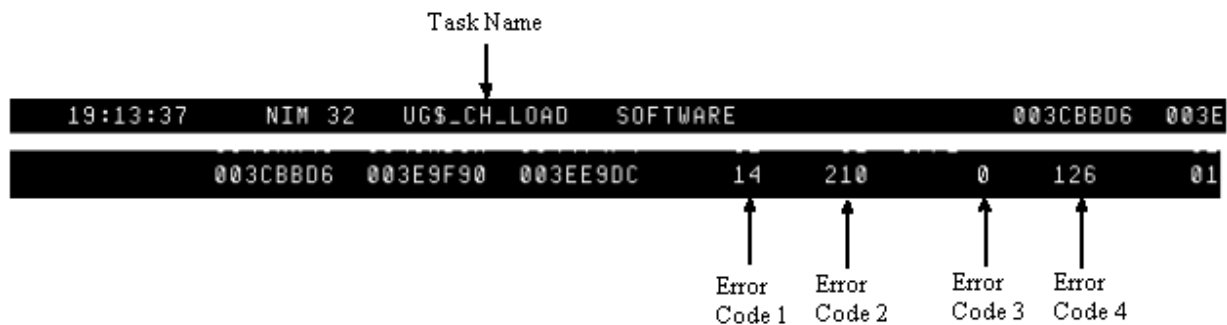

Error Codes 1-4 (**14**, **210**, **0** and **126** in the example above) are the codes that are part of System Error messages. Error Code 1 gives the software module names that encountered the error. Error Code 3 gives the function that encountered the error. Task Name is part of the system error message (UG\$_CH_LOAD in the above example). The combination of Error Code 2 and Error Code 4 gives the details of the errors, which are tabulated in the tables that follow.

If any of the integers are not specified in the table, use the specified ones to interpret the error message. This table lists the errors based on the combination of error codes and does not pertain to any task or module. Any module/task may result in these errors as the individual case may be.

Definitions for the acronyms used in the tables are as follows:

oft and qlt files are the personality files in the &LDR and Hmlocal volumes (Ref System Start-up guide)

CL – A unique count sent from secondary to primary through LCN.

CL – Control Language.

CP – Checkpoint.

CU – The count echoed back from primary to secondary through UCN.

DO – Digital Output.

EIP – Event Initiated Processing.

FMRB – File Manager Resource Block.

LNA – Logical Node Alias.

LNI – Logical Node Instance.

MC – Multifunction Controller.

PLS – Primary LCN status (0 – OK, 1- Alone, 2 – Fail)

PUS – Primary UCN status (0 – OK, 1- Alone, 2 – CommFail, 3-Fail, 4- Offline, 5- HW Fault)

SLS - Secondary LCN status (0 – OK, 1- Alone, 2 – Fail)

SOE – Sequence of Events.

SUS – Secondary UCN status (0 – OK, 1- Alone, 2 – CommFail, 3-Fail, 4- Offline, 5- HW Fault)

In some of the entries in the following tables, LRC number is specified. This LRC # can be used to find the point ID as illustrated below.

For LRC < 4000: \$NTWRKnn.\$SLTP01(LRC)

For LRC > 4000: Subtract 4000 from the LRC (call it LRCb) and use: \$NTWRKnn.\$SLTP02(LRCb)

\$NTWRKnn.\$SLTP01(LRC) will give the point ID.

7.2 AM Error Messages

Error Message Format

The error messages are real-time journal messages. They are printed (journalized) on a printer in this form:

(time)(node type/number)(task name)SOFTWARE(three hex nos.)(4 decimal nos.)

In most cases, an auxiliary status message containing additional information appears on the Auxiliary Status display and also is journalized preceding the error message.

Interpretation and Remedies

Table 6 AM Errors and Remedies

Task Name	Leading Decimal Digits	Meaning	Remedy
B\$IPP	427	AM ran out of memory during a load.	Add memory to the AM or change Network Config. To reduce the number of units.
B\$EVD	121		
B\$NST	195, 309		
L\$CLL	29, 36, 50, 55		
data_access	14, (integer), 0, 13501		
B\$PRSTS	224		
B\$NST	336 and the last decimal digit is 4	Master file for a unit is missing from the HM during a load.	Determine the missing file and copy from a cartridge or floppy to the HM.
B\$NST	336 and the last decimal digit is 5	Timeout while waiting for a volume to be mounted during a load.	Start over.
L\$CLL	37, 38	File required for a load is missing.	Determine the missing file and copy to startup medium (cartridge, floppy, or HM).
L\$CLL	49	Invalid CL catalog encountered during a load.	Start over using a valid catalog.
B\$RED_TASK	239	Primary-Secondary personality revision/version mismatch.	Restart both primary and secondary with same personality version/revision.
B\$RED_TASK	240	Redundancy hardware failure.	Replace AMR board in primary AM, or replace AMR board in secondary AM.
B\$RED_TASK	241	LCN failure.	Refer to <i>LCN Guidelines</i> in the <i>LCN Site Planning & Installation</i> binder.
(any task)	252	Redundancy hardware failure.	First, check AMR board in secondary AM, then check AMR in primary AM.

System Error Journal Messages
AM Error Messages

Task Name	Leading Decimal Digits	Meaning	Remedy
B\$RED_TASK	245	Redundancy hardware failure on startup.	First, check AMR board in secondary AM, then check AMR in primary AM.
B\$RED_TASK	347	Primary and secondary memories do not compare.	First, check AMR board in secondary AM, then check AMR in primary AM.
B\$RED_TASK	238	Resynchronization during secondary statrtup.	Try the startup again.
B\$RED_TASK	250	Secondary buffer overflowing repeatedly.	Add to redundancy buffer.
data_access	265	Primary switchover during secondary startup.	Restart both primary and secondary.
B\$NST or B\$RED_TASK	266	Primary and secondary memory mismatch.	Check memory boards in primary and secondary.
B\$RED_TASK	296	Repeated redundancy bus errors.	Check AMR board in secondary AM.
B\$RED_TASK	242, 1, -5, 17	Secondary ROM full error.	Check AMR board in secondary AM.
B\$NST	389	Illegal node configuration, 68000 microprocessor used on one of the redundant AMs.	If the boards are different, replace the older microprocessor with an MPU or K4LCN board.
B\$NST	355, and the last two decimal digits are 19	File for unit referenced in master file missing during a load.	Retry, use backup checkpoint, or call Honeywell.
B\$PRSTS	226	Point-processor overrun.	AM is overloaded. Either reduce the load by setting points inactive, or reconfigure the AM with fewer units.
B\$PRSTS	227	CL block in an infinite loop or point-processor overrun.	If you can't determine which CL block has an infinite loop, call Honeywell. If you have a processor overrun, see the remedy above.
data_access	26,0,0,13705	During startup, a CDS's rev. code doesn't match an existing CDS.	Call Honeywell.
data_access	16,(intgr.),0,13503 or 4,(intgr.),0,1309 or 4,(intgr.)0,13098	Unrecoverable file error during a load.	Copy DSD files from &ASY floppy to HM and retry. (For a system with no HMs, retry with a new &ASY cartridge or floppy.)

Task Name	Leading Decimal Digits	Meaning	Remedy
data_access	15,(intgr.),0,13502 or No DSD (integer) or 4,(intgr.)0,13096 or 4,(intgr.),0,13099	DSD file required for a load is missing.	Copy DSD files from &ASY floppy to HM and retry. (For a system with no HMs, retry with a new &ASY cartridge or floppy.)
data_access	15,(intgr.),0,23903	File DUPLICAT.SP missing from &ASY vol.	Reload a US with Operator or Eng. Personality to recreate the missing file.
data_access	16,(intgr.),0,23905 or 16,(intgr.),0,23907 or 18,(intgr.)0,23909	Unrecoverable file error during a load.	Delete the DUPLICAT.sp file from &ASY and reload a US with Operator personality or Engr. Personality to recreate DUPLICAT.SP on &ASY.
data_access	4,(intgr.),(intgr.),29 306	File DUPLICAT.SP is wrong version.	Delete the DUPLICAT.sp file from &ASY and reload a US with Operator personality or Engr. Personality to recreate DUPLICAT.SP on &ASY.

7.3 HG Error Messages

Summary of HG Error Messages

Table 7 HG Error Message Summary

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	60			Transient Error	Repeat the operation Restart the HG
7	82			Fast PV access failed. Hiway Error	Check the Hiway status
12				Storing HG data failed. Internal error	Repeat the operation
14				Internal Error or file operation might failed	Repeat the operation
15				File operation might have failed	Repeat the operation
27	124			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
29	119			Out of Heap memory	Check the Heap through PERFMENU
30	111			Hiway read failed	Check the Hiway status
31	111			Hiway read failed	Check the Hiway status
32	54			Transient Error	Repeat the operation Restart the HG
34	48,77, 78,82, 83,			Hiway read failed	Check the Hiway status
35,3 6	75,11 1,82			Hiway read failed	Check the Hiway status
37	48,78, 80			Hiway error	Check the Hiway status
39	44			Transient Error	Repeat the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
39	54			Transient Error	Repeat the operation Restart the HG
39	60			Transient Error	Repeat the operation Restart the HG
40	79,81			Events are disabled. Hiway Error	Enable the critical point events also check the Hiway status
41	44			Transient Error	Repeat the operation Restart the HG
41	48			Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
42	48			Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
43	48			Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
43	98			Internal error	Ignore the error; if the error is repeated contact Honeywell TAC
44	42			Testing the EIP requests to determine their completion is failed	Check EIP receiver (AM) status
45	91	0		Transient Error	Repeat the operation Restart the HG
46	91	0		Transient Error	Repeat the operation Restart the HG
47	44			Transient Error	Repeat the operation Restart the HG
47	52	0		Internal Error related to CL library	Check all the CL applications to see if they encountered an error
47	76			Transient Error	Repeat the operation Restart the HG

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
48	52	0		Converting CL message to proper format is failed	Restart the CL process point
50	48			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
51	91			Transient Error	Repeat the operation Restart the HG
53	99	-13602		Internal error	Ignore the error; if the error is repeated, contact Honeywell AC
54	45			EIP events reporting failed for store parameter of AM etc. Storing a blind record in appropriate point is failed	Check the availability of AM; Check if the Hiway and box are in FULL CONTROL.
54	53			Transient Error	Repeat the operation Restart the HG
54	96	0		Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
54	97	0		Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
55	70			Transient Error	Repeat the operation Restart the HG
55	74			Transient Error	Repeat the operation Restart the HG
56	70			Transient Error	Repeat the operation Restart the HG
56	91	0		Transient Error	Repeat the operation Restart the HG
56	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
57	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
58	50			Transient Error	Repeat the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
58	59			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
59	54			Transient Error	Repeat the operation Restart the HG
59	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
60	50			Transient Error	Repeat the operation Restart the HG
60	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
61	54			Transient Error	Repeat the operation Restart the HG
61	71			Transient Error	Repeat the operation Restart the HG
61	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
62	4			SOE time stamp failed for box number of error code 3	Check the LCN time Check LCN Time synchronization Check the primary and backup clock source Reload the HG
62	48			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
62	51	0		SOE time stamp failed for box number of error code 3	Check the LCN time Check LCN Time synchronization Check the primary and backup clock source Reload the HG

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
62	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
63	51	0		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
63	84	0		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
63	98			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
63	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
64	24	0		Environment error with resource constraints	Repeat the operation Restart the HG
64	75	0		Transient Error	Repeat the operation Restart the HG
64	84	0		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
67	48	2		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
68	91	0		Transient Error	Repeat the operation Restart the HG
70	60			Transient Error	Repeat the operation Restart the HG
70	73			Transient Error	Repeat the operation Restart the HG
71	50			Transient Error	Repeat the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
72	60			Transient Error	Repeat the operation Restart the HG
73	72			Transient Error	Repeat the operation Restart the HG
73	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
74	44			Transient Error	Repeat the operation Restart the HG
75	102			Illogical point in Database	Delete the point. If problem persists restart the node
77	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
79	50			Transient Error	Repeat the operation Restart the HG
80	50			Transient Error	Repeat the operation Restart the HG
80	59			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
80	111			Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
85	60			Transient Error	Repeat the operation Restart the HG
85	87			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
85	89			Redundancy Error	Check the secondary status Restart the secondary

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
86				Database configuration failed	Restart the node
88				DO point might failed	Check the DO points configured
89	24			Environment error with resource constraints	Repeat the operation Restart the HG
90				Hiway read may have failed	Check the hiway status
91				Control counter point may have failed	Check the configured control counters
92	53			Transient Error	Repeat the operation Restart the HG
92	58			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
93				Setting up the period time failed	Restart the node
94	24			Environment error with resource constraints	Repeat the operation Restart the HG
95	12	0		Sync of LCN time in MC box failed	Reload the box
95	78			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
96	59	0, 1		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
96	62	2		Transient Error	Repeat the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
97	55	0		Transient Error	Repeat the operation Restart the HG
98	55	0		Transient Error	Repeat the operation Restart the HG
98	135	0		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
99	8	1		Transient Error	Repeat the operation Restart the HG
99	62	0, 1		Transient Error	Repeat the operation Restart the HG
99	132	1,3, 4		Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
99	139	1		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
100	139	1		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
101	8	1		Transient Error	Repeat the operation Restart the HG
101	20	1		Environment error with resource constraints	Repeat the operation Restart the HG
101	135	1		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
101	138	2,1		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
101	139	2		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
103	1			Environment error with resource constraints	Repeat the operation Restart the HG

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
103	24			Environment error with resource constraints	Repeat the operation Restart the HG
104	7	0		Environment error with resource constraints	Repeat the operation Restart the HG
104	147			Corrupted message/communication error	Check Hiway and LCN for communication errors/status
105	134	0		Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
106	8			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
107	148			Invalid error	Contact Honeywell TAC.
111	137	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
112	6	1		Database initialization failed	Repeat the operation
112	6			Database initialization failed	Repeat the operation
112	8			Transient Error	Repeat the operation Restart the HG
112	28	0		Environment error with resource constraints	Repeat the operation Restart the HG
119	130			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
124	24			The FMRB that is needed by the check pointing task initialization is failed	Repeat the operation Restart the HG
124	31	1		Memory initialization failed for FMRB	Check the status of the checkpoint media
125	3	0		Node startup or switchover failed	Reload the load
125	5	0		Transient Error	Repeat the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
125	6	3		Changing LNI state failed	Check the primary and secondary connections Check for LCN/Hiway cable errors Reload the secondary
126	167	0		Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
128	26	0		Environment error with resource constraints	Repeat the operation Restart the HG
128	26			Environment error with resource constraints	Redo the operation Restart the HG
128	132	0		Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
128	26,12 9,132			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
129	135			Hiway Error	Check the hiway status Check the hiway connections Check the hiway box status
129	136	0		Communication error/configuration error	Check Hiway and LCN for communication errors/status
129	137	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
129	138			Corrupted message/communication error	Check Hiway and LCN for communication errors/status
129	139	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
130	20	0		Environment error with resource constraints	Repeat the operation Restart the HG
130	27	0		Environment error with resource constraints	Repeat the operation Restart the HG
130	119,1 50			Blind-record size and actual size mismatch	Check that the checkpoints are not corrupted

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
133	6	0		Setting LNI state inactive when deleting LNAs failed	Check the primary and secondary connections Check for LCN/Hiway cable errors Reload the secondary
133	14	0		Hiway Error	Check the hiway status Check the hiway connections Check the hiway box status
133	119			Out of Heap memory	Check the Heap through PERFMENU
134	142	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
134	143	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
134	144	0		Corrupted message/communication error	Check Hiway and LCN for communication errors/status
135	57	0		Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
136	169	0		Redundancy Error	Check primary, secondary status Check communication Restart secondary
137	57	0		Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
137	169	0		Redundancy Error	Check primary, secondary status Check communication Restart secondary
138	22	0		Environment error with resource constraints	Redo the operation Restart the HG
138	26			Environment error with resource constraints	Redo the operation Restart the HG

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
138	168			Redundancy Error	Check primary, secondary status Check communication Restart secondary
139	117			Synchronization problem between primary and secondary	Restart secondary
139	167	0		Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
139	182			Redundancy error	Check hiway and LCN status
140	116	0		Primary failed to handle secondary's absence.	Bring up the secondary.
140	172	0		Errors in the message security record are reported to the system and the message is not processed. The system error support should decide which node to shut down.	Check hiway and LCN status Restart secondary
140	173	1		Redundancy Error	Check hiway and LCN status Restart secondary
140	226			State change event error	Check the "STATUS DETAIL" for detail about failure
141	2	0		Primary failed to acknowledge secondary	Check the primary and secondary connections Check for LCN/Hiway cable errors Reload the secondary
141	112	0		Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status
141	118	0		Redundancy Error	Check the redundant HG and the connecting cables on primary and secondary.
141	226			State change event error	Check the "STATUS DETAIL" for detail about failure
142	112	0		Hiway Error	Check the hiway status. Check the hiway connections Check the hiway box status

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
142	118	0		Switchover message from primary is failed	Restart the secondary
142	173	0		Redundancy Error	Check hiway and LCN status Restart secondary
142	174			Redundancy Error	Check hiway and LCN status Restart secondary
142	226			State change event error	Check the "STATUS DETAIL" for detail about failure
143	112,1 18,17 3,174, 226			Redundancy might failed.	Restart the secondary
144	22	0		Environment error with resource constraints	Repeat the operation Restart the HG
145	116	0,1		Primary failed to handle absence of secondary	Bring up the secondary
146	7			Redundancy related error	Restart the secondary
147	7			Redundancy related error	Restart the secondary
148	171	0		Redundancy Error	Check primary, secondary status Check communication Restart secondary
149	174			Redundancy Error	Check hiway and LCN status Restart secondary
149	225			State change event error	Check the "STATUS DETAIL" for detail about failure
149	226			State change event error	Check the "STATUS DETAIL" for detail about failure
150	112	0		Checkpoint error	Ensure that the checkpoints are not corrupted
151	175			Redundancy Error	Check hiway and LCN status Restart secondary

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
151	176			Check the channels to verify that they are not clogged up and causing US display to become erratic.	Check hiway and LCN status Restart secondary
152	22			Environment error with resource constraints	Repeat the operation Restart the HG
152	226			State change event error	Check the "STATUS DETAIL" for detail about failure
153	7	1		HG startup primary or secondary processing failed	Reload the load
153	24			Environment error with resource constraints	Repeat the operation Restart the HG
154	153			Corrupted message/communication error	Check Hiway/LCN cable status
154	155			LCN/Hiway Error	Check Hiway/LCN cable status
154	156	37,38		Invalid message source	Check Hiway/LCN cable status
155	153			Corrupted message/communication error	Check Hiway/LCN cable status
155	155			Test message size synch feedback channel rec	Check Hiway/LCN cable status
155	156	40		LCN/Hiway Error	Check Hiway/LCN cable status
155	157			Bad Feedback - CRASH	Check Hiway/LCN cable status
156	152			Synchronization timeout	Check Hiway/LCN cable status
157	7	1		Environment error with resource constraints	Repeat the operation Restart the HG
157	160			Valid step number not found	Restart the sequence
159	47			Transient Error	Repeat the operation Restart the HG
160	48			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
160	53	1,3		Transient Error	Repeat the operation Restart the HG
160	156	4		Invalid enum set number. Report error	Check Hiway/LCN cable status
161	165			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
162	108			Transient Error	Repeat the operation Restart the HG
163				Deleting a point failed. Database might corrupted	Repeat the operation
164	102			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
165	103			Hiway error	Check the hiway status Check the hiway connections Check the hiway box status
166	17			Environment error with resource constraints	Repeat the operation Restart the HG
167	18			Environment error with resource constraints	Repeat the operation Restart the HG
168	25			Environment error with resource constraints	Repeat the operation Restart the HG
169	16			Did NOT Get Memory For Work_Block during checkpoint	Repeat the operation Restart the HG
169	22			Environment error with resource constraints	Repeat the operation Restart the HG
172, 173	7			Internal error	Restart the node
174	24	0		Environment error with resource constraints	Repeat the operation Restart the HG
174	87			INITIALIZE VARIABLE DEAD BANDS required for Checkpointing has failed	Reapply the checkpoint

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
174	187	0		Secondary startup error	Check that online migration between the releases of primary and secondary is allowed
175	31			Check point error	Check the status of the checkpoint media
176	26,14,168,184			HG Checkpoint failed.	Reapply the checkpoint.
177	191	0		Checkpoint failed	Check that database files are writeable
178	15	6410		HG slow commands server start failed	Restart the HG
178	150	0		Failsafe code to determine whether our buffers are bigger than the DA pages is failed	Ensure that the checkpoints are not corrupted
178	185	0		Secondary checkpoint/Checkpoint error	Check hiway and LCN status Check the checkpoint media
178	188	0, 1		Checkpoint read failed	Check that database files are readable, are the correct version, and have not been corrupted
178	189	0		Primary startup error	Check that database files are readable, are the correct version, and have not been corrupted
178	190	0		Checkpoint store failure	Check that database files are writeable
178	224	0		Invalid master file - revision mismatch	Check the revision of the checkpoint file Check the size of the checkpoint files Check that the files are not corrupted
179	16	0		Did NOT Get Memory For Work_Block during checkpointing	Check the available heap memory Check the CPUFREE value Repeat the operation that caused the error. Restart the HG
179	141			CP primary to secondary copy failed	Check the primary and secondary releases. Check if online migration between the two is supported

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
179	168			Redundancy Error	Check primary and secondary status Check communication Restart secondary
179	183			Secondary checkpoint/Checkpoint error	Check hiway and LCN status Check the checkpoint media
179	184			Secondary checkpoint/Checkpoint error	Check hiway and LCN status Check the checkpoint media
180	29			Checkpoint failed as file operation failed.	Check the status of the checkpoint media Apply checkpoint again or restart the node and then apply checkpoint
181	193			Partial checkpoint store error	Check that database files are writeable
182	203			Box checkpoint store failure	Check the HG cable status; box status and the Medium (HM or Drive where Check point is stores) status
183	88	0		Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
	9, 10, 11, 13, 19, 21, 23			Invalid error	Contact Honeywell TAC
	24			Environment error with resource constraints	Repeat the operation Restart the HG
	26			Environment error with resource constraints	Repeat the operation Restart the HG
	28, 30, 32, 33 - 43			Invalid error	Contact Honeywell TAC
	46			Transient Error	Repeat the operation Restart the HG
	49			Internal Error or node too busy	Repeat the operation.

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	46, 56, 61, 63-69, 77-82			Invalid error	Contact Honeywell TAC
	83	0		Transient Error	Repeat the operation Restart the HG
	85			Transient Error	Repeat the operation Restart the HG
	86			Transient Error	Repeat he operation Restart the HG
	90, 92-95, 100, 101, 104 - 110			Invalid error	Contact Honeywell TAC
	113			Out of Heap memory	Check Heap free and CPU free. Check HG loading event rate and other performance factors
	114, 115, 120			Invalid error	Contact Honeywell TAC
	121			Hiway error	Check the hiway status. Check the hiway connections Check the hiway box status
	122, 123			Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
	125- 128, 130, 131, 133, 140, 145, 146			Invalid error	Contact Honeywell TAC
	149	0		HG critical process not done.	Check Heap free and CPU free. Check HG loading event rate and other performance factors

System Error Journal Messages
HG Error Messages

HG Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	151, 154, 158, 159, 161- 164			Invalid error	Contact Honeywell TAC
	167			Hiway Error	Check the hiway status Check the hiway connections Check the hiway box status
	177			Hiway address calculation error	Check hiway status and hiway box status
	170, 178- 181, 186, 192, 194- 223			Invalid error	Contact Honeywell TAC

7.4 Other HG Errors

Overview

The following information describes some additional errors that the HG may report.

DH_STORE errors

Task names of the errors: D\$_DH_STORE1, D\$_DH_STORE2, D\$_DH_STORE3, D\$_DH_STORE4, and D\$_DH_STORE5

There are five store tasks used by the HG. The message you receive may be from STORE1, 2, 3, 4 or 5. These messages are usually received while some point configuration is being done and an error occurs. Point configuration actions such as loading points (storing box data) or modifying point configuration can often result in DH_STORE errors and can usually be ignored. Occasionally, the system will notify these kinds of errors on a consistent basis, like every minute or every second or on some timed frequency. When this is the case, this is usually indicative of an AM or CG point or program attempting to store to an HG point, the configuration of which has been modified or corrupted. The error message will provide a clue as to the point that is creating the STORE error. To find that, do the following:

The error contains 4 integers, either at the end of the RTJ error, or as the Param1 and Param2 values in the SMCC display. Param1 contains integers 1 and 2. Param2 contains integers 3 and 4. In most HG errors that contain a D\$ task beginning, the 3rd integer is the Local Routing Code of the point that is generating the error. To find the tag name associated with this integer, if the integer is between 1 and 1000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE2 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 645, display \$PRSTS22.HGSPARE2(645). This will display the tag name identified by the message. If the integer is between 1001 and 2000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE3 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 1645, display \$PRSTS22.HGSPARE3(645). This will display the tag name identified by the message. If the integer is between 2001 and 3000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE4 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 2645, display \$PRSTS22.HGSPARE4(645). This will display the tag name identified by the message.

Invoke the Detail Display of the point in question and find the portions of the point that are unavailable or in error. The ALGORITHM type is usually “?????” for the point, indicating a database error. Reload the point or modify any invalid parameters.

EV_NORM error

Task name of the error: D\$_EV_NORM

The error should contain four integers, either at the end of the RTJ message, or listed as Param1 (integers 1 and 2) and Param2 (integers 3 and 4) in the SMCC Detailed Module Errors display. If integer 1 = 59, then integer 3 should contain the value 50xx, where xx will be the hiway address of the box reporting the error. There is a problem with the box listed in the error. The problem could be a Sample Time Clock overload, a ROM/RAM failure, or an overload from the hiway. It may require resetting this box or moving this box to a backup controller.

DH_RETRV errors

Task names of the errors: D\$_DH_RETRV1, D\$_DH_RETRV2, D\$_DH_RETRV3, D\$_DH_RETRV4, and D\$_DH_RETRV5

There are five retrieve tasks used by the HG. The message you receive may be from RETRV1, 2, 3, 4 or 5. These messages are usually received while some point configuration is being done. Point configuration actions such as loading points (storing box data) or deleting points can often result in DH_RETRV errors and can usually be ignored. Occasionally, the user will receive these kinds of errors on a consistent basis, like every minute or every second or on some timed frequency. When this is the case, this is usually indicative of a US, AM or CG display or point or program attempting to retrieve data from an HG point, the configuration of which has been modified, corrupted, or deleted. The error message will provide a clue as to the point that is creating the RETRIEVE error. To find that, do the following:

The error contains four integers, either at the end of the RTJ error, or as the Param1 and Pparam2 values in the SMCC display. Param1 contains integers 1 and 2. Param2 contains integers 3 and 4. In most HG errors that contain a D\$ task beginning, the third integer is the Local Routing Code of the point that is generating the error. To find the tag name associated with this integer, if the integer is between 1 and 1000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE2 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 645, display \$PRSTS22.HGSPARE2(645). This will display the tag name identified by the message. If the integer is between 1001 and 2000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE3 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 1645, display \$PRSTS22.HGSPARE3(645). This will display the tag name identified by the message. If the integer is between 2001 and 3000, use the DATACHNG schematic to display the Processor Status Data Point (PSDP), \$PRSTSnn.HGSPARE4 where nn = the HG LCN node address. For example, if the LCN node address of the HG is 22 and the third integer in the message is 2645, display \$PRSTS22.HGSPARE4(645). This will display the tag name identified by the message.

Invoke the Detail Display of the point in question and find the portions of the point that are unavailable or in error. The ALGORITHM type is usually "?????" for the point, indicating a database error. Reload the point or modify any invalid values.

DHI Driver error

Task name of the error: DHI DRIVER (viewed in SMCC only):

If there is a secondary code of 20, then the error indicates that the HG was unable to complete a periodic function (including, but not limited to, things like TimeOut Gate refresh, alarm scanning, and box status scanning). The occurrence of this error can usually be traced to a process upset that created a large alarm load on the HG, or to a large request from an AM or CG that created a large LCN request.

If there is a secondary code of 40, the error indicates that at least one hiway box is receiving poll/callup errors. Check and adjust the polling on all PIU and DHP box types.

If there is a secondary code of 8, the error indicates that the DHI board has failed while running. Replacing the DHI board would be the correct course of action.

If there is a secondary code of 9, the error indicates that the DHI board has failed while running. Replacing the DHI board would be the correct course of action.

CP_CHKPT error

Task name of the error: D\$_CP_CHKPT

The error should contain four integers, either at the end of the RTJ message, or listed as Param1 (integers 1 and 2) and Param2 (integers 3 and 4) in the SMCC Detailed Module Errors display. Integer 3 should contain 50xx, where xx is the hiway address of the box number reporting a checkpoint error. The box number identified in xx may have checkpointing inhibited or may be in an invalid state to checkpoint. Correct any box errors and set the box checkpoint status to ENABLE.

7.5 HM Error Messages

Summary of HM Error Messages



TIP

In an Enhanced Universal Control Network (EUCN), the FTE cable errors reported in HM error messages are interpreted in the same way as the UCN cable errors.

Table 8 HM Error Message Summary

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1		0	0	Failed to get HM initialization environment pointer	Restart HM if problem persists
1	484	0	0	Time synchronization error	Check System Status Journal and schematic CLOKSTAT
2-4		0	0	Internal Error	Restart HM if problem persists
5		0	0	MC_Timeout is a bad number	Restart HM
6-9		0	0	Internal Error	Check the redundant HM configuration
10		0	0	Delay routine failed	Restart the secondary HM
11		0	0	Not used	
12		0	0	Communication may have failed	Check the LCN communication
13-15		0	0	Internal Error	Restart HM
16		0	0	Checkpoint related error	Restart HM. Repeat the checkpoint operation
17		0	0	One of the nodes is in an unrecognizable state	Restart the secondary HM
18		0	0		Restart HM
19		0	0	Invalid data. Check the communication	Restart HM
20-24, 26-30		0	0	Internal Error	Restart HM
25		0	0	Date conversion routine has failed	Reset the date again
31-33	0	0	0	Internal Error	Restart HM
34		0	0	Internal Error	Restart HM

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
35,36		0	0	Checkpoint related error	Restart the HM and repeat the checkpoint operation. If problem persists, contact Honeywell TAC.
37		0	0	Checkpoint related error	Restart the HM and repeat the checkpoint operation
38	0	0	0	Checkpoint is disabled because disk has failed.	Restart the HM
39	0	0	0	Volume ID is bad	Either rename or delete the bad volume
40		0	0	Internal Error	Restart HM
41		0	0	Internal Error	Restart HM
42		0	0	Internal Error	Restart HM
43	0	0	0	CG checkpoint failed	Repeat the checkpoint operation
43	1	0	0	HG checkpoint failed	Repeat the checkpoint operation
43	3	0	0	AM checkpoint failed	Repeat the checkpoint operation
43	8	0	0	NIM checkpoint failed	Repeat the checkpoint operation
44		0	0		Restart HM
45		0	0	Getting checkpoint control pointer failed	Restart HM
46		0	0	Getting checkpoint control pointer failed	Restart HM
47		0	0		Restart HM
48		0	0	Checkpoint is disabled because disk has failed.	Restart HM
49	100	0	0	Date routine failed	Reset the time if this error appears repeatedly.
50		0	0	Date routine failed	Reset the time if this error appears repeatedly
51		0	0		Restart the HM
52		0	0	No LT Shutdown JOB.	Restart the HM
53		0	0	Checkpoint time out	Restart the HM or repeat the checkpoint operation
3	1	35	-1	Internal Error . Memory related	Repeat the operation
3	1	40		File operation error	Repeat the operation

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
3	1	5		Access level related error	Repeat the operation
3	1	3		File operation error	Repeat the operation
3	1	5		File operation error	Repeat the operation
3	1	9		File operation error	Repeat the operation
4					Repeat the operation
5	185	15		File operation error	Repeat the operation
5	186	7		File operation error	Repeat the operation
5	207	14		File operation error	Repeat the operation
5	206	16		File operation error	Repeat the operation
5	208	17		File operation error. File may be corrupted	Repeat the operation
6	71	5		File operation error	Repeat the operation
6	75	3		File operation error	Repeat the operation
6	77	8		File operation error	Repeat the operation
6	73	9		File operation error	Repeat the operation
7	441		0	File operation error	Repeat the operation
8	456	40	-1	File operation error	Repeat the operation
8	454	40	-2	File operation error	Repeat the operation
8	455	40	-3	File operation error	Repeat the operation
8	458	3	-4	File operation error	Repeat the operation
8	459	9	-5	File operation error	Repeat the operation
8	460	5	-6	File operation error	Repeat the operation
8	453	40	-1	File operation error	Repeat the operation
8	455	41	-3	Internal Error	Repeat the operation
8	456	41	-4	Internal Error	Repeat the operation
8	457	41	-5	Internal Error	Repeat the operation
8	65	42	-1	Internal Error	Repeat the operation
8	450	40	-4	Internal Error	Repeat the operation
8	458	9	-6	Internal Error	Repeat the operation
9				Internal Error	Repeat the operation

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
10				Internal Error	Repeat the operation
11				Internal Error	Repeat the operation
12	408	5		File operation error	Repeat the operation
13	647	3		File operation error	Repeat the operation
13	267	16		File operation error	Repeat the operation
13	270	16		File operation error	Repeat the operation
13	271	16		File operation error	Repeat the operation
13	649	8		File operation error	Repeat the operation
14	502 543 525	16		File operation error	Repeat the operation
14	536	16		Read_Cyclic_File_Unsuccessful	Repeat the operation
14	538 530 531	14		File Operation Error	Repeat the operation
14	526	5		Opening Cyclic file unsuccessful	Repeat the operation
14	544	46		Internal Error	Repeat the operation
15				Range Error	Repeat the operation
1	1	9		Consume unsuccessful Job_Deleted during a time out	Repeat the operation
1	2	9		Consume unsuccessful Job_Deleted during a time out. Internal Error	Repeat the operation
1	3	9		Produce Consume problem. Internal Error	Repeat the operation
3	-1	2		Virtual volume access failed	Repeat the operation
3	-1	66		Internal Error	Repeat the operation
3	-1	63		Read File Unsuccessful	Repeat the operation

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
3	-1	20	20	Local_NVCF is inconsistent	Repeat the operation
3	-1	64		Internal Error File operation related	Repeat the operation
3	-1	42		Internal Error. Memory related	Restart the HM
3	-1	65		Internal Error	Repeat the operation
3	-1	27		Internal Error	Repeat the operation
3	-1	24		Internal Error	Repeat the operation
3	-1	18		Internal Error	Repeat the operation
3	-1	10		Create_dir unsuccessful	Repeat the operation
3	-1	20		Internal Error	Repeat the operation
4		12		Create_LNI unsuccessful	Repeat the operation
5		19		Memory not available	Repeat the operation
6		19		Memory not available	Repeat the operation
7		23		Internal Error	Repeat the operation
7		29		Internal Error	Repeat the operation
8	-1	19		Memory related. Internal Error	Repeat the operation
8	-1	3		Internal Error	Repeat the operation
8	-1	26		Internal Error	Repeat the operation
9		11		Create Job error	Repeat the operation
10		17		Failed to start all the subordinate tasks	Repeat the operation
10		17		Dup_Directory_Check_Task failed to start	Repeat the operation
11	-1	9 15 16		Internal Error	Repeat the operation
12		-1	-1	Internal Error	Repeat the operation
14		8		Internal Error	Repeat the operation
15		14		Internal Error	Repeat the operation
16		13		Delete Job unsuccessful	Repeat the operation
17		8		Internal Error	Repeat the operation

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
18		-1	-1	Internal Error	Repeat the operation
19		-1	-1	Internal Error	Repeat the operation
20		23		Internal Error	Repeat the operation
20		29		Internal Error	Repeat the operation
21		1		Internal Error	Repeat the operation
23		-1	-1	Internal Error	Repeat the operation
24		-1	-1	Internal Error	Repeat the operation
25		11		Internal Error	Repeat the operation
26				Change_LNI_State unsuccessful that is, \$LNI_Already_Exists	Repeat the operation
27	-1	19		Memory related. Internal Error	Repeat the operation
27	-1	19		Memory related. Internal Error	Repeat the operation
27	-1	44		Failed to Set the selected device to the Formatted state	Repeat the operation
27	-1	62	1	Internal error	Repeat the operation
27	-1	21		Internal error	Repeat the operation
28	-1	39		Internal error	Repeat the operation
29		7	-1	Internal error	Repeat the operation
30				Internal error	Repeat the operation
31				Internal error	Repeat the operation
32		36		NA query failed	Repeat the operation
32	-1	3		Not enough memory	Repeat the operation
32	-1	15		Internal error	Repeat the operation
32	-1	16		Internal error	Repeat the operation
33	-1	-1		Internal error	Repeat the operation
34	1	0	0	Internal error	Repeat the operation
35				Internal error	Repeat the operation
36		-1	-1	Internal error	Repeat the operation

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
37		-1	-1	Read composite device status was not successful	Repeat the operation
38		42		Get FMRB was not successful	Repeat the operation
39					Repeat the operation
40	-1		0	History loss error	Check the event/history journal for any event loss
42	-1			Getting drive number failed	Repeat the operation
44	-1	-1		Failed to get the indexes for the disk drive into the PSDP structure	Repeat the operation
45	-1	30		Internal Error	Repeat the operation. Call Honeywell TAC.
45	-1	21		Consume unsuccessful	Repeat the operation. Call Honeywell TAC.
46		31		Responder list cannot be deleted	Repeat the operation. Call Honeywell TAC.
47		32		Internal error	Repeat the operation. Call Honeywell TAC.
48		33		Internal error	Repeat the operation. Call Honeywell TAC.
49		22		Internal error	Repeat the operation. Call Honeywell TAC.
50		34		Internal error	Repeat the operation. Call Honeywell TAC.
50		35		Internal inconsistency or lack of heap space	Repeat the operation. Call Honeywell TAC.
51		36		NAQ failed .internal error	Repeat the operation. Call Honeywell TAC.
51		36	-1	Internal error	Repeat the operation. Call Honeywell TAC.
52		34		Internal error	Repeat the operation. Call Honeywell TAC.
53		29		Internal error	Repeat the operation. Call Honeywell TAC.
54				Internal error	Repeat the operation. Call Honeywell TAC.

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
55				Internal error	Repeat the operation. Call Honeywell TAC.
56	-1	48		Internal error	Repeat the operation. Call Honeywell TAC.
57	-1	49		Checkpoint may not have done a save.	Repeat the checkpoint operation
58	-1	50		Volume ID in Auto Checkpoint can't be applied.	Blank volume name present. Rename the volume ID.
58	-1	50		Device pointer not available	Repeat the operation
58	-1	50		Internal error	Repeat the operation
60		30		Internal error	Repeat the operation
61	-1	52		Internal error	Repeat the operation
62		57		HM initial test failed	Internal error. No action required
62		54		HM initial test failed	Internal error. No action required
62		54		HM initial test failed	Internal error. No action required
62		55		HM initial test failed	Internal error. No action required
62		56		HM initial test failed	Internal error. No action required
62		58		HM initial test failed	Internal error. No action required
59	-1	51		HM startup failed	Restart the HM

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	1 2 5 8-10 12 14-17 21 59-65, 90-92 96 97 98, 102 106 107 109 112 114 116 119- 121 131 132 128, 194- 197			File operation resulted in an infinite loop	Repeat the operation. If problem persists restart the HM.

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	221- 224 227 229 230 232 234 236 238 240- 244 247- 249 260 263- 265 268 270 271 277 279 295 298 300 305 306 309 311 314 317 319 321 332- 337 422 437 440 444 446 496 502 507- 510 513 528 530- 532 534 536 538 543 653 664			File operation resulted in an infinite loop	Repeat the operation. If problem persists restart the HM.

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	195	0	0	File doesn't exist	Repeat the operation.
1	267	0	0	HI_Read_Cyclic_File_Unsuccessful	Repeat the operation.
1	530	0	0	Cyclic file open problem	Repeat the operation.
1	546	0	0	HI_Read_Cyclic_File_Unsuccessful	Repeat the operation.
1	543	0	0	HI_Read_Cyclic_File_Unsuccessful	Repeat the operation.
1	547	0	0	Cyclic file close failed	Repeat the operation.
1	273	0	0	Date conversion failed	Repeat the operation.
1	274	0	0	Date conversion failed	Repeat the operation
1	275	0	0	Date conversion failed	Repeat the operation
1	244	0	0	Failed to get data from RIRO	Repeat the operation
1	245	0	0	Work File Name generation problem	Repeat the operation
1	65	0	0	File operation unsuccessful	Repeat the operation
1	194	0	0	File operation unsuccessful	Repeat the operation
1	195	0	0	File operation unsuccessful	Repeat the operation
1	198	0	0	File operation unsuccessful	Repeat the operation
1	127	0	0	Fan Out Running File Unavailable	Repeat the operation
1	324	0	0	Fan Out Running File Unavailable	Repeat the operation
1	325	0	0	File operation related error	Repeat the operation
1	238	0	0	File operation related error	Repeat the operation
1	619	0	0	File operation related error	Repeat the operation
1	620	0	0	File operation related error	Repeat the operation
1	622	0	0	File operation related error	Repeat the operation
1	624	0	0	File operation related error	Repeat the operation
1	626	0	0	File operation related error	Repeat the operation
1	628	0	0	File operation related error	Repeat the operation

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	108	0	0	File operation related error	Repeat the operation
1	111	0	0	File operation related error	Repeat the operation
1	113	0	0	File operation related error	Repeat the operation.
1	120	0	0	File operation related error	Repeat the operation.
1	69	0	0	File operation related error	Repeat the operation.
1	331	0	0	CHP_control_and_restart_information_rec saving failed	Repeat the operation.
1	131	0	0	File operation related error	Repeat the operation.
1	120	0	0	File operation related error	Repeat the operation.
1	121	0	0	File operation related error	Repeat the operation.
1	317	0	0		Repeat the operation.
1	319	0	0		Repeat the operation.
1	421	0	0	Memory related error. Internal error	Repeat the operation.
1	434	0	0	Internal error	Repeat the operation.
1	433	0	0	Internal error	Repeat the operation.
1	435	0	0	Internal error	Repeat the operation.
1	438	0	0	Internal error	Repeat the operation.
1	639	0	0	Internal error	Repeat the operation.
1	442	0	0	Power problem	Restart the HM, check the power supply
1	478	0	0	Cycle overrun. Internal error	Repeat the operation.
1	471	0	0	Date conversion routine failed	Restart the HM.
1	472	0	0	Date conversion routine failed	Restart the HM.
1	258	0	0	Date conversion routine failed	Restart the HM.
1	259	0	0	Date conversion routine failed	Restart the HM.
1	188	0	0	Internal error	Restart the HM.
1	490	0	0	Internal error	Restart the HM.

System Error Journal Messages
HM Error Messages

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	81	0	0	Internal error	Restart the HM.
1	642	0	0	Internal error	Restart the HM.
1	476	0	0	Internal error	Restart the HM.
1	645	0	0	Internal error	Restart the HM.
1		0	0	Internal error	Restart the HM.
1	403	0	0	Internal error	Restart the HM.
1	404	0	0	Internal error	Restart the HM.
1	405	0	0	Internal error	Restart the HM.
1	406	0	0	Internal error	Restart the HM.
1	407	0	0	Internal error	Restart the HM.
1	643	0	0	Internal error	Restart the HM.
1	618	0	0	Internal error	Restart the HM.
1	623	0	0	Internal error	Restart the HM.
1	627	0	0	Internal error	Restart the HM.
1	483	0	0	Internal error	Restart the HM.
1	482	0	0	Internal error	Restart the HM.
1	52	0	0	Internal error. HM startup might have failed	Restart the HM.
1	85	0	0	Internal error. Memory related error	Restart the HM.
1	425	0	0	Internal error	Restart the HM.
1	426	0	0	Internal error	Restart the HM.
1	427	0	0	Internal error	Restart the HM.
1	423	0	0	Internal error	Restart the HM.
1	653	0	0	File operation related error. Internal error	Restart the HM.
1	242	0	0	File operation related error.	Restart the HM.
1	597	0	0	Query on requested point has failed	Restart the HM
1	640	0	0	Query on requested point has failed	Restart the HM
1	579	0	0	Query on requested point has failed	Restart the HM

HM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
1	646	0	0	File operation related error.	Restart the HM
1	638	0	0	Sync problem	Restart the HM
1	637	0	0	Sync problem	Restart the HM
1	80	0	0	File operation related error.	Restart the HM
1	205	0	0	Sync problem	Restart the HM
1	252	0	0	Sync problem	Restart the HM
1	204	0	0	Internal error. Memory related error	Restart the HM
1	206	0	0	Internal Error. Heap is not consistent	Restart the HM
1	656	0	0	Internal error	Restart the HM

7.6 NIM Error Messages

Summary of NIM Error Messages

Table 9 NIM Error Message Summary

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	25	0-2	0-10	A read-pointer error has been detected at startup. NIM fails.	Reload the NIM
	36		85	Licensing error: Required licensing is not available.	Call Honeywell TAC or reload the NIM if NIM is in a Failed state.
	36		0,1,6, 8,15, 22-25, 29,30, 33, 36-45 48,51, 62,76, 86	Invalid error which may be the result of an internal error	Contact Honeywell TAC.
	36		13,14, 16,17, 18,21, 54,55, 58,70, 78	File access violation: Access violation could be the result of a file/volume access violation, involving use of duplicate names or invalid names.	Check the volume, path and file names for duplication. Check the access limitations.
	36		13,14, 16-18, 21,54, 55,58, 70,78	File not available: Device may not be mounted properly. Device/file/volume may not be present.	Mount the device properly. Check for availability of volume/files.
	36		2,7	File operation error. This may be the result of a long access time or a time-out.	Repeat the operation.
	36		26,27, 28,31	Insufficient memory: Memory may not be sufficient in the volume/device. Directory may be full.	Mount the device with sufficient memory. Delete unwanted directories.
	36		3,4,5, 75	Disk Error. The disk may be corrupted or errors have been detected in the disk.	Mount the disk again if an emulated drive. Change the disk if it is a ZIP or a Bernoulli.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	36		34,35	Multiple accesses of the same file. Same file may have been accessed simultaneously by multiple applications.	Review your applications programs. Call Honeywell TAC.
	36		46,47, 63,87	Illegal file operation:	Call Honeywell TAC.
	36		59-61	Out of Heap memory: US may not have sufficient memory to perform the task.	Check the Heap memory through PERFMENU. Try to close some less preferred applications.
	36		71,72, 73,77, 84	Disk corrupted/usage violation: Disk may be corrupted. Attempts might have been made to copy many directories in a volume/disk	Format the disk. Delete unwanted directories. Use caution to prevent potential loss of data.
	36		82, 83	Redundancy error: trying to execute a redundant function where redundancy is not available.	Check the availability of redundant device.
	36		88-93	Remote access error: Access of information across networks results in error.	Check the connectivity and availability of remote network/devices. Also check the access limitations.
	36		9-12, 49,50, 64-69, 74, 79-81	File manager resource error: Resources required by file manager encounter errors.	Many files may be open. Close the files you do not need at the present time. As a last resort, reboot the US.
26	41	0-2	85	Licensing error: Required licensing is not available.	Call TAC or reload the NIM if the NIM is in a failed state.
26	41	0-2	0,1,6, 8,15, 22,23, 24,25, 29,30, 33,36, 37,38, 39,40, 41,42, 43,44, 45,48, 51,62, 76,86	Invalid error that may be the result of an internal error.	Contact Honeywell TAC.

System Error Journal Messages

NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	41	0-2	13,14, 16,17, 18,21, 54,55, 58,70, 78	File/volume access violation that may be the result of trying to use duplicate names or invalid names.	Check the volume, path, and file names for valid names and duplication. Check the access limitations.
26	41	0-2	13,14, 16,17, 18,21, 54,55, 58,70, 78	File not available: Device may not be mounted properly. Device/file/Volume may not be present.	Mount the device properly. Check for availability of volume/files .
26	41	0-2	2,7	File operation error. This may be the result of a long access time or a time-out.	Repeat the operation.
26	41	0-2	26,27, 28,31	Insufficient memory in the volume/device. Directory may be full.	Mount a device with sufficient memory. Delete unwanted directories.
26	41	0-2	3,4,5, 75	Disk error caused by a corrupted disk or other errors in the disk.	Mount the disk again if an emulated drive. Change the disk if ZIP or Bernoulli.
26	41	0-2	34,35	Simultaneous accesses of the file by multiple applications	Review the applications software. Call Honeywell TAC.
26	41	0-2	46,47, 63,87	Illegal file operation	Check the status of the master file/disk space availability
26	41	0-2	59-61	Out of heap memory: US may not have sufficient memory to perform the task.	Check the heap by using PERFMENU. Try to close the less-preferred applications.
26	41	0-2	71,72, 73,77, 84	Disk corrupted/usage violation: Attempts may have been made to copy many directories in a volume/disk	Delete unwanted directories. Format the disk . Use caution to prevent potential loss of data.
26	41	0-2	82, 83	Redundancy error: trying to execute a redundant function when redundancy is not available.	Check availability of the redundant device
26	41	0-2	88-93	Remote access error: Access of information across networks results in an error.	Check the connectivity and availability of remote network/devices. Also check the access limitations.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	41	0-2	9-12, 49, 50, 64-69, 74, 79-81	File manager resource error: Resources required by file manager encounter errors.	Many files may be open at the same time. Close some of the files. A reboot of the US is recommended as a last resort.
107	57	LRC of referencing point	LRC* of referenced point	NIM cannot find the referenced point in its database	Check the checkpoint files/drives/volumes, the access levels, and the available free space
14	84			Parameter store warning during reading or writing of a UCN node's checkpoint parameter. This is not a fatal error during a save or restore operation.	Check the checkpoint files/drives/volumes, access levels, and the available free space
24	85	0-3	0	Checkpoint operation blocked by data access.	Check the checkpoint files/drives/volumes, access levels, and the available free space
21	86	0	0	Restore of data access names table failed at primary NIM start up. NIM fails.	Check the checkpoint files/drives/volumes, access levels and the available free space
26	87	1	0	No response from the target node. NIM database restore failed. Primary startup failed. NIM fails.	Check the node availability
26	87	2	0	Invalid command (As an example, an HM received a BOX FAST command)	Check the command. If problem persists, call Honeywell TAC.
26	87	3	0	Node is busy in doing another task.	Node is busy. Check the state of the node.
26	87	4	0	Invalid command; bad data in the request	Check the command
26	87	5	0	Insufficient memory in the target device.	Mount a drive with the required space.
26	87	6	0	Error in file access. Required file may not in the appropriate directory	Check the checkpoint files/drives/volumes.
26	87	7	0	Volume not found in the referred drive/volume.	Check the checkpoint files/drives/volumes.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	87	8	0	Target node is an incompatible state. As an example, a NODE LOAD command for a running node.	Set the node in the appropriate state.
26	87	9	0	Request aborted by the user.	Re-initiate the command. If problem persists, call Honeywell TAC.
26	87	10	0	Target node does not exist.	Check if the correct target node has been specified.
26	87	11	0	Conflict caused command to fail. As an example, while performing a demand NODE LOAD from an Operator station some other Operator station on the network has shutdown the node	Resolve the conflict between the nodes. If problem persists, call Honeywell TAC.
26	87	12	0	Command override required. As an example, loading the TREND MEMORY program into a box that already has the program loaded and executing.	Use with the override target.
26	87	13	0	Target node is in an incompatible state.	Check state of the target node
26	87	14	0	Target node has failed.	Reload the node.
26	87	15	0	Node transitioned to an illogical state during a load	Reload the node.
26	87	16	0	Operation aborted	Re-initiate the command.
26	87	17	0	QLT file cannot be found	Check the mount/volumes (in the &LDR volume)
26	87	18	0	OFT file cannot be found	Check the mount/volumes (in the &LDR volume or in HM local volumes)
26	87	19	0	Personality file failed.	Check the personality files. Re-load the node.
26	87	21	0	Target node number error	Check the target node number and the state of the target node.
26	87	22	0	Dump command failed	Destination drive may not have sufficient space. Mount a different drive with sufficient space.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	87	23	0	Target is in the off-line mode, another node is in command	Check the state of the target node
26	87	25	0	Load/dump operation is already in progress in target node.	Check the state of the target node
26	87	26	0	Problem with LCN boot loader or dumper.	Try to mount different personality files
26	87	27	0	Boot loader reported a bad checksum in personality file	Try to mount different personality files
26	87	30	0	Boot loader reported it could not continue, because it encountered an invalid file format	Try to mount different personality files
26	87	32	0	Expected physical state change did not occur	Repeat the operation
26	87	33	0	A mount volume request timed out	Repeat the operation
26	87	34	0	A mount volume request issued to a device other than a floppy disc	Mount the correct volume
26	87	35	0	A load/dump request cannot be accepted	Wait for several minutes and issue the request again.
26	87	36	0	Trying to create a duplicate directory	Check for duplicate directory
26	87	37	0	Too many drives are mounted.	Check for correct mounting of devices and volumes.
26	87	46	0	The mounted drive/volume failed	Check mounted volumes
26	87	47	0	Receiving node failed	Check the state of the receiving node
26	87	49	0	Access level error	Check Access level
26	87	50	0	Attempt may be made to restore the NIM-resident portion of the checkpoint to other UCN nodes.	Try to restore the correct UCN nodes..
26	87	51	0	Node/IOP is in an invalid state. As an example, IOP not in IDLE state during a check- point restore)	Set the node to the correct state

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	87	52	0	Checkpoint data not available on the mounted drive.	Check the mounted drive; mount the correct drive.
26	87	53	0	Check if some other application is preventing you from initiating a checkpoint operation. As an example, a point build may be in progress.	Check if the operation can be stopped so that the checkpoint operation can be performed.
26	87	54	0	Configuration mismatch	Check the configuration.
26	87	55	0	Target node is not in run (OK) state.	Check the state of the node.
26	87	56	0	Target node is not in IDLE state.	Check the state of the node
26	87	57	0	Access level error	Check Access level
26	87	58	0	Mismatch between software and firmware	Check firmware/software revision levels.
26	87	66	0	A soft failure exists in the PM	Refer to the PM Service document to climate the soft failure. Repeat the operation. If soft failure remains, contact Honeywell TAC.
26	87	68	0	Invalid file revision error.	Check for right file revision
26	87	69	0	Parameter access error	Retry your previous parameter access action.
26	87	70	0	Trying to compile a xPM CL with an non-Proc Mod point	Review your xPM CL program listing to ensure you are not attempting to compile the program without having the program reside in a process module data point.
26	87	71	0	Point is in an invalid execution state	Change the point state to a valid point state.
26	87	72	0	Sequence_program_Exceeds_configured_slot_size	Configure correct slot size for the process module data point.
26	87	73	0	Communication errors	Check the connectivity and availability of the I/O link (IOL).
26	87	74	0	Trying to compile an xPM CL program with an non-existing point	Check the program listing and provide the proper point name.
26	87	75	0	Invalid NIM Library or invalid sequence name has been specified	Provide the proper CL Library number or the CL sequence name.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
26	87	77	0	Command not executed on a primary node.	Issue the command to a primary node
26	87	79	0	Target node is in an invalid state.	Change the state of the target node to a proper state.
26	87	80	0	Auto checkpoint is in progress	Defer the operation until after the auto checkpoint has been completed.
26	87	83	0	Target is not in PAUSE state.	Check the state of the target
26	87	84	0	Target is not in OK/PAUSE state.	Check the state of the target
26	87	85	0	Target is not in IDLE/PAUSE state.	Check the state of the target
26	87	86	0	An attempt to load an IOP was done with an incompatible PI file. Or X\$CMD_Fail_Invalid_Target. Operator tried to load an IOP which was not a loadable type IOP	Repeat the operation with the correct IOP PI file.
26	87	88	0	Target node is not in IDLE/RUN state.	Check the state of the target node.
26	87	89	0	Access level error	Check access level
26	87	20, 24, 28, 29, 31, 38-45, 48, 59, 60, 62, 64, 65, 67, 76, 78, 81, 82, 87, 90	0	Internal error	Ignore the error. If the error appears repeatedly, contact Honeywell TAC.
26	87	61,63, 91-110	0	Invalid error state	Contact Honeywell TAC.
24	88	1	0	Master files volume not found the database for the NIM primary start up. Absence of files in the specified location.	Mount the correct volume
24	88	2	0	No master file on volume.	Check the checkpoint files/drives/volumes, the access levels, and the available free space

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
24	88	3	0	Size of master file is wrong.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	4	0	Cannot open master file.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	6	0	Master record corrupted.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	7	0	Incorrect version or incorrect revision number of master file.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	8	0	Cannot read master file	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	9	0	Not enough space to create master file.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
24	88	10	0	Cannot close master file.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
29	92	0	0	Cannot send command response back to the requesting US.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
43	92	0	0	Cannot send command response back to the requesting US.	Check the checkpoint files/drives/volumes, the access levels, and the available free space.
32	92	0	0	Cannot send command response back to the requesting US.	Check if the requesting US is in OK state.
29	94	UCN#	1	No response from the target node. NIM database restore failed. Primary startup failed. NIM crashes.	Check the node availability.
29	94	UCN#	2	Invalid Command, As an example, the HM received a BOX FAST command.	Check the command.
29	94	UCN#	3	Node is busy performing another task.	Node is busy; check the state of the node
29	94	UCN#	4	Invalid Command; bad data in the request,	Check the command
29	94	UCN#	5	Insufficient memory on the target device.	Mount a drive with required space.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
29	94	UCN#	6	Error in file access. Required file may not be in the appropriate directory	Check the checkpoint files/drives/volumes.
29	94	UCN#	7	Volume not found in the referred drive/volume.	Check the checkpoint files/drives/volumes.
29	94	UCN#	8	Target node is in an incompatible state. As an example, a NODE LOAD command has been issued to a running node.	Set the node in the appropriate state..
29	94	UCN#	9	Request aborted by the user	Re-issue the command.
29	94	UCN#	10	Target node does not exist	Check if the target node is configured.
29	94	UCN#	11	Conflict caused command to fail. As an example, while performing a demand NODE LOAD from an Operator station, a different Operator station on the network shutdown the node	Resolve the conflict
29	94	UCN#	12	Command override required. As an example, attempting to load TREND MEMORY program into a box that the program has been loaded and is executing.	Use the override target to perform a command override.
29	94	UCN#	13	Target node is in an incompatible state.	Check the state of the target node.
29	94	UCN#	14	Target node has failed.	Reload the node.
29	94	UCN#	15	Node transitioned to an illogical state during a load	Reload the node.
29	94	UCN#	16	Operation aborted	Reinitiate the command.
29	94	UCN#	17	QLT file could not be found	Check the mount/volumes (in the &LDR volume
29	94	UCN#	18	oft file could not be found	Check the mount/volumes (in the &LDR volume or the HM local volumes)
29	94	UCN#	19	Personality file failed.	Check the personality files.
29	94	UCN#	21	Target node number error	Check the state of the target node.

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
29	94	UCN#	22	Dump command failed	Destination drive may not have sufficient space. Mount different drive with sufficient space.
29	94	UCN#	23	Target in off-line mode, another node is in command	Check the state of the target node
29	94	UCN#	25	Load/dump already in progress in target	Check the state of the target node
29	94	UCN#	26	Problem with LCN boot loader or dumper	Try to mount different personality files
29	94	UCN#	27	Boot loader reported a bad checksum in personality file	Try to mount different personality files
29	94	UCN#	30	Boot loader reported it could not continue because of an invalid file format.	Try to mount different personality files
29	94	UCN#	32	Expected node state change did not occur	Repeat the operation
29	94	UCN#	33	A mount volume request timed out	Repeat the operation
29	94	UCN#	34	A mount volume request was issued to a device other than a floppy disc	Mount the correct volume
29	94	UCN#	35	A load/dump request cannot be accepted	Wait until the current operation is completed and retry the load/dump. Defer the operation
29	94	UCN#	36	Trying to create a duplicate directory	Create the directory in a different volume.
29	94	UCN#	37	Too many drives are mounted.	Check for correct mounting of devices and volumes.
29	94	UCN#	46	The mounted drive/volume failed	Check mount volumes
29	94	UCN#	47	Receiving node failed	Check the state of the receiving node
29	94	UCN#	49	Access level error	Check access level
29	94	UCN#	50	Attempting to restore the NIM resident portion of the checkpoint to UCN nodes.	Try to restore checkpoint correctly.
29	94	UCN#	51	Node/IOP in invalid state. As an example, an IOP is not in the IDLE state during a check- point restore	Set the node in the correct state

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
29	94	UCN#	52	Checkpoint data not available on the mounted drive.	Check the mounted drive; mount the correct drive.
29	94	UCN#	53	Some other application is preventing checkpointing.	Check if some other application is preventing check pointing. A point build may be in progress. Check if the other operation can be stopped so that checkpointing can continue.
29	94	UCN#	54	Configuration mismatch	Check the configuration.
29	94	UCN#	55	Target node is not in RUN state.	Check the state of the node
29	94	UCN#	56	Target node is not in IDLE state.	Check the state of the node
29	94	UCN#	57	Access level error	Check access level
29	94	UCN#	58	Mismatch between software and firmware	Check firmware/software revision levels.
29	94	UCN#	61	Invalid error state	Contact Honeywell TAC
29	94	UCN#	63	Invalid error state	Contact Honeywell TAC
29	94	UCN#	66	PM has a soft failure	Refer to the PM Service Manual and fix the soft failure error.
29	94	UCN#	68	Invalid file revision error.	Check for correct file revision
29	94	UCN#	69	Parameter access error	Retry your previous action for parameter access
29	94	UCN#	70	Trying to compile a xPM CL with an non-Proc Mod point	Add the Proc Mod point to the CL program.
29	94	UCN#	71	Point is in invalid execution state	Set the point in a valid execution state
29	94	UCN#	72	Sequence_program_Exceeds configured slot size	Configure correct slot size for Proc Mod point.
29	94	UCN#	73	Communication errors	Check the connectivity and availability of I/O Link (IOL)
29	94	UCN#	74	Trying to compile a xPM CL with an non-existing point	Check the checkpoint version; availability of NIMs/nodes. Check the CL if the point tagnames are correctly specified.
29	94	UCN#	75	Invalid NIM Library or invalid Sequence name	Enter the correct number of the NIM Library or the correct name of the CL sequence program.

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
29	94	UCN#	77	Command not executed on a primary node	Execute the command on a primary node
29	94	UCN#	79	Target node is in invalid NODESTAT	Bring the NODESTAT of the target node to a proper state.
29	94	UCN#	80	Auto checkpoint is in progress	Defer the operation after the completion of auto checkpoint
29	94	UCN#	83	Target is not in PAUSE state.	Check the state of the target
29	94	UCN#	84	Target is not in RUN/PAUSE state.	Check the state of the target
29	94	UCN#	85	Target is not in IDLE/PAUSE state.	Check the state of the target
29	94	UCN#	86	An attempt to load an IOP was done with an incompatible PI file. X\$CMD_Fail_Invalid_Target Operator tried to load an IOP which was not a loadable type IOP	Repeat the operation with the correct PI file.
29	94	UCN#	88	Target is not in IDLE/RUN state.	Check the state of the target
29	94	UCN#	89	Access level error	Check Access level
29	94	UCN#	20, 24,28, 29,31, 38-45, 48,59, 60,62, 64,65, 67,76, 78,81, 82,87, 90	Internal error	Ignore the error. if the error is repeated, contact Honeywell TAC
29	94	UCN#	91-110	Invalid error state	Contact Honeywell TAC
	124		1	Index less than 1 or greater than 6000; Basically an invalid index number	Recompile the sequence and then try to load or run
	125		1	The specified UCN Node number is invalid; This can also be reported if an Index to MSGTXT specified is greater than 15	Recheck the node number and retry with the correct node number
	125		2	The specified UCN Node number is not configured	Recheck the node number and retry with the correct node number

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	125		3	If the requested parameter is not applicable to that node for example: <NIM_NODE>.LMPLTFM	Recheck the node type and issue the command
	125		4	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
	126		1	Network parameter name invalid; similar to NR_gnp_node_number_invalid	Recheck the node number and retry with the correct node number
	127		1	If there is no point built for the LRC or if the LRC number specified is greater than 8000 or less than or equal to 0.	Check the checkpoint versions of NIM and UCN nodes
	127		4	Parameter is invalid for the point type	Check the parameter names involved in the operation.
	127		5	Point may be of component type and user might be trying to access a parameter that is available only for Full point.	Check the point type if full or component
	127		6	Probably an invalid sequence number greater than 1000 or less than 0	Check if the sequence number is within range.
	127		2,3	Internal error	Ignore the error. If the error is repeated, contact Honeywell TAC
	129		1	Invalid NIM Parameter Data type or invalid parameter	Check the parameter names involved in the operation.
	130		1	Invalid Unit Number or Unit Name is specified	Check the unit number /name associated
	130		2	Invalid Unit Number or Unit Name is specified	Check the unit number /name associated
	130		3	Invalid Unit Number or Unit Name is specified	Check the unit number /name associated
	133		1	Invalid parameter or store of NIM parameter	Repeat the operation
	133		2	Store of NIM parameter failed	Reload the NIM
	134		1	Invalid Unit Number or Unit Name is specified	Check the unit number /name associated

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	134		2	Invalid Unit Number or Unit Name is specified	Check the unit number /name associated
	136		1	Invalid UCN Node Number	Specify the correct UCN number
	136		2	UCN Node not configured	Configure the UCN node or specify the same correctly in the operation
	136		3	Invalid UCN Node Parameter	Check the parameter names involved in the operation.
	136		4	Invalid error state	Contact Honeywell TAC
	138		1	Invalid LRC Number specified in store routine	Repeat the operation
	138		2	Invalid LRC Number specified in store routine	Repeat the operation
	138		3	Invalid Parameter Store	Check the parameter names involved in the operation.
	138		4	Point may be of Component type and user might be trying to access a parameter that is available only for Full point.	Check the point type if full or component
	138		5	Invalid Parameter Store	Check the parameter names involved in the operation.
	138		6	Invalid NIM Parameter Data type or invalid parameter	Check the parameter names involved in the operation.
	138		7	Cannot configure more BADPV or MOVPTXT's	Check the parameter names involved in the operation.
	138		8	Invalid error state	Contact Honeywell TAC
	138		9	Invalid LRC Number specified in store routine	Repeat the operation
108	153	0	-----	EIP processor in Event Distribution could not queue an EIP store request	EIP Queue overflow
108	154	0	-----	EIP processor in Event Distribution could not queue a CL message	Message Queue overflow
90	155	LRC of point in request	-----	Event Command Handler was requested to change the alarm configuration of an invalid (non-alarming) point type or for an invalid alarm type	Check for ghost points, That is, check if wrong checkpoint has been loaded

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
91	155	Node # in the request	-----	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
140	157	Node #	0	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
135	157	Node #	ORD of the node type (UCN enum)	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
122	158	Send-ing node #	Point type (ORD of UCN point type enumeration)	Event Message Processor's sequence event processor detected a point which not a PROCMOD point	Action does not match point type, check for ghost points
123	158	Send-ing node #	Point type (ORD of UCN point type enumeration)	Event Message Processor's sequence processing detected a point which not a PROCMOD point	Action does not match point type, check for ghost points
117	158	Node #	Point LRC	Event Message Processor's change detect processing has encountered a point which is not a digital point type	Action does not match point type, check for ghost points
150	158	Point LRC		Utility routine to report current alarms detected an invalid point index.	Action does not match point type, check for ghost points
152	158	Point LRC		Utility routine to report current sequence events detected an invalid point index.	Action does not match point type, check for ghost points
120/ 121	158	Point type (ORD of UCN point type enum)	Alarm type (ORD of UCN Point type enumeration)	Event Message Processor's process alarm processing has encountered an unknown alarm type code.	Action does not match point type, check for ghost points

System Error Journal Messages

NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
124	158	Sending node #	Point LRC	Event Message Processor's SOE processor detected a point type which doesn't support SOE	Action does not match point type, check for ghost points
127	158	Sending node #	Point type (ORD of UCN point type enumeration)	Event Message Processor's CL message confirmation processor detected a point that is not a PROCMOD point.	Action does not match point type, check for ghost points
87	160	Data owner's Node #	Return status of request (PNSD_PA_Stat us_Enm)	Event Command Handler could not get parameter \$UPCDTL,\$PM1DTL,or UMSFSTS	Check for UCN communication errors
88/140	161	Data owner's Node #	Return status of request (PNSD_PA_Stat us_Enm)	Could not store event recovery parameter request	Event store buffer overflow
101	162	0	-----	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
103	162	0	-----	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
104	162	0	-----	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
103	162	100	-----	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
123	162	Sender's Node #	11	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
132	167	Node #	0	Lost events detected by Network Security for node.	Ignore the error; if the error is repeated, contact Honeywell TAC
132	168	Node #	0	Node overdue in sending recovered events.	All messages could not be recovered by event recovery
132	171	SM Node #	0	SMM overdue in sending recovery complete <u>bracket event</u> to NIM.	NIM forces the SM event recovery completion status.
127	169	Node #	DPA #	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
143	170	Node #	Tenth of milliseconds value.	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
170	174		SLS	The secondary timed out waiting to receive a message from the primary over the LCN. The secondary found that its LCN status was bad and failed itself	Check the LCN status of failed node
170	180	PLS	SLS	The secondary timed out waiting to receive a message from the primary over the LCN. The secondary could not find any problems. After waiting an additional two timeout periods the secondary fails itself because its database cannot be kept consistent with the primary. Typical cause is a double LCN fault between the redundant NIMs. Note that prior to the failure the same error is reported with the number of LCN timeouts in the 4th integer.	Contact Honeywell TAC.
168	181	PLS	SLS	The primary received the fail message from the secondary over the UCN. The primary failed itself. This error is typically accompanied by another error in secondary explaining why the fail message was sent to the primary.	Contact Honeywell TAC.
164	184	SLS	PLS	The secondary received the fail message from the primary over the UCN. The secondary failed itself. The primary sent the fail message because the secondary LCN status was bad.	Contact Honeywell TAC.

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
164	185	SUS	PUS	The secondary timed out waiting to receive a message from the primary over the UCN. The secondary found that its UCN status was bad and failed itself	Check the UCN status of failed node
114/ 119/ 127/ 128/ 129/ 130	215	Node #	Value of invalid data.	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
170	233	PLS	SLS	The secondary timed out waiting to receive a message from the primary over the LCN. The secondary found the primary's LCN status to be bad. The secondary fails the primary through LCN and UCN.	Check the LCN status of failed node
170	234	CL	CU	The secondary timed out waiting to receive a message from the primary over the LCN. The secondary found the primary to be receiving LCN messages, but not sending LCN messages. Typically caused by transmitter failure in the primary or unreliable LCN messages. Typically caused by transmitter failure in the primary or unreliable LCN communications. The secondary fails the primary through LCN and UCN.	Check the LCN status of failed node
170	235	PLS	SLS	The secondary timed out waiting to receive a message from the primary over the LCN. The secondary found that the last UCN message from the primary also did not come in. The secondary fails the primary through LCN and UCN.	Check the UCN status of failed node

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
164	236	PUS	SUS	The secondary timed out waiting to receive a message from the primary over the UCN. The secondary found that its UCN status was better than the primary's UCN status so the secondary fails the primary over the LCN	Check the UCN status of failed node
	210/ 211		13	IOL communication error	Check the connectivity and availability of IOL
	210/ 211		20	No response from IOL	Check the connectivity and availability of IOL
	210/ 211		21	Message timeout Error	Check the connectivity and availability of IOL
	210/ 211		22	IOL Overrun Error	Check the connectivity and availability of IOL
	210/ 211		34	IOL communication error	Check the connectivity and availability of IOL
	210/ 211		39	Access Level error	Check the access level
	210/ 211		40	Node calibration in progress	Defer the operation until calibration is completed
	210/ 211		41	Access Level error	Check the access level
	210/ 211		42	Node Checkpoint in progress	Defer the operation until checkpoint has been completed
	210/ 211		71	Maximum available memory exhausted	Contact Honeywell TAC.
	210/ 211		72	max_point_processing_rate_exceeded	Contact Honeywell TAC.
	210/ 211		1-6, 35-38, 43-70, 73-157, 168-177, 180-255	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
	210/ 211		14 - 19	IOL internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
	210/ 211		158-162	Communication errors	Check the connectivity and availability of IOL

System Error Journal Messages
NIM Error Messages

NIM Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
	210/ 211		23 - 33	IOL internal error	Ignore the error; if the error is repeated, contact Honeywell TAC
	210/ 211		7-11, 163- 167, 178, 179	Invalid error state	Contact Honeywell TAC
	217/ 227		106	Revision error	Check the personality files for correct revision
	217/ 227		1-105	Internal error	Ignore the error; if the error is repeated, contact Honeywell TAC

7.7 US Error Messages

Summary of US Error Messages

Table 10 US Error Message Summary

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
		2		\$synchronize task for delay returned unknown error	Repeat the operation
		3		Building a list to hold the volume information failed as LCA failed to get the memory. Journal related errors	Repeat the operation
		4		Sending PSDP message to X side failed	Repeat the operation
		5-11		Internal Error	Repeat the operation
		12		LCA connecting to WS failed	Restart the WS
		13-19		Internal Error	Repeat the operation
		9	5	Internal Error	Repeat the operation
		9	19	Internal Error	Repeat the operation
4	0	2	10	Memory related error. Internal error	Repeat the operation
4	0	2	11	Memory related error. Internal error	Repeat the operation.
4		6	8	Memory related error. Internal error	Repeat the operation.
5				Memory related error. Internal error	Repeat the operation.
7		64	2	Memory related error. Internal error	Repeat the operation
7		64	141	Reading of .DO file failed because amount of memory is insufficient	Close some if many files are open
7		64	4	File operation failed	Repeat the operation
7	0	5	39	Copy request failed	Repeat the operation
8	0	30	22	Data base is corrupted	Check the Area database.

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
6	1	1	1	Reading the configuration file and doing database initialization failed	Check the Area database.
6	1	1	2	Database may be corrupted	Check the Area database.
10	0	4	9	Global memory pointer reading failed	Repeat the operation
10	0	6	6	Attaching to data access failed as DA pointer read failed	Repeat the operation
11				Internal error	Repeat the operation
12	0	3	6	Internal error	Repeat the operation
12	0	4	4	Internal error	Repeat the operation
12	0	5	2,4	Internal error	Repeat the operation
12	0	6	5,9,10,12,33-37	Internal error	Repeat the operation
13	0	4	5	Internal error	Repeat the operation
14	0	3	7	AR related task has failed.	Repeat the operation
14	0	99	99	A\$Area_ABS_Task_Startup failed	Repeat the operation
15	0	3	8	Internal error	Repeat the operation
15	0	4	10	Internal error	Repeat the operation
15	0	2	6	Internal error	Repeat the operation
16	0	2	7	Internal error	Repeat the operation
16	0	2	9	Internal error	Repeat the operation
16		64	3	Internal error	Repeat the operation
17		64	1	Internal Error	Repeat the operation
17		4	1	Internal Error	Repeat the operation
17		4	2	Internal Error	Repeat the operation
17	0	5	7	Internal Error	Repeat the operation
17		6	14	Internal Error	Repeat the operation
18	0	7	1	Internal Error	Repeat the operation
19	0	5	1,9	Internal Error	Repeat the operation
19	0	6	3,16	Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
20	0	5	8	Failed to change the LNI state	Repeat the operation
20	0	6	15	Internal Error	Repeat the operation
21				Internal error	Repeat the operation
22	0	6	1	Internal Error	Repeat the operation
23	0	63	13,14	Internal Error	Repeat the operation
23	0	5	3,6,10	Internal Error	Repeat the operation
23	0	5	11	Internal Error	Repeat the operation
23	0	6	7,13	Internal Error	Repeat the operation
24	0	5	5	Deleting the Reserved Data Points for the Area Data Base has failed	Repeat the operation
24	0	6	8	Setting up Data Access name dictionary for reserved entities has failed	Repeat the operation
24	0	6	22	Setting up Data Access name dictionary for DEB failed	Repeat the operation
24		6	11	Setting up Data Access name dictionary for DEB failed	Repeat the operation
25	0	3	1-4	Bad command from Node Administrator	Repeat the operation
25	0	4	6	Bad command from unknown	Repeat the operation
25	0	4	7, 8	Bad command from Area manager lead task	Repeat the operation
26		63		Internal error	Repeat the operation
27		64	65	Failed to set up region for displaying scheme paths during scheme search.	Search again
27		4	33-35	Close_Region failed during schematic operations	Repeat the operation
28				File operation failed	Repeat the operation
35		0	9999	Invalid P2 Header Pointer in the NCF	Check NCF size/version to ensure it is not corrupted

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
6		0	9999	Maximum Number of Load Modules Exceeded	Unload non-required load modules/ distribute load modules among multiple GUSs
12	0,1,2	0	9999	Invalid Base Address Directive in NCF	Check NCF size/version to ensure it is not corrupted
13		0	9999	Base Module Name not found during module load	Reload the load module
14	0	0	9999	Loader Memory Verify Error during module load	Reload the load module
15	0	0	9999	Illegal Loader Verify Address Directive	Reload the load module
16	0	0	9999	Invalid Loader Verify Directive	Reload the load module
1	0	0	9999	Memory Mapping - Multiply Error	Unload non required load modules/distribute load modules among multiple GUSs
29	0	0	9999	Unrecognized NCF Load Directive error	Check NCF size/version to ensure it is not corrupted
1	0			In X\$Dispatch task procedure STRD reported this error	Repeat the operation
2	0			CDIC procedure reported this error	Repeat the operation
2	0			1.ST POINTER TO THE X\$DIC_DISPATCHER_INFO ARRAY failed 2.Failed to fetch display-related pointer	Repeat the operation
3	0			Not enough memory to create input message channel	Repeat the operation
4	0			Internal Error	Repeat the operation
5				Internal Error	Repeat the operation
6	0			Internal Error	Repeat the operation
7	0			Internal Error	Repeat the operation
8	0			Internal Error	Repeat the operation
9	0			Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
10	0			Internal Error	Repeat the operation
11	0			Server is not in table; queue limit not enforced. Server related pointer read failed	Repeat the operation
12	0			Failed to locate the server. server table may be full	Repeat the operation
13	0			Internal Error	Repeat the operation
14	0			Internal error.	Repeat the operation
1	0		3209	Could not get sufficient amount of heap memory	Restart the node
1	0		5307	Could not get sufficient amount of heap memory	Restart the node
2			9203	AM-US communication might have failed	Check AM node if problem persists. Restart the node
2	0	3	18745	AM-US communication might have failed	Check AM node if problem persists Restart the node
2			18743	Memory requirements error from data owner	Restart the node
2	0	4	18744	Memory requirements error from data owner	Restart the node
2	0	0	18801	Internal Error	Restart the node
2	0	0	18803	Internal Error	Restart the node
2		0	19409	Internal Error	Restart US and check HG node for proper functioning
2		0	19410	Internal Error	Restart US and check HG node for proper functioning
2		0	19411	NIM status is either unexpected or unrecognized	Restart the node
2		0	16511		Restart the node
2		0	21903	Fetch of box state failed	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
2		0	16605 16607 16609 16611 16613 16615 16167 16169 21706 21707 21708 21903 21905 21907	Data owner related failures	Restart the node
2	0	2	12215	Internal Error	Restart the node
2			13101	AM data access reported this error	Restart the node
2			13101	Internal Error	Restart the node
2			13101	Internal Error	Restart the node
3	0	0	19626	NG related internal Error	Check NG node
3	0	0	19627	NG related internal Error	Check NG node
3	0	0	19602 19603 19605 19606 19614 19615 19618 19619 19620 19621 19622 19623 19624 19625	Internal Error. Review system call failed	Restart the node
3	0		3702 3705	Internal Error Review system call failed	Restart the node
3	0		24802	NG related internal Error	Restart the node
3	1		24804	Produce for data owner failed	Restart the node
4			19608	Database is not in sync.	Restart the secondary
1	2		0	Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
2	1	0	0	Internal Error	Repeat the operation.
3	6		0	Internal Error	Repeat the operation.
3	2		0	Internal Error	Repeat the operation.
4	3		0	Internal Error	Repeat the operation.
4	6	0	0	Internal Error	Repeat the operation.
5	1	1	0	Failed to get the memory for Event distribution table	Repeat the operation.
5	1	0		Initialize event record control buffer areas	Repeat the operation.
6				Internal Error	Repeat the operation.
7				Internal Error	Repeat the operation.
8	2		0	Internal Error	Repeat the operation.
9	3		0	Internal Error	Repeat the operation.
9	4	0	0	Internal Error	Repeat the operation.
10				Internal Error	Repeat the operation.
11	6		0	Not enough memory to do the operation	Repeat the operation.
12	1	0	0	Failed to start \$D_EVT_RTY task	Repeat the operation.
13	7	0	0	\$D_Event_Recovery Initiating Recovery is failed	Repeat the operation.
14	6			Event is lost	Check the event journal
15	6			Internal Error	Repeat the operation.
16	6			Internal Error	Repeat the operation.
17		0	0	Internal Error	Repeat the operation.
18				Time out on delivering an event message directly to a node	Repeat the operation.
19				Synchronization error.	Restart the secondary

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
20				User has requested a serial number assignment by Event Distribution for a unit that was previously assigned a serial number by the user. or Warning that the user has assigned the same serial number to a unit twice.	Delete or rename the duplicate serial number
21	1	0		Could not get memory	Call Honeywell TAC.
21	1	1		Could not get memory	Call Honeywell TAC.
21	2			Could not get memory	Call Honeywell TAC.
21	3	21		Could not get an FMRB report when processing NCF Data file.	Call Honeywell TAC.
21	4			Could not get an FMRB report when processing NCF Data file.	Call Honeywell TAC.
21	5	0		Internal error	Call Honeywell TAC.
21	6	21		Internal error	Unload non-required load modules/distribute load modules among multiple GUSs
21	7				
21	8	7		Internode communication failed	Check the LCN Communication
21	9	1		Internode communication failed	Check the LCN Communication
21	10	1		Internode communication failed	Check the LCN Communication
21	11			Internal Error	Call Honeywell TAC.
21	12	4		Global memory related error	Call Honeywell TAC.
21	13	21		File type is unknown	Call Honeywell TAC.
21	14	21		Internal Error	Call Honeywell TAC.
21	15	9		Node administrator related error	Call Honeywell TAC.
21	16				

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
21	20	3		Clock Management failure resulted in Delay routine failure	Reset the node
21	20	6		Scheduling may have failed	Reset the node
21	21	9		Internal Error	Reset the node
21	22	9		Internal Error	Reset the node
21	23	0		Internal Error	Reset the node
21	24			Internal Error	Reset the node
21	25	9		Internal Error	Reset the node
21	26	21		Internal Error	Reset the node
21	27	21	100	Error in dispatcher acknowledgement	Reset the node
21	28	21		Error in dispatcher acknowledgement	Reset the node
21	29	21	0	Dispatcher_ Timeout	Reset the node
21	30	1			Call Honeywell TAC.
21	31	21		\$D_Event_Recovery initiated recovery failed	Call Honeywell TAC.
21	32	21	0	Internal error	Call Honeywell TAC.
21	33	21	0	Internal error	Call Honeywell TAC.
21	35-39	21		Internal error	Call Honeywell TAC.
21	40	21	0	Internal error	Call Honeywell TAC.
21	41	9		Internal error	Call Honeywell TAC.
21	42	21		Internal error	Call Honeywell TAC.
21	43	21	0	Internal error	Call Honeywell TAC.
21	44	21	0	Internal error	Call Honeywell TAC.
21	48	0		Internal error	Call Honeywell TAC.
21	49	6		Internal error	Call Honeywell TAC.
21	50	9	0	Internal error	Call Honeywell TAC.
21	51	9	0	Internal error	Call Honeywell TAC.
21	52	5		Critical region related error	Call Honeywell TAC.
21	53	1		Internal error	Call Honeywell TAC.

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
21	54			Internal error	Call Honeywell TAC.
21	55	21	0	Internal error	Call Honeywell TAC.
21	56	21		Failed to get the console number	Call Honeywell TAC.
21	57			Internal error	Call Honeywell TAC.
21	58	21		Internal error	Call Honeywell TAC.
21	59			Internal error	Call Honeywell TAC.
21	60	21	0	Internal error	Call Honeywell TAC.
21	61	21	0	Internal error	Call Honeywell TAC.
21	62	21		Internal error	Call Honeywell TAC.
21	63	21	0	Internal error	Call Honeywell TAC.
21	64	21		unrecognizable node state	Call Honeywell TAC.
21	65				Call Honeywell TAC.
21	66	21		Failed to mount the volume	Call Honeywell TAC.
21	67	21	0	Internal error	Call Honeywell TAC.
21	68	1		Internal error	Call Honeywell TAC.
21	69	21		Internal error	Call Honeywell TAC.
21	70			Date routine failed	Call Honeywell TAC.
21	71			Date routine failed	Call Honeywell TAC.
21	72			Date routine failed	Call Honeywell TAC.
21	73	24		Mounting a volume failed when getting heap memory failed	Call Honeywell TAC
21	74	21		This may be due to using an incompatible bootname with this loader	Call Honeywell TAC.
21	75	1			Call Honeywell TAC.
21	76	1	1	System call \$Node_Administrator_Query returned status is unrecognized	Call Honeywell TAC.
21	77	21	3	see if requestor_data is ok	Call Honeywell TAC.
21	78	1	1	Internal error	Call Honeywell TAC.
21	79	21	1,2	Internal error	Call Honeywell TAC.

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
21	80	21	1	Internal error	Call Honeywell TAC.
21	81	21	0	Internal error	Call Honeywell TAC.
21	82	1		Internal error	Call Honeywell TAC.
21	83			Internal error	Call Honeywell TAC.
5, 7, 11, 12, 257, 400, 24567	111	111		Internal error	Repeat the operation.
-1	901		0	Internal error	Repeat the operation.
-1	902		0	Internal error	Repeat the operation.
-1	903			Internal Error	Repeat the operation.
-1	904			Internal Error	Repeat the operation.
-1	905		0	Internal Error	Repeat the operation.
-1	906		0	Internal Error	Repeat the operation.
-1	907		0	Internal Error	Repeat the operation.
-1	908		0	Internal Error	Repeat the operation.
0				Failed to Initialize Memory Volume	Repeat the operation. If the problem still exists, restart the node
1			0		Repeat the operation. Check NCF size/version to ensure it is not corrupted
2		0	0	Getting data from NCF failed	Check NCF size/version to ensure it is not corrupted
				Internal Error	Repeat the operation
4		0	0	Could not get an FMRB	Check NCF size/version to ensure it is not corrupted
5		3	3	Could not get memory.	Repeat the operation
5		0	0	Could not get memory.	Repeat the operation
5		1	1	Could not get memory.	Repeat the operation
5		2	2	Could not get memory.	Repeat the operation
5		0	0	Could not get memory.	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
5		1	1	Could not get memory.	Repeat the operation
6	1	1	1	Internal Error	Repeat the operation
6	1	1	2	Internal Error	Repeat the operation
7		0	0	Could not open NCF	Check NCF size/version to ensure it is not corrupted
8				Internal Error	Repeat the operation
9				Internal Error	Repeat the operation
10		0	0	Could not read area directory record in NCF.	Repeat the operation
11		0	0	Could not read console directory record in NCF.	Repeat the operation
12		0	0	Could not read NCF directory record in NCF	Repeat the operation
13		0	0	Could not read system cnfg block record in NCF	Repeat the operation
14		0	0	Could not read unit definition record in NCF	Repeat the operation
15		0	0	Could not read unit directory record	Repeat the operation
16		0	0	Internal Error	Repeat the operation
17		1	1	Internal Error	Repeat the operation
17		2	2	Internal Error	Repeat the operation
17		0	0	Internal Error	Repeat the operation
17		3	3	Internal Error	Repeat the operation
17		0	0	Internal Error	Repeat the operation
17		3	3	Internal Error	Repeat the operation
18	0	0	0	Internal Error	Repeat the operation
19	0	0	0	Internal Error	Repeat the operation
20		0	0	Illogical condition - undefined LDID	Repeat the operation. Check the LDID
21		0	0	Illogical condition - undefined LDID	Repeat the operation
22		0	0	Invalid return value	Repeat the operation
23	0	0	0	Error resetting annunciator	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
24	0	0	0	Error resetting backlights	Repeat the operation
25		0	0	Floppy mount failed	Repeat the operation
26				Internal Error	Repeat the operation
27		0	0	Internal Error	Repeat the operation
28			0	Bad data read from directory	Repeat the operation. Check the directory for possible corruption
29			999	Error while trying to initialize memory volume	Repeat the operation. Check the volume for possible corruption.
30				Memory related error	Repeat the operation
0	0	0	0	Transaction related internal error	Repeat the operation
1	0	0	0	Internal Error	Repeat the operation
2				Internal Error	Repeat the operation
3	0	0	0	Error in Shutdown routine	Repeat the operation
4	0	0	0	Error in Shutdown routine	Repeat the operation
5	0	0	0	Error in Shutdown routine	Repeat the operation
6	0	0	0	Error in Shutdown routine	Repeat the operation
7	0	0	0	Error while closing the transaction buffer in CRT startup routine	Repeat the operation
8	0	0	0	Internal Error	Repeat the operation
9	0	0	0	Failed to determine the CRT DDB ID of the station-relative CRT in startup routine	Repeat the operation
10	0	0	0	Failure in CRT startup routine	Repeat the operation
11	0	0	0	Error while closing the transaction buffer in node startup routine	Repeat the operation
12	0	0	0	One of the tasks failed to start in Node startup routine	Restart the Node
13	0	0	0	Internal Error	Repeat the operation
14	0	0	0	No co-resident area manager	Restart the node
15				Memory error	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
16				Memory error	Repeat the operation
17	0	0	0	Failed to read the GLOBAL POINTER TO THE NCF Data	Check NCF size/version to ensure it is not corrupted
200	21	0	0	The job for HO Initialize Requestor failed	Repeat the operation
200	20	0	0	Memory not available	Repeat the operation
200	23	0	0	Internal Error	Repeat the operation
600	60	0	0	Internal Error	Repeat the operation
400	41	0	0	Memory not available	Repeat the operation
400	42	0	0	Memory not available	Repeat the operation
300	31	0	0	Memory not available	Repeat the operation
300	34	0	0	Internal Error	Repeat the operation
	5	5	5	Failed to release the form stored at the FCB and Deallocate the menu object ptr	Repeat the operation
	5	5	5	I/O failed	Check the I/O devices
18	0	0	0	Internal Error	Repeat the operation
19	0	0	0	Internal Error	Repeat the operation
25	0	0	0	Could not mount the floppy	Mount floppy drive again
20	0	0	0	Internal Error	Repeat the operation
21	0	0	0	Internal Error	Repeat the operation
22	0	0	0	Internal Error	Repeat the operation
0	-1	0	0	Floppy mount error.	Remount the floppy
1		1	1	Display/KB error	Check the devices connected to US
2		2	2	Form-related error	Repeat the operation
4		4	4	OS related error	Repeat the operation
6		6	6	Memory related error for overlay	Unload the overlay.

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
7		7	7	Pointer related error. Application failed to write global data pointer	Repeat the operation
8		8	8	Application failed to read global data pointer	Repeat the operation
9		9	9	Application failed to rewrite global data pointer	Repeat the operation
					Repeat the operation
0	0	0	1000	Kanji option related error. Failed to read pointer	Repeat the operation
0	0	0	1004	POK option related error. Failed to read pointer	Repeat the operation
1	0	0	0	Node admin query failed	Repeat the operation
2	0	0	0	Node admin query failed	Repeat the operation
3	0	0	0	Error on Get Memory in IO4	Check the IO devices
4	0	0	0	Error on Get Memory in IO5	Check the IO devices
5	0	0	0	Error on Create IDB in IO4	Check the IO devices
6	0	0	0	Error on Create IDB in IO5	Check the IO devices
7	0	0	0	Error on ADD IDB in IO4	Check the IO devices
8	0	0	0	Error on ADD IDB in IO5	Check the IO devices
999	0	0	0	Error is unknown need to investigate	Unknown Error. Restart the node if abnormal behavior is observed.
				Not used	N/A
0				Memory related error	Repeat the operation
1	0	0	0	Not enough memory - attempt to create job	Repeat the operation
2	0	0	0	Internal Error	Repeat the operation
3	0	0	0	Get semaphore error. Internal Error	Repeat the operation
4	0	0	0	Release semaphore error. Internal Error	Repeat the operation
5	0	0	0	Attempt to send event. Internal Error	Repeat the operation
6	0	0	0	Review block structure mismatch	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
7	0	0	0	Review not acknowledged	Repeat the operation
8	0	0	0	Failed to get console manager global memory pointer to determine how to build destination job id. OR Failed to get console manager global memory pointer	Repeat the operation
9	0	0	0	Work_Block review error	Repeat the operation
				Not used	N/A
				Not used	N/A
10	0	0	0	Get pointer to Console Data Base definitions thru C\$_DATA has failed while getting a parameter	Redo the operation
11	0	0	0	Get pointer to Console Data Base definitions thru C\$_DATA has failed while storing a parameter	Repeat the operation
12	0	0	0	Cannot pass data to peer	Repeat the operation
13	0	0	0	Cannot get data access interlock semaphore	Repeat the operation
14	0	0	0		Repeat the operation
15	0	0	0	Error getting semaphore	Repeat the operation
					Repeat the operation
16	0	0	0	Unknown work block detected	Repeat the operation
17	0	0	0	Assign lrm error	Repeat the operation
18	0	0	0		Repeat the operation
19	0	0	0	Error getting memory	Repeat the operation
20	0	0	0	Establish pointer to global memory for console mgr information write pointer error	Repeat the operation
21	0	0	0	Pointer for console data base is NIL to indicate no data base yet constructed	Database is not yet constructed. Repeat the operation after waiting for a few minutes

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
22	0	0	0	\$Query_Physical_Node_No nexistent	Repeat the operation
23	0	0	0	Node admin query failed	Repeat the operation
24	0	0	0	Node admin query not active in an op-station	Repeat the operation
25	0	0	0	Freeing the memory from the Node Admin Query has failed. Internal Error	Repeat the operation
26	0	0	0		Repeat the operation
27	0	0	0	Unknown work block detected. Internal error	Repeat the operation
28	0	0	0	Command not valid for console mgr. Internal Error	Repeat the operation
29	0	0	0	Job_Deleted_During_Timeout. Internal Error	Repeat the operation
30	0	0	0	C\$L_Create_Data_Base failed to initialize the database. Internal Error	Repeat the operation
31	0	0	0	Pointer resource error. Internal Error	Repeat the operation
32	0	0	0	Initializing the database has failed. Internal Error	Repeat the operation
33	0	0	0	Establishing name dictionary from console manager returned an error. Internal Error	Repeat the operation
34	0	0	0	Failed to make dictionary entry for local points. Internal Error	Repeat the operation
35	0	0	0	Define Data_Points for console point has failed	Repeat the operation
36	0	0	0	Define Data_Points for station point has failed	Repeat the operation
37	0	0	0	Adding the LNA list into the node admen's data base returned an error	Repeat the operation
38	0	0	0	Internal Error	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
39	0	0	0	Changing the line state of local console mgr has failed as a result of building the NA database	Repeat the operation
40	0	0	0	ATTACH to MOUNT Requests	Repeat the operation
41	0	0	0	Redundant startup request. The console manager database not yet exist.	Repeat the operation
42	0	0	0	Internal Error	Repeat the operation
43	0	0	0	Internal Error	Repeat the operation
44	0	0	0	Internal Error	Repeat the operation
45	0	0	0	Improper line	Repeat the operation
46	0	0	0	Improper LNI	Repeat the operation
47	0	0	0	Deactivate_LNIs	Repeat the operation
48	0	0	0	Change_State_Complete request failed. Internal Error	Repeat the operation
49	0	0	0	Bad message from command dispatcher channel. Internal Error	Repeat the operation
50	0	0	0	Internal Error	Repeat the operation
51	0	0	0	SAVE CONFIG failed	Repeat the SAVE CONFIG operation
52	0	0	0	Locating console manager function set global memory returned error.	Repeat the operation
53	0	0	0	Building of job for read for work assignments has failed because an input channel was not created. Internal Error	Repeat the operation
54	0	0	0	Consume responsible for remote jobs failed to consume work block. Internal Error	Repeat the operation
55	0	0	0	Internal Error	Repeat the operation
55	0	0	0	Internal Error	Repeat the operation
56	0	0	0	Unknown work request. Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
57	0	0	0	Invalid display initiated request.	Reselect the display
58	0	0	0	Internal Error	Repeat the operation
59	0	0	0	Unrecognized Work Block. Internal Error	Repeat the operation
60	0	0	0	Internal Error	Repeat the operation
61	0	0	0	Feedback received for the request sent to remote node is unrecognized	Repeat the operation
61	0	0	0	Feedback received for the request sent to remote node is unrecognized	Repeat the operation
61	0	0	0	Feedback received for the request sent to remote node is unrecognized	Repeat the operation
62	0	0	0	Internal Error	Repeat the operation
63	0	0	0	Internal Error	Repeat the operation
64	0	0	0	Internal Error	Repeat the operation
64	0	0	0	Internal Error	Repeat the operation
65	0	0	0	Parameter access error	Repeat the operation
66	0	0	0	Internal Error	Repeat the operation
67	0	0	0	Internal Error	Repeat the operation
68	0	0	0	Failed to locate console manager function set global memory	Repeat the operation
69	0	0	0	Input channel not created. Create channel failed	Repeat the operation
70	0	0	0	Internal Error	Repeat the operation
71	0	0	0	Internal Error	Repeat the operation
72	0	0	0	Internal Error	Repeat the operation
73	0	0	0	Internal Error	Repeat the operation
74	0	0	0	Internal Error	Repeat the operation
75	0	0	0	Internal Error	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
76	0	0	0	Internal Error. Database initialization failed	Reinitialize the database
77	0	0	0	Internal Error	Repeat the operation
78	0	0	0	Internal Error	Repeat the operation
204	1	0	0	U\$SCHED_EC_B called task failed to get the global name. Background task failed	Exit and invoke the Command Processor again
202	1	0		CP_EXEC FOREGROUND COMMAND CANNOT ACCESS BACKGROUND STRUCTURE.	Exit from Command Processor and Invoke the Command Processor again
202	21	0	0	Error occurred with switches in schedule.	Repeat the operation
202	2	0		GETTING MEMORY FAILED FOR SCHED_EC O\$Default_Path_Rec	Repeat the operation
202	3	0		GETTING MEMORY FAILED FOR SCHED_EC O\$Prim_Func_Interface_Rec	Repeat the operation
202	4	0		GETTING MEMORY FAILED FOR SCHED_EC O\$BKG_FUNC_INTERFACE_REC_NAME	Repeat the operation
202	5	0		GETTING MEMORY FAILED FOR SCHED_EC O\$PROMPT_MESSAGE_REC	Repeat the operation
202	6	0		GETTING MEMORY FAILED FOR SCHED_EC U\$CP_Global_Rec	Repeat the operation
202	7	0		WRITE POINTER FAILED FOR SCHED_EC U\$CP_Sched_EC_Name'	Repeat the operation
202	8	0		GETTING MEMORY FAILED FOR SCHED_EC U\$Sched_EC_Mstr_Rec	Repeat the operation
202	9	0		SA_Create_Object FAILED FOR SCHED_EC	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
202	13	0		CP_EXEC READ POINTER FAILED FOR SCHED_EC O\$IMContext_State_Ptr_Name	Repeat the operation
202	14	0		CREATE JOB FAILED FOR SCHED_EC U\$Sched_EC_SCN_JT_Cst	Repeat the operation
202	15	0		ATTACH TO SCN QUEUE (state change) FAILED FOR SCHED_EC U\$Sched_EC_SCN_JT_Cst	Repeat the operation
202	16	0		ATTACH TO SCN QUEUE (time change) FAILED FOR SCHED_EC U\$Sched_EC_SCN_JT_Cst	Repeat the operation
202	17	0		EC SCHEDULER CONSUME FAILED	Repeat the operation
202	18	0		PRODUCE FAILED FOR SCHED_EC U\$SCHED_EC_PING	Repeat the operation
202	19	0	0	Received kill command from SCHED_EC_Command_Processor task.	Repeat the operation
202	22	0	0	CP_EXEC FATAL CONSUME ERROR IN U\$SCHED_EC_BACKGROUND_TASK	Exit from Command Processor and Invoke the Command Processor again
205	1	0	0	CP_EXEC FATAL ERROR IN BACKGROUND PROCESSOR received kill signal	
203	1	0	0	In U\$CP_Fetch_CP_Global_Name foreground task failed to read pointer	Exit from Command Processor and Invoke the Command Processor again
	4	0	0	Retiring to main menu from command processor failed	Exit from Command Processor and Invoke the Command Processor again

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
202	1	0	0	Failed to get memory for the command processor global parameter and write the memory address to RNOS global memory.	Exit from Command Processor and Invoke the Command Processor again
202	2	0	0	Pointer table full. Not enough memory	Exit some of the applications then repeat the operation
201	1	1		VCRF related error	Exit from Command Processor and Invoke the Command Processor again
201	2	1		VCRF related error	Exit from Command Processor and Invoke the Command Processor again
201	3	1		Can't open region for new command in command processor	Exit from Command Processor and Invoke the Command Processor again
201	4	1		Can't open region for new command in command processor	Exit from Command Processor and Invoke the Command Processor again
201	5	1		Couldn't execute 'PAGE BACK' command in command processor	Exit from Command Processor and Invoke the Command Processor again
201	6	1		Couldn't execute 'PAGE FORWARD' command in command processor	Exit from Command Processor and Invoke the Command Processor again
201	7	1		Select line in command processor failed	Exit from Command Processor and Invoke the Command Processor again
3	0	1	4	Internal Error. Memory related	Repeat the operation
				Internal Error. Memory related	Repeat the operation
6	0	824		Internal Error. Memory related	Repeat the operation
6		800		Internal Error. Memory related	Repeat the operation
				Internal Error. Memory related	Repeat the operation
10	0	145	1	Internal Error. Memory related	Repeat the operation
10	0	145	2	Internal Error. Memory related	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
10	0	8	2	Internal Error. Memory related	Repeat the operation
10	0	8	3	Internal Error. Memory related	Repeat the operation
11	0	5	41	Internal Error	Repeat the operation
11	0	5	5	Internal Error	Repeat the operation
11	0	45	4	Internal Error	Repeat the operation
11	0	45	9	Internal Error	Repeat the operation
11	0	4	5	Internal Error	Repeat the operation
11	0	6	34	Internal Error	Repeat the operation
11	0	6	41	Internal Error	Repeat the operation
12	0	45	5	Internal Error	Repeat the operation
13	0	4	7	Task has failed	Restart the Node
13	0	4	6	Task has failed	Restart the Node
13	0	824	12	Task has failed	Restart the Node
14	0	2	1	Internal Error	Repeat the operation
14	0	14	3	Internal Error	Repeat the operation
15	0	1	9	Internal Error	Repeat the operation
15		1		Internal Error	Repeat the operation
15	0	1	11	Internal Error	Repeat the operation
15		2	5	Internal Error	Repeat the operation
15	0	816	2	Internal Error	Repeat the operation
16	0	1	2	Internal Error	Repeat the operation
16	0	1	3	Internal Error	Repeat the operation
16	0	808	3	Internal Error	Repeat the operation
17	0	45	7	Internal Error	Repeat the operation
17	0	2	4	Internal Error	Repeat the operation
18	0	1	1	Internal Error	Repeat the operation
18	0	816	1	Internal Error	Repeat the operation
19	0	5	8	Internal Error	Repeat the operation
19	0	45	2	Internal Error	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
19	0	819		Internal Error	Repeat the operation
20	0	5		Internal Error	Repeat the operation
20	0	5	4	Internal Error	Repeat the operation
20	0	5	9	Internal Error	Repeat the operation
20	0	45	1	Internal Error	Repeat the operation
20	0	45	6	Internal Error	Repeat the operation
21	0	808	1	Internal Error	Repeat the operation
22	1			Internal Error	Repeat the operation
22	0	828	1	Internal Error	Repeat the operation
23	0	5	7	Internal Error	Repeat the operation
23	0	5	71	Internal Error	Repeat the operation
23	0	5	72	Internal Error	Repeat the operation
23	0	45	3	Internal Error	Repeat the operation
23	0	45	31	Internal Error	Repeat the operation
23	0	45	32	Internal Error	Repeat the operation
23	0	828	1	Internal Error	Repeat the operation
23	0	828	2	Internal Error	Repeat the operation
24		4	4	Internal Error	Repeat the operation
24		1	6	Internal Error	Repeat the operation
24		1	7	Internal Error	Repeat the operation
24	1	4	4	Internal Error	Repeat the operation
24	5	4	4	Internal Error	Repeat the operation
24	6	4	4	Internal Error	Repeat the operation
24	4	4	4	Internal Error	Repeat the operation
24		12	9	Internal Error	Repeat the operation
24		85	5	Internal Error	Repeat the operation
24	0	8	6	Internal Error	Repeat the operation
24		8	7	Internal Error	Repeat the operation
24		8	12	Internal Error	Repeat the operation
24		8	13	Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
24	0	6	35	Internal Error	Repeat the operation
24	0	6	36	Internal Error	Repeat the operation
24	0	6	37	Internal Error	Repeat the operation
24	0	6	38	Internal Error	Repeat the operation
24	3	811	0	Internal Error	Repeat the operation
24	0	6	39	Internal Error	Repeat the operation
24	0	6	40	Internal Error	Repeat the operation
24	2	899	0	Internal Error	Repeat the operation
24	5	899	0	Internal Error	Repeat the operation
24	3	899	0	Internal Error	Repeat the operation
24	3	800	10	Internal Error	Repeat the operation
24	4	899	0	Internal Error	Repeat the operation
25		5	11	Internal Error	Repeat the operation
25	0	45	10	Internal Error	Repeat the operation
25	0	4	1	Internal Error	Repeat the operation
25	6666	0	0	Internal Error	Repeat the operation
25	0	4	3	Internal Error	Repeat the operation
25	0	14	1	Internal Error	Repeat the operation
25	0	14	2	Internal Error	Repeat the operation
25	0	811	1	Internal Error	Repeat the operation
25	0	25	0	Internal Error	Repeat the operation
25	0	820	1	Internal Error	Repeat the operation
25	0	820	2	Internal Error	Repeat the operation
25	0	832	1	Internal Error	Repeat the operation
25	0	820	2	Internal Error	Repeat the operation
26		1	1	Internal Error	Repeat the operation
27		33		Internal Error	Repeat the operation
28		1	12	Internal Error	Repeat the operation
28	0	817	1	Internal Error	Repeat the operation
28	0	817	2	Internal Error	Repeat the operation

System Error Journal Messages
US Error Messages

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
28	0	29	1	Internal Error	Repeat the operation
29	0	18	2	Internal Error	Repeat the operation
30	0	1		Internal Error	Repeat the operation
30		12	6	Internal Error	Repeat the operation
30	0	12	7	Internal Error	Repeat the operation
30		12	8	Internal Error	Repeat the operation
1		0	29000	Get memory to allocate for WS_sys_ptr area \$\$WS_Initialize failed. Internal Error	Reset the node
2				Internal Error	Reset the node
3		0	29101	WS_seconds_delay routine failed to synchronize as \$Synchronize returned error	Reset the node
4		0	29102	WS_Change_LNI_State has failed	Reset the node
5	0	0	29106	Sending start link message has failed. Internal Error	Reset the node
6		0	29112	\$\$ws master task LCA\$Get_Memory returned error	Reset the node
7		0	29114	Internal Error	Reset the node
8		0	29113	Internal Error	Reset the node
9		0	29500	Internal Error	Reset the node
10		0	29109	Internal Error	Reset the node
11		0	29503	Semaphore release failed. Internal Error	Repeat the operation
12		0	29504	Internal Error	Repeat the operation
13		0	29505	Internal Error	Repeat the operation
14		0	29506	Internal Error	Repeat the operation
15		0	29507	Internal Error	Repeat the operation
16		0	29508	Internal Error	Repeat the operation
17		0	29509	Internal Error	Repeat the operation

US Error Messages					
Error Code 1	Error Code 2	Error Code 3	Error Code 4	Error Description	Remedial Action
18		0	29510	Internal Error	Repeat the operation
19		0	29501	Internal Error	Repeat the operation
20		0	29502	Internal Error	Repeat the operation
21		0	29507	Internal Error	Repeat the operation
22		0	29108	X side no longer waiting for the message or communication between TPN and TPS has failed	Check the LCN connection for errors
23		0	29115	Internal Error	Repeat the operation
24		0	29116	Internal Error	Repeat the operation
25	0	0	29117	Internal Error	Repeat the operation
26		0	29110	Internal Error	Repeat the operation
27		1	29111	Internal Error	Repeat the operation
28		0	29103	X side is not responding for the wait message	Check the X-side application . Also check LCN communication for errors
29	0	0	29104	Internal Error	Repeat the operation
29	0	0	29105	Internal Error	Repeat the operation
29	0	0	29131	Internal Error	Repeat the operation

8. Module LED Error Displays

8.1 Introduction

Overview

During normal operation, the LED display located on the front edge of a module's processor board (HPK2, EMPU, HMPU, or MCPU) shows the LCN address for that module. Abnormal conditions are signaled by a code that begins with a minus sign (-). For the most part, these errors are directly related to hardware problems in that node; however, a number of the codes in the range of -170 to -19F are used to signal system inconsistencies or software problems. The *Five/Ten Slot Module* manual lists all of the codes, including those related to hardware problems.

8.2 LED Error Codes

Error code listing

This section contains a table of the firmware-generated LED error codes along with their definition and explanation.

Table 11 LED Error Codes

LED Code	Definition and Explanation
-170	UNEXPLAINABLE ALONE IN RING DETECTED BY LCNI A node in the power-on state sees an illogical alone in ring indication. It may be caused by a bad LCNI board, a bad LCNI cable or two nodes with the same node number.
-171	UNEXPLAINABLE MEDIA DEAD DETECTED BY LCNI (Not currently used.)
-172	LCNI FAILURE DETECTED BY CONTROLLER A node in the power-on state has detected a failure status from the LCNI controller. This is caused by a bad controller in this node or in another node.
-173	LCNI DETECTED TRANSMITTER FAILED This happens in the power-on state when an LCNI controller indicates that a transmitter has failed.
-174	LCNI TIMED OUT The firmware did not receive an expected command-complete interrupt. This indicates either a bug in the firmware or a bad controller board.
-175	LCNI-DETECTED IOCB OR CCB FORMAT ERROR This occurs in a power-on state or during a reload and means either that a firmware bug exists or that the LCNI controller is bad.
-176	WINCHESTER HARDWARE FAILURE This happens in a power-on state because of an error detected by a Winchester controller, or in the running state when the boot record was not found on the Winchester disk.

Module LED Error DisplaysLED Error Codes

LED Code	Definition and Explanation
-177	ILLEGAL TRAP CALL MADE TO THE FIRMWARE this can only happen if there is a bug in any software that traps to the firmware, including the OS loader, OS dumper, and HVTS loader.
-178	VERIFIABLE CHECKSUM FAILED This can happen only while running HVTS and memory has been corrupted. This is probably because of a bug in HVTS.
-179	LOADER READ ON LCN NOT ACCEPTED This can only happen when loading the node and an illogical condition happened when initiating the read on the LCN. The cause would be a firmware bug.
-17A	Reserved
-17-	Reserved
-17C	Reserved
-17	Reserved
-17E	Reserved
-17F	Reserved
-180	COULD NOT READ ONE OF PERSONALITY FILES This happens upon power-on or when doing a personality change and one of the personality files does not exist on the Winchester, cannot be successfully read, or has been corrupted.
-181	Reserved
-182	Reserved
-183	RELOAD NODE FAILURE The firmware has been told to reload a node from other than a Winchester, a floppy, a cartridge, or the LCN. Caused by a software bug incorrectly overwriting the Load Control Block.
-184	REQUEST TO SET NODE STATE TO ILLEGAL STATE Caused by a bug in a command program, QLTs, or the boot loaders.
-185	Reserved
-186	Reserved
-187	Reserved
-188	COULD NOT READ THE \$BOOT. MS FILE This happens upon power-on or when doing a personality change and the \$BOOT.MS file either does not exist on the Winchester, or cannot be successfully read, or has been corrupted.

LED Code	Definition and Explanation
-189	NODE WAS STUNNED EXTERNALLY OR INTERNALLY Either the software disabled interrupts too long and the LCNI controller failed the node, or the node quit communicating to other nodes and was externally stunned. This external stun could arise when a node is out of dynamic (heap) memory, when a high-priority task hangs up in a loop and prevents communications, when the LCNI board partially fails and does not communicate, when a cable failure causes enough errors to disrupt communications, or when heavy traffic causes messages to be lost in this or in other nodes.
-18A	COULD NOT READ ONE OF QLT FILES This happens upon power-on or when doing a personality change and one of the QLT files does not exist on the Winchester, cannot be successfully read, or has been corrupted.
-18-	Reserved
-18C	COULD NOT READ ONE OF PERSONALITY FILES This happens upon power-on or when doing a personality change and one of the personality files does not exist on the Winchester, cannot be successfully read, or has been corrupted.
-18	Reserved
-18E	COULD NOT READ ONE OF OFT FILES This happens upon power-on or when doing a personality change and one of the OFT files does not exist on the Winchester, cannot be successfully read, or has been corrupted.
-18F	CHECKSUM FAILURE OF LOADED IMAGE This happens when the checksum: generated at build time does not match the checksum of the file (QLT, Personality, or OFT) being loaded. This could be caused either by an undetected read error or by the file to be loaded being corrupted.
-190	ILLOGICAL SOFTWARE CONDITION This always means that the software found a logical inconsistency and caused the node to fail. Among the many kinds of errors that cause this error are missing files such as checkpoint data or abstracts, an NCF that does not match the running network, out-of-date hardware revision levels, DHI hardware failure serious enough to kill the node, and "true" crashes that indicate software problems. Check node displays and the Real-Time Journal for other clues.
-191	REDUNDANCY STARTUP PROBLEM This occurs only when a primary and redundant HG are being loaded and started at the same time by two other nodes. One of the HGs fails when it tries to become primary. Also can occur with bad APL files in HM.
-192	USER REQUESTED SHUTDOWN This error should never occur because all shutdowns are orderly and will go into the qualified state.
-193	RESOURCE ERROR CORRECTIVE ACTION this occurs only in certain cases when the software is missing a file on startup and decides to kill the node. Can also occur if the HM has a file open or is missing the Area Database file in &Dxx or &DSY.

Module LED Error Displays

LED Error Codes

LED Code	Definition and Explanation
-194	BUFFER OVERFLOW CORRECTIVE ACTION This error should never occur because no check for buffer overflow is made.
-195	COMMUNICATION ERROR CORRECTIVE ACTION This occurs when the redundancy control task of a secondary HG can no longer communicate with the primary, but the System Error Handler can communicate with it. The assumption is that the secondary is at fault.
-196	MEMORY ERROR CORRECTIVE ACTION This occurs when the On Process Test software determines that a memory board is terminally ill, or if several memory board problems occur within a very short time span.
-197	A FATAL ERROR DURING INITIALIZATION This occurs when a fatal error happens before the initialization of the System Error Handler is complete. The type of error usually indicates bad (or insufficient) memory because of a bus or address error, an MCPU hardware problem, or a software problem. Can also occur with a bad NGI card.
-198	NOT ENOUGH MEMORY ON STARTUP This occurs when the software determines that no heap (dynamic) memory is available after the image was loaded. If some heap is available, but not enough to execute the personality, the node fails with a -190 error.
-199	DOUBLE ILLOGICAL SOFTWARE CONDITION This occurs when an illogical condition (-190) occurs in the process of distributing another illogical condition. The second condition is NOT distributed onto the network. Can also occur if the pinning is incorrect on the HM drives.
-19-	Reserved
-19C	Reserved
-19	Reserved
-19E	Reserved
-19F	Reserved

Honeywell

Honeywell Process Solutions
1860 W. Rose Garden Lane
Phoenix, AZ 85027 USA