

Honeywell

TPS File Transfer Installation and User Guide

FT05-400

TPS R400

02/2007

Notices and Trademarks

**Copyright 2007 by Honeywell International Inc.
Release TPS R400 - March 2007**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell, **TotalPlant**, and Experion are registered trademarks of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell International
Process Solutions
2500 West Union Hills
Phoenix, AZ 85027
1-800 223-8947

About This Document

This document contains information for installing, configuring and using the Honeywell File Transfer application to transfer files from the History Module to a TPS Node PC.

Release Information

Document Name	Document ID	Release Number	Publication Date
TPS File Transfer Installation and User Guide - FT05	FT05-400	TPS R400	02/2007

References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

Document Title	Doc ID
<i>TPS System Implementation Guide (for Windows 2003/XP)</i>	TP08X

Contacts

World Wide Web

The following lists Honeywell's World Wide Web sites that will be of interest to our process solutions customers.

Honeywell Organization	WWW Address (URL)
Corporate	http://www.honeywell.com
Process Solutions	http://www.honeywell.com/ps
International	http://content.honeywell.com/global/

Telephone

Contact us by telephone at the numbers listed below.

Organization		Phone Number	
United States and Canada	Honeywell International Inc.	1-800-525-7439	Service
	Process Solutions	1-800-822-7673	Tech. Support
Asia Pacific	Honeywell Asia Pacific Inc.	(852) 23 32 9133	
	Hong Kong		
Europe	Honeywell PACE	[32-2] 728-2711	
	Brussels, Belgium		
Latin America	Honeywell Inc.	(954) 845-2600	
	Sunrise, Florida U.S.A.		

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.

Contents

1.	Introduction	9
1.1	About File Transfer.....	9
	Description	9
	TPS Node types	10
	File Transfer tasks.....	10
	Restrictions	10
	File Transfer security.....	10
1.2	Using This Document.....	11
	Purpose.....	11
	Intended users	11
	Terminology notes.....	11
	TPS Network HM directories and Windows Explorer HM folders	11
2.	Installation and System Administration	13
2.1	Overview	13
	Getting started with File Transfer	13
	Required software	14
	Who should install File Transfer?	14
	Installation planning for File Transfer	14
	Minimum configuration	14
2.2	Installing File Transfer.....	15
	Purpose.....	15
	Install File Transfer on a TPS or a non-TPS node.....	15
2.3	Using the File Transfer Configuration Utility	16
	Open File Transfer Configuration Utility	16
	File Transfer configuration pages.....	17
	File Transfer buttons	18
2.4	General Configuration	19
	Description	19
	General property page on a TPS node (Server and Client installation).....	19
	General property page on a non-TPS node (Client Only installation).....	20
	General property page entries	20
	Changing general properties	21
2.5	HM Node Configuration.....	22
	Description	22
	HM property page	22

HM property page entries	23
Changing HM nodes.....	23
2.6 Security Configuration	24
Planning	24
Defaults	24
Security property page	25
Security property page entries	26
Configuring Default Access Rights	26
Managing Volume Security	27
Mapping Windows file permissions to TPN volume permissions.....	27
Configuring default access rights	27
Adding a volume	28
Configuring security for a managed volume	28
Removing a volume.....	29
2.7 File Attribute Configuration	30
Description	30
File Attributes property page	30
File Attributes property page entries.....	31
Changing file attributes.....	31
2.8 Audit Trail Configuration	32
Description	32
Audit Trail property page	32
Changing audit trail configuration	33
2.9 Startup and Verification	33
Requirements for transferring files	33
Verify File Transfer service is started	33
2.10 Stopping/Starting File Transfer	34
When to stop File Transfer	34
Stop File Transfer.....	35
Start File Transfer.....	35
Additional information.....	35
2.11 Removing Software.....	36
Remove File Transfer.....	36
3. Using File Transfer	37
3.1 Introduction	37
3.2 HM Directory and File Considerations.....	37
Directory structure restrictions.....	37
Naming conventions.....	38
Viewing changes to the TPS Network HM.....	39
3.3 Performing Actions on Files and Folders.....	40

Using File Transfer commands in Windows Explorer.....	40
Using drag and drop.....	41
Creating new folders on the HM.....	41
Changing file names and file extensions.....	42
Copying folders and files from the HM to the TPS node	42
Copying folders and files from the TPS node to the HM	43
Deleting folders and files on the HM	43
Moving folders and files on an HM.....	44
3.4 File Transfer Commands.....	45
TPS File Transfer commands.....	45
Viewing online help for File Transfer commands.....	49
Using MS-DOS to search the HM for specific files	50
3.5 Using the AT Scheduler Command for Batch Files	51
Purpose.....	51
Using the AT command with File Transfer and batch files	51
Updating your batch files.....	51
Example commands for batch files	52
Using the AT Scheduler	53
3.6 Managing Files and Folders.....	54
Free/used disk space	54
Disk labels.....	54
File sizes	54
Directory timestamps	54
File timestamp.....	55
File attributes.....	55
3.7 TPS Network Considerations	56
Multiple HMs on the same TPS Network.....	56
Network Gateways.....	56
HM Init Personality support	56
Editing HM files	56
File Transfer limitations	56
3.8 Remote File Transfer	57
Installation of Remote File Transfer	57
Configuration of Remote File Transfer	57
4. Troubleshooting	59
4.1 Overview	59
In this section	59
4.2 What To Do If.....	59
File Transfer does not start successfully	59
Network-path message appears	60
Cannot create file message appears.....	60

TPS Command Processor directory contents differ from Windows Explorer folder.....	60
Other errors occur	61
You cannot copy/move certain files.....	61
Hidden files not visible on all TPS Nodes.....	61
4.3 Corrective Actions.....	62
Configuration issues.....	62
File Transfer security issues.....	63
TPS node problems.....	65
4.4 Technical Assistance	65
To obtain the File Transfer software version number	65
To get log file information	65

Tables


Table 2-1 File Transfer Installation & Configuration Tasks.....	13
Table 3-1 File Transfer Commands	45
Table 4-1 Corrective Actions for Configuration	62
Table 4-2 Corrective Actions for Security	63

1. Introduction

1.1 About File Transfer

Description

The Honeywell File Transfer software package runs on a Honeywell **TotalPlant** Solution (TPS) system node connected to a TPS Network and a Plant Information Network. After installing File Transfer on the TPS node and configuring the HM, Honeywell File Transfer appears as a namespace within Windows Explorer. You can use the File Transfer pop-up menu from the right pane to perform operations on History Module files. Additionally, if you need to access the HM files from a non-TPS node, you may copy the HM files to the TPS node's hard drive and map to and access the HM files and folders as you would access any other files or folders from a remote PC.

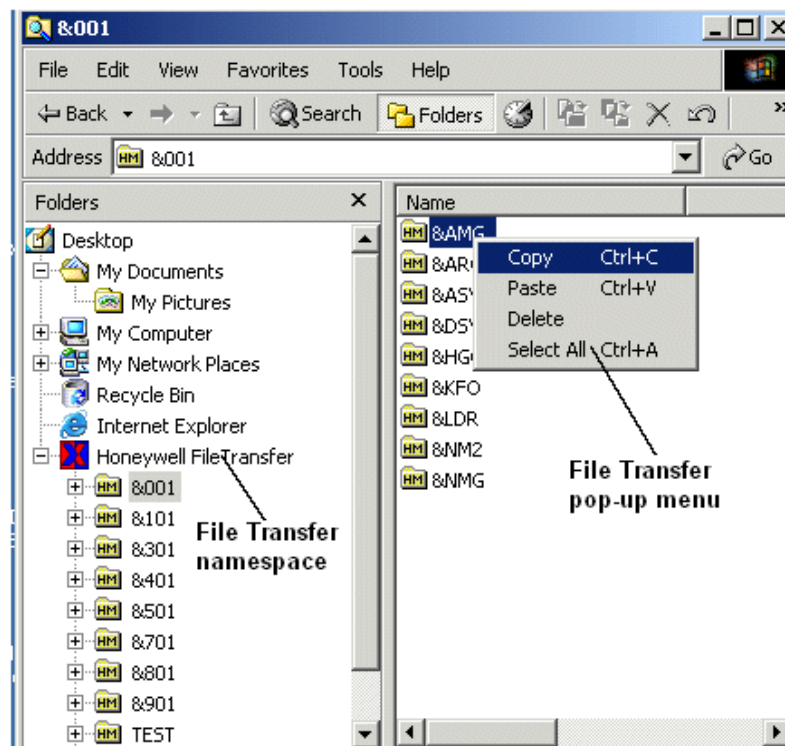

TPS Node types

In this document, TPS node refers to the following node types:

- Global User Station (GUS)
- Application (APP) node
- Experion Server – TPS (ESVT)
- Experion Station TPS (EST)

File Transfer tasks

You can use File Transfer to perform many of the same operations on HM files that you would perform on files using Windows Explorer. With File Transfer, you can access databases, schematics, and Control Language (CL) application files. Keep in mind, however, that the way in which you perform these tasks may be different between Windows Explorer and File Transfer. The procedures in this document point out these differences. Use File Transfer to perform the following:

- Copy files from the HM to the TPS node
- Copy files from the TPS node to the HM
- Delete files on the HM
- Delete directories/folders on the HM
- Rename files on the HM
- Create new directories/folders on the HM

After copying the HM files to the TPS node, you can then use Microsoft Notepad to open and modify the files.

Restrictions

There are some limitations when using File Transfer to manage files. For example, you can configure default access rights for all your HM nodes, or you can apply access rights to Managed Volumes. You cannot, however, apply access rights to individual files or directories/folders. See Section 2.6, “Security Configuration” for more information.

File Transfer security

Security for File Transfer, which is based on Windows User IDs instead of a separately maintained list of File Transfer users, is configured using the Security properties page.

1.2 Using This Document

Purpose

This document contains the information needed to install, configure, use, and troubleshoot File Transfer.

Intended users

This document is intended for the following users:

- Qualified system network administrators who will install, configure, and maintain File Transfer.
- Engineers, operators, and other users qualified to access the system HMs.

Users accessing HMs from a TPS node should be familiar with the Microsoft Windows environment, particularly Windows Explorer functions.

Terminology notes

File Transfer is part of Honeywell's **TotalPlant** Solution (TPS) system. TPS is the evolution of TDC 3000^X. This document uses TPS system terminology. The term "TPS Network" (TPN) is used in place of "Local Control Network" (LCN).

Within the Microsoft Windows 2000 environment, you may use several methods for viewing drives and their contents. For example, you can use the Windows Explorer, My Computer, or the Network Neighborhood. The procedures and examples in this document use Windows Explorer.

TPS Network HM directories and Windows Explorer HM folders

This document uses both directory and folder to refer to the containers used to organize HM files. When referring to the HM on the TPS network, the term directory is used. When referring to the HM as viewed in Windows Explorer, the term folder is used.

2. Installation and System Administration

2.1 Overview

Getting started with File Transfer

This section contains procedures for installing and configuring File Transfer.

Table 2-1 File Transfer Installation & Configuration Tasks

Task	Perform task from	See
<i>Install File Transfer</i>		
Install File Transfer on a TPS node connected to an LCN Network (Server and Client)	Installation wizard	Section 2.2
Install File Transfer on a non-TPS node (Clinet only)	Installation wizard	Section 2.2
<i>Install File Transfer</i>		
Configure File Transfer	Configuration Utility	Section 0
Identify Server location on Client node. Note: This is the only configuration required for client nodes.	General Tab	Section 2.4
Establish HM Drive Letter and path for event log file ¹ .	General tab	Section 2.4
Identify HM Node numbers for File Transfer.	HM Nodes tab	Section 2.5
Configure security ² .	Security tab	Section 2.6
Modify types of files that can be transferred ¹ .	File Attributes tab	Section 2.7
Choose the types of events to record in the File Transfer event logs ¹ .	Audit Trail tab	Section 2.8
Verify File Transfer is connected and running.	Windows Explorer & Administrative Tools > Services	Section 2.9
¹ File Transfer service must be stopped and restarted for the configuration change to take effect.		
² Security must be configured.		
Stop or start File Transfer services	Administrative Tools > Services	Section 2.10
Remove File Transfer	Add/Remove Programs	Section 2.11

Required software

The TPS control network release must be compatible with Windows XP/Windows Server 2003, and the operating system for the TPS Node must be Windows XP/ Windows Server 2003.

Refer also to your Software Change Notice for specific release compatibility.

Who should install File Transfer?

A qualified network administrator with an Administrator login should install File Transfer.

Installation planning for File Transfer

Before installing File Transfer for the first time, determine

- The users who will be allowed to use File Transfer, the TPN volumes they will be allowed to access, and their access rights to each volume.
- The HM nodes (up to ten) that are to be visible from the TPS node.
- An appropriate Server node that the non-TPS client nodes can access.
- A location for log files, if other than the default C:\temp folder.

Configuration options are discussed in the following sections.

Minimum configuration

File Transfer provides default entries for all configuration options except the following:

- You must enter at least one HM node (HM Nodes properties page), and
- You must choose a Default Access level (Security properties page).

2.2 Installing File Transfer

Purpose

Use the procedures in this section to install File Transfer on both TPS and non-TPS nodes.

Install File Transfer on a TPS or a non-TPS node



ATTENTION

Uninstall any previous versions of File Transfer before installing the new version and reboot.

Use this procedure to install the Server component of File Transfer on a TPS Network GUS or APP node, or the Client component of File Transfer on a non-TPS node.

Step	Action
1	Log in as TPS Administrator , or a user with the same access level.
2	Insert the TPS System Software CD in the drive and proceed to the User Information screen of the TPS Software Installation utility.
3	Fill in the fields, including an Authorization No. that provides access to a TPS software package that includes File Transfer ^{See Note} and then click Next . Note: All packages, File Transfer, or APP Solution package
4	Select one of the following File Transfer components: • File Transfer – Server and Client (if installing on a TPS Node) • File Transfer – Client Only (if installing on a non-TPS node)
5	Click Next to launch the Installation Wizard.
6	Read and accept the terms in the license agreement, and click Next .
7	From the Customer Information screen, make the following selections: • Type the User Name • Type the Organization Name • Select Anyone who uses this computer (all users).

Step	Action
8	Click Next and follow the installation wizard to complete the install.
9	Perform a system reboot after completing the installation wizard.
10	Add the TPS File Transfer Service (FTService.exe) to the node's Windows Firewall Exceptions .



REFERENCE - INTERNAL

For instructions to implement Remote File Transfer on a node that does not have access to the HM, refer to section 3.8 "Remote File Transfer"..

2.3 Using the File Transfer Configuration Utility

Open File Transfer Configuration Utility

Use the following procedure from to open the File Transfer Configuration Utility.




ATTENTION

This procedure must be performed at the File Transfer server node.

Step	Action
1	Click Start > All Programs > Honeywell TPS , and then click Configuration Utility .
2	Select Configure > File Transfer


2. 1BInstallation and System Administration

2.3. 8BUsing the File Transfer Configuration Utility

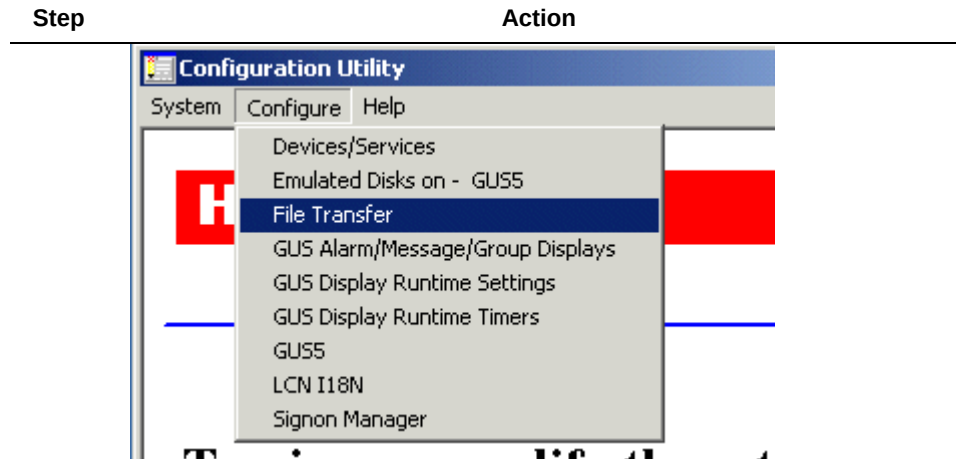

File Transfer configuration pages

After opening File Transfer from the Configuration Utility, the following property pages are available.

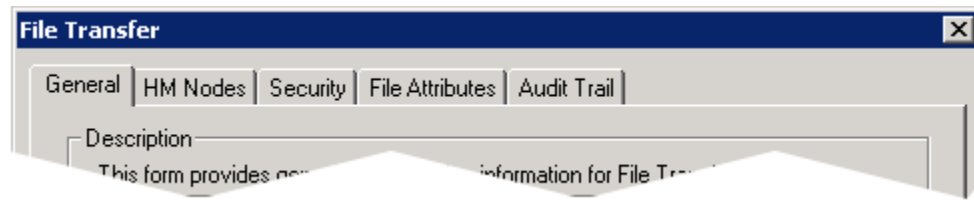


- General
- HM Nodes
- Security
- File Attributes
- Audit Trail

The following sections contain details for using the five File Transfer property pages.

Note: The Client-Only installation has only the **General** property page, because other configurations are not applicable in the non-TPS node.

File Transfer buttons

Each of the File Transfer property pages contains the following buttons:

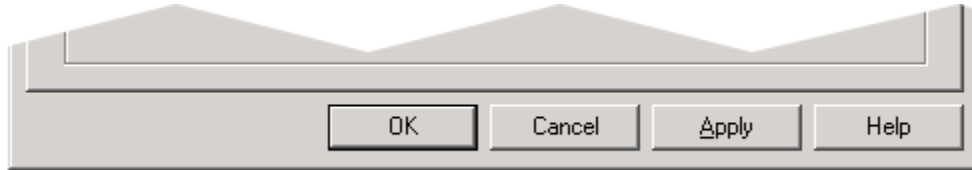

OK—Implements choices on all pages and closes configuration dialog.

Cancel—Cancels any choices not already implemented by Apply and closes configuration dialog.

Apply—Implements choices on all pages, but leaves dialog open.

Help—Provides configuration details online.

2.4 General Configuration

Description

Use the General properties page to identify the server location and location for the File Transfer LOG file and maximum file size for the log file. While File Transfer runs, it logs exceptional situations in a system log file, which can be used for diagnostic purposes.

See also Section 2.8, “Audit Trail Configuration” for information on the types of events to log. **Note:** For a Client – Only installation, **Log file info** configuration is not applicable and will be grayed out.

General property page on a TPS node (Server and Client installation)

The screenshot shows a Windows-style dialog box titled "File Transfer : IE10-TPSB-TEST2". It has a tabbed interface with five tabs: "General", "HM Nodes", "Security", "File Attributes", and "Audit Trail". The "General" tab is selected. Inside the dialog, there is a "Description" section with the text "This form provides general configuration information for File Transfer". Below this is a "Server info" section with a "Server Location" field containing the text "ie10-tpsb-test2". At the bottom is a "Log file info" section with two fields: "Path for LOG file" containing "C:\temp" and "Maximum size of the LOG file" containing "20000". At the very bottom of the dialog are four buttons: "OK", "Cancel", "Apply", and "Help".

General property page on a non-TPS node (Client Only installation)

The screenshot shows a Windows-style dialog box titled "File Transfer : IE10-TP5B-TEST2". It has a "General" tab selected. Inside the dialog, there are three main sections: "Description" with a text box containing "This form provides general configuration information for File Transfer"; "Server info" with a "Server Location" field containing "GUS24"; and "Log file info" with a "Path for LOG file" field containing "C:\TEMP" and a "Maximum size of the LOG file" field containing "20000". At the bottom of the dialog are four buttons: "OK", "Cancel", "Apply", and "Help".

General property page entries

The following table describes entries for the General configuration page.

Entry	Description
Server location	If the installation type is Client Only, then type in the Remote GUS/APP node name or IP address on which the Server File Transfer is installed. This is the node that is used to access the HM. If the installation is Server and Client. Leave this blank.

2.1B Installation and System Administration

2.4. 9B General Configuration

Entry	Description
Path for LOG file	The default is C:\TEMP. If your temp folder is on a different drive, or you want to maintain log files in a different folder, change the path as needed. NOTE: Verify the specified folder exists. Note: By default, the C:\TEMP folder does not exist on Windows XP/Windows Server 2003. (Not applicable for Client Only installation)
Maximum size of the log file	The default is 20,000 lines. When a log file reaches the maximum size, a new log file begins and the previous file is renamed with an extension of .old. Only one old file is maintained. Every time the log reaches the specified size, the existing old file is overwritten. NOTE: . (Not applicable for Client Only installation)

Changing general properties

To change this part of the configuration after File Transfer is started, you must first stop File Transfer, make the change, and then restart it.

Refer to "Stopping/Starting File Transfer" in section 2.10.

2.5 HM Node Configuration

Description

Use the HM Nodes property page to identify the LCN node number(s) of the HM(s) you want available through File Transfer. **You must configure at least one HM before you can run File Transfer.**

HM property page

The screenshot shows a Windows-style dialog box titled "File Transfer". It has five tabs: "General", "HM Nodes", "Security", "File Attributes", and "Audit Trail". The "HM Nodes" tab is selected. Inside the dialog, there is a "Description" section with the text: "This form provides HM node number configuration information for File Transfer". Below this is the "HM Node Numbers" section, which contains ten input fields arranged in two columns. The first column has fields for "HM Node 1" through "HM Node 5", and the second column has fields for "HM Node 6" through "HM Node 10". The values in the fields are: HM Node 1: 63, HM Node 2: 64, HM Node 3: 0, HM Node 4: 0, HM Node 5: 0, HM Node 6: 0, HM Node 7: 0, HM Node 8: 0, HM Node 9: 0, and HM Node 10: 0. At the bottom of the dialog are four buttons: "OK", "Cancel", "Apply", and "Help".

HM Node	Value
HM Node 1	63
HM Node 2	64
HM Node 3	0
HM Node 4	0
HM Node 5	0
HM Node 6	0
HM Node 7	0
HM Node 8	0
HM Node 9	0
HM Node 10	0

2. 1BInstallation and System Administration

2.5. 10BHM Node Configuration

HM property page entries

The following table describes entries for the HM configuration page. None of the entries contain default values.

Entry	Description
HM Node Numbers	Define up to ten HM node numbers on the TPS Network (configured in the Network Configuration File) that should be visible to the TPS node and Plant Information Network. Configure all HM node numbers of your TPS Network, even if a particular HM node is down at the time of configuration. File Transfer will start successfully if an HM node is down and pick up the missing HM at a later time.

Changing HM nodes

If File Transfer is running when you make any changes to the HM Nodes tab, you must stop and restart File Transfer for the changes to be implemented. Following is an example of the sequence for configuring the HM nodes:

- Close Windows Explorer.
- From the HM Nodes tab, make the changes and click Apply or OK.
- Stop the TPS File Transfer service.
- Start the TPS File Transfer service.
- Open Windows Explorer.

2.6 Security Configuration

Planning

Access to TPN files is based on the Windows user login, and can be applied to each TPN volume. All files within a volume will have the same access permissions. Initially, all volumes will allow valid users the Default Access Rights selected on the Security property page. Then, greater or lesser access rights to selected volumes can be granted to specific Windows 2003/XP users or groups using the Managed Volumes list from the Security properties page.

To give employees access to File Transfer, take one of the following approaches

- Configure the Default Access to protect access to allow valid users to have full access to all volumes, and then limit access to specific volumes.
- Alternatively, configure the Default Access as limited (No access, or Read access), and then configure permissions to specific volumes for users/groups that require higher access.

Consider your security needs before deciding which approach to take. The first approach offers less security than the second approach

Defaults


By Default, the Local Administrators and TPS Engineers group is provided full access to the TPN Files.

2. 1BInstallation and System Administration

2.6. 11BSecurity Configuration

Security property page

Use the Security property page to configure the default access rights to all unmanaged TPN Volumes. Use it also to create a list of managed volumes for which specific access rights can be configured.

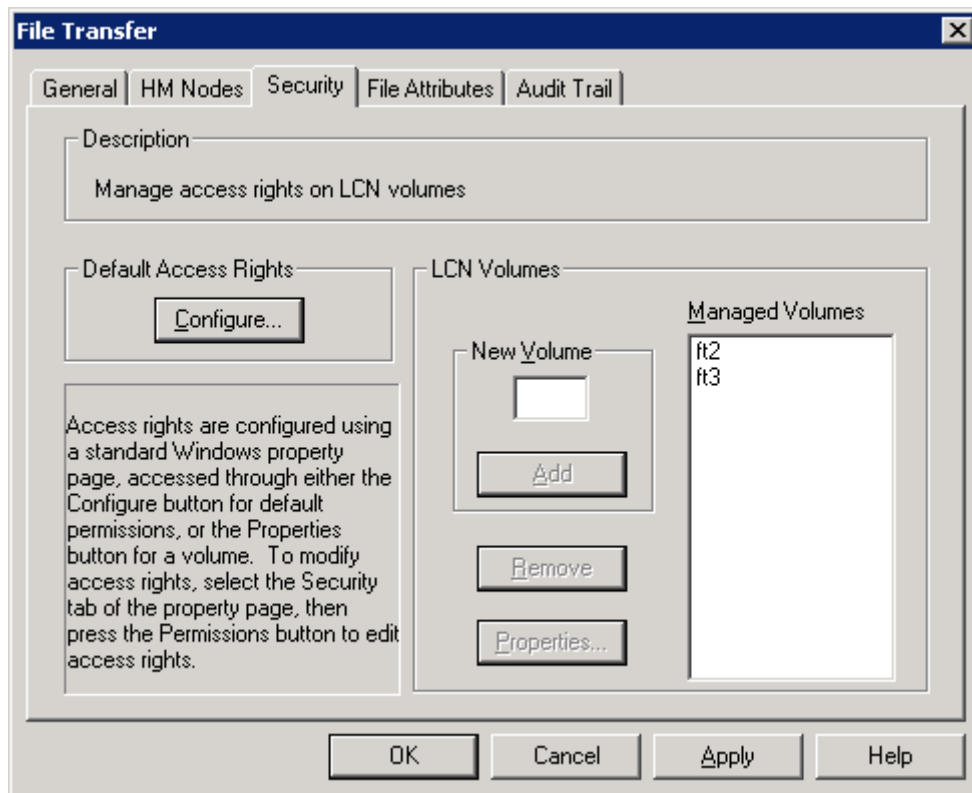

Security property page entries

The following table describes entries for the Security configuration page.

Entry	Description
Default Access Rights	Default access rights apply control access to all unmanaged volumes. Click the Configure button to change the Default Access Rights.
LCN Volumes	Entries for managed volumes. See the following procedures in this section: • Adding a volume • Configuring security for a managed volume • Removing a volume

Configuring Default Access Rights

Default Access Rights apply control access to all volumes that are **not** listed in the **Managed Volume** list.

Use the following procedure to configure Default Access Rights:

Step	Action
1	Click the Configure button in the Default Access Rights frame. This will bring up the standard Windows property page for the Default access permissions.
2	Click OK to accept the default permissions, or make changes and then click OK .

Managing Volume Security

Once File Transfer is started, you do not need to stop it to add or change managed volumes. The following topics explain how to control access to files on the TPN on a volume-by-volume basis.



ATTENTION

The effects of the Add, Remove, and Properties buttons used in Security configuration are immediate and do not require you to click OK or Apply to take effect.

Mapping Windows file permissions to TPN volume permissions

The access permissions to the files and directories on a TPN volume will be mapped into the Windows file permissions, which are not identical. To set permissions to the TPN volume, use the Windows File Permissions dialog box. The following table lists how the Windows permissions map to the TPN volume permissions.

Windows file permission	Maps to TPN volume permission
Read	TPN Read Access
Write	TPN Write Access
Execute	TPN Protect Access
No Read, Write or execute	TPN No Access

Configuring default access rights

Step	Action
1	Access File Transfer in the Configuration Utility.
2	Select the Security property page.
3	Click Configure in the Default Access Rights area.
4	Select the Security tab from the Windows Default Properties page.
5	Configure security according to your administrative requirements.


Adding a volume

Step	Action
1	Access File Transfer in the Configuration Utility.
2	Select the Security property page.
3	Type a volume name in the New Volume field.
4	Click Add .
5	To establish specific access rights for the volume, see "Configuring security for a managed volume."

Configuring security for a managed volume


Use the following procedure to change the access rights for a managed volume.

Step	Action
1	From the Security page, choose an existing volume from the Managed Volumes list.
2	Click Properties to display the properties page for the managed volume.

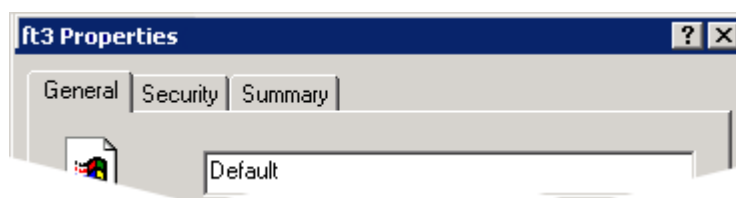

2. 1BInstallation and System Administration

2.6. 11BSecurity Configuration

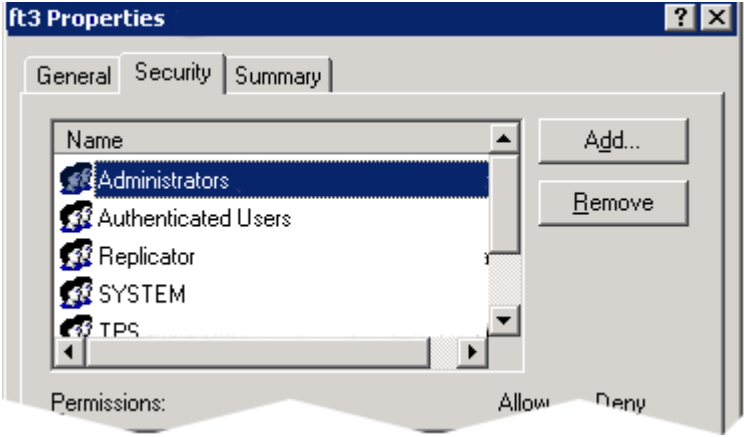Step	Action
3	Select the Security tab from the managed volumes properties page. The Microsoft Windows security page appears. 
4	Configure security for the users and groups that are allowed to access the managed volume.
5	Click OK to return to the File Transfer Security tab.

Removing a volume

Use the following procedure to remove a volume from the Managed Volumes list.

Step	Action
1	Select the volume name in the list.
2	Click Remove .

The volume and all configured security permissions are removed immediately. If the volume is later re-added, security permissions must be reconfigured.

2.7 File Attribute Configuration

Description

Use this property page to configure the types of files that can be transferred and to establish how the different files will be handled between the TPN and the TPS Node.

File Attributes property page

The screenshot shows a Windows-style dialog box titled "File Transfer" with a close button (X) in the top right corner. The dialog has five tabs: "General", "HM Nodes", "Security", "File Attributes" (which is selected), and "Audit Trail".

Inside the "File Attributes" tab, there is a "Description" section with a text box containing the text: "This form provides file attribute information for File Transfer".

Below the description, there is a "List of file extensions:" label followed by a text box containing "FF" and a dropdown arrow. To the right of this is an "Add" button. Below the text box, it says "Number of configured file extensions: 73 / 150". To the right of this is a "Remove" button.

At the bottom of the tab is a "Details" section. It contains two groups of radio buttons. The first group is labeled "Translation mode" and has two options: "Text" (with an unselected radio button) and "Binary" (with a selected radio button). The second group is labeled "Padding" and has two options: "Yes" (with a selected radio button) and "No" (with an unselected radio button).

At the very bottom of the dialog box are four buttons: "OK", "Cancel", "Apply", and "Help".

2. 1BInstallation and System Administration

2.7. 12BFile Attribute Configuration

File Attributes property page entries

The following table describes entries for the File Attributes configuration page.

Entry	Description
List of file extensions	Lists HM file extensions. Add other HM file extensions (up to 150 total) for which you want to specify translation mode and padding. Remove extensions only if you are <i>certain</i> that files of that type will never be used on your network.
Translation attributes	Identifies, by TPS Network file type, the type of translation that occurs when a file is copied from the HM to the TPS node: - Text: Files that contain information that can be edited by an ASCII editor are copied in a way that is compatible with ASCII editors. - Binary: Non-editable files (for example, DS files that are for the Picture Editor) are copied in a binary way to the TPS node.
Padding	Defines the compression approach for binary files when copying TPS Network-linked files that have variable record size to the TPS node. - Yes—makes sure that the file size is maintained when a file is copied. - No—the unused space of the TPS Network file is compressed so that the resulting file is smaller. By default, the padding switch is turned on so that the true file size is reflected on the TPS Network and the TPS nodes.



ATTENTION

Do not change the translation attribute of a file type.

Changing file attributes

To change this part of the configuration after File Transfer is started, you must first stop File Transfer, make the change, and then restart it. See Section 2.10, “Stopping/Starting File Transfer.”


2.8 Audit Trail Configuration

Description

Your administrative needs may call for more detail than is normally captured. Use this property page to specify the additional information you want recorded in the File Transfer event logs. File Transfer events can be found in the Event Viewer (in the Administrative Tools program group). Look for events with a source of File Transfer.

Audit Trail property page

Choose any events you want logged. Details are provided after the following figure.

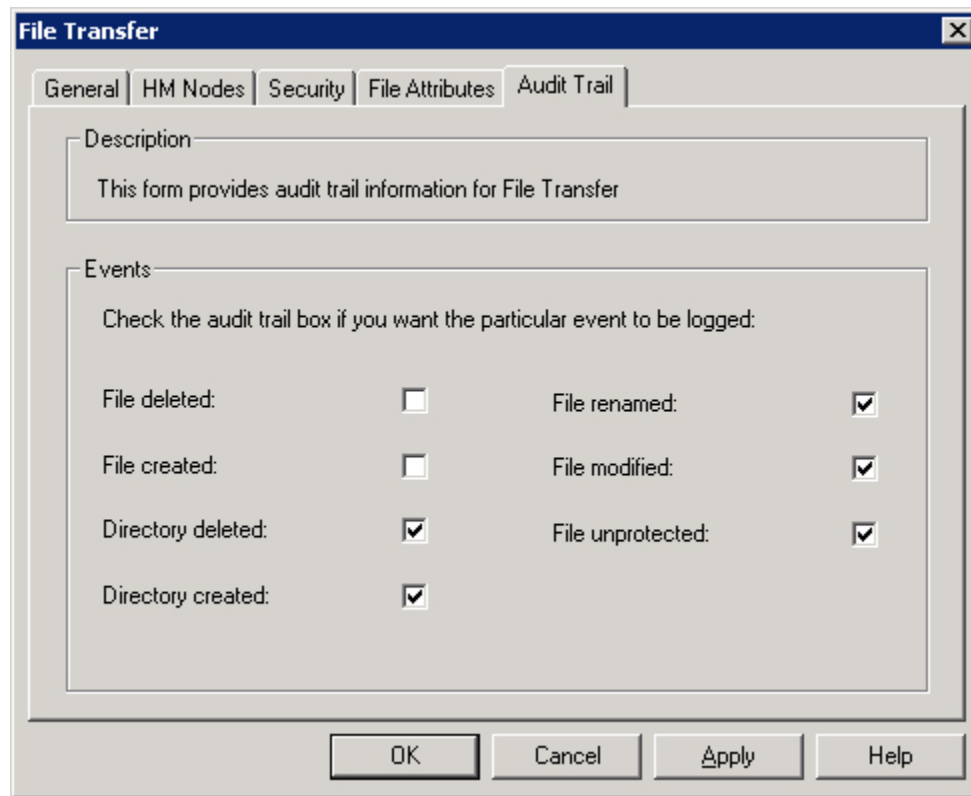

Changing audit trail configuration

To change this part of the configuration after File Transfer is started, you must first stop File Transfer, make the change, and then restart it. See Section 2.10, “Stopping/Starting File Transfer.”

2.9 Startup and Verification

Requirements for transferring files

In order to use File Transfer, the following conditions must be met:

- The TPS Network side must be up and running, and the
- The File Transfer service on the File Transfer server must have a status of Started.



ATTENTION

The status in the Services window does not update automatically. You must start the Honeywell File Transfer service after the TPS Network is up and running.

Verify File Transfer service is started

If the TPS Network side of the node is not running, the File Transfer service will not start, and will enter the Paused state while waiting for the TPS Network side of the node to transition to the running state.

Step	Action
1	If the configuration process has not been completed, do so now.
2	Verify the TPS Network side of the node is running.
3	Click Start , point to Settings , and then click Control Panel .
4	Double-click Administrative Tools , and then double-click Component Services .
5	In the console Tree, select Services .
6	Click the Name column to sort the services and locate the TPS File Transfer service.
7	Right-click File Transfer and select Start .
8	If the service status is Started , File Transfer is ready.

Step	Action
9	If the service status is Paused , the TPS Network side of the node is not running. When it starts up, the service will change to the Started state.
	TIP Depending on the number of HMs configured, it may take a minute or more for the service to start. Click the Refresh button or select Refresh from the Action menu to verify you are viewing the most recent status.

2.10 Stopping/Starting File Transfer

When to stop File Transfer

If you make any changes to the TPS Network HM, you must stop and restart File Transfer to view the changes in the File Transfer namespace. Additionally, you need to stop File Transfer and then restart it to activate configuration changes for the following property pages:

- General
- HM Nodes
- File Attributes
- Audit Trail

You do not need to stop File Transfer when configuring Security although some administrative functions, such as maintenance, may also require stopping File Transfer.

Stop File Transfer

Use this procedure to stop File Transfer.

Step	Action
1	Notify users that the program is to be stopped.
2	Click Start , point to Settings , and then click Control Panel .
3	Double-click Administrative Tools , and then double-click Services
4	In the console Tree, select Services .
5	Click the Name column to sort the services and locate the TPS File Transfer service.
6	Right-click Service and select Stop .
7	Close the Services dialog

Start File Transfer

By default, the TPS File Transfer service is set to automatically start. If the service was stopped for any reason, you may restart it using the following procedure.

Step	Action
1	Click Start , point to Settings , and then click Control Panel .
2	Double-click Administrative Tools , and then double-click Services
3	In the console Tree, select Services .
4	Click the Name column to sort the services and locate the TPS File Transfer service.
5	Right-click Service and select Start .
6	Close the Services dialog

Additional information

For more information on Services, refer to the Microsoft Windows Help by clicking the Help button in the Services dialog.

2.11 Removing Software

Remove File Transfer

To remove the File Transfer program, perform the following steps:

Step	Action
<i>Stop the TPS File Transfer service</i>	
1	Notify users that the program is to be stopped.
2	Click Start , point to Settings , and then click Control Panel .
3	Double-click Administrative Tools , and then double-click Services
4	In the console Tree, select Services .
5	Click the Name column to sort the services and locate the TPS File Transfer service.
6	Right-click Service and select Stop .
7	Close the Services dialog
<i>Remove the File Transfer software</i>	
8	If Windows Explorer is open, close it.
9	Click Start , point to Settings , and then click Control Panel .
10	Double-click Add/Remove Programs .
11	Select Honeywell File Transfer from the Currently Installed Programs list, and click Remove .
12	Click Yes to confirm the removal of File Transfer software.

3. Using File Transfer

3.1 Introduction

This section contains information and procedures for using File Transfer to transfer files from the TPS Network History Module to the TPS node. Once files are transferred to a TPS node, you can access the files from a non-TPS node upon which the client portion of File Transfer has been installed. This section also has several sections on managing the history module directories and files.


3.2 HM Directory and File Considerations

Directory structure restrictions

The directory structure on the History Module is different and more limited than the folder structure in Microsoft Windows.

- On an HM, a drive is divided into volumes, which form a first level of directories. These volumes are created when initializing the HM and cannot be changed afterwards.
- The volumes can contain from 0 to 63 directories, which form a second level of directories.
- Only these two levels of directories (of which one is fixed) exist on a History Module.

Because of this HM structure, actions made from the Explorer of the TPS node are limited as shown in the following figure.

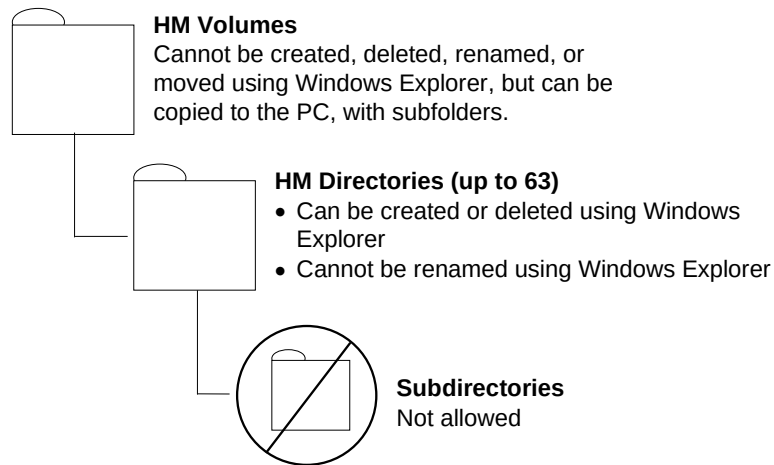

Naming conventions

Conventions for HM directory and file names are explained in the following table.

Item	Convention
File and directory names	• Alphanumeric characters (A-Z, 0-9) and the underscore character (_) are allowed. • Letters in a pathname can be capital or lower case (all are treated as capital letters).
Directory name	• Consists of one to four characters (defined above). • Ampersand (&) or exclamation point (!) characters can be used, but are reserved for Honeywell-supplied directories. • Extensions are <i>not</i> allowed. Example: USER
File name	Consists of one to eight characters (defined above), followed by a period (.), then an extension of one or two alphanumeric characters. (Single letter extensions X, Y, and Z can include an underbar as a second character, as in X_.). Example: BOILER.EB.

3. 2BUsing File Transfer

3.2. 18BHM Directory and File Considerations

Viewing changes to the TPS Network HM

When File Transfer is started at the TPS node, File Transfer reads the HM directory structures from the configured HMs that is currently active. If changes are made to an HM on the TPS Network, the TPS File Transfer service must be stopped and restarted in order to view the changes in the File Transfer namespace. See Section 2.10, “Stopping/Starting File Transfer” for step-by-step procedures.

3.3 Performing Actions on Files and Folders

CAUTION


When you choose to overwrite a file in the HM, File Transfer first deletes the original file, and then copies the latest file to the HM.

If an error occurs during the copy of the latest file, then File Transfer does not restore the original file. The user must correct the problem that caused the abort of the file copy operation, and then copy the latest file again to the HM location.

This behavior differs from previous releases.

Using File Transfer commands in Windows Explorer

Perform all tasks in this section at the Honeywell File Transfer namespace accessed through Windows Explorer, or right-click on the Honeywell File Transfer shortcut on the desktop. To use the File Transfer pop-up menu (shown in the following figure) right-click the HM file or folder in the right pane of Windows Explorer.

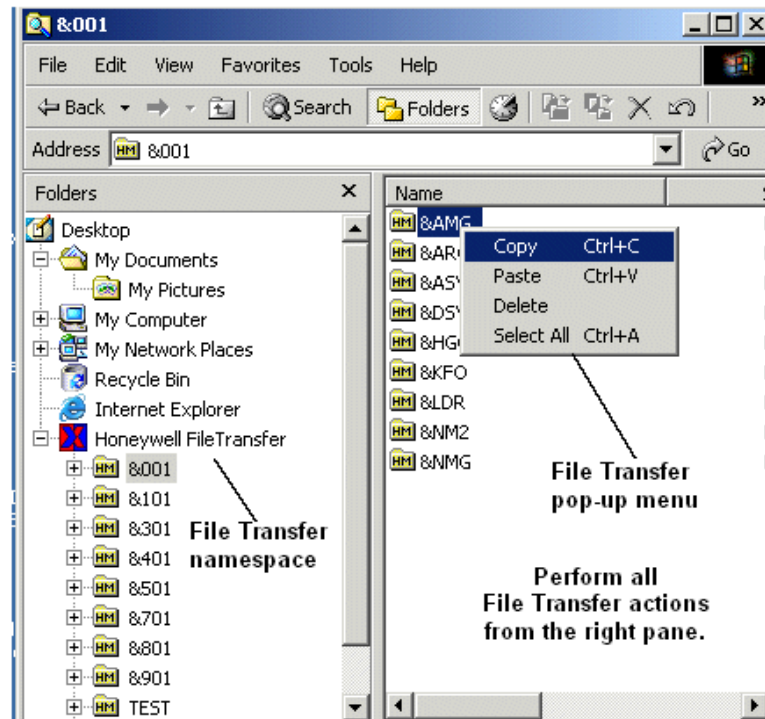


3. 2BUsing File Transfer

3.3. 19BPerforming Actions on Files and Folders

Using drag and drop

In order to use drag and drop functionality within the Honeywell File Transfer namespace, you must open two Explorer windows as shown in the picture.

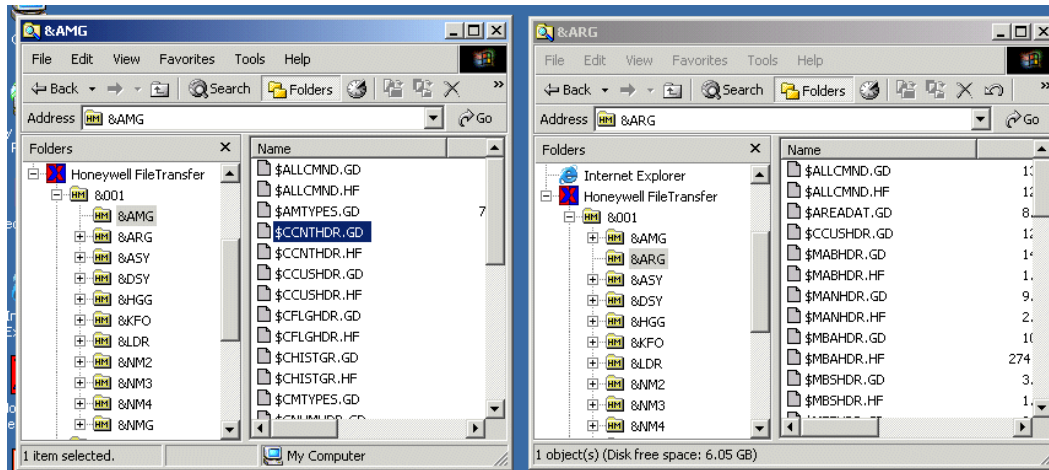

Creating new folders on the HM

You cannot create a folder directly on the TPS Network. Use the following procedure to create a folder using Windows Explorer and then copy it to the TPS Network:

Step	Action
1	From Windows Explorer, create a folder on the TPS node, and give it a name that is suitable for the TPS Network.
2	From Windows Explorer, right-click the folder and select Copy
3	Navigate to the Honeywell File Transfer namespace.
4	From the left pane, select the HM volume in which the folder will be placed.
5	Right-click in the right pane and select Paste .

Changing file names and file extensions

You cannot rename files or change the file extensions directly on the TPS Network. Use the following procedure to change file names and extensions on the HM.

Step	Action
1	Open Windows Explorer and navigate to the Honeywell File Transfer namespace.
2	From the left pane, select the HM folder that contains the file to be changed.
3	From the right pane, right-click on the file to be changed and select Copy .
4	Select a local folder on the TPS Node, right-click and select Paste .
5	From Windows Explorer, right-click the file, select Rename and type in the new name.
6	Right-click the newly named file and select Copy .
7	Return to the Honeywell File Transfer namespace and from the left pane, select the HM folder that contained the file to be changed.
8	Right-click in the right pane and select Paste .
9	From the right pane, right-click on the original version of the file and select Delete .

Copying folders and files from the HM to the TPS node

Use the following procedure to copy folders and files from the HM to the TPS Node.

Step	Action
1	Open Windows Explorer and navigate to the Honeywell File Transfer namespace.
2	From the left pane click on the • Volume that contains the folder you will be copying, or the • Folder that contains the file you will be copying.
3	From the right pane, right-click on the folder or file and select Copy .
4	Select a local folder on the TPS node, right-click and select Paste .

3. 2BUsing File Transfer

3.3. 19BPerforming Actions on Files and Folders

Copying folders and files from the TPS node to the HM

Use the following procedure to copy folders and files from the TPS Node to the HM.

Step	Action
1	From Windows Explorer, right-click the folder or file and select Copy .
2	Return to the Honeywell File Transfer namespace and from the left pane, select the • Volume in which the folder will be placed, or the • Folder in which the file will be placed.
3	Right-click in the right pane and select Paste .

Deleting folders and files on the HM

Use the following procedure to remove files and folders from the HM.

1	Open Windows Explorer and navigate to the Honeywell File Transfer namespace.
2	From the left pane click on the • Volume that contains the folder you will be deleting, or the • Folder that contains the file you will be deleting.
3	From the right pane, right-click on the folder or file and select Delete or press the Delete key.

Moving folders and files on an HM

With two instances of Windows Explorer open, use the drag-and-drop function to move folders or files on the HM.

Step	Action
1	Open two instances of Windows Explorer.
2	In the first Windows Explorer, navigate to the Honeywell File Transfer namespace in the left pane and click on the • Volume that contains the folder you will be moving, or the • Folder that contains the file you will be moving.
3	In the second Windows Explorer, navigate to the Honeywell File Transfer namespace and destination volume or folder.
4	Drag the folder or file from the right pane of the first Windows Explorer to the destination volume or folder to the right pane of the second Windows Explorer.
5	From the left pane of the Honeywell File Transfer namespace, click on the original volume or folder.
6	From the right pane, right-click on the original version of the folder or file and select Delete .



ATTENTION

Before selecting **Delete**, verify that a copy of your folder or file exists in another location.

3.4 File Transfer Commands

TPS File Transfer commands

Table 3-1 lists File Transfer commands and proper syntax. This is the same information available online.

Table 3-1 File Transfer Commands

<i>Ftattr</i> – Display file attributes		
Syntax	FTATTR !\<vol>[dir][file]	
Where	vol	History module volume
	dir	Directory on the History Module
	file	Specific file on the History module
<i>Ftcopy</i> – Copy one or more files to another location.		
Syntax	FTCOPY source destination [/Q]	
Where	Source	Specifies the file or files to be copied.
	Destination	Specifies the directory or filename for new file(s).
	/Q	Overwrites existing files without being prompted.
Comments	A TPN path must start with '!'. A PC path can be a relative or an absolute path. All paths must be in quotation marks if the path contains a character. Do not include a backslash in the quotation mark.	
Example	FTCOPY "!&source*.*)" "C:\&destination"	

Ftdel – Delete one or more files		
Syntax	FTDEL !\<vol>[dir]\file	
Where	vol	History module volume
	dir	Directory on the History Module
	file	Specific file on the History module
Comments	All paths must be in quotation marks if the path contains a character. Do not include a backslash in the quotation mark.	
Example	FTDEL !test\file.xx FTDEL !\test*.xx FTDEL !\test\file.*	
Ftdir – Display a list of files or directories in a volume or directory.		
Syntax	FTDIR [!][vol][dir][file]	
Where	vol	History module volume
	dir	Directory on the History Module
	file	Specific file on the History module
Comments	If path is not specified, then all volumes listed under the root will be displayed. You may also use a wildcard “*” or “?” to filter the files to be listed.	
Ftmkdir – Create a directory		
Syntax	FTMKDIR !\<vol>\dir	
Where	vol	History module volume
	dir	Directory on the History Module

3. 2BUsing File Transfer

3.4. 20BFile Transfer Commands

<i>Ftmove</i> – Move and rename files		
Syntax	FTMOVE source destination [/Q]	
Where	Source	Specifies the file or files to be moved.
	Destination	Specifies the destination directory or filename for the file(s).
	/Q	Overwrites existing files without being prompted.
Comments	A TPN path must start with '!'. A PC path can be a relative or an absolute path. All paths must be in quotation marks if the path contains a character. Do not include a backslash in the quotation mark.	
Example	FTMOVE “!\&source*.*” “C:\&destination”	
<i>Ftren</i> – Rename a file or files		
Syntax	FTREN !\<vol>[<dir>]filename1 filename2	
Where	vol	History module volume
	dir	Directory on the History Module
	filename1	Name of file to be renamed
	filename 2	Renamed file
Comments	Do not provide a full path for filename2	
<i>Ftrmdir</i> – Remove (delete) a directory		
Syntax	FTRMDIR !\<vol>\dir	
Where	vol	History module volume
	dir	Directory on the History Module
Comments	The directory to be removed must be empty.	


<i>Ftsearch</i> – List files, directories and volumes that match the criteria in a directory<volume> and its subdirectories.		
Syntax	FTSEARCH ![<vol>][\dir]\filename	
Where	vol	History module volume
	dir	Directory on the History Module
	filename	Name of file
Example	Ftsearch !\h?n*.*	
	Ftsearch !\vol1\honeywell.x?	
<i>Ftxcopy</i> – Copy a directory including all files and subdirectories from TPN to TPN or TPN to PC or PC to TPN or PC to PC.		
Syntax	FTXCOPY source destination [/Q]	
Where	Source	Specifies the file or files to be copied.
	Destination	Specifies the directory or filename for new file(s).
	/Q	Overwrites existing files without being prompted.
Comments	The source and destination must be a directory and not a filename. A TPN path must start with '!'. A PC path can be a relative or an absolute path. All paths must be in quotation marks if the path contains a character. Do not include a backslash in the quotation mark.	
Example	FTXCOPY "C:\&source" "\&destination"	

3. 2BUsing File Transfer

3.4. 20BFile Transfer Commands

Viewing online help for File Transfer commands

Step	Action
1	Enter the following command at the MS-DOS command prompt: <i>CD C:\Program Files\Honeywell\TPS\TPSXfer</i>
2	At the command prompt, type a file transfer command followed by /? For example:

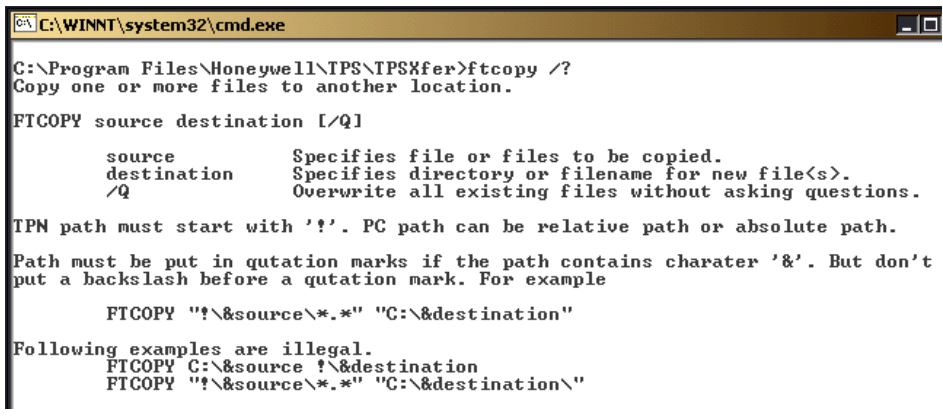

The screenshot shows a command prompt window titled "C:\WINNT\system32\cmd.exe". The command entered is "C:\Program Files\Honeywell\TPS\TPSXfer>ftcopy /?". The output displays the help text for the FTCPY command, including its syntax, options, and examples.

```
C:\Program Files\Honeywell\TPS\TPSXfer>ftcopy /?
Copy one or more files to another location.

FTCOPY source destination [/Q]

        source          Specifies file or files to be copied.
        destination      Specifies directory or filename for new file(s).
        /Q               Overwrite all existing files without asking questions.

TPN path must start with '!'. PC path can be relative path or absolute path.
Path must be put in qutation marks if the path contains charater '&'. But don't
put a backslash before a qutation mark. For example

        FTCPY "!&source\*.*" "C:\&destination"

Following examples are illegal.
        FTCPY C:\&source !&destination
        FTCPY "!&source\*.*" "C:\&destination\"
```

Using MS-DOS to search the HM for specific files

The Windows Explorer search option cannot be used to find specific HM files within the Honeywell File Transfer namespace. Use the following procedure to find specific HM files.

Step	Action
1	Select Start > Run and type cmd in the Run window.
2	Enter the following command at the MS-DOS command prompt: <i>CD C:\Program Files\Honeywell\TPS\TPSXfer</i>
3	At the command prompt, type ftsearch followed by the search criteria.

For example:

```
C:\Program Files\Honeywell\TPS\TPSXfer>ftsearch !\h?n*.*
\USR1\DI1\HPNXOUR.DO
\USR2\S145\HMNL.EF
\USR2\S145\HMNL.DY
\USR2\S145\HMNL.DB
\USR2\S145\HMNL.UL
\USR2\S145\HMNL.SL
6 files found
C:\Program Files\Honeywell\TPS\TPSXfer>
```

3.2 Using File Transfer

3.5.21 Using the AT Scheduler Command for Batch Files

3.5 Using the AT Scheduler Command for Batch Files

Purpose

Users may find the DOS AT Scheduler command useful for performing periodic File Transfer operations. For instance, the AT Scheduler is very useful for launching batch (.bat) files that copy files from the HM to a TPS Node PC at defined times. To view specific examples of batch commands, see “Example commands for batch files” in this section.

Using the AT command with File Transfer and batch files

The AT Scheduler uses the Schedule NT/2000/XP Service to execute commands (such as batch files) at specified times. For complete information on the syntax and use of the AT command, start the Microsoft MS-DOS Command Prompt and enter the following command:

```
help at
```

Updating your batch files

Because this version of TPS File Transfer uses different commands located in a different folder than the previous version, you will need to update your existing batch files with the new commands and location. Table 2-1 lists the File Transfer commands, all of which are located at

C:\Program Files\Honeywell\TPS\TPSXfer

For additional help using these commands, type the command name followed by /? at the TPSXfer folder command prompt.

Example commands for batch files

Following are three specific examples of commands that can be used within a batch file. See also Section 3.4, "File Transfer Commands."

Example 1

Purpose:	Use the ftcopy command and the command's full path enclosed in quotes to copy a specific file from an HM directory to a folder on the C drive. You must use quotes because of the space between Program and Files.
Results:	The apm05.xx file from the mcs directory will be copied to the test folder on the C drive. The HM volume name is fast , which must be specified.
<code>"C:\Program Files\Honeywell\TPS\TPSXfer\ftcopy.exe" !\fast\mcs\apm05.xx c:\test</code>	

Example 2

Purpose:	Use the ftcopy command with the path environment variable for the File Transfer batch commands to copy files in an HM directory to a folder on the C drive. The path environment variable is updated when File Transfer is installed. Wildcards are used to copy everything in the specified directory.
Results:	All files in the gene directory on the HM will be copied to the backup folder on the C drive. The HM volume name is usr2 , which must be specified.
<code>ftcopy !\usr2\gene*. * c:\test\backup</code>	

Example 3

Purpose:	Use the ftcopy command to copy a file from a folder on the C drive to a directory on the HM.
Results:	The prog.cl file in the cl folder on the C drive will be copied to the dirk directory on the HM. The HM volume name is fast , which must be specified.
<code>ftcopy c:\cl\prog.cl !\fast\dirk</code>	

3. 2BUsing File Transfer

3.5. 21BUsing the AT Scheduler Command for Batch Files

Using the AT Scheduler

Step	Action
1	Ensure that the Schedule Service status ("Task Schedule") is started: Select My Computer > Manage > Services and Applications > Services .
2	Start the MS-DOS Command Prompt.
3	At the command prompt, enter the AT command, using the syntax and options explained in the MS-DOS Help. The simplest form of the command is as follows: <i>at time "command"</i> where <i>time</i> is the time (based on a 24-hour clock) you want the command to execute, and <i>command</i> is the command you want executed, including full pathname. For example, suppose that you want the batch file <i>c:\ft\hmcoppy.bat</i> (for copying files from the HM to the TPS Node PC) to run at 3:00 p.m. today. The command, in its simplest form, would be as follows: AT 15:00 "c:\ft\hmcoppy.bat" The AT command has several options that you can include – these are discussed in Microsoft's MS-DOS Help.

3.6 Managing Files and Folders

Free/used disk space

The total space and the free space reported by the File Transfer package are the sum of the total/free space of the individual HMs that are configured in the File Transfer configuration file.

Free space is calculated on a "per volume" basis on the HM, a concept that is not visible through the File Transfer package. Thus, it is possible that the total free space would appear to be large enough to copy a file, but that the specific volume or directory would *not* contain enough space for the operation.

If an error message informs you that a file cannot be copied to a certain volume, try copying to a different volume or free up some space on the original volume.

Disk labels

The label information of the HM disk is initialized with the version number of the File Transfer package. This label information cannot be changed by the user (as is the normal procedure for network drives).

File sizes

The value for file sizes on the TPS Network is determined differently from the values for file sizes on a TPS node. For a regular FAT or an NTFS file system, the file size displayed is the actual number of bytes stored in the file. On the TPS Network, the file size indicates the allocated size for linked and contiguous files.

Consequently, whenever text files are copied from the TPS node to the TPS Network (or the other way around), it is likely the file sizes will change. For binary files, the size will not change, unless the padding switch is set to off.

Directory timestamps

On the TPS Network, volumes and directories do not have timestamps. All directories and volumes of the HMs show the same timestamp in Windows Explorer.

January 1 1980, 12:00 a.m.

3. 2BUsing File Transfer

3.6. 2BManaging Files and Folders

File timestamp

When a file is copied from the TPS Network to the TPS node, the original file's timestamp is preserved and appears as the modified date and time in the File Transfer namespace. When a file is copied from the TPS node to the TPS Network, the modified date and time that appears in the File Transfer namespace becomes the timestamp date and time.

File attributes

In the Windows environment, files and folders can be given read-only, hidden, archive, and system attributes. HM files, however, use only the read-only and hidden file attributes.

Read-Only: When a file is read-only on the TPS node, it is protected on the TPS Network. Users with access rights (see Section 2.6, "Security Configuration") can change the read-only attribute of a file on the HM.

Step	Action
1	Highlight the file.
2	From the File menu, choose Properties....
3	Select or clear Read only , then click OK .

3.7 TPS Network Considerations

Multiple HMs on the same TPS Network

As in the TPS Network Command Processor environment, the fact that multiple HMs exist on the same TPS Network is transparent to the user in the Microsoft Windows environment. All the HMs are considered as a single HM. The total size and the free size of this HM are the total of the sizes of the individual HMs.

Network Gateways

Network Gateways are not supported.

HM Init Personality support

While a History Module is loaded with its Initialization Personality, you cannot do any file operations using File Transfer.

Editing HM files

To edit HM files, transfer the files to your TPS Node PC. You may then use Microsoft Notepad or WordPad to edit HM text files.

File Transfer limitations

The following table summarizes limitations for transferring files using Honeywell File Transfer.

Item	Limitation
Number of HMs	No more than ten HMs can be configured.
File types	No more than 150 file types can be configured.

3.8 Remote File Transfer

Remote File Transfer is the Client-Only configuration made for a TPS or a non-TPS node that needs to access TPN files in History Module with the help of separate TPS Node. This configuration is essential when there is limited access to the files in the History Module.

Installation of Remote File Transfer

Refer to Section 2.2 of this document for the Client – Only installation of File Transfer.

Configuration of Remote File Transfer

After the Client – Only installation of File Transfer is completed, you must specify the name of the TPS node that provides the client machine access to the History Module. All other File Transfer configuration details do not apply to Remote File Transfer, because it is served by the configuration made at the TPS Node that has access to the History Module.

Step	Action
1	At the client machine, log on to Windows as TPS Administrator or a user with the same access level.
2	Launch the Configuration Utility through Start->All Programs>Honeywell TPS> Configuration Utility>Configure>File Transfer .
3	In the General tab, in the Server Location field, enter the Name of the TPS Node that has access to the History Module. Refer to Section 2.4 for information on the General Property Page.
4	 ATTENTION: The Server node and the Client node should be in the same domain or in trusted domains.
	Ensure that the TPS File Transfer Service (FTService.exe) has been added to the Windows Firewall Exceptions on the Client and Server machines.
	At the TPS Node that has access to the History Module, make sure its TPN (LCN) personality is loaded into its LCNP board and is ready for communication to the History Module.
5	In addition, ensure that its Native Window is loaded.

Step	Action
6	Ensure that the User account logged on to the Client machine (at the time of File Transfer usage) has access permission to the Server machine's File Transfer function: At the Server machine, in the File Transfer Security tab of its Configuration Utility, ensure that the User account is added to the Access Control List (Configure>Default Access Rights). For details, refer to section 2.6, Configuring Default Access Rights.
7	The HM is now accessible from the remote Client machine.

4. Troubleshooting

4.1 Overview

In this section

This section guides you through some basic diagnostic procedures to help you solve basic computer, network, or configuration problems.

This section includes:

- What To Do If... provides a list of common problems you might encounter and some actions you can take.
- Corrective Actions provides additional information on causes of your problem and corrective actions.
- Technical Assistance explains how to reach Honeywell for help if you cannot solve the problem yourself.

4.2 What To Do If...

File Transfer does not start successfully

When File Transfer is able to identify the error at startup, it exits and writes an error message to the FTG_SS.LOG in the Temp folder.

Error Message	Comments
Could not initialize sockets	Indicates TPS node or TPS Network problem. See Section 3.7.
Could not Allocate channel	Indicates TPS node or TPS Network problem. See Section 3.7.
Other messages.	Likely related to configuration problems See Section 4.3, "Corrective Actions."

Network-path message appears

If the message "The Network Path was Not Found" appears, you cannot connect to File Transfer. It may be due to one of the following causes:

- The TPS File Transfer service is not running. The system administrator should start it using the procedure described in Section 2.10.
- The TPS File Transfer service is running, but the Services window in the Control Panel shows the File Transfer service status as Paused. The TPS Network side of the node not running is the most likely cause. See Section 2.9, "Startup and Verification."
- Your PC network configuration has a problem. See Section 3.7.

Cannot create file message appears

If you are on a TPS Node running the amw personality, the message "Could not start TPS File Transfer service on \\nodename. Error 0183: Cannot create a file when that file already exists." may appear.

Refer to your Application Module (AM) documentation for complete information on memory availability and XOPTN (the load module). This error message appears when XOPTN is not loaded. After XOPTN is correctly loaded, restart File Transfer.

TPS Command Processor directory contents differ from Windows Explorer folder

If a user created or deleted a directory on an HM with the TPS Command Processor, the File Transfer namespace will not reflect this update until the File Transfer service is stopped and restarted. See Section 2.10.

Other errors occur

If an error occurs during a file transaction (such as copying or deleting a file), first check whether the error is normal, given the File Transfer configuration. For example, did you attempt to delete a protected file?

Remember that the TPS Network file system does not behave exactly like the TPS node PC. Review the information in Section 3.2 “HM Directory and File Considerations.”

Some errors may be due to:

- Configuration problems (for example, someone changed the configuration online and made a mistake).
- TPS Network problems (for example, an HM is down).

See Section 4.3, “Corrective Actions” for details.

You cannot copy/move certain files

You may not have the proper permissions established. See your system administrator, or see Section 2.6, “Security Configuration” for more information.

Hidden files not visible on all TPS Nodes

In Windows Explorer, hidden files are not visible by default. Use the following procedure to view hidden files in Windows Explorer.

Step	Action
1	From Windows Explorer, select Tools > Folder Options .
2	Select the View tab.
3	Select the Show hidden files and folders option.

4.3 Corrective Actions

Configuration issues

Because the configuration utility performs online checking, only a limited number of mistakes can be made at configuration time. Following are configuration problems that may occur (correct the cause of each problem).

Table 4-1 Corrective Actions for Configuration

Symptom: File Transfer behaves normally, but when you connect to the HM, "No files found" displays.

Potential cause: No HM node numbers have been entered in the File Transfer configuration.


Solution: Use the HM Nodes property page in the Configuration Utility to define the HM nodes.

Symptom: When trying to copy a file, the "Too many files open" displays.

Potential cause: File Transfer supports up to 12 open files at a given time. If a number of files are left open, due to a user abort, File Transfer may exhaust the resources to open any more files.

Solution: Stop and restart the TPS File Transfer service.

Symptom: When trying to copy a file from the HM, "Cannot create another system semaphore" displays.

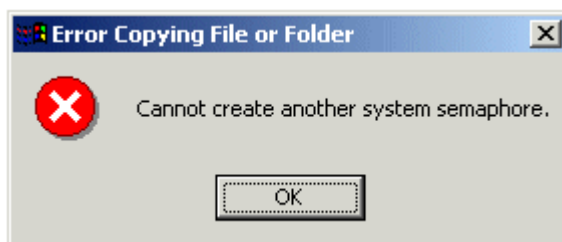

Potential cause: An attempt was made to copy a file whose extension is not defined.

Solution: Go to the FTG_SS.LOG in the Temp folder to identify the last type of file that File Transfer attempted to copy. Use the File Attributes property page in the Configuration Utility to define the file type.

File Transfer security issues

Table 4-2 Corrective Actions for Security


Symptom: When copying a file to the HM, "Access is denied" displays.



Potential causes: The file may be open by a process on the TPS Network or the file may have been left open by a previous File Transfer request that failed to complete.

Solution: Stop and restart the TPS File Transfer service.

Symptom: When attempting to edit copy/paste or drag-and-drop from the PC to the HM "Failed to transfer file . . ." displays.

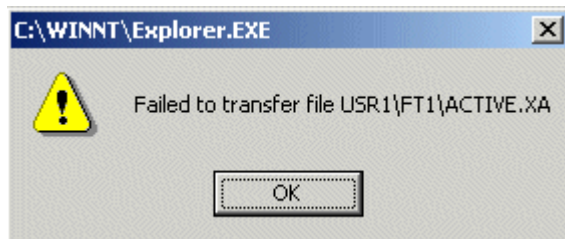

Potential cause: User id does not have sufficient access permission for the requested operation.

Solution: Set all Windows security permissions for the User to **Allow**.

Table 4-2 Corrective Actions for Security


Symptom: When attempting to drag-and-drop from the HM to the PC "Access is denied" displays.



Potential cause: User id does not have sufficient access permission for the requested operation.

Solution: Set all Windows security permissions for the User to **Allow**.

Symptom: When attempting to edit copy/paste or drag-and-drop from the HM to the PC, "Cannot create another system semaphore" displays.

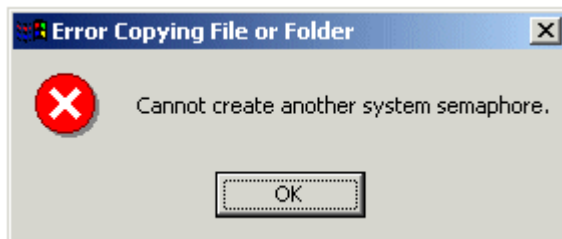

Potential cause: User id does not have sufficient access permission for the requested operation.

Solution: Set all Windows security permissions for the User to **Allow**..

Symptom: When attempting to edit copy/paste or drag-and-drop from the HM to the PC, the file cannot be copied.

Potential cause: User id does not have sufficient access permission for the requested operation.

Solution: Set all Windows security permissions for the User to **Allow**..

4. 3BTroubleshooting

4.4. 28BTechnical Assistance

TPS node problems

Refer to your TPS node documentation regarding the following problems that could affect File Transfer operation:


- The service "TDC emulator Services" is not started or is missing.
- The TPN personality is not loaded and running.

4.4 Technical Assistance

To obtain the File Transfer software version number

Obtain the File Transfer software version number from the Properties page of **Filetranui.dll** in the following location: **C:\Program Files\Honeywell\TPS\TPSXfer.**

Example:

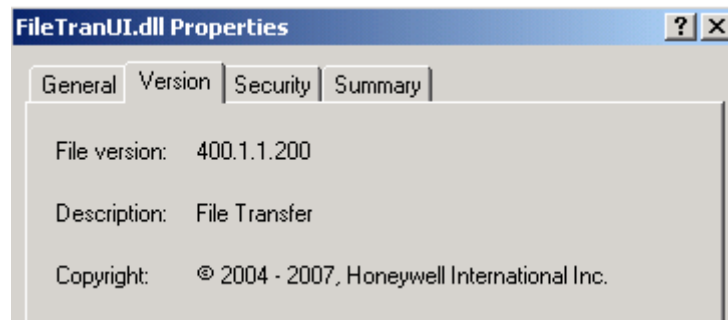

To get log file information

In some cases, the Honeywell support group may ask you to provide information from the File Transfer log file or to send the log file to them. The Honeywell support group will assist you to enable the log file registry key and evaluate the log file located in the C:\Temp folder.

Honeywell

Honeywell International
Process Solutions
2500 West Union Hills
Phoenix, AZ 85027