

**Honeywell**

---

**Experion/TPS**

**System Components  
Configuration Utility User's  
Guide**

EP-DSX275

TP20X-420

ExperionR311 and TPSR420

10/2011

## Notices and Trademarks

**Copyright 2009 by Honeywell International S rl.  
ExperionR311 and TPSR420 October 2011**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell, PlantScape, Experion PKS, and **TotalPlant** are registered trademarks of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell Process Solutions  
1860 W. Rose Garden Lane  
Phoenix, AZ 85027 USA  
**1-800 822-7673**

## About This Document

The Configuration Utility is used to configure Honeywell software packages on TPS/Experion and non- Honeywell nodes. The items that appear in the Configuration Utility's Configure menu depend upon which Honeywell software packages have been installed on the node; therefore, not all sections in this guide may apply to your site.

### Release Information

| Document Name                                           | Document ID | Release Number              | Publication Date |
|---------------------------------------------------------|-------------|-----------------------------|------------------|
| Configuration Utility User's Guide - TP20X<br>EP-DSX275 | TP20X- 420  | ExperionR311<br>and TPSR420 | 10/2011          |

| Document Category |
|-------------------|
| Configuration     |

### References

The following list identifies documents that are sources of information for certain topics in this publication.

| Document Title                                      | Doc ID     |
|-----------------------------------------------------|------------|
| System Management Configuration Guide               | EX08- 300  |
| File Transfer Installation and Use                  | FT05- 301  |
| GUS Display Builder User's Guide                    | GU23       |
| GUS Remote Displays User's Guide                    | GU2D       |
| Native Window User's Guide                          | GU20       |
| TPS System Implementation Guide for Windows 2000/XP | TP08X- 420 |

## Support and Other Contacts

### United States and Canada

Contact: Honeywell Solution Support Center  
Phone: 1-800-822-7673  
Calls are answered by dispatcher between 6:00 am and 4:00 pm Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.  
Facsimile: 1-973-455-5000  
Mail: Honeywell TAC, MS L17  
1860 W. Garden Lane  
Phoenix, AZ, 85027 USA

### Europe, Middle East, and Africa (EMEA)

Contact: Honeywell TAC-EMEA  
Phone: +32-2-728-2345  
Facsimile: +32-2-728-2696  
Mail: TAC-BE02  
Hermes Plaza  
Hermeslaan, 1H  
B-1831 Diegem, Belgium

### Pacific

Contact: Honeywell Global TAC – Pacific  
Phone: 1300-364-822 (toll free within Australia)  
+61-8-9362-9559 (outside Australia)  
Facsimile: +61-8-9362-9564  
Mail: Honeywell Limited Australia  
5 Kitchener Way  
Burswood 6100, Western Australia  
Email: GTAC@honeywell.com

### India

Contact: Honeywell Global TAC – India  
Phone: +91-20- 6603-9400  
Facsimile: +91-20- 6603-9800  
Mail: Honeywell Automation India Ltd  
56 and 57, Hadapsar Industrial Estate  
Hadapsar, Pune –411 013, India  
Email: Global-TAC-India@honeywell.com

**Korea**

Contact: Honeywell Global TAC – Korea  
Phone: +82-80-782-2255 (toll free within Korea)  
Facsimile: +82-2-792-9015  
Mail: Honeywell Co., Ltd  
4F, Sangam IT Tower, , B4-4Block  
1590, DMC Sangam-dong, Mapo-gu  
Seoul, 121-835, Korea  
Email: Global-TAC-Korea@honeywell.com

**People's Republic of China**

Contact: Honeywell Global TAC – China  
Phone: +86- 21-2219-6888  
800-820-0237  
400-820-0386  
Mail: Honeywell (China) Co., Ltd  
33/F, Tower A, City Center, 100 Zunyi Rd.  
Shanghai 200051, People's Republic of China  
Email: Global-TAC-China@honeywell.com

**Singapore**

Contact: Honeywell Global TAC – South East Asia  
Phone: +65-6580-3500  
Facsimile: +65-6580-3501  
+65-6445-3033  
Mail: Honeywell Private Limited  
Honeywell Building  
17, Changi Business Park Central 1  
Singapore 486073  
Email: GTAC-SEA@honeywell.com

**Taiwan**

Contact: Honeywell Global TAC – Taiwan  
Phone: +886-7-536-2567  
Facsimile: +886-7-536-2039  
Mail: Honeywell Taiwan Ltd.  
17F-1, No. 260, Jhongshan 2nd Road.  
Cianjhen District  
Kaohsiung, Taiwan, ROC  
Email: Global-TAC-Taiwan@honeywell.com

## **Support and Other Contacts**

---

### **Japan**

Contact: Honeywell Global TAC – Japan  
Phone: +81-3-6730-7160  
Facsimile: +81-3-6730-7228  
Mail: Honeywell Japan Inc.  
New Pier Takeshiba, South Tower Building,  
20th Floor, 1-16-1 Kaigan, Minato-ku,  
Tokyo 105-0022, Japan  
Email: Global-TAC-JapanJA25@honeywell.com

### **Elsewhere**

Call your nearest Honeywell office.

### **World Wide Web**

Honeywell Solution Support Online:

<http://www.honeywell.com/ps>

### **Training Classes**

Honeywell Automation College:

<http://www.automationcollege.com>

## Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

| Symbol                                                                            | Definition                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION:</b> Identifies information that requires special consideration.                                                                                                                  |
|  | <b>REFERENCE - EXTERNAL:</b> Identifies an additional source of information outside of the Honeywell bookset.                                                                                  |
|  | <b>REFERENCE - INTERNAL:</b> Identifies an additional source of information within the Honeywell bookset.                                                                                      |
| <b>CAUTION</b>                                                                    | <b>CAUTION:</b> Identifies a situation which, if not avoided, may result in equipment or work (data) on the system being lost, or may result in the inability to properly operate the process. |

---



# Contents

|           |                                                                               |           |
|-----------|-------------------------------------------------------------------------------|-----------|
| <b>1.</b> | <b>GETTING STARTED .....</b>                                                  | <b>15</b> |
| 1.1       | Using This Manual .....                                                       | 15        |
| 1.2       | Starting the Configuration Utility.....                                       | 16        |
|           | Prerequisites to start the Configuration Utility .....                        | 16        |
|           | Method 1 - Start the Configuration Utility .....                              | 16        |
|           | Method 2 - Start Configuration Utility from System Management Display .....   | 17        |
|           | Configuration Utility Menu Items .....                                        | 19        |
| <b>2.</b> | <b>BOARD CONFIGURATION PAGES .....</b>                                        | <b>21</b> |
| 2.1       | Overview of Board Configuration Pages .....                                   | 21        |
|           | Accessing the board configuration pages .....                                 | 21        |
|           | Defining the LCNP Board Name and Personality Using the AddBoard Utility ..... | 21        |
|           | Defining the LCNP Board Name for an ES-T/ESVT Node .....                      | 22        |
|           | Board Configuration Pages Per LCNP Personality .....                          | 23        |
| 2.2       | LCNP Page .....                                                               | 24        |
|           | Page usage .....                                                              | 24        |
|           | Page overview.....                                                            | 24        |
|           | Accessing the Page .....                                                      | 24        |
|           | LCN address .....                                                             | 25        |
|           | LCN name .....                                                                | 26        |
|           | NG Name .....                                                                 | 26        |
|           | Personality .....                                                             | 27        |
|           | LCNP Reset Controls .....                                                     | 27        |
|           | TPN Time Sync Controls.....                                                   | 28        |
|           | Demand Time Sync.....                                                         | 29        |
|           | Set TPN to TPS Time.....                                                      | 30        |
|           | TPS Time, TPN Time, and Time Synchronization Status.....                      | 31        |
|           | Last Execution Result .....                                                   | 32        |
|           | Enable LCNP Auto Restart.....                                                 | 33        |
| 2.3       | Common Page .....                                                             | 36        |
|           | Page Usage .....                                                              | 36        |
|           | Page Overview.....                                                            | 36        |
|           | Accessing the Page .....                                                      | 36        |
|           | Common Page Example 1 .....                                                   | 37        |
|           | Common Page Example 2 .....                                                   | 38        |
|           | Setting Choices .....                                                         | 39        |
|           | Common Page Setting Definitions .....                                         | 39        |

|            |                                                                      |           |
|------------|----------------------------------------------------------------------|-----------|
| <b>2.4</b> | <b>Data Access Configuration Page .....</b>                          | <b>41</b> |
|            | Page Usage .....                                                     | 41        |
|            | Page Overview.....                                                   | 41        |
|            | Accessing the Page .....                                             | 41        |
|            | The High Priority Channels Setting .....                             | 42        |
|            | The High Priority Servers Setting.....                               | 43        |
| <b>2.5</b> | <b>Emulated Disks Page .....</b>                                     | <b>43</b> |
|            | Page Usage .....                                                     | 43        |
|            | Page Overview.....                                                   | 43        |
|            | The Left Drive Field.....                                            | 46        |
|            | The Right Drive Field .....                                          | 46        |
|            | The Dismount Buttons .....                                           | 47        |
|            | The Available (Dismounted) Emulated Disks List .....                 | 47        |
|            | Lock considerations .....                                            | 47        |
|            | The Delete Button.....                                               | 49        |
|            | The Properties Button .....                                          | 49        |
|            | The Refresh Button.....                                              | 50        |
|            | The Mount Button .....                                               | 51        |
|            | CD- RW Considerations.....                                           | 52        |
|            | The Set Path Button.....                                             | 52        |
|            | The Create Button.....                                               | 54        |
|            | Making an Existing Local Emulated Disk Available for Mounting .....  | 56        |
|            | Making an Existing Remote Emulated Disk Available for Mounting ..... | 57        |
| <b>2.6</b> | <b>Keyboard Page.....</b>                                            | <b>62</b> |
|            | Page Usage .....                                                     | 62        |
|            | Page Overview.....                                                   | 62        |
|            | Key Action and Key Label Definition .....                            | 62        |
|            | Procedure to define Key Actions.....                                 | 63        |
|            | Procedure to define Key Titles.....                                  | 63        |
|            | Key Action Invocation Methods.....                                   | 65        |
|            | Example Key Definition .....                                         | 65        |
|            | Annunciator Attributes.....                                          | 66        |
| <b>2.7</b> | <b>Native Window Page .....</b>                                      | <b>68</b> |
|            | Page Usage .....                                                     | 68        |
|            | Page Overview.....                                                   | 68        |
|            | Accessing the Page .....                                             | 68        |
|            | Connection Controls .....                                            | 70        |
|            | Mouse Button Function Selection .....                                | 71        |
|            | LCNP Auto Restart .....                                              | 72        |
|            | Access Menu in the Native Window.....                                | 73        |
|            | LCNP Reset Enables .....                                             | 73        |
|            | Print Trend .....                                                    | 74        |
|            | Native Window Appearance.....                                        | 74        |
|            | IKB/OEP Annunciation selections .....                                | 76        |

|            |                                                                 |           |
|------------|-----------------------------------------------------------------|-----------|
| <b>2.8</b> | <b>Printer Page .....</b>                                       | <b>77</b> |
|            | Page Usage .....                                                | 77        |
|            | Page Overview.....                                              | 77        |
|            | Accessing the Page .....                                        | 77        |
|            | Printer Selection.....                                          | 79        |
|            | Printing a Real Time Journal (RTJ) from the Native Window ..... | 81        |
|            | Printing the RTJ to a file .....                                | 82        |
| <b>2.9</b> | <b>TPN Time Sync Page .....</b>                                 | <b>82</b> |
|            | Page Usage .....                                                | 82        |
|            | Page Overview.....                                              | 82        |
|            | Accessing the Page .....                                        | 83        |
|            | Enable Auto Adjust for Daylight Savings.....                    | 84        |
|            | Enable TPS to TPN Time Synchronization.....                     | 84        |
|            | Enable Gradual Adjustment .....                                 | 86        |
| <b>3.</b>  | <b>DEVICES/SERVICES PAGE.....</b>                               | <b>89</b> |
| <b>3.1</b> | <b>Page Overview.....</b>                                       | <b>89</b> |
| <b>3.2</b> | <b>Accessing the Page .....</b>                                 | <b>89</b> |
| <b>3.3</b> | <b>TPS Admin and Operator Signon Options .....</b>              | <b>91</b> |
| <b>3.4</b> | <b>LCNP Device Driver and Emulation Services Options.....</b>   | <b>91</b> |
| <b>3.5</b> | <b>Time Synchronization Service Options .....</b>               | <b>91</b> |
| <b>3.6</b> | <b>Additional Software Services Options .....</b>               | <b>92</b> |
| <b>3.7</b> | <b>Optional Hardware Devices Options.....</b>                   | <b>92</b> |
| <b>4.</b>  | <b>FILE TRANSFER PAGES .....</b>                                | <b>93</b> |
| <b>4.1</b> | <b>Reference to Other Documentation .....</b>                   | <b>93</b> |
| <b>5.</b>  | <b>TPN COMMUNICATION SERVICE.....</b>                           | <b>95</b> |
| <b>5.1</b> | <b>Page Overview.....</b>                                       | <b>95</b> |
| <b>5.2</b> | <b>Accessing the Page .....</b>                                 | <b>95</b> |

|            |                                                    |            |
|------------|----------------------------------------------------|------------|
| <b>6.</b>  | <b>GUS ALARM/MESSAGE/GROUP DISPLAYS PAGE .....</b> | <b>97</b>  |
| 6.1        | Page Overview .....                                | 97         |
| 6.2        | Accessing the Page.....                            | 97         |
| 6.3        | Alarm Summary .....                                | 99         |
| 6.4        | Group Display .....                                | 99         |
| 6.5        | Faceplate Keyboard Configuration.....              | 100        |
| <br>       |                                                    |            |
| <b>7.</b>  | <b>GUS DISPLAY RUNTIME SETTINGS PAGE .....</b>     | <b>101</b> |
| 7.1        | Page Overview .....                                | 101        |
| 7.2        | Configuring GUS Displays for Runtime .....         | 101        |
|            | Set Foreground Configuration.....                  | 103        |
|            | Numeric- Keypad * Handling.....                    | 103        |
|            | Display Search Path Extension.....                 | 103        |
|            | Not Validated Displays.....                        | 104        |
|            | Save- As- Bitmap Default Directory .....           | 104        |
| <br>       |                                                    |            |
| <b>8.</b>  | <b>GUS DISPLAY RUNTIME TIMERS PAGE .....</b>       | <b>105</b> |
| 8.1        | Page Overview .....                                | 105        |
| 8.2        | Configuring GUS Display Runtime Timers .....       | 105        |
|            | Shutdown Wait Limit Timeout .....                  | 107        |
| <br>       |                                                    |            |
| <b>9.</b>  | <b>GUS HCI CLIENT PAGE.....</b>                    | <b>109</b> |
| 9.1        | Configuration Instructions .....                   | 109        |
| <br>       |                                                    |            |
| <b>10.</b> | <b>GUS REMOTE DISPLAYS CLIENT PAGE.....</b>        | <b>111</b> |
| 10.1       | Reference to Other Documentation .....             | 111        |
| <br>       |                                                    |            |
| <b>11.</b> | <b>GUS REMOTE DISPLAYS SERVER PAGE.....</b>        | <b>113</b> |
| 11.1       | Reference to Other Documentation .....             | 113        |

|                                                         |            |
|---------------------------------------------------------|------------|
| <b>12. LCN I18N PAGE.....</b>                           | <b>115</b> |
| 12.1 Page Overview .....                                | 115        |
| 12.2 Accessing the Page.....                            | 115        |
| 12.3 Selecting Fonts .....                              | 116        |
| 12.4 Increasing the Font Size in the Native Window..... | 117        |
| <b>13. SHUTDOWN WAIT LIMIT PAGE .....</b>               | <b>119</b> |
| 13.1 Page Overview .....                                | 119        |
| 13.2 Accessing the Page.....                            | 119        |
| 13.3 Using the Limit to Avoid Infinite Loops .....      | 120        |
| Purpose.....                                            | 120        |
| Example Usage.....                                      | 121        |
| Guidelines .....                                        | 121        |
| <b>14. SIGNON MANAGER PAGE .....</b>                    | <b>123</b> |
| 14.1 Page Overview .....                                | 123        |
| 14.2 Accessing the Page.....                            | 123        |
| 14.3 Signon Manager Options .....                       | 125        |
| <b>15. HCI COMPONENTS PAGE.....</b>                     | <b>127</b> |
| 15.1 Reference to Other Documentation.....              | 127        |
| <b>16. HCI NAME SERVICE PAGE .....</b>                  | <b>129</b> |
| 16.1 Reference to Other Documentation.....              | 129        |

|                                                             |            |
|-------------------------------------------------------------|------------|
| <b>17. ALARM ANNUNCIATOR SOUND FILES PAGE.....</b>          | <b>131</b> |
| <b>17.1 Page Overview .....</b>                             | <b>131</b> |
| <b>17.2 Accessing the Page .....</b>                        | <b>131</b> |
| <b>17.3 Page Content .....</b>                              | <b>133</b> |
| Contact # .....                                             | 133        |
| Alarm Priority High/Low .....                               | 133        |
| Wave Files .....                                            | 133        |
| Enable checkbox.....                                        | 133        |
| <b>17.4 Configuration Example.....</b>                      | <b>134</b> |
| Example - NCF System Wide Values configuration .....        | 134        |
| Example - Alarm Annunciator Sound Files configuration ..... | 134        |
| Example - Annunciation Results .....                        | 134        |
| <b>18. VERSION MANAGEMENT TOOL - NET .....</b>              | <b>135</b> |
| <b>18.1 Overview .....</b>                                  | <b>135</b> |
| Purpose .....                                               | 135        |
| <b>18.2 VMT-Net Installation .....</b>                      | <b>135</b> |
| Install VMT-Net .....                                       | 135        |
| <b>18.3 Getting Started .....</b>                           | <b>135</b> |
| Invoke the Version Management Tool .....                    | 135        |
| Version Management Tool-Net page .....                      | 136        |
| <b>18.4 VMT-Net Operating procedures.....</b>               | <b>138</b> |
| Detect product.....                                         | 138        |
| Scan product.....                                           | 140        |
| Advanced option .....                                       | 142        |
| View System information .....                               | 144        |
| Access Privileges.....                                      | 146        |
| <b>18.5 Reports.....</b>                                    | <b>147</b> |
| Generate Report .....                                       | 147        |
| <b>18.6 Error indications .....</b>                         | <b>149</b> |
| Error Icons .....                                           | 149        |

# 1. Getting Started

## 1.1 Using This Manual

The Configuration Utility is used to configure Honeywell software packages on TPS/Experion PKS and non- Honeywell nodes.

The items that appear in the Configuration Utility's Configure menu depend upon which Honeywell software packages have been installed on the node; therefore, not all sections in this guide may apply to your site.

To use this guide, go to the section describing the Configure menu item of interest.



### REFERENCE - INTERNAL

Reference the following Honeywell documents for additional information on items in the Configuration Utility:

*System Management Configuration Guide* EX08

*File Transfer Installation and Use* FT05

*GUS Display Builder User's Guide* GU23

*GUS Remote Displays User's Guide* GU2D

*Native Window User's Guide* GU20

*TPS System Implementation Guide* TP08X

---

## 1 Getting Started

### 1.2 Starting the Configuration Utility

---

## 1.2 Starting the Configuration Utility

### Prerequisites to start the Configuration Utility

---



#### ATTENTION

One of the following software components must be installed on a node that is used to start the Configuration Utility:

- TPS Base Components (TPS System Software DVD) \*
- System Management Runtime or System Management Display (TPS System Software DVD or Experion Application DVD)
- Experion Station - TPS
- Experion Server - TPS
- Experion ACE - TPS

\*TPS Base Components software is included with certain licensed TPS software packages. These packages are identified in the section "TPS System Software Package Usage by Node Type" in the *TPS System Implementation Guide*.

---



#### ATTENTION

Running multiple instances of the Configuration Utility can present inconsistent views of the information and may cause problems. Similarly, the Configuration Utility should not be open while the "Add/Remove Board" utility is being run.

---

### Method 1 - Start the Configuration Utility

| Step                                                                                | Action                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | Log on to the node as the <b>local Administrator</b> or another user account that is a member of the local <b>Administrators</b> group. |
|  | <b>TIP</b><br>Use the <i>Computer Management</i> tool on the node to view the installed users and groups.                               |

| Step | Action                                                                                                                                                                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2    | For GUS and APP nodes select:<br><br><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b><br><br>For LCN- connected Experion nodes select:<br><br><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b> |
| 3    | Select <b>Configure</b> .<br><br>RESULT: The Configure menu appears containing the "pages" of the Configuration Utility available for the local node.                                                                                                                                    |

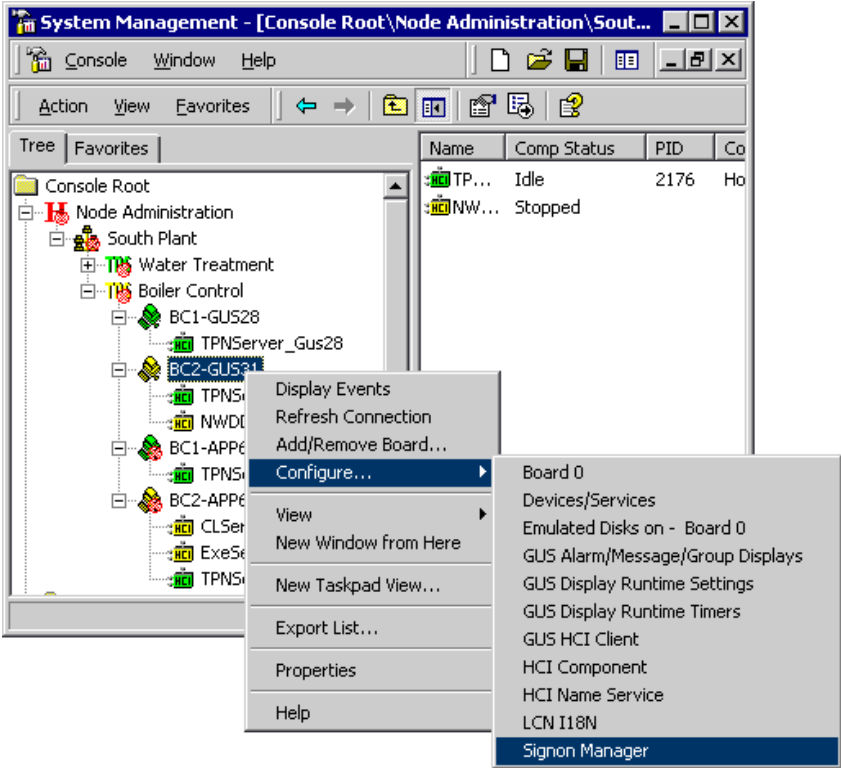
#### Method 2 - Start Configuration Utility from System Management Display

If a Honeywell System Management Display has been created (using the Honeywell Node Administration MMC snap-in), then you can use the following procedure to access a node's Configuration Utility through the Honeywell System Management Display.

| Step | Action                                                                                                                                                                                                                                                                                                                   |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Select <b>Start&gt; All Programs &gt; Honeywell Experion PKS&gt; System Management &gt; System Management Display</b> .                                                                                                                                                                                                  |
| 2    | Select the previously configured console of interest: <b>[console name].msc</b> and respond to any request for User Id and passwords.                                                                                                                                                                                    |
| 3    | Expand the hierarchy until you see the computer item of interest. Right-click the computer, and then select <b>Configure</b> .<br><br>RESULT: The Configure menu appears containing the "pages" of the Configuration Utility available for the selected node. The following Configure menu is an example for a GUS node. |

## 1 Getting Started

### 1.2 Starting the Configuration Utility

| Step | Action                                                                              |
|------|-------------------------------------------------------------------------------------|
|      |  |



#### REFERENCE - INTERNAL

For detailed instructions on creating a Honeywell System Management Display, refer to the *System Management Configuration Guide*.

### ***Remote configuration through System Management Display***

The System Management Display supports remote (non- local) node configuration of the following items in the Configuration Utility:

- Devices/Services
- SignOn Manager
- HCI Component
- HCI Name Service

### **Configuration Utility Menu Items**

The items available in the Configuration Utility depend upon the software installed on the target node. The remaining sections of this guide describe the selectable items in the Configure menu or refer to other documentation.

## **1 Getting Started**

### **1.2 Starting the Configuration Utility**

---

## 2. Board Configuration Pages

### 2.1 Overview of Board Configuration Pages

#### Accessing the board configuration pages

The name of the node's local LCNP board appears as a menu item in the node's Configuration Utility as "Board0" (the default name) or as a customized name (for example, GUS01). Selecting the menu item invokes the "Board Configuration Pages."

#### Defining the LCNP Board Name and Personality Using the AddBoard Utility



#### ATTENTION

The AddBoard Utility is used only with GUS and APP nodes.

---

When a node is implemented, the LCNP board name is specified through the "Add Board" utility. The AddBoard utility can be invoked using either of the following methods:

**Start > All Programs > Honeywell TPS > AddBoard.**

Or

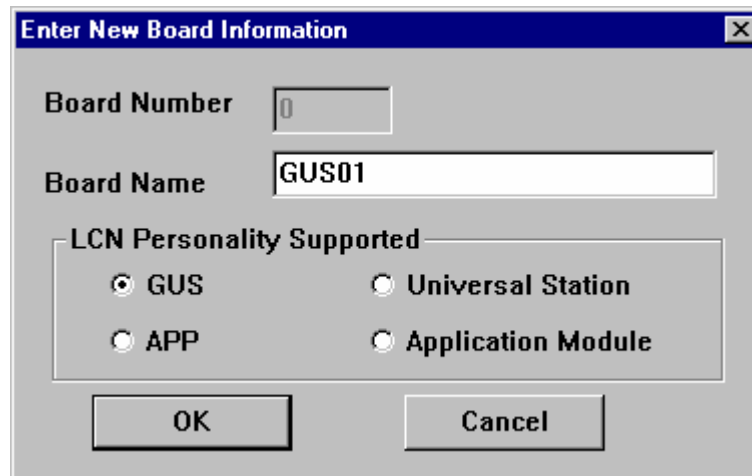
From a Honeywell System Management display, right - click the node of interest, and then select **the Add/Remove Board.**

The following example shows the dialog box used to enter the LCNP Board Name when used on a GUS/APP node:

## 2 Board Configuration Pages

### 2.1 Overview of Board Configuration Pages

---



#### ATTENTION

- If you change the Board Name or Personality selection using the AddBoard utility, you must cycle power on the node.
  - The "personality" field on the LCNP page displays the current personality for the board and reflects the board (LCNP) name configured through the AddBoard dialog box.
- 

#### Defining the LCNP Board Name for an ES-T/ESVT Node

LCN- connected Experion nodes have preconfigured personalities. The AddBoard Utility is not used with LCN-connected Experion nodes. The board name defaults to "Board0" and under normal conditions need not be changed.

### Board Configuration Pages Per LCNP Personality

There are specific board configuration pages for each of the seven available LCNP board personalities as shown in the following table.

A LCN - connected ACE uses the APP personality.

An Experion Station - TPS uses the GUS personality.

| Board Configuration Pages    | LCNP Personality |    |     |    |
|------------------------------|------------------|----|-----|----|
|                              | GUS              | US | APP | AM |
| 1. LCNP                      | X                | X  | X   | X  |
| 2. Common                    | X                | X  | X   | X  |
| 3. Emulated Disks            | X                | X  |     |    |
| 4. Keyboard                  | X                | X  |     |    |
| 5. Native Window             | X                | X  |     |    |
| 6. Printer                   | X                | X  |     |    |
| 7. Data Access Configuration | X                |    | X   |    |
| 8. TPN Time Sync             | X                |    | X   |    |

## 2.2 LCNP Page

### Page usage

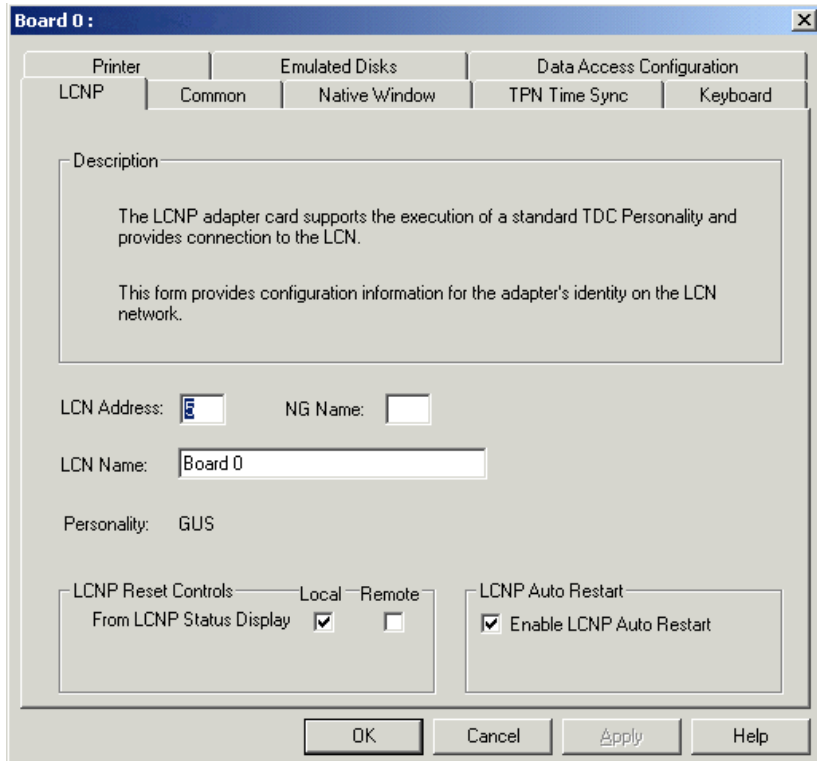
The LCNP Page is used to configure an LCNP board that is running on a GUS, APP, US, AM, or LCN- connected Experion node.

### Page overview

The LCNP Page controls settings to configure LCN addressing, personality, and user access.

### Accessing the Page

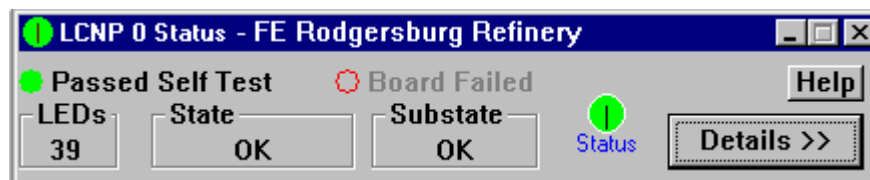
| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or</p> <p>From the System Management Display, right - click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <a href="#">Starting the Configuration Utility</a>.</p>                                                                                                                                                                                                         |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt;[LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0"(the default name) or a customized name.</p>                                                                                                                                                                                                                           |
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <a href="#">Overview of Board Configuration Pages</a>.</p>                                                                                                                                                                                                            |

| Step | Action                                                                                                                                                              |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | <p>Select the <b>LCNP</b> tab to display the following (GUS example shown):</p>  |

### LCN address

The **LCN Address** field specifies the LCN address of the node.

The **LCN Address** appears in the **LEDs** field of the LCNP Status display. For the following example, "39" was entered as the LCN Address:



## 2 Board Configuration Pages

### 2.2 LCNP Page

---

The **LCN Address** also appears in the **LEDs** field of the LCN Native Window Status Bar. For the following example, "2" was entered as the LCN Address:

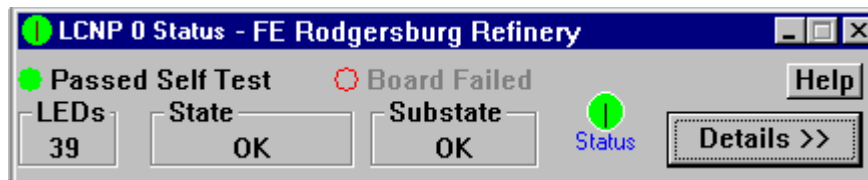


#### LCN name

LCNP Status and Native Window can be connected to the local LCNP board or to a PIN- connected LCNP board mounted in a GUS on another LCN. The LCN Name field helps the user identify which LCN the LCNP Status and/or Native Window is connected to.

The LCN name is specified in the **LCN Name** field.

The **LCN Name** appears in the title bar of the LCNP Status display. For the following example, "Rodgersburg Refinery" was entered as the LCN Name:



The **LCN Name** also appears in the title bar of the LCN Native Window. For the following example, "Rodgersburg Refinery" was entered as the LCN Name:



#### NG Name

Data access is established through the Network Gateway's (NG) communication link to other LCNs.

The **NG Name** field specifies the two- letter name of the LCN's Network Gateway, if one exists.

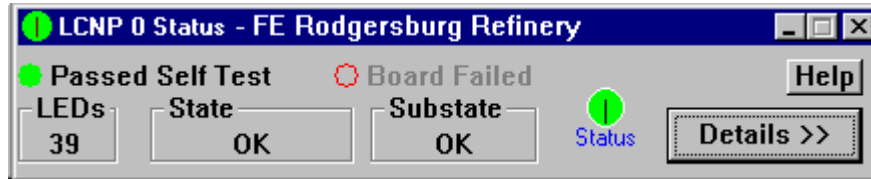


#### ATTENTION

The field should not be left blank. A space should be entered if the system does not have a Network Gateway.

---

The **NG Name** appears in the title bar of the LCNP Status display. For the following example, "FE" was entered as the NG Name:



The **NG Name** also appears in the title bar of the LCN Native Window. For the following example, "FE" was entered as the NG Name:



## Personality

This is the personality loaded through the **Autoload Net** command. If it is the wrong personality, then use the "Add Board" utility to remove the board, add the correct personality, and then cycle power on the node.



### REFERENCE - INTERNAL

For detailed instructions to use the Add Board utility, refer to section 2.1 *Defining the LCNP Board Name and Personality Using the Add Board Utility*.

---

## LCNP Reset Controls

Select the **Local** box to allow the LCNP to be reset from the local status display.  
Select the **Remote** box to allow the LCNP to be reset from the LCNP status display of a remote node.

On the LCNP Status display, the **Reset LCNP** button will be enabled as shown below.



### ATTENTION

In the following LCNP Status display, the CNI slot cannot be seen because the TPS- SIM has not been installed.

---

The screenshot shows a window titled "LCNP 0 Status - <no NG name> Board 0". It contains several sections: a status bar with "Passed Self Test" (green) and "Board Failed" (red); a table with "LEDs", "State", and "Substate" (all showing "OK"); a "LED Description" section with "Node Address" and a table of slot data (Slot 2: WSI2, Slot 3: SCSI, Slot 4: EPDG); a "Bar LED Status" section with various status indicators (ST, BE, ND, DCE, DAT, SBE, DPE, GT, MBE); a "Refresh" section with a "Refresh Now" button and a "Reset LCNP" button; a "Time Sync" section with "TPS Time: 11:02:59", "TPN Time: 11:03:11", and a "Set TPN to TPS time" button; a "Last Execution Result" section with text about the time sync process; and a "Revisions" section with board-specific information.

| LEDs | State | Substate |
|------|-------|----------|
| 5    | OK    | OK       |

| Slot         | Node Address | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000  |
|--------------|--------------|------|------|------|------|------|------|------|-------|
| Slot 2: WSI2 | 4039 001c    | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0085 | Green |
| Slot 3: SCSI | 47ca 0702    | 0000 | 0099 | 0280 | 8c00 | 3f3f | 0101 |      | Green |
| Slot 4: EPDG | 4742 1002    | 68f8 | 30a1 | 0280 | 8420 | 0000 | 0000 |      | Green |

Bar LED Status: ☐ ST ☐ BE ☐ ND ☐ DCE ☐ DAT ☐ SBE ☐ DPE ☐ GT ☐ MBE

Refresh:   ☒ Seconds ☐ 1/10 Second

Time Sync:  TPS Time: 11:02:59 TPN Time: 11:03:11

Last Execution Result: at 10:26:10 (TPS time)  
Gradual Adjustment In Effect, TPN time was 10:26:22

Revisions: LCNP4-GPS: 5L/0L LCN\_CHIPS: 3K/0C Serial: 2 Driver: 3



#### REFERENCE - INTERNAL

Refer to the *Reset LCNP Board* section in the *Native Window User's Guide* for additional information.

### TPN Time Sync Controls

LCNP4- GPS boards support a TPN time synchronization option that allows you to synchronize TPN time to TPS time. An LCNP4-GPS board displays buttons in the details mode to adjust the time synchronization. A node can leverage this Time sync capability only when configured as a Clock Source in the NCF; other GPS enabled nodes become listener nodes. Once configured as a Clock Source, enable and configure time sync on the clock source node.

Since GUS R330 and APP R211, the TPN Time Sync function provides the ability to synchronize TPN time to TPS node time.

The TPN Time Sync controls on the LCNP Status Display are the **Demand Time Sync** button and the **Set TPN to TPS time** button. The buttons are enabled only on the node that is designated as the Master clock source.

The LCNP Status display also shows the current TPS and TPN times, and the time and result of the last time- synchronization execution.



#### ATTENTION

The Master and Slave clock source nodes must have the LCNP4- GPS (or later) board installed. During configuration of the System Wide Values in the Network Configuration File (NCF.CF), assign CLOCK NODE 1 and CLOCK NODE 2 to the GUS and/or APP node numbers that have the LCNP4- GPS board installed. The clock source node that has its personality loaded first becomes the Master clock source node.

The TPN Time Sync function is not available for Universal GUS (UGUS) nodes.

---



#### ATTENTION

Due to specific Microsoft time conversion routines used for daylight savings, TPN time may be incorrect under the following conditions:

1. The Time Sync Auto Adjust for DST is not enabled.
  2. Windows DST is enabled.
  3. The TPN DST offset has not already been negated by a TPN Time change or Set TPN To TPS Time request.
  4. The Time Sync algorithm actually executes an immediate time change between 2:00:00- 2:59:59AM (TPN Time) on the first Sunday in April.
- 

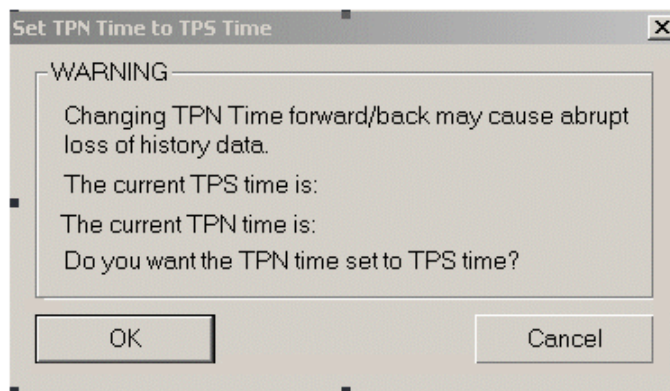
### Demand Time Sync

Clicking on this button initiates a time sync analysis without waiting for the next time sync interval to occur. It has the same effect as a configuration change in that whenever the configuration of the TPN Time Sync function changes, TPN time synchronization is initiated. This button is functional when the **Enable TPS to TPN Time Synchronization** function is selected on the Configure Board 0-TPN Time Sync Page.

### Set TPN to TPS Time

This button allows the user to synchronize TPN time to TPS time. The button is functional when the **Time Sync** checkbox is selected on the Configure Board 0-Common Page, and it is independent of the **Enable TPS to TPN Time Synchronization** selection on the Configure Board 0-TPN Time Sync page. In addition, the button is operational only when a user has signed onto the node using the Engineer privilege.

When you click on the **Set TPN to TPS time** button, the following dialog box appears:



The warning message indicates that TPN time will be changed to TPS time immediately. Click **OK** to accept the change or click **Cancel** to leave TPN time unchanged. When you click **OK**, TPN time is immediately changed to TPS time. A Warning- Level event is logged on the System Event Log. This option has the same effect as changing the TPN time manually.

---

#### CAUTION

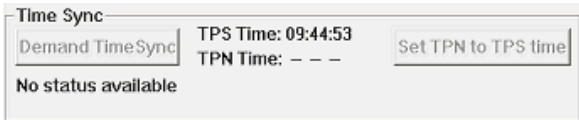
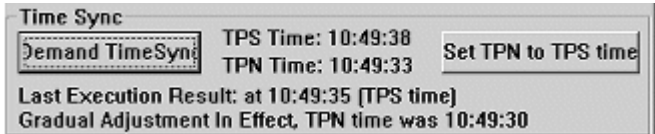


When the user clicks OK, TPN time is set to the current TPS time.

The current TPS time may be slightly different that the time specified in the dialog pop-up depending on when the last time update occurred.

---


### TPS Time, TPN Time, and Time Synchronization Status

TPS time, TPN time, and Time Synchronization status are shown on the LCNP Status display as described in the following listing:

| If clock node type is...                                                                 | Then...                                                                                                                                                         |
|------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| not an APP, GUS, or LCN-connected Experion node with an LCNP4- GPS (or later) installed. | Current TPS time and 'No Status Available' are displayed.<br>                 |
| a master clock source and the Time Sync is Not Enabled.                                  | Current TPS time and 'Time Sync Not Operational' are displayed.                                                                                                 |
| a master clock source and the Time Sync are Enabled.                                     | Current TPS time and TPN time are shown with the last execution status.<br> |
| a slave clock source                                                                     | Current TPS time, TPN time, and clock node type are displayed.<br>          |
| a listener (not a master or a slave clock source)                                        | Current TPS time, TPN time, and clock node type are displayed.<br>          |

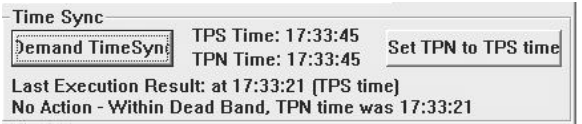
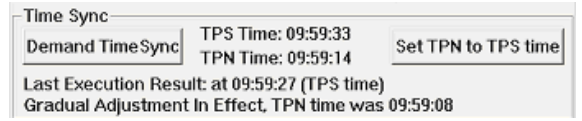
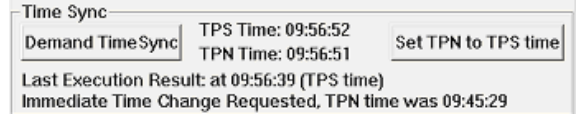
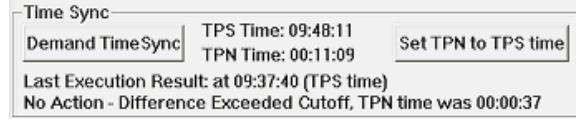
## 2 Board Configuration Pages

### 2.2 LCNP Page

| If clock node type is... | Then...                                                                                                                                                  |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| local node               | <p>Current TPS time, TPN time, and clock node type are displayed.</p>  |

### Last Execution Result

When the node is the Master clock node, the "Last Execution Result" displays the results of the prior TPN time sync operation as described in the following listing:

| Results on the Master Clock Source node                       | Diagram                                                                              |
|---------------------------------------------------------------|--------------------------------------------------------------------------------------|
| No Action - Within Dead Band, TPN time was 17:33:21           |   |
| Gradual Adjustment in Effect, TPN time was 09:59:08           |  |
| Immediate Time Change Requested, TPN time was 09:45:29        |  |
| No Action - Difference Exceeded Cutoff, TPN time was 00:00:37 |  |

### Enable LCNP Auto Restart

The **Enable LCNP Auto Restart** box is unchecked by default. If the box is checked, then whenever the LCNP goes into PWR\_ON state, the LCNP is automatically loaded with the LCN Node personality using the local personality image files from the local hard disk. After the personality image files are loaded, the LCN files such as the NCF, area database, and backplane modules are loaded from the NET (History Modules).

The LCNP Auto Restart feature is not applicable to Application Module Replacement and Universal Station Replacement nodes.

The Enable LCNP Auto Restart check box can be made available as a menu item in the Native Window Access Menu. Refer to section 2.7, *Native Window Page*.

---

#### CAUTION

When LCNP Auto Restart is enabled, any time the LCNP goes into PWR\_ON state, the LCNP will be automatically loaded. You will not be able to do a Local/Target load. You have to disable the LCNP Auto Restart feature before you can load the node manually.

---



#### ATTENTION

If nodes are to be restarted by the Automatic TPN System Restart function, then the LCNP Auto Restart option for each node must be disabled in the respective Configuration Utility.

If GUS nodes are to be restarted using the LCNP Auto Restart function and you are implementing the Automatic TPN System Restart function, then the nodes should be designated as being "excluded" in the RESTART.LD file used by the Automatic TPN System Restart function. Refer to sections 14 and 17 of the *Process Operations* document.

Automatic TPN System Restart does not support the LCN-connected Experion nodes.

---

### Related Scenarios

A list of six different scenarios related to the **LCNP Auto Restart** option follow.

**Note:** All scenarios, except the ones with Native Windows, also apply to LCN-connected Servers and APP nodes; and the option will be loaded with APP Node personality.

#### Prerequisite:

History modules containing files including the NCF, Area database, and backplane option files are required.

**Scenario 1. A GUS or Experion Station - TPS is powered on/rebooted and required History Module(s) are running**

When a GUS or Experion Station - TPS is powered on or rebooted, the Windows operating system loads and the LCNP goes into the PWR\_ON state. If the **LCNP Auto Restart** option is enabled, a GUS or Experion Station - TPS automatically loads the LCNP with the personality using files from the GUS or Experion Station - TPS local hard disk, and then loads LCN files (including the NCF, area database files, and backplane module files) from the History Module(s).

**Scenario 2. A GUS or Experion Station - TPS is powered on/rebooted and required History Module(s) are not running**

When a GUS or Experion Station - TPS is powered on or rebooted, the Windows operating system loads and the LCNP goes into the PWR\_ON State. If the **LCNP Auto Restart** option is enabled, the GUS or Experion Station - TPS starts loading the files from the GUS or Experion Station - TPS local hard disk. If the system History Module is not running, GUS or Experion Station - TPS fails after trying to open the NCF file for approximately 10 minutes. If the Backplane modules and the Area database files are not available during startup, the GUS or Experion Station - TPS node displays a prompt (&CUS N, 1,2,3,4,X ? or AR0X N, 1,2,3,4,X ? respectively) on its Native Window , if the Native Window is already running. If Native Window is invoked AFTER the prompt is generated, the prompt will NOT show up in the Native Window, but the personality will still be waiting for an input from the user. The node will be stalled in the READY state until the user takes an action.

For an APP or Experion Server - TPS node, the LCNP stalls in the READY state until corrective action is taken and the LCNP is reset.

When the required History Module starts running and the LCNP is reset to the PWR\_ON state, the LCNP is automatically loaded with the personality.

**Scenario 3. A GUS or Experion Station - TPS is shutdown and the required History Module(s) are running**

When a GUS or Experion Station - TPS is shutdown, the LCNP goes into the QUALIF state and **LCNP Auto Restart** is not initiated. At this point, you must either load the personality manually or reset the LCNP to the PWR\_ON state so that the LCNP is automatically loaded with the personality.

**Scenario 4. A failed GUS or Experion Station - TPS is being dumped**

When a GUS or Experion Station - TPS is in the FAIL state and its memory is being dumped, the LCNP state changes from the FAIL state to the PWR\_ON state and the dump process starts. When the dump is finished, if the **LCNP Auto Restart** option is enabled, the LCNP auto restart is initiated and the GUS or Experion Station - TPS is automatically loaded with the personality.

**Scenario 5. A failed GUS or Experion Station - TPS is being loaded**

When a failed GUS or Experion Station - TPS node is being loaded from System Status Display of another station, the LCNP state will transition from FAIL to PWR\_ON state. If the LCNP auto restart is enabled, LCNP auto restart is initiated and the LCNP will be automatically loaded with the personality. The target load from the System Status Display will fail, because LCNP auto restart has taken over. If the LCNP auto restart is enabled, you can reset the LCNP to the PWR\_ON state and the LCNP will be automatically loaded with the personality.

**Scenario 6. GUS or Experion Station - TPS and History Module nodes are powered on simultaneously**

When the GUS or Experion Station - TPS and History Module nodes are powered on simultaneously, the History Module is booted automatically and the LCNP goes into the PWR\_ON state. At this point, if the LCNP Auto Restart option is enabled, the LCNP starts loading the local QLTs and PI files and then tries to open the NCF every 10 seconds for approximately 10 minutes (that is, 60 times in 10 minutes). If the History Module is available and running in the span of 10 minutes, the LCNP will be loaded and put into running state.

## 2.3 Common Page

### Page Usage

The Common Page is used to configure an LCNP board running an APP, GUS, AM, US, or LCN- connected Experion node personality.

### Page Overview

The **Common** page is used to enable emulation service functions and to determine each function's event log actions.



#### ATTENTION

The default settings are correct for most sites. Do not change any setting without advice from Honeywell personnel. Not all combinations of Common page settings result in usable systems, but Honeywell special case recommendations will always result in viable combinations.

---

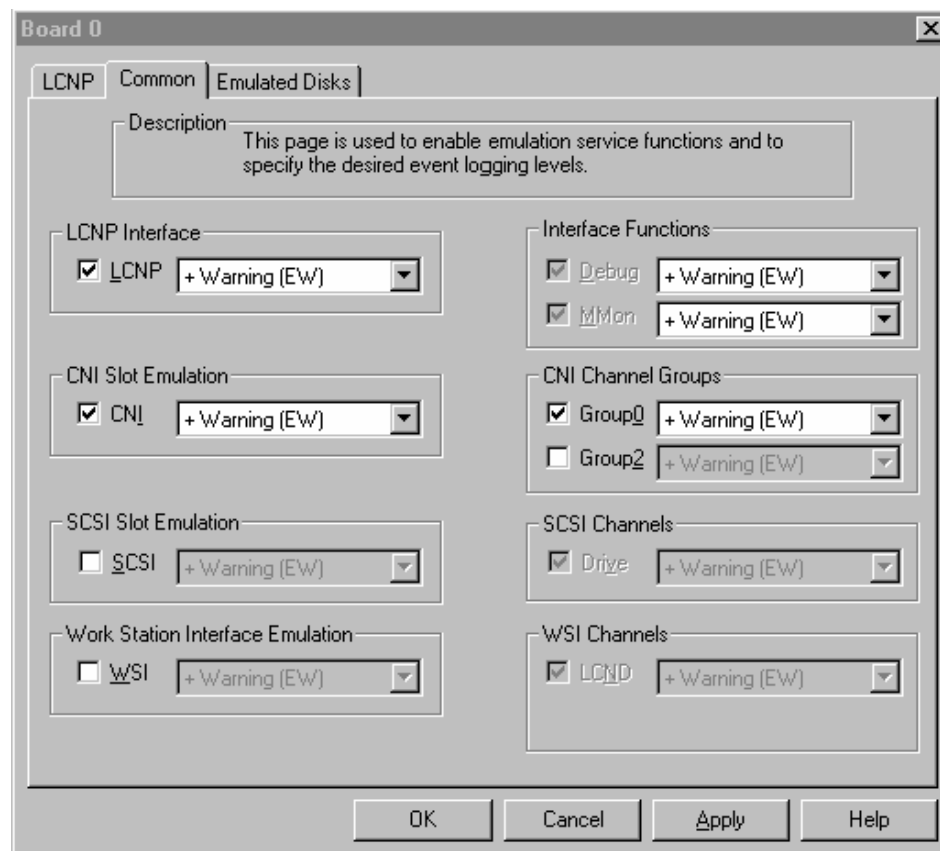
### Accessing the Page

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes, select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or</p> <p>From the System Management Display, right-click the node of interest.</p> |
|      | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |
| 2    | <p>Select <b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                                              |

| Step                                                                              | Action                                                                                                                                                     |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>TIP</b><br>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <i>Overview of Board Configuration Pages</i> . |
| 3                                                                                 | Select the <b>Common</b> tab to display information, similar to the following examples.                                                                    |

### Common Page Example 1

The following Common Page example indicates that Honeywell Hi- Spec Solution's TPS- SIM software is installed, due to the inclusion of the CNI slot and the exclusion of a PDG slot.



**Board 0**

LCNP Common Emulated Disks

Description: This page is used to enable emulation service functions and to specify the desired event logging levels.

LCNP Interface: ☒ LCNP + Warning (EW)

Interface Functions: ☒ Debug + Warning (EW); ☒ MMon + Warning (EW)

CNI Slot Emulation: ☒ CNI + Warning (EW)

CNI Channel Groups: ☒ Group0 + Warning (EW); ☐ Group2 + Warning (EW)

SCSI Slot Emulation: ☐ SCSI + Warning (EW)

SCSI Channels: ☒ Drive + Warning (EW)

Work Station Interface Emulation: ☐ WSI + Warning (EW)

WSI Channels: ☒ LCND + Warning (EW)

OK Cancel Apply Help

## 2 Board Configuration Pages

### 2.3 Common Page

---

#### Common Page Example 2

The following Common Page is a GUS example.

The example indicates that Honeywell Hi- Spec Solution's TPS- SIM software is not installed, due to the inclusion of the PDG slot and the exclusion of a CNI slot.

**Board 0 :**

Printer | Emulated Disks | Data Access Configuration

LCNP | **Common** | Native Window | TPN Time Sync | Keyboard

**Description**  
This page is used to enable emulation service functions and to specify the desired event logging levels.

**LCNP Interface**  
☒ **LCNP** + Warning (EW)

**PDG Slot Emulation**  
☒ **PDG** + Warning (EW)

**SCSI Slot Emulation**  
☒ **SCSI** + Warning (EW)

**Work Station Interface Emulation**  
☒ **WSI** + Warning (EW)

**Interface Functions**  
☒ **Debug** + Warning (EW)  
☒ **MMon** + Warning (EW)  
☒ **Time Sync** + Information (EWI)

**PDG Channels**  
☒ **KVP** + Warning (EW)  
☒ **Printer** + Warning (EW)

**SCSI Channels**  
☒ **Drive** + Warning (EW)

**WSI Channels**  
☒ **LCND** + Warning (EW)

OK Cancel Apply Help

## Setting Choices

Each one of the following settings determine one function event log action:

| Setting             | Result                                                                                                                                                                                                |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Error Only (E)      | Only function error messages will be written to the event log.                                                                                                                                        |
| + Warning (EW)      | Function error and warning messages will be written to the event log. This default setting should be used for most installations. Do not change this setting without advice from Honeywell personnel. |
| + Information (EWI) | Function error, warning, and information messages will be written to the event log.                                                                                                                   |
| + Debug (EWID)      | Function error, warning, information, and debug messages will be written to the event log.                                                                                                            |

## Common Page Setting Definitions

| Setting                                 | Definition                                                                                                                                                                               |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>LCNP Interface</b>                   | Connects an ES- T, ESVT, APP, IN or GUS with the TPN.                                                                                                                                    |
| <b>PDG Slot Emulation</b>               | Controls video, the keyboard, and the printer. It is required for US- type personalities.<br><b>ATTENTION:</b> Only available if Honeywell Hi- Spec Solutions TPS- SIM is not installed. |
| <b>CNI Slot Emulation</b>               | Contact Honeywell Hi- Spec Solutions for detailed information.<br><b>ATTENTION:</b> Only available if Honeywell Hi- Spec Solutions TPS- SIM is installed.                                |
| <b>SCSI Slot Emulation</b>              | Enables cartridge drive emulation. It is required for US- type personalities.                                                                                                            |
| <b>Work Station Interface Emulation</b> | Enables work station loads and TPN data access. It is required for GUS, APP, ES-T and ESVT nodes.                                                                                        |

## 2 Board Configuration Pages

### 2.3 Common Page

---

| Setting             | Definition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface Functions | <p><b>Debug</b> - Enables the low level TPS debugger.</p> <p><b>MMon</b> - Supports proper synchronization between the various TPS indicators (such as keyswitch) and the same indicators on the Global User Station.</p> <p><b>CAUTION:</b> Debug and MMon should be enabled unless specifically advised otherwise by Honeywell personnel.</p> <p><b>Time Sync</b> - Time Sync option is selected by default indicating that Time Sync function emulators are running. When the Time Sync is running it adds the TPN Time Sync tab to the Configure- Board 0 pages.</p> |
| PDG Channels        | <p><b>KVP</b> - Supports the keyboard, video, and pointer (mouse, trackball, or touch screen) functions needed by US personalities.</p> <p><b>Printer</b> - Enables printing. It is enabled by default in order to support printing on a local or network printer.</p> <p><b>ATTENTION:</b> Only available if Honeywell Hi- Spec Solutions TPS- SIM is NOT installed.</p>                                                                                                                                                                                                |
| CNI Channel Groups  | <p>Contact Honeywell Hi- Spec Solutions for detailed information.</p> <p><b>ATTENTION:</b> Only available if Honeywell Hi- Spec Solutions TPS- SIM is installed.</p>                                                                                                                                                                                                                                                                                                                                                                                                     |
| SCSI Channels       | <p>Allows a US, GUS, or ES- T to support emulated disk operation.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| WSI Channels        | <p>Contains the LCNP emulator</p> <p><b>CAUTION:</b> This function should be enabled on all GUS and ES- T nodes unless specifically advised otherwise by Honeywell personnel.</p>                                                                                                                                                                                                                                                                                                                                                                                        |

## 2.4 Data Access Configuration Page

### Page Usage

The Data Access Configuration Page is used to configure an LCNP board that is running on an, APP, GUS, or LCN- connected Experion node.

### Page Overview

The settings on the Data Access Page determine the number of channels and servers that are reserved for High Priority Requests during node initialization.

### Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <a href="#">Starting the Configuration Utility</a>.</p>                                                                                                                                                                                                        |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                        |
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <a href="#">Overview of Board Configuration Pages</a>.</p>                                                                                                                                                                                                           |
| 3                                                                                   | <p>Select the <b>Data Access Configuration</b> tab to display the following (GUS example shown):</p>                                                                                                                                                                                                                                                                                    |

## 2 Board Configuration Pages

### 2.4 Data Access Configuration Page

---

| Step                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Action |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| <div><div>Board 0</div><div><div>LCNP</div><div>Common</div><div>Native Window</div><div>TPN Time Sync</div><div>Keyboard</div></div><div><div>Printer</div><div>Emulated Disks</div><div>Data Access Configuration</div></div><div><div>Description</div><div>Configuration of the DA High Priority Channels and Servers allows the user to decide upon the number of Channels and Servers that DA will reserve for High Priority Requests during initialization.<br/><br/>NOTE: changes only take effect after reloading personality.<br/><br/>This form provides configuration information for the modification of the number of DA High Priority Channels and Servers.</div></div><div><div>High Priority Channels</div><div>Enter a number between zero (0) and twenty (20). Channels: <input type="text" value="0"/></div></div><div><div>High Priority Servers</div><div>Enter a number between zero (0) and six (6). Servers: <input type="text" value="0"/><br/><br/>Warning: Setting High Priority Servers to the maximum value (6) will not allow services requiring low priority channels to run.</div></div><div><div>OK</div><div>Cancel</div><div>Apply</div><div>Help</div></div></div> |        |

#### The High Priority Channels Setting

This configuration parameter allows you to configure the personality to set aside a defined number of the data access channels for high priority actions only.

The only contention for these channels will be between high priority data access applications.

Low priority data access applications will have to share the remaining channels with other low priority data access applications and non- data access applications such as file transfer and journal access.

The following formula is used:

Number of Low Priority Channels = 20 - (Number of High Priority Channels)

After you have set the number of High Priority Channels, you can set the number of High Priority Servers as shown below.

### The High Priority Servers Setting

This configuration parameter allows you to configure the personality to set aside a defined number of data access servers to service high priority requests only.

The following formula is used:

Number of Low Priority Servers = 6 - (Number of High Priority Servers)



#### ATTENTION

Honeywell recommends that you do not set the number of high priority servers to 6.

---

## 2.5 Emulated Disks Page

### Page Usage

The Emulated Disks Page is used to configure an LCNP board that is running on either a GUS or Experion Station - TPS node.

### Page Overview

Emulated Disks provide cartridge drive functionality for Native Window by allocating Windows file space for LCN file storage. Windows Emulated Disk files contain LCN directory structures and file information stored in LCN file format.

Emulated disk files can be located:

- on a local or remote hard disk.
- on a local or remote CD- ROM.

Note that emulated disk files stored on tape must be copied to a hard disk or a CD-ROM to be usable.



#### **ATTENTION**

- As of GUS 330, floppy disks should not be used as an emulated disk. The policy files restrict the use of floppies as a protective measure against the introduction of virus infected files.
- Ensure that the GUS base software is installed prior to GUS personality installation.

---

Emulated disks are referenced by \$Fnn drive numbers, where nn is one of the station's assigned cartridge drive numbers as configured in the NCF for the station's LCN address.

With TPN R670, emulated disks can also be operated from the GUS/US using the TPN Command Processor and EC files. For TPN R671 and greater, the emulated disks can also be operated from the Experion Station- TPS.



#### **REFERENCE - INTERNAL**

Refer to *Command Processor Operations*, SW11 for more information about operating emulated disks using the TPN/LCN Command Processor and EC files.

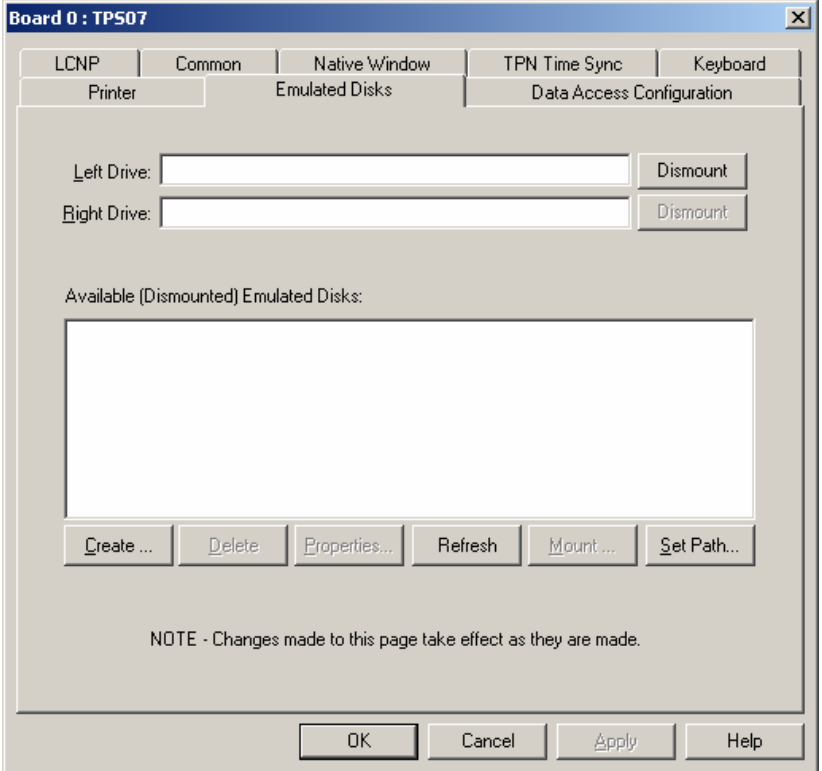
Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|    | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                        |
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <i>Overview of Board Configuration Pages</i>.</p>                                                                                                                                                                                                                    |

## 2 Board Configuration Pages

### 2.5 Emulated Disks Page

---

| Step | Action                                                                                                                                                                        |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | <p>Select the <b>Emulated Disks</b> tab to display the following (GUS example shown):</p>  |

#### The Left Drive Field

The **Left Drive** emulator corresponds to the lower- numbered drive (as indicated for the node on the Native Window Console Status display).

#### The Right Drive Field

The **Right Drive** emulator corresponds to the higher- numbered drive (as indicated for the node on the Native Window Console Status display).

### The Dismount Buttons

Use the dismount buttons as follows to dismount an emulated disk:

---

**CAUTION**

It is imperative that emulated disks be dismounted after their use. Otherwise, a user in a following session will not be able to mount the emulated disk, because the disk will still be flagged as being in use by the prior user and therefore unavailable.

---

| Step                                                                              | Action                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                 | Click the <b>Left Drive Dismount</b> button if you wish to dismount the left emulated disk, or the <b>Right Drive Dismount</b> button if you wish to dismount the right emulated disk. |
|  | <b>Attention</b><br>You can also drag the disk to the Available (Dismounted) Emulated Disks list.                                                                                      |
|                                                                                   | RESULT: The emulated disk is dismounted and it then appears in the <b>Available (Dismounted) Emulated Disks</b> list.                                                                  |

### The Available (Dismounted) Emulated Disks List

This field contains a listing of available local and remote emulated disk files that are located:

- on a local or remote hard disk.
- on a local or remote CD- ROM.

Note that files must be copied from a tape to a hard disk to be usable.

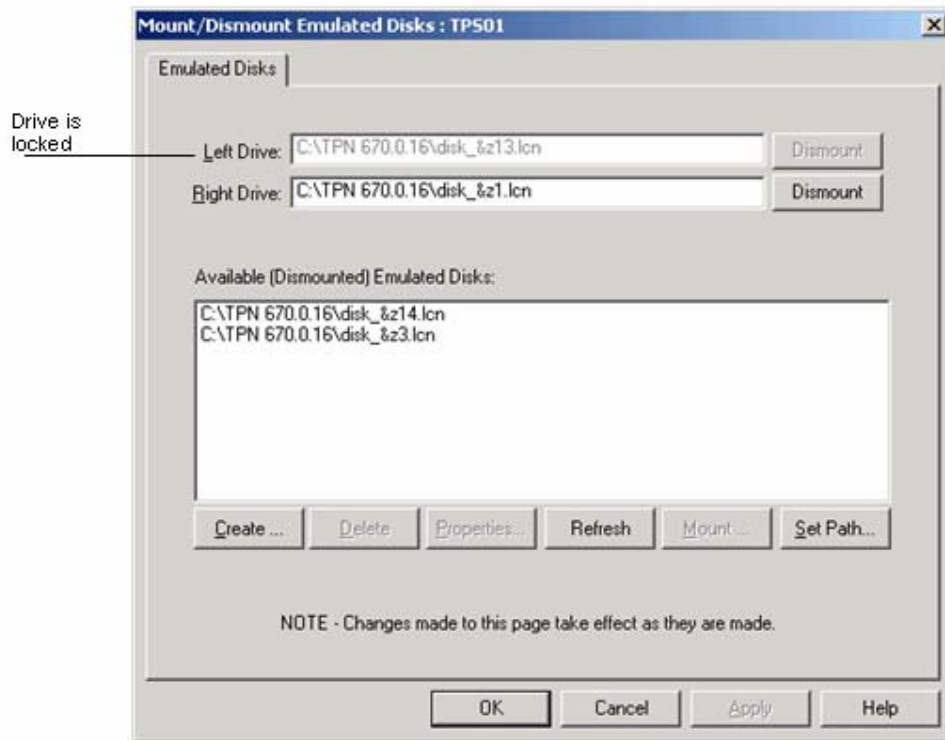
### Lock considerations

With GUS R360, an emulated drive can be locked using the TPN Command Processor and EC files. After an emulated disk is mounted, the emulated drive can be locked using the EDLOCK command. Locking prevents dismounting of the emulated disk file. On the Emulated Disks page, a locked drive is disabled for dismounting.

## 2 Board Configuration Pages

### 2.5 Emulated Disks Page

---



You cannot dismount the emulated disk until you unlock the drive. You can unlock the drive using the EDUNLOCK command.



#### REFERENCE - INTERNAL

Refer to *Command Processor Operations, SW11* for more information about emulated disk commands.



#### ATTENTION

Locked drives cannot be unlocked from the Emulated Disks page.

### The Delete Button

If you want to delete a mounted disk, then follow the directions in the "*The Dismount Buttons*" section before proceeding.

| Step | Action                                                                                                                                                                                                                                                                                                                                                                      |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Select a dismounted emulated disk from the Available (Dismounted) Emulated Disks list.                                                                                                                                                                                                                                                                                      |
| 2    | Click <b>Delete</b> .<br><br>RESULT: The dialog " <b>Do you want to free the disk space?</b> " appears.                                                                                                                                                                                                                                                                     |
| 3    | Click <b>Yes</b> or <b>No</b> : <ul style="list-style-type: none"><li>Click <b>yes</b> to remove the emulated disk from the list and physically delete the file from its storage location.</li><li>Click <b>No</b> to remove the emulated disk from the Available (Dismounted) Emulated Disks list, but not physically delete the file from its storage location.</li></ul> |

### The Properties Button

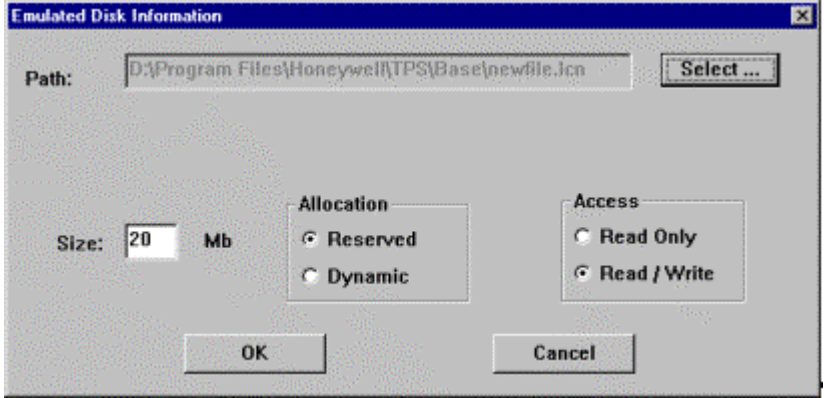
If you want to delete a mounted disk, then follow the directions in the "*The Dismount Buttons*" section before proceeding.

| Step | Action                                                                                        |
|------|-----------------------------------------------------------------------------------------------|
| 1    | Select a dismounted emulated disk from the <b>Available (Dismounted) Emulated Disks</b> list. |
| 2    | Click <b>Properties</b> .                                                                     |

## 2 Board Configuration Pages

### 2.5 Emulated Disks Page

---

| Step                                                                                | Action                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                     | <p>RESULT: The <b>Emulated Disk Information</b> dialog appears with the selected emulated disk file in the <b>Path</b> field.</p>        |
|   | <p><b>ATTENTION</b></p> <p>Size and Allocation are grayed out indicating that they cannot be changed.</p>                                                                                                                  |
|  | <p><b>TIP</b></p> <p>Additional properties on emulated disks, such as date stamp and file permissions, can be viewed by browsing to the file in Windows Explorer, right clicking the file, and selecting "Properties".</p> |

#### The Refresh Button

The refresh button is used for refreshing the Available (Dismounted) Emulated Disks list.

### The Mount Button

The emulated disk to be mounted must be included in the **Available (Dismounted) Emulated Disks** list.

If you wish to mount a disk in a drive that already has an emulated disk mounted, then follow the instructions in "*The Dismount Buttons*" section before proceeding.

| Step                                                                              | Action                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                 | Select the available emulated disk to be mounted from the <b>Available (Dismounted) Emulated Disks</b> list.                                                                                                         |
| 2                                                                                 | Click <b>Mount</b> and then select the drive that you wish to mount.                                                                                                                                                 |
|  | <b>ATTENTION</b><br>You can also drag an emulated disk from the available list to an open Left Drive or Right Drive field.<br><br>RESULT: The selected emulated disk will now appear as mounted on the chosen drive. |

## CD- RW Considerations

---



### ATTENTION

#### Special Considerations when using a CD- RW (re- writable CD) with emulated disk files:

- Dismount the emulated disk files before removing the CD- RW from the CD Drive. If you do not, an error message appears stating that the CD is still in use by the Direct CD application.

To remove the error, dismount the emulated disk file using the mount/dismount emulated disks display of the Configuration Utility.

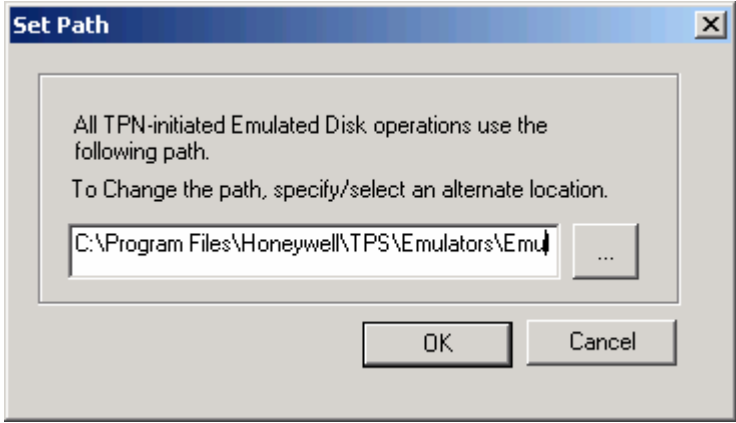
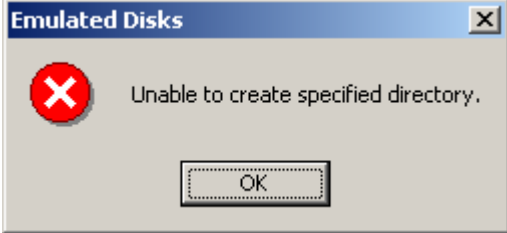
- You can create emulated disk files on CD- Rs, but it is recommended that you use this sequence of steps:
    - a) First, create the file on your local hard drive.
    - b) Dismount the file from the machine.
    - c) Copy the file to your CD- R.
  - In some instances the name of the machine will be permanently placed in the emulated disk file, because of the write once nature of CD- Rs; consequently, you will not be able to remount the file on any other machine, including the original machine.
- 

## The Set Path Button

With GUS R360, the TPN Command Processor and EC files use an emulated disk path to create, mount, and delete emulated disks. This path can be configured using the Set Path button on the Emulated Disks page. The default emulated disk path is \Program files\Honeywell\TPS\Emulators\EmulatedDisks.

Use the Set Path button as follows to configure the emulated disk path:

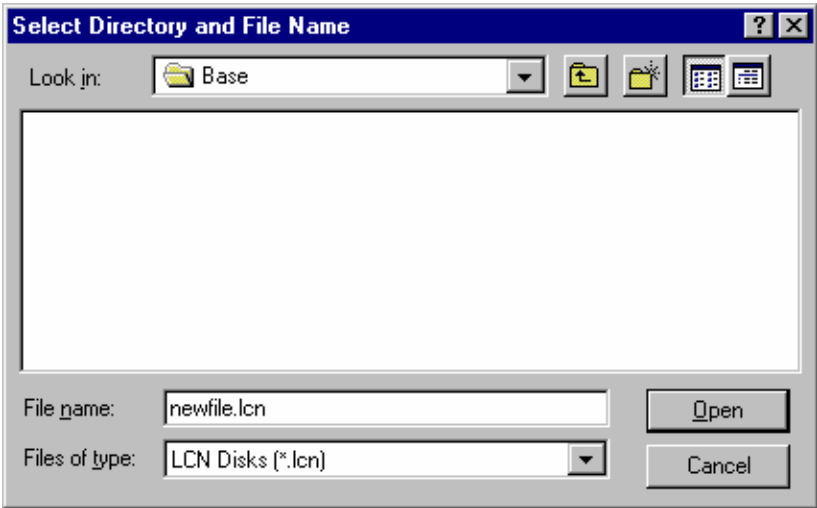
| Step | Action                                                                         |
|------|--------------------------------------------------------------------------------|
| 1    | Click <b>Set Path</b> .<br><br>RESULT: The <b>Set Path</b> dialog box appears. |

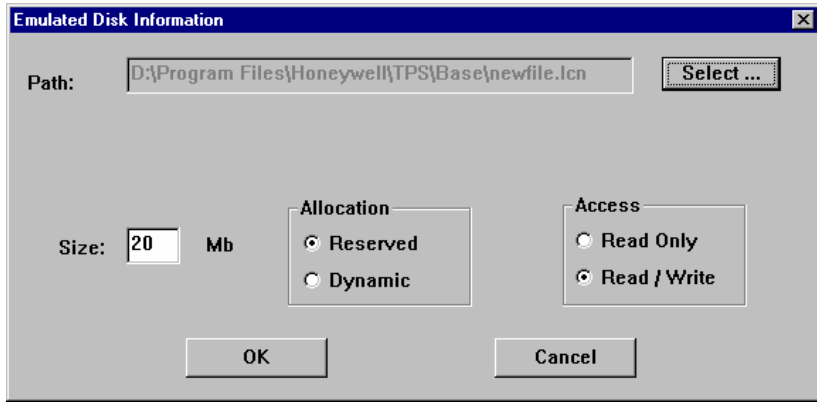
| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2                                                                                   | <p>Click <b>Browse</b>  and then select a path for emulated disks.</p> <p>OR</p> <p>Enter the path. The default emulated disk path is \Program Files\Honeywell\TPS\Emulators\EmulatedDisks.</p>  <p>The 'Set Path' dialog box contains the following text: 'All TPN-initiated Emulated Disk operations use the following path. To Change the path, specify/select an alternate location.' Below the text is a text field containing 'C:\Program Files\Honeywell\TPS\Emulators\Emu' and a 'Browse' button icon. At the bottom are 'OK' and 'Cancel' buttons.</p> |
|  | <p><b>ATTENTION</b></p> <p>If you enter an invalid path, the following error message appears:</p>  <p>The 'Emulated Disks' error dialog box contains a red 'X' icon and the text: 'Unable to create specified directory.' Below the text is an 'OK' button.</p> <p>Click <b>OK</b> and enter the correct path.</p>                                                                                                                                                                                                                                                                                                                              |
| 3                                                                                   | Click <b>OK</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### The Create Button

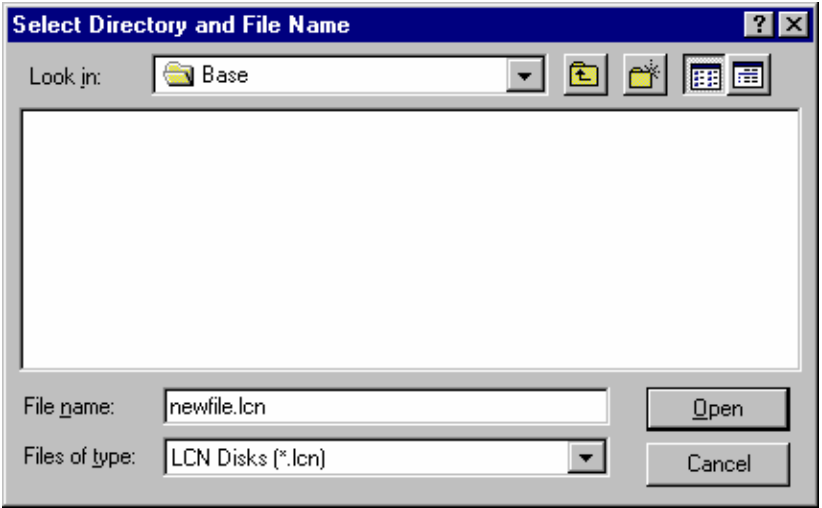
The Create button is used for creating emulated disks on a local or remote GUS node.

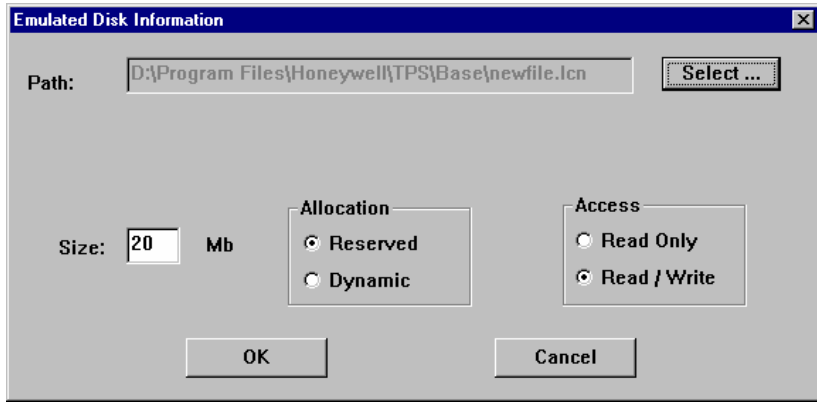
Use the Create button as follows to create an emulated disk:

| Step | Action                                                                                                                                                                                                                                |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Click <b>Create</b> on the <b>Emulated Disks</b> dialog page.</p> <p>RESULT: The <b>Select Directory and File Name</b> dialog box appears.</p>  |
| 2    | Select a drive and directory.                                                                                                                                                                                                         |
| 3    | Enter a new filename.                                                                                                                                                                                                                 |
| 4    | Click <b>OK</b> .                                                                                                                                                                                                                     |

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>RESULT: The <b>Emulated Disk Information</b> dialog appears.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 5    | Type in the maximum file size (in megabytes, not to exceed 500 Mb) in the <b>Size</b> field.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 6    | <p>Select one of the <b>Allocation</b> radio buttons:</p> <ul style="list-style-type: none"> <li>• Select <b>Reserved</b> to allocate the entire amount of file storage space. This space is reserved for the file even if its size is less than the maximum file size. The amount of disk storage used does not increase with the amount of data stored on the emulated disk.</li> <li>• Select <b>Dynamic</b> to allocate a file storage space maximum. This allows the file to grow dynamically. If the original file size is less than the allocated maximum file size, it uses only the storage capacity required by the file. As the file size increases, so does the storage used until the allocated maximum is reached.</li> </ul> |
| 7    | <p>Select one of the <b>Access</b> radio buttons:</p> <ul style="list-style-type: none"> <li>• The <b>Read Only</b> button provides TPS access to your emulated disk and disallows user changes.</li> </ul> <p><b>ATTENTION:</b> The Read Only choice would not make sense, since there is nothing written into the new file yet, and it cannot be initialized or written to by the TPN if it has read- only access.</p> <ul style="list-style-type: none"> <li>• Select <b>Read/Write</b> to provide TPN access to your emulated disk and allow user changes.</li> </ul>                                                                                                                                                                   |

### Making an Existing Local Emulated Disk Available for Mounting

| Step | Action                                                                                                                                                                                                                                |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Click <b>Create</b> on the <b>Emulated Disks</b> dialog page.</p> <p>RESULT: The <b>Select Directory and File Name</b> dialog box appears.</p>  |
| 2    | Navigate to the folder that contains the existing local emulated disk file.                                                                                                                                                           |
| 3    | Select the existing local emulated disk file.                                                                                                                                                                                         |
| 4    | Click <b>Open</b> .                                                                                                                                                                                                                   |

| Step                                                                               | Action                                                                                                                                                 |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                    | <p>RESULT: The <b>Emulated Disk Information</b> dialog appears.</p>  |
|  | <p><b>ATTENTION</b></p> <p>The settings shown are the disk files current settings.</p>                                                                 |
| 5                                                                                  | <p>Click <b>OK</b>.</p> <p>RESULT: The local emulated disk file will now appear in the Available (Dismounted) Emulated Disks list.</p>                 |

## Making an Existing Remote Emulated Disk Available for Mounting

### Create the Share on the Remote Node

| Step | Action                                                                                                                                |
|------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Log on to the remote node that hosts the emulated disk file as the local Administrator or a member of the local Administrators group. |
| 2    | Create a directory that will only be used for remote emulated disk files.                                                             |
| 3    | Right-click the directory.                                                                                                            |
| 4    | Select <b>Properties</b> .                                                                                                            |
| 5    | Click the <b>Sharing</b> tab and select the <b>Share this folder</b> option.                                                          |
| 6    | Enter a <b>Share Name</b> .                                                                                                           |

| Step | Action                                                                                                                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7    | Record the <b>Share Name</b> as you will use it later when you edit the registry on the remote node.                                                                                                                                     |
| 8    | Enter the following <b>Comment</b> :<br><br><b>This folder should not contain any files except emulated disk files.</b>                                                                                                                  |
| 9    | Click the <b>Maximum Allowed</b> radio button.                                                                                                                                                                                           |
| 10   | Click the <b>Permissions</b> button to display the Share Permissions.                                                                                                                                                                    |
| 11   | Set the permissions as follows:<br><br>If the remote emulated disk file has read/write enabled, then grant <b>Everyone</b> the <b>Full Control</b> permissions.<br><br>Otherwise, grant <b>Everyone</b> at least <b>Read</b> permission. |
| 12   | Click <b>OK</b> to close the <b>Permissions</b> dialog.                                                                                                                                                                                  |
| 13   | Copy the emulated disk file to the share that you just created.                                                                                                                                                                          |
| 14   | Continue on to the section "Set the Emulated Disk File Permissions on the Remote Node".                                                                                                                                                  |

***Set the Emulated Disk File Permissions on the Remote Node***

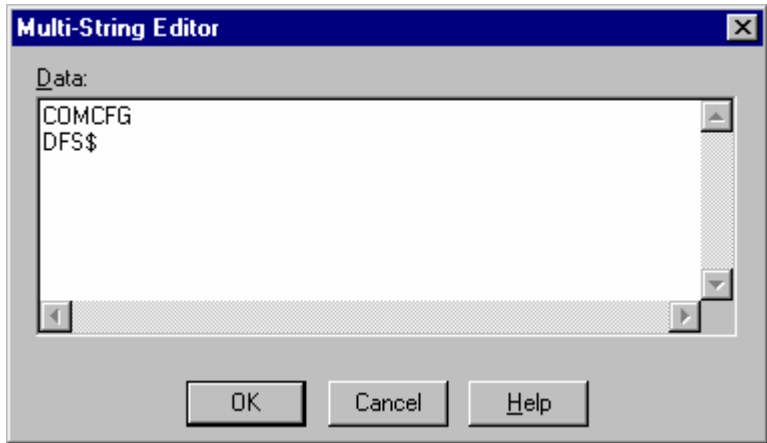
| Step | Action                                                                                                                                                                                                                                  |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Right-click the emulated disk file located in the share.                                                                                                                                                                                |
| 2    | Select <b>Properties</b> .                                                                                                                                                                                                              |
| 3    | Click the <b>Security</b> tab.<br><br>RESULT: The share properties dialog box appears.                                                                                                                                                  |
| 4    | Set the permissions as follows:<br><br>If the remote emulated disk file has read/write enabled, then grant <b>Everyone</b> the <b>Full Control</b> permission.<br><br>Otherwise, grant <b>Everyone</b> at least <b>Read</b> permission. |
| 5    | Click <b>OK</b> to close the <b>File Permissions</b> window.                                                                                                                                                                            |
| 6    | Continue on to the section "Edit the Registry on the Remote Node".                                                                                                                                                                      |

### Edit the Registry on the Remote Node



#### ATTENTION

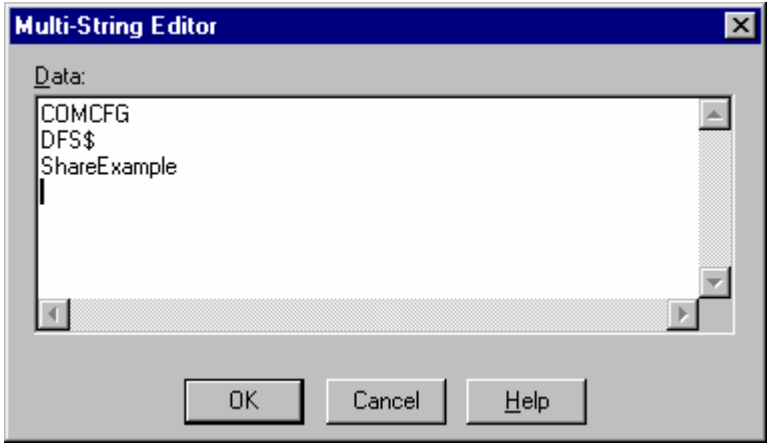
Incorrect registry edits **WILL** result in a non-operational node. Use extreme caution when editing the registry on any node for any reason.

| Step | Action                                                                                                                                                                                      |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Start REGEDT32 on the remote node.                                                                                                                                                          |
| 2    | Locate the following registry key on the remote system:<br><b>\HKEY_LOCAL_MACHINE\SYSTEM</b><br><b>\CurrentControlSet\Services\LanmanServer\Parameters.</b>                                 |
| 3    | Double- click the <b>NullSessionShares</b> entry to display an editing box similar to the following:<br> |

## 2 Board Configuration Pages

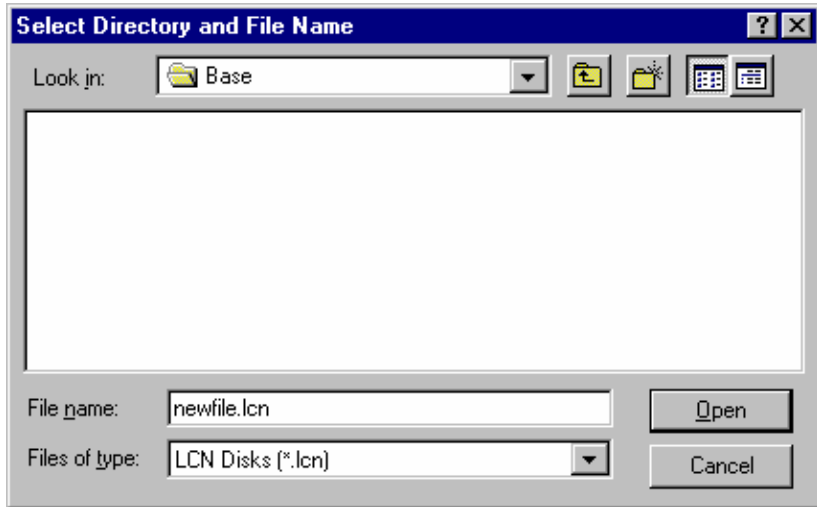
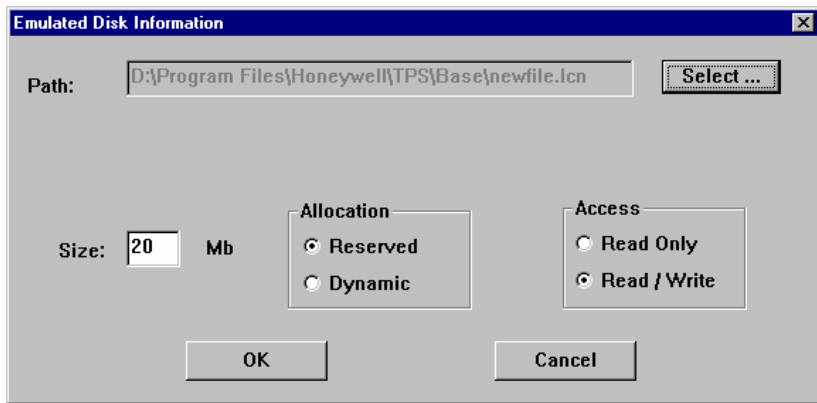
### 2.5 Emulated Disks Page

---

| Step                                                                                | Action                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4                                                                                   | <p>Add an entry after the last entry that is identical to the name of the share that you created in the above section. The following figure uses the "ShareExample" example:</p>  |
|  | <p><b>ATTENTION</b></p> <p>Be very careful not to delete any of the existing names. Also, be sure to press the Enter key after you type in the share name so the cursor blinks below the new share name line. This is shown in the above screen capture.</p>         |
| 5                                                                                   | Click <b>OK</b> .                                                                                                                                                                                                                                                    |
| 6                                                                                   | Exit REGEDT32.                                                                                                                                                                                                                                                       |
| 7                                                                                   | Continue on to the section "Connect the Local Node to the Remote Emulated Disk".                                                                                                                                                                                     |

#### ***Connect the Local Node to the Remote Emulated Disk***

| Step | Action                                                                               |
|------|--------------------------------------------------------------------------------------|
| 1    | Access the <b>Emulated Disks</b> page as described at the beginning of this section. |
| 2    | Click <b>Create</b> on the <b>Emulated Disks</b> dialog page.                        |

| Step | Action                                                                                                                                                           |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>RESULT: The <b>Select Directory and File Name</b> dialog box appears.</p>  |
| 3    | Navigate to the emulated disk file located in the remote share.                                                                                                  |
| 4    | Click <b>Open</b> .                                                                                                                                              |
|      | <p>RESULT: The <b>Emulated Disk Information</b> dialog appears.</p>          |

## 2 Board Configuration Pages

### 2.6 Keyboard Page

---

| Step | Action                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | Click <b>OK</b> .<br><br>RESULT: The remote emulated disk file will now appear in the <b>Available (Dismounted) Emulated Disks</b> list. |

## 2.6 Keyboard Page

### Page Usage

The Keyboard Page is used to configure an LCNP board that is running on a GUS, US, or Experion Station - TPS node.

### Page Overview

The Keyboard Page enables a user to configure user- defined display keys and customize alarm annunciation.

### Key Action and Key Label Definition

There are six User Defined keys on the Operator keyboard. Because labels are area dependent, it is recommended that you configure the six keys to have the same operation under all of the areas.

Programming the six User Defined keys entails two steps:

- First you define the Key Actions in Native Window (see the Procedure to define Key Action section).
- Then you define the Key Titles using the Configuration Utility (see the Procedure to define Key Titles section).



#### **TIP**

On an Experion Station - TPS node, the key definition may be overridden by the Experion Station. See the toolbars and buttons definition in *Setting up Station in the Server and Client Configuration Guide*.

---

### Procedure to define Key Actions

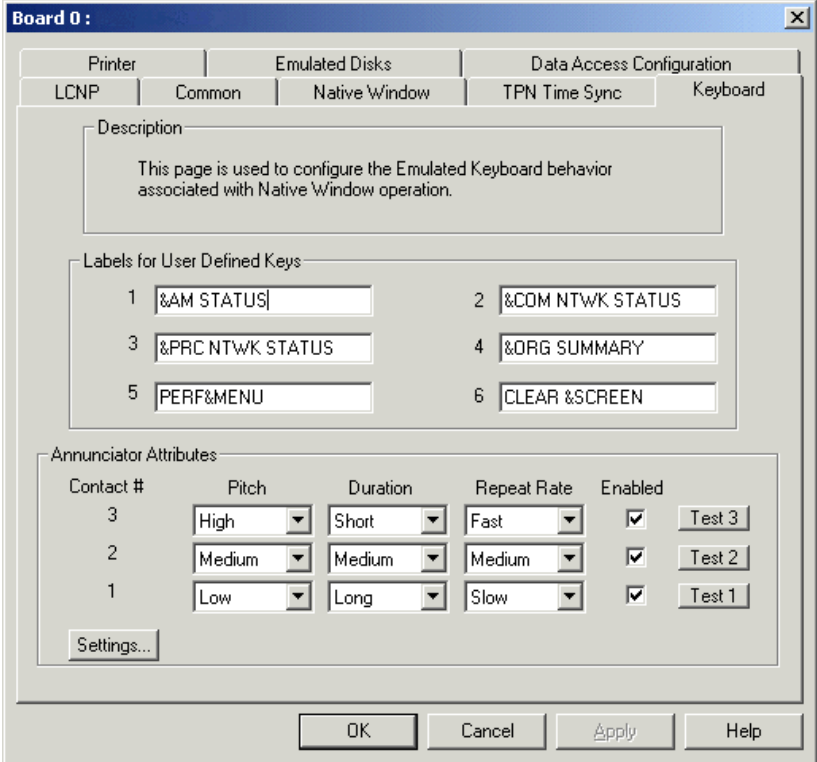
| Step                                                                              | Action                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                 | Select the following:<br><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Native Window.</b><br><br>( <b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; TPS Applications &gt; Native Window</b> for an Experion Station - TPS node). |
| 2                                                                                 | Select the following:<br><b>Displays &gt; Engineering &gt; Menu.</b>                                                                                                                                                                             |
| 3                                                                                 | Click <b>Button Configuration.</b>                                                                                                                                                                                                               |
| 4                                                                                 | Enter the required key action.                                                                                                                                                                                                                   |
|  | <b>ATTENTION</b><br><br>For detailed key action information, refer to the TPN manual <i>Implementation/Engineering Operations- 1, Button Configuration Data Entry</i> (PDF format).                                                              |
| 5                                                                                 | Continue on to the Procedure to define Key Titles.                                                                                                                                                                                               |

### Procedure to define Key Titles

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | For GUS and APP nodes select:<br><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b><br><br>For LCN- connected Experion nodes select:<br><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b><br><br>Or<br><br>From the System Management Display, right-click the node of interest. |
|  | <b>REFERENCE - INTERNAL</b><br><br>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility.</i>                                                                                                                                                                                                        |

## 2 Board Configuration Pages

### 2.6 Keyboard Page

| Step                                                                              | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2                                                                                 | <p>Select the following:</p> <p><b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <i>Overview of Board Configuration Pages</i>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 3                                                                                 | <p>Select the <b>Keyboard</b> tab to display the following (GUS example shown):</p>  <p>The screenshot shows the 'Board 0' configuration window with the 'Keyboard' tab selected. The window has a title bar 'Board 0 :'. Below the title bar are several tabs: 'Printer', 'Emulated Disks', 'Data Access Configuration', 'LCNP', 'Common', 'Native Window', 'TPN Time Sync', and 'Keyboard'. The 'Keyboard' tab is active. Inside the tab, there is a 'Description' box stating: 'This page is used to configure the Emulated Keyboard behavior associated with Native Window operation.' Below this is a section titled 'Labels for User Defined Keys' containing six input fields arranged in two columns. The first column has fields 1 through 5, and the second column has fields 2 through 6. The second column's fields are labeled 2, 4, and 6. The third section is titled 'Annunciator Attributes' and contains a table with columns: 'Contact #', 'Pitch', 'Duration', 'Repeat Rate', 'Enabled', and 'Test'. There are three rows of data for contacts 3, 2, and 1. At the bottom of the window are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.</p> |
| 4                                                                                 | <p>Enter the titles for LCN user- configured buttons 1 - 6 in the <b>Labels for User Defined Keys</b> area of the Keyboard page.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

| Step                                                                              | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>ATTENTION</b></p> <p>Be sure to enter the name of configured button 1 in User Defined position 1, configured button 2 in User Defined position 2, and so on.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| 5                                                                                 | <p>Do the following if you wish to customize the ALT key in a Native Window key combination:</p> <p>Place an ampersand (&amp;) in front of the mnemonic letter for the key title.</p> <p>For example, if you entered O&amp;RG SUMMARY on the Keyboard Page as a key label definition, then you would press <b>ALT- D- U- R</b> in Native Window in order to display the Organizational Summary Menu.</p> <p><b>D</b> is the mnemonic key for the Display menu,<br/> <b>U</b> is the mnemonic key for the User Defined submenu, and<br/> <b>R</b> is the mnemonic key for ORG SUMMARY in this example because of the ampersand location.</p> |
| 6                                                                                 | Click <b>OK</b> to complete the Key Title Definition.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

### Key Action Invocation Methods

| Kbd / Program       | Key Action Invocation Method                                                                                                         |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Qwerty Keyboard     | Select Function Key 1 to 6.                                                                                                          |
| ABC US Keyboard     | Select Function Key 1 to 6.                                                                                                          |
| Integrated Keyboard | Select one of the six buttons on the lower- left side of the Relegendable Operator Control Panel.                                    |
| Native Window Menu  | Select the key title defined using the "Key Title Definition" section from the <b>Displays &gt; User Defined</b> Native Window menu. |

### Example Key Definition

The "Key Action Definition" section is used to configure Button 1 as SCHEM ("MAIN MENU").

The "Key Label Definition" section is used to define the Key 1 label as "MAIN MENU".

## 2 Board Configuration Pages

### 2.6 Keyboard Page

---

The user can now display the MAIN MENU schematic:

- by pressing Button 1 on the keyboard, or
- by selecting the **Displays>User Defined>MAIN MENU** item from within Native Window.

#### Annunciator Attributes

---



##### ATTENTION

The Annunciator Attributes section of the Keyboard dialog page provides the opportunity to annunciate alarms through the workstation speaker when an Integrated Keyboard is NOT present.

---



##### TIP

On an Experion Station - TPS node, annunciation attributes are disregarded and should be left disabled. Annunciation is under the control of the Experion Station. See Alarm Annunciation in the *Server and Client Planning Guide*.

---

Customize alarm sound characteristics for each alarm contact number.

#### Contact #

Through the NCF System Wide Values configuration, LCN alarm annunciation events (including emergency, high, and low priority alarms) can be set to correspond to contact numbers 1, 2, or 3. For example, if you want emergency priority alarms to close contact 3, select Contact 3 in the NCF configuration.

#### Pitch

Select high, medium, or low from the **Pitch** field selections to set a different alarm pitch for each annunciated alarm priority.

#### Duration

Select short, medium, or long from the **Duration** field selections to choose how long the alarm sound continues for each annunciated alarm priority.

#### Repeat Rate

Select fast, medium, or slow from the **Repeat Rate** field selections to choose how often the alarm repeats for each annunciated alarm priority.

### **Enabled Checkbox**

Check the **Enabled** box to enable the respective alarm contact.

### **Test buttons**

Click **Test** to hear an enabled alarm contact's annunciation settings.

### **Settings button**

Click **Settings** to display the Annunciator Settings dialog box. The default settings are given in the following table.

| Pitch (Hertz) |     | Duration (Msec) |     | Repeat Rate (Msec) |     |
|---------------|-----|-----------------|-----|--------------------|-----|
| High          | 400 | Short           | 100 | Fast               | 100 |
| Medium        | 300 | Medium          | 300 | Medium             | 400 |
| Low           | 100 | Long            | 500 | Slow               | 700 |

### **Annunciator Defaults**

| Contact # | Pitch  | Duration | Repeat Rate | Enabled |
|-----------|--------|----------|-------------|---------|
| 3         | High   | Short    | Fast        | X       |
| 2         | Medium | Medium   | Medium      | X       |
| 1         | Low    | Long     | Slow        | X       |

## 2.7 Native Window Page

### Page Usage

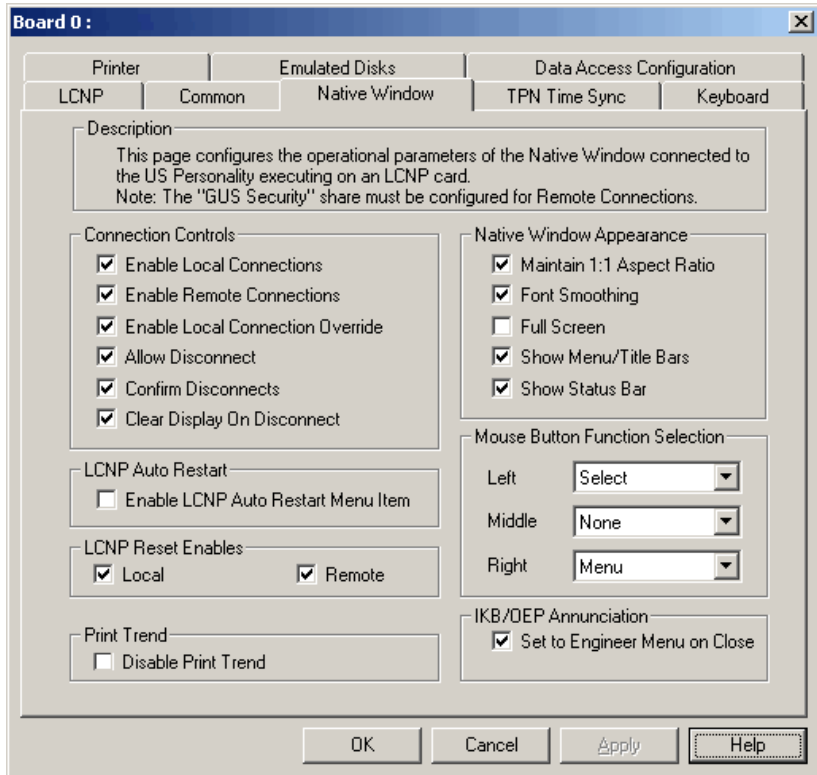
The Native Window Page is used for configuring the Native Window options for an LCNP board that is running on a GUS, US, or Experion Station - TPS node.

### Page Overview

The Native Window Page is used for controlling the operation of the Native Window application.

### Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                        |
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <i>Overview of Board Configuration Pages</i>.</p>                                                                                                                                                                                                                    |

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | <p>Select the <b>Native Window</b> tab to display the following (GUS example shown):</p>  <p>The screenshot shows the 'Board 0' configuration window with the 'Native Window' tab selected. The window contains several sections of settings:</p> <ul style="list-style-type: none"> <li><b>Description:</b> This page configures the operational parameters of the Native Window connected to the US Personality executing on an LCNP card. Note: The "GUS Security" share must be configured for Remote Connections.</li> <li><b>Connection Controls:</b> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Enable Local Connections</li> <li><input checked="" type="checkbox"/> Enable Remote Connections</li> <li><input checked="" type="checkbox"/> Enable Local Connection Override</li> <li><input checked="" type="checkbox"/> Allow Disconnect</li> <li><input checked="" type="checkbox"/> Confirm Disconnects</li> <li><input checked="" type="checkbox"/> Clear Display On Disconnect</li> </ul> </li> <li><b>LCNP Auto Restart:</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Enable LCNP Auto Restart Menu Item</li> </ul> </li> <li><b>LCNP Reset Enables:</b> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Local</li> <li><input checked="" type="checkbox"/> Remote</li> </ul> </li> <li><b>Print Trend:</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Disable Print Trend</li> </ul> </li> <li><b>Native Window Appearance:</b> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Maintain 1:1 Aspect Ratio</li> <li><input checked="" type="checkbox"/> Font Smoothing</li> <li><input type="checkbox"/> Full Screen</li> <li><input checked="" type="checkbox"/> Show Menu/Title Bars</li> <li><input checked="" type="checkbox"/> Show Status Bar</li> </ul> </li> <li><b>Mouse Button Function Selection:</b> <ul style="list-style-type: none"> <li>Left: Select</li> <li>Middle: None</li> <li>Right: Menu</li> </ul> </li> <li><b>IKB/DEP Annunciation:</b> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Set to Engineer Menu on Close</li> </ul> </li> </ul> <p>Buttons at the bottom: OK, Cancel, Apply, Help.</p> |

## Connection Controls

The following table defines the selectable options for Connection Controls appearing on the Native Window page.

| Option                           | Usage                                                                                                                                                                                                                                                                                                                                                                                                                                               | Default Setting / Recommendation                                                                        |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Enable Local Connections         | Check this box to enable Native Window connection to the local LCNP board by local users.                                                                                                                                                                                                                                                                                                                                                           | Checked by default.<br><br>It is recommended that this box be checked on all node types.                |
| Enable Remote Connections        | Check this box to enable Native Window connection to the local LCNP board by remote users.                                                                                                                                                                                                                                                                                                                                                          | Unchecked by default.<br><br>Check, this box if the TPS Administrator wants remote access.              |
| Enable Local Connection Override | Check this box to enable the ability to override a remote user's Native Window connection when a local user Native Window connection is requested.<br><br>The local user is notified that the Native Window is in use by another user (user is identified) and is warned that the remote user will be disconnected. If the local user overrides the connection, the remote user is disconnected and is informed that the connection was terminated. | Checked by default.<br><br>It is recommended that this box be checked on all node types.                |
| Allow Disconnect                 | Check the box to allow any user account to disconnect a local or remote Native Window connection. Note that if Native Window becomes disconnected, the user will be still allowed to reconnect regardless of the box setting.                                                                                                                                                                                                                       | Checked by default.<br><br>Check this box if the disconnect option is desired by the TPS Administrator. |
| Confirm Disconnects              | Check this box if you want users to confirm all disconnects of the Native Window.                                                                                                                                                                                                                                                                                                                                                                   | Checked by default.<br><br>It is recommended that this box be checked on all node types.                |

| Option                      | Usage                                                                                                                                        | Default Setting / Recommendation                                                                                                                                                                                          |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clear Display on Disconnect | Check this box to clear the Native Window client area when it is disconnected. Otherwise, the display shown prior to disconnect is retained. | Checked by default.<br><br>It is recommended that this box be checked on all node types.                                                                                                                                  |
| IKB/OEP Annunciation        | This checkbox is only visible on ES- T nodes. Check this box to have the TPN supply the IKB/OEP commands directly to the IKB Service.        | The Experion station services the IEK/OEP commands first if it is running, regardless of the selection of this check box.<br><br>If Experion software is not installed, then the checkbox is checked and disabled (grey). |

### Mouse Button Function Selection

The following mouse button options apply only during Native window operation.

| Function | Button Default                                              | Resulting Button Action                                                                                                                                               |
|----------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select   | Default setting for the left mouse button.                  | A screen touch message is sent to the TPN personality when the mouse button is clicked. This option may be chosen for only one of the mouse buttons at any one time.  |
| None     | Default setting for the middle mouse button.                | No action occurs when the mouse button is clicked. This option may be selected for any combination of the mouse buttons.                                              |
| Menu     | Default setting for the right mouse button.                 | A context menu is shown at the cursor location when the mouse button is clicked. This option may be chosen for only one of the mouse buttons at any one time.         |
| Enter    | This is not a default setting for any of the mouse buttons. | The equivalent action to pressing the enter key occurs when the mouse button is clicked. This option may be chosen for only one of the mouse buttons at any one time. |

## LCNP Auto Restart

The **Enable LCNP Native Window Auto Restart Menu Item** box in the Configuration Utility>Configure>Board 0>Native Window is unchecked by default. When checked, a menu item **LCNP Auto Restart** is selectable in the **Access** menu of the Native window. **LCNP Auto Restart** menu item is not key locked. By selecting the **LCNP Auto Restart** menu item, the Native window user can enable/disable the LCNP auto restart feature, thus toggling the state of the **Enable LCNP Auto Restart** checkbox (on LCNP tab). A checkmark corresponding to the menu item **LCNP Auto Restart** indicates that the LCNP auto restart feature is enabled.

**Scenario: If Configuration Utility>Configure- >Board 0- >Native Window>Enable LCNP Auto Restart Menu Item is enabled and either the Configuration Utility>Configure>Board 0>LCNP>Enable LCNP Auto Restart or Native Window>Access>LCNP Auto Restart is enabled.**

When a GUS is powered on or rebooted, the Windows operating system is loaded. If the **LCNP Auto Restart** or **Configuration Utility>Configure- >Board 0>LCNP>Enable LCNP Auto Restart** menu item is unchecked, the user has to manually load the Native Window. As soon as the **LCNP Auto Restart** is enabled and a RESET is initiated to the LCNP, a power on, or a reboot of the node, the LCNP "Native Window" is automatically loaded with the personality.

---

### CAUTION

When **LCNP Auto Restart** is enabled, any time the LCNP goes into PWR\_ON state, the LCNP will be automatically loaded. You will not be able to do a Local/Target load. You have to disable the **LCNP Auto Restart** feature before you can load the node manually (Local/Target).

---



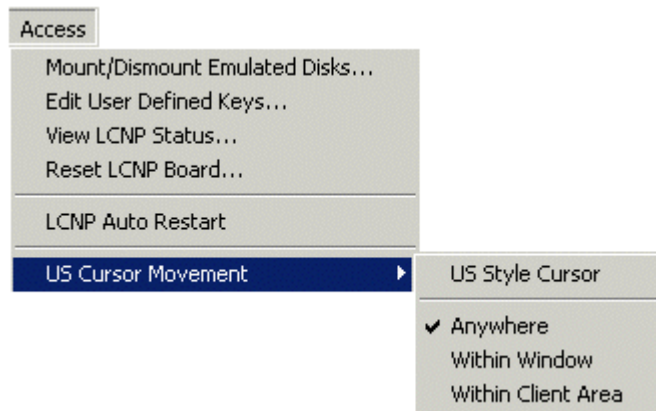
### ATTENTION

Before performing a memory dump, you must insure that the Auto Restart menu item is not selected. If the Auto Restart menu item is selected, the LCNP will try to restart during a memory dump, canceling the dump.

You can also uncheck the Enable Native Window Auto Restart menu box within the Configuration Utility to disable Auto Restart.

---

### Access Menu in the Native Window



### LCNP Reset Enables

**Local:** Allows the LCNP board to be reset from the *local* Native Window or Emulators Status display. The default setting is unchecked.

**Remote:** Allows the LCNP board to be reset from a *remote* Native Window or Emulators Status display. The default setting is unchecked.



#### REFERENCE - INTERNAL

Refer to the "Reset LCNP Board" section in the *Native Window User's Guide* for additional information.

---

## **Print Trend**

### ***Disable Print Trend***

Check this box to disable the Print Trend function. The default setting is unchecked (Print Trend function is enabled).

When this box is checked, the PRINT TREND function is disabled in the FILE MENU and the HISTORY MENU of the Native Window. In addition, the PRINT TREND key on the IKB (Integrated Keyboard) also is disabled.

## **Native Window Appearance**

### ***Maintain 1:1 Aspect Ratio Option***

Check this box and characters and objects will appear with coordinated, proportional heights and widths.

The default setting is checked and this is the recommendation for all node types.

### ***Font Smoothing Option***

Check this box to enable font smoothing on ES- T/GUS startup. When the Native Window is called up, the display appears with smoother characters at all window sizes.

If the font smoothing setting in Configuration Utility is changed during Native Window operation, changes will take effect only after the Native Window has been disconnected and reconnected.

Fonts used by the Native Window may be specified in the Configuration Utility's **LCNI18N** property page. Users may specify any font currently installed on the GUS system; however, only non- proportional fonts (every character is the same width) work properly in Native Window. Font smoothing is most effective with True- Type fonts, particularly Courier New.

The default fonts (lcn8x16\_0 and lcn8x8\_0) are raster, not True- Type, fonts.

The default setting is checked and this is the recommendation for all node types.



### **REFERENCE - INTERNAL**

For examples of font smoothing, refer to the "Font Smoothing" section in the *Native Window User's Guide*.

---

### ***Full Screen Option***

Check this option to display Native Window on the full screen after connection. This is a connection- time action only. The user is allowed to make Native Window non- full-screen after connect, unless the Menu Bar is also hidden. Refer to the following section, Show Menu/Title Bars Option, for information. If the menu bar is configured as hidden, and Full Screen is enabled, the Native Window will remain full screen until it is shut down or disconnected.

The default setting is unchecked. It is recommended that the box be checked for US Replacement nodes.

### ***Show Menu/Title Bars Option***

Check this option and the menu and title bars will be visible at connect time.

Uncheck this option and the right mouse button menu option to make them visible will be grayed. The menu bar will therefore be inaccessible until the box is checked, and Native Window is disconnected and reconnected, or shut down and restarted.

The default setting is checked. It is recommended that the box be checked for ES-T/GUS nodes. The setting is the choice of the TPS Administrator on US Replacement nodes.

### ***Show Status Bar Option***

Check this option and the status bar will be visible at connect time. Uncheck this option and the right mouse button menu option to make the status bar visible will be grayed. The status bar will therefore be inaccessible until the box is checked. The default setting is checked. It is recommended that the box be checked for GUS or Experion Station - TPS nodes. The setting is the choice of the TPS Administrator on US Replacement nodes.

### **IKB/OEP Annunciation selections**

The Board Configuration Page displays selections for IKB/OEP annunciation. The "TPN - in absence of Experion" setting appears for Experion nodes and does not appear for a GUS node.



#### ***Set to Engineer Menu on close***

When checked, closing the Native Window sets the emulators to the Engineering Main menu and suppresses IKB alarm annunciation.

#### ***TPN - in absence of Experion***

The setting appears when using Experion nodes, such as the Experion Station - TPS and Native Window only Experion node. Choosing the setting depends on the Experion node type, its intended use, and availability of Experion Station functionality.

If an Experion Station with TPS options node (for example, an Experion Station - TPS or ES- CE), then uncheck so Experion events can annunciate from the IKB/OEP.

If a Native window only, Experion ready node (that is, the node does not have Experion Station functionality available), then check so TPN events can annunciate from the IKB/OEP.

## 2.8 Printer Page

### Page Usage

The Printer Page is used to configure an LCNP board that is running on a GUS, US, or Experion Station - TPS node.

### Page Overview

The Printer Page settings allow you to configure printer, printer font and size, and real-time journal printing intervals.



#### REFERENCE - INTERNAL

For detailed instructions to configure the printer, refer to the subsection "Configuring LCNP (Board 0) Settings" in the *TPS System Implementation Guide*.

---

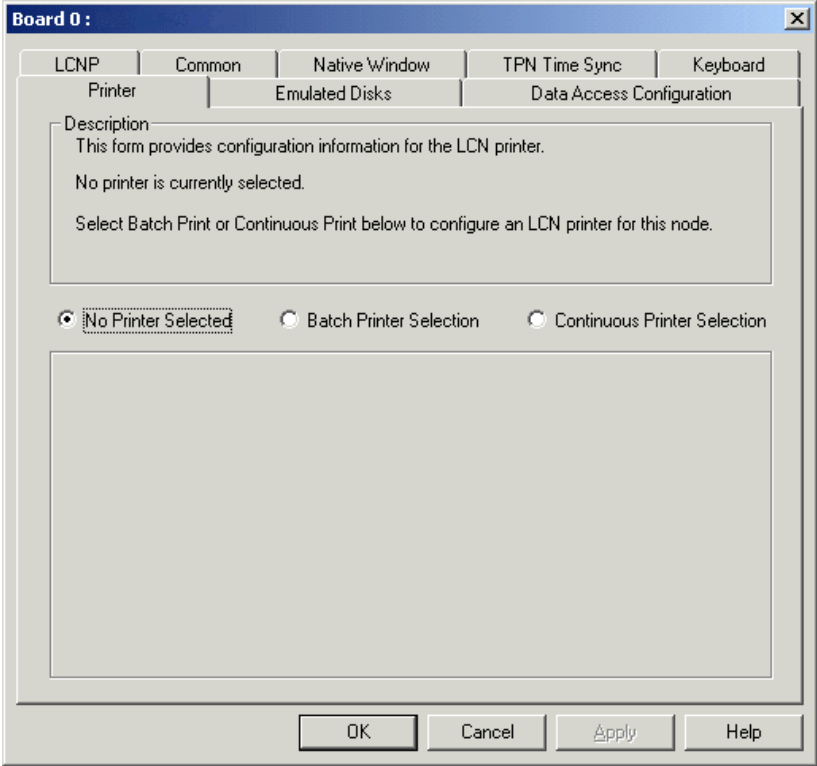
### Accessing the Page

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|      | <h4>REFERENCE - INTERNAL</h4> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                      |
| 2    | <p>Select the following:</p> <p><b>Configure &gt; [LCNP board name]</b></p> <p>Where [LCNP board name] is "Board 0" (the default name) or a customized name.</p>                                                                                                                                                                                                                        |

## 2 Board Configuration Pages

### 2.8 Printer Page

---

| Step                                                                              | Action                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>TIP</b></p> <p>The "Add Board" utility is used to configure the LCNP board name, as described in section 2.1 <i>Overview of Board Configuration Pages</i>.</p>   |
| 3                                                                                 | <p>Select the <b>Printer</b> tab to display the following (GUS example shown):</p>  |

## Printer Selection

The three printer configuration choices are described below:

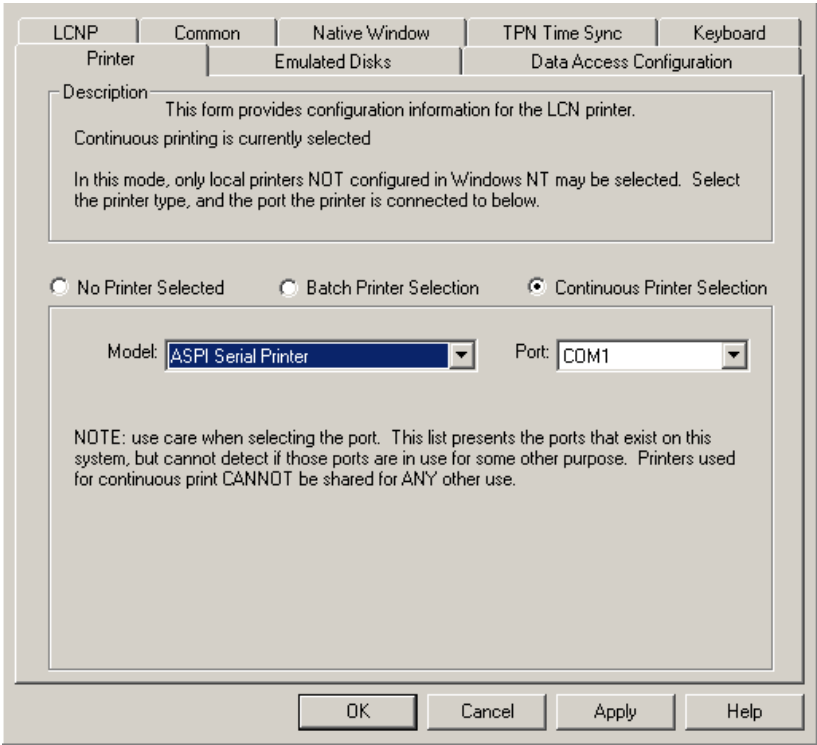
- If the node will not connect to a printer, select the **No Printer Selected** radio button. Select this mode if the printer function of the Universal Station is not to be used. If this mode is selected and the TPN NCF has a printer configured for the node, then the Console Status display will indicate that the printer for this node is off- line.
- If the node will connect to a shared printer, select the **Batch Printer Selection** radio button. This mode allows selection of local or remote printers, and allows the selected printer to be shared with other applications and/or other nodes. Printed output from the station is collected until the configured time or line limit is reached, and printed as a "batch". In this mode, the true status of the printer is hidden by the Windows operating system, and will most often show as OK on the Native Window Console Status display, even when the printer is off- line or absent.
- If the node will connect to a dedicated printer, select the **Continuous Printer Selection** option button. This mode most closely emulates the printing behavior of the LCN Universal Station. In this mode, print output from the station is sent immediately to the printer, which is useful for printing alarms. The printer must be connected to a serial port of this node, and it may not be used across the network or shared with any other application on the connected node or on any other node. With TPS R360, the printer can be connected to an USB port.

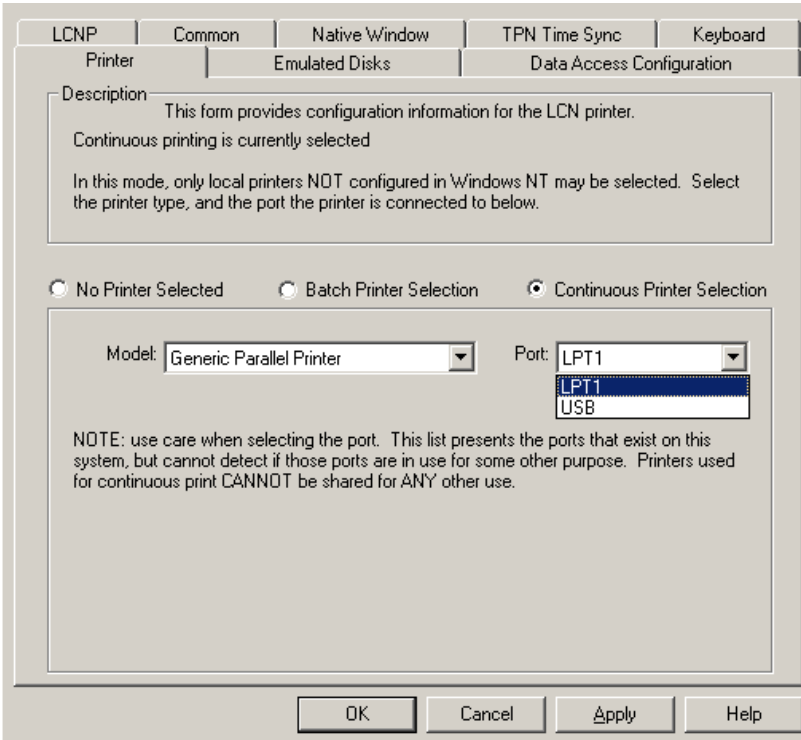
To configure a dedicated printer to a serial/parallel/USB printer, follow these steps:

| Step | Action                                                                                                                                                                                                                            |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Select the <b>Continuous Printer Selection</b> radio button. The following two options are available in the Model field: <ul style="list-style-type: none"><li>• ASPI Serial Printer</li><li>• Generic Parallel Printer</li></ul> |

## 2 Board Configuration Pages

### 2.8 Printer Page

| Step | Action                                                                                                                                                                                                                                                                                                        |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2    | <p>Select <b>ASPI Serial Printer</b> as the Model to display the following:</p>  <p><b>Note:</b> Some print filters may display a Protocol field. If so, set that selection to match the configuration of the printer.</p> |
| 3    | <p>Select the correct Port for the printer.</p> <p><b>Note:</b> If the printer is currently configured as a shared Windows printer, then the printer's port will not be selectable. Use the Printer Control Panel to de-configure the printer, so it can be used as a continuous mode printer.</p>            |
| 4    | <p>Click <b>OK</b> to complete LCNP board configuration. <b>OR</b></p>                                                                                                                                                                                                                                        |

| Step | Action                                                                                                                                                                |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | <p>Select the Generic Parallel Printer as the Model to display the following:</p>  |
| 6    | Select the correct <b>Port</b> for the printer.                                                                                                                       |
| 7    | Click <b>OK</b> to complete LCNP board configuration.                                                                                                                 |

### Printing a Real Time Journal (RTJ) from the Native Window

The letters RTJ appear in a pane in the Native Window status bar when a Batch Printer Selection is configured and there are events in the real- time journal queue that can be demand printed. You can print those event messages on demand or wait until one of the two criteria, Idle Flush Time or Queue Length, is met. If either no printer or a continuous mode printer is configured, the RTJ pane will never be enabled.

## 2 Board Configuration Pages

### 2.9 TPN Time Sync Page

---

To demand print from the Native Window, select **Print RTJ** from the **File** menu.

You may also click the **RTJ** pane on the status bar shown below:



#### Printing the RTJ to a file

As an alternative to line- by- line printing, you may specify a pathname for periodic printing of the RTJ to a file. After clicking RTJ:

- Select **InputFileName**.
- Click **Browse** and navigate to an appropriate file location.

## 2.9 TPN Time Sync Page

#### Page Usage

The TPN Time Sync dialog page allows you to configure values required for synchronizing TPN time to TPS time. This function is available only if the Time Sync option is enabled on the **Common** page. TPN Time Sync can be implemented in LCN-connected Experion nodes and systems that are at the following minimum release levels: GUS R330 and APP R211.



#### ATTENTION

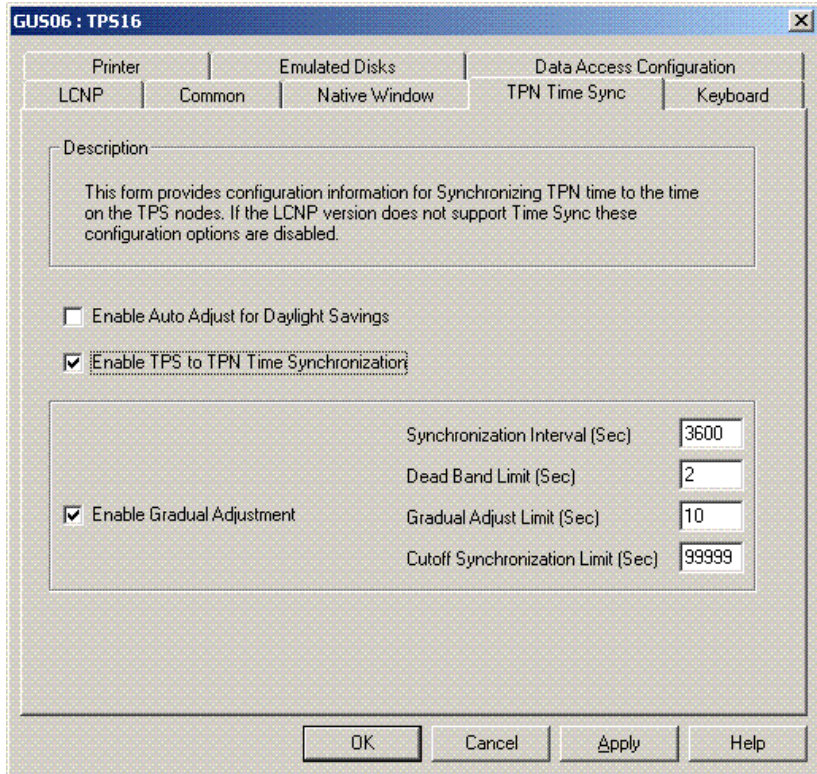
Verify that LCNP4- GPS boards are installed in TPS nodes (GUS, APP, or LCN- connected Experion nodes) that have been designated as CLOCK NODE 1 and CLOCK NODE 2 clock sources in the NCF.CF file.

#### Page Overview

The **TPN Time Sync** page allows you to:

- Enable Auto Adjust for Daylight Savings.
- Enable TPS to TPN Time Synchronization, including specifying the Synchronization Interval and Dead Band Limit.
- Enable Gradual Adjustment, including the Gradual Adjust Limit and the Cutoff Synchronization Limit.

## Accessing the Page

| Step                                                                              | Action                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                 | Select Board n (n = board number) from the <b>Configure</b> drop-down menu.                                                                                                      |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <a href="#">Starting the Configuration Utility</a>.</p> |
| 2                                                                                 | <p>Select the <b>TPN Time Sync</b> tab to display the following:</p>                          |



### ATTENTION

Any change to a TPN Time Synchronization configuration setting will execute the function immediately based on the new configuration settings, and continue on a periodic basis as configured in the synchronization interval.

### Enable Auto Adjust for Daylight Savings

If selected, TPN time will automatically be adjusted to Daylight Savings Time (DST). This change is immediate even if the **Enable Gradual Adjustment** option is selected. The change of the DST setting is an abrupt change and may cause loss of history data based on CLOCK NODE 1 being set backward or forward. The DST adjustment occurs when Windows Date/Time properties initiates a DST change.

When a DST change occurs at CLOCK NODE 1, the node immediately changes the TPN time to the TPS time and eliminates any gradual adjustment that was in effect.

During this process, the **Enable Gradual Adjustment** option will be ineffective even if it is checked.

If the **Enable Auto Adjust for Daylight Savings option** is not selected and a DST event occurs, the Time Sync function will continue to synchronize the TPN time at a fixed offset value that is equal to the DST adjustment value configured in Windows Date/Time properties.

This fixed offset value remains in effect until the user clicks on the **Set TPN to TPS time** button on the LCNP Status display, or the TPN Time Sync function detects a change in the TPN time that is approximately equal to the DST adjustment, as configured in the Windows Date/Time properties. The difference in time must be within 5 minutes of the DST adjustment value.

The **Enable Auto Adjust for Daylight Savings** selection is independent of the **Enable TPS to TPN Time Synchronization** checkbox.

### Enable TPS to TPN Time Synchronization

If selected and this node is CLOCK NODE 1, TPN and TPS times will be checked at the time interval specified in the **Synchronization Interval** option. If there is a discrepancy between TPN and TPS times that is greater than the **Dead Band Limit**, TPN time will be adjusted to TPS time according to the adjustment options selected. By default, the **Enable TPS to TPN Time Synchronization** box is unchecked.

With TPS R420, the time synchronization is enabled when the TPN node is a Master clock node and the option for time synchronization is selected. For example, in a TPS domain, (which includes GUS/APP/EST/ESVT/ACET and a Domain Controller), all the Windows nodes are configured to get the time from the Domain Controller.

If one of the T-nodes is made as a TPN Clock Master and the time synchronization is enabled, then all the TPN nodes will listen to the T-node.

If the Clock Mastership is switched to another TPN node, then the time synchronization to the T-node does not happen. As a result, the Windows nodes and the TPN nodes do not follow the same time source. All the Windows nodes will continue to follow the Domain Controller and all the TPN nodes will listen to the new Master.

### ***Synchronization Interval Setting***

This setting is the amount of time (in seconds) between comparisons of TPN and TPS times. You can enter the **Synchronization Interval** in seconds when **Enable TPS to TPN Time Synchronization** is selected. When CLOCK NODE 1 is loaded with its personality, then the time correction calculation occurs at the interval specified in **Synchronization Interval**. The configurable adjustment range is 1–99999 seconds, and the default value is set at 3600 seconds (1 hr). During this time interval, if the time difference exceeds the **Dead Band Limit**, the Master clock node starts adjusting TPN time gradually to synchronize it with TPS time.

If the time difference exceeds the **Cutoff Synchronization Limit** value, the time difference should be reduced manually by one of the following methods:

- Changing the time abruptly through the **Set TPN to TPS Time** button on the LCNP Status display of CLOCK NODE 1 to reactivate the time synchronization mechanism.
- Changing the time abruptly by changing the TPN time using the Native Window targets so that the time is within the cutoff value. The next scheduled execution of the TPN Time Sync function will adjust the TPN time to be closer to the TPS time.

The user must have Engineer keylevel access to perform the task.

### ***Dead Band Limit Setting***

If the difference between TPN time and TPS time falls within the specified **Dead Band Limit** (1- 10 seconds), then no action will be taken by the Time Synchronization function. An exception is when the difference is within the dead band and gradual adjustment is in effect, then gradual adjustment will continue when possible to further reduce the time difference. The default value for the **Dead Band Limit** is 2 seconds. The **Dead Band Limit** value cannot be greater than the **Gradual Adjust Limit** value (when **Enable Gradual Adjustment** has been selected) or the **Cutoff Synchronization Limit** value (when **Enable Gradual Adjustment** has not been selected).

If the difference between TPN time and TPS time exceeds the **Dead Band Limit**, then the function will initiate a gradual adjustment as specified by the **Enable Gradual Adjustment** settings.

### Enable Gradual Adjustment

If selected, adjustments to the TPN time will be made gradually according to the time specified by the **Gradual Adjust Limit (Sec)** value. It is recommended that this option be selected to avoid loss of historized data. If the **Enable Gradual Adjustment** box is unchecked, then the time changes will occur immediately.



#### ATTENTION

Gradual adjustment is possible only if the **CLOCK NODE 1 / CLOCK NODE 2** TPS nodes have the LCNP4- GPS board installed.

---

### Gradual Adjust Limit Setting

This option is in effect when the time difference between the TPS time and TPN time exceeds the **Dead Band Limit** value but is less than the **Gradual Adjust Limit** value. An exception is when the difference is within the dead band when gradual adjustment is already in effect, then gradual adjustment will continue when possible to further reduce the time difference. The range of the **Gradual Adjust Limit** value is 1- 99999 seconds. The default value for this option is 10 seconds.

The **Gradual Adjust Limit** value cannot be less than the **Dead Band Limit** value, and cannot be greater than the **Cutoff Synchronization Limit**.

### Cutoff Synchronization Limit Setting

Time adjustments are not made if the time difference between TPN and TPS nodes exceeds the **Cutoff Synchronization Limit** value. The value range is 1- 99999 seconds. By default, the **Cutoff Synchronization Limit** is set to 99999 seconds (27.5 hours). The **Cutoff Synchronization Limit** cannot be less than the **Gradual Adjust Limit** or the **Dead Band Limit**.

If the time difference exceeds the **Cutoff Synchronization Limit** value, the time difference should be reduced manually by one of the following methods:

- Changing the time abruptly through the **Set TPN to TPS Time** button on the LCNP Status display of CLOCK NODE 1 to reactivate the time synchronization mechanism.
- Changing the time abruptly by changing the TPN time using the Native Window targets so that the time is within the cutoff value. The next scheduled execution of the TPN Time Sync function will adjust the TPN time to be closer to the TPS time.

The user must have Engineer keylevel access to perform the task.



**ATTENTION**

After you enter the TPN Time Sync values in the CLOCK NODE 1 source, ensure that you enter the same values in the TPN Time Sync page of the CLOCK NODE 2 source.

---

## **2 Board Configuration Pages**

### **2.9 TPN Time Sync Page**

---

## 3. Devices/Services Page

### 3.1 Page Overview

The Devices/Services Page is used to configure the automatic startup of Device Drivers and Services.



#### ATTENTION

Setting changes do not take effect until the system is restarted.

---

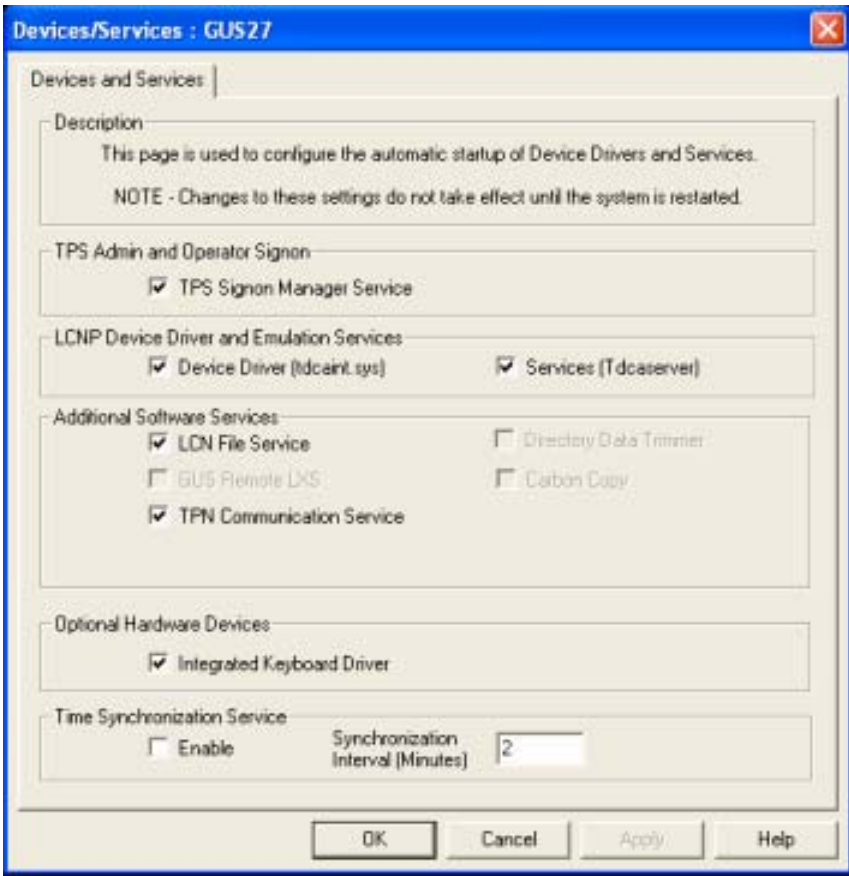
### 3.2 Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | Select the following to start the <b>Configuration Utility</b> .<br><b>Start&gt;All Programs&gt;Honeywell TPS&gt;Configuration Utility.</b><br><br>Or<br><br>From the <b>System Management Display</b> , right-click the node of interest. |
|  | <b>REFERENCE - INTERNAL</b><br><br>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i> .                                                                          |
| 2                                                                                   | Select the following:<br><br><b>Configure&gt;Devices/Services.</b>                                                                                                                                                                         |

### 3 Devices/Services Page

#### 3.2 Accessing the Page

---

| Step                                                                                | Action                              |
|-------------------------------------------------------------------------------------|-------------------------------------|
|                                                                                     | RESULT: The following is displayed. |
|  |                                     |

### 3.3 TPS Admin and Operator Signon Options

|                                   |                                                                         |
|-----------------------------------|-------------------------------------------------------------------------|
| <b>TPS Signon Manager service</b> | Select this box unless you are instructed by Honeywell to do otherwise. |
|-----------------------------------|-------------------------------------------------------------------------|

### 3.4 LCNP Device Driver and Emulation Services Options

|                                    |                                                                                              |
|------------------------------------|----------------------------------------------------------------------------------------------|
| <b>Device Driver (tdcaint.sys)</b> | Select this box (if it is available) unless you are instructed by Honeywell to do otherwise. |
| <b>Services (Tdcaserver)</b>       | Select this box (if it is available) unless you are instructed by Honeywell to do otherwise. |

### 3.5 Time Synchronization Service Options

This optional function periodically sets the time to LCN time.

Clear this box (if it is available) unless you are instructed by Honeywell to do otherwise.

### 3.6 Additional Software Services Options

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>LCN File Service</b>          | This service is used for LCN files on a GUS node. It does not apply to APP or Experion Station - TPS nodes. Check this box (if it is available) unless you are instructed by Honeywell to do otherwise.                                                                                                                                                                                                                                              |
| <b>GUS Remote LXS</b>            | <p>For TPS GUS and Network GUS nodes, this box is checked only if the GUS Remote Displays Server package has been installed.</p> <p>This box is grayed out unless the GUS Remote Displays Server package has been installed.</p> <p>The box is grayed out for the following nodes:</p> <ul style="list-style-type: none"> <li>• AM Replacement nodes</li> <li>• APP nodes</li> <li>• Standalone GUS nodes</li> <li>• US Replacement nodes</li> </ul> |
| <b>TPN Communication Service</b> | With TPS R410, this option is used for running or stopping <b>TPN Communication Service</b> .                                                                                                                                                                                                                                                                                                                                                        |

### 3.7 Optional Hardware Devices Options

|                                   |                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Integrated Keyboard Driver</b> | <p>This box is selected for GUS, Experion Station - TPS and US Replacement nodes with either of the following:</p> <ul style="list-style-type: none"> <li>• Integrated Keyboard option</li> <li>• Operator Entry Panel option on a Honeywell Icon Series Console</li> </ul> <p>This box is shaded on APP and AM Replacement nodes.</p> |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 4. File Transfer Pages

### 4.1 Reference to Other Documentation



#### REFERENCE - INTERNAL

For more information on the File Transfer Pages of the Configuration Utility, refer to the *File Transfer Installation and Use*.

---

## **4 File Transfer Pages**

### **4.1 Reference to Other Documentation**

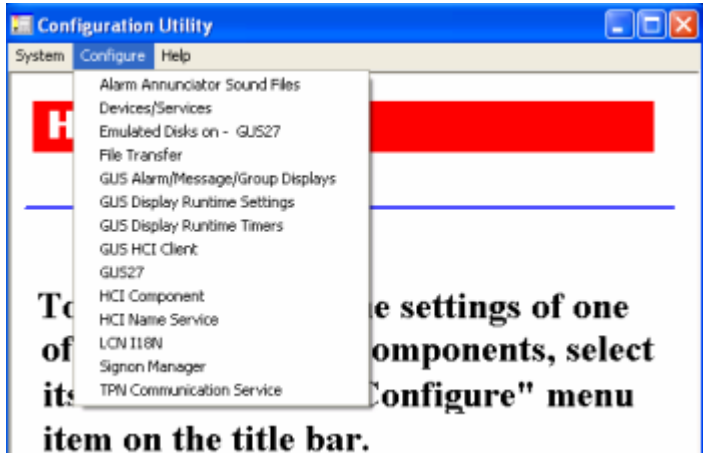
---

## 5. TPN Communication Service

### 5.1 Page Overview

With TPS R410, **TPN Communication Service** facilitates TPS-TPN status communication. This option is used for running or stopping **TPN Communication Service**. On the **Devices/Services** page, this option is selected by default. The HCI component composite state of the TPS node is propagated optionally when the HCI components fail.

### 5.2 Accessing the Page

| Step                                                                               | Action                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                  | Open the <b>Configuration Utility</b> as follows:<br><b>Start&gt; Programs&gt; Honeywell TPS&gt; Configuration Utility.</b>                                                                                                                                                                                |
|  | <b>ATTENTION</b><br><br>Running <b>TPN Communication Service</b> is mandatory for monitoring the HCI components from TPN.<br><br>The HCI component composite state of the TPS node is communicated to TPN through this service. The composite HCI status is reflected in the auxiliary status of the node. |
|                                                                                    | RESULT: The following screen is displayed.<br> <p>To configure the settings of one component, select "Configure" menu item on the title bar.</p>                                                                       |

## 5 TPN Communication Service

### 5.2 Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2                                                                                   | Choose <b>Configure&gt; TPN Communication Service</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                                                                     | <p>RESULT: On clicking <b>TPN Communication Service</b>, the following dialog box is displayed.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 3                                                                                   | To enable or disable the <b>HCI State Notification</b> , select or clear the check box provided on the <b>TPN Communication Service</b> screen.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|  | <p><b>ATTENTION</b></p> <p>With the TPN Communication Service running, when the <b>HCI State Notification</b> option is selected, an LXS channel is allocated. This channel can be viewed in the CHANINFO schematic. The description of this channel is \$TPN_COMM_RQST_SRVR and is limited to 12 characters.</p> <p>On clearing the <b>HCI State Notification</b> option, the LXS channel is de-allocated. The start up of TPN Communication Service is dependant on the <b>TPS Emulator Service</b>.</p> <p>The initial composite status (on resetting LCNP) of the HCI components is reflected in the auxiliary status of the node after 2 minutes approximately. This delay allows the HCI components to return to their steady/normal state.</p> |

## 6. GUS Alarm/Message/Group Displays Page

### 6.1 Page Overview

The GUS Alarm/Message/Group Displays Page is used to configure the GUS Group displays and GUS Alarm Summary Display. The GUS Message Summary has not been implemented.



#### ATTENTION

The GUS Alarm Summary is not supported on LCN- connected Experion nodes.

---

### 6.2 Accessing the Page

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|      | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |
| 2    | <p>Select the following:</p> <p><b>Configure &gt; GUS Alarm/Message/Group Displays.</b></p> <p>RESULT: The following is displayed.</p>                                                                                                                                                                                                                                                  |

## 6 GUS Alarm/Message/Group Displays Page

### 6.2 Accessing the Page

---

| Step                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Action |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| <div><div>GUS Alarm/Message/Group Displays : GUS28</div><div><div>General</div><div><div>Description</div><div>Specification of the displays invoked by certain IKB/OEP keys when a GUS display is the active window. If Not Enabled the NativeWindow is invoked.</div></div><div><div>ALARM Summary</div><div><input type="checkbox"/> Enabled Display: C:\Program Files\Honeywell\TPS\RAC\AlarmMessage\AlarmSur ...</div></div><div><div>GROUP Display</div><div><input type="checkbox"/> Enabled Display: GUS\GroupDisp.exe <input type="checkbox"/> Remove slot highlight on loss of focus</div><div>Group TREND: ...</div><div>Group HOUR AVG: ...</div></div><div><div>Faceplate and GUS Displays</div><div>Point TREND: ...</div><div>Point HOUR AVG: ...</div><div><input type="checkbox"/> Use cursor keys and/or OEP tab keys as ramp keys on Faceplates</div></div><div>Defaults</div><div>OK Cancel Apply Help</div></div></div> |        |

## 6.3 Alarm Summary

Check the **Enabled** box if you want the GUS Alarm Summary displays to be invoked by keyboard actions or GUS scripting interaction, instead of the standard Native Window Alarm Summary displays.

Use the browse button to specify the path to the GUS Alarm Summary display if it is other than the default location.

## 6.4 Group Display

Check the **Remove slot highlight on loss of focus** box if you want an operator-selected tag in a GUS Group Display to be deselected when its window no longer has focus.

Check the **Group Display - Enabled** box if you want **GUS Group Displays** to be invoked by keyboard actions or GUS scripting interaction, instead of the standard Native Window Group displays.

If not blank, the Group Trend and Group Hour Avg identify the GUS display that will be invoked when the IKB/OEP TREND or HOUR AVG is pressed while the GUS Group Display has focus. The invocation will include the current Group Number as the DisplayParameter.



### ATTENTION

The Group Display is a standalone executable that still must be enabled if you wish to replace its Native Window counterpart.

---

## 6.5 Faceplate Keyboard Configuration

The Point Trend and Point Hour Avg identify the path of a GUS display that will be invoked when the IKB/OEP TREND or HOUR AVG is pressed while the Faceplate.exe or a GUS Display has focus.

- The invocation includes the current point name as the DisplayParameter.
- If a faceplate has focus, its tagname will be the current point.
- If an AlarmWindow with a selected alarm has focus, that point will be the current point.
- Otherwise, the current point will be (in order of preference) the PMK entity, \$CZ\_ENTY or \$AL\_ENTY.

Check the **Use Cursor Keys and/or OEP Tab Keys as Ramp Keys** if the node has an Honeywell Icon Series Console Operator Entry Panel (OEP) and you want to allow the OEP tab keys to be used as ramp keys.

## 7. GUS Display Runtime Settings Page

### 7.1 Page Overview

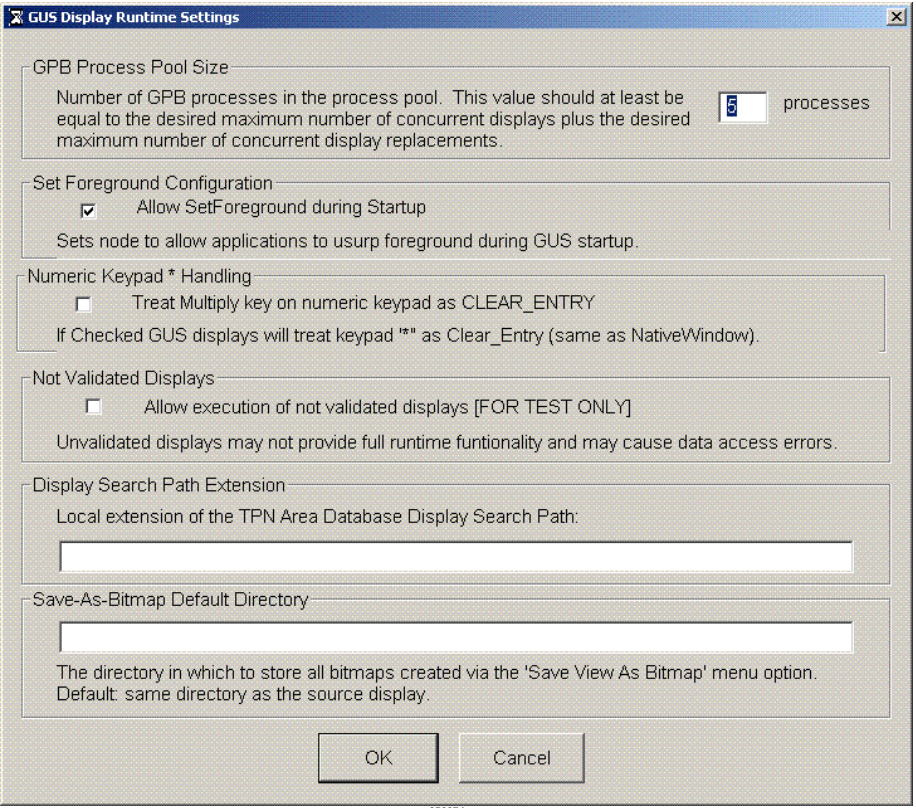
The GUS Display Runtime Settings Page is used to configure a number of different GUS display runtime parameters.

### 7.2 Configuring GUS Displays for Runtime

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p><a href="#">For detailed instructions to start the Configuration Utility refer to section 1.2 Starting the Configuration Utility.</a></p>                                                                                                                                                                                                         |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; GUS Display Runtime Settings.</b></p> <p>RESULT: The following page is displayed.</p>                                                                                                                                                                                                                                                 |

## 7 GUS Display Runtime Settings Page

### 7.2 Configuring GUS Displays for Runtime

| Step                                                                                | Action                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                     |                                                                                                                        |
| 3                                                                                   | Enter the number of process into the <b>GPB Process Pool Size</b> data input port. Note that the GPB Process Pool Size $\geq$ (max. # of concurrent displays) + (max. # of current display replacements). |
|  | <b>REFERENCE - INTERNAL</b><br>Refer to the section <i>GPB Process Pool Size</i> in the <i>GUS Remote Displays User's Guide</i> for more information on the Process Pool.                                 |
| 4                                                                                   | Click (check) the Set Foreground Configuration check box to enable scripts to transfer the focus to another window when any user logs on.                                                                 |

| Step                                                                              | Action                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5                                                                                 | Click (check) Numeric- Keypad * Handling check box to allow GUS faceplate/Group and GUS change Zone to invoke the numeric- keypad * key to clear the data entry port (same as CLR ENTR key in the OEP). |
|  | If you press the numeric- keypad * key without selecting Numeric- Keypad * Handling, the INVALID ENTRY error message appears.                                                                           |
| 6                                                                                 | Click (check) the Not Validated Displays check box if you want to allow displays that are not validated to run.                                                                                         |
| 7                                                                                 | Enter a secondary search path for GUS displays into the <b>Display Search Path Extension</b> data input port.                                                                                           |
| 8                                                                                 | Enter the pathname to a new directory into the Save- As- Bitmap Default Directory data input port.                                                                                                      |
| 9                                                                                 | Click <b>OK</b> to complete the GUS Display Runtime configuration procedure.                                                                                                                            |

### Set Foreground Configuration

In applications or displays, to transfer the focus to another window, each user's account must be set to enable SetForeground. If "Allow SetForeground during Startup" is selected, then this Windows option will be set during each logon. This is an alternative to including "start enablesetforeground.exe" in the operator.bat file for all users.

NOTE: If "Allow SetForeground during Startup" is not checked, the numeric keypad \* is treated as an asterisk. Therefore, any user account that has been set to enable SetForeground will retain that setting. To disable SetForeground, use the interactive program AllowSetForeground.exe in Program Files\Honeywell\TPS\Base.

### Numeric- Keypad \* Handling

With GUS R350 and later, the numeric- keypad \* key in the IKB and in the OEP can be used as a CLR ENTR key to clear the entry ports in GUS faceplate/Group and GUS change Zone. This feature is similar to the one available for the Native Window.

### Display Search Path Extension

The primary area database search path for GUS displays (.pct files) is defined in the NCF. The system software always uses this search path first to try to locate GUS display files.

Entering a search path to a Drive and Directory on your GUS into the **Display Search Path Extension** data entry port provides another (secondary) area where GUS display files can be kept.

When this parameter is "blank," which is the default value, the system software will use only the primary area database search path to try to locate GUS display files.

### Not Validated Displays

After a GUS display is built, the normal, recommended procedure is to validate it before it is run. This display validation function verifies that the data references in scripts and objects' dynamics are correct and binds references in the display to the data to allow successful and efficient access during display execution. A display can run with validation errors, but runtime errors may occur if data cannot be accessed during execution due to invalid data references.

Setting the **Not Validated Displays** checkbox allows invalidated displays to run and should be used only for testing.

The default value for this checkbox is "unchecked," which means that all displays will be checked before they are run to see if they have been validated. If an invalidated display is found, an error message will be displayed.

### Save- As- Bitmap Default Directory

The GUS Display Builder provides the File menu command "Save View as Bitmap" which enables users to save the current GUS display as a standard MS Windows bitmap file (.bmp, 24- bit TrueColor).

Entering a pathname into the **Save- As- Bitmap Default Directory** data entry port specifies where these GUS display bitmap files are to be saved when the Save View as Bitmap command is executed.

When this parameter is "blank" (the default value), GUS display bitmap files will be saved to the directory where the GUS display file (.pct) is stored.

Here is an example of a valid pathname.



## 8. GUS Display Runtime Timers Page

### 8.1 Page Overview

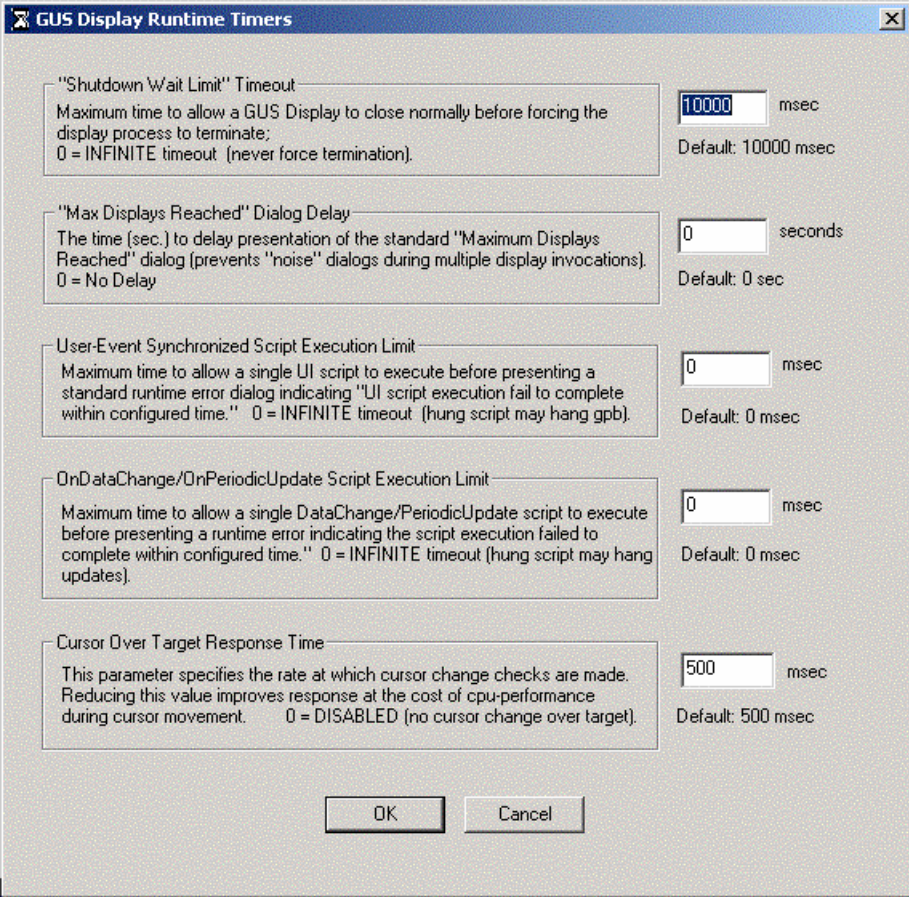
The GUS Display Runtime Timers Page is used to configure values for a number of different timing parameters associated with GUS displays.

### 8.2 Configuring GUS Display Runtime Timers

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select;</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select;</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; GUS Display Limits.</b></p> <p>RESULT: The following page will be displayed.</p>                                                                                                                                                                                                                                                      |

## 8 GUS Display Runtime Timers Page

### 8.2 Configuring GUS Display Runtime Timers

| Step                                                                                | Action                                                                                                  |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  |                                                                                                         |
| 3                                                                                   | Enter the time (in msec) into the "Shutdown Wait Limit" Timeout data input port.                        |
| 4                                                                                   | Enter the time (in sec) into the "Max Displays Reached" Dialog Delay data input port.                   |
| 5                                                                                   | Enter the time (in msec) into the User- Event Synchronized Script Execution Limit data input port.      |
| 6                                                                                   | Enter the time (in msec) into the onDataChange/OnPeriodicUpdate Script Execution Limit data input port. |

| Step | Action                                                                              |
|------|-------------------------------------------------------------------------------------|
| 7    | Enter the time (in msec) into the Cursor Over Target Response Time data input port. |
| 8    | Click <b>OK</b> to complete the GUS Display Limits configuration procedure.         |

### Shutdown Wait Limit Timeout

The Shutdown Wait Limit applies to GUS displays that use the `OnDisplayShutDown` subroutine. It should be used to allow displays enough time for pending scripts to run to completion but shut down if a script gets into an extremely long or infinite loop.

Refer to the *OnDisplayShutDown* section in the Display Authoring Tutorial manual for additional information.

When a GUS display is shutting down, pending scripts are allowed to run to completion. If a display script gets into an infinite loop, the display may not be able to close. This will affect the ability to invoke new GUS displays, which can cause a variety of problems.

Entering a time into the "Shutdown Wait Limit" Timeout data entry port will force all GUS displays to close normally, avoiding the delay associated with an infinite or a potentially very long loop.

When this parameter is "0," an "infinite" timeout is assumed, and this means that GUS displays will never be forced to terminate.



## 9. GUS HCI Client Page

### 9.1 Configuration Instructions



#### REFERENCE - INTERNAL

Refer to Timeouts in the *HCI/OPC Data Access User's Guide* for configuration information.

The screenshot shows a dialog box titled "GUS HCI Client Timeout Settings". It contains three sections for configuring timeouts:

- "Bind" Timeout:** Maximum time to connect to an HCI/OPC server. The value is set to 20000 msec. Default: 20000 msec.
- "Ping" Timeout:** Periodic poll of a connected HCI/OPC server. The value is set to 30000 msec. Default: 30000 msec.
- "Access" Timeout:** Maximum wait for response from a connected HCI/OPC server. The value is set to 10000 msec. Default: 10000 msec.

At the bottom of the dialog box are two buttons: "OK" and "Cancel".



## 10. GUS Remote Displays Client Page

### 10.1 Reference to Other Documentation



#### REFERENCE - INTERNAL

For information on the GUS Remote Displays Client Page of the Configuration Utility, refer to the *GUS Remote Displays User's Guide*.

---

## **10 GUS Remote Displays Client Page**

### **10.1 Reference to Other Documentation**

---

## 11. GUS Remote Displays Server Page

### 11.1 Reference to Other Documentation



#### REFERENCE - INTERNAL

For information on the GUS Remote Displays Server Page of the Configuration Utility, refer to the *GUS Remote Displays User's Guide*.

---

## **11 GUS Remote Displays Server Page**

### **11.1 Reference to Other Documentation**

---

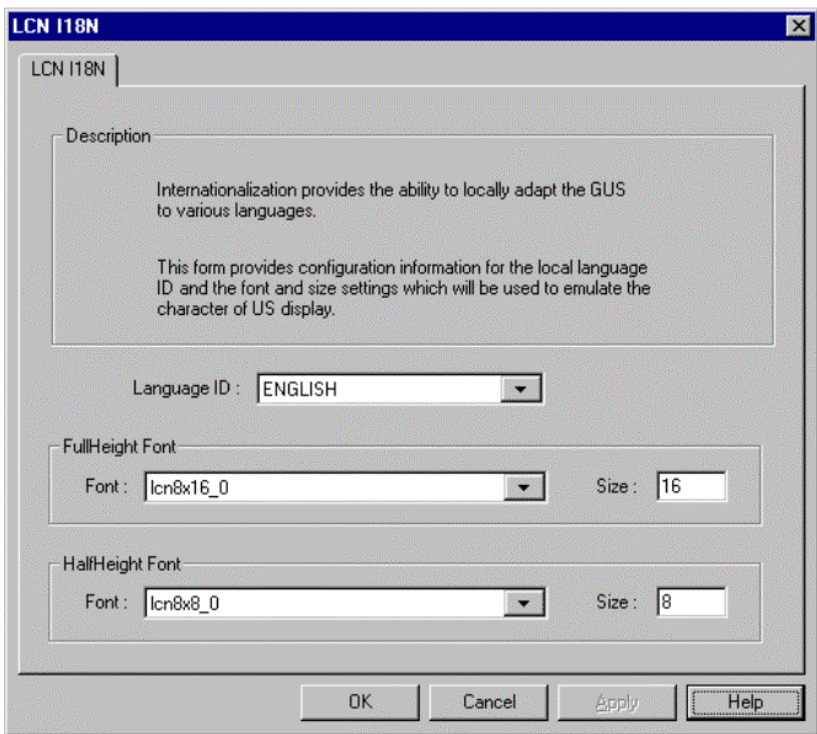
## 12. LCN I18N Page

### 12.1 Page Overview

The LCN I18N Page is used to configure the different language fonts used by the Native Window.

### 12.2 Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p><a href="#">For detailed instructions to start the Configuration Utility, refer to section 1.2 Starting the Configuration Utility.</a></p>                                                                                                                                                                                                        |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; LCN I18N.</b></p> <p>RESULT: The following is displayed:</p>                                                                                                                                                                                                                                                                          |

| Step | Action                                                                              |
|------|-------------------------------------------------------------------------------------|
|      |  |

## 12.3 Selecting Fonts

Typically, FullHeight Font Size is set to 16 points, and HalfHeight Font Size is set to 8. A smaller size may have to be selected if the text does not fit within the box at run time. The default FullHeight and HalfHeight fonts are "lcn8x16.fon" and "lcn8x8.fon". They are installed in the following directory:

### Program Files\Honeywell\TPS\NativeWindow\Fonts

LCNstd.ttf and LCNhalf.ttf are direct replacements for the lcn8x16\_0.fon and lcn8x8\_0.fon fonts. They are usable with all screen resolutions and are the preferred font for screens set to 1024x768 or less. On high resolution screens (1600x1200) the light weight of the font (necessary for clarity at 640x480) makes parts of some characters appear dimmer than may be desired.

LCNhires.ttf and LCNhiresHalf.ttf are designed specifically for use on high resolution monitors (set at 1280x1024 or 1600x1200). These are heavier fonts with more curvatures than the LCNstd.ttf and LCNHalf.ttf. As a result, the characters may appear to be ragged at some sizes on lower resolution screens.

All of these fonts are monospace, sans serif. When used outside of the NativeWindow, a font size of 10 for LCNstd.ttf and LCNhires.ttf matches the character size of lcn8x16\_0.fon, and a font size of 7 for LCNhalf.ttf and LCNhiresHalf.ttf matches the character size of lcn8x8\_0.fon. The LCN fonts include the ASCII characters (0- 127) set plus the Kanji characters (encoded as 128- 191).

---

**CAUTION**

The Native Window will not be able to display text if you select a language and the selected fonts do not support the language.

---

## 12.4 Increasing the Font Size in the Native Window

---

**ATTENTION**

In Windows 2000 and greater, maximizing the Native Window does not increase the font size properly as it did in the Windows NT 4.0 implementation.

To properly increase the font size of the Native Window, use the procedure described in the section *Increasing the Font Size for the Native Window* in the *TPS System Implementation Guide*.

---



## 13. Shutdown Wait Limit Page

### 13.1 Page Overview

The Shutdown Wait Limit Page is used to control the timeout value associated with a forced shutdown of a GUS display.

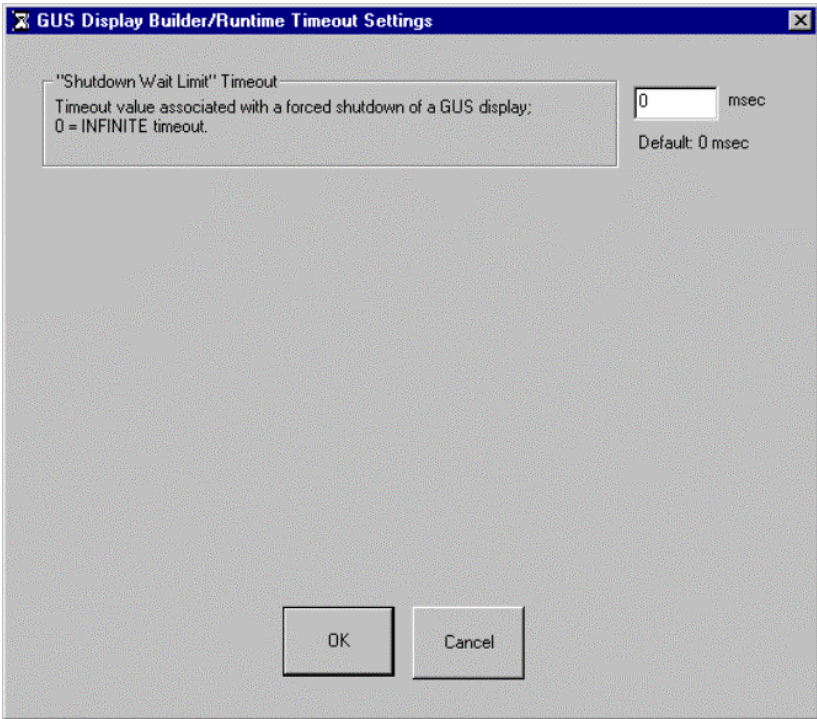
### 13.2 Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p><a href="#">For detailed instructions to start the Configuration Utility, refer to section 1.2 Starting the Configuration Utility.</a></p>                                                                                                                                                                                                        |
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; Shutdown Wait Limit.</b></p> <p>RESULT: The following is displayed.</p>                                                                                                                                                                                                                                                               |

### 13 Shutdown Wait Limit Page

#### 13.3 Using the Limit to Avoid Infinite Loops

---

| Step | Action                                                                              |
|------|-------------------------------------------------------------------------------------|
|      |  |

### 13.3 Using the Limit to Avoid Infinite Loops

#### Purpose

If your site is using displays build with the GUS Display Builder, then personnel responsible for those displays may have interest in the Shutdown Wait Limit Timeout setting. The timeout setting applies to GUS displays that use an event called OnDisplayShutdown. When a request is made to shutdown a display, all other currently executing scripts within that display run to completion before the OnDisplayShutdown script runs.

A display taking a long time to be displayed could be an indication that the PREVIOUS display (the one being closed to make room for the new display) had a problem shutting down, and had to wait for the Shutdown Wait Limit to force it to shutdown.

### Example Usage

An example of a problem that could occur is with an "Msg" object (used to provide progress dialog) in a GUS display under SafeView control that will not close if the code never breaks out of the loop.

The timeout setting here can force a shutdown of a display within a specified time, which means that the display itself can shutdown before all other currently executing scripts run to completion. When deciding to use this timeout option, users take responsibility that any scripts whose executions are being preemptively terminated are inconsequential.

### Guidelines

The Shutdown Wait Limit should allow sufficient time for scripts to complete, but shut down the display after a reasonable time if the script gets into a long or infinite loop. Be cautious when changing the Shutdown Wait Limit. Note that a value set between 1 and 249 milliseconds will be automatically rounded up to 250 milliseconds (1/4 second). Setting the Shutdown Wait Limit too high may delay the invocation of new displays.



#### ATTENTION

Setting the Shutdown Wait Limit to zero will disable the feature.

---



#### REFERENCE - INTERNAL

For additional information on scripting, refer to the *GUS Display Builder User's Guide*.

---

### **13 Shutdown Wait Limit Page**

#### **13.3 Using the Limit to Avoid Infinite Loops**

---

## 14. Signon Manager Page

### 14.1 Page Overview

This page is used to configure the **Signon Manager**.

The Signon Manager is used to track what user is logged on to a node and to allow Honeywell applications to validate that users have permission to perform certain operations.



#### REFERENCE - INTERNAL

For detailed instructions to configure Signon Manager, refer to the section *Configuring Signon Manager* in the *TPS System Implementation Guide*.

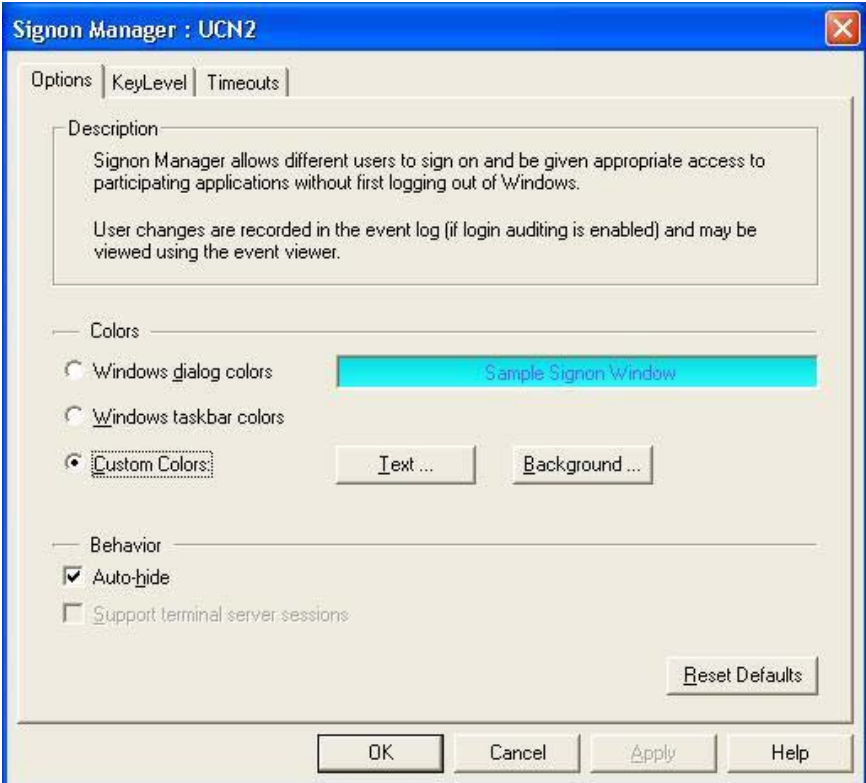
For information of how to use Signon Manager, refer to the section *Interfacing with Signon Manager* in the *TPS System Operations Guide*.

### 14.2 Accessing the Page

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|      | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |

**14 Signon Manager Page**  
**14.2 Accessing the Page**

---

| Step                                                                                | Action                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2                                                                                   | <p>Select the following:</p> <p><b>Configure &gt; Signon Manager.</b></p> <p>RESULT: The following is displayed.</p>                                                          |
|  | <p><b>ATTENTION</b></p> <p>The TPS KeyLevel is available for GUS and with limited functionality for Experion Station - TPS. See <i>KEYLEVEL Access</i> in the <i>Integrated Experion- TPS Nodes (ES- T, ESVT, ACE- T) User's Guide</i> for more information.</p> |

## 14.3 Signon Manager Options

| Options Tab                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Behavior - Auto hide<br>(default=on)                                               | <p>When this option is on, the Signon Manager window is hidden with only a thin strip visible. Signon Manager can be invoked by moving the mouse pointer over the thin strip.</p> <p>When this option is off, a small window indicating the currently signed on user remains on- screen at all times, unless covered by a higher priority window.</p>                                                                                                                         |
| Signon Display Colors<br>(default = blue text on light blue background)            | <p>This option allows the user to make the "current user" window either more or less obvious, depending on site preference. The following options are provided to change the colors of the window:</p> <ul style="list-style-type: none"> <li>a) Select Windows dialog colors</li> <li>b) Select Windows taskbar colors</li> <li>c) Select the <b>Text</b> and/or <b>Background</b> buttons. Each button displays the standard Windows color selection dialog box.</li> </ul> |
| KeyLevel Tab                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Trust keylevel changes from IKB<br>(default= on)                                   | <p>When this option is on, LCN keylevel changes originating from a physical keyswitch are used, even if the currently signed on user is not authorized at this level. For sites not using the physical keyswitch, this option is not used. For sites that do use the physical keyswitch, this option allows a quick keylevel change without the delay of entering a user id and password.</p>                                                                                 |
| Treat physical key OPR position as ViewOnly<br>(default= off)                      | <p>The Treat physical key OPR position as ViewOnly checkbox determines whether GUS displays will respond to a change when the IKB key is switched to OPR or VIEW. For the Native Window, this behavior is controlled by the NCF.</p>                                                                                                                                                                                                                                          |
| Automatically raise keylevel to maximum allowed for SignOn user<br>(default = off) | <p>When this option is on, TPS applications that are Signon Manager- aware (Native Window and GUS displays) automatically raise the LCN keylevel for a new signon to the highest keylevel allowed for the new user.</p> <p>When this option is <u>not</u> set, TPS applications will not automatically raise the keylevel for a new signon, but will always lower the key setting if the new user is not authorized at the current level.</p>                                 |

**14 Signon Manager Page**  
**14.3 Signon Manager Options**

---

|                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Default Workstation<br>Keylock<br><br>(default = View Only)     | This option allows a site to decide what the default keylevel will be for a workstation. This default keylevel is set whenever a Windows login or logout occurs. The default provides the starting point for the key setting for a workstation at the time a user logs onto the machine. If the auto- raise option above is enabled, this setting is of little concern.                                                         |
| <b>Timeouts Tab</b>                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Sign users off if there is no<br>activity<br><br>(default= off) | When this option is on, the users are signed off if the period of inactivity exceeds the configured limit.                                                                                                                                                                                                                                                                                                                      |
| Sign override users off<br><br>(default= off)                   | When this option is on, the override users are signed off if the period of inactivity exceeds the configured limit.<br><br>Select the option <b>User may select the timeout of up to</b> option to specify a limit for user selectable timeout.                                                                                                                                                                                 |
| Timeout Warning                                                 | The following configurable options are available for timeout warning.<br><br>A warning is raised before the configured number of seconds before actually signing off a timed out user.<br><br>Select <b>Show user interface if hidden</b> to display the user interface if it is hidden at the time of warning.<br><br>Select the <b>Play sound</b> to configure a sound file that needs to be played during a timeout warning. |

## 15. HCI Components Page

### 15.1 Reference to Other Documentation



#### REFERENCE - INTERNAL

For more information on the HCI Components Page of the Configuration Utility, refer to the *System Management Configuration Guide*.

---

## **15 HCI Components Page**

### **15.1 Reference to Other Documentation**

---

## 16. HCI Name Service Page

### 16.1 Reference to Other Documentation



#### REFERENCE - INTERNAL

For more information on the HCI Name Service page of the Configuration Utility, refer to the *System Management Configuration Guide*.

---

## **16 HCI Name Service Page**

### **16.1 Reference to Other Documentation**

---

## 17. Alarm Annunciator Sound Files Page

### 17.1 Page Overview

The Alarm Annunciator Sound Files page is used to configure wave files (.WAV - wave form audio files) for annunciation of TPS Native Window alarms. A wave file can be assigned to each of the three alarm contact levels on a station that has an OEP (Operator Entry Panel) in a Honeywell Icon Series Console or an IKB (Integrated Keyboard).

The Alarm Annunciator Sound Files page allows you to:

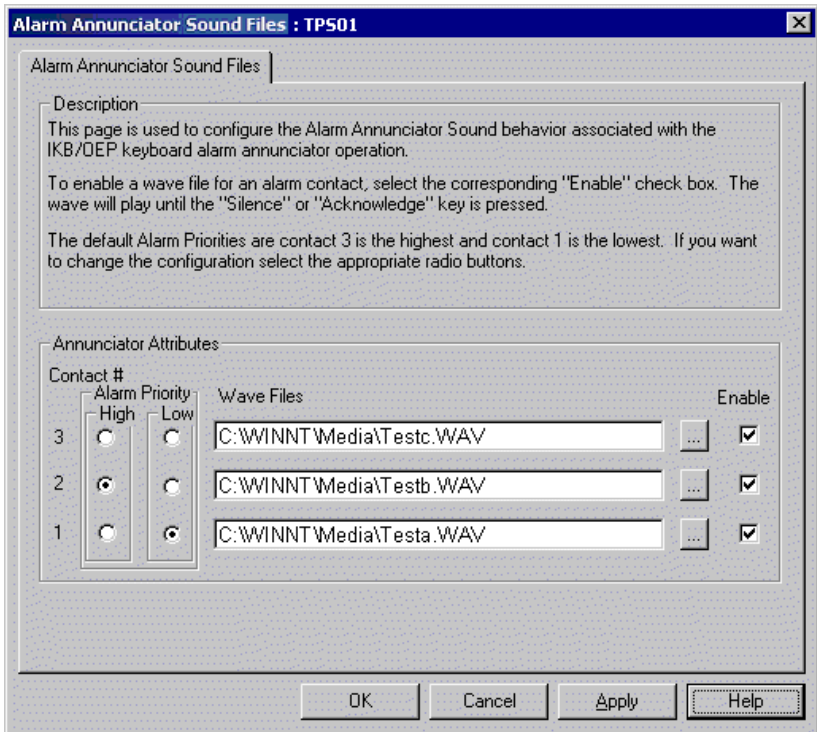
- Specify a wave file for each of the three alarm contacts.
- Specify which contacts are to have the highest and lowest priority.
- Enable/disable wave file alarm annunciation.

### 17.2 Accessing the Page

| Step                                                                                | Action                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                   | <p>For GUS and APP nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell TPS &gt; Configuration Utility.</b></p> <p>For LCN- connected Experion nodes select:</p> <p><b>Start &gt; All Programs &gt; Honeywell Experion PKS &gt; System Management &gt; Configuration Utility.</b></p> <p>Or,</p> <p>From the System Management Display, right-click the node of interest.</p> |
|  | <p><b>REFERENCE - INTERNAL</b></p> <p>For detailed instructions to start the Configuration Utility, refer to section 1.2 <i>Starting the Configuration Utility</i>.</p>                                                                                                                                                                                                                 |

**17 Alarm Annunciator Sound Files Page**  
**17.2 Accessing the Page**

---

| Step | Action                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2    | <p>Select the following:</p> <p><b>Configure &gt;Alarm Annunciator Sound Files.</b></p> <p>A page similar to the following is displayed.</p>  |

## 17.3 Page Content

### Contact #

When a station receives a command to turn on alarm contact 1, 2, or 3, it can play a wave file assigned to the contact. For TPN alarms, the NCF System Wide Values configuration determines what alarm events turn on each contact.

### Alarm Priority High/Low

The Alarm Priority High/Low radio buttons define the alarm annunciation priority of the alarm contacts that cause wave files to be played. If the station receives a command for a higher priority contact than the contact that is currently playing, the station preempts the lower priority contact and turns on the higher priority contact.

### Wave Files

Specify the wave file to be played when a contact is turned on. The default directory for the browse buttons is the standard location for Microsoft wave files.

### Enable checkbox

Check the Enable checkbox to enable the wave file annunciation. If the Enable checkbox is unchecked, the station ignores the command to play a wave file.



#### ATTENTION

- The IKB Server software driver supports the sound files function. It is an executable module implemented as a Windows service on stations that have an IKB (Integrated Keyboard) or an OEP (Operator Entry Panel).
  - The IKB Server responds immediately to changes made to the Alarm Annunciator Sound Files page.
  - Configuration of the Alarm Annunciator Sound Files page does not affect the alarm annunciation provided through IKB/OEP relay contacts.
-

## 17.4 Configuration Example

With the following configuration, the system provides alarm annunciation as described in the example.

### Example - NCF System Wide Values configuration

System Status alarms - Contact 3

Emergency Priority alarms - Contact 2

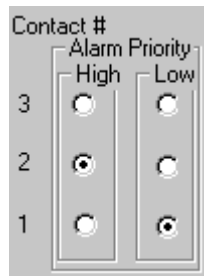
High and Low Priority alarms - Contact 1

### Example - Alarm Annunciator Sound Files configuration

Contact 3 - (no button selected - defaults to "Middle" priority)

Contact 2 - High button selected (Highest priority)

Contact 1 - Low button selected (Lowest priority)



### Example - Annunciation Results

- If a System Status alarm occurs (Contact 3), the station plays the sound file for Contact 3.
- If an Emergency Priority alarm occurs (Contact 2) while sound file 3 is still playing, the station stops sound file 3 and starts sound file 2, because Contact 2 is configured to have the highest priority.
- If a High or Low Priority alarm occurs (Contact 1) while sound file 3 is still playing the station continues playing sound file 3, because Contact 1 has the lowest priority.

## 18. Version Management Tool - Net

### 18.1 Overview

#### Purpose

You can use the Version Management Tool - Net (VMT-Net) to perform the following tasks:

- Identify the version of the TPS (GUS or APP) software installed on a node.
- Validate the installation for the TPS software products installed on a node.
- View the system information (hardware details, operating system details, and so on) of the node.
- Generate reports.

You can install VMT-Net on every TPS node from which you obtain software product information.

### 18.2 VMT-Net Installation

#### Install VMT-Net

You can install the Version Management Tool using the TPS software installation CD.

### 18.3 Getting Started

#### Invoke the Version Management Tool

To invoke the VMT-Net tool, perform the following steps:

| Step | Action                                                                                                                                                            |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Log on to the local node as the <b>local Administrator</b> or as another user who has Administrator privileges.                                                   |
| 2    | Click <b>Start &gt; All Programs &gt; Honeywell TPS &gt; VMT-NET</b> .<br><br>The VMT Page, which contains the Products Installed tab for the local node appears. |

## Version Management Tool-Net page

The **Products Installed** tab in the VMT-Net page displays the following information:

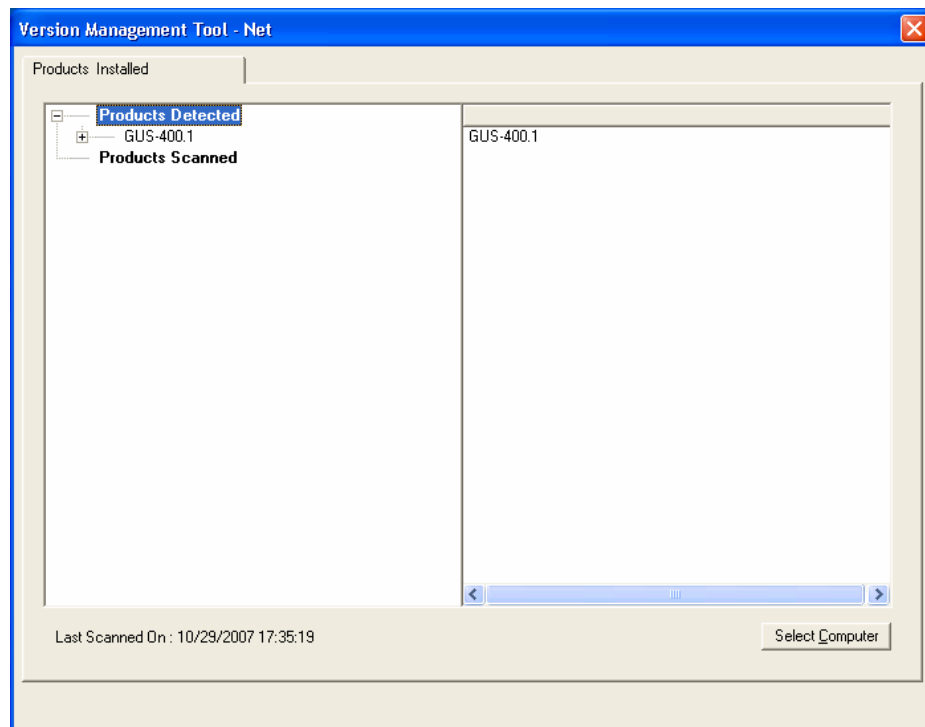
- Products Detected
- Products Scanned

### Products Detected

VMT-Net analyses and identifies the version of the TPS software installed on a local node. The version of GUS or APP and the list of software products installed appear under **Products Detected**.

After detecting the products, you can:

- Expand **Products Detected** tree to see the packages in a particular product.
- Expand a package to see the files in the package.

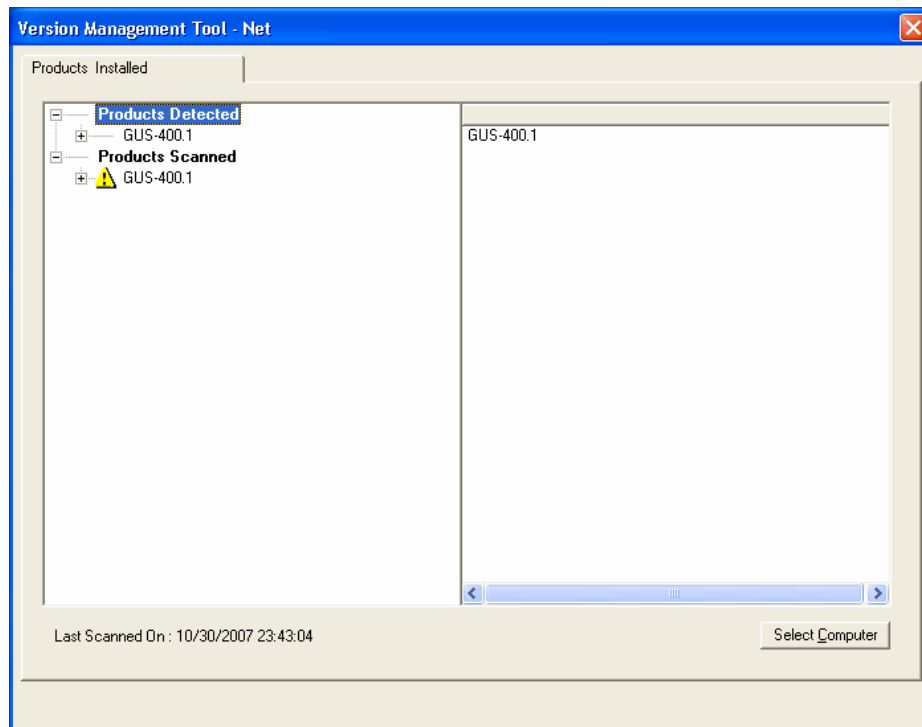


### **Products Scanned**

You can scan the TPS product detected and listed under **Products Detected** in the navigation pane, using the VMT-Net tool. The tool scans the installation status of every product installed on a node. The scan result appears under the **Products Scanned**.

After scanning the products, you can:

- Expand the **Products Scanned** tree to see the packages in a particular product.
- Expand a package to see the files in the package.
- Select a file to view the details of the file on the right pane.



## 18.4 VMT-Net Operating procedures

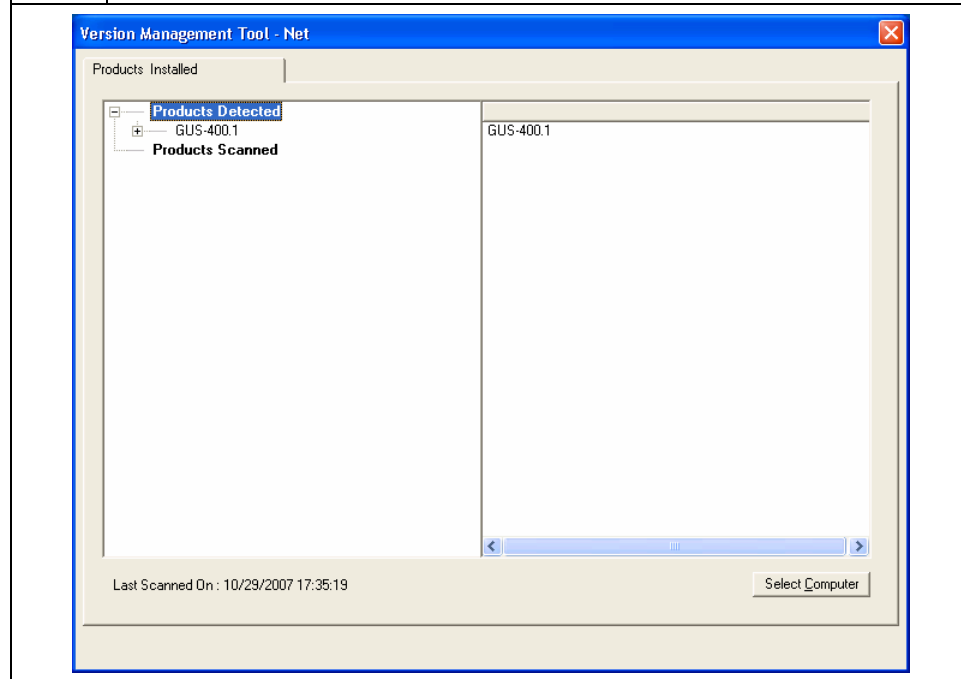
### Detect product

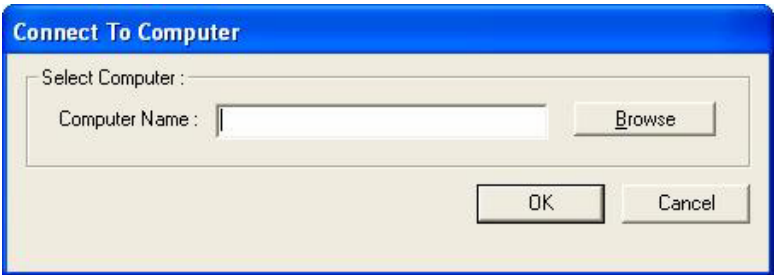
You can use VMT-Net to detect the products installed on a single node, remote node and/or multiple nodes.

#### *Detect product on remote node*

To detect the product and packages installed on a remote node, perform the following steps:

| Step | Action                                                                 |
|------|------------------------------------------------------------------------|
| 1    | Click <b>Start &gt; All Programs &gt; Honeywell TPS &gt; VMT-Net</b> . |
|      | <b>RESULT: The Version Management Tool – Net window appears.</b>       |



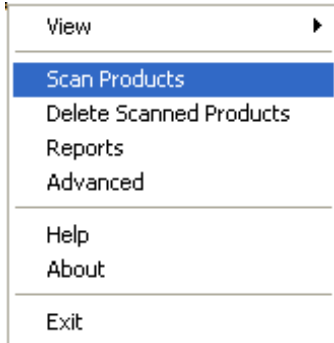
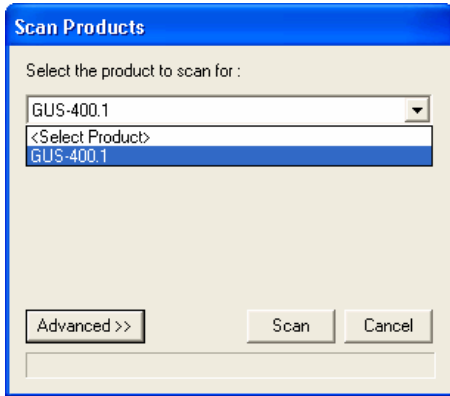
| Step | Action                                                                                                                                                                                                                                                                                               |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |  <b>ATTENTION</b> <ul style="list-style-type: none"> <li>You must have administrator access privilege to connect to the remote node.</li> <li>Ensure that you have installed VMT-Net on the remote node.</li> </ul> |
| 2    | Click <b>Select Computer</b> .                                                                                                                                                                                                                                                                       |
|      | <p>RESULT: The <b>Connect To Computer</b> dialog box appears.</p>                                                                                                                                                 |
| 3    | Type the <b>Computer Name</b> .<br>Or<br>Click <b>Browse</b> to select the computer.                                                                                                                                                                                                                 |
| 4    | Click <b>OK</b> .                                                                                                                                                                                                                                                                                    |
|      | RESULT: The products installed on a remote node appear under Products Detected in the navigation pane.                                                                                                                                                                                               |

### **Detect product on multiple nodes**

To detect products on multiple nodes, see Advanced option.

## Scan product

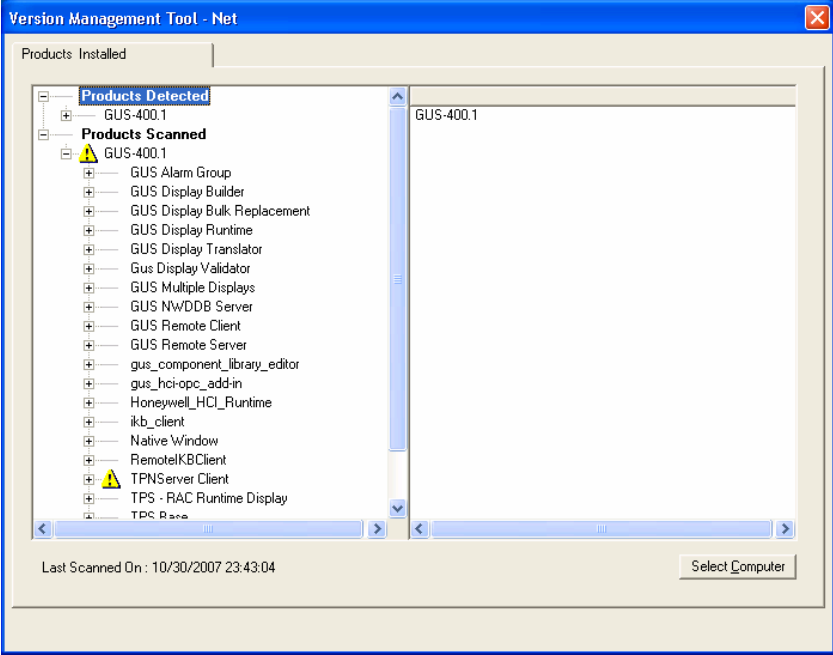
To scan a product, perform the following steps:

| Step | Action                                                                                                                                           |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Right-click the left frame of the <b>Product Installed</b> tab.                                                                                  |
|      | <p>RESULT: The following shortcut menu appears.</p>           |
| 2    | Select <b>Scan Products</b> .                                                                                                                    |
|      | <p>RESULT: The <b>Scan Products</b> dialog box appears.</p>  |
| 3    | Select the product to scan, and then click <b>Scan</b> .                                                                                         |

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <div><b>ATTENTION</b><ul style="list-style-type: none"><li>To scan the release packages, click <b>Advanced&gt;&gt;</b>.</li></ul><div><div>Scan Products</div><div>Select the releases to scan for :</div><div><div><input checked="" type="checkbox"/> Honeywell Admin Support Files-040.001.20100</div><div><input checked="" type="checkbox"/> Honeywell Packaged Redistributable Files-040.001.20</div><div><input type="checkbox"/> Honeywell Security Model - Workstation-040.001.2011</div><div><input type="checkbox"/> Honeywell System Management Runtime-040.001.20*</div><div><input type="checkbox"/> Honeywell_HCI_Runtime-040.001.20100</div></div><div>&lt;  &gt;</div><div><div>&lt;&lt; Simple</div><div>Scan</div><div>Cancel</div></div></div></div> <ul style="list-style-type: none"><li>Select the releases to scan, and then click <b>Scan</b>.</li></ul> |

## 18 Version Management Tool - Net

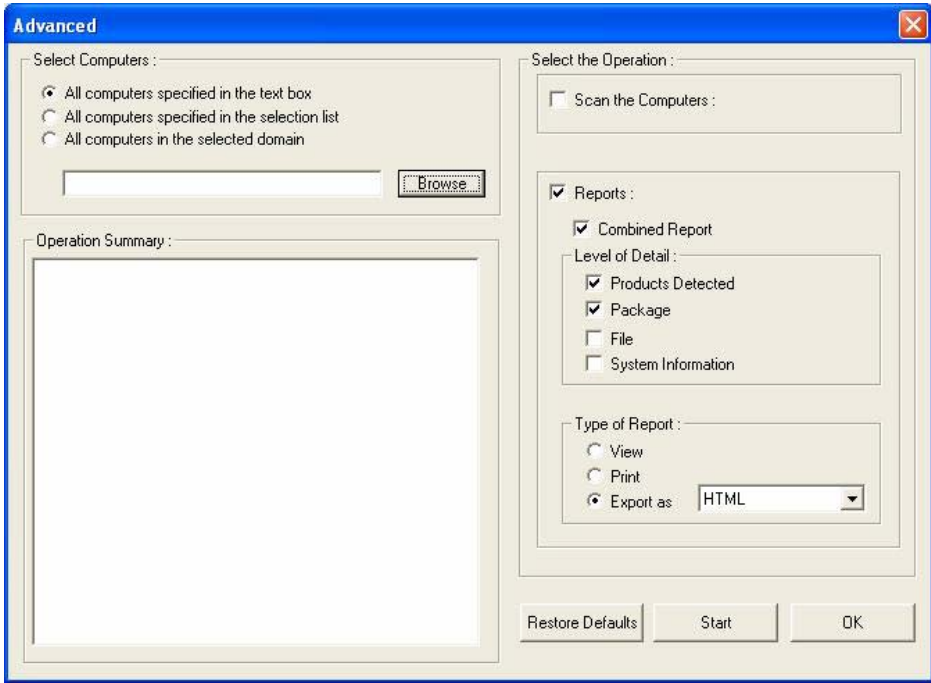
### 18.4 VMT-Net Operating procedures

| Step | Action                                                                                                                                                                                                                                                      |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>After scanning the node completely, the package installation status appears under <b>Products scanned</b>, in the navigation pane.</p>  <p>See Error indications.</p> |

#### Advanced option

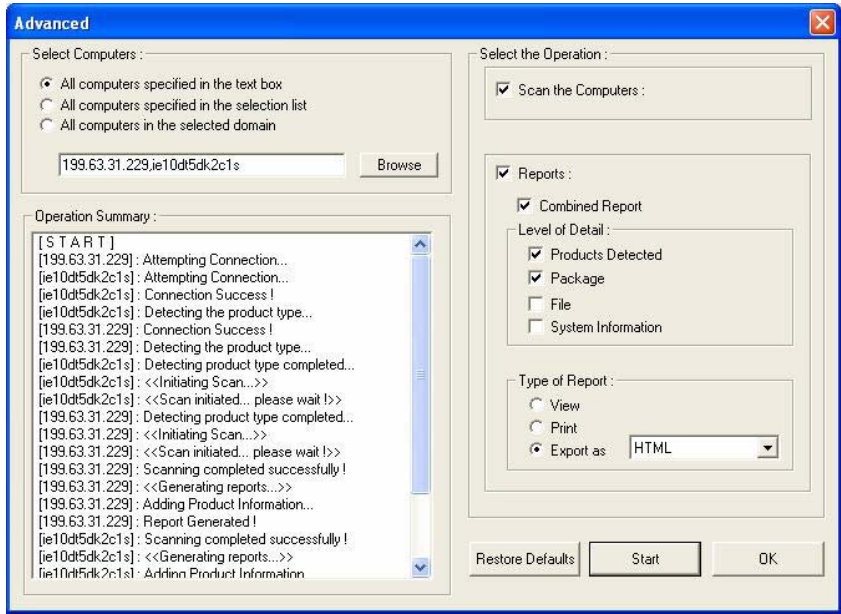
You can perform common operations for groups of remote nodes using functions available on the **Advanced** dialog box as follows:

| Step | Action                                                           |
|------|------------------------------------------------------------------|
| 1    | Select <b>Advanced</b> from the <b>Scan Products</b> dialog box. |
|      | RESULT: The <b>Advanced</b> dialog box appears.                  |

| Step | Action                                                                                                                                                                                                                                                                                                                                       |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                                                                                                                                                                                                                                           |
| 2    | <p>Select one of the following options under <b>Select Computers</b>:</p> <ul style="list-style-type: none"> <li>• All computers specified in the text box</li> <li>• All computers specified in the selection list</li> <li>• All computers in the selected domain</li> </ul> <p>Or</p> <p>Click <b>Browse</b> to select the computers.</p> |
| 3    | <p>Select <b>Scan the computers</b> to scan the selected computers.</p>                                                                                                                                                                                                                                                                      |
| 4    | <p>Select required options under <b>Reports</b>.</p> <p>See <i>Generate Report</i>.</p>                                                                                                                                                                                                                                                      |
| 5    | <p>Click <b>Start</b>.</p>                                                                                                                                                                                                                                                                                                                   |
|      | <p>The sequence of operations performed by the VMT-Net tool appears under <b>Operation Summary</b>.</p>                                                                                                                                                                                                                                      |

## 18 Version Management Tool - Net

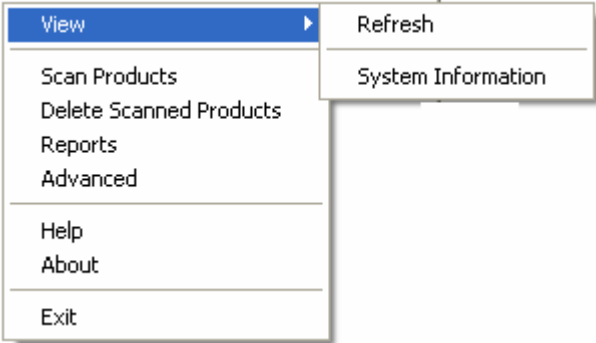
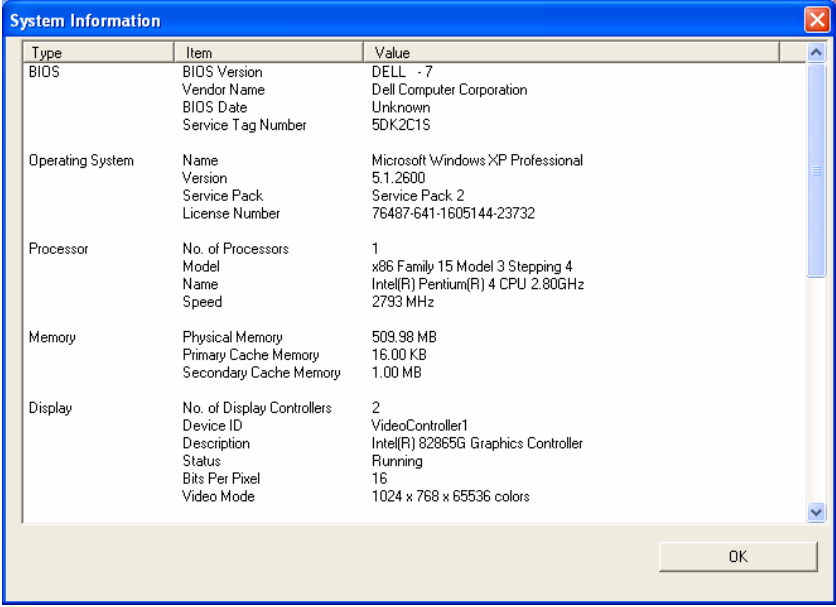
### 18.4 VMT-Net Operating procedures

| Step | Action                                                                              |
|------|-------------------------------------------------------------------------------------|
|      |  |

#### View System information

You can view the hardware details and the operating system of a node. To view the system information, perform the following steps:

| Step | Action                                                          |
|------|-----------------------------------------------------------------|
| 1    | Right-click the left frame of the <b>Product Installed</b> tab. |

| Step | Action                                                                                                                                                                                                  |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>RESULT: The following shortcut menu appears.</p>                                                                   |
| 2    | <p>Click <b>View &gt; System Information</b>.</p> <p>RESULT: The <b>System Information</b> dialog box appears.</p>  |
|      | <p>RESULT: The following information appears in the dialog box.</p>                                                                                                                                     |

**18 Version Management Tool - Net**  
**18.4 VMT-Net Operating procedures**

---

| Step | Action                      |                                                                                                     |
|------|-----------------------------|-----------------------------------------------------------------------------------------------------|
|      | <b>BIOS</b>                 | BIOS Version<br>Vendor Name<br>BIOS Date<br>Service Tag Number                                      |
|      | <b>Operating System</b>     | Name<br>Version<br>Service Pack<br>License Number                                                   |
|      | <b>Processor</b>            | Number of processors<br>Model<br>Name<br>Speed                                                      |
|      | <b>Memory</b>               | Primary Memory<br>Primary Cache Memory<br>Secondary Cache Memory                                    |
|      | <b>Display</b>              | Number of Display Controllers<br>Device ID<br>Description<br>Status<br>Bits per Pixel<br>Video Mode |
|      | <b>Hard Disk and Drives</b> | Drive Name<br>Description<br>Total Disk Space<br>Total Free Space                                   |

**Access Privileges**

VMT-Net allows you to perform different operations on the respective nodes based on the privileges of a profile logged on to that node.

A user with a profile P can perform the following:

- Log on to Node C and perform few operations on node C.
- Log on to Node C and connect to Node A.
- Log on to Node C and perform few operations on Node A and Node B, using the **Advanced** tab.

A user with a normal profile P can perform the following operations on the respective nodes:

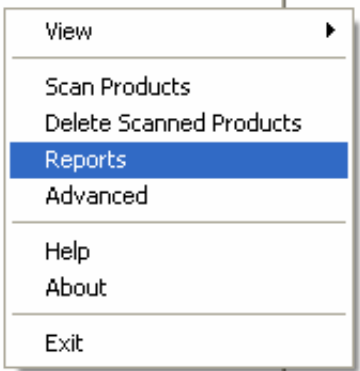
- View products installed.
- View system information.
- Generate Reports.

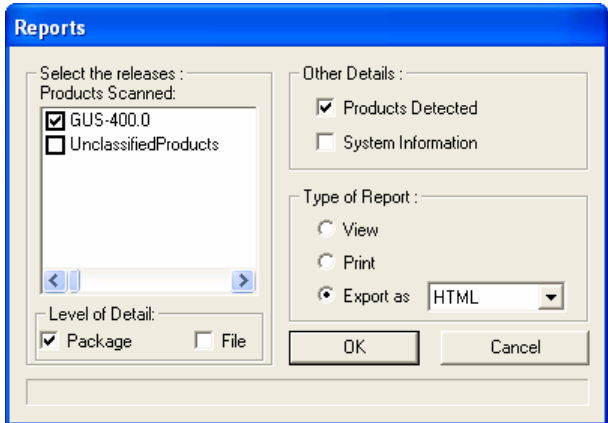
A user with the profile that has administrative privileges on that node can scan that node.

## 18.5 Reports

### Generate Report

You can generate reports of the scanned product. To generate reports, perform the following steps:

| Step | Action                                                                                                                                        |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Right-click the left frame of the <b>Product Installed</b> tab.                                                                               |
| 2    | Select <b>Reports</b> from the shortcut menu. <div></div> |

| Step | Action                                                                                                                                                                                                                                                                                           |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p>RESULT: The <b>Reports</b> dialog box appears.</p>                                                                                                                                                          |
| 3    | Select one or more releases from <b>Products Scanned</b> that must be included in the report.                                                                                                                                                                                                    |
| 4    | <p>Select the following options under <b>Level of Detail</b>.</p> <p><b>Package</b> – To generate package level detail for the product.</p> <p><b>File</b> – To include filenames of the product in the report. The list of files under each package is displayed with the file information.</p> |
| 5    | <p>Select the following options under <b>Other Details</b>.</p> <p><b>Products Detected</b> – To include the detected products in the report.</p> <p><b>System Information</b> – To include the system information in the report.</p>                                                            |
| 6    | <p>Select one of the following options under <b>Type of Report</b>.</p> <p><b>View</b> – To view the report details displayed on the screen.</p> <p><b>Print</b> – To print the report details.</p> <p><b>Export as</b> – To save the report details in HTML or CSV format.</p>                  |
| 7    | Click <b>OK</b> .                                                                                                                                                                                                                                                                                |
|      | RESULT: The tool generates the report in the format as specified.                                                                                                                                                                                                                                |

## 18.6 Error indications

### Error Icons

VMT-Net indicates the detected anomalies such as missing files or version mismatch using different icons.



- Indicates a version mismatch



- Indicates the missing packages and files

The following table describes the meaning of these icons when associated to products, packages, and files:

|                                                   | No Icon                                            |                                                                      |                            |
|---------------------------------------------------|----------------------------------------------------|----------------------------------------------------------------------|----------------------------|
| <b>Product</b> (For example: GUS 400.1)           | The product has no installation errors.            | At least one of the packages of the product has installation errors. | N/A                        |
| <b>Package</b> (For example: GUS Display Runtime) | The package has no installation errors.            | At least one of the files of the package has installation errors.    | N/A                        |
| <b>File</b> (For example: gpb.exe)                | The file is installed and has the correct version. | The file is present, but has an incorrect version.                   | The file is not installed. |

The installation status that appears under **Products Scanned** must be updated frequently using the **Scan Product** option.

---

## **18 Version Management Tool - Net**

### **18.6 Error indications**

---



**Honeywell**

---

Honeywell Process Solutions  
1860 W. Rose Garden Lane  
Phoenix, AZ 85027 USA