

HVLP programming :
- DVTC


Eric SENART

25/01/2018

BorgWarner

Programming the HVLP


- Go to the Helper and under the Software menu you will find **Enter Bootloader Mode.**
- As soon as you enter Bootloader mode the green led on the controller will flash twice and then go off completely.

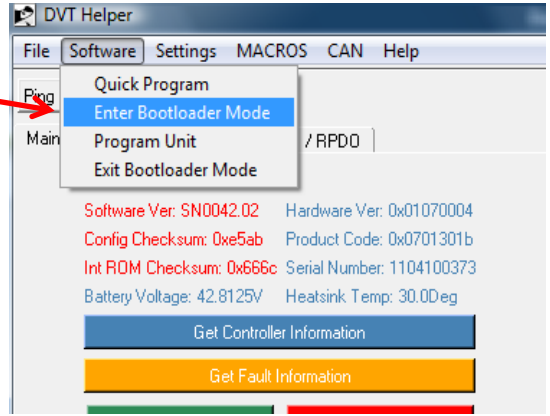


© BorgWarner Inc.

Programming the HVLP : mcp

- After the unit enters into Bootloader mode click on **Program Unit** under the same Software menu.
- A new window will be displayed to select the appropriate mcp software for the unit. Click Open to start download into the controller.

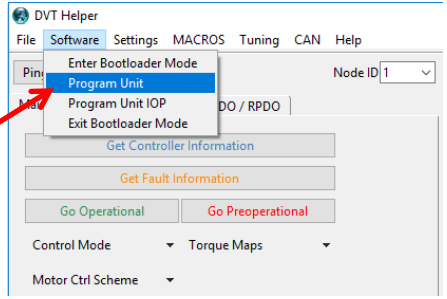


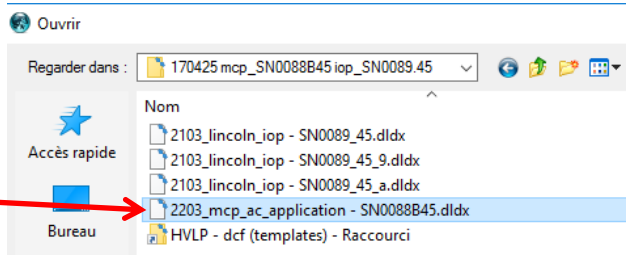

© BorgWarner Inc.

Programming the HVLP : mcp

- The DVTC will then be automatically installing the mcp DLDx into the controller, its progress can be viewed in the “Information” window on DVTC.

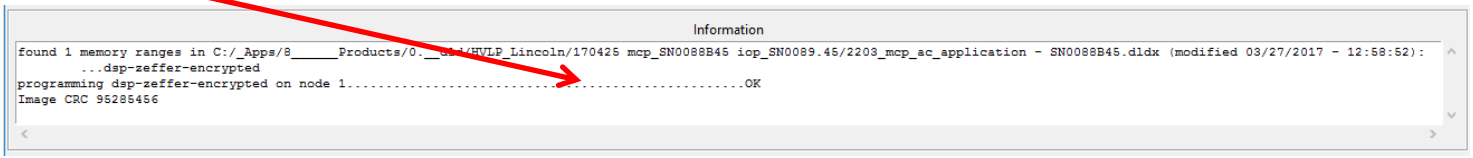



- When progress is finished as OK, the DLDx is successfully installed.

© BorgWarner Inc.

Programming the HVLP : iop

- After the ‘mcp’ DLDx is successfully installed. Open the software tab again, and click on **Program Unit IOP** under the same Software menu.
- A new window will be displayed to select the appropriate ‘iop’ dldx software for the unit. Click Open to start download into the controller.

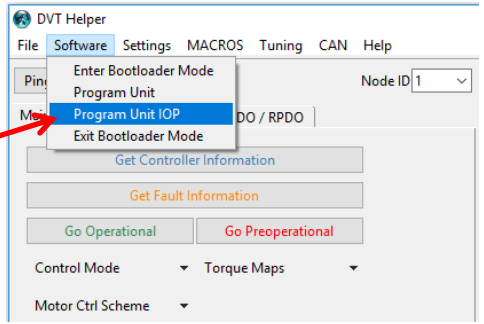


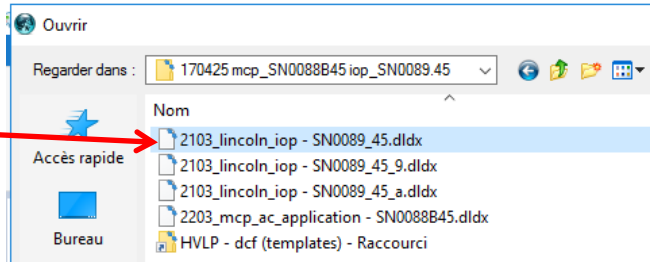

© BorgWarner Inc.

Programming the HVLP : iop

- The DVTC will then be automatically installing the iop DLDx into the controller, its progress can be viewed in the “Information” window on DVTC.

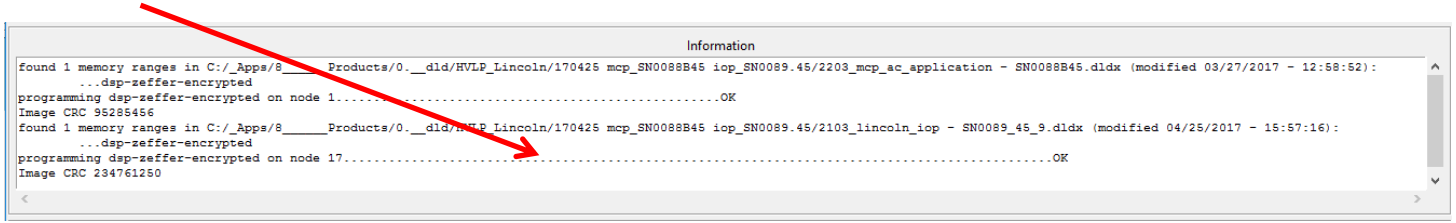

- When progress is finished as OK, the DLD is successfully installed. Open the software tab again, and select “Exit Bootloader Mode” to complete the process.
- Check the controller is receiving information through CAN window.
- Click on Controller information (Helper) to ensure the correct software has been uploaded.

© BorgWarner Inc.

Thank you!



© BorgWarner Inc.

BorgWarner