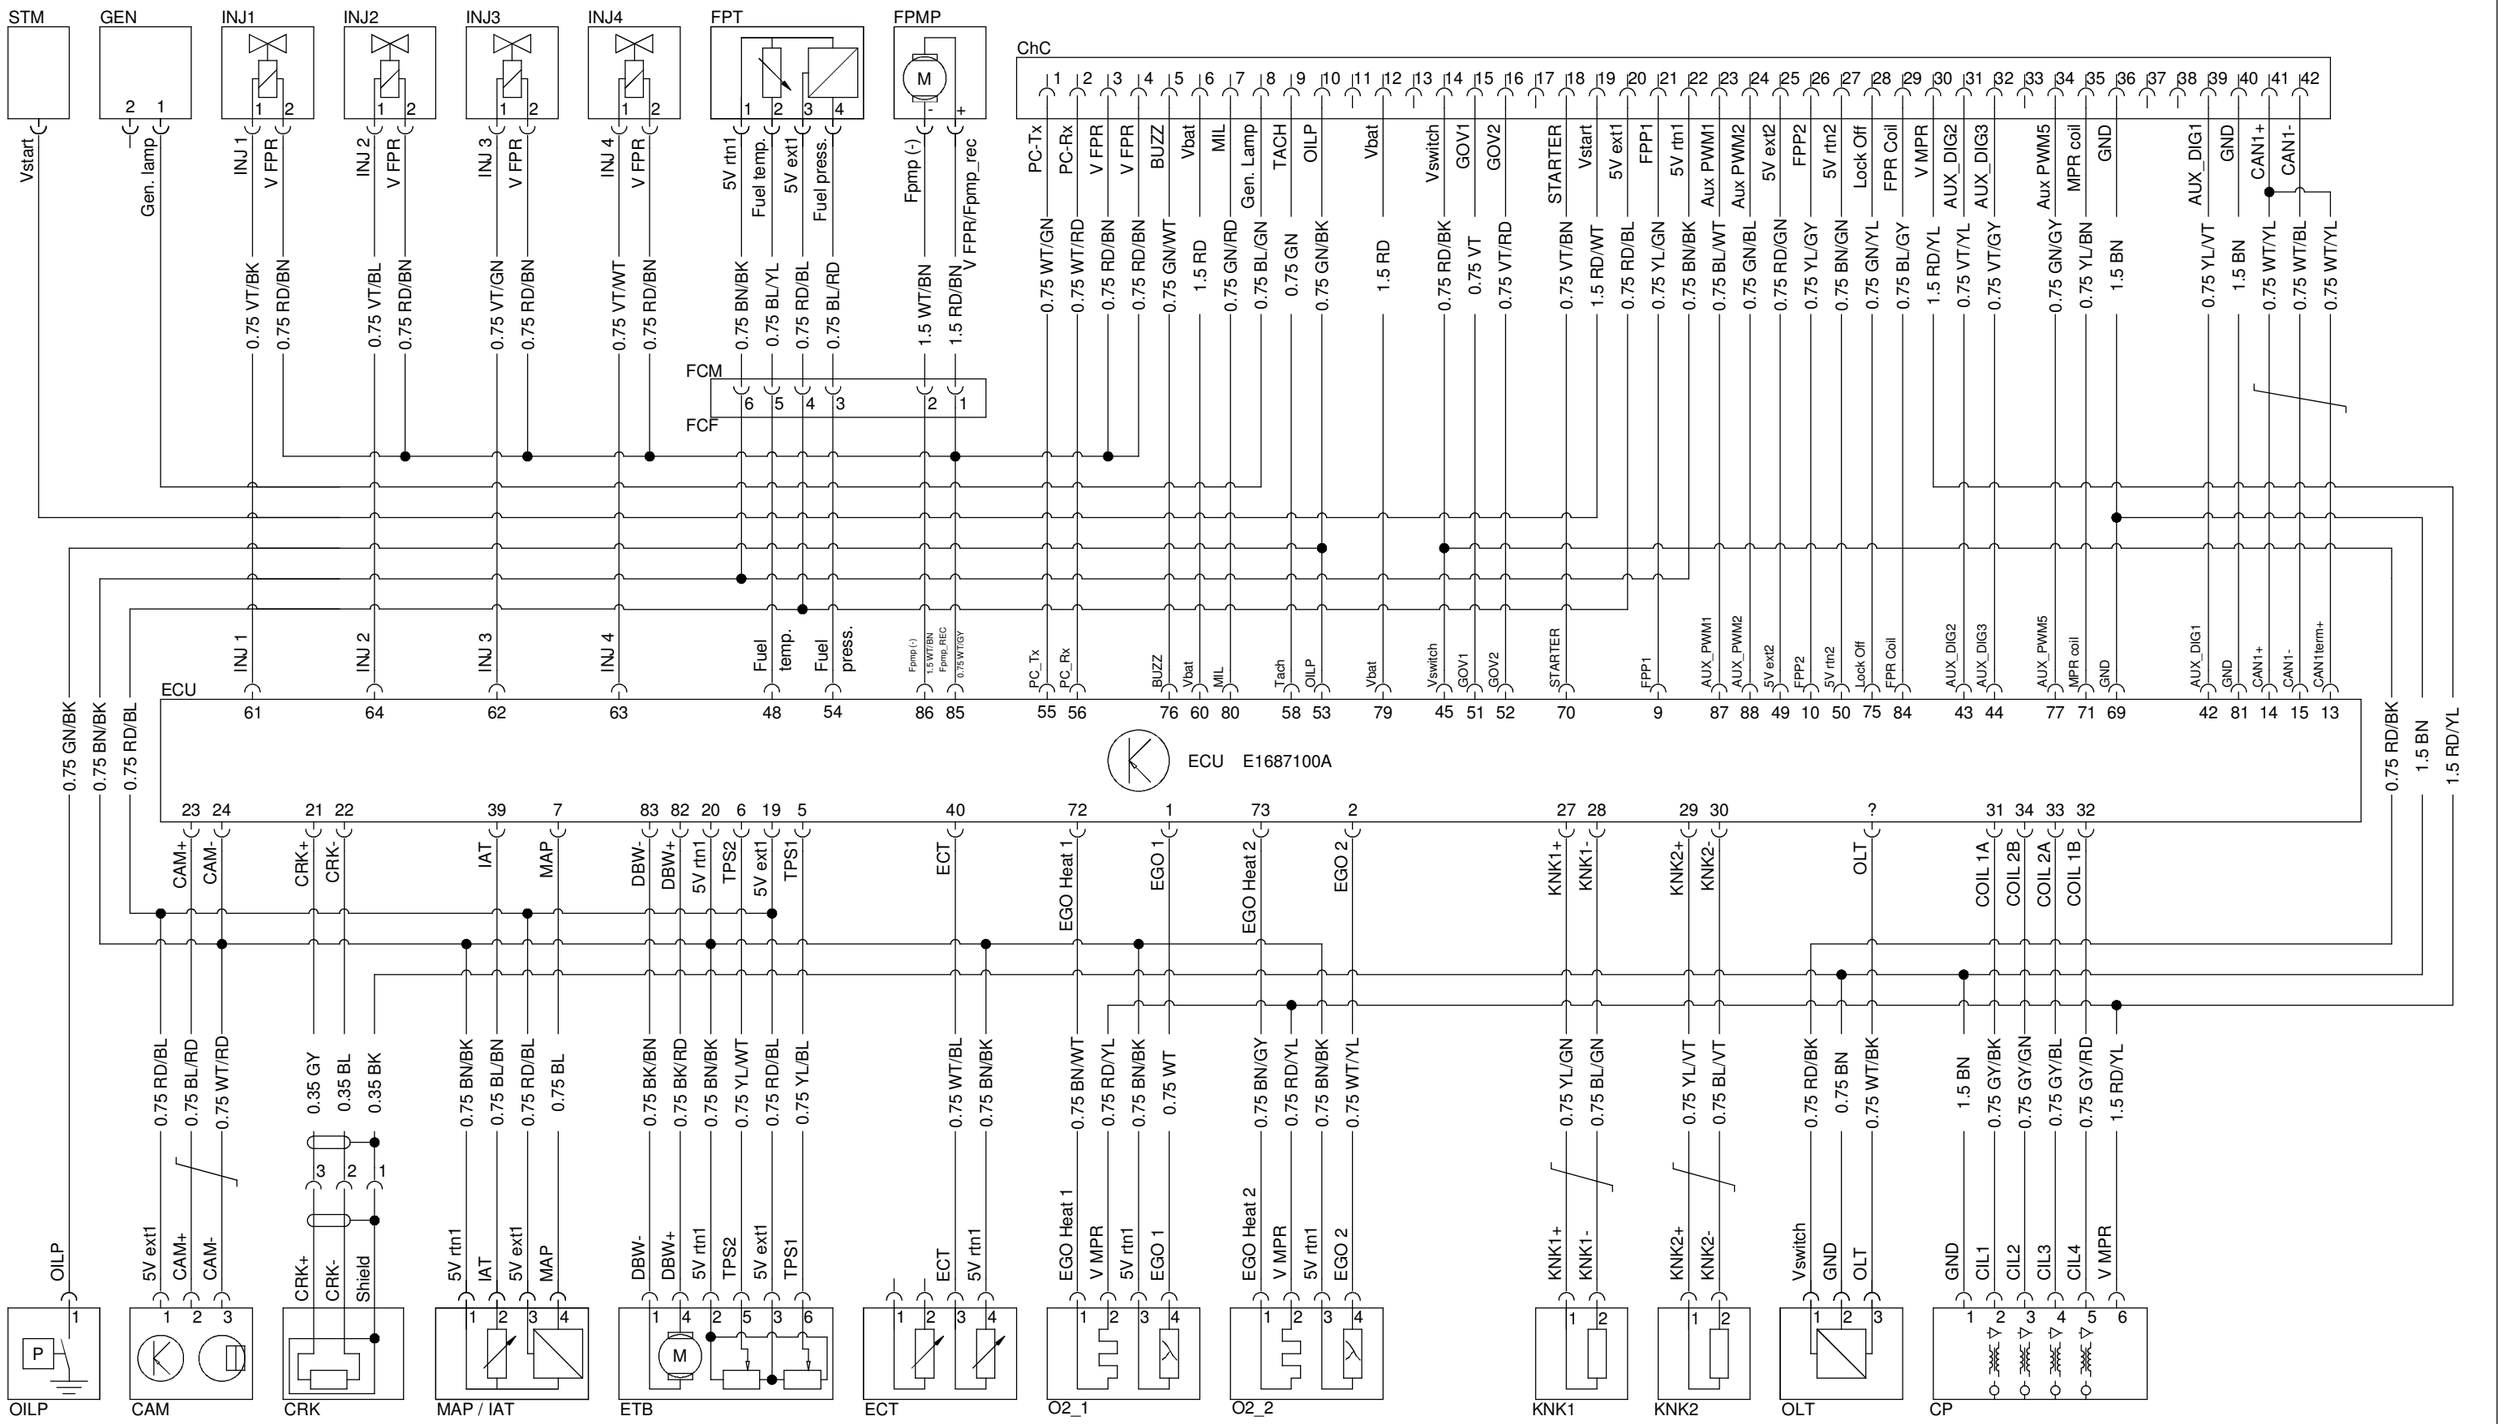


Used sensors, connectors and actuators

CAM	CAMshaft position sensor	5-9	GEN	Generator lamp connector	4-7	O2_1	Oxigen sensor 1 (pre cat)	35-40
ChC	Chassis connector	34-77	IAT	Intake air temperature sensor	15-20	O2_2	Oxigen sensor 2 (post cat)	41-46
CP	Coil pack	64-71	INJ1	Gasoline injector 1	8-11	OILP	Oil pressure sensor	1-4
CRK	Crankshaft position sensor	10-14	INJ2	Gasoline injector 2	12-15	OLT	Oil level / temperature	59-63
ECT	Engine coolant temperature sensor	29-34	INJ3	Gasoline injector 3	16-19	STM	Starter motor connector	1-3
ECU	Electronic control unit	6-78	INJ4	Gasoline injector 4	20-23			
ETB	Electronic throttle body	21-28	KNK1	Knock sensor 1	51-54			
FPMP	Fuel pump	30-33	KNK2	Knock sensor 2	55-58			
FPT	Fuel pressure / - temperature sensor	24-29	MAP	Manifold absolute pressure sensor	15-20			

Firing order:
1-3-4-2

Revision:		Name:	Date:

Engine Systems Technologies B.V.

Format	Drawn:	F. Bentvelsen	sheet:	1	Title:	Part No:
A3	Date:	1-jul-2013	of	1	schematic 2.0 Gasoline	6 00 xxx *xx