
WG1605 model: ECU system schematic

WG1605-G

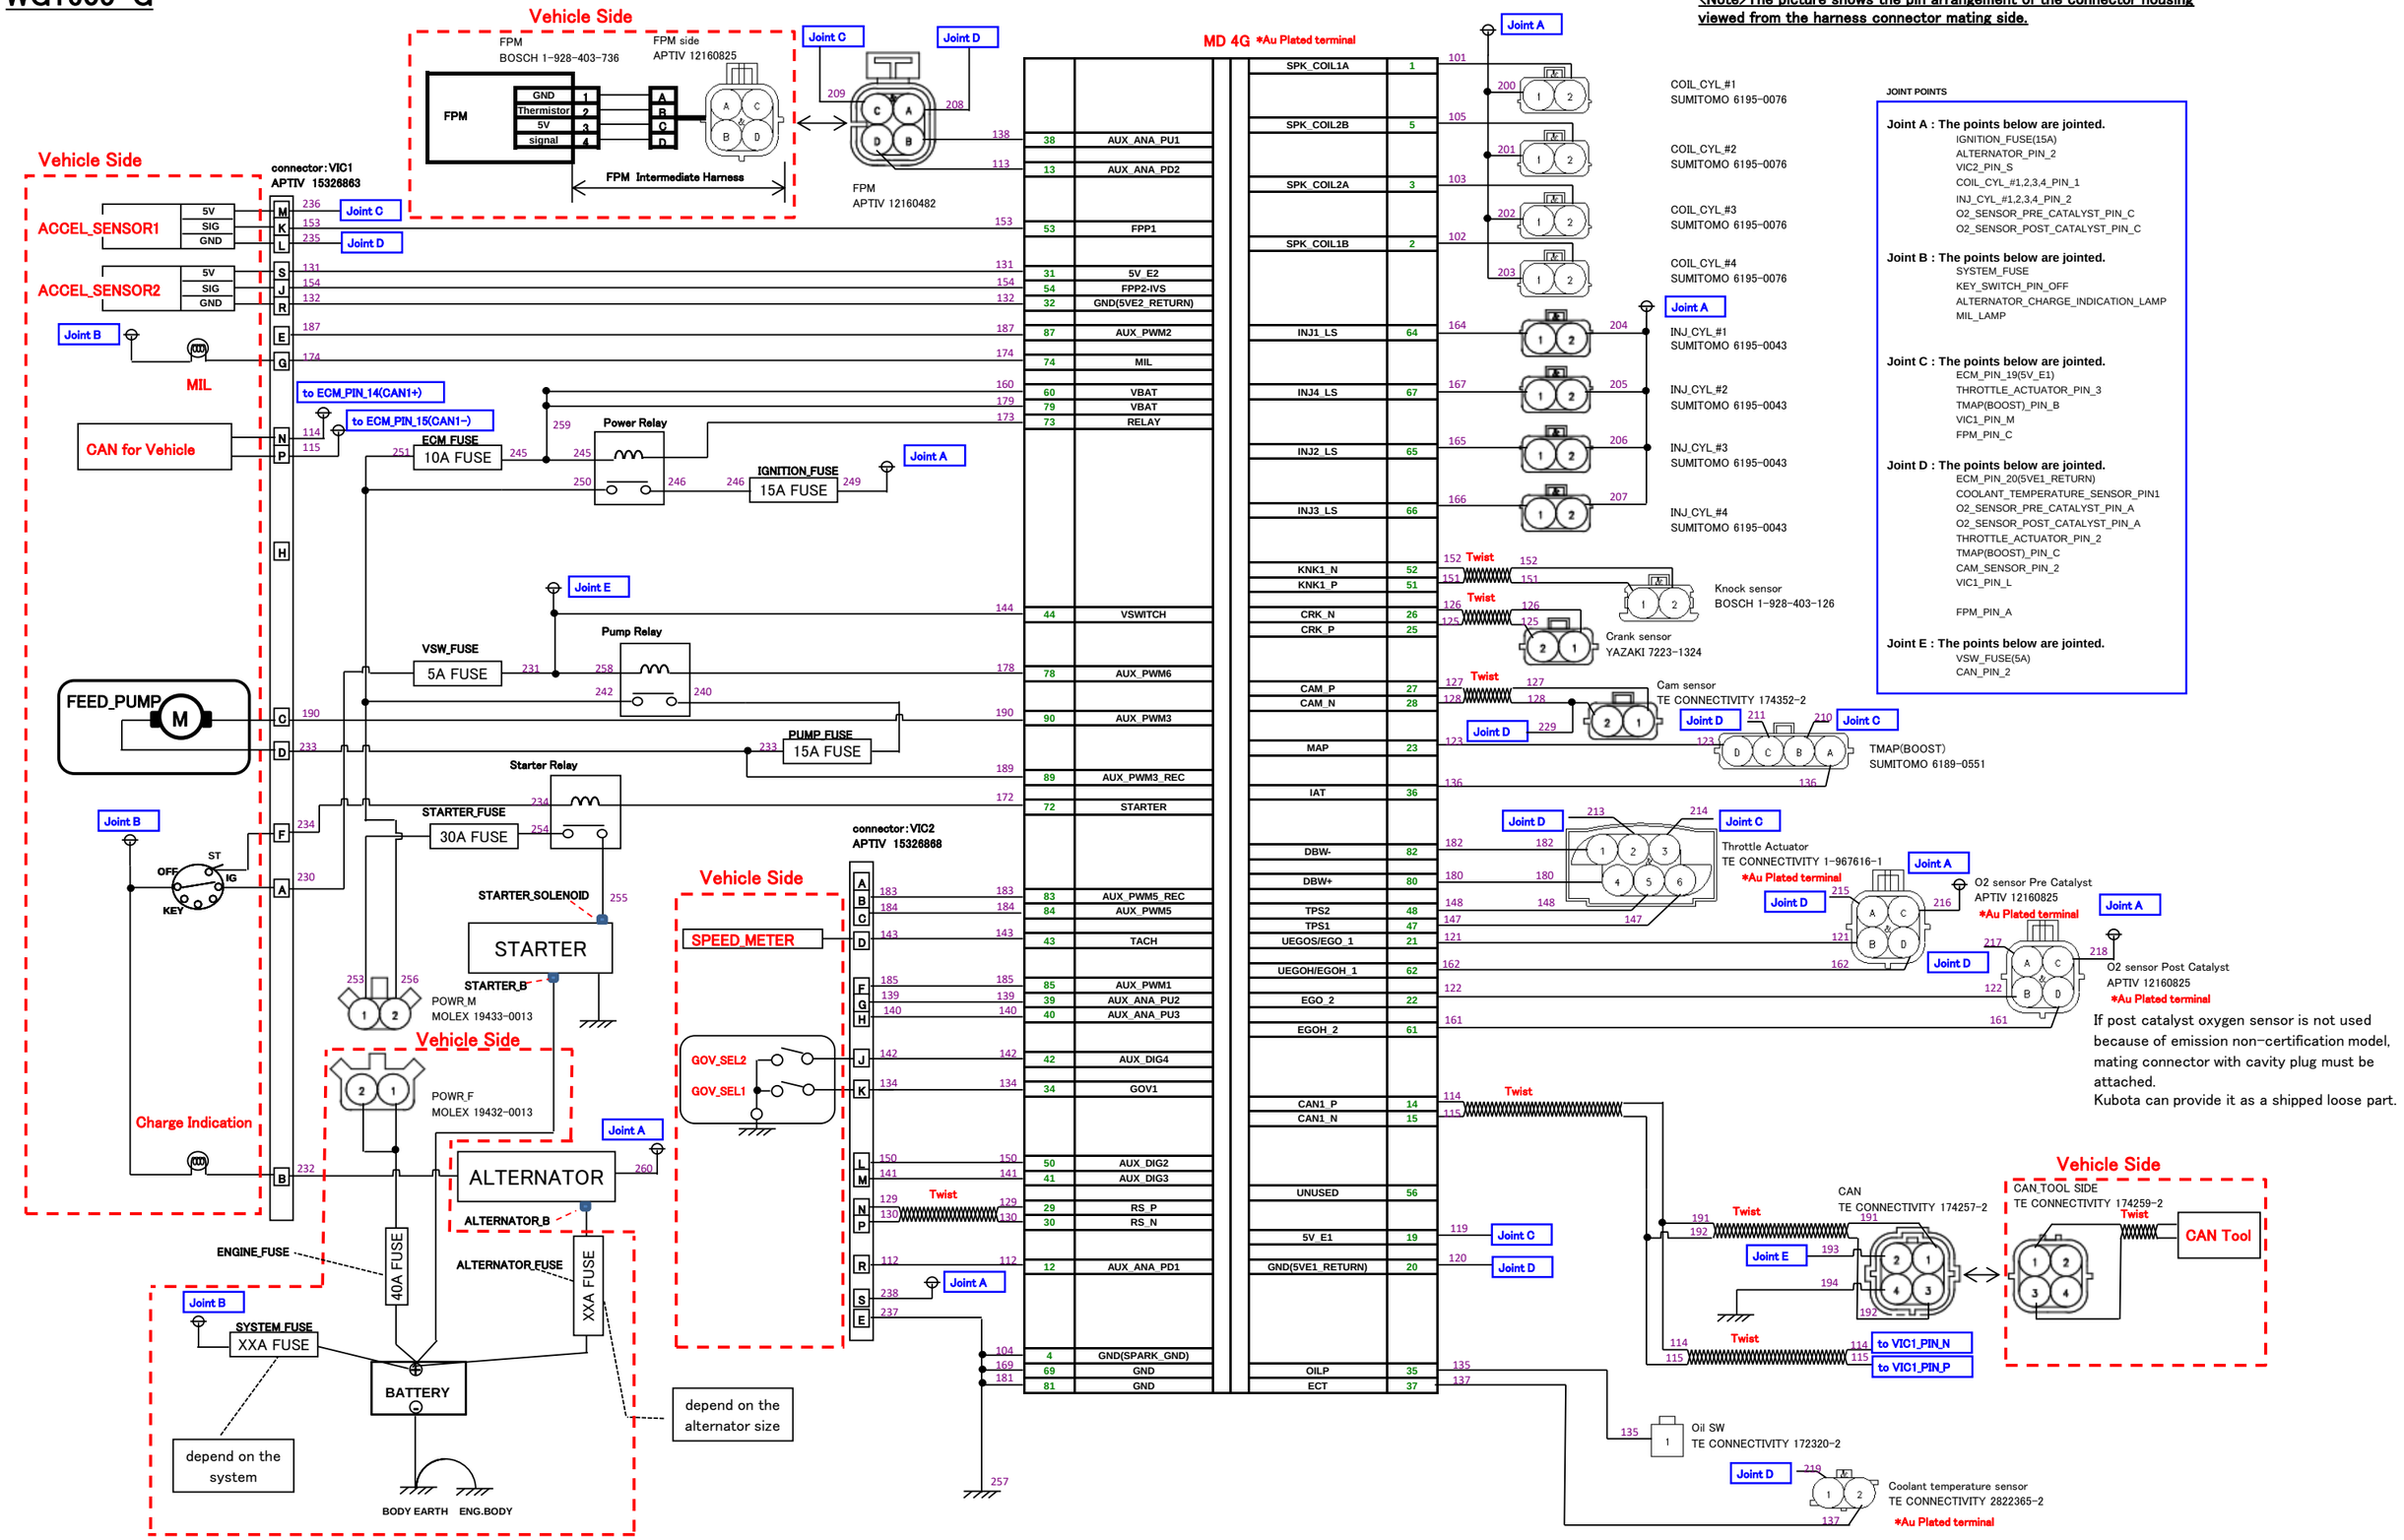

<Note>The picture shows the pin arrangement of the connector housing viewed from the harness connector mating side.

JOINT POINTS

Joint A : The points below are jointed.
- IGNITION_FUSE(15A)
- ALTERNATOR_PIN_2
- VIC2_PIN_S
- COIL_CYL_#1,2,3,4_PIN_1
- INJ_CYL_#1,2,3,4_PIN_2
- O2_SENSOR_PRE_CATALYST_PIN_C
- O2_SENSOR_POST_CATALYST_PIN_C

Joint B : The points below are jointed.
- SYSTEM_FUSE
- KEY_SWITCH_PIN_OFF
- ALTERNATOR_CHARGE_INDICATION_LAMP
- MIL_LAMP

Joint C : The points below are jointed.
- ECM_PIN_19(5V_E1)
- THROTTLE_ACTUATOR_PIN_3
- TMAP(BOOST)_PIN_B
- VIC1_PIN_M
- FPM_PIN_C


Joint D : The points below are jointed.
- ECM_PIN_20(5VE1_RETURN)
- COOLANT_TEMPERATURE_SENSOR_PIN1
- O2_SENSOR_PRE_CATALYST_PIN_A
- O2_SENSOR_POST_CATALYST_PIN_A
- THROTTLE_ACTUATOR_PIN_2
- TMAP(BOOST)_PIN_C
- CAM_SENSOR_PIN_2
- VIC1_PIN_L
- FPM_PIN_A

Joint E : The points below are jointed.
- VSW_FUSE(5A)
- CAN_PIN_2

If post catalyst oxygen sensor is not used because of emission non-certification model, mating connector with cavity plug must be attached.
Kubota can provide it as a shipped loose part.

WG1605 model: ECU system schematic

WG1605-GL

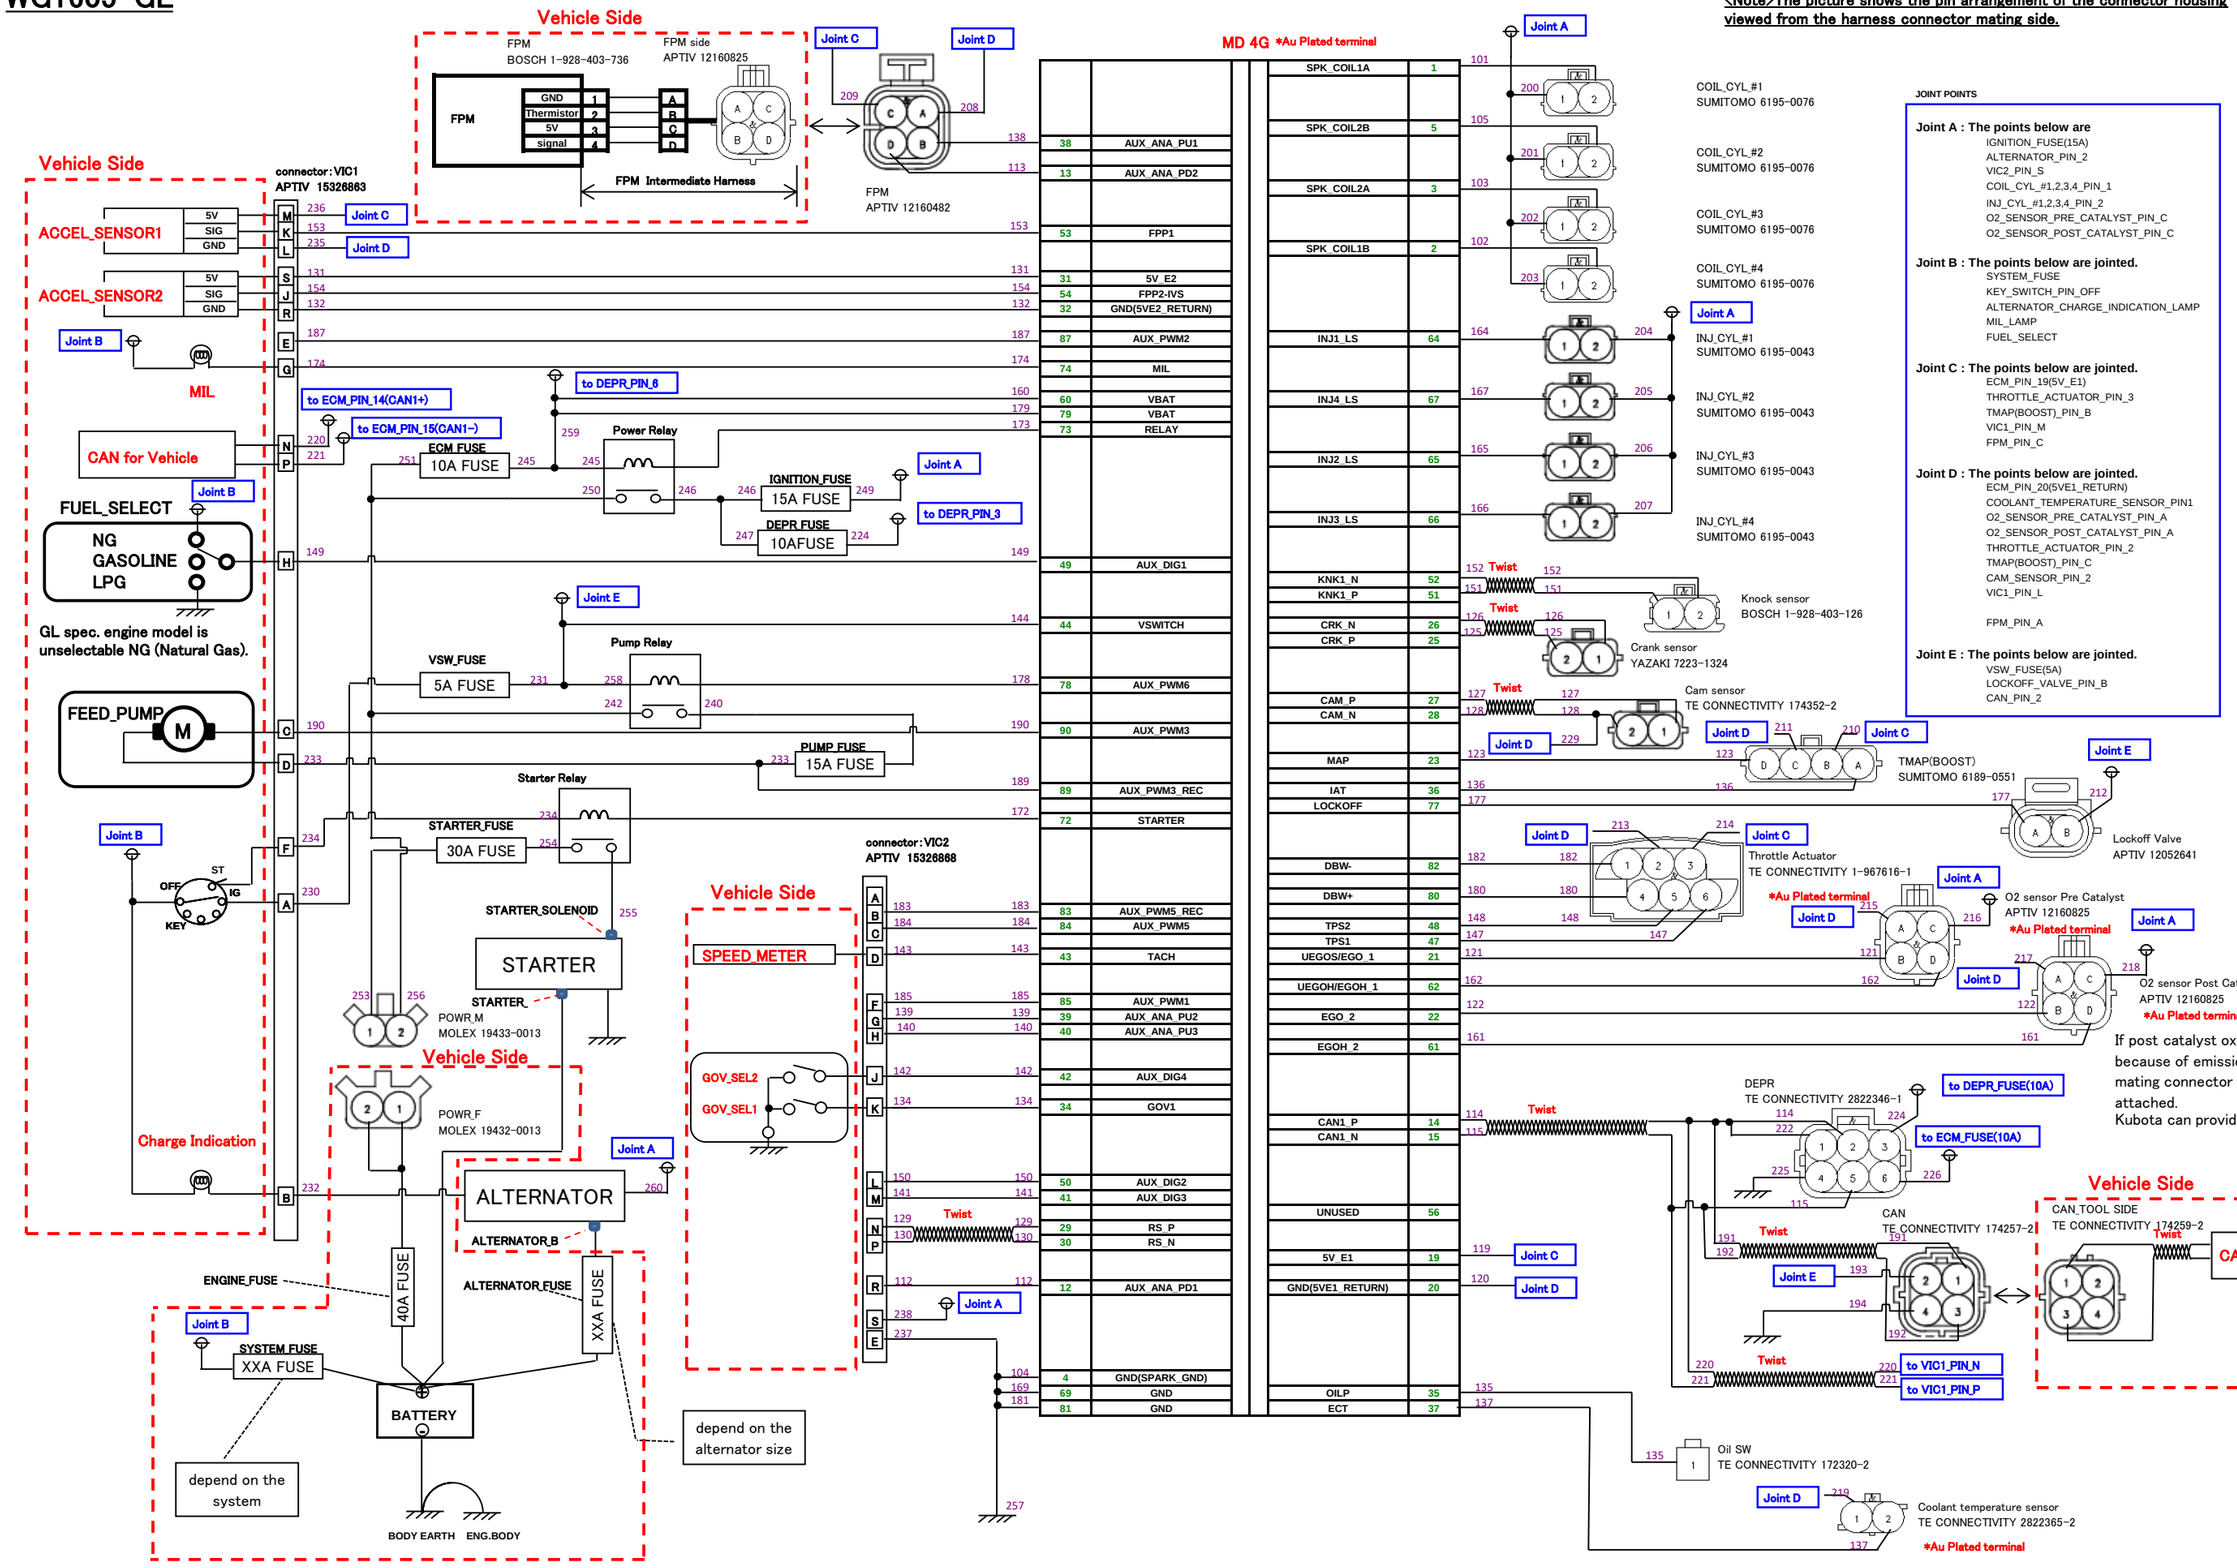

<Note>The picture shows the pin arrangement of the connector housing viewed from the harness connector mating side.

JOINT POINTS

Joint A : The points below are
IGNITION_FUSE(15A)
ALTERNATOR_PIN_2
VIC2_PIN_S
COIL_CYL_#1,2,3,4_PIN_1
INJ_CYL_#1,2,3,4_PIN_2
O2_SENSOR_PRE_CATALYST_PIN_C
O2_SENSOR_POST_CATALYST_PIN_C

Joint B : The points below are jointed.
SYSTEM_FUSE
KEY_SWITCH_PIN_OFF
ALTERNATOR_CHARGE_INDICATION_LAMP
MIL_LAMP
FUEL_SELECT

Joint C : The points below are jointed.
ECM_PIN_19(5V_E1)
THROTTLE_ACTUATOR_PIN_3
TMAP(BOOST)_PIN_B
VIC1_PIN_M
FPM_PIN_C

Joint D : The points below are jointed.
ECM_PIN_20(5VE1_RETURN)
COOLANT_TEMPERATURE_SENSOR_PIN1
O2_SENSOR_PRE_CATALYST_PIN_A
O2_SENSOR_POST_CATALYST_PIN_A
THROTTLE_ACTUATOR_PIN_2
TMAP(BOOST)_PIN_C
CAM_SENSOR_PIN_2
VIC1_PIN_L


FPM_PIN_A

Joint E : The points below are jointed.
VSW_FUSE(5A)
LOCKOFF_VALVE_PIN_B
CAN_PIN_2

If post catalyst oxygen sensor is not used because of emission non-certification model, mating connector with cavity plug must be attached.
Kubota can provide it as a shipped loose part.

WG1605 model: ECU system schematic

WG1605-L / WG1605-LN / WG1605-N

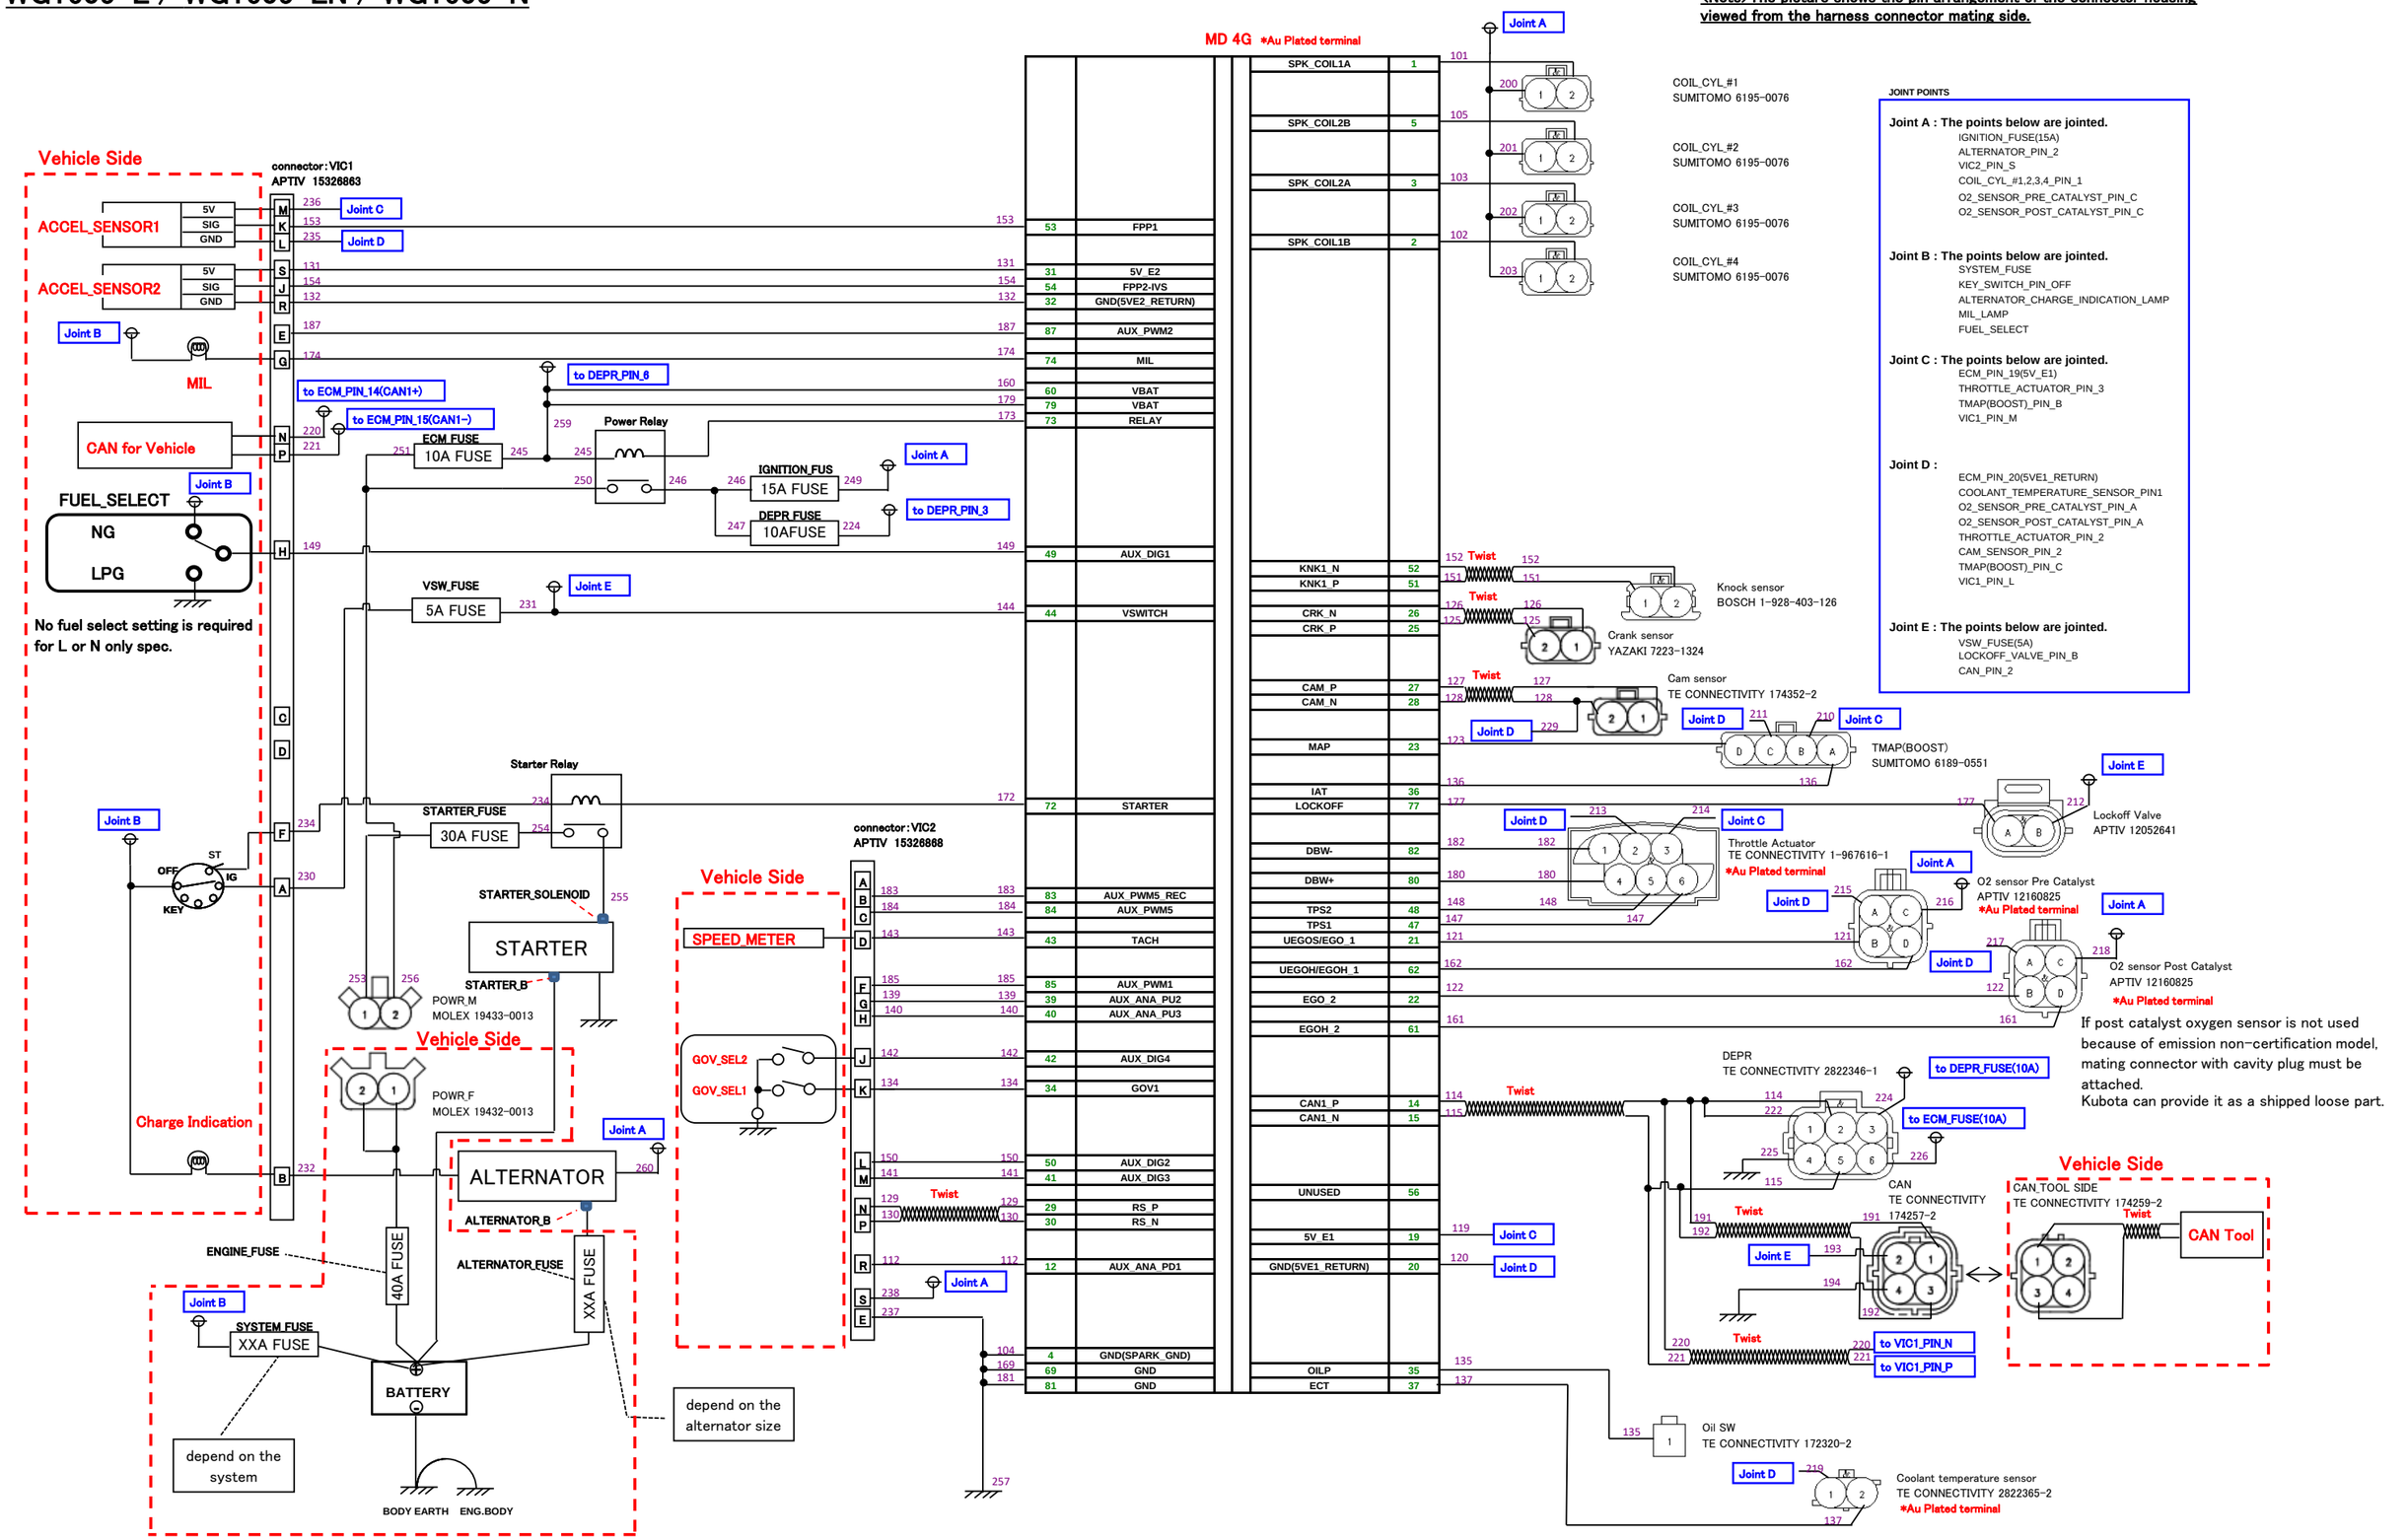

NOTES

This document is applied for Kubota WG1605 models for OEM.

This document is intend to provide installation guide for the engine to the application.

The information in this document subject to change without notice.

The latest document is available on the K-iSS website. Printed copies are for reference only.

Copyright 2011 KUBOTA Engine Division All rights reserved

REVISION HISTORY

File Name	Remarks	Date
KORD3_19-233_ELECTRIC AL_SYSTEM_for_LSI.pdf	Revise diagrams of "9. WIRING DIAGRAM".	Jun. 5, 2019
KORD3_21-140_System_schematic_for_WG1605.pdf	Separate the document file.	Jul. 6, 2021