

Yealink T34W Setup Guide

T34W

Wi-Fi IP phone · Dual-band 2.4G/5G · No cable required

Kit: Remote Worker Kit

1 Unbox and check contents




Open the box and confirm you have:

- ✓ T34W phone body
- ✓ Handset with coiled cord
- ✓ Power adapter
- ✓ Phone stand

The T34W works over **Wi-Fi or Ethernet**.

Wi-Fi: Menu → Settings → Basic Settings → Wi-Fi → On.

2 Connect Ethernet cable and handset

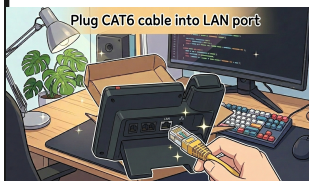

Plug **Cat6 cable** into the **LAN port on the back** of the phone. Other end to your PoE switch or router.

PoE switch: Phone powers on automatically. No adapter needed.

No PoE: Also plug the power adapter into the DC5V port.

Plug the **handset coiled cord** into the handset port on the left side.

✓ **Tip:** Wired Ethernet gives better call quality — use a cable if your desk has a nearby wall port.

3 Wait for the phone to boot



Once power is connected the phone screen shows **Initializing**.

While it boots, open a browser and type the phone IP address to reach the **Yealink web interface** login page.

Login: **admin / admin**

Wait **60-90 seconds** for the phone to fully boot.

4 Open web interface and enter SIP credentials



Press **OK** on phone → note the **IPv4 address**.

Type it into your browser. Login: **admin / admin**.

Go to **Account** → **Account 1** → **Basic**. Enter:

- Register Name — SIP username
- Password — SIP password
- SIP Server 1 — provider server address

Click **Confirm**. Status tab → **Registered**.

Quick Troubleshooting

Problem	Fix
Phone won't register	Check SIP password on Account tab. Verify SIP server address.
Calls connect, no audio	RTP ports 10000-12000 must be open UDP both ways on your firewall.
Echo on calls	Reduce speaker or handset volume. Disable SIP ALG on router.
Calls drop after a few min	Set Register Expiry to 120 on Account → Basic.
Can't access web interface	Confirm phone IP on Status screen. Must be on same network as computer.
Wi-Fi connects but won't register	Disable SIP ALG on home router. Check UDP 5060 is not blocked.
Choppy audio on Wi-Fi	Switch to 5GHz band. Enable QoS on router. Consider wired Ethernet.