

Yealink T54W Setup Guide

T54W

Advanced receptionist phone · 16 lines · Wi-Fi + Bluetooth built-in

Kit: Front Desk / Receptionist Kit

1 Unbox and check contents



Open the box and confirm you have:


- ✓ T54W phone body
- ✓ Handset with coiled cord
- ✓ Ethernet cable
- ✓ Power adapter (if no PoE)
- ✓ Phone stand

The T54W has **16 line keys** , **Wi-Fi + Bluetooth built-in** , and a **4.3-inch color screen** — built for reception desks.

✓ Tip:

For a busy reception desk always use wired Ethernet — Wi-Fi dropouts cause missed calls.

2 Connect Ethernet cable and handset

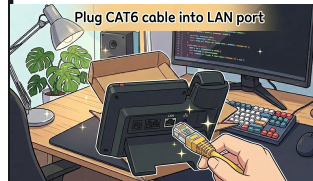

Plug **Cat6 cable** into the **LAN port on the back** of the phone. Other end to your PoE switch or router.

PoE switch: Phone powers on automatically. No adapter needed.


No PoE: Also plug the power adapter into the DC5V port.

Plug the **handset coiled cord** into the handset port on the left side.

✓ Tip:

PoE ports have a  icon or 'PoE' label — one cable handles power and network.

3 Wait for the phone to boot

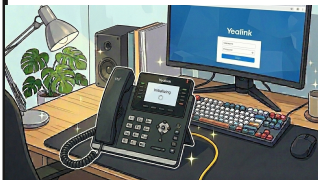

Once power is connected the phone screen shows **Initializing** .

While it boots, open a browser and type the phone IP address to reach the **Yealink web interface** login page.

Login: **admin / admin**

Wait **60-90 seconds** for the phone to fully boot.

4 Open web interface and enter SIP credentials



Press **OK** on phone → note the **IPv4 address** . Type it into your browser. Login: **admin / admin** .

Go to **Account** → **Account 1** → **Basic** . Enter:

- Register Name — SIP username
- Password — SIP password
- SIP Server 1 — provider server address

Click **Confirm** . Status tab → **Registered** .

✓ Tip:

All three fields come from your provider's welcome email. NeedIT can configure this remotely.

Quick Troubleshooting

Problem	Fix
Phone won't register	Check SIP password on Account tab. Verify SIP server address.
Calls connect, no audio	RTP ports 10000-12000 must be open UDP both ways on your firewall.
Echo on calls	Reduce speaker or handset volume. Disable SIP ALG on router.
Calls drop after a few min	Set Register Expiry to 120 on Account → Basic.
Can't access web interface	Confirm phone IP on Status screen. Must be on same network as computer.
BLF keys not updating	Go to Account → Advanced in the web interface and set Out Dialog BLF to Enabled. Also check that the key type is BLF, not Speed Dial.
Bluetooth headset cuts out	Move headset closer to phone. Remove other nearby Bluetooth devices.
Wi-Fi drops during busy hours	Use wired Ethernet for reception. Wi-Fi unreliable at high call volume.