


Yealink WH62 DECT Headset Guide

WH62

Wireless headset · 525ft DECT range · Desk phone + PC simultaneously

Kit: Remote Worker / Front Desk

1 Unbox and check contents

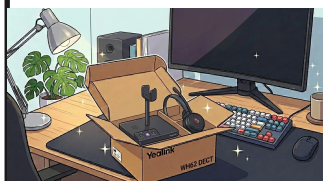

Confirm you have:


- ✓ WH62 wireless headset
- ✓ WDD60 DECT USB dongle
- ✓ USB-C charging cable
- ✓ DECT base station
- ✓ Quick start card

Headset and dongle are **pre-paired from the factory** — they connect automatically when you plug the dongle in.

✓ **Tip:**

DECT has 525-foot range and zero Wi-Fi interference — **more reliable than Bluetooth.**

2 Place base station and charge headset

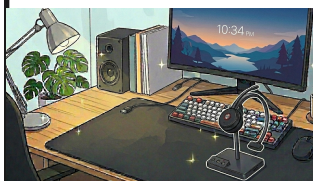

Place the **WH62 base station** on your desk within reach of a USB port.

The headset sits on the base when not in use and charges automatically.

- **Amber LED** = charging
- **White solid LED** = fully charged

Full charge: ~2 hours → **13 hours of talk time**.

✓ **Tip:**

Plug in at end of every workday — start each morning **fully charged.**

3 Connect to a Yealink desk phone



Plug the **WDD60 DECT dongle** into the **USB port** on your phone.

Headset connects automatically in ~10 seconds.


In the phone web interface:
Features → **Audio** → **Headset Prior** → **Enabled**

Calls now automatically route to the headset.

✓ **Tip:**

Works with T33G, T34W, T46U, T54W, and CP925.

4 Connect to a PC for softphone calls

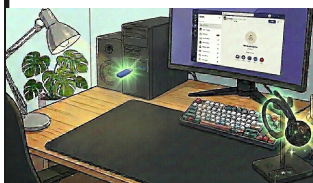

Plug the **WDD60 dongle** into a **USB port on your computer**. It glows green when recognized.

Set as default audio device:

- Windows: Settings → Sound → select Yealink WH62
- Mac: System Prefs → Sound → select Yealink WH62

Select Yealink WH62 in your softphone app audio settings.

✓ **Tip:**

Two dongles simultaneously — one in desk phone, one in PC. **One button switches between them.**

5

Headset connected and ready



Once connected the headset glows — ready to take calls.

All call controls work from the headset:

- **CALL button** — answer or end a call
- **VOLUME + / -** — adjust speaker volume
- **MUTE button** — LED turns red when muted

The base station charges the headset when docked.

✓ **Tip:**
Watch the mute LED — red means you are muted. Check this first if a caller can't hear you.

Quick Troubleshooting

Problem	Fix
No audio from headset	Set Headset Prior = Enabled in phone web interface: Features → Audio.
Not pairing with dongle	Hold call button 5 sec → pairing mode. Unplug and replug dongle.
PC won't recognize	Try different USB port. Device Manager → Yealink WH62 → Uninstall → replug.
Range seems short	DECT range reduced by thick concrete walls. Move closer to phone/dongle.
Echo on calls	Reduce headset speaker volume. Keep away from open desk speakers.