3.2 Unpacking

Table 3-1

			Quantity	Description
Main unit	MobileDaRt Evolution／MobileArt Evolution		1	
	Components	Arm cover	1	Screws are attached on the tap hole on the arm.
		Fuse, 313.500P	1	Spare part
		Fuse, 313001P	1	Spare part
		Fuse, 313002P	1	Spare part
		Fuse, 313005P	1	Spare part
		Fuse, 3136.25	1	Spare part
		Fuse, 313004P	1	Spare part
		Fuse, 326010XP	1	Spare part
		Fuse, 660CF-10	1	Spare part
		Fuse, FLM10	1	Spare part
		Label, Input Voltage	1	Spare part
		Cap	2	White. Spare part
		Cap	2	Gray. Spare part
		Cushion for 14X17 FPD	2	(Only for MobileDaRt Evolution)
		Recovery CD FD, MUX	1	Spare part (Only for MobileDaRt Evolution)
		Collimator Rotation-Lock Knob	1	
		OPERATION MANUAL	1	
		Reference Guide	1	
		Operation Guide	1	
		Document CD	1	

*

NOTE For the DR kit of MobileDaRt Evolution, refer to M503-E410 MobileDaRt Evolution (MX8 Version, MX9 Version) Installation Manual (DR Section)

3.3 Removing Fixing bracket for device shipment

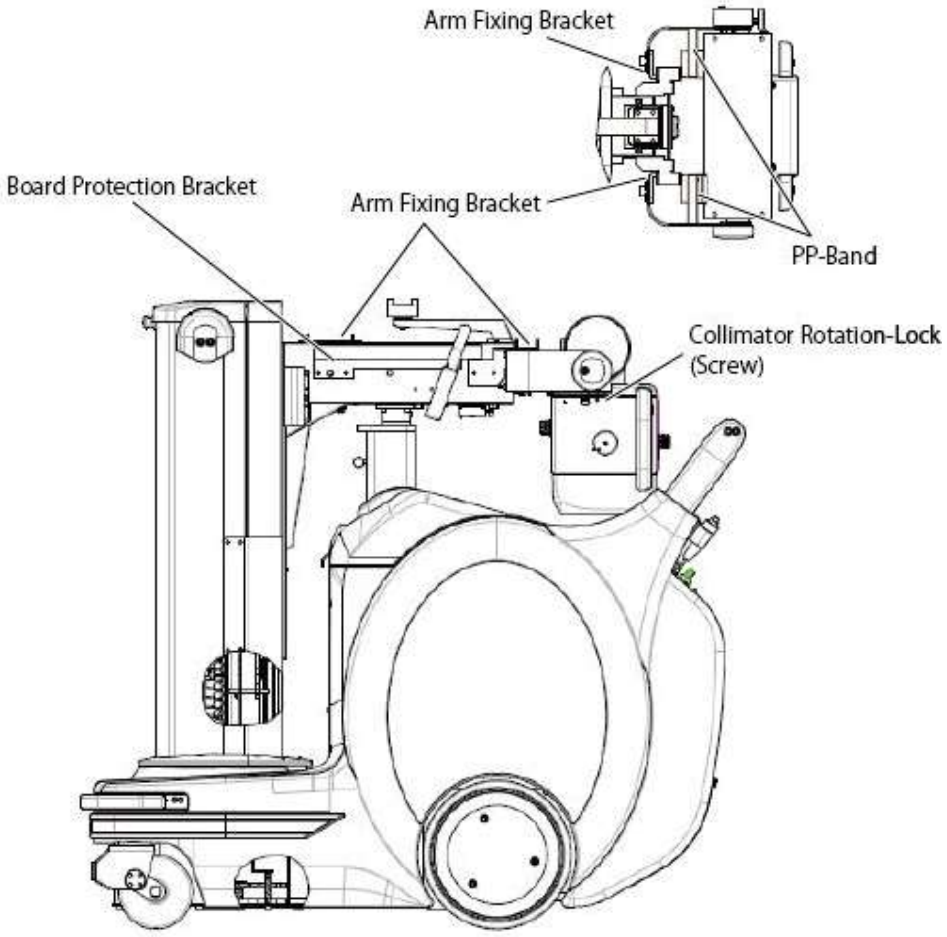


Fig. 3-1

NOTE Remove the collimator rotation-stop screws at checking movement of the collimator unit.

3.5 How to Open/Close Covers

Follow the instuction appropriate to each cover to open/close the cover.

⚠ WARNING

Be sure to turn off the main breaker before opening the covers. There is a danger of receiving electric shock.

3.5.1 Name and Layout of the Covers

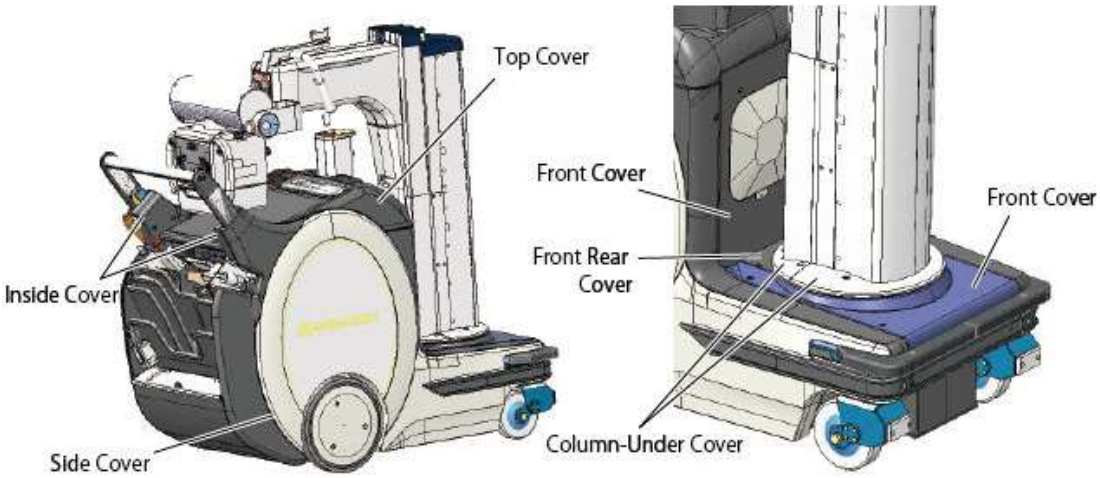


Fig. 3-6 Name and layout of the covers

⚠ CAUTION

Do NOT pull the imaging unit or its cable when the cable is caught on something. Otherwise, it may cause a damage to the equipment, malfunctions, fire, or electric shock.

4.9 Connection Change According to Power-Supply Voltage

■ **Change the connection settings of P1, P2 connectors in the unit, according to the electrical power requirements of the installation site.**

1 **Turn OFF the main circuit breaker.**

Reference "2.3 Name of Each Part of the Unit"

2 **Open the right side cover.**

Reference "3.5 How to Open/Close Covers"

3 **Change the connections based on "Table 4-9 Changing the connection according to supply voltage".**

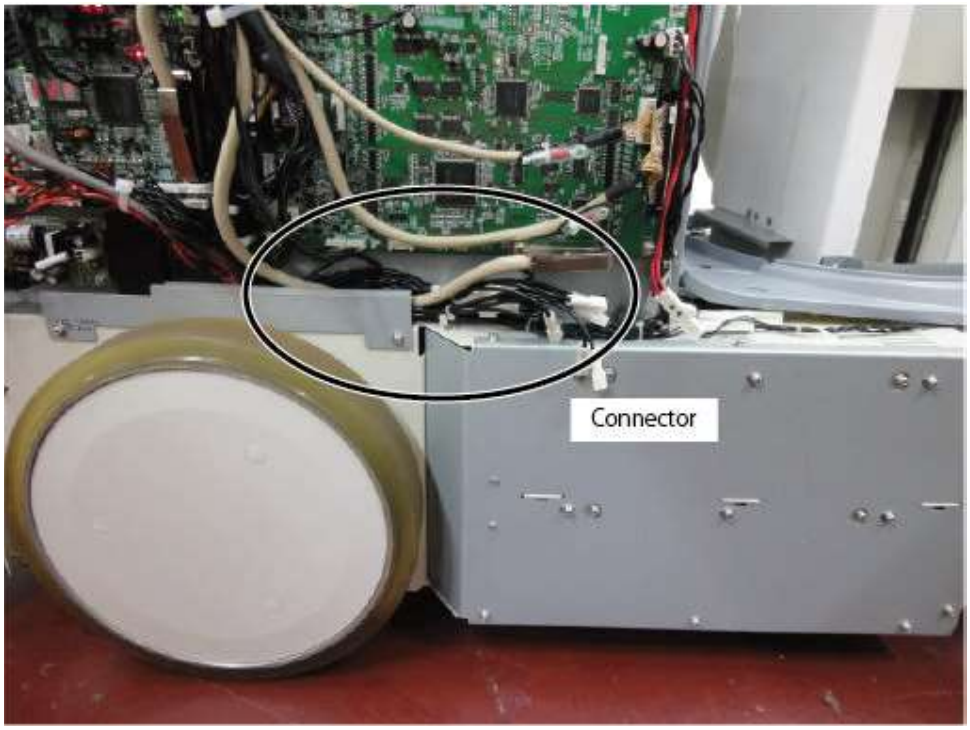


Fig. 4-80

4 **Stick the supply voltage indication label on the outlet of the power plug.**

The label is included in the maintenance parts.

6 [Appendix] DIP Switches and Jumpers Setting on Each Board

6.1 XCONT-2018 Board

NOTE For jumper settings, refer to "6.2 XCONT-2018 Board Jumper Setting".

■ MobileDaRt Evolution (MX8 Version) or MobileArt Evolution (MX8 Version) XCONT-2018 Board(P/N：565-15000 (-No dush no.) /-01/-02)

Table 6-1 XCONT-2018 DIP Switches(P/N：565-15000 (-No dush no.) /-01/-02)

Number	Function	Switch Status & Function			Default		
					MobileDaRt Evolution	MobileArt Evolution	
						High-power type	Standard type
SW2-1	System configuration	ON: MobileDaRt Evolution OFF: MobileArt Evolution			ON	OFF	OFF
SW2-2	12.5kW type	OFF: 32kW type ON: 12.5kW type			OFF	OFF	ON
SW2-3	Debug mode	ON: Debug mode OFF: Normal mode			OFF	OFF	OFF
SW2-4	DR communication*1	MobileDaRt Evolution	DR-200m	ON	*2	OFF	OFF
			CS-7 for Serial Radiography	ON			
			System other than DR-200m and CS-7 for Serial Radigraphy	OFF			
		MobileArt Evolution		OFF			
SW2-5	Measured value display mode	ON: Measured value display mode OFF: Normal mode			OFF	OFF	OFF
SW2-6	High voltage transformer	MobileArt Evolution	High-power type	ON	ON	ON	OFF
			Standard type	OFF			
		MobileDaRt Evolution	D150MH-40 (P/N: 562-25900)	OFF			
			D150MH-40 (P/N: 565-16863)	ON			

4.7 Assembly of FPD Docking Mechanism (For AeroDR)

NOTE If using a FPD docking mechanism kit, refer to corresponding procedure.

Reference "5.10 Assembly of FPD Docking Mechanism (Only Konica Minolta DR-equipped System)"

Before installation, please prepare the items listed in the table below.

Table 4-7

No.	Component	Amount
1	I/F cable	1
2	Cover ASSY (FPD UG kit 8C-8K)	1
3	Base plate (FPD UG kit 8C-8K)	1
4	Cable tie (FPD UG kit 8C-8K)	7

NOTE Before assembling the FPD docking mechanism to the FPD box, install the controller GIU SZ.
Refer to the corresponding procedure for installation.

Reference "4.14 Installing GIU SZ (Only for MobileDaRt Evolution)"

If using 14x14 or 10x12 FPD, install cushion ASSY first.

Reference "4.4 Installing Cushion ASSY(When using FPD Docking Mechanism with 14x17 or 10x12 size FPD)"

8.4 Adjustment of Tube Current

8.4.1 Tube Current Adjustment Mode

The tube current of this unit is adjusted by changing the setting of the filament current (called FVR value).
As shown below, there are 6 points of adjustable FVR values; 40, 60, 80, 100, 125 and 133 kV for each tube current. FVR values between tube voltage points are calculated using linear interpolation.

■ Small focus

Table 8-6

	50 mA	63 mA	80 mA	100 mA	125 mA	160 mA	200 mA
133 kV	○	○	○	○	-	-	-
125 kV	○	○	○	○	○	-	-
100 kV	○	○	○	○	○	○	-
80 kV	○◎	○	○	○	○	○	○◎
60 kV	○	○	○	○	○	○	○
40 kV	○	○	○	○	○	○	○

* ○ : Adjustment point in Tube Current Each-point Adjustment Mode
◎ : Adjustment point in Tube Current Two-point Adjustment Mode

■ Large focus

Table 8-7

	50 mA	63 mA	80 mA	100 mA	125 mA	160 mA	200 mA	250 mA	320 mA	400 mA
133 kV	○	○	○	○	○	○	○	-	-	-
125 kV	○	○	○	○	○	○	○	○	-	-
100 kV	○	○	○	○	○	○	○	○	○	-
80kV	○◎	○	○	○	○	○	○	○	○	○◎
60kV	○	○	○	○	○	○	○	○	○	○
40 kV	○	○	○	○	○	○	○	○	○	-

* ○ : Adjustment point in Tube Current Each-point Adjustment Mode
◎ : Adjustment point in Tube Current Two-point Adjustment Mode

There are two types of tube current adjustment mode. Normally, the tube current is adjusted with (1) Tube Current Two-point Adjustment Mode. When necessary, the tube current at each adjustment point is checked and adjusted with (2) Tube Current Each-point Adjustment Mode

- (1) Tube Current Two-point Adjustment Mode
  FVR value is adjusted with two points; minimum and maximum tube current of 80kV. The FVR values of other points are calculated based on the two values.