NPS-XR-0122E

NeuVision 550M/NeuVision 550M Plus Software Installation Manual



Rev C

Neusoft Medical Systems

Revision History

Version	Date	Author	Description
V1.0	2016-09	Zheng Hongli	First Release
Rev B	2018-09	Zheng Hongli	1. Update 1.1 Software Disk List on page 1; 2. Add 2.2 System Installation (Old PC + New Screen + No Interface Box) on Page 8; 3. Add 2.3 System Installation (New PC + New Screen + No Interface Box) on Page 10
Rev C	2020-02	Zheng Hongli	Add U-Disk Mode on page 13

About This Manual

This manual is NPS-XR-0122E NeuVision 550M/NeuVision 550M Plus Software Installation Manual.
This manual describes NeuVision 550M/NeuVision 550M Plus software instalation procedures.
Manufacturers will not bear any responsibility for unauthorized contents.
Manual Name: NeuVision 550M/NeuVision 550M Plus Software Installation Manual
Part Number: NPS-XR-0122E
Revision: Rev C

How to Use This Manual

Users must read the manual carefully to prevent potential losses and damages.
Please read warnings, cautions, notes carefully.
For daily operations, it is recommended to refer to the manual at any time.

Copyright

This manual copyright belongs to Neusoft Medical Systems Co., Ltd.
It is prohibited to copy or modify the contents of this manual without authorized.

Symbol Descriptions

 WARNING	Attention symbol
 WARNING	Radiation warning symbol
 WARNING	Electrical warning symbol
 CAUTION	CAUTION SYMBOL
Note	Note Description

Section 1 Introduction 1
1.1 Software Disk List 1
1.2 Overview 2
Section 2 System Installation 3
2.1 System Installation (Old PC + Old/New Screen + Interface Box) 3
2.2 System Installation (Old PC + New Screen + No Interface Box) 8
2.3 System Installation (New PC + New Screen + No Interface Box) 10
2.3.1 DVD Mode 10
2.3.2 U-Disk Mode 13
Section 3 HV Generator Configuration 20
Section 4 AP Configuration 28

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Section 1 Introduction

This manual introduces the software installation procedures of the NeuVision 550M/NeuVision 550M Plus system. Please read this manual carefully before software installation.

Service Tool

- Standard service tool kit
- External DVD drive

1.1 Software Disk List

There are three configurations as follows for this system:

1. Old PC + old screen/new screen + interface box (Win 7 system);

2. Old PC + new screen + no interface box (Win 7 system);

3. New PC + new screen + no interface box (Win 10 system).

Note **There will be a marking in the pencil box stating "new PC or old PC\Win 10 or Win 7 system\no interface box" to identify the configuration of the mobile DR.**

Refer to the disk list for each configuration:

Table 1: Old PC+Old/New Screen+Interface Box (Win 7 System)

Disk No.	Description	Remarks
S96205001	Motion DR-OS-EN	Mobile DR English Mirror, approx. 6.6G

Table 2: Old PC+New Screen+No Interface Box (Win 7 System)

Disk No.	Description	Remarks
S10148191	Motion DR-OS-EN-Win 7 for old PC	Mobile DR English Mirror

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Table 3: New PC+New Screen+No Interface Box (Win 10 System)

Disk No.	Description	Remarks
S10148211	Motion DR-OS-EN-Win 10 for new PC	Mobile DR English Mirror

1.2 Overview

This manual describes the application software system uninstallation and installation procedures. The main steps are as follows:

- Page 2 System Installation
- Page 7 HV Generator Configuration
- Page 15 AP Configuration

Note **Please backup the system data before re-installing the software. If it is impossible to backup and restore due to system damage, please install the system software and application software after confirmation with the hospital.**

Note **Please set up the user right, network and printer etc. settings in accordance with the system installation manual after the software installation.**

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Section 2 System Installation

2.1 System Installation (Old PC + Old/New Screen + Interface Box)

This section applies to old PC+old/new screen + interface box (Win 7 system).

1) Put the system disk into the external DVD driver;

Connect the external DVD driver to the USB interface of the mobile DR (see Figure 1).



Figure1: External DVD Driver

Note It is suggested that the external DVD driver be connected to the mobile DR with 2 USB interfaces so as to improve the power supply capacity.

2) After the system reboot, continuously press **Delete** to enter the Boot Configuration (see Figure 2).

Set the USB CD/DVD as the first Boot.

Press **F4** to save the configuration and reboot the system.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

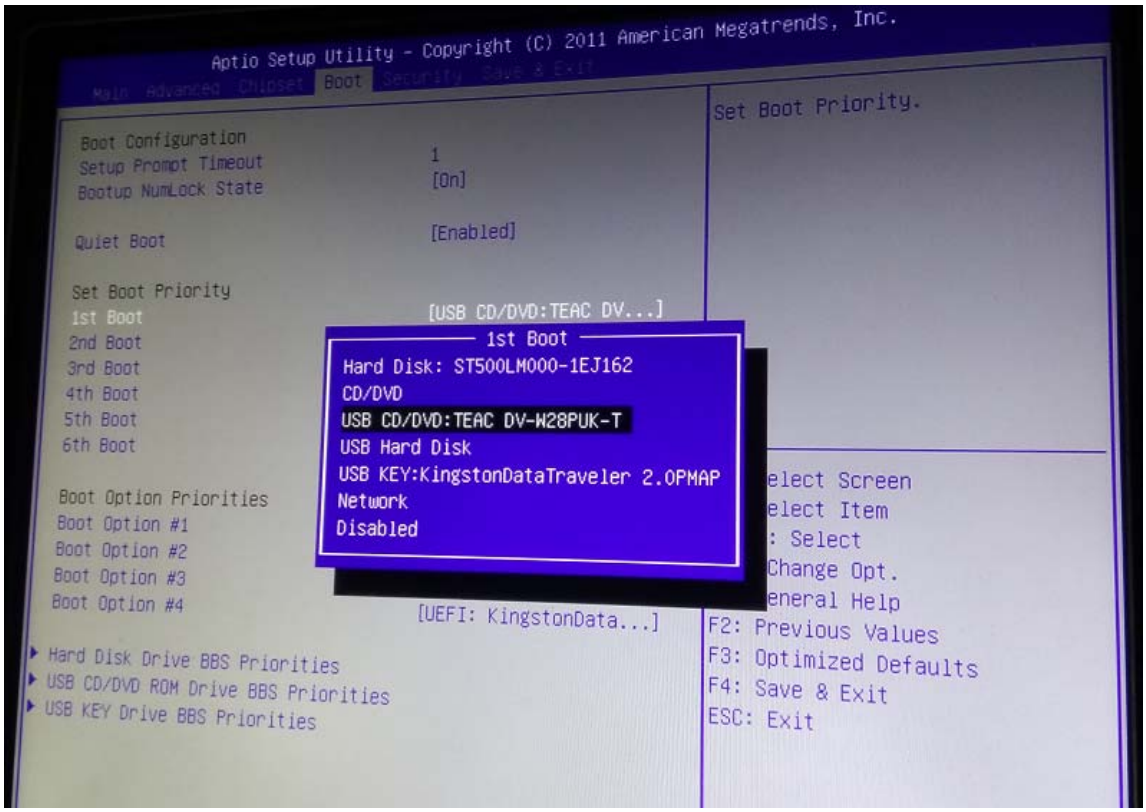


Figure2: BIOS Configuration USB DVD Screen

3) After booting the computer, enter the screen as shown below (see Figure 3).

Select 1 to partition the hard disk;

Select 2 to install the operation system;

After completing the system installation, select 3 to reboot operation system.

It will take about half an hour for hard disk partition and operation system installation. Please wait patiently.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

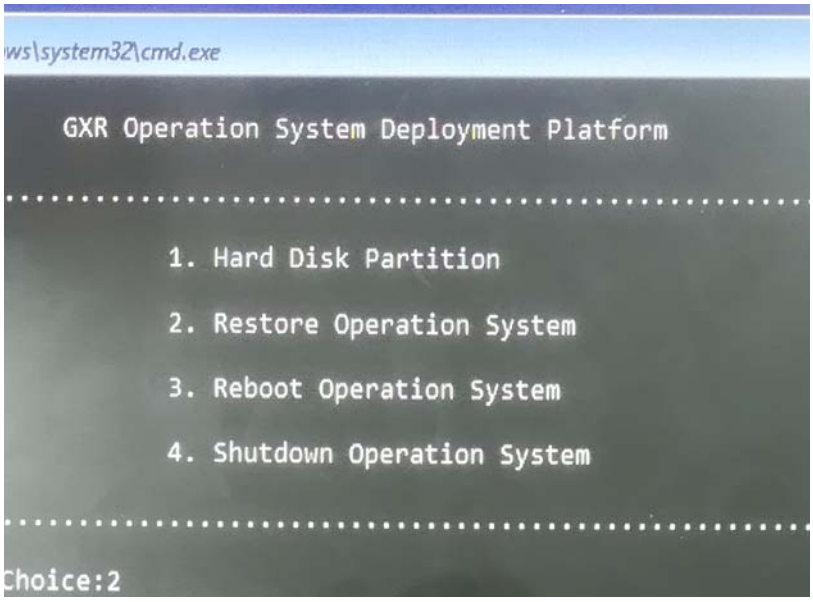


Figure3: Hard Disk Partition and System Installation Image

4) Input the user name and password after reboot.

User name: nmsadmin Password: nmsadmin



Figure4:

5) Click the icon on the NE software configuration homepage.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

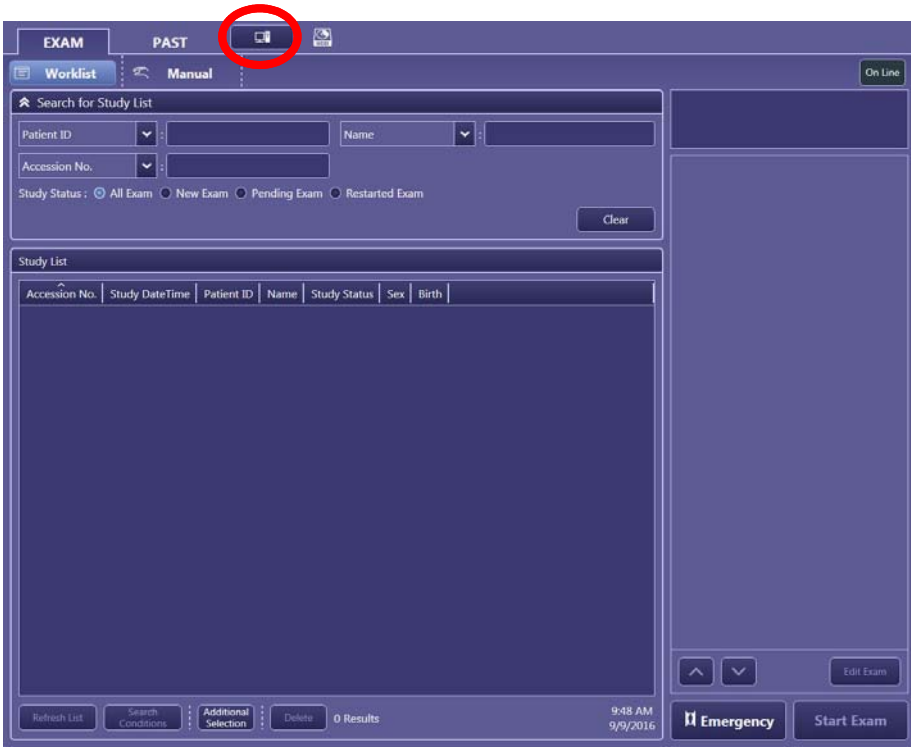


Figure5:

6) Click **Shutdown**.

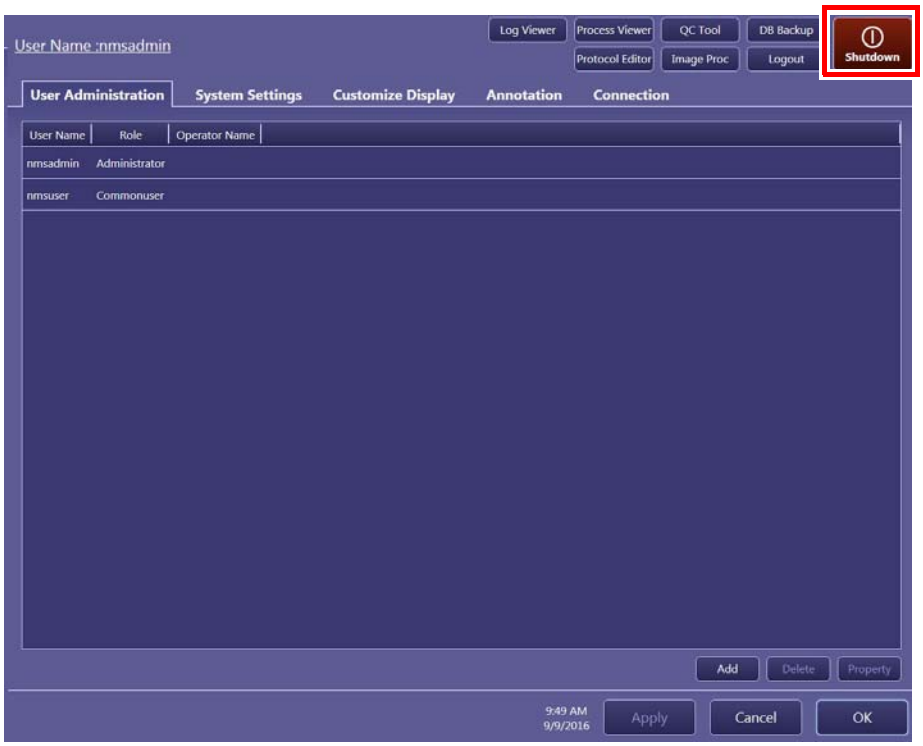


Figure6: Shutdown

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

7) Do not check the checkbox before the “Transfer All Data” and “Backup Database”

Click **Shutdown**. The system installation is completed.

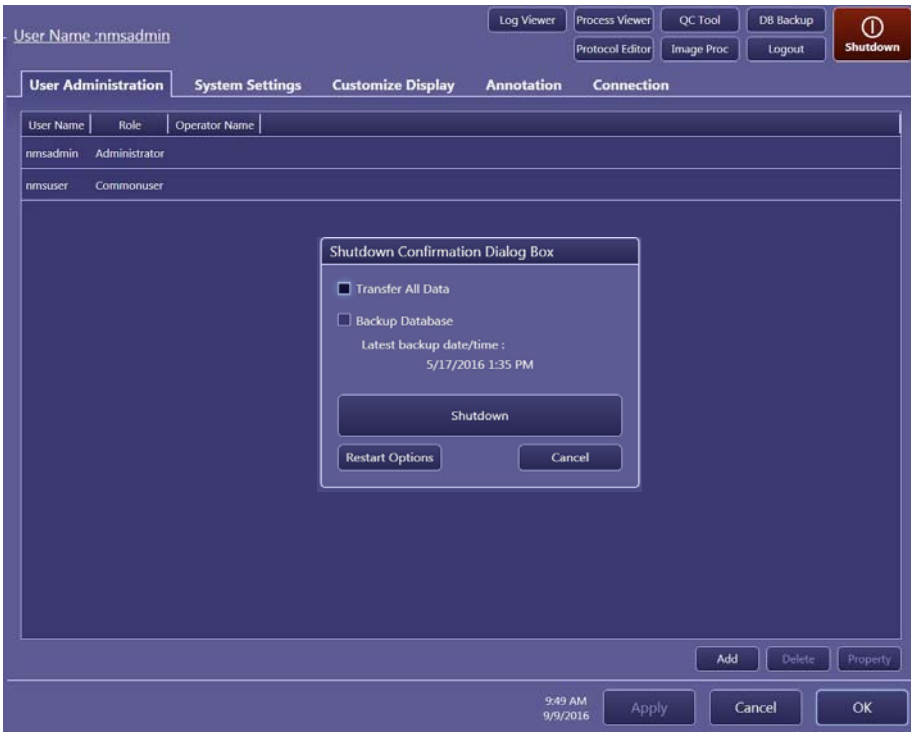


Figure7: Shutdown

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

2.2 System Installation (Old PC + New Screen + No Interface Box)

This section applies to old PC+new screen + no interface box (Win 7 system).

1) Put the system disk into the external DVD driver;

Connect the external DVD driver to the USB interface of the mobile DR (see Figure 1).



Figure8: External DVD Driver

Note **It is suggested that the external DVD driver be connected to the mobile DR with 2 USB interfaces so as to improve the power supply capacity.**

2) After the system reboot, continuously press **Delete** to enter the Boot Configuration (see Figure 9).

Click "**Save & Exit**"; select "**ASUS SDRW-08D2S-U A801**"; press "**Enter**" to reboot the system.

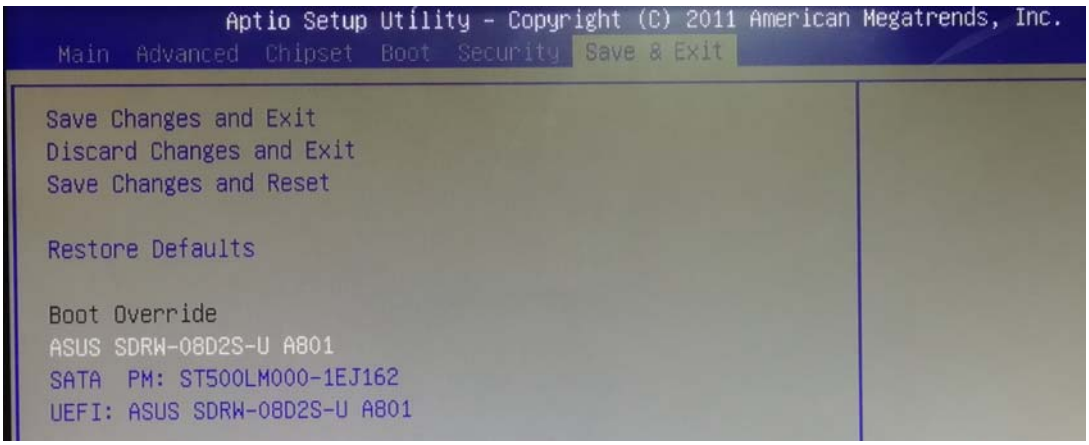


Figure9: BIOS Interface

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

3) After booting the computer, enter the screen as shown below (see Figure 10).

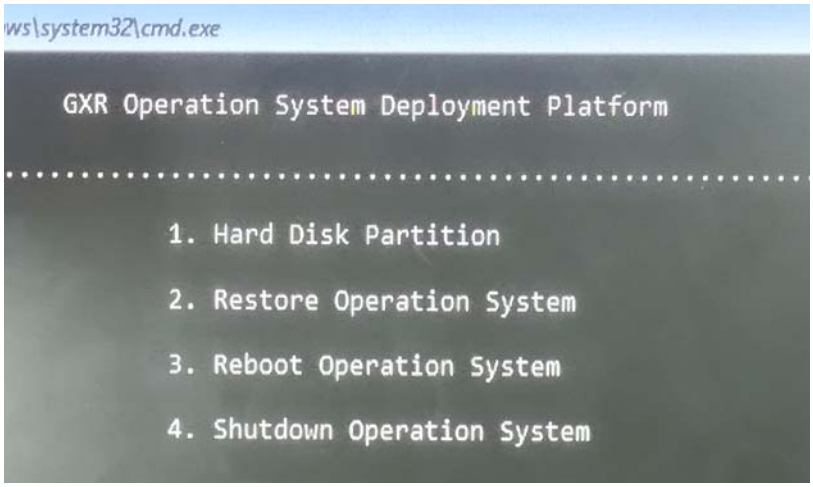


Figure10: Hard Disk Partition and System Installation Mirror

Select 1 to partition the hard disk;

Select 2 to install the operation system;

Note After selecting 2, press "Y", and then input "1" to start the system installation .

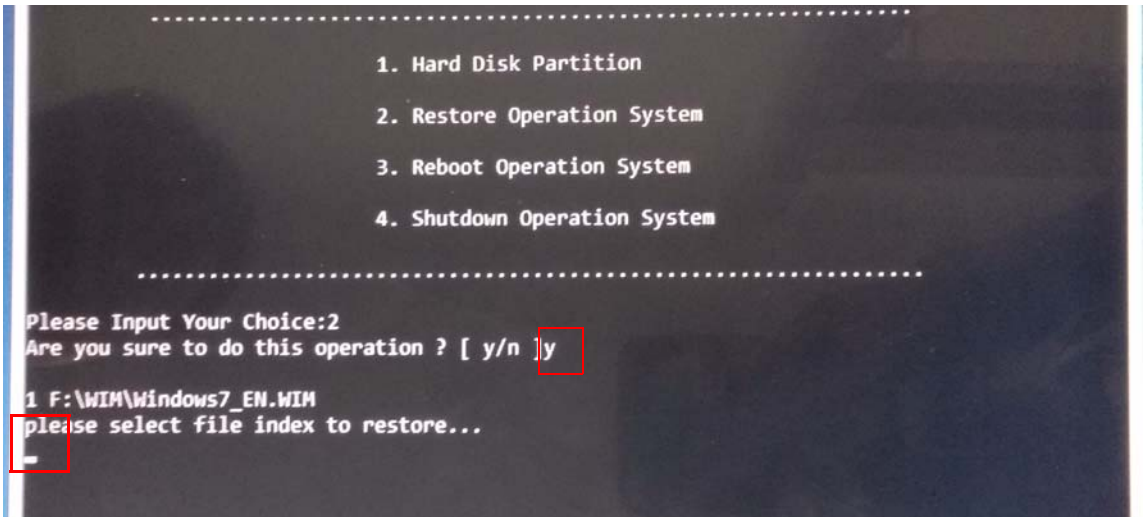


Figure11:

After completing the system installation, select 3 to reboot operation system.

It will take about half an hour for hard disk partition and operation system installation. Please wait patiently.

4) Refer to Section 2.1 Step 4-Step 7 for subsequent steps.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

2.3 System Installation (New PC + New Screen + No Interface Box)

This section applies to new PC+new screen + no interface box (Win 10 system).

2.3.1 DVD Mode

1) Put the system disk into the external DVD driver;

Connect the external DVD driver to the USB interface of the mobile DR (see Figure 1).



Figure12: External DVD Driver

Note **It is suggested that the external DVD driver be connected to the mobile DR with 2 USB interfaces so as to improve the power supply capacity.**

2) After the system reboot, continuously press **Delete** to enter the Boot Configuration (see Figure 9).

Click "**Save & Exit**"; select "**ASUS SDRW-08D2S-U A801**"; press "**Enter**" to reboot the system.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

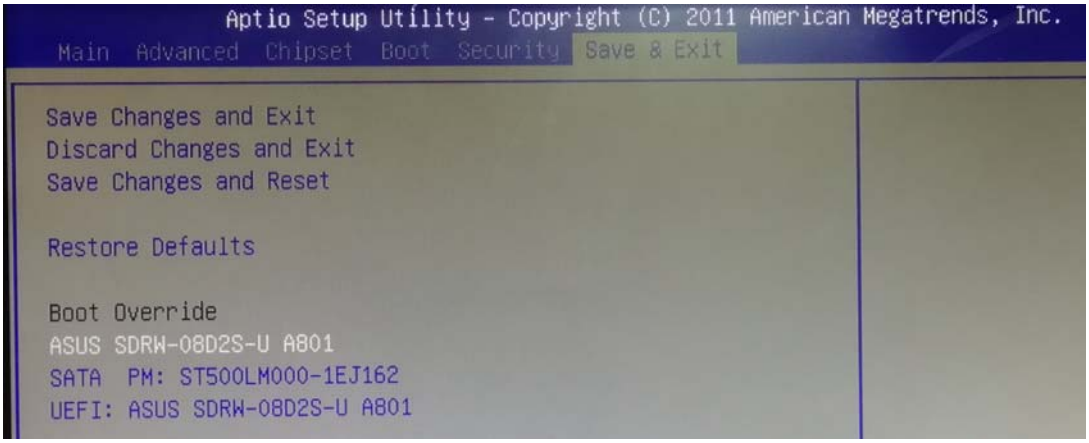


Figure13: BIOS Interface

3) After booting the computer, enter the screen as shown below (see Figure 10).

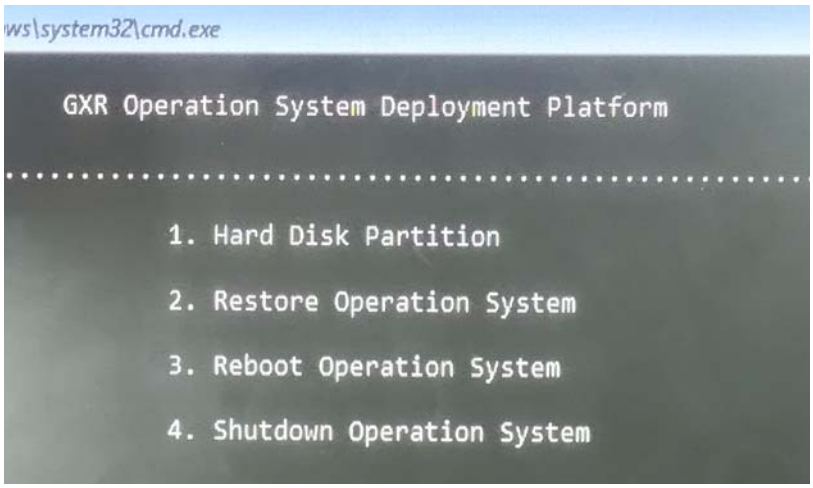


Figure14: Hard Disk Partition and System Installation Mirror

Select 1 to partition the hard disk;

Select 2 to install the operation system;

Note After selecting 2, press "Y", and then input "1" to start the system installation .

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

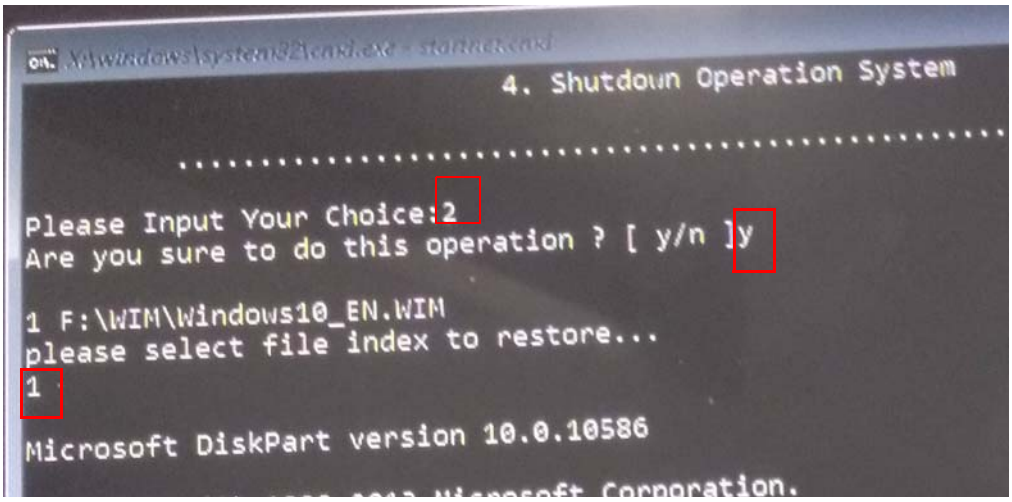


Figure15:

After completing the system installation, select 3 to reboot operation system.

It will take about half an hour for hard disk partition and operation system installation. Please wait patiently.

4) Refer to Section 2.1 Step 4-Step 7 for subsequent steps.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

2.3.2 U-Disk Mode

Note The Ghost PN code is in the pencel box of the system.



1) Plug the U-disk into the USB Interface (remove the two screws first to find out the USB interface);



Figure16:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

2) Restart the system and press “Delete” continuously to enter the BIOS interface;

a) Select “Security” - “Secure Boot menu";

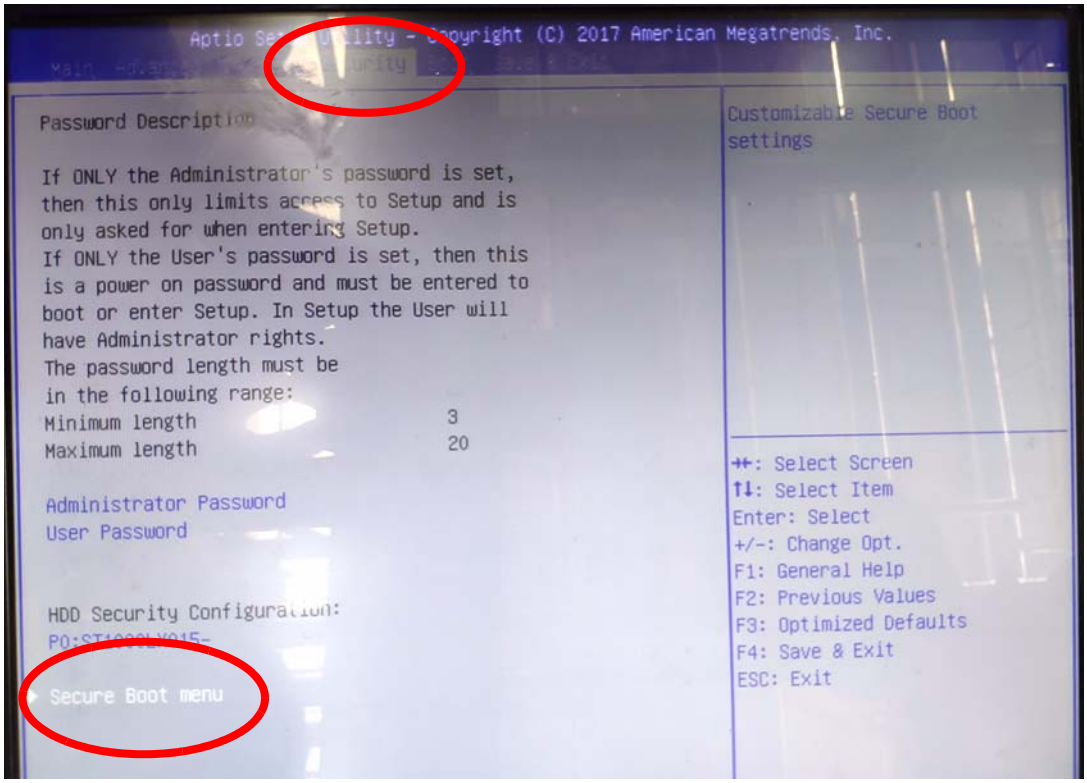


Figure17:

b) Select “Secure Boot" and press "Enter", set the "Secure Boot" to be "Disabled";

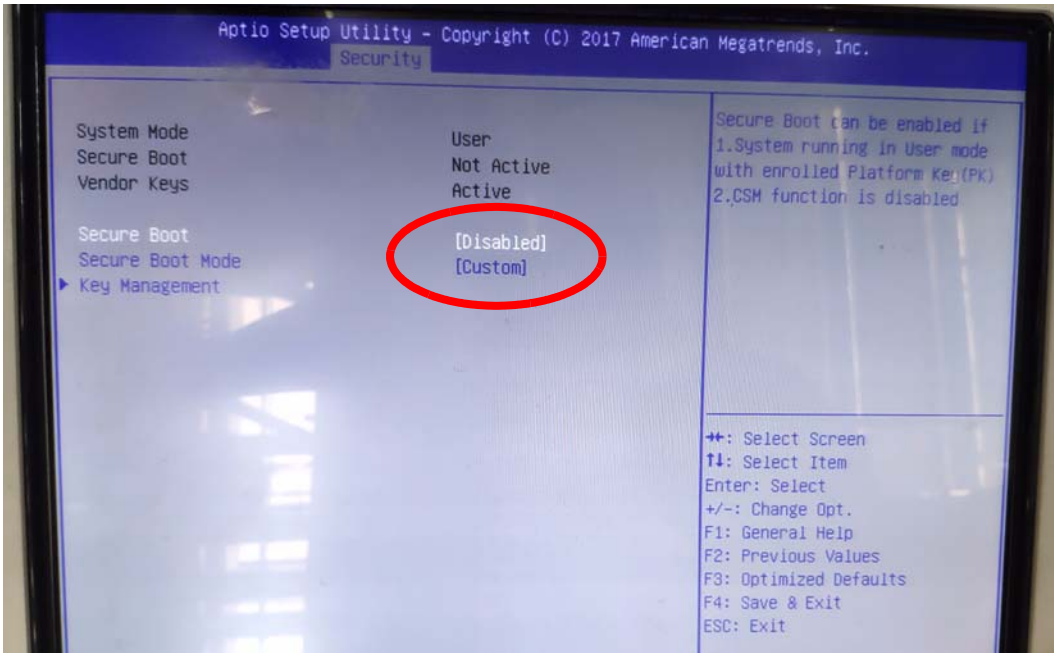


Figure18:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

c) Press F4, select "Yes" to save the setting. Reboot the system;

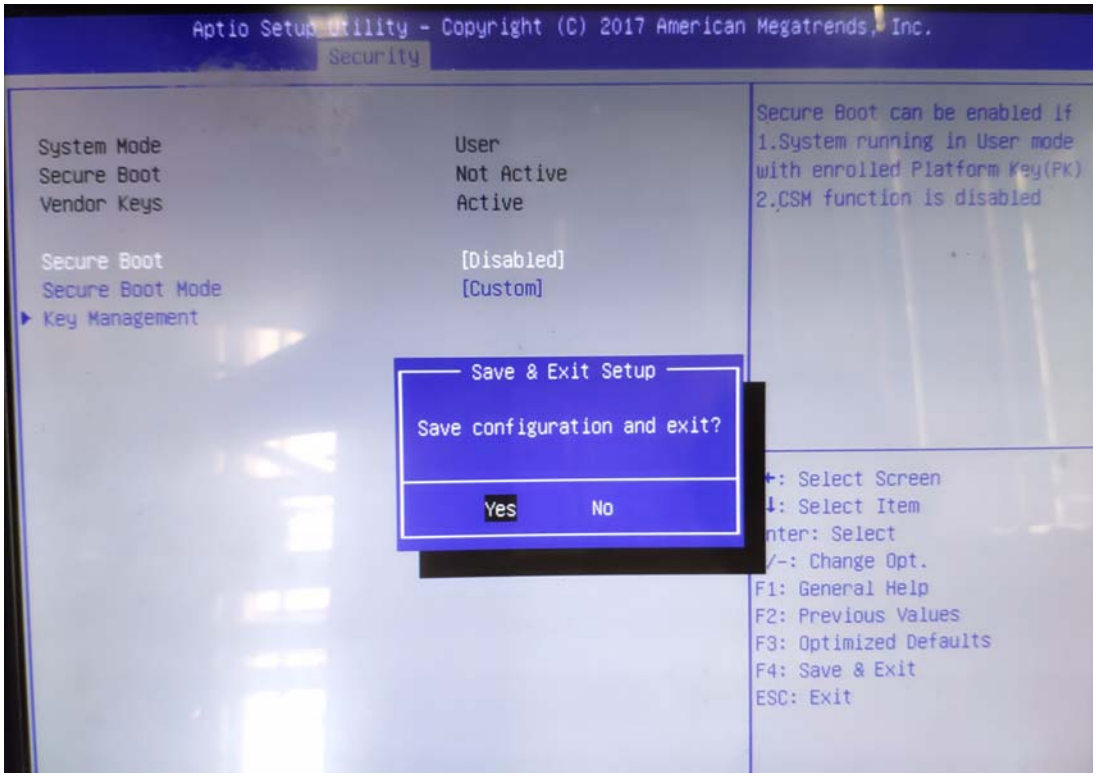


Figure19:

d) When rebooting the system, press “Delete” continuously to enter the BIOS interface. Select "Advanced" - "CSM Configuration";

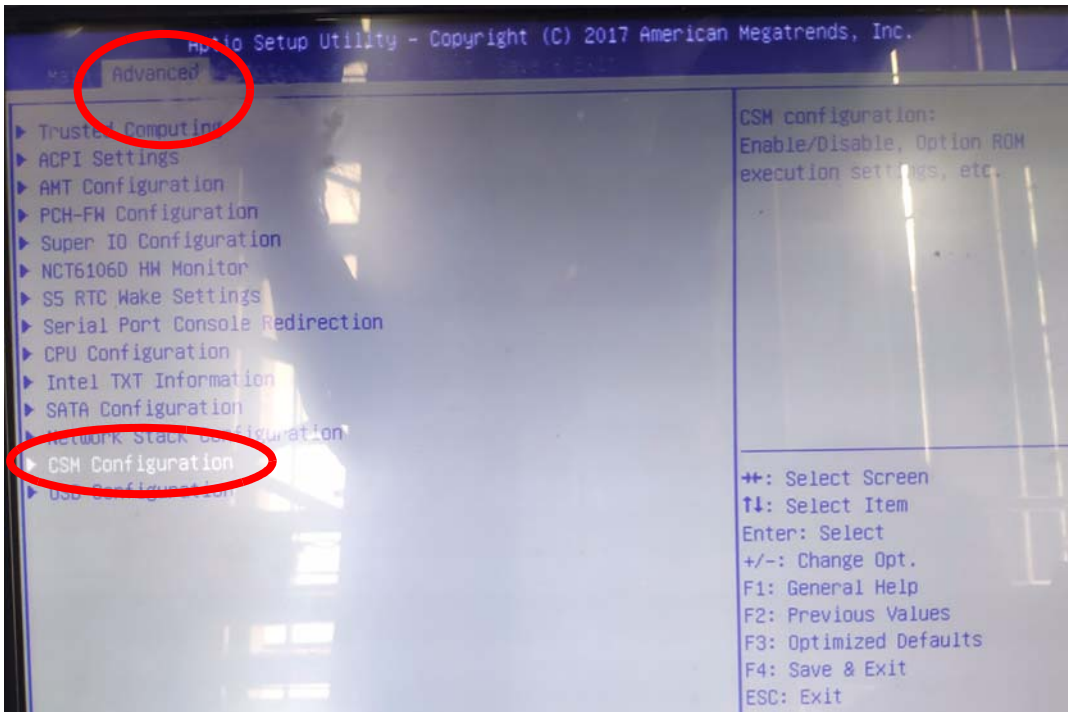


Figure20:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

e) Select "Boot option Filter" and press "Enter", set it to be "Legacy only";

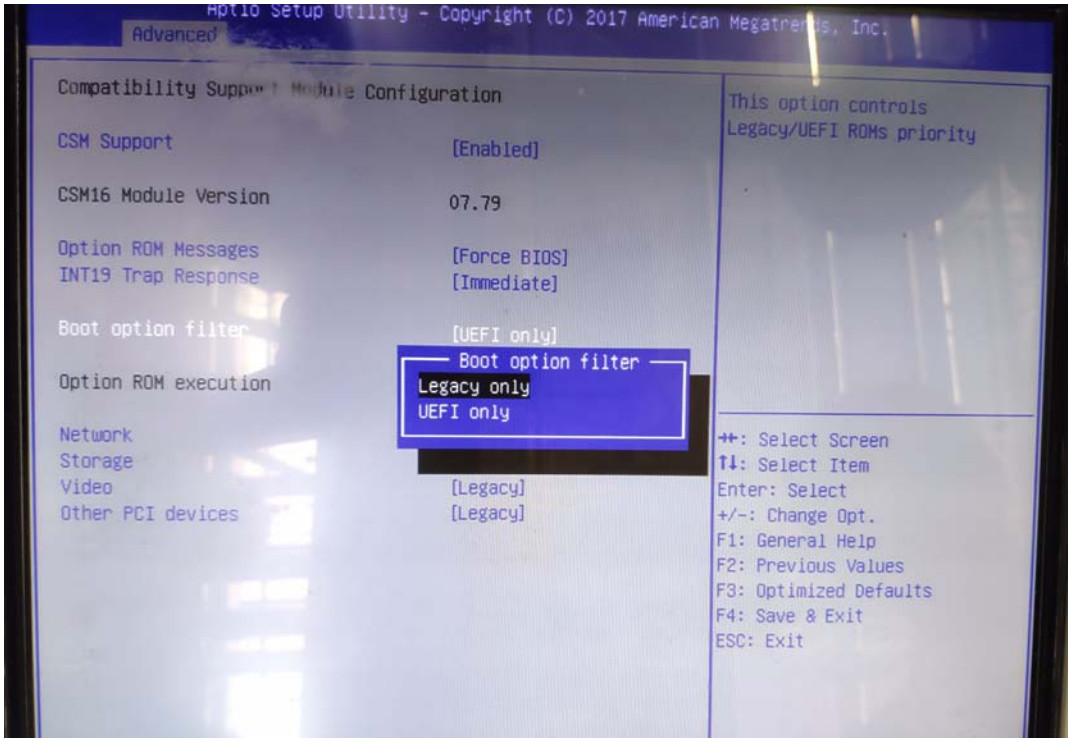


Figure21:

f) Press F4, select "Yes" . The system will reboot;

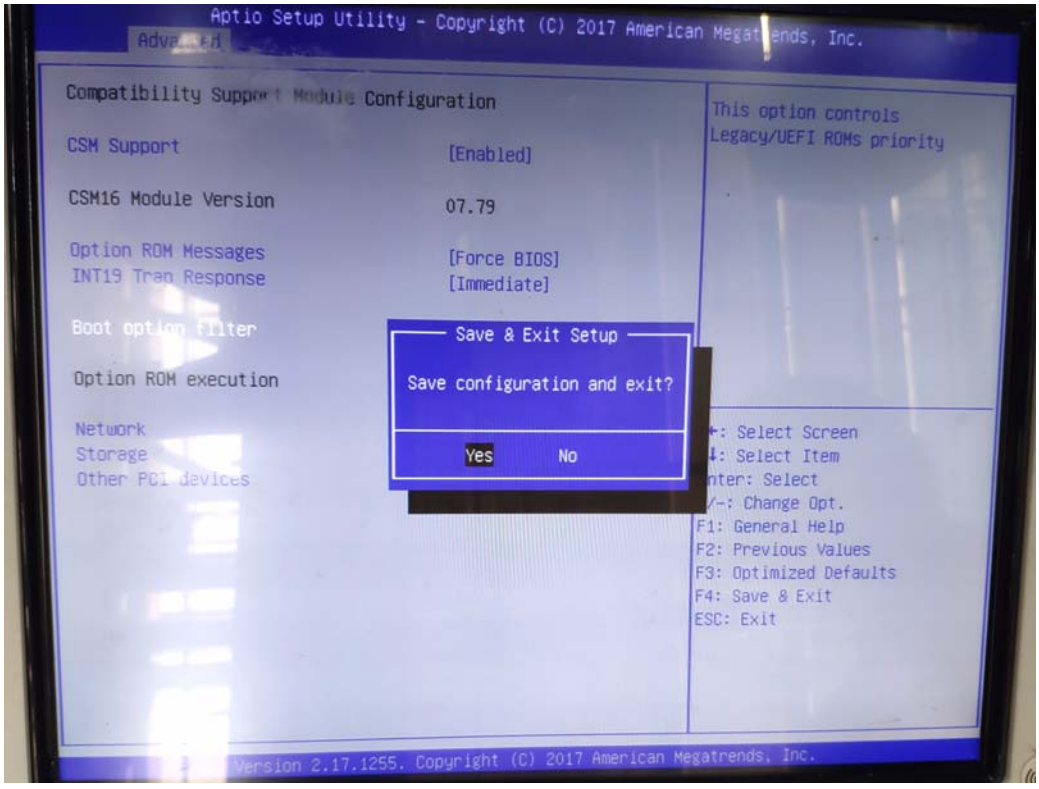


Figure22:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

g) When rebooting, press “Delete” continuously to enter the BIOS interface. Select "Save & Exit" . Then select the U-disk with the wright model. Press “Enter”. The system will reboot automatically and start the installation.

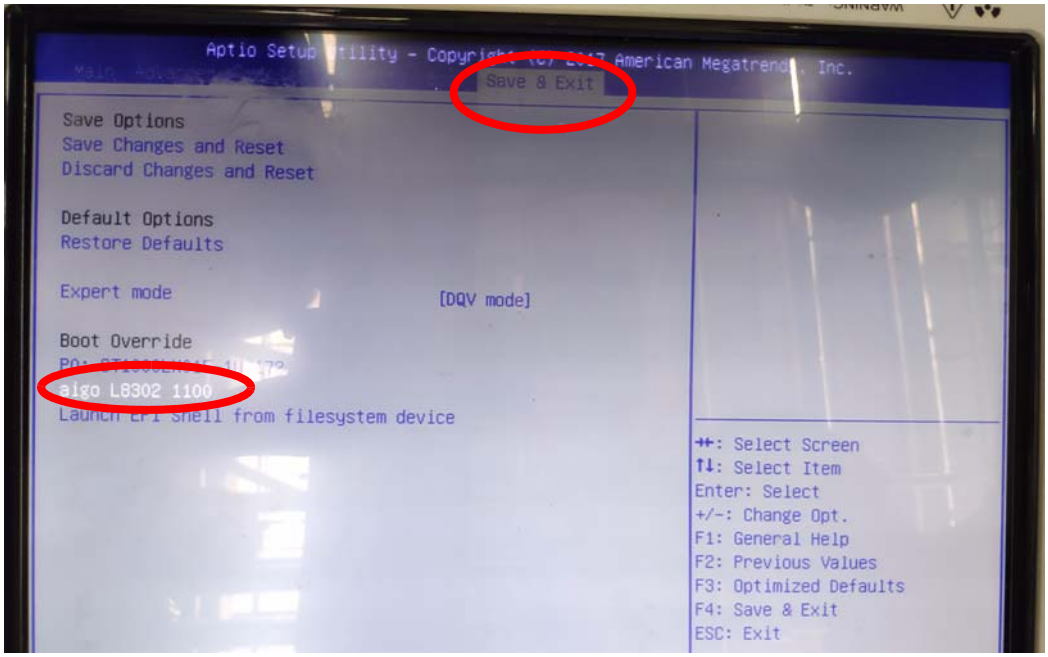


Figure23:

h) After reboot, the following interface will come up. Then press any key to continue';

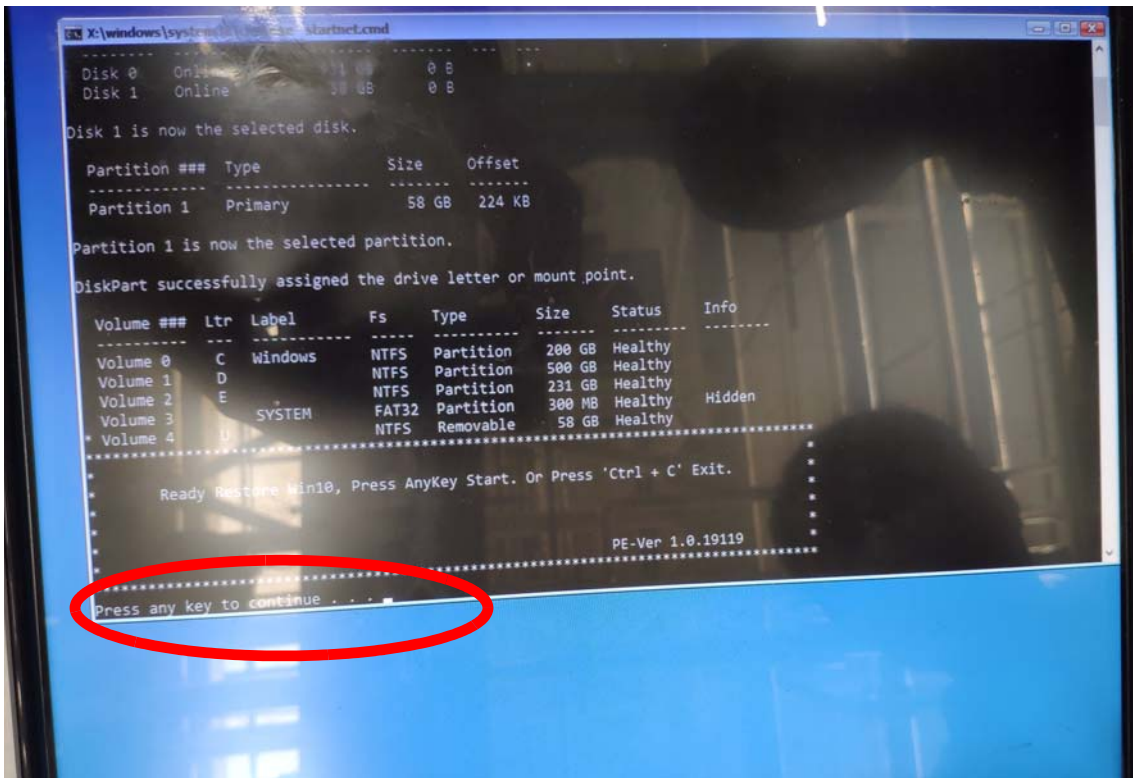


Figure24:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

i) Select the languate: 1 means chinese and 2 means English. Input the corresponding number according to your demand;

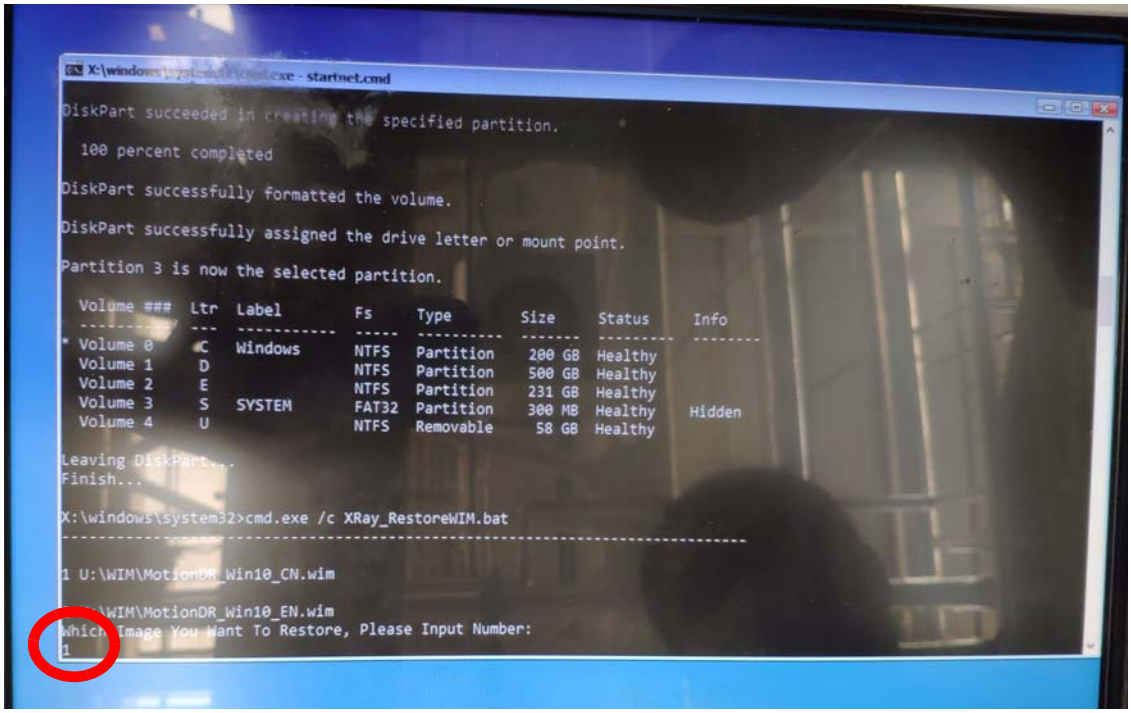


Figure25:

j) After the installation is completed, the system will reboot automatically. Press “Emergency Stop” button to reboot the system, and press “Delete” continuously to enter the BIOS interface. Select "Advanced" - "CSM Configuration";

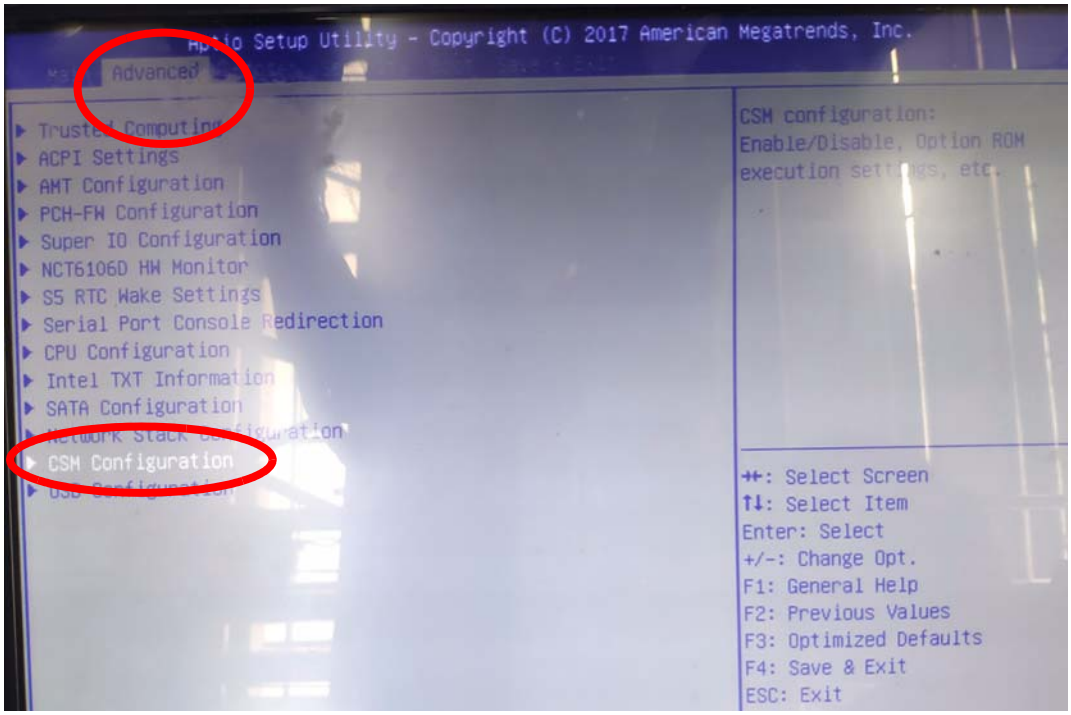


Figure26:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

k) Select "Boot option filter" and press “Enter”; set it to be "UEFI only";


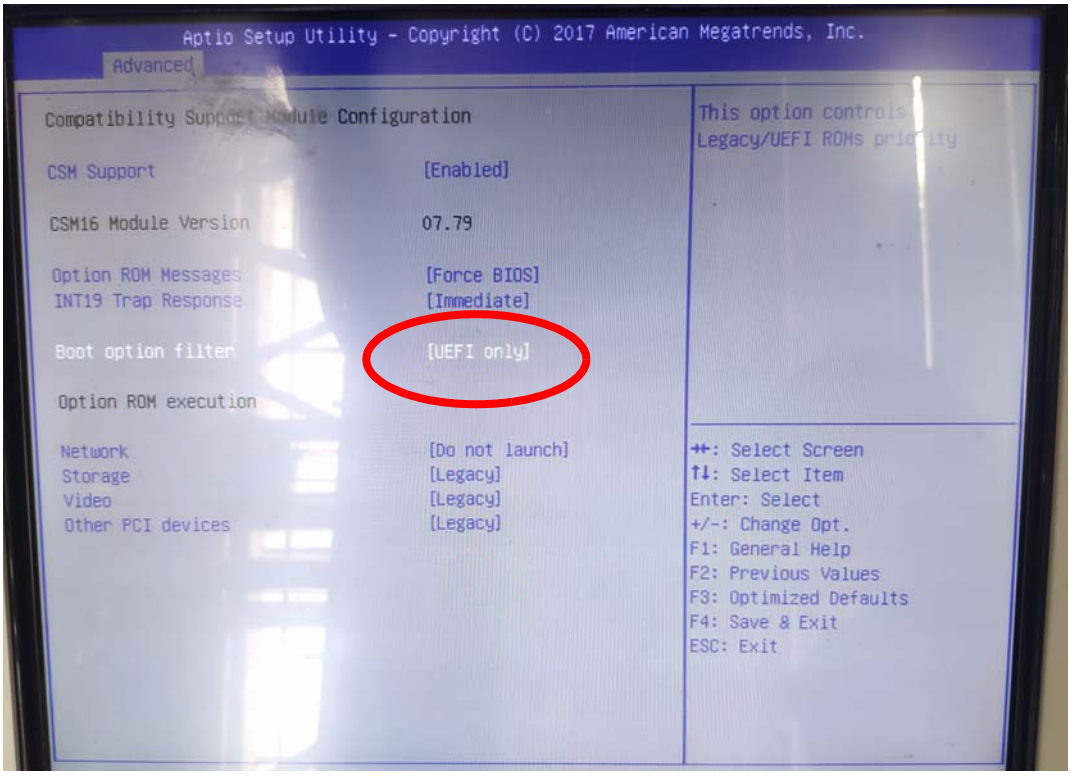


Figure27:

l) Press F4 and select “Yes" to save the setting. Then the system will reboot automatically. Unplug the U-disk at this time;

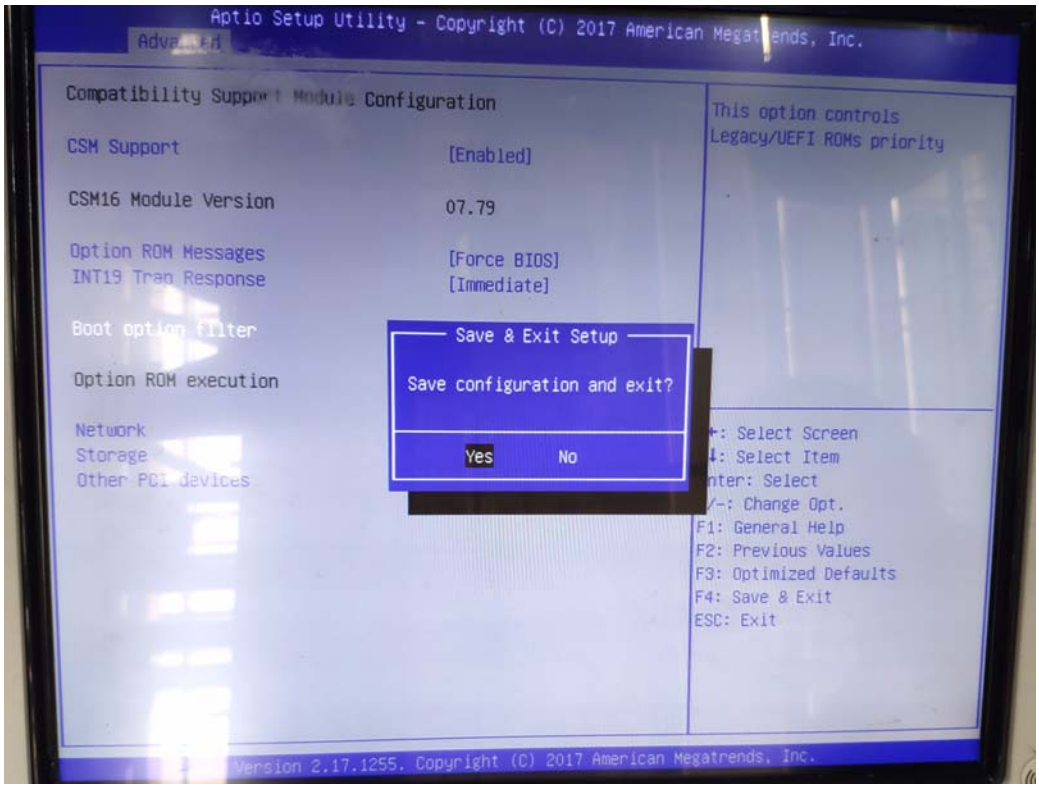

m) Refer to Section 2.1 Step 4-Step 7 for subsequent steps.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Section 3 HV Generator Configuration

1) Adjust the HV generator service switch SW7 to **On** position after power-off.

Open the system (there will be continuous alarming).



Figure28:

Note The mobile DR power supply must be disconnected when adjusting the HV generator switch.

2) Enter the page below (see Figure 29) according to the above-mentioned steps.

Click **Restart Options**.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

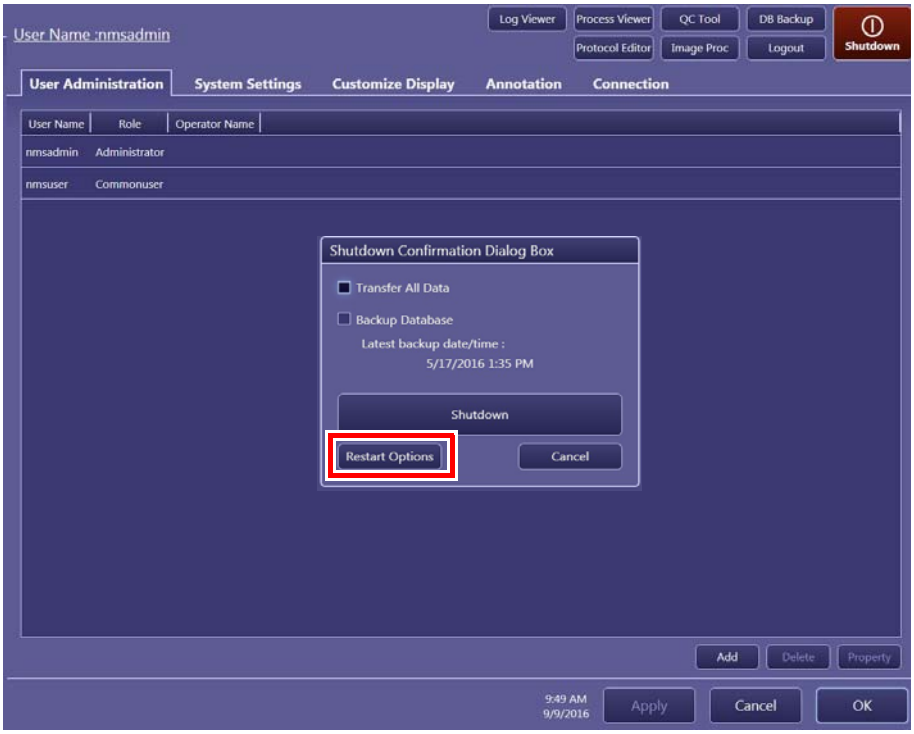


Figure29: Click Restart Options

3) The page after clicking Restart Options is as shown below(see Figure 30):

Press Ctrl + Alt + Delete and enter the page below:

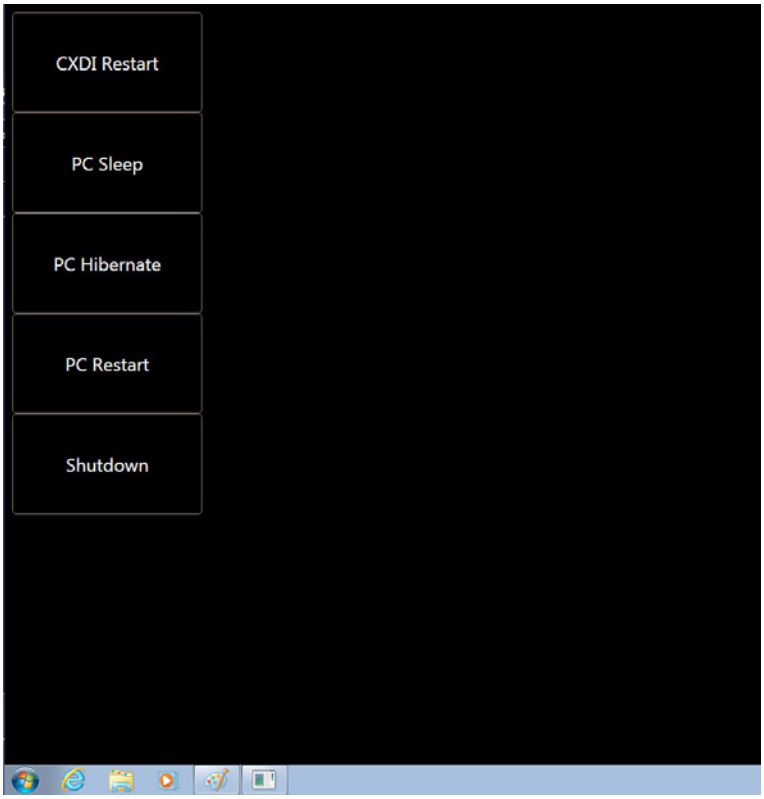


Figure30: Restart Mode

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

4) Click **Log off**.

Enter cxdiadmin user. Input password: nmsadmin



Figure31: Cxdiadmin User

5) Enter the operation system. If the screen is displayed in 180 degree reverse, click the right mouse button to enter the **Screen Resolution** option.



Figure32:

6) Enter **Advanced settings**.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

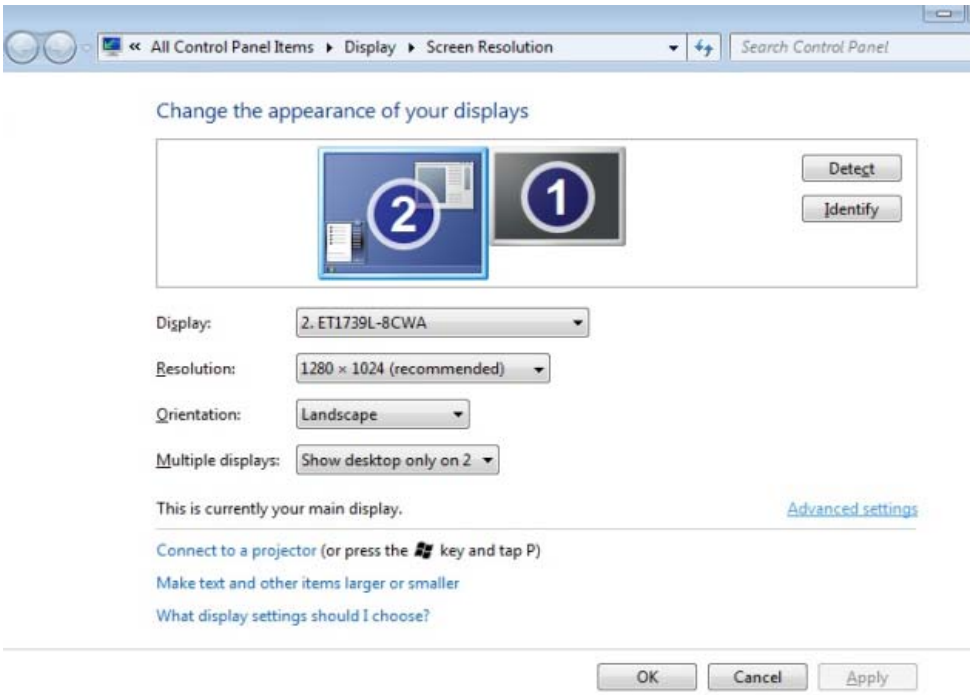


Figure33: Advanced Settings

7) Enter the **Intel Graphics and Media Control Panel**

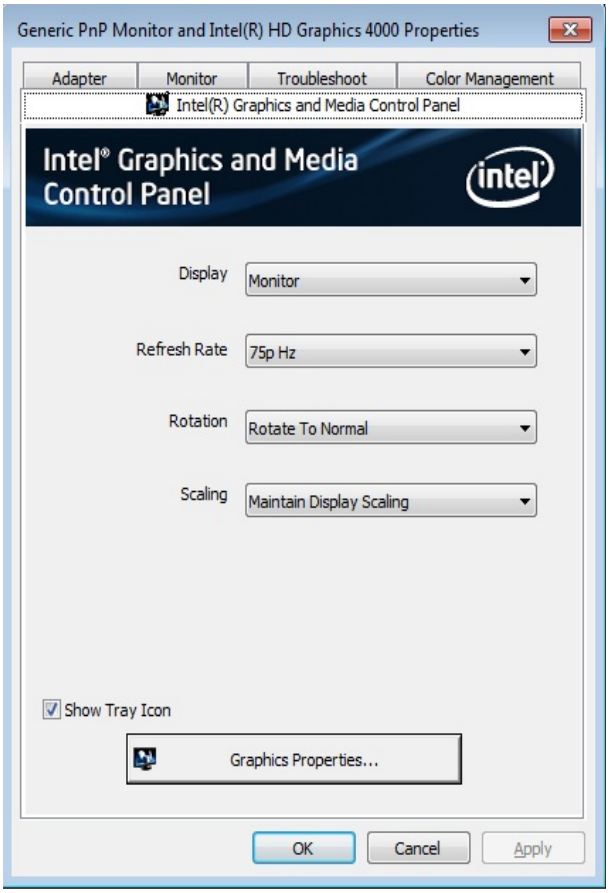


Figure34: Intel Graphics and Media Control Panel

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

8) Select Rotation: Rotate to 180 Degrees. Click **OK**.

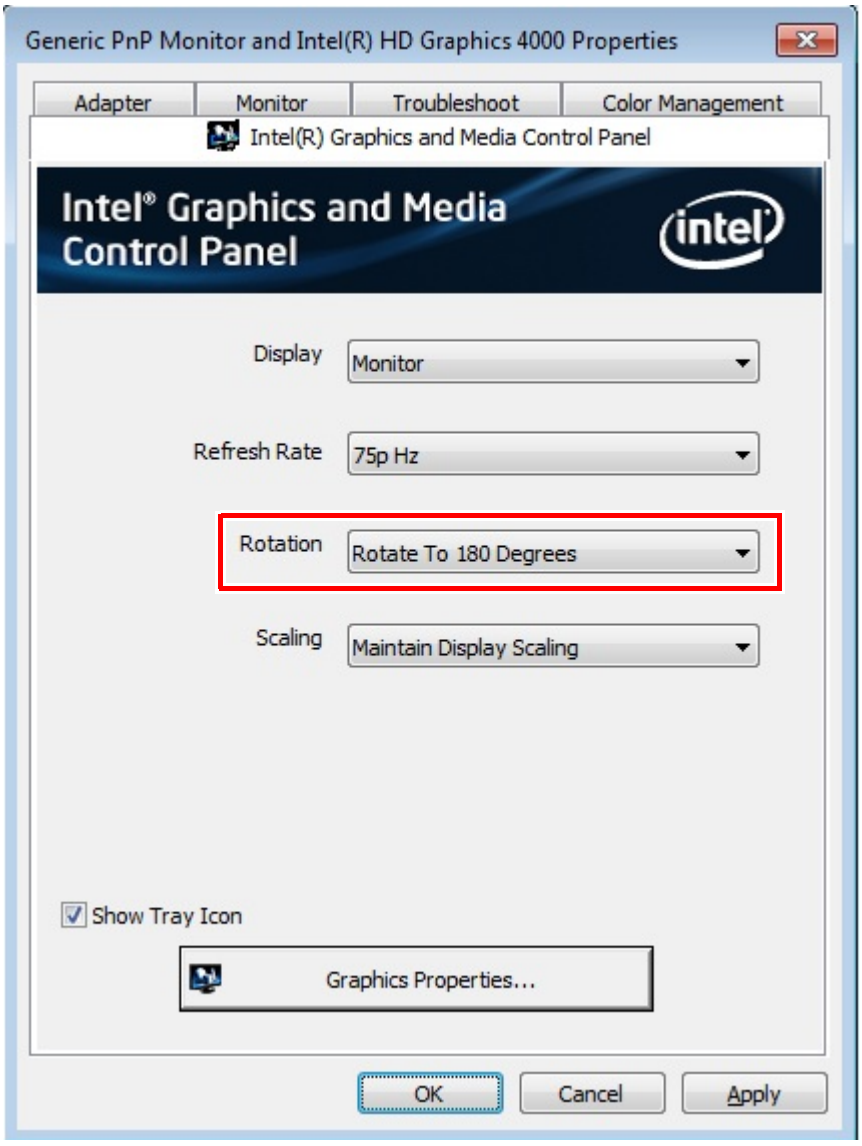


Figure35:

9) Click the left bottom corner -> Start ->Sedecal TechService -> Tech Service and enter the HV generator configuration software:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.



Figure36:

10) Click **RESET ERROR**. After the alarm sound disappears and the CONFIGURATION option is activated, click **CONFIGURATION** to configure.



Figure37: HV Generator Configuration

11) Click WS1 and set up as shown in Figure 38.

Tube: 1; WM: Bucky 1; AEC IC: 0; WS LOCK: 0; RAD/RF: RAD

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

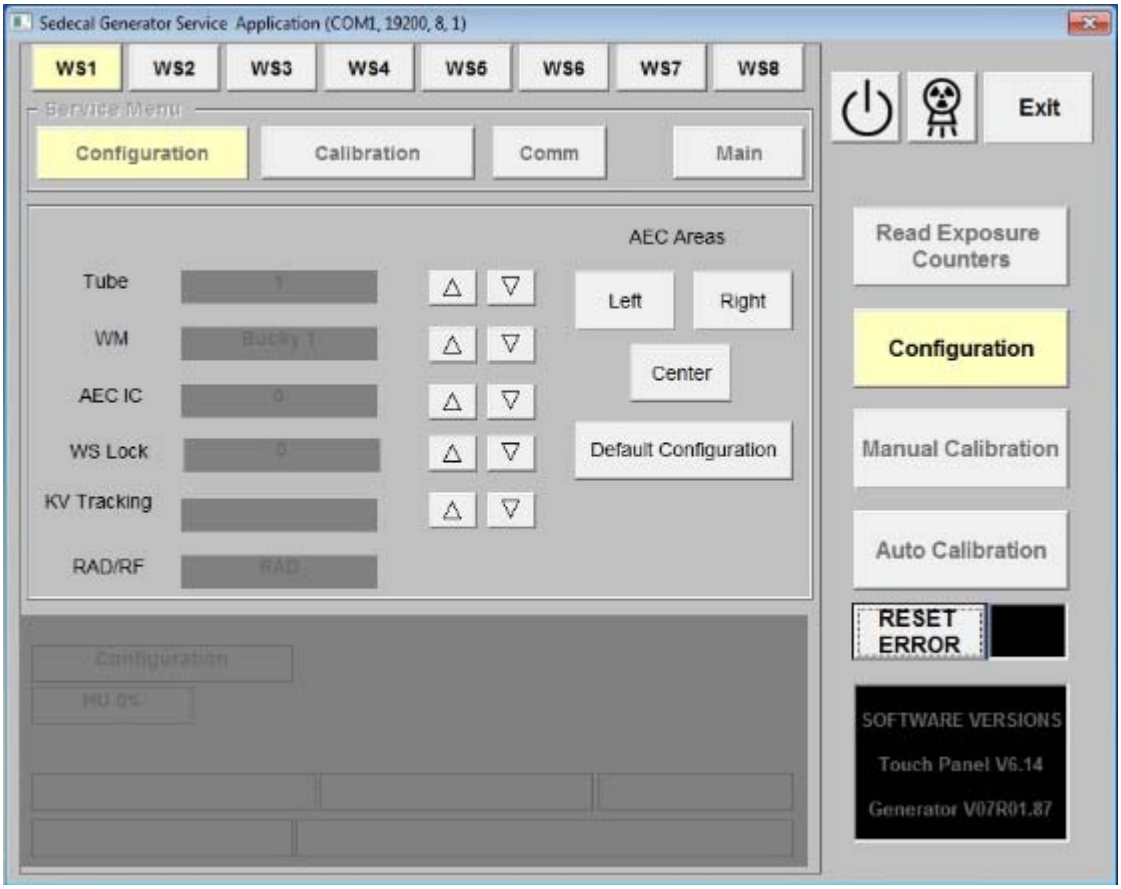


Figure38: WS1 Setting

12) Click WS2 and set up as shown in Figure 39.

Tube: 1; WM: direct; AEC IC: 0; WS LOCK: 0; RAD/RF: RAD.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

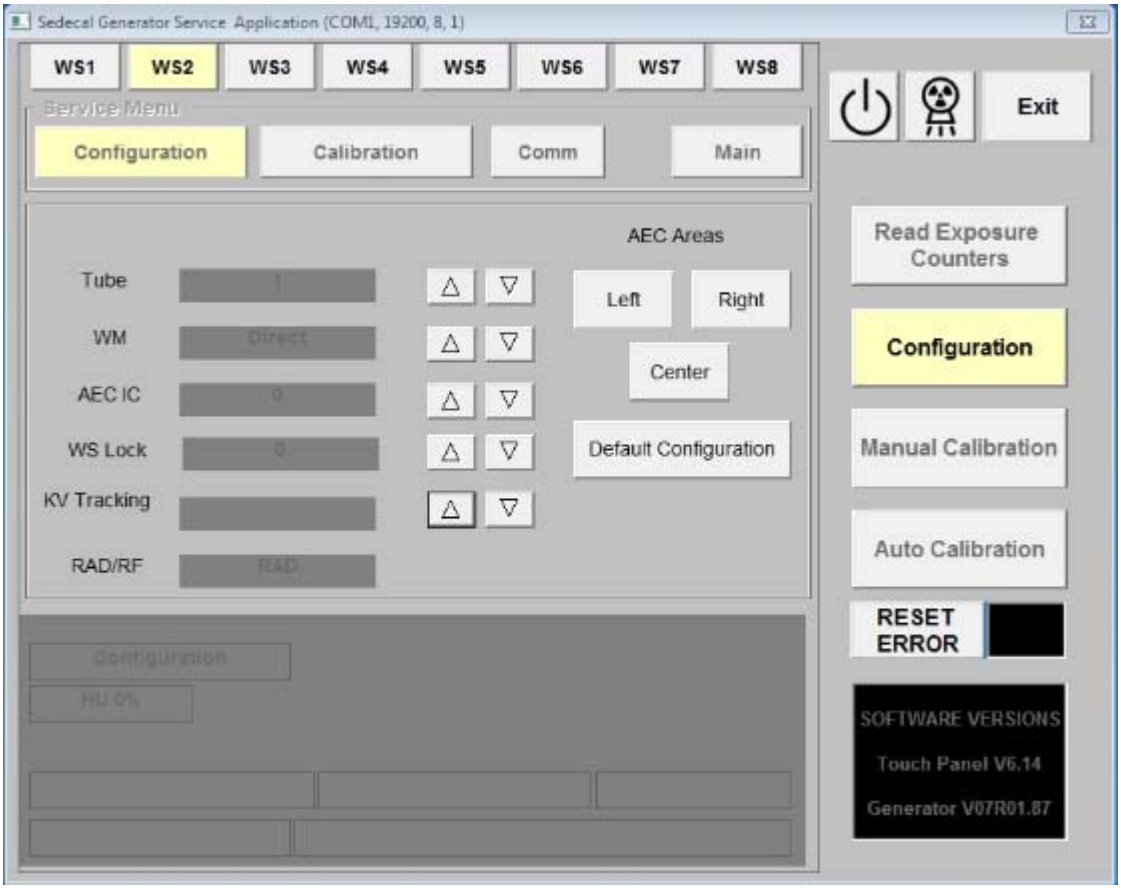


Figure39: WS2 Setting

Note **After the setting, click Configuration. Then it will save automatically after two warning tones.**

Note **Shut down the system after the operation.**

13) Adjust the HV generator switch to **OFF** position to switch off the service mode of the generator.



Figure40: Shut down the Service Mode

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Section 4 AP Configuration

1) Enter cxdiadmin user page according to the steps in Section 3 HV Generator Configuration. Click **Start** and select **Canon Service Tool**.

Input user name and password and enter the following page (see Figure 41) Service Tool:

User name: cxdiadmin

Password: Canononac



Figure41: Service Tool

2) Right click Computer icon on the desktop. Enter the Device Manager and confirm AP interface.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

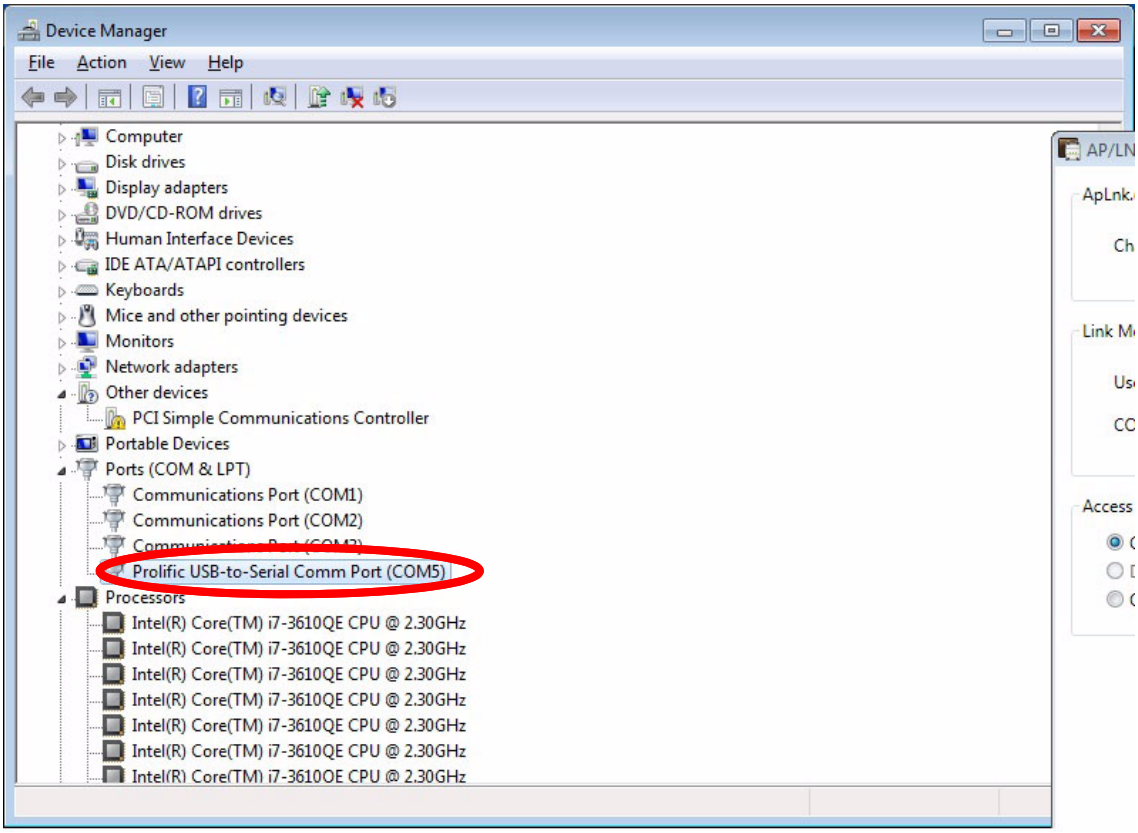


Figure42:

3) Click **AP/LINK** and enter the page below:

Com port shall be set the same as that in the Device Manager. Click **Next**.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

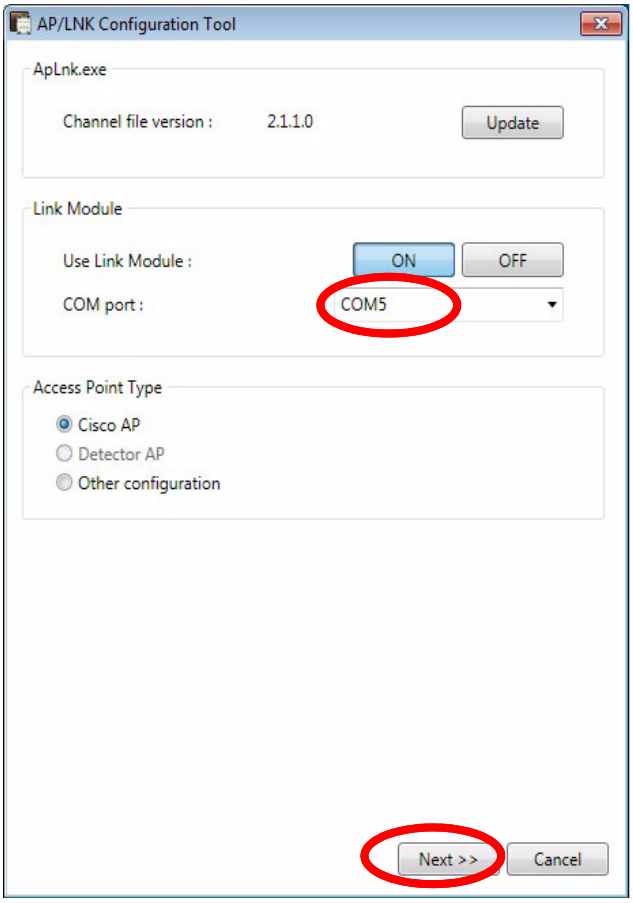


Figure43:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

4) Configure as follows and click **Next**:

Local IP Address: 192.168.100.10

ESSID: NMSAP (User-defined)

PSK: nosecret (User-defined)

Channel range: 1-13ch, WS2, W58_a

2.4G Channel: OFF

5G Channel: ON

X-ray IF IP address: 192.168.100.96

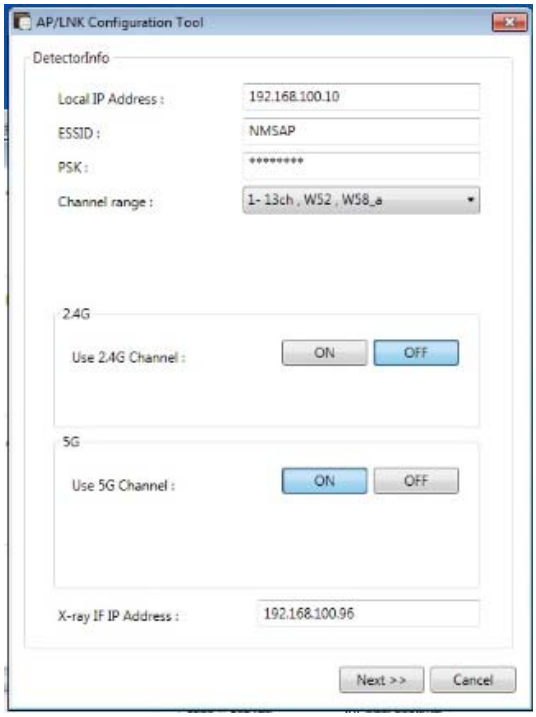


Figure44:

5) Confirm the configuration is the same as that on Figure 45. Click Send and OK.

Target IP Address: 192.168.100.200

Subnet mask: 255.255.255.0

Channel bounding: Above 40MHz

Channel: 149ch-5745MHz

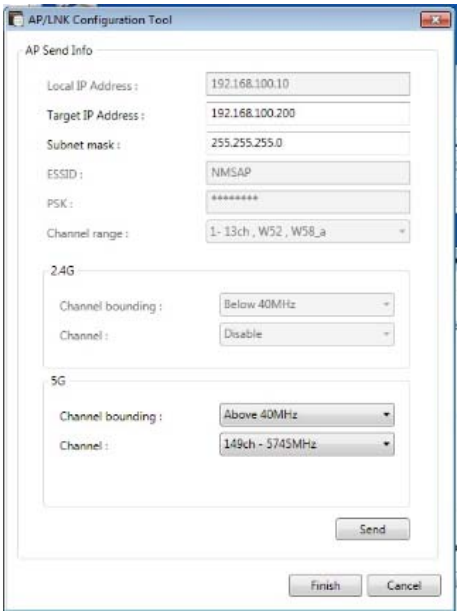


Figure45:

6) After approx. 3 minutes, a new window will pop up.

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

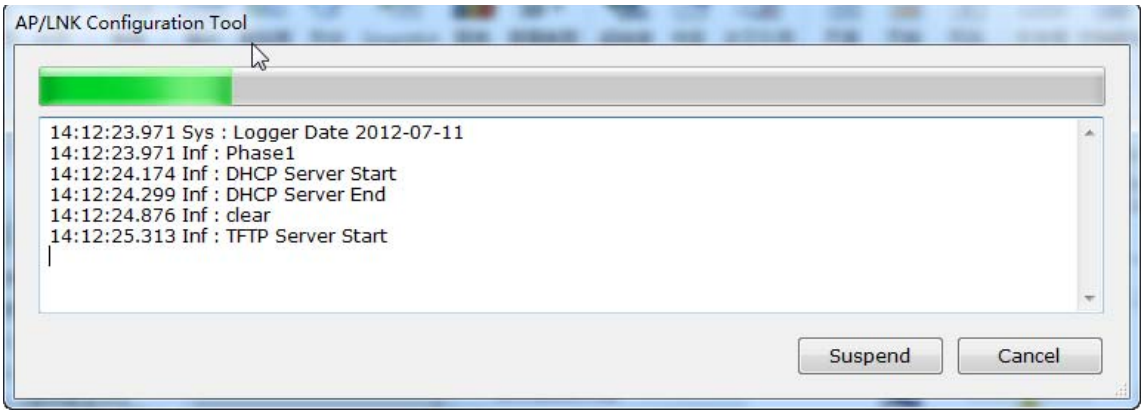


Figure46:

Click **OK** to complete AP configuration.

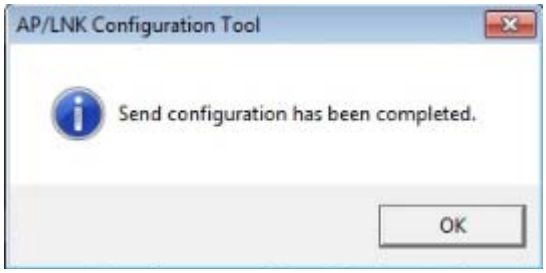


Figure47:

7) Refer to the picture below. Right click the icon at the bottom right corner in the toolbar. Click **Show**.

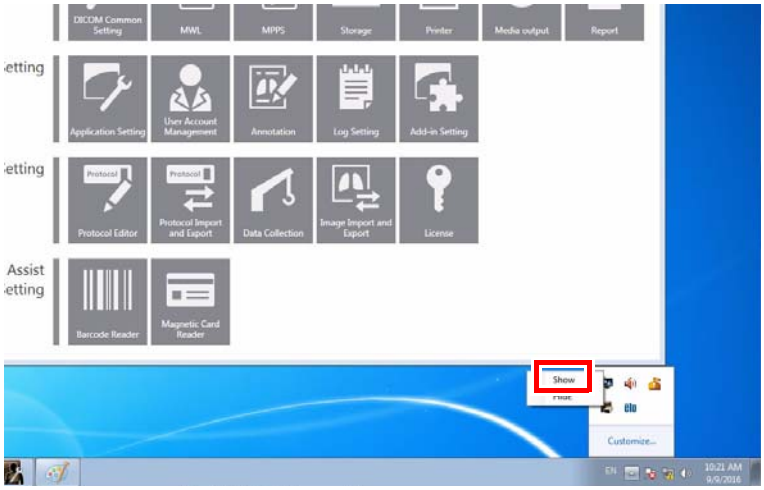


Figure48: Detector Infrared Link

8) Turn on the detector power supply

Align with the infrared communication area of the detector (distance<=30cm, angle <10degree).

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Click the power supply switch. The detector information will be automatically registered into the software.

When the wireless communication is established, the blue LED and green LED will be lighted simultaneously.

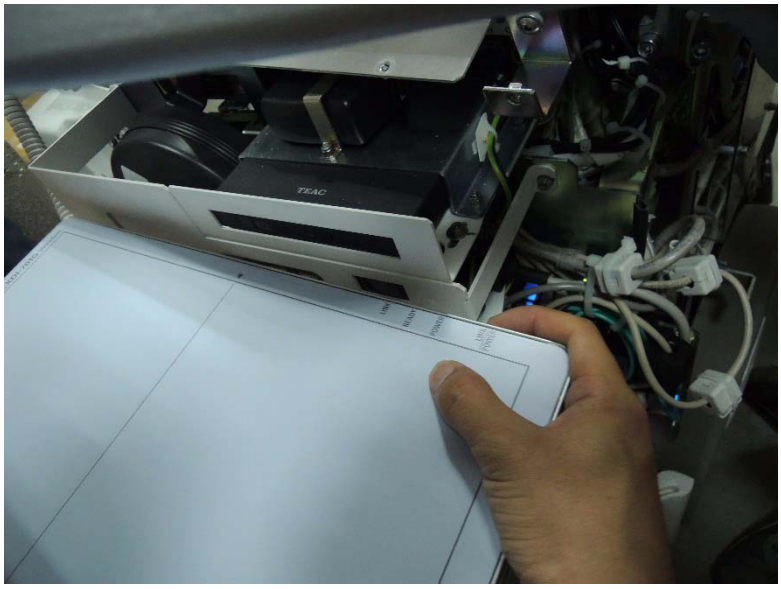


Figure49: Detector Infrared Link

9) Registration process is shown in Figure 50.

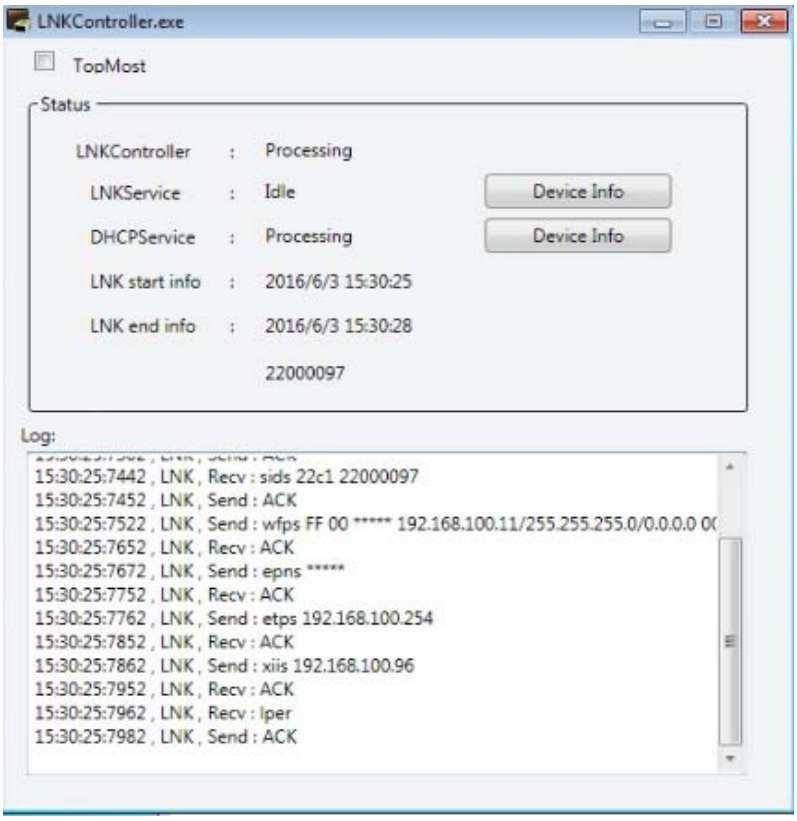


Figure50:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

10) Go back to Service Tool screen, and click **Protocol Editor**.



Figure51:

11) Click **Workspace**. Change the original selected detector to the newly matched detector and click **OK**.

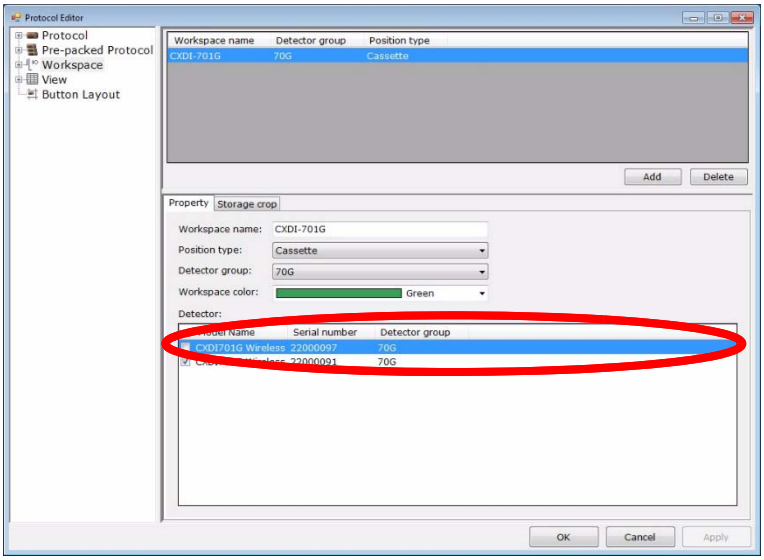


Figure52: Detector Match

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

Click **Yes** to save the configuration.

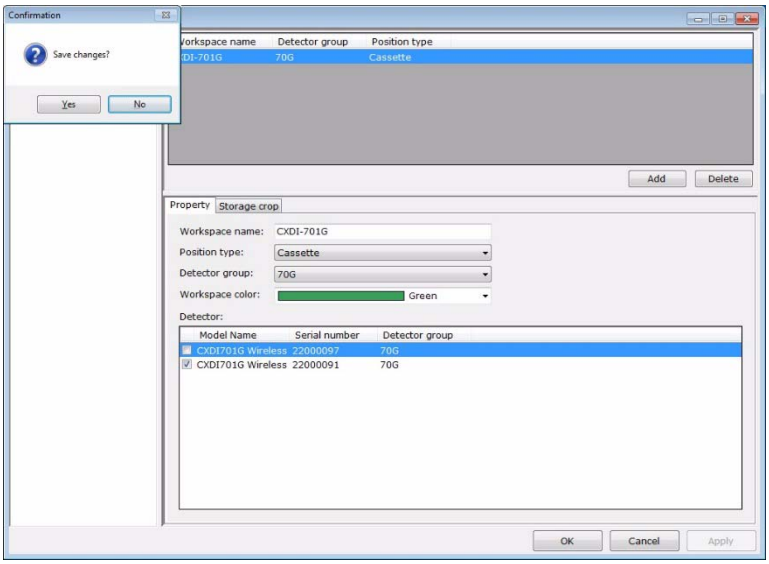


Figure53: Detector Match

12) Go back to the Service Tool main page. Click **Detector**.

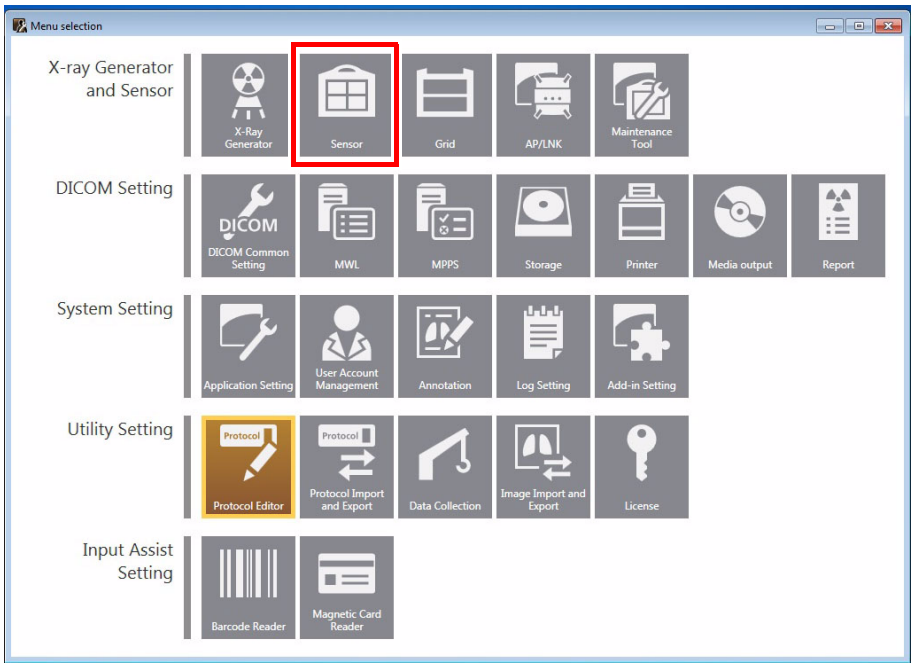


Figure54: Detector Configuration

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.

13) Select the first detector. Click **DEL** to delete the original detector.

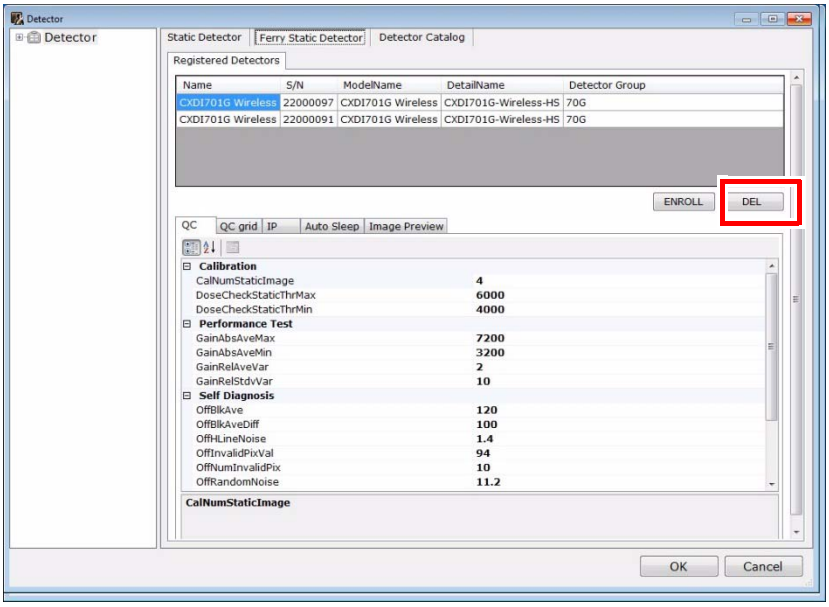


Figure55: Detector Configuration

Click **Yes**.

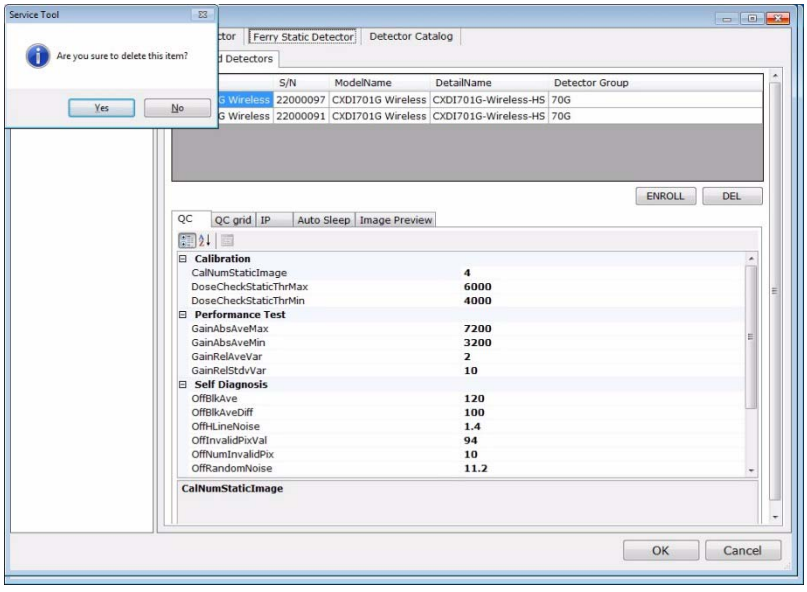


Figure56:

Warning: This page contains copyrighted materials that are confidential and/or proprietary. Any release or distribution of this material, without permission, is a violation of Law.