
Welcome to MINAS-A5 !

Usage of help function

1. The entire operation manual of PANATERM can be opened from **“Help H” – “Help of PANATERM P”** of menu bar.
2. The related page of the operation manual applied to each screen can be referable, by pressing F1 key opening the function window.
3. In case of tool bar of function window with **“Info”** button, related page of the operation manual of the driver can be referable.
4. By pressing **“Welcome”** button of the tool bar, this screen can be redisplayed again.


Note: The stop can do an automatic display of this screen by removing the check on **“Help H” – “Automatic display of “Welcome” W”** of menu bar.

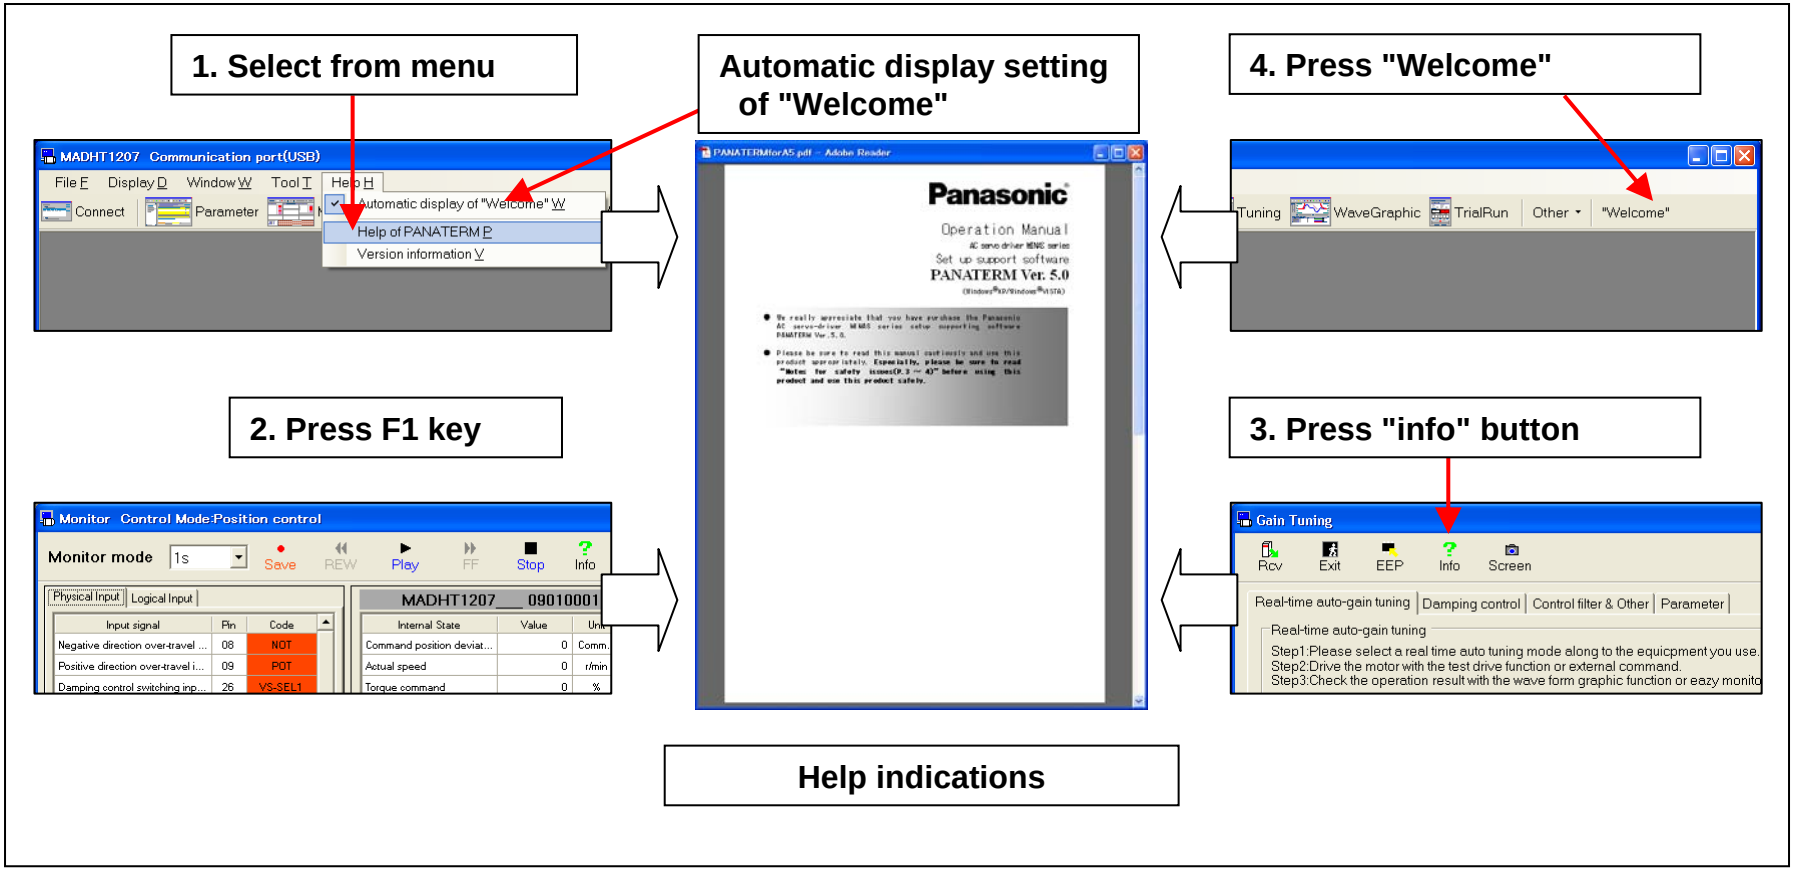

Welcome to MINAS-A5 !

Initial setup wizard


1. Open the setup wizard screen from the **“Other”** menu of the tool bar, and read of the default setting.
2. When prompted, please set the function.
3. Before the **Exit setup**, please save your settings.
4. Please press the **“Finish”** button to choose the gain tuning method.

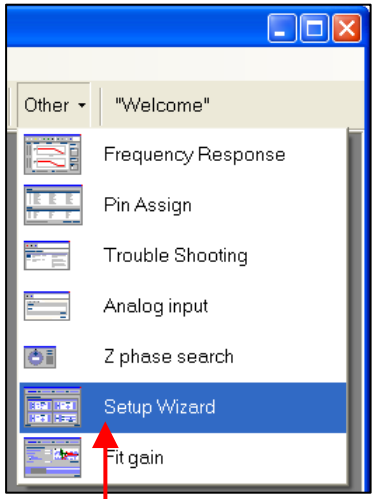


Select from the “Other” menu.

Selection of parameters for
The old results are clear when you load the default. When to start with the current parameters, please select “Read from the driver”.


1. Parameter selection

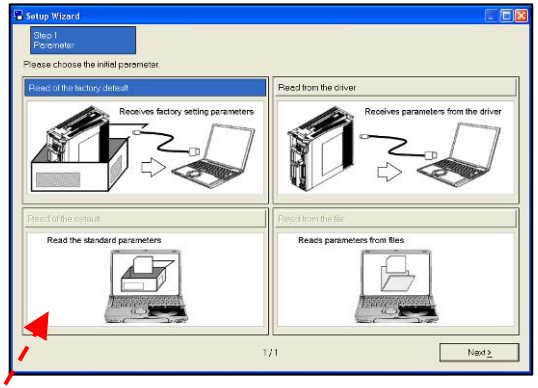

2. Set according to usage

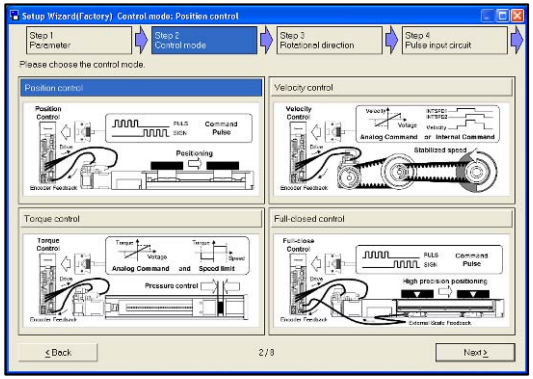


3. Save the setting result

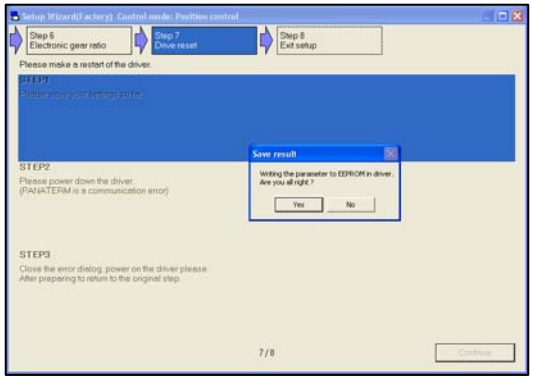

Save after


4. Choosing a gain tuning

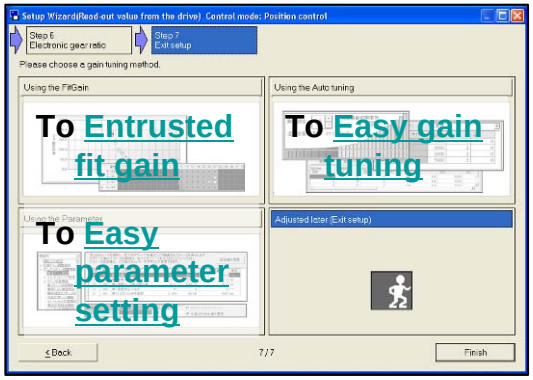

Welcome to MINAS-A5 !


Entrusted fit gain

1. Open the fit gain screen from the **Setup wizard** or the **“Other”** menu of the tool bar, and set the **positioning accuracy** that aims.
2. Drive the motor with external command input or test drive function, until the following display becomes **fit gain preparation completion**.
3. Click **“Fit gain start”** button.
4. Save the settings by pressing **“Transmit parameter”** button and **“Writing to EEPROM”** button.

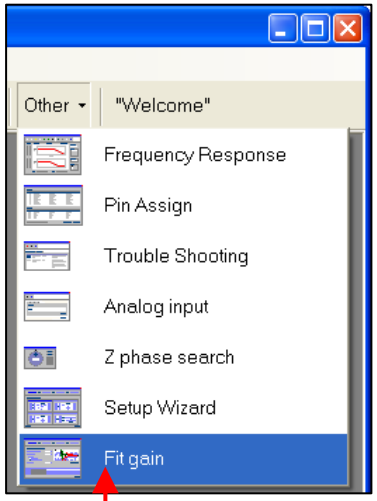


Select from the “Other” menu.

1. Initialization

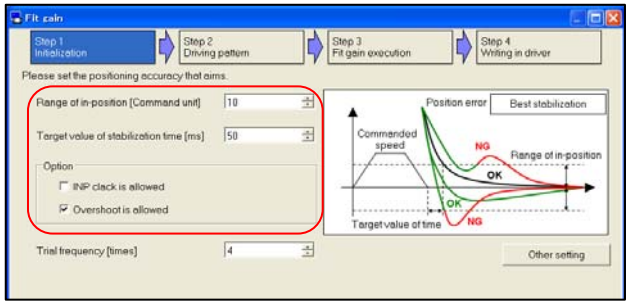


2. Driving pattern

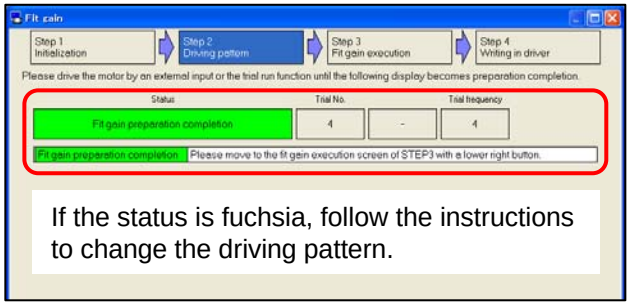


If the status is fuchsia, follow the instructions to change the driving pattern.

3. Fit gain execution

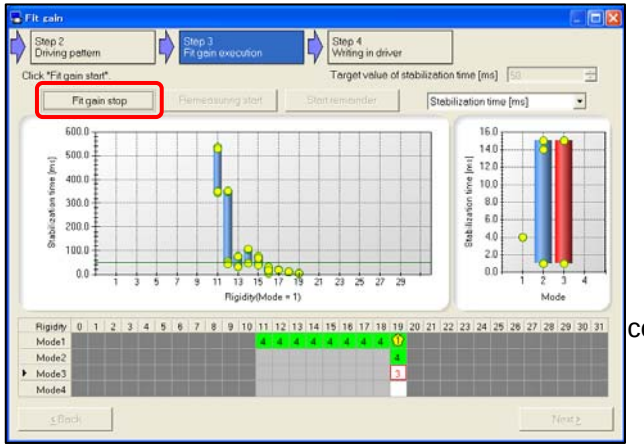

Fit gain completed

4. Writing in driver

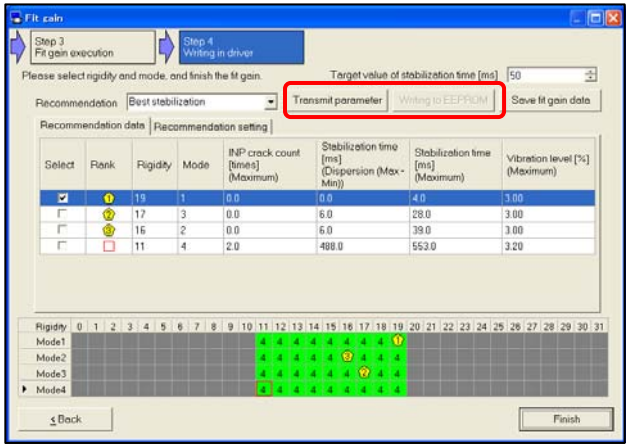



Welcome to MINAS-A5 !

Easy gain tuning

1. Open the gain tuning screen from the **Setup wizard** or the **"Tuning"** button of the toolbar, and press the **"Measurement start"** button of the easy monitor.
2. Drive the motor with external command input or test drive function, and detect the **optimal mode and stiffness setting** seeing the easy monitor.
3. After completing the tuning, close the test drive screen, set the real time auto tuning and anti vibration tab's adaptive filter mode to **0: Invalid**.
4. Save the settings by pressing **"EEP"** button of the tool bar.

1. Start the easy monitor measurement → **2. Detection of the optimal setting** → **3. Invalidate the mode** → **4. Writing to EEPROM**

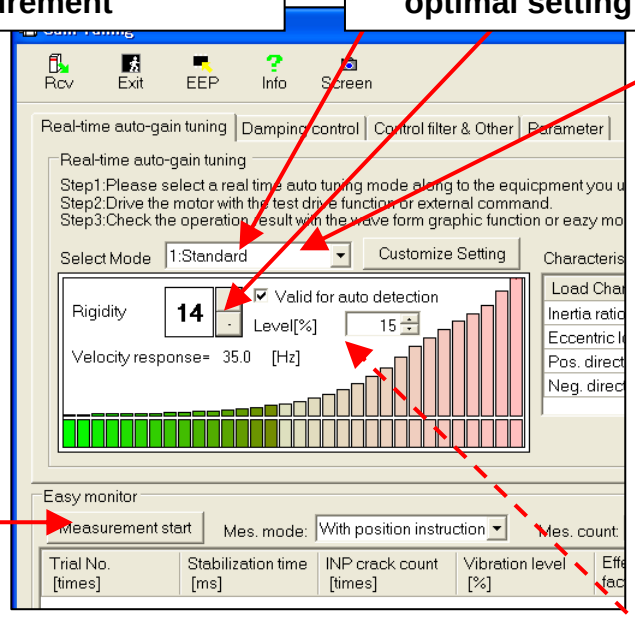

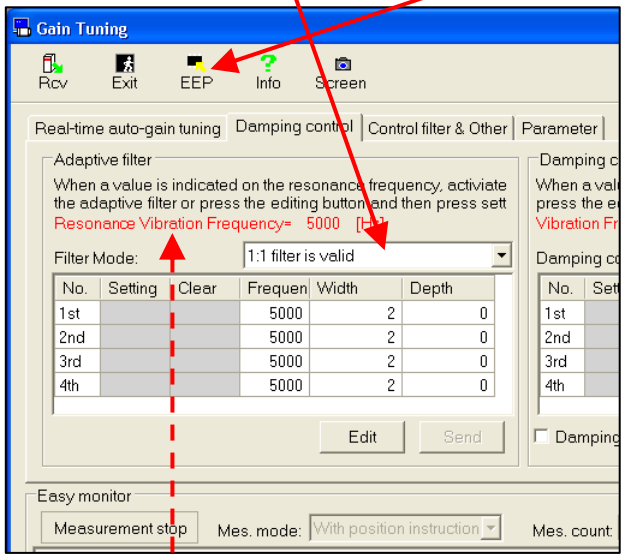

Rough standard of mode selection and stiffness setting

Horizontal axis 1:Default → 2:Positioning → 4:Friction compensation
Vertical axis 1:Default → 3:Vertical axis → 4:Friction compensation
Set in order above.
The higher stiffness is, the shorter the settling time, but INP cracking or vibration level will increase.

Adaptive filter

In case the machine being tuned has resonance points, automatically the adaptive filter is activate. Up to two adaptive filters can be set.

Automatic vibration oppressing function

When the check box is valid, the stiffness setting decrease automatically detecting the vibration. This function is valid only while the gain tuning screen is opened.

Welcome to MINAS-A5 !

Easy parameter setting


1. Open the parameter screen from the **Setup wizard** or the **"Parameter"** button of the toolbar, and the theme of the top left **"Function by function"** Please select.
2. When you select each function of the left sub-themes, the relevant parameters are displayed on the right.
3. Referring to the **Help** indicated by double clicking the underline, **set the parameters**.


Note: You can display more clearly the parameters, setting the check on **"Decimal point is displayed"**.

1. Select the "Function by function"


2. Sequentially selected function sub-themes

3. Set the parameters following Help

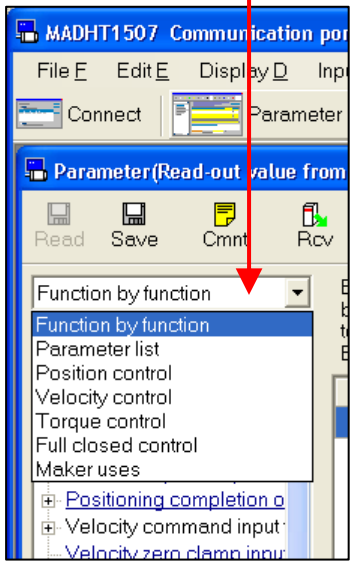

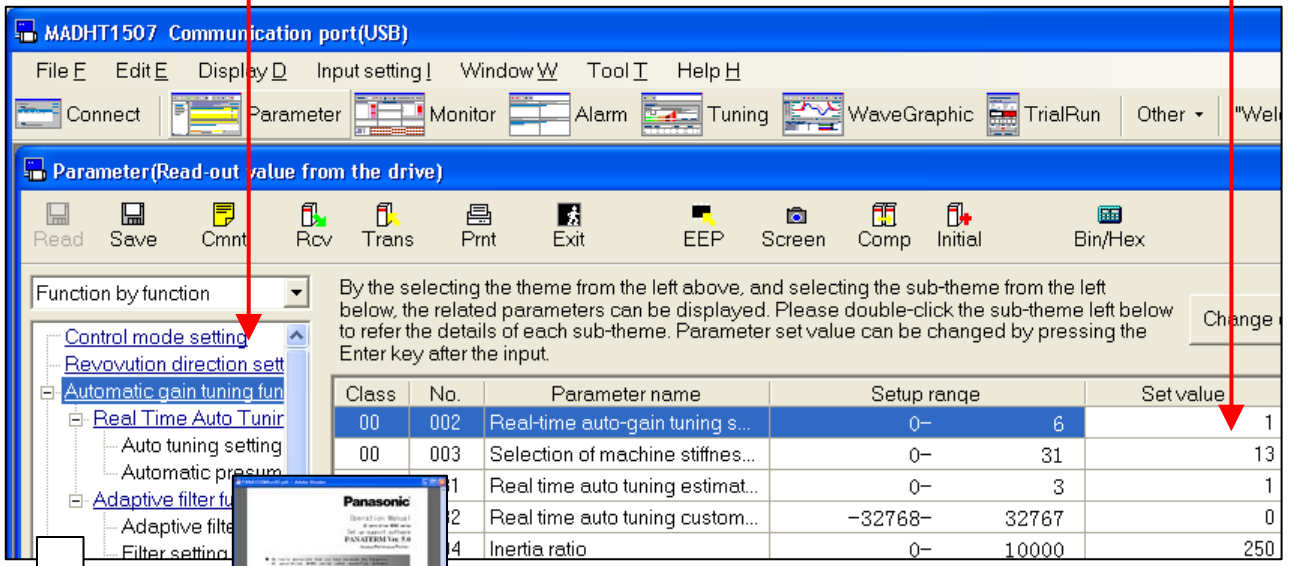

Double-click !

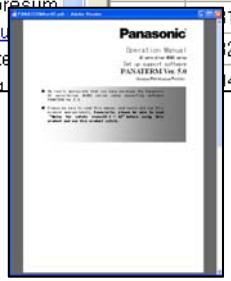

Set value

A set value becomes a display with the decimal point, and might be different from the description of the driver manual excluding the parameter screen.

Because the check of the parameter screen is put in "Decimal point is displayed", it becomes a display with the decimal point.