



FUNCTIONAL DESCRIPTION

Swinburne University UN Building – Late Labs

Prepared for:

Coldflow Mechanical Pty Ltd

Issued:

27 March 2026

Revision:

H

REVISION HISTORY

REVISION	DATE	AUTHOR	REVIEWER	STATUS
A	5 June 2024	Eric Low	-	For Approval
B	14 June 2024	Eric Low	WRAP Engineering Pty Ltd	For Approval
B.1	28 June 2024	Eric Low	-	For Approval
C	5 July 2024	Eric Low	WRAP/Swinburne	For Approval
D	23 July 2024	Aaron Cultura	WRAP/Swinburne/Coldflow	For Approval
E	05 August 2024	Aaron Cultura	WRAP/Swinburne/Coldflow	For Approval
F	20 August 2024	Aaron Cultura	WRAP/Swinburne/Coldflow	For Approval
G	18 September 2024	Aaron Cultura	WRAP/Swinburne/Coldflow	For Approval
C01	15 October 2024	Aaron Cultura	WRAP/Swinburne/Coldflow	Construction Issue
C02	20 January 2025	Aaron Cultura	WRAP/Swinburne/Coldflow	Construction Issue
C03	26 March 2025	Aaron Cultura	WRAP/Swinburne/Coldflow	Construction Issue (As Built)
C04	17 October 2025	Aaron Cultura	WRAP/Swinburne/Coldflow	Elec. Metering Update (As Built)
H	27 March 2026	Aspinder Bhurji	WRAP/Swinburne/Coldflow	As-Built

Current revision is: Revision C04

Legend on document highlights:
... - modification/amended portion from the previous revision
... - item is to be confirmed

PROJECT DETAILS

Mechanical Contractor

Coldflow Mechanical Pty Ltd

Address: 57-63 McNaughton Rd, Clayton VIC 3168

Website: www.coldflowmechanical.com.au

Phone: (03) 8572 1250

Building Automation Controls

Alerton Australia

21-29 Miles Street, Mulgrave VIC 3170

Phone: 03 9918 7777

Facsimile: 03 9808 3054

Email: info@alerton.com.au

Website: www.alerton.com.au

Alerton Project Number: 100998

TABLE OF CONTENTS

1.	Air Conditioning	5
1.1.	A/C System (Variable Refrigerant Volume Units)	5
1.1.1.	System Overview	5
1.1.2.	Gateway Devices	5
1.1.3.	Controlled Equipment	5
1.1.4.	Points List (for each VRV unit)	6
1.1.5.	Points List [People Counting System]	7
1.1.6.	Start/Stop Control	7
1.1.7.	Warm Up Cycle	8
1.1.8.	Cool Down Cycle	8
1.1.9.	CO2 Control	8
1.1.10.	Temperature Control	9
1.1.11.	Occupied Mode Control	10
1.1.12.	Trend and Data Logging	10
1.1.13.	Controller Failure / Alarms	11
1.1.14.	Fire Mode	11
1.2.	Ceiling Cassette Units	11
1.2.1.	System Overview	11
1.2.2.	Controlled Equipment	11
1.2.3.	Points List (for each cassette unit)	11
1.2.4.	Start/Stop Control	12
1.2.5.	Temperature Control	12
1.2.6.	Trend and Data Logging	12
1.2.7.	Controller Failure / Alarms	12
1.2.8.	Fire Mode	12
2.	Ventilation	13
2.1.	Energy Recovery Ventilator Unit	13
2.1.1.	System Overview	13

2.1.2.	Controlled Equipment	13
2.1.3.	Points List (for each ERV).....	13
2.1.4.	Start/Stop Control.....	14
2.1.5.	Fan Speed Control.....	14
2.1.6.	Damper Control.....	14
2.1.7.	Trend and Data Logging	14
2.1.8.	Controller Failure / Alarms	14
2.1.9.	Fire Mode.....	15
2	Exhaust Air Fans.....	15
2.2.1.	System Overview.....	15
2.2.2.	Controlled Equipment.....	15
2.2.3.	Points List.....	15
2.2.4.	Amenities Room Fan Start/Stop Control (MEF-4.1, MEF-4.2)	15
2.2.5.	Café Fan Start/Stop Control (GEF-R.1)	16
2.2.6.	Comms Room Start/Stop Control (MEF-1.1 & MEF-4.3).....	16
2.2.7.	Trend and Data Logging	16
2.2.8.	Controller Failure / Alarms	16
2.2.9.	Fire Mode	17
3.	Metering	17
3.1	Electrical Metering	17
3.1.1.	System Overview	17
3.1.2.	Meter List	17
3.2	Water Metering	18
3.2.1.	System Overview.....	18
3.2.2.	Meter List	18
4.	Miscellaneous	19
4.1	Lighting	19
4.1.1.	System Overview	19
4.1.2.	DALI Gateway.....	19
4.1.3.	Points List.....	19
4.1.4.	Floor Occupancy Monitoring.....	20

FUNCTIONAL DESCRIPTION

1. Air Conditioning

1.1. FCU/VRV System (Variable Refrigerant Volume Units)

1.1.1. System Overview

The BMS monitors and controls 20-off Variable Refrigerant Volume (VRV) units which serve Swinburne Universities UN building’s ‘late lab’ via Daikin BACnet gateway (provided by others), communicating with each individual VRV unit through high-level interface (HLI). Each VRV will have an associated outdoor unit to provide the appropriate heating and cooling to the specified zones. These VRV units will operate in conjunction with energy recovery ventilators to provide air comfort and fresh air control in addition to heating and cooling requirements. VRVs will be grouped in their respective zones (floors) and be controlled as zones as opposed to individual VRVs.

1.1.2. Gateway Devices

DESCRIPTION	DEVICE INSTANCE	IP ADDRESS	SUBNET MASK	LOCATION
Daikin Gateway	7200	172.22.33.13	255.255.255.0	MSSB-L4 (Level 4 Mechanical Services Riser)
Abakus Server	10101	172.22.33.16	255.255.255.0	Level 3 DDC Panel Location

1.1.3. Controlled Equipment

UNIT	ASSOCIATED OUTDOOR UNIT	MODEL/SERIES	LOCATION	COMMENT
Level 1				
H-LL-FCU-L1.W1	H-LL-CU-1.1	FXMQ/REY	Student Lounge	
H-LL-FCU-L1.N1			Student Lounge	
H-LL-FCU-L1.N2			Student Lounge	
H-LL-FCU-L1.I1			Student Lounge	
H-LL-FCU-L1.I2			Informal Seating	
Level 2				

UNIT	ASSOCIATED OUTDOOR UNIT	MODEL/SERIES	LOCATION	COMMENT
H-LL-FCU-L2.W1	H-LL-CU-2.1	FXMQ/REY	Student Work Zone	
H-LL-FCU-L2.N1			Student Work Zone	
H-LL-FCU-L2.N3			Project Booth	
H-LL-FCU-L2.I1			Student Work Zone	
H-LL-FCU-L2.I2			Student Work Zone	
H-LL-FCU-L2.P1			Project Room	
H-LL-FCU-L2.P2			Project Room	
Level 3				
H-LL-FCU-L3.W1	H-LL-CU-3.1	FXMQ/REY	Student Kitchen	
H-LL-FCU-L3.N1			Student Kitchen	
H-LL-FCU-L3.E1			Student Kitchen	
H-LL-FCU-L3.I1			Student Kitchen	
LEVEL 4				
H-LL-FCU-L4.N1	H-LL-CU-4.1	FXMQ/REY	Event Space	
H-LL-FCU-L4.I1			Event Space	
H-LL-FCU-L4.W1			Event Space	
H-LL-FCU-L4.E1			Event Space	

1.1.4. Points List (for each VRV unit)

POINTS	BI	AI	BO	AO	MO	HLI	COMMENTS
Unit Enable						1	Via Daikin Gateway
Unit Status						1	Via Daikin Gateway
Unit Fault						1	Via Daikin Gateway
Operation Mode Setting						1	Via Daikin Gateway
Operation Mode Status						1	Via Daikin Gateway

POINTS	BI	AI	BO	AO	MO	HLI	COMMENTS
Zone Temperature		1					0-10V Active Output Signal (Belimo 22-RTM-19-1)
Airflow Command						1	Via Daikin Gateway
Airflow Rate						1	Via Daikin Gateway
Supply Air Temperature Sensor		1					10K Type II Duct Mounted Temperature Sensor (Belimo 01DT-1LL)
Return Air Temperature Sensor		1					10K Type II Duct Mounted Temperature Sensor (Belimo 01DT-1LL)
CO2 Sensor		1					0-10V Active Output Signal (Belimo 22-RTM-19-1)
Outside Air Damper Actuator				1			0-10V Modulating Damper Actuator
Level 1							
Window Open Status		1					Via window reed switches on Level 1 Café windows
Roof							
Outside Air Temperature		1					10 Type II Wall Mounted Outdoor Temperature Sensor (Belimo 01UT-1L) (Mounted on H-LL-ERV-LR.1)

1.1.5. Points List [People Counting System]

POINTS	BI	AI	BO	AO	MO	HLI	COMMENTS
Sensor In		1					Via Abakus Gateway
Sensor Out		1					Via Abakus Gateway
Sensor Status	1						Via Abakus Gateway
Floor Occupancy		1					Via Abakus Gateway
Building Occupancy		1					Via Abakus Gateway
Floor Occupancy Status	1						Via Abakus Gateway
Building Occupancy Status	1						Via Abakus Gateway

1.1.6. Start/Stop Control

An VRV zone will be enabled when any of the following conditions are met:

- The time of the day is equal or past the units scheduled start time (initially set to 00:00-23:59 ~ 24 hours)

AND

- The floor's occupancy status is active (determined via occupancy status from the lighting interface gateway)

OR

- Overridden ON via BMS front-end.

An VRV zone will be disabled when any of the following conditions are met:

- The time of the day is equal to or past the units scheduled stop time (initially set to 00:00-23:59 ~ 24 hours)

AND

- 25 mins (adj.) after the floor's occupancy has been deactivated (determined via occupancy status from the lighting interface gateway)

OR

- Overridden OFF via BMS front-end.

Notes:

- Although the 'late lab' will operate 24/7, the schedule is be programmed such that if there are any planned shut downs, the university could lockout the VRV operation via the BMS.

1.1.7. Temperature Control (Via People Counting System)

The FCU zone temperature control will operate in two modes: fixed setpoint control and floating temperature control, based on occupancy and window status conditions. The system will monitor the Abakus People Counter, Café window status, and floor occupancy status (as provided by the lighting control system).

When the floor occupancy status is ON, and either the Abakus People Count exceeds the adjustable setpoint of 5 people OR the Café window status is open, the FCU zone temperature will be controlled to a fixed setpoint of 22.5°C. This ensures consistent comfort conditions during periods of higher occupancy or when external air is introduced into the space.

In all other conditions, the FCU zone temperature will revert to a floating control strategy, maintaining the zone temperature within the defined limits of 20°C (heating threshold) and 24°C (cooling threshold). Within this range, no active heating or cooling will be applied, allowing the space temperature to drift for improved energy efficiency.

1.1.8. Warm Up Cycle

As part of an optimised start control, each VRV unit shall utilise the control of their respective outside air motorised damper to provide a warm up cycle based on the average indoor space temperature (on the respective floor) and ambient temperatures.

The following conditions needs to be satisfied before warm-up cycle is allowed to run:

- Ambient temperature is below 20°C (adjustable)
- When the average indoor space temperature is greater than 2°C (adj.) above the ambient temperature
- The zone/floor is calling for heating

Once all the above conditions are satisfied, the motorised outside air damper of the VRV unit will fully open. When each respective zone reaches 22°C (adj.), then that VRV unit will revert to its minimum outside air damper position and controls will revert to normal operation based on CO₂ control (see section 1.1.9 CO₂ Control)

1.1.9. Cool Down Cycle

Like the 'Warm Up Cycle,' each VRV unit shall utilise the control of their respective outside air motorised damper to provide a cool down cycle based on the average indoor space temperature and ambient temperatures.

The following conditions needs to be satisfied before warm-up cycle is allowed to run:

- Ambient temperature is above 16°C (adjustable)
- When the average indoor space temperature is less than 2°C (adj.) below the ambient temperature
- The zone/floor is calling for cooling

Once all the above conditions are satisfied, the motorised outside air damper of the VRV unit will fully open. When each respective zone reaches 22°C (adj.), then that VRV unit will revert to its minimum outside air damper position and controls will revert to normal operation based on CO₂ control (see section 1.1.9 CO₂ Control)

1.1.10. CO2 Control

In 'normal operation' the BMS will modulate each VRV zone outside air damper to control zone CO₂. The outside air damper will be at its minimum outside air damper position until the zone CO₂ reaches its minimum

setpoint of 600 ppm (adj.) and will open proportionally to a maximum outside air damper position when the zone CO2 is equal to or greater than 800 ppm (adj.).

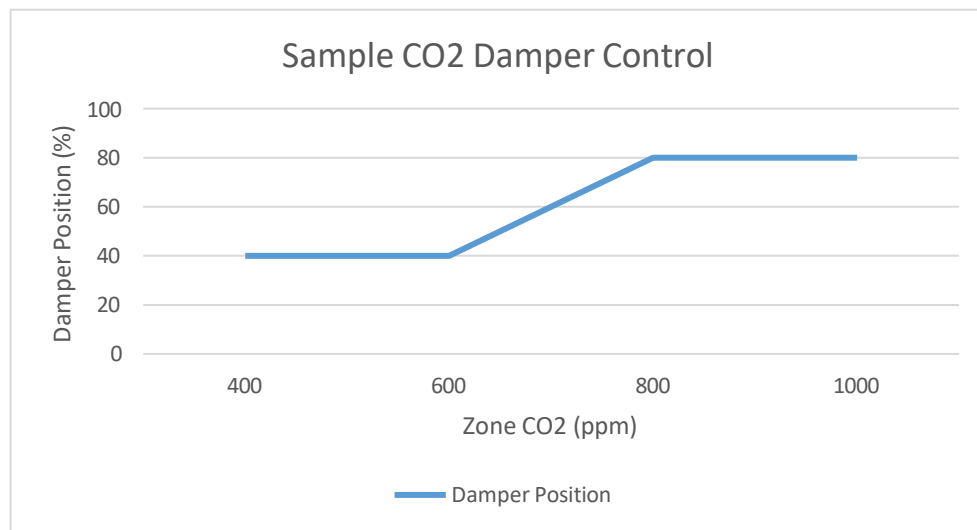


Fig. 1.1.9 Sample CO2 Damper Control. In this example, the minimum outside air damper position is commissioned at 40% open and the maximum outside air damper position at 80% open. Both parameters are adjustable on the BMS as required

1.1.11. Temperature Control

The temperature control for the 'Late Lab' building will be done in VRV grouped zones (as opposed to individual VRV control ~ i.e., average zone temperature for the entire floor is controlled by all associated VRVs). Each zone will have a desired zone temperature setpoint with adjustable deadband (initially set to 1.5°C (adj.)). The operation mode will be determined by the zone temperature with respect to the zone temperature setpoint. Each zone will have a desired temperature setpoint with an adjustable deadband; however, in line with client requirements, the control strategy will maintain the zone temperature within a defined range of 20°C to 24°C, allowing the temperature to float within this band under normal operating conditions.

Operation mode is set to **heating** when the zone temperature is below the zone temperature setpoint by more than the dead band. Likewise, operation mode is set to **cooling** when the zone temperature is above the zone temperature setpoint by more than the dead band. The temperature setpoint will be either fixed or variable depending on the current thermal conditions called for (see Section 1.1.11 Occupied Mode Control)

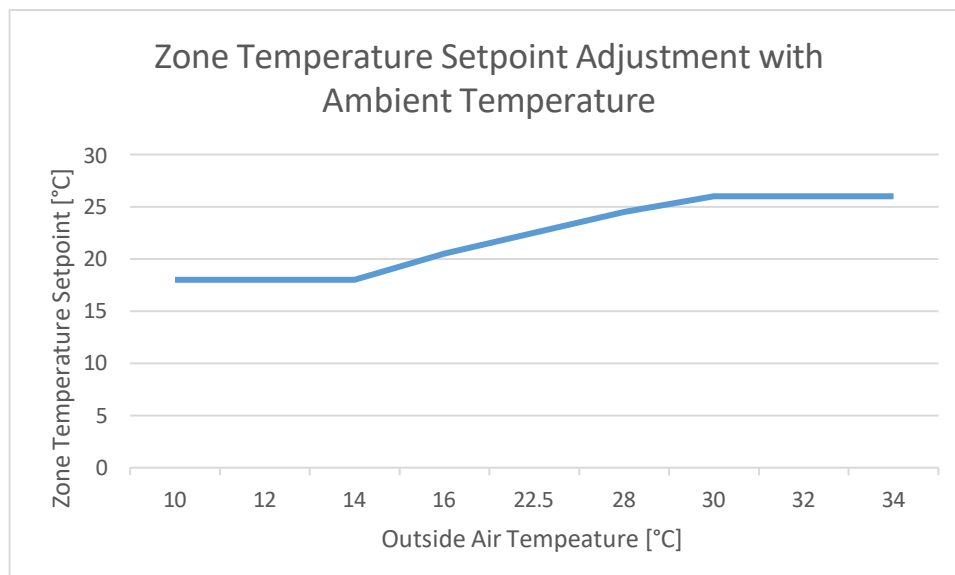


Fig. 1.1.11 Variable Setpoint Control

Note – The zone temperature set point will scale linearly with **building outside air temperature** with both high and low temperature setpoint limits. The above shows an example of how zone temperature setpoint will vary.

1.1.12. VRV Outdoor Unit (CU) Integration

The VRV outdoor unit (condensing unit) serves all associated indoor units and is responsible for refrigerant flow, capacity control, and system mode operation. The CU is controlled by the manufacturer's proprietary controller (Daikin) and is not directly controlled by the BMS. The BMS provides control of indoor unit setpoints and operating conditions, which in turn generate load demand that the CU responds to accordingly.

1.1.13. Occupied Mode Control

There are 14 XOVIS people counting sensors placed at entry and exit points on each floor of the building and for each floor, the associated sensors' **In Count** and **Out Count** is aggregated.

The Occupancy is calculated as below:

$$\text{Total Floor In Count} - \text{Total Floor Out Count} = \text{Floor Occupancy}$$

The "total floor in count" will be used to adjust the thermal condition setpoints depending on the amount of people recorded to be in the floor. Specific details are as follows:

Operation Mode (For Individual floors)	Floor Occupancy from Lighting System	HVAC Status	Abakus People Count	Thermal Conditions Type	Thermal Conditions description
All hours	ON	ON	>5	Narrow	Fixed setpoint of 22.5°C (adj.) with a deadband of 1.5°C (adj.)
			≤ 5	Wide	Variable setpoint of 19°C to 25°C (adj.) with a fixed deadband of 1.5°C (adj.) depending on ambient air temperatures.
All hours	OFF	OFF	NA	AC OFF	NA
All hours (Café Window Open, Level 1 only). <i>Note: café operator to open/close window/ as per licence agreement.</i>	ON	ON	NA (any number)	Wide	Level 1 only: Variable setpoint of 19°C to 25°C (adj.) with a fixed deadband of 1.5°C (adj.) depending on ambient air temperatures.

1.1.14. Trend and Data Logging

The BMS is monitoring and performing trend and data logging every 15 minutes. The following trend logs are visible and logged on the BMS:

- Unit Enable
- Unit Status
- Unit Fault
- Supply Air Temperature
- Return Air Temperature
- Zone Temperature Setpoint
- Zone Temperature
- Floor Occupancy

- Building Occupancy
- Floor Occupancy Status
- Building Occupancy Status

1.1.15. Controller Failure / Alarms

In the event of power loss to the local controller, the VRV unit will stop operation; once power is reinstated, the unit will commence operation in sequence (so long as the start/stop conditions are met) after a delayed time.

An alarm is generated when any of the following conditions are met after a delayed period:

- A fault signal is sent via Daikin gateway to the BMS.
- A BMS alarm will be raised when the café window is opened/kept open after the set hours

1.1.16. Fire Mode

Typically, fire mode occurs when the MSSB receives a facility General Fire Alarm (GFA) directly from the facility. Fire Indication Panel (FIP) and on receipt of a GFA, the VRV units should be disabled directly at the corresponding MSSB. As this is hardwired to the unit, the BMS should have no control over this operation and will only monitor and mimic the fire mode operation to ensure that no false BMS alarms are raised.

1.2. Ceiling Cassette Units

1.2.1. System Overview

The BMS monitors and controls 2-off Ceiling Cassette Units (AC) which serve the level 1 and 4 comms rooms in the Swinburne Universities UN building's 'late lab'. These units are Daikin cassette units which will be controlled via high-level interface from the Daikin gateway at Level 4. These AC units operate as the second stage of cooling in the comms room when the temperature exceeds 28°C.

1.2.2. Controlled Equipment

UNIT	ASSOCIATED OUTDOOR UNIT	MODEL/SERIES	LOCATION	COMMENT
Level 1				
H-LL-AC-L1.2	H-LL-CU-1.2	FCA/RZA	Comms Room	
Level 4				
H-LL-AC-L4.2	H-LL-CU-4.2	FCA/RZA	Comms Room	

1.2.3. Points List (for each cassette unit)

POINTS	BI	AI	BO	AO	HLI	COMMENTS
Unit Enable					1	Via Daikin BACnet gateway
Unit Status					1	
Unit Fault					1	

POINTS	BI	AI	BO	AO	HLI	COMMENTS
Zone Temperature Sensor		1				Wall mounted 10K type II Thermistor (Alerton TS-1050-BT)

1.2.4. Start/Stop Control

An AC will be enabled when any of the following conditions are met:

- The zone temperature exceeds 28°C (adj.)
- OR
- Overridden ON via BMS front-end.

An AC will be disabled when any of the following conditions are met:

- The zone temperature is below 28°C (adj.)
- OR
- Overridden OFF via BMS front-end.

1.2.5. Temperature Control

The AC unit will be controlled via its proprietary Daikin controller utilising the wall mounted control panel within each comms room. The BMS will only enable the unit and monitor the rooms zone temperature, run status and unit fault.

1.2.6. Trend and Data Logging

The BS is monitoring and performing trend and data logging every 15 minutes. The following trend logs are visible and logged on the BMS:

- Unit Enable
- Unit Status
- Unit Fault
- Zone Temperature

1.2.7. Controller Failure / Alarms

In the event of power loss to the local controller, the AC unit will stop operation; once power is reinstated, the unit will commence operation in sequence (so long as the start/stop conditions are met) after a delayed time.

An alarm is generated when any of the following conditions are met after a delayed period:

- There is a mismatch between the AC commanded value and actual value (determined from interface card).
- The BMS receives a fault signal directly from the interface card.
- The zone temperature exceeds 35°C (adj.) for a period of 5 minutes (adj.).

1.2.8. Fire Mode

Typically, fire mode occurs when the MSSB receives a facility General Fire Alarm (GFA) directly from the facility. Fire Indication Panel (FIP) and on receipt of a GFA, the cassette units should be disabled directly at the corresponding MSSB. As this is hardwired to the unit, the BMS should have no control over this operation and will only monitor and mimic the fire mode operation to ensure that no false alarms are raised.

2. Ventilation

2.1. Energy Recovery Ventilator Unit

2.1.1. System Overview

The BMS monitors and controls 4-off Energy Recovery Ventilator (ERV) unit. The ERV utilizes an exhaust and supply fan and heat exchanger to provide conditioned ventilation to the served areas. The unit will operate in conjunction with motorised dampers to provide adequate air quality control to respective zones.

2.1.2. Controlled Equipment

UNIT	MODEL	ASSOCIATED FCU'S	LOCATION
H-LL-ERV-LR.1	XEM3600P3S	Level 1 & 2 FCU's	Roof
H-LL-ERV-L3.1	XCM925P3S	Level 3 FCU's	Level 3
H-LL-ERV-L4.1	XCM625P1	H-LL-FCU-L4.W1 & H-LL-FCU-L4.N1	Level 4
H-LL-ERV-L4.2	XCM625P1	H-LL-FCU-L4.I1 & H-LL-FCU-L4.E1	Level 4

2.1.3. Points List

POINTS	BI	AI	BO	AO	HLI	COMMENTS
Supply Fan Status	1					N/O Relay
Supply Fan Enable				1		Relay Output (For ERV-4.1 & ERV-4.2 Only)
Supply Fan Speed Reference				1		0-10V Modulating
Exhaust Fan Speed Reference				1		0-10V Modulating
Fan Fault	1					
Supply Air Temperature Sensor		1				10K Type II Duct Mounted Temperature Sensor (Belimo 01DT-1LL)
Exhaust Air Temperature Sensor		1				10K Type II Duct Mounted Temperature Sensor (Belimo 01DT-1LL) (H-LL-ERV-L3.1 only)
Return Air Temperature Sensor		1				10K Type II Duct Mounted Temperature Sensor (Belimo 01DT-1LL) (H-LL-ERV-L3.1, H-LL-ERV-L4.1, H-LL-ERV-L4.2 only)
Supply Duct Static Pressure Sensor		1				0-10V Active Output Signal (Belimo 22ADP-186)
Zone Occupancy	1					Via Abakus Analytic

POINTS	BI	AI	BO	AO	HLI	COMMENTS
Floor Smoke Dampers				5		0-10V Modulation (for ERV-R.1 only)

2.1.4. Start/Stop Control

Any ERV will be enabled when any of the following conditions are met:

- When any associated FCU zone is activate.

OR

- Overridden ON via BMS front-end

Any ERV will be disabled when any of the following conditions are met:

- There are no associated FCU zones active.

OR

- Overridden OFF via BMS front-end

2.1.5. Fan Speed Control

Each ERV will have its own duct static pressure sensor installed in the supply air duct. The BMS will utilise PI (proportional integral) control to modulate any ERV's fan speed to a supply duct static pressure sensor. Supply duct static pressure sensor setpoints will be determined during commissioning (adj.).

2.1.6. Damper Control

The ERV floor smoke dampers for each floor will drive fully open when power is available on the corresponding floor (powered and controlled by others at the MSSB).

2.1.7. Trend and Data Logging

The BMS is monitoring and performing trend and data logging every 15 minutes. The following trend logs are visible and logged on the BMS:

- Supply Fan Status
- Supply Fan Speed
- Exhaust Fan Speed
- Supply Air Temperature
- Exhaust Air Temperature
- Return Air Temperature
- Supply Duct Static Pressure

2.1.8. Controller Failure / Alarms

In the event of power loss to the local controller, the ERV unit will stop operation; once power is reinstated, the unit will commence operation in sequence (so long as the start/stop conditions are met) after a delayed time. An alarm is generated when any of the following conditions are met after a delayed period:

- There is a mismatch between the ERV's commanded value and actual value.
- The BMS receives a fault signal directly from the ERV fault relays.

2.1.9. Fire Mode

Typically, fire mode occurs when the MSSB receives a facility General Fire Alarm (GFA) directly from the facility. Fire Indication Panel (FIP) and on receipt of a GFA, the ERV units should be disabled directly at the corresponding MSSB. As this is hardwired to the unit, the BMS should have no control over this operation and will only monitor and mimic the fire mode operation to ensure that no false alarms are raised.

2.2. Exhaust Air Fans

2.2.1. System Overview

The BMS monitors and controls 5-off Exhaust Air Fans which serve the Swinburne Universities UN building 'late labs.' The fans provide ventilation to the comms, amenities rooms and the café tenancy.

2.2.2. Controlled Equipment

UNIT	LOCATION	AREA SERVED
H-LL-MEF-L1.1	Level 1 Comms Room	Level 1 Comms Room
H-LL-MEF-L4.1	Level 4	Level 1-3 Amenities
H-LL-MEF-L4.2	Level 4	Level 4 Amenities
H-LL-MEF-L4.3	Level 4 Comms Room	Level 4 Comms Room
H-LL-GEF-LR.1	Level 3 Roof	Café General Exhaust

2.2.3. Points List

POINTS	BI	AI	BO	AO	HLI	COMMENTS
Unit Enable			1			Via MSSB-L0
Unit Status	1					Via MSSB-L0
Occupancy	1					Amenities Room PIR Sensor (Supplied by Electrical Contractor)

2.2.4. Amenities Room Fan Start/Stop Control (MEF-4.1, MEF-4.2)

Any fan is enabled when any of the following conditions are met:

- The toilet area is determined to be occupied (via occupancy status from the lighting interface gateway)

OR

- Overridden ON via BMS front-end.

Any fan is disabled when any of the following conditions are met:

- The toilet area is determined to be unoccupied (via dedicated occupancy status signal from the lighting interface gateway) for a period of 2 mins (adj. – approximately 1.5 times the amount of time required to perform a full air exchange in the area)

OR

- Overridden OFF via BMS front-end.

2.2.5. Café Fan Start/Stop Control (GEF-R.1)

GEF-R.1 is enabled when any of the following conditions are met:

- The time is equal to or after the units scheduled start time.

OR

- Overridden ON via BMS front-end.

GEF-R.1 is disabled when any of the following conditions are met:

- The time is equal to or after the units scheduled stop time.

OR

- Overridden OFF via BMS front-end.

2.2.6. Comms Room Start/Stop Control (MEF-1.1 & MEF-4.3)

The comms room exhaust fans operate as the first stage of cooling when the temperature inside the comms room/s exceeds 26°C (adjustable) and are less than 28°C (adjustable).

Any fan is enabled when any of the following conditions are met:

- The zone temperature exceeds 26°C (adj.).

OR

- Overridden ON via BMS front-end.

Any fan is disabled when any of the following conditions are met:

- The zone temperature drops below 26°C (adj.).

OR

- The zone temperature exceeds 28°C (adj.).

OR

- Overridden OFF via BMS front-end.

2.2.7. Trend and Data Logging

The BMS is monitoring and performing trend and data logging every 15 minutes. The following trend logs are visible and logged on the BMS:

- Unit Enable
- Unit Status

2.2.8. Controller Failure / Alarms

In the event of power loss to the local controller, the exhaust fan will stop operation; once power is reinstated, the unit will commence operation in sequence (so long as the start/stop conditions are met) after a delayed time.

An alarm is generated when any of the following conditions are met after a delayed period:

- There is a mismatch between the Fan's commanded value and its actual value (determined by a current sensing relay in associated MSSB).

2.2.9. Fire Mode

Typically, fire mode occurs when the MSSB receives a facility General Fire Alarm (GFA) directly from the facility. Fire Indication Panel (FIP) and on receipt of a GFA, the fans should be disabled directly at the corresponding MSSB. As this is hardwired to the unit, the BMS should have no control over this operation and will only monitor and mimic the fire mode operation to ensure that no false alarms are raised.

3. Metering

3.1. Electrical Metering

3.1.1. System Overview

The BMS Monitors 26-off new electrical meters throughout the Swinburne Universities building UN's 'late lab'.

3.1.2. Meter List

METER	METER TYPE	LOCATION
H-LL-Main Supply	Crompton SL1	Level 1 (MDB)
H-LL-L1 DB-HYD	Compton TL1 – Load 1	
H-LL-MSSB-L1	Compton TL1 – Load 2	
H-LL-MSSB-L2	Compton TL1 – Load 3	
H-LL-MSSB-L3	Compton TL1 – Load 1	
H-LL-MSSB-L4	Compton TL1 – Load 2	
H-LL-Lift	Compton TL1 – Load 3	
H-LL-HDB-L1.01 Lighting	Rayleigh RI-D460 (Channel 1)	Level 1 (MDB-L1)
H-LL-HDB-L1.01 Power	Rayleigh RI-D460 (Channel 2)	
H-LL-HDB-L2.01 Lighting	Rayleigh RI-D460 (Channel 1)	Level 2 (HDB-L2.01)
H-LL-HDB-L2.01 Power	Rayleigh RI-D460 (Channel 2)	
H-LL-HDB-L3.01 Lighting	Rayleigh RI-D460 (Channel 1)	Level 3 (HDB-L3.01)

METER	METER TYPE	LOCATION
H-LL-HDB-L3.01 Power	Rayleigh RI-D460 (Channel 2)	
H-LL-HDB-L4.01 Lighting	Rayleigh RI-D460 (Channel 1)	Level 4 (HDB-L4.01)
H-LL-HDB-L4.01 Power	Rayleigh RI-D460 (Channel 2)	
H-LL-DB-Café Lighting	Rayleigh RI-D460 (Channel 1)	Level 1 (DB-Cafe)
H-LL-DB-Café Power	Rayleigh RI-D460 (Channel 2)	
SPARE	TBC	TBC
SPARE	TBC	TBC
SPARE	TBC	TBC
SPARE	TBC	TBC
SPARE	TBC	TBC

Note – Virtual meters TBC

3.2. Water Metering

3.2.1. System Overview

The BMS Monitors 1-off new water meter which serves the Swinburne Universities UN building's late lab CW supply.

3.2.2. Meter List

METER	METER TYPE	LOCATION
H-LL-L1 CW Meter	Cold Water Pulse Meter	Level 1 Staircase (near ATC-LL connection)

4. Miscellaneous

4.1. Lighting

4.1.1. System Overview

The BMS monitors 1-off DALI Lighting system (HLI) which serves the Swinburne Universities UN buildings 'late lab'. The DALI gateway and BMS points to be provided by others.

Specific Dynalite DALI BACnet gateway points are to be provided to the BMS to fulfil the occupancy mode control specified in Section 1.1.11

4.1.2. DALI Gateway

DESCRIPTION	DEVICE INSTANCE	IP ADDRESS	SUBNET MASK	LOCATION
DALI Gateway	7400	172.22.33.19	255.255.255.0	MDB

4.1.3. Points List

POINTS LOCATION	POINT DESCRIPTION	BI	AI	BO	AO	HLI	COMMENTS
Level 1	LC-1A (AMENITY ZONE)					1	
	LC-1C (CENTRAL ZONE)					1	
	LC-1E (EAST ZONE)					1	
	LC-1E (EXTERNAL)					1	
	LC-1S (STAIRS)					1	
	LC-1W (WEST ZONE)					1	
Level 2	LC-2A (AMENITY ZONE)					1	
	LC-2C (CENTRAL ZONE)					1	
	LC-2E (EAST ZONE)					1	
	LC-2E (EXTERNAL)					1	
	LC-2S (STAIRS)					1	
	LC-2W (WEST ZONE)					1	
Level 3	LC-3A (AMENITY ZONE)					1	
	LC-3W (WEST ZONE)					1	

POINTS LOCATION	POINT DESCRIPTION	BI	AI	BO	AO	HLI	COMMENTS
	LC-3C (CENTRAL ZONE)					1	
	LC-3E (EAST ZONE)					1	
	LC-3S (STAIRS)					1	
	LC-3E (EXTERNAL)					1	
Level 4	LC-4A (AMENITY ZONE)					1	
	LC-4C (CENTRAL ZONE)					1	
	LC-4E (EAST ZONE)					1	
	LC-4S (STAIRS)					1	
	LC-4E (External)					1	

4.1.4. Floor Occupancy Monitoring

The BMS monitors the provided BACnet lightning gateway points from the DALI lighting system. These lighting points are pre-programmed by the lighting contractor to set the corresponding lighting zone at different lux levels depending on motion detected within the zone.

The BMS monitors the current lux level on each specified lighting zone and once all the lighting zones in a particular level are determined to be off (0% level) for 25 mins (determined by the lighting gateway, see *section 1.1.6*), the HVAC equipment serving the floor will be turned off