

A simple but powerful multi-mode envelope generator with eight modes, from a classic ADSR to a bouncing ball.

LEDs

Show which stage the envelope is in. Each LED's colour matches the knob controlling that stage. They also show the mode, the time range and hidden settings while you change them.

Mode Button

Click: next mode.

Hold 1 s: 10 s / 100 s time range.

Hold + turn a knob: hidden settings (page 2).

CV Inputs


Four knobs with CV inputs [0–5 V]. Labels show each knob's job in modes 1–4.

Gate

The main way to play the envelope. The rising edge starts the attack, the falling edge starts the release. In loop modes, a held gate pauses the loop at zero.


Trigger

In ADSR mode, Trig pings the envelope back up through the attack. With no gate it plays a full attack, decay and release. In ACRC mode, Trig fires a full cycle. In loop modes, Trig hard-syncs the loop.

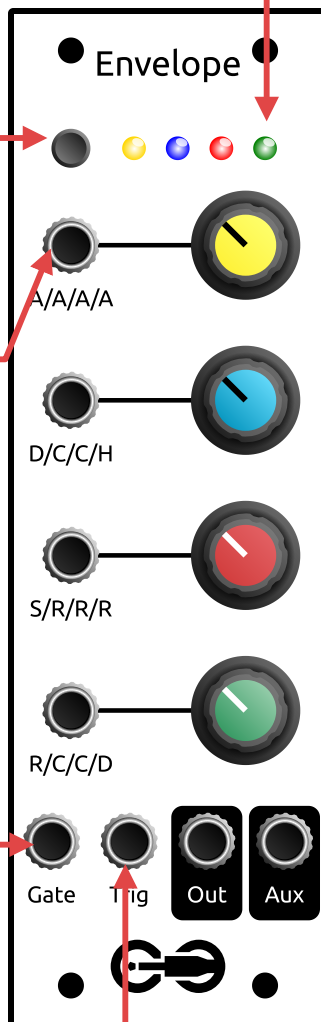


●●●● ADSR Mode

The classic envelope. The four knobs set attack, decay, sustain and release. Attack and decay/release can be curved with hidden settings.

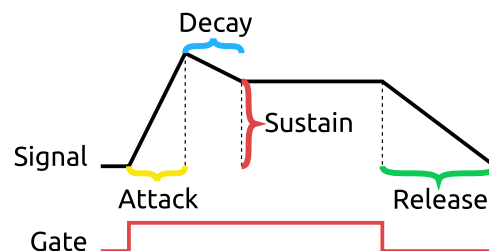

●●●● ACRC Mode

Only attack and release have times, but the curve (C) of each can be adjusted from exponential to linear to logarithmic.

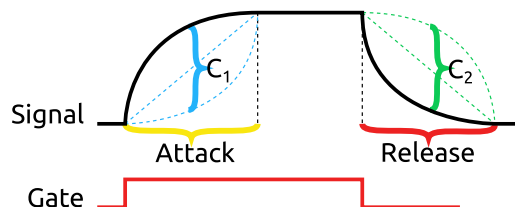


●●●● ACRC Loop Mode

Exactly the same as ACRC except the attack and release loop right into each other with no delay between them.

●●●● AHRD Loop Mode

Attack and release are both linear, with an adjustable hold at the top and delay at the bottom.

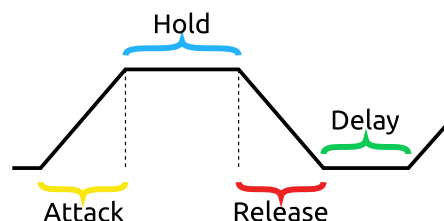



Hidden Settings

Hold the Mode button and turn a knob. The LEDs show the value; let go when you're done. Settings are saved.

- Knob 1 **ADSR attack curve**
- Knob 2 **ADSR decay & release curve**
- Knob 3 **Gate behaviour** (ADSR, ACRC)
- Knob 4 **Aux mode**

Curves: the middle of the knob is linear, shown by the two middle LEDs ○●●○. Turn left for a fast start that eases off, right for a slow start that speeds up.

Gate behaviour (one LED per option, top to bottom):

- ○ ○ ○ **Continue** (default): restart from the current level.
- ○ ● ○ **Reset:** restart from zero.
- ○ ○ ● **Legato:** ignore new gates until the release.
- ○ ○ ● **Cycle:** loop while the gate is held.

After an edit, the knob you turned only takes back its normal job once you turn it past its old position, so nothing jumps.

Aux Output

A 0/5 V gate or trigger tied to the envelope's stages. Set it with knob 4 in the hidden settings. Until you do, the jumpers on the back choose it.

- ○ ○ ○ **End of rise:** high from the top until the envelope ends
- ● ○ ○ **End of fall:** high once the envelope ends
- ○ ● ○ **Non-zero:** high while the envelope is above zero
- ○ ○ ● **Follow gate:** high from attack to release
- ● ○ ○ **End-of-rise trigger:** 5 ms pulse
- ○ ● ● **End-of-fall trigger:** 5 ms pulse, one per burst pulse or bounce


Time Range & Saving

Hold Mode 1 s and release: 10 s or 100 s per stage (all four LEDs blink = 100 s). Mode, range and hidden settings are saved. Hold Mode at power-on to reset.

●●●● Slew Mode

● Input ● Rise ● Fall ● Shape


The output follows knob 1 and its CV at limited speeds. Gate holds the output; Trig drops it to zero.

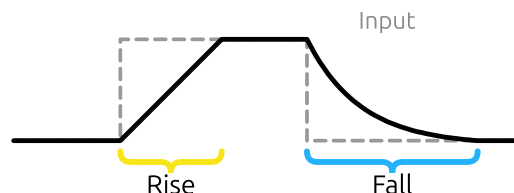

●○●● Burst Mode

● Pulse time ● Pulses ● Heights ● Curve


Trig fires 1–16 pulses; a held gate repeats them. Heights: centre is equal, left shrinks, right grows.

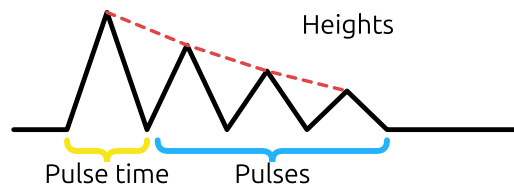

●●●○ Random Loop Mode

● Time ● Time rand. ● Height rand. ● Curve

Loops with a new random time (± 2 octaves) and height every cycle. Gate pauses at zero; Trig restarts.

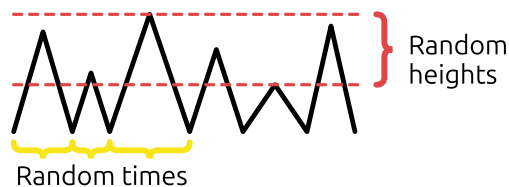

●●●○ Bouncing Ball Mode

● Drop time ● Bounce ● Gravity ● Height

Trig drops the ball; a held gate lifts and holds it. Gravity goes from straight lines to parabolas to sharper.

