





电源灯与模块运行状态灯

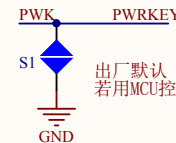

出厂默认 短路S1 开机自启动
若用MCU控制开关机 请去掉短路

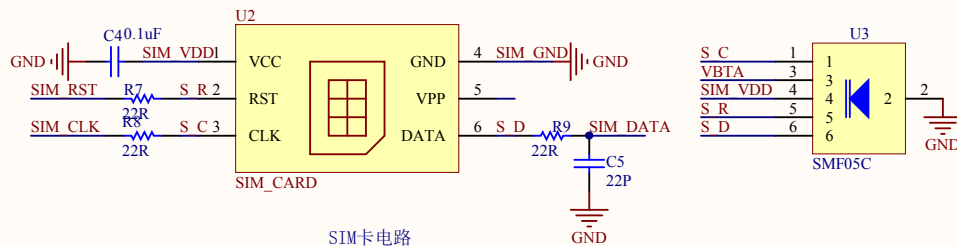

SIM卡电路

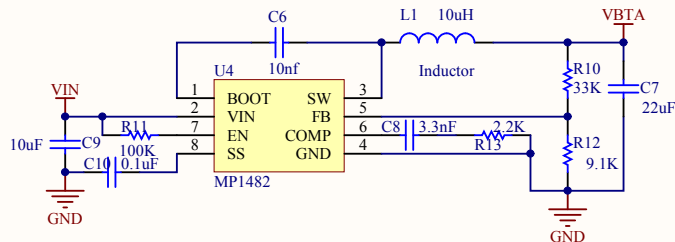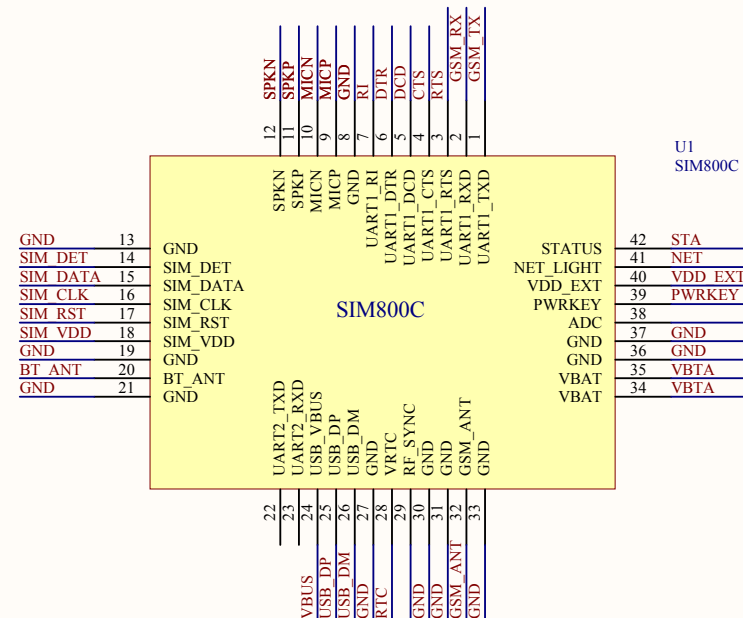

飞思创电子科技

<https://freestrong.taobao.com>

Title				FS- SIM800C MICRO			
Size		Number		飞思创--freestrong--交流群		Revision	
A4		QQ:88606884				V2.0	
Date:		2017/4/6		Sheet of			
File:		C:\Users\...SIM800C MICRO V3.SchDoc Drawn By:					