FLUID FILL LOCATIONS


The Power Electronics Cooling System uses GM OE DEX-COOL antifreeze. *1 gal Part No. ACDelco: 10-101 GM: 12377912*

The Generator & Traction Motor cooling and lubrication system uses GM OE DEXRON VI Automatic Transmission Fluid (ATF). *Part No. ACDelco: 10-9029 GM: 88861*


Step 1: Open the hood of the truck and locate the Power Electronics Cooling WEG (blue). The Gene and Traction Motor oil cooling reservoir (green).
Step 2: With the vehicle off fill the coolant until it no longer "burps" and is at least 3 inches from the top of the WEG.
Step 3: Proceed to pour ATF into the oil reservoir until it reaches the top dot on the dipstick.

Note: Fluid level does not need to be exact at this point. This step is just to provide lubrication for the coolant and oil pumps.



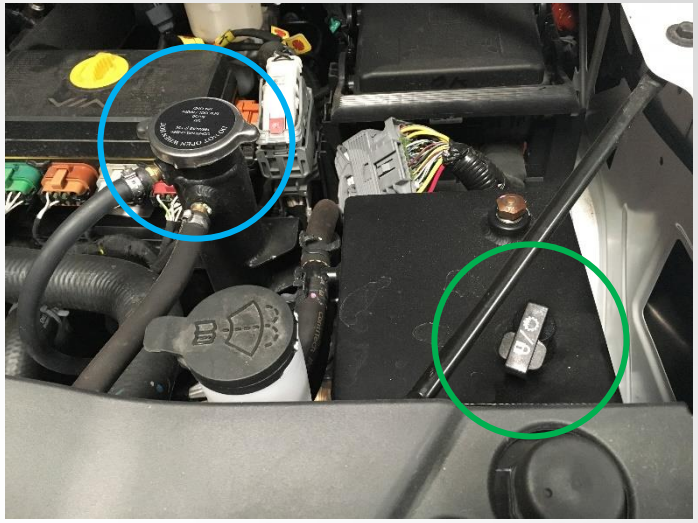



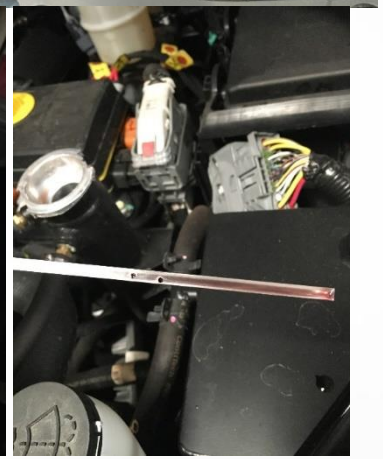

CONFIDENTIAL

RUNNING EMP POWER ELECTRONICS PUMP

To run the power electronics pump without the VIA scan tool, first locate the EMP power electronics pump. The pump is located in the middle behind the front bumper.


Step 1: Remove the front splash shield from the underside of the truck. Pump is shown in in red to the right.

Step 2: With the ignition key on disconnect the smaller of the two connectors on the bottom (shown in green to the right). This forces the pump to full speed. There will be an audible sound from the pump. If there is not then further diagnostics is needed to verify if power and ground are present at the larger connector.


Step 3: With the pump running fill the WEG until it maintains a fluid level about 3 inches from the top of the reservoir.

Note: Once the WEG is full insure that the cap is reinstalled before plugging the smaller connector back in or turning off the truck, failing to do so may result in a surge of fluid and over flow of the reservoir.

Step 4: Reconnect the smaller connector. If this is the only pump that is being run then the splash shield can be reinstalled.

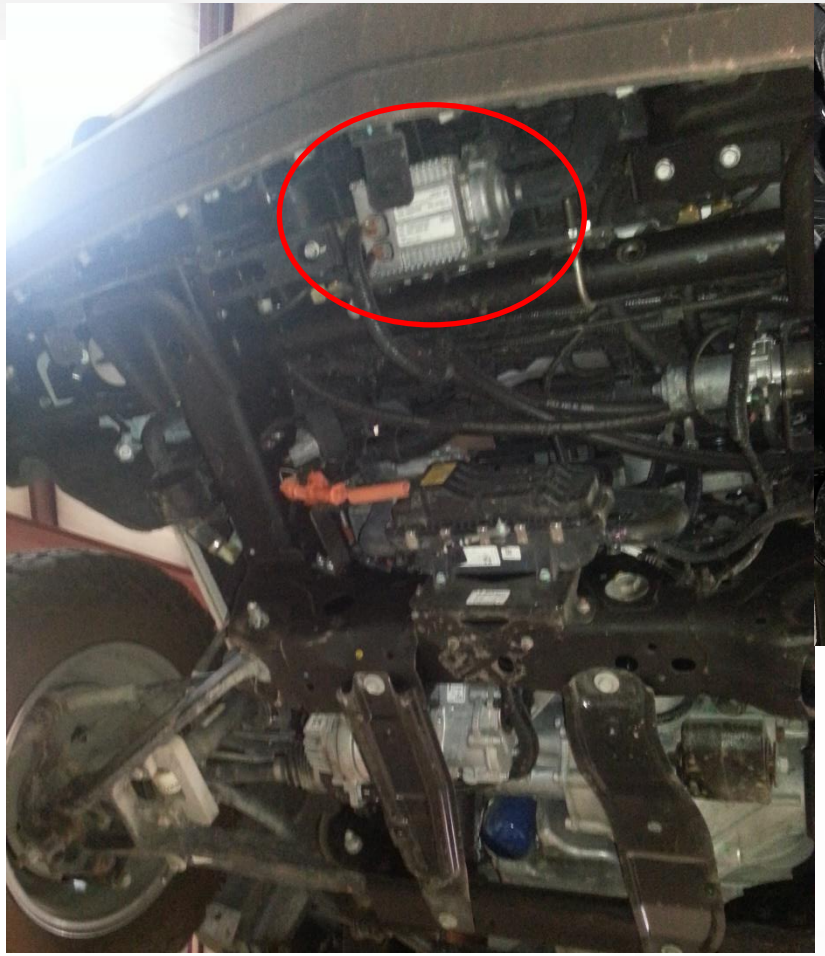



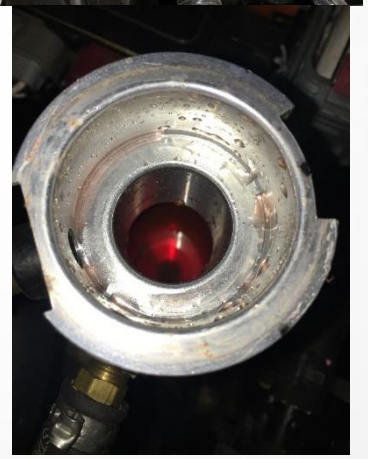

CONFIDENTIAL

RUNNING OIL PUMPS


To run the oil pumps without the VIA scan tool, first locate the two oil pumps. The pumps are located on the mid right and left side behind the front bumper.

Step 1: Remove the front splash shield from the underside of the truck. Pumps are shown in in red to the right.


Step 2: Find and disconnect the oil pump connector. Connect a 12v jumper harness to the oil pump connector, Blue wire is 12v Positive. Black wire is 12v Negative. There should be an audible sound when the pump comes on. Run pump for about 1 minute each then check and fill fluids. If adding fluid run pump again and check level, repeat until level reads correct after running pump.

Note: Check oil level with the pumps off for proper level readings.



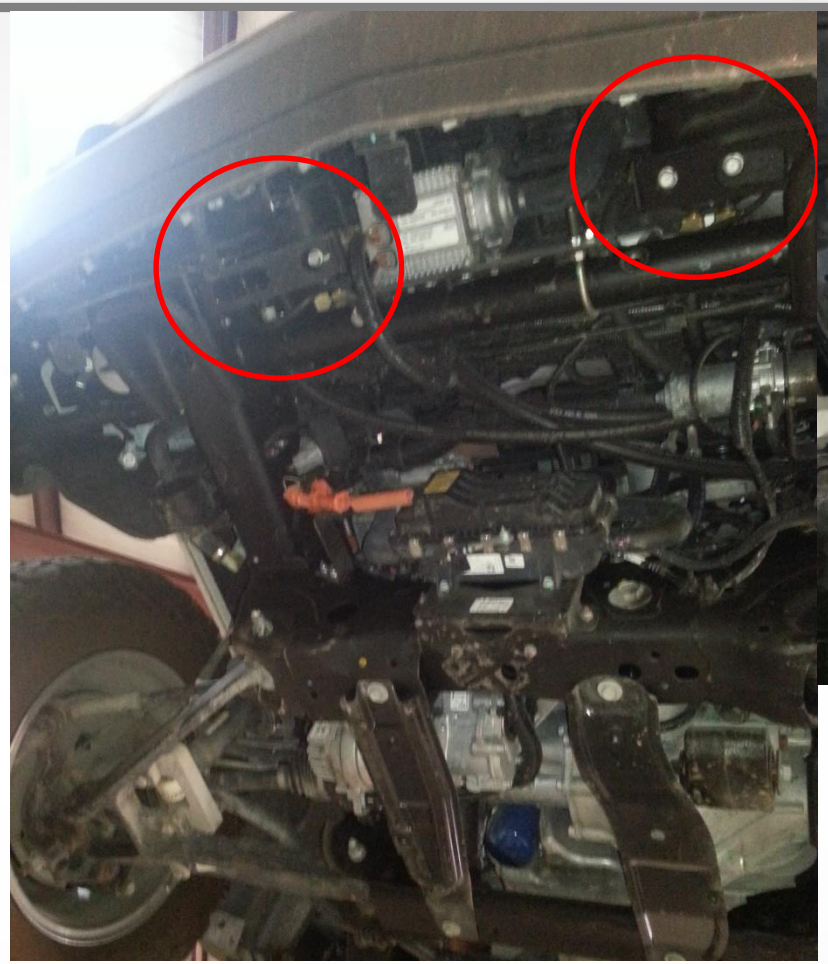



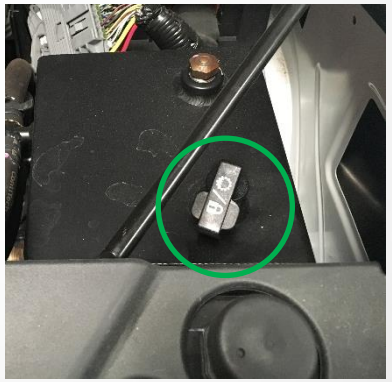

CONFIDENTIAL