


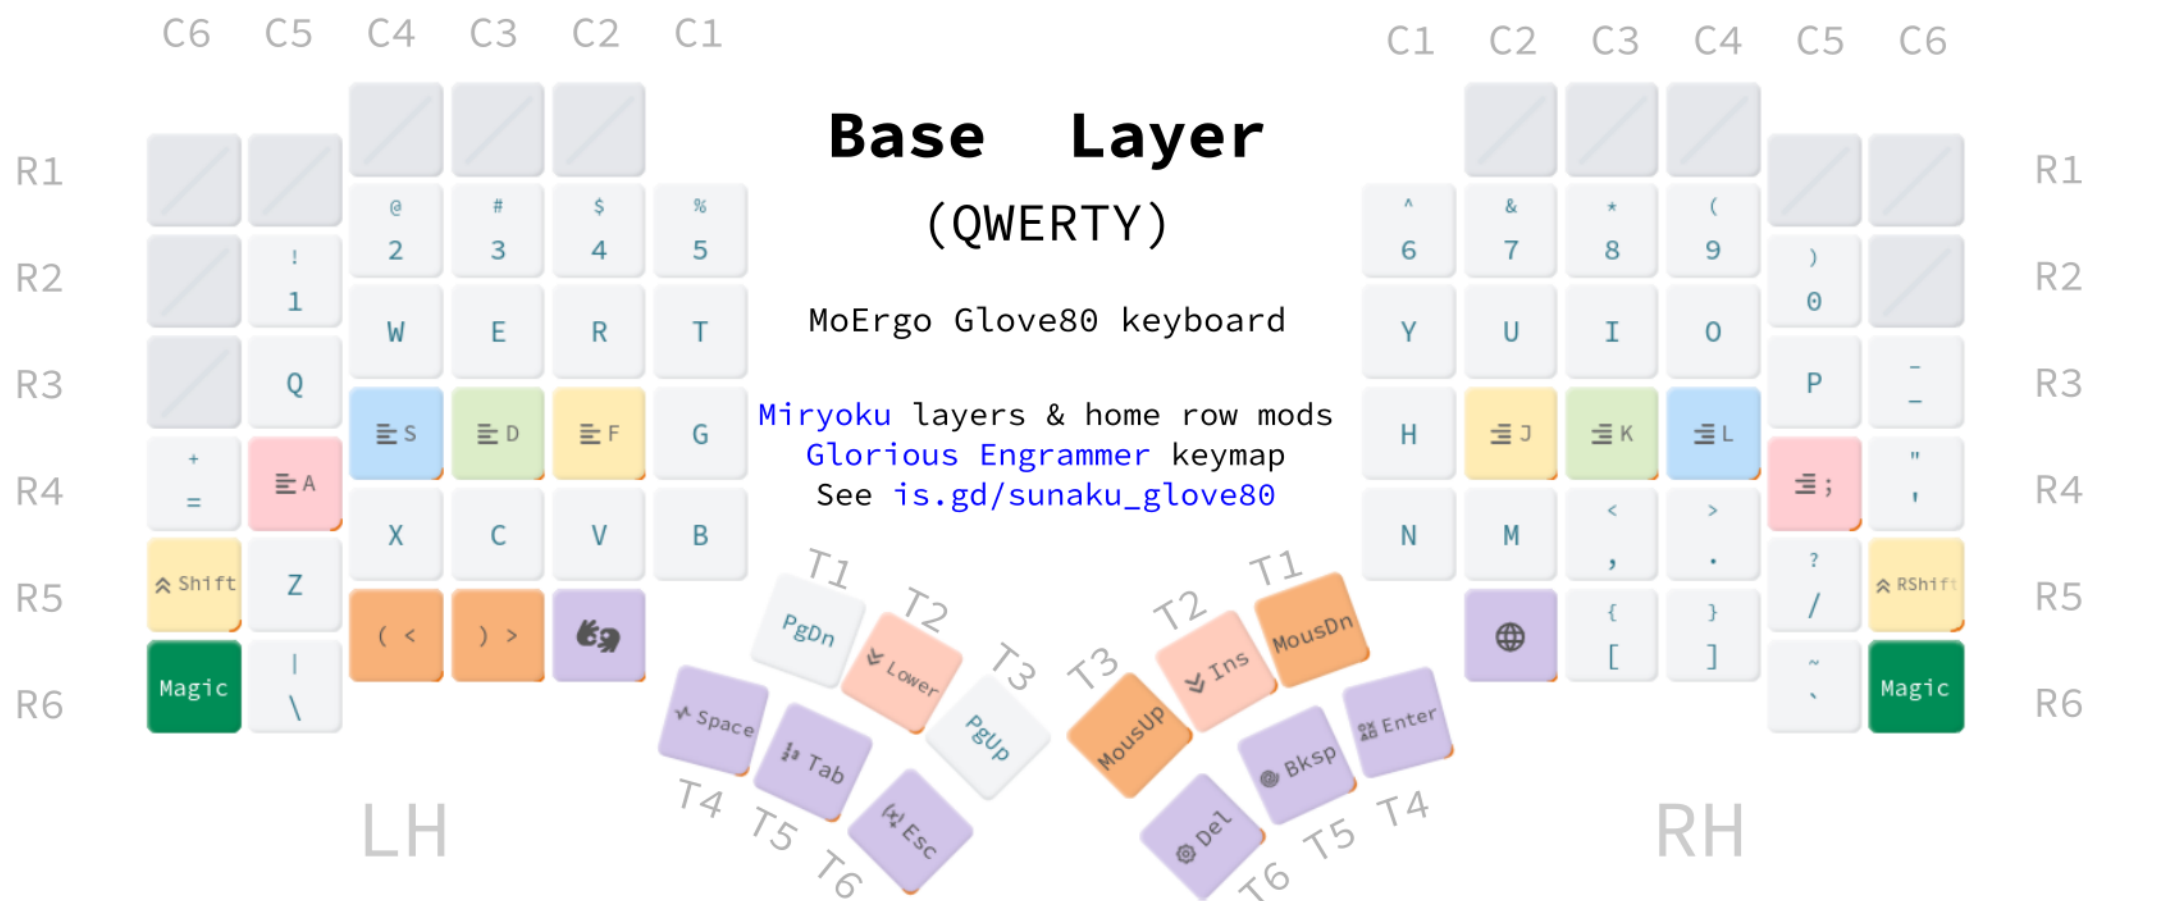

Combos LH

Sticky keys

T2-T3 → Globe (sticky)
T1-T2 → AltGr (sticky)

Tab switching

T1-T4 → Alt Tab →
T2-T5 → Ctrl Tab →
T3-T6 → Win Tab →

Shift / caps

T1-T5 → Shift (sticky)
T4-T5 → Caps Word
T2-T6 → Caps Lock

Layer access

T5-T6 → Typing layer
C1R5-C2R6 → Gaming layer
T1-T2-T3 → Base layer reset

Combos (either side)

Tab forward

LT1-RT3 → Ctrl Tab →
LT1-RT2 → Alt Tab →
LT1-RT1 → Win Tab →

Tab reverse

LT2-RT3 → Ctrl Tab ←
LT2-RT2 → Alt Tab ←
LT2-RT1 → Win Tab ←

Shift / caps

LT3-RT3 → Shift (sticky)
LT3-RT2 → Caps Word
LT3-RT1 → Caps Lock

(Default combo set A)

Combos RH

Sticky keys

T2-T3 → Globe (sticky)
T1-T2 → AltGr (sticky)

Modifier chords

T1-T4 → Hyper (Shift-Ctrl-Alt-Win)
T2-T5 → Meh (Shift-Ctrl-Alt)
T3-T6 → Turbo (Shift-Ctrl)

Shift / caps

T1-T5 → Shift (sticky)
T4-T5 → Caps Word
T2-T6 → Caps Lock

Layer access

T5-T6 → Typing layer
C1R5-C2R6 → Typing layer
T1-T2-T3 → Base layer reset

Layer Activations (Hold)

Cursor
 Number **1 2 3**
 Function
 System
 Mouse
 Symbol
 Emoji
 World
 Lower