


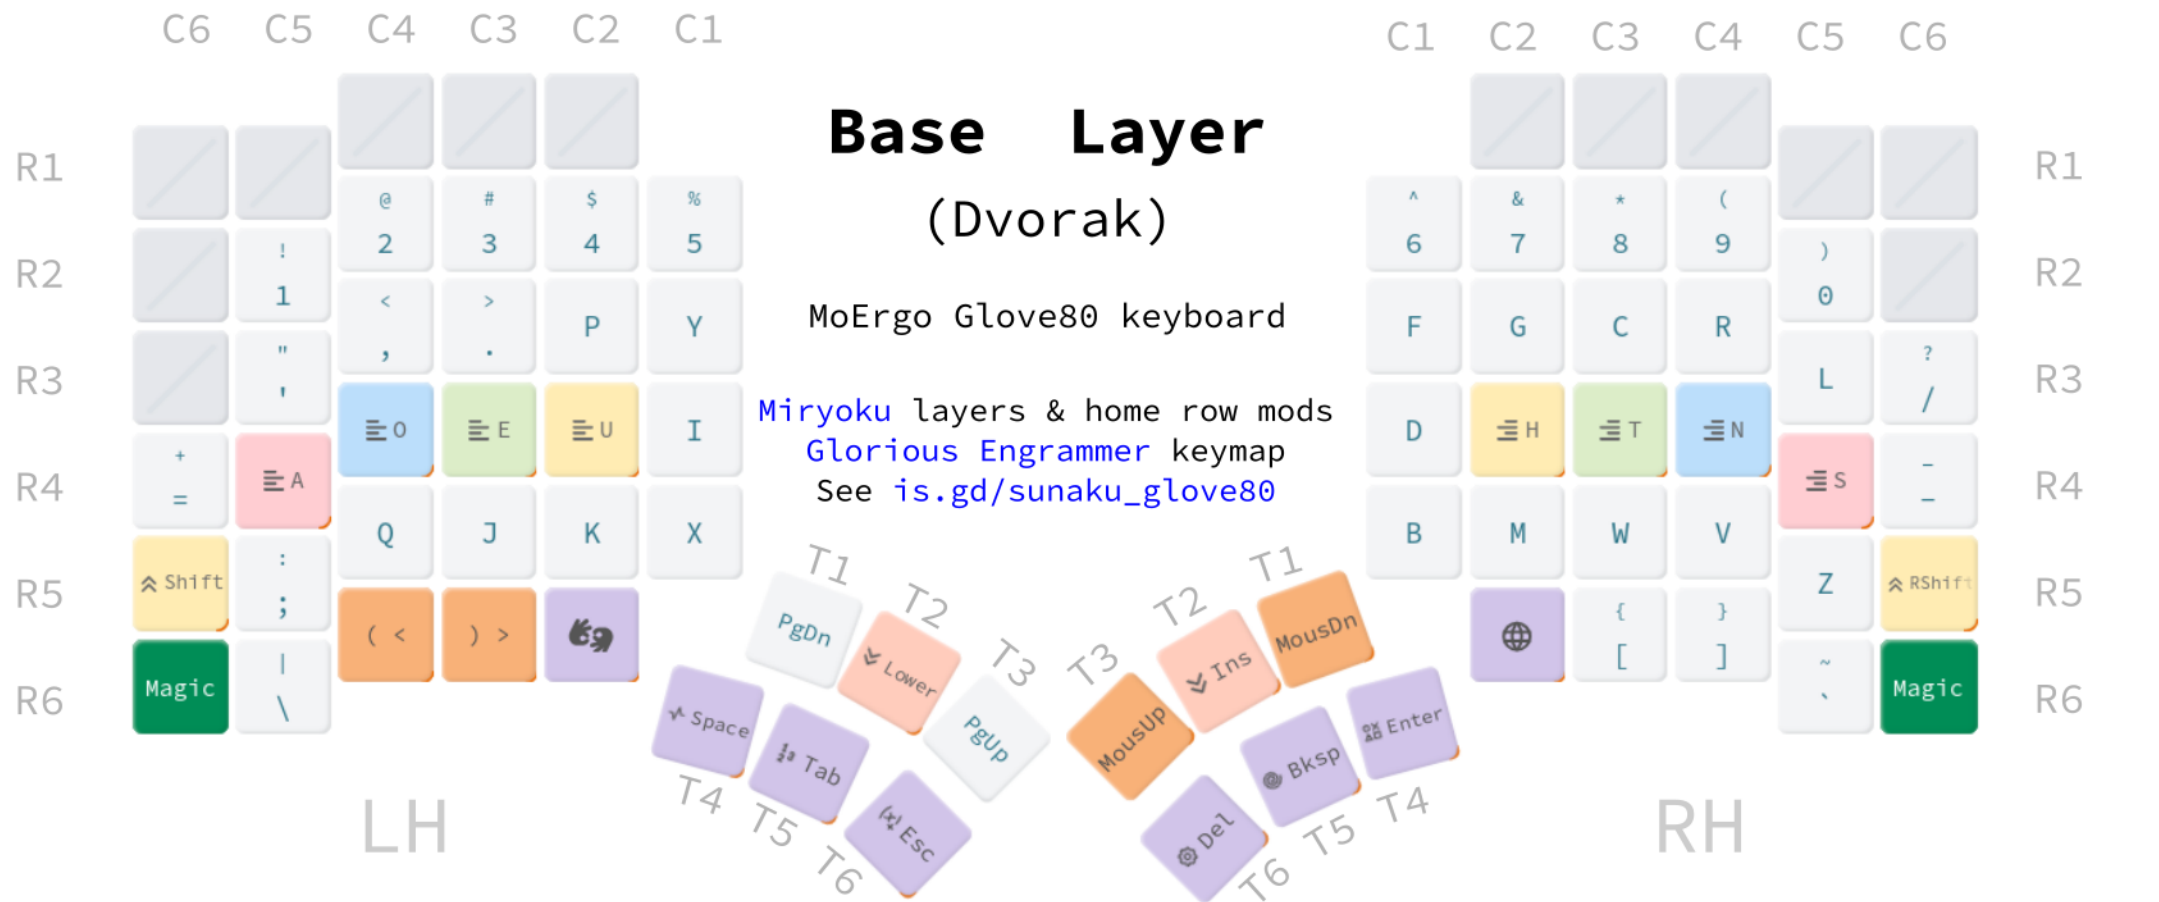

Combos LH

Sticky keys

T2-T3 → Globe (sticky)

T1-T2 → AltGr (sticky)

Tab switching

T1-T4 → Alt Tab →

T2-T5 → Ctrl Tab →

T3-T6 → Win Tab →

Shift / caps

T1-T5 → Shift (sticky)

T4-T5 → Caps Word

T2-T6 → Caps Lock

Layer access

T5-T6 → Typing layer

C1R5-C2R6 → Gaming layer

T1-T2-T3 → Base layer reset

Combos (either side)

Tab forward

LT1-RT3 → Ctrl Tab →

LT1-RT2 → Alt Tab →

LT1-RT1 → Win Tab →

Tab reverse

LT2-RT3 → Ctrl Tab ←

LT2-RT2 → Alt Tab ←

LT2-RT1 → Win Tab ←

Shift / caps

LT3-RT3 → Shift (sticky)

LT3-RT2 → Caps Word

LT3-RT1 → Caps Lock

(Default combo set A)

Combos RH

Sticky keys

T2-T3 → Globe (sticky)

T1-T2 → AltGr (sticky)

Modifier chords

T1-T4 → Hyper (Shift-Ctrl-Alt-Win)

T2-T5 → Meh (Shift-Ctrl-Alt)

T3-T6 → Turbo (Shift-Ctrl)

Shift / caps

T1-T5 → Shift (sticky)

T4-T5 → Caps Word

T2-T6 → Caps Lock

Layer access

T5-T6 → Typing layer

C1R5-C2R6 → Typing layer

T1-T2-T3 → Base layer reset

Layer Activations (Hold)

Cursor
Number 1 2 3
(x) Function

System
Mouse
Symbol

Emoji
World
Lower