


TD-M5037A-FW1.0

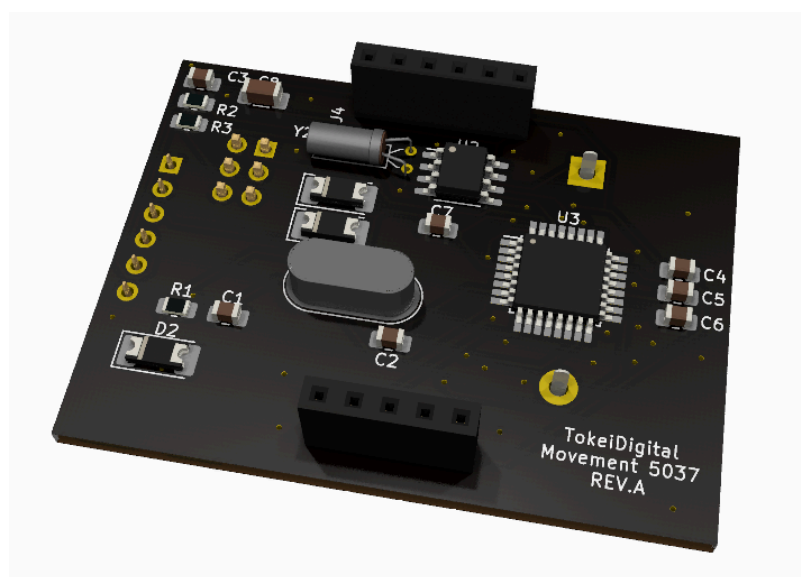

User Manual

REV 20260320

TD-M5037A-FW1.0 User Manual

TD-M5037A-FW1.0 User Manual

General.....	5
Features.....	5
Connections.....	6
Setting Date and Time.....	10
Display Test Mode.....	12
Assembling the Board.....	13
Packing List.....	13
Top Assembly.....	14
Bottom Assembly.....	15
Advanced.....	17
UART.....	17
Flashing the Arduino Bootloader.....	25
Flashing the Firmware.....	27
Appendix A - HW Revisions.....	29
Appendix B - Schematic.....	30

TD-M5037A-FW1.0 User Manual

General

Features

The Tokei Digital TD-M5037 is a general purpose clock module that can be used as the base for designing clocks with different faces. It provides a RTC, with a backup battery, that can keep track of the current date and time even when the clock is not powered.

The module has a UART interface, allowing the user to set the time via a command interface and to tweak the configuration of both the module and the clock face.

Additionally the module provides several GPIO pins to both control a clock face and receive input from buttons placed on the clock face. These buttons allow the user to set the time in a more traditional way.

The module can also automatically switch to DST and back (EU rules only in FW1.0, for other territories DST can be set manually through the UART or simply ignored and time adjusted manually on the change date).

TD-M5037A-FW1.0 User Manual

If you purchased the TD-M5037A as a kit to assemble see the "Assembling the Board" chapter for assembly instructions.

Connections

Two female pin headers, protruding on the top side (opposite the battery) provide the mating interface to the clock face. The headers have 5 and 6 pins respectively to serve as a guide for the correct orientation of the module when plugging it on the face. These pins provide power to the clock face, digital data to control it, and bring into the module the lines from the three A,B, and C buttons.

The choice to have the buttons on the clock face instead of the module was made to provide more flexibility in the design of the final clock, leaving freedom on the placement of the buttons on the face.

In the same way, the power input to this module consists of two large pads where to solder the power supply. This allows for greater flexibility in the placement of eventual battery holders or external power connectors. An onboard USB connector would have instead limited the



TD-M5037A-FW1.0 User Manual

options and, depending on the clock face shape and orientation, could have resulted in the USB connector sitting in a non suitable location.

On the side opposite the headers is a holder for a CR2032 battery. If the battery is not installed time will be lost every time the power is lost. It's strongly recommended to use a backup battery, however normal operation is possible without.

On the same side is also an ICSP (In Circuit Serial Programmer) interface that allows to flash a new version of the firmware or to flash an Arduino bootloader. If you received the module as part of a clock kit the firmware has already been flashed with the correct one for the face you selected and you will not need this interface.

TD-M5037A-FW1.0 User Manual

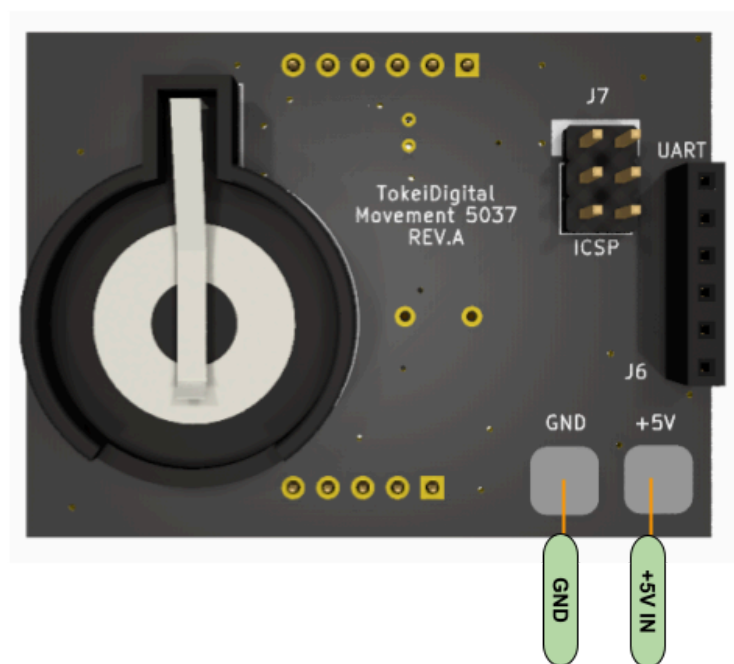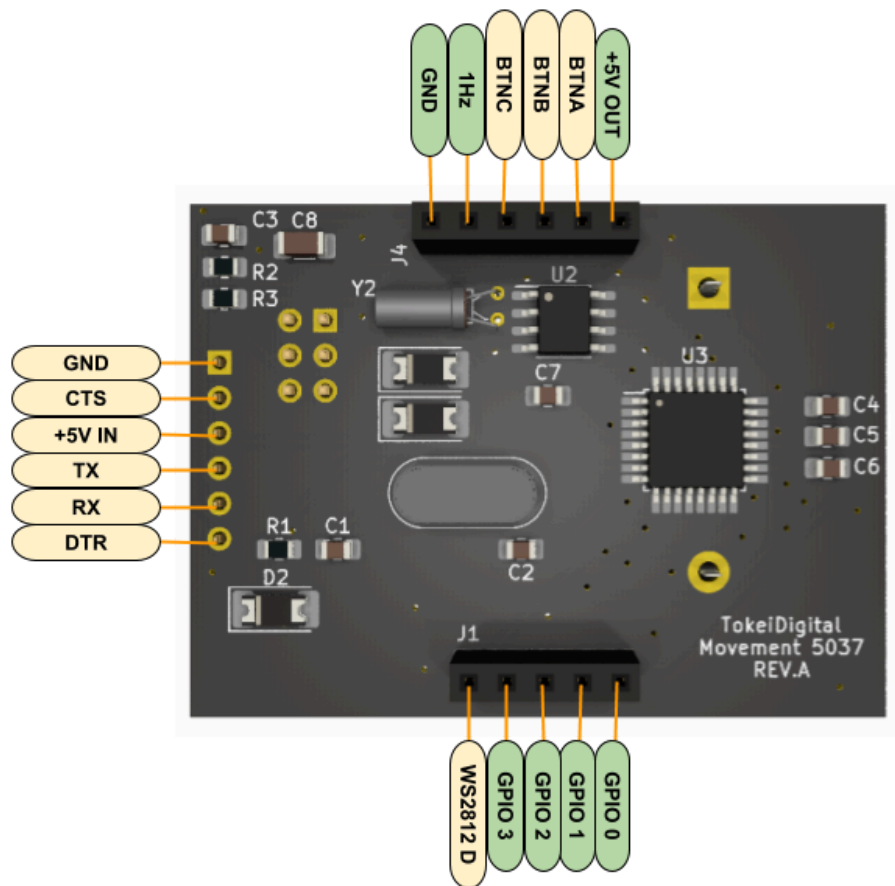

TD-M5037A-FW1.0 User Manual

The table below details all the pins and their function.

+5V OUT	Power supply output for the clock face. Max available current for the face is 100mA.
BTN A,B,C	Input pins for Buttons A,B,C. The module has internal pull-ups and expects the buttons to be pulling towards ground when pressed. These buttons allow you to do things like setting the date/time.
1Hz	1Hz Square Wave output. This is an open collector output.
GND	Common ground connection for powering the clock face.
CTS/TX/ RX/DTR	UART interface. Allows to configure the clock through a serial interface. Also, if the module is flashed with the Arduino bootloader, sketches can be uploaded through this interface.
GPIO 0,1,2,3	General input/output pins that can be used by the clock face.
WS2812D	Dedicated output pin for clocks using WS2812 LEDs. If your

TD-M5037A-FW1.0 User Manual

	clock face doesn't use such LEDs this pin can be used as general IO.
+5V IN	Power Supply pad. There is polarity protection on board but no voltage protection. Ensure your power supply is stable and doesn't exceed 5V. It needs to be able to supply enough current for the clock face (the movement consumption is few mA only).

Setting Date and Time

Time set mode is entered with a long press on the A button. The first settable value (usually the hours) will start to flash on the clock face. Usually the clock will also indicate in some other way that it entered the time set mode, for instance flashing an LED or changing its color. For details see your specific clock face user manual.

NOTE: depending on how your clock displays time, if the current value being set is zero you might not see anything flashing (e.g. in a binary clock). Press

TD-M5037A-FW1.0 User Manual

B or C once so the value is increased or decreased.

Once time set mode is entered use B and C to increase/decrease the value being set respectively. To move to the next value (e.g. minutes) just press once A. Depending on the abilities of your clock, you will cycle through all the values that can be set and return to the hours.

Once you are done setting the time, long press again A to exit time set mode.

Hint: to achieve a second-accurate setting, set the clock to the next minute. Then wait in time set mode until your reference clock shows :59 seconds, only at this point long press on A to exit time set mode. This works because, upon exciting time set mode, the clock always starts from second :00.

Display Test Mode

It's possible to enter test mode for your clock by long pressing on the C button. In this mode your clock will light all LEDs regardless of current time. This can be useful to ensure all LEDs are functioning and to test your power supply and ensure it can provide enough current. Long press again C to exit test mode.


Assembling the Board

Packing List

Before proceeding with the assembly of the components on the board, double check the packing list to make sure you have received all components and that everything is in good order.


A	2 x 22p (0805)
B	5 x 100nF (0805)
C	1 x 10uF (1206)
D	1 x 1N5817 (2010)
E	3 x 10K (0805)
F	1 x ATmega328 (QFP-32) 1 x DS1307 (SOIC-8)
G	1 x 16MHz Crystal 1 x 32.768KHz Crystal 1 x CR3032 Holder 1 x Pin 1x5 Vertical Female 1 x Pin 1x6 Vertical Female
	1 x PCB TD-M5037A REV.A

Top Assembly

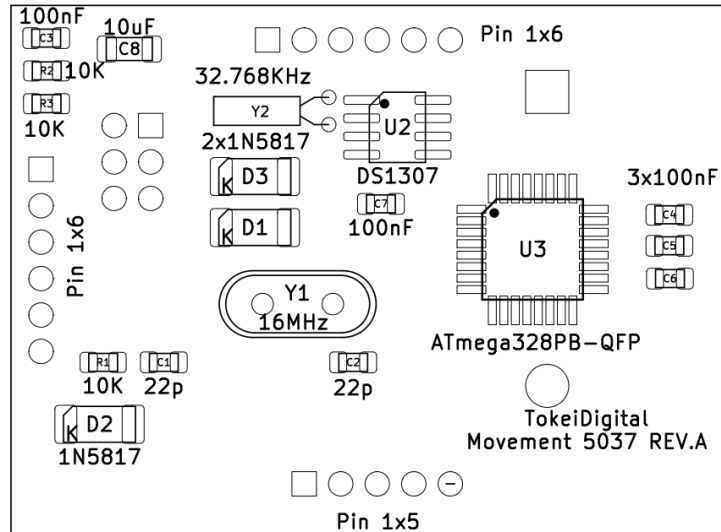

All components, with the exception of the battery holder, are assembled on the top part of the board. Depending on your preference, you can use solder paste and position all the SMDs first to then reflow the board or just assemble the SMDs by hand. If you choose to assemble by hand make sure you have a very fine solder tip and very fine (0.2mm) tin. Pay attention to the orientation of diodes (the K marking on the image above corresponds to the grey band on the body of the component). Also the two chips need to be aligned with the dot on the body matching the image above. Finally, assemble the crystals and the pin headers on this same side of the board.

Bottom Assembly

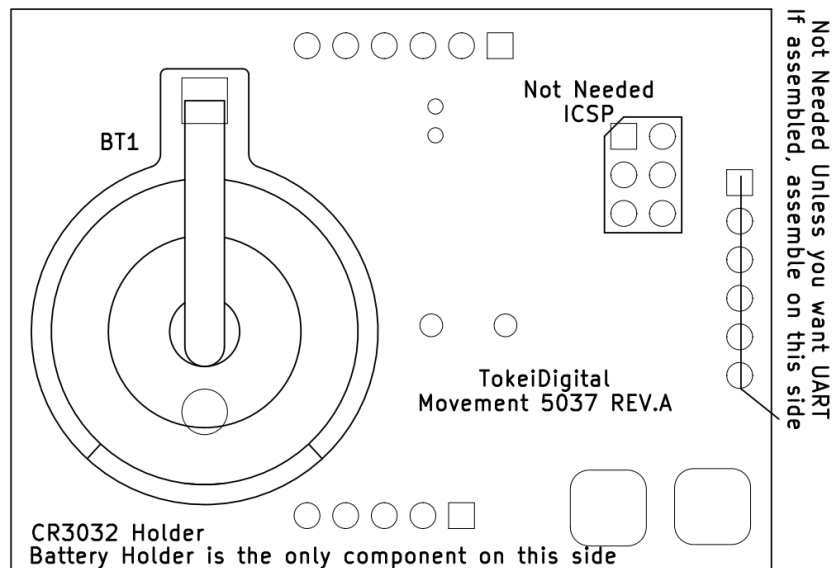

Flip the board and install the battery holder. For the module operation no other components are needed. If you are planning to use the UART you can install a 6 pin header on the pads labelled UART on the board. The choice of the type of pin header (male/female, 90 degrees etc.) depends on the type of USB-UART adapter board you have, whether you plan to encase the clock or not etc. The square pin is GND.

Also the ICSP connector (2x3 pins) is not needed unless you want to replace the firmware of the module, for instance to flash your own code for the clock face, an Arduino bootloader or an updated

TD-M5037A-FW1.0 User Manual

version of the firmware. Again, the type of pins depends on your programmer cable, though usually these are male pins.

Finally a power source needs to be soldered to the GND and +5 pads. Once more, the type of cable, battery holder or perhaps USB connector adapter board depends on how you plan to display and eventually encase your clock. For this reason the board was not designed with a USB onboard connector but just with the pads to leave more freedom of connector positioning.

Advanced

UART

The module exposes a UART interface that allows the user to configure the module, including setting time, DST and, depending on the clock face, color of the LEDs and other face features.

Physical Interface

The only pins needed to control the UART are TX, RX, and GND. The other standard serial port lines are used only by the Arduino bootloader if you choose to flash it.

The UART operates at 9600 BAUD, 8 bits, 1 stop bit (no parity).

The terminal should be configured for CR+LF line ending.

TD-M5037A-FW1.0 User Manual

Commands

Press enter once you connect to get a list of all the available commands and a banner reporting the current hardware and firmware versions. If you don't receive any response, double check the connections and make sure the serial port parameters are set correctly.

TOKEI DIGITAL MOVEMENT 5037

VER: V1.0

FACE DRIVER: BUHR

H	HELP
N	PRINT NOW
R [START] [END]	DUMP REGISTERS
S [START]	SET REGISTERS
T H:M WD D-M-Y	SET DATE/TIME
X	EXIT
OK	

When you connect you might start to receive a burst of messages every second. These report the current date/time and other information. They can be set on/off by setting the relevant register (see next section). If the messages are coming they will stop once you press enter and will not resume until you exit

TD-M5037A-FW1.0 User Manual

interactive mode by giving the "X" command or power-cycle the board.

Print Current Time (N)

Send the "N" (now) command and press enter. The module will respond with the current date and time:

```
19:14 2 11-02-25
OK
```

The string is in the format:

HH:MM dayOfWeek day-month-year

Day of week is 1-7, with 1 indicating Monday.

Set Current Time (T)

Send the "T" (time) command followed by a space and the date and time you want to set. Use the same format returned by the N command.

```
T 19:14 2 11-02-25
OK
```

TD-M5037A-FW1.0 User Manual

Dump Registers (R)

Send the "R" (read registers) command and press enter. The module will respond with a dump of all registers. Optionally you can specify a start and end (hex values) to limit the output.

R 0B 0F

0008 00.00.00.00.00

OK

R

0000 00.00.00.01.00.00.00.00

0008 00.00.00.00.00.00.00.00

0010 00.00.00.00.00.00.00.00

0018 00.00.00.00.00.00.00.00

0020 00.00.00.00.00.00.00.00

0028 00.00.00.00.00.00.00.00

0030 00.00.00.00.00.00.00.00

0038 00.00.00.00.00.00.00.00

0040 00.00.00.05.00.00.05.05

0048 00.04.02.00.00.00.05.05

0050 00.05.02.04.04.01.06.02

0058 01.05.00.02.02.02.30.30

0060 30.00.00.00.00.00.00.00

0068 00.00.00.00.00.00.00.00

0070 00.00.00.00.00.00.00.00

0078 00.00.00.00.00.00.00.00

OK

TD-M5037A-FW1.0 User Manual

For the meaning of each register see the next section which details the movement registers. See also your clock face guide for face specific registers.

Set Registers (S)

Send the "S" (set registers) command followed by a space and the address (hexadecimal) of the first register you want to set. This command is interactive and will print the address and current value of the register.

You can now enter a new value, in hexadecimal and press enter. If you don't want to change that register value you can just press enter to move to the next. Once you are done editing press X and enter to exit the command.

```
S 7B
007B  00  .
007C  01  .01
007D  02  .02
007E  00  .X
OK
```

Exit Interactive Mode (X)

Once you are done you can send the X command and press enter to exit the interactive mode. If the serial output is enabled (see register 0x03) the notifications will resume.

Registers Map

0x00-0x3F Movement Registers	0x00	DST.	0=AUTO 1=OFF 2=ON
	0x01	Reserved for future use.	
	0x02	Reserved for future use.	
	0x03	Serial output protocol.	0=OFF, 1=V1
0x40-0x7F Face Registers	See face manual for usage.		

0x00 If set to 0 DST AUTO is enabled and the clock will transition automatically in and out of summer time on the correct date. Currently the module supports only EU rules. If you live in a different territory you can set manually DST on/off

TD-M5037A-FW1.0 User Manual

on the change date and the time will adjust. You can also leave DST OFF and change the time manually on the change day.

0x03 Controls the serial output protocol. When enabled (set to 1 for Version 1) the module will send out messages at one second interval. The messages continue indefinitely until you press enter, at that point they stop to allow usage of the interactive interface. The messages will resume exiting interactive mode with the X command. Messages look as follows:

```
$V1!INFO0,V1.0,DCF77
$V1!DATE,11-02-2025
$V1!TIME,19:37:29
$V1!DOW,2
$V1!DST,OFF,AUTO
```

Each message starts with \$ followed by the protocol version. Following are comma separated tokens. The first indicating the message type and the others, in variable amount, are the parameters. Each message ends with a CR+LF.

TD-M5037A-FW1.0 User Manual

\$V1!INFO0 reports firmware version and face type.

\$V1!DATE reports the current date in dd-mm-yyyy format.

\$V1!TIME reports the current time in HH:MM:SS format.

\$V1!DOW reports the current day of week. The value ranges from 1 to 7. Monday being 1.

\$V1!DST reports the current DST status. The first parameter is either ON or OFF. The second parameter is present only if AUTO is enabled.

Flashing the Arduino Bootloader


Whether you purchased the module on its own to design your own face, or you received it as part of a clock kit and you want to write your own firmware for it, you have the option to flash the Arduino bootloader on the board and use Arduino sketches.

NOTE: if you flash the Arduino bootloader it will override the clock firmware. For your clock to work you will need to write a sketch for it. Tokei Digital doesn't provide Arduino sketches for its clocks. However you can also flash back the correct firmware, see next section for details.

If you are sure you want to flash the Arduino bootloader follow these simple steps:

- Connect an ICSP programmer (such as USPAsp) to the ICSP connector
- Open the Arduino IDE and configure the board as seen below (1). It's important you choose ATmega328P 5V, 16MHz or things won't work correctly.

TD-M5037A-FW1.0 User Manual

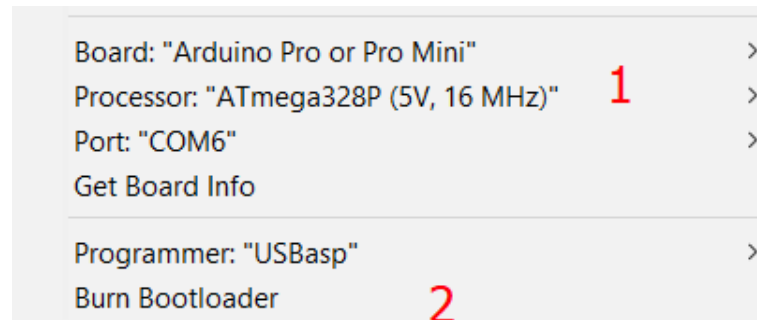

- Choose "Burn Bootloader" (2)
- Once the process ends disconnect the programmer
- Connect now the board with a USB UART as any other Arduino board
- Select the right COM port that gets assigned to your board
- Upload your first sketch!

Note: REV.A of the board has a 100nF capacitor labelled C4 that interferes with the reset circuitry of the Arduino (which uses the serial interface DTR line to reset the processor). Remove this capacitor if you want to flash the Arduino bootloader. Future revisions of the board will omit this component as, in fact, it's not needed even in other configurations.

Flashing the Firmware


If you purchased the module as part of a clock kit you do not need to flash the firmware as the ATmega was already flashed for you with the FW variant needed for your clock face. However, if you are planning to flash your own firmware, or restore the original one after flashing the Arduino bootloader, follow these simple steps.

This assumes you have a USBasp ICSP programmer and a working installation of avr-gcc.

- Connect the board to the ICSP programmer
- Clone the Tokei Digital github repo:
[https://github.com/nicolacimmino/Tokei Digital](https://github.com/nicolacimmino/Tokei-Digital)
- Open a unix like shell (e.g. GitBash) or your terminal if you are running linux
- Run the interactive flash tool you can find under src/movement with sh flash.sh

TD-M5037A-FW1.0 User Manual

- You will be presented with a dialog like the one depicted below:

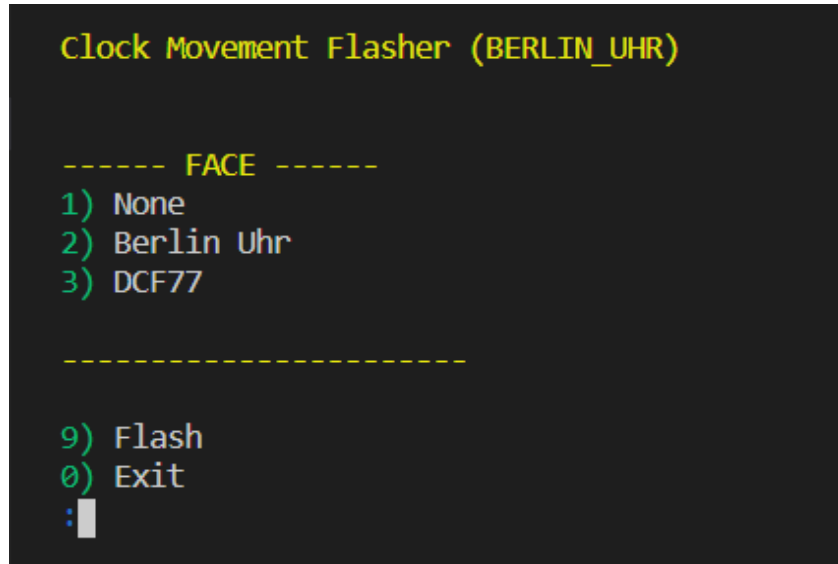

```

Clock Movement Flasher (BERLIN_UHR)

----- FACE -----
1) None
2) Berlin Uhr
3) DCF77

-----

9) Flash
0) Exit
:█

```

- Select the correct face and then press 9 to flash

If you have a different programmer have a look into the Makefile in the src/movement folder of the repo and adjust for your programmer.

Appendix A - HW Revisions

REV.A	First version. The only known issue at the time of writing is C4 interfering with Arduino reset. You can safely remove C4.
-------	--

TD-M5037A-FW1.0 User Manual

Appendix B - Schematic

