


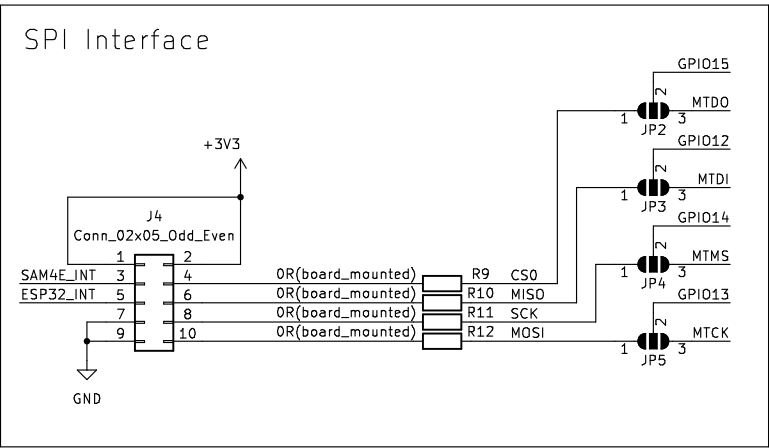
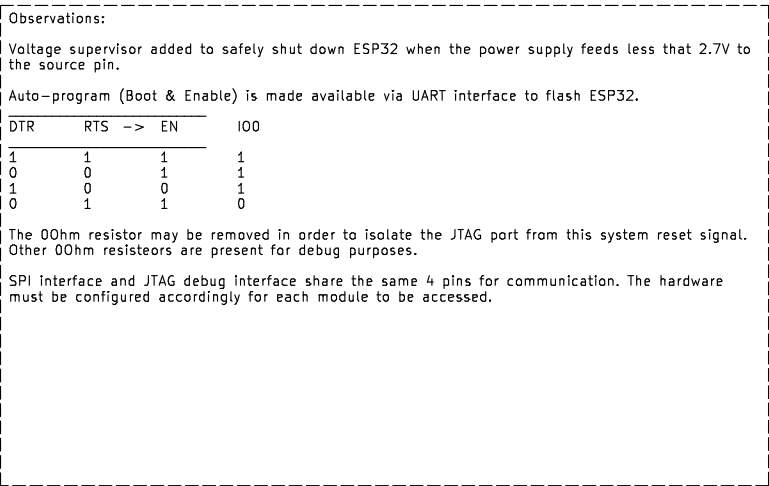
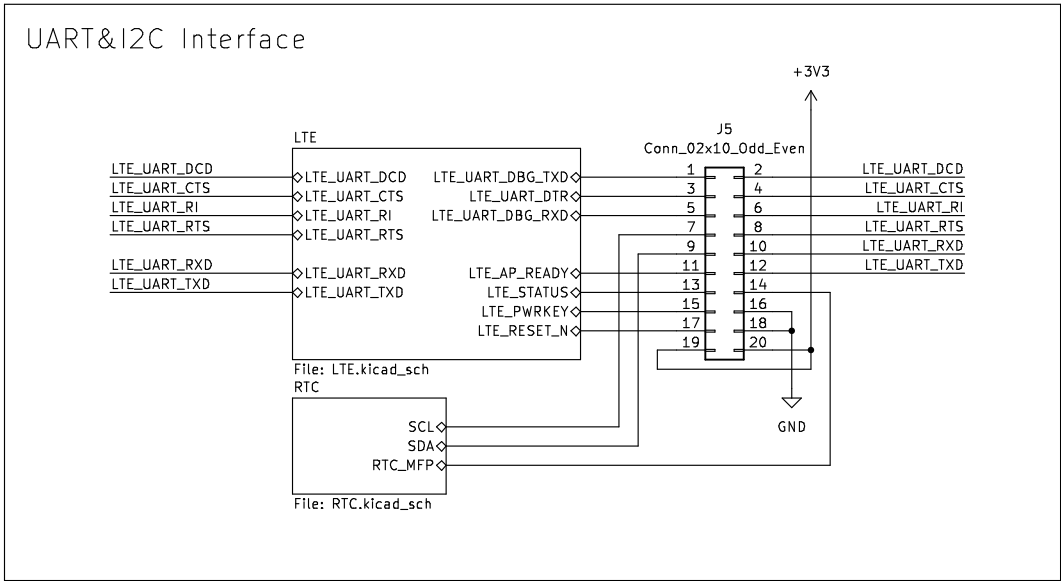
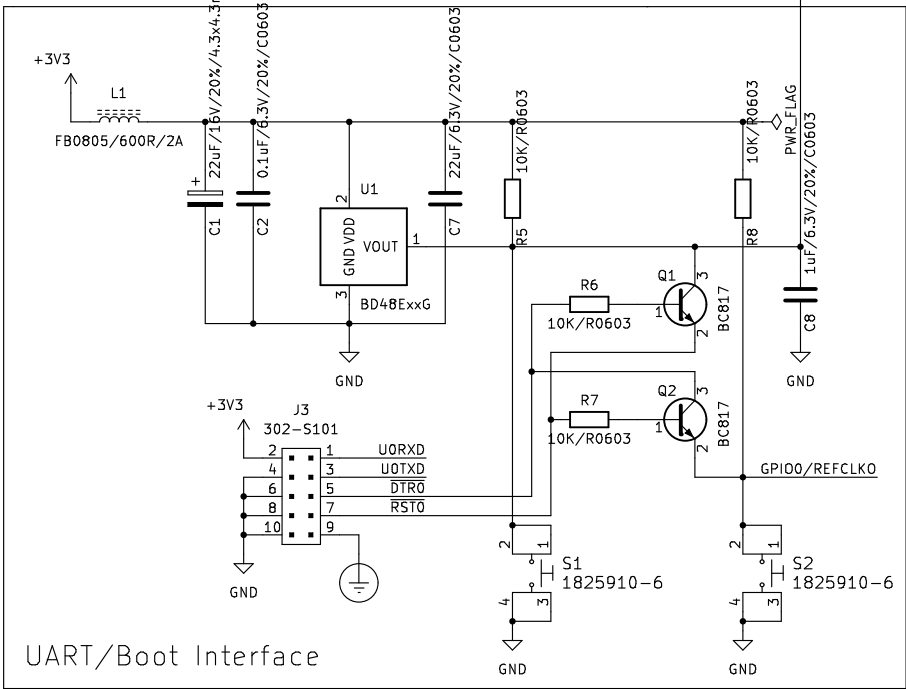
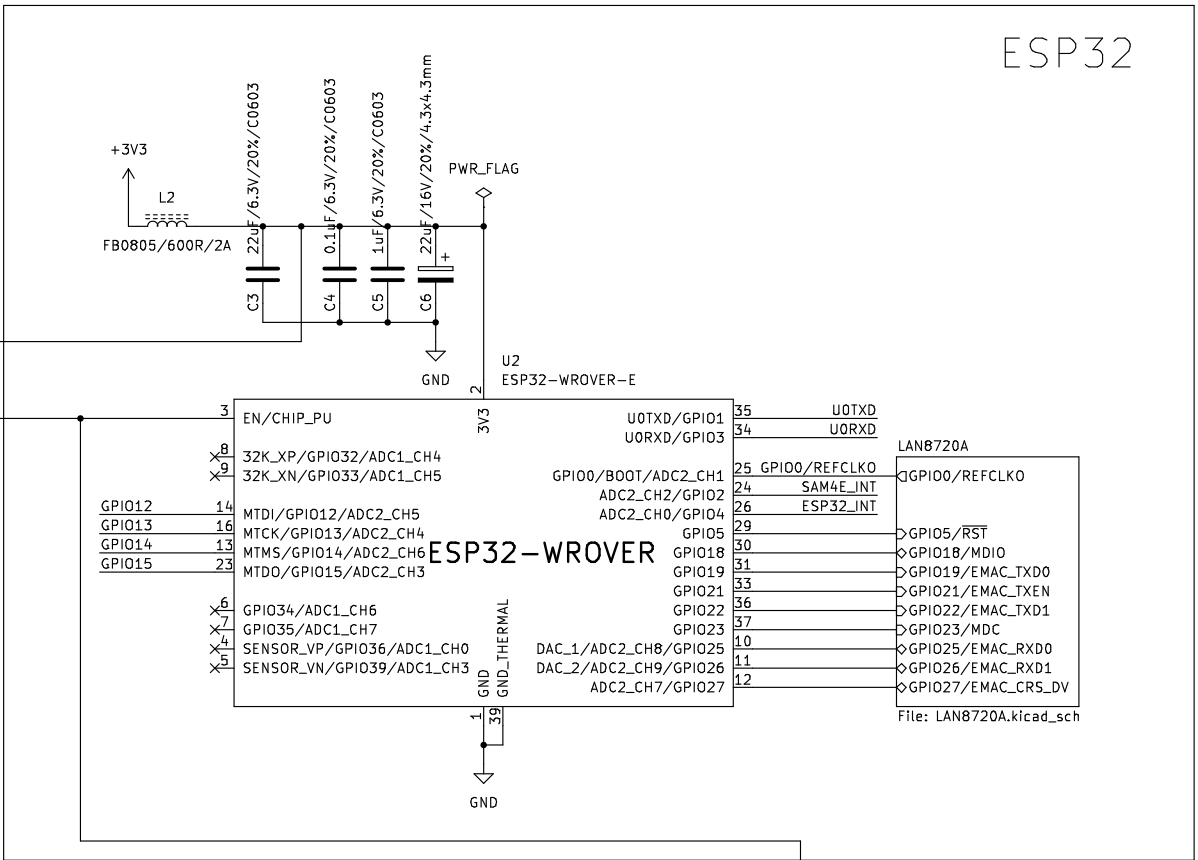
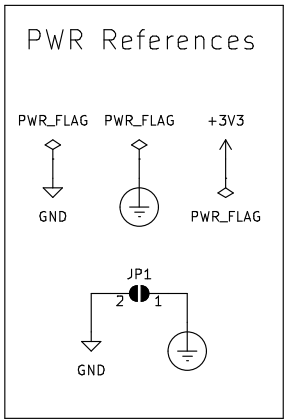
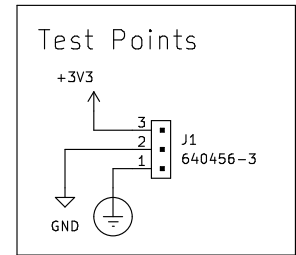
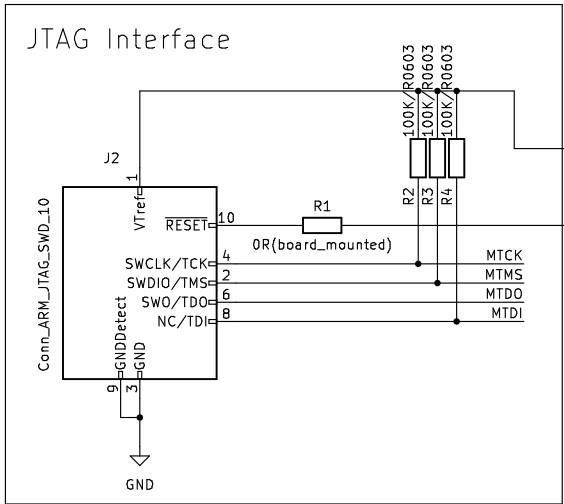


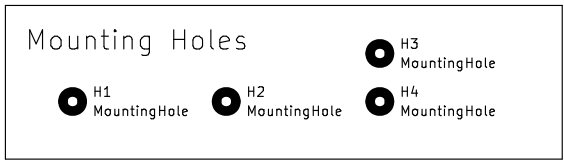

LAN8720A

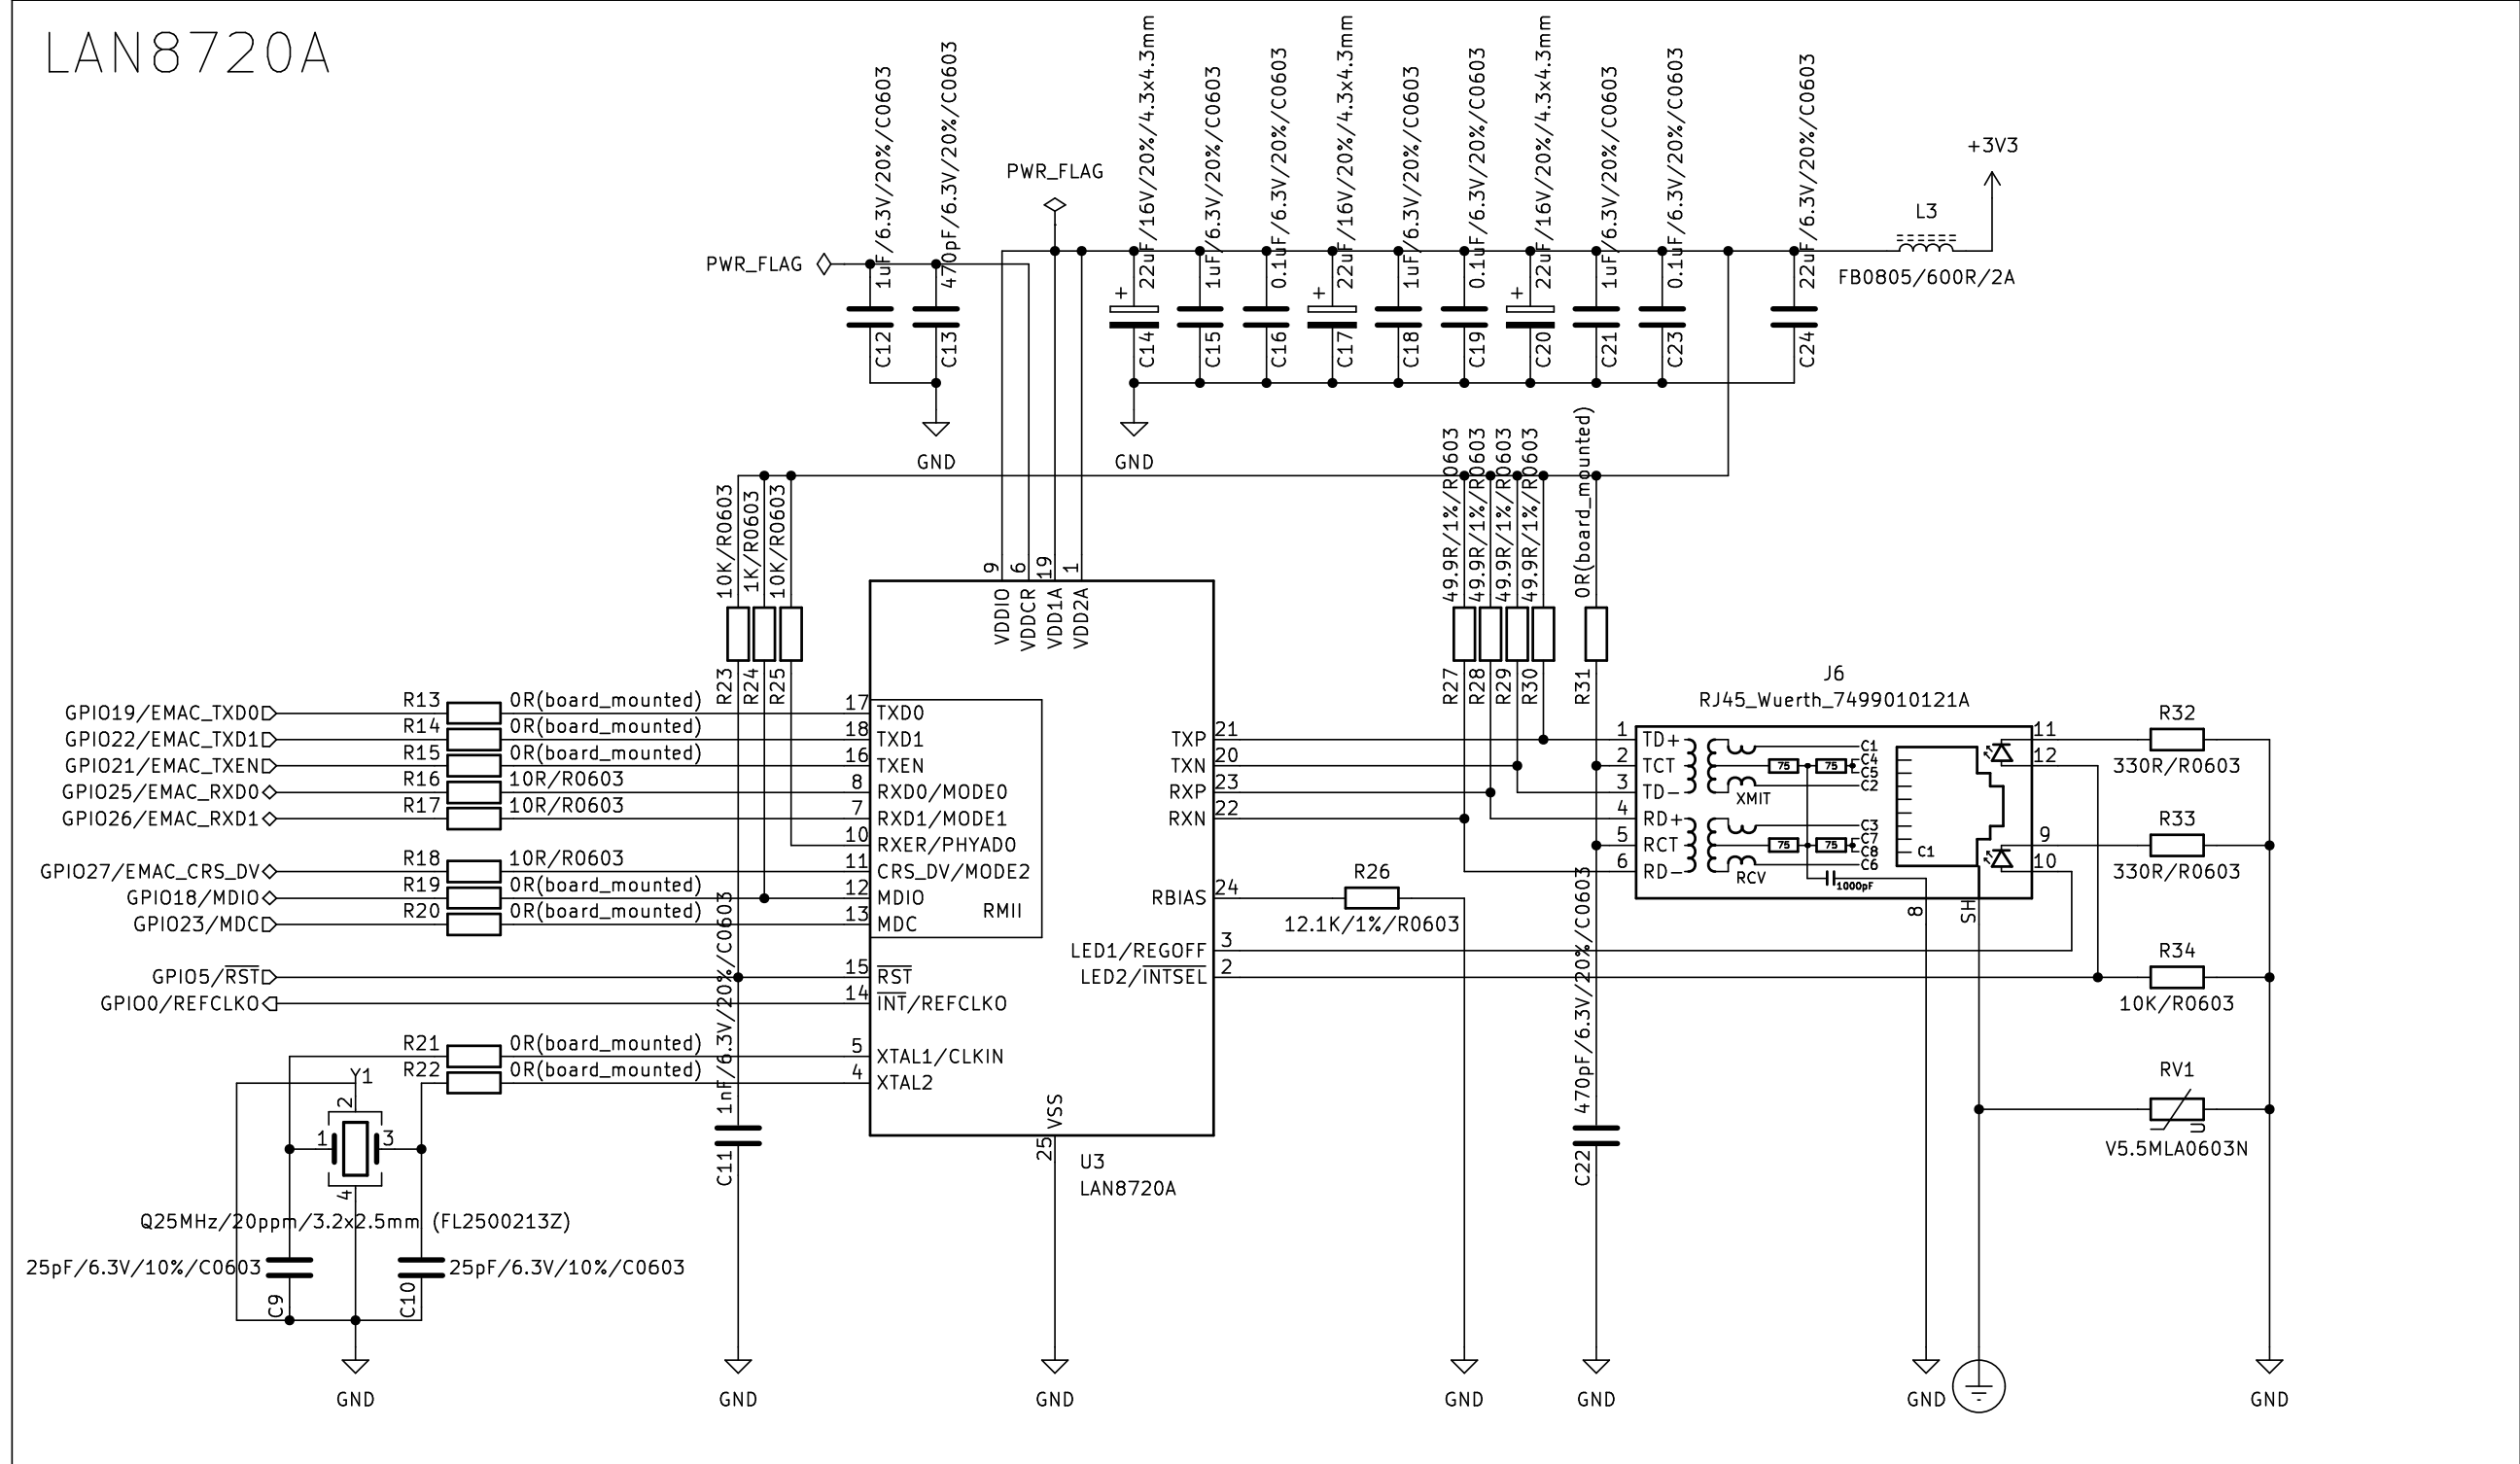

LTE Cat-1 Quectel EC21

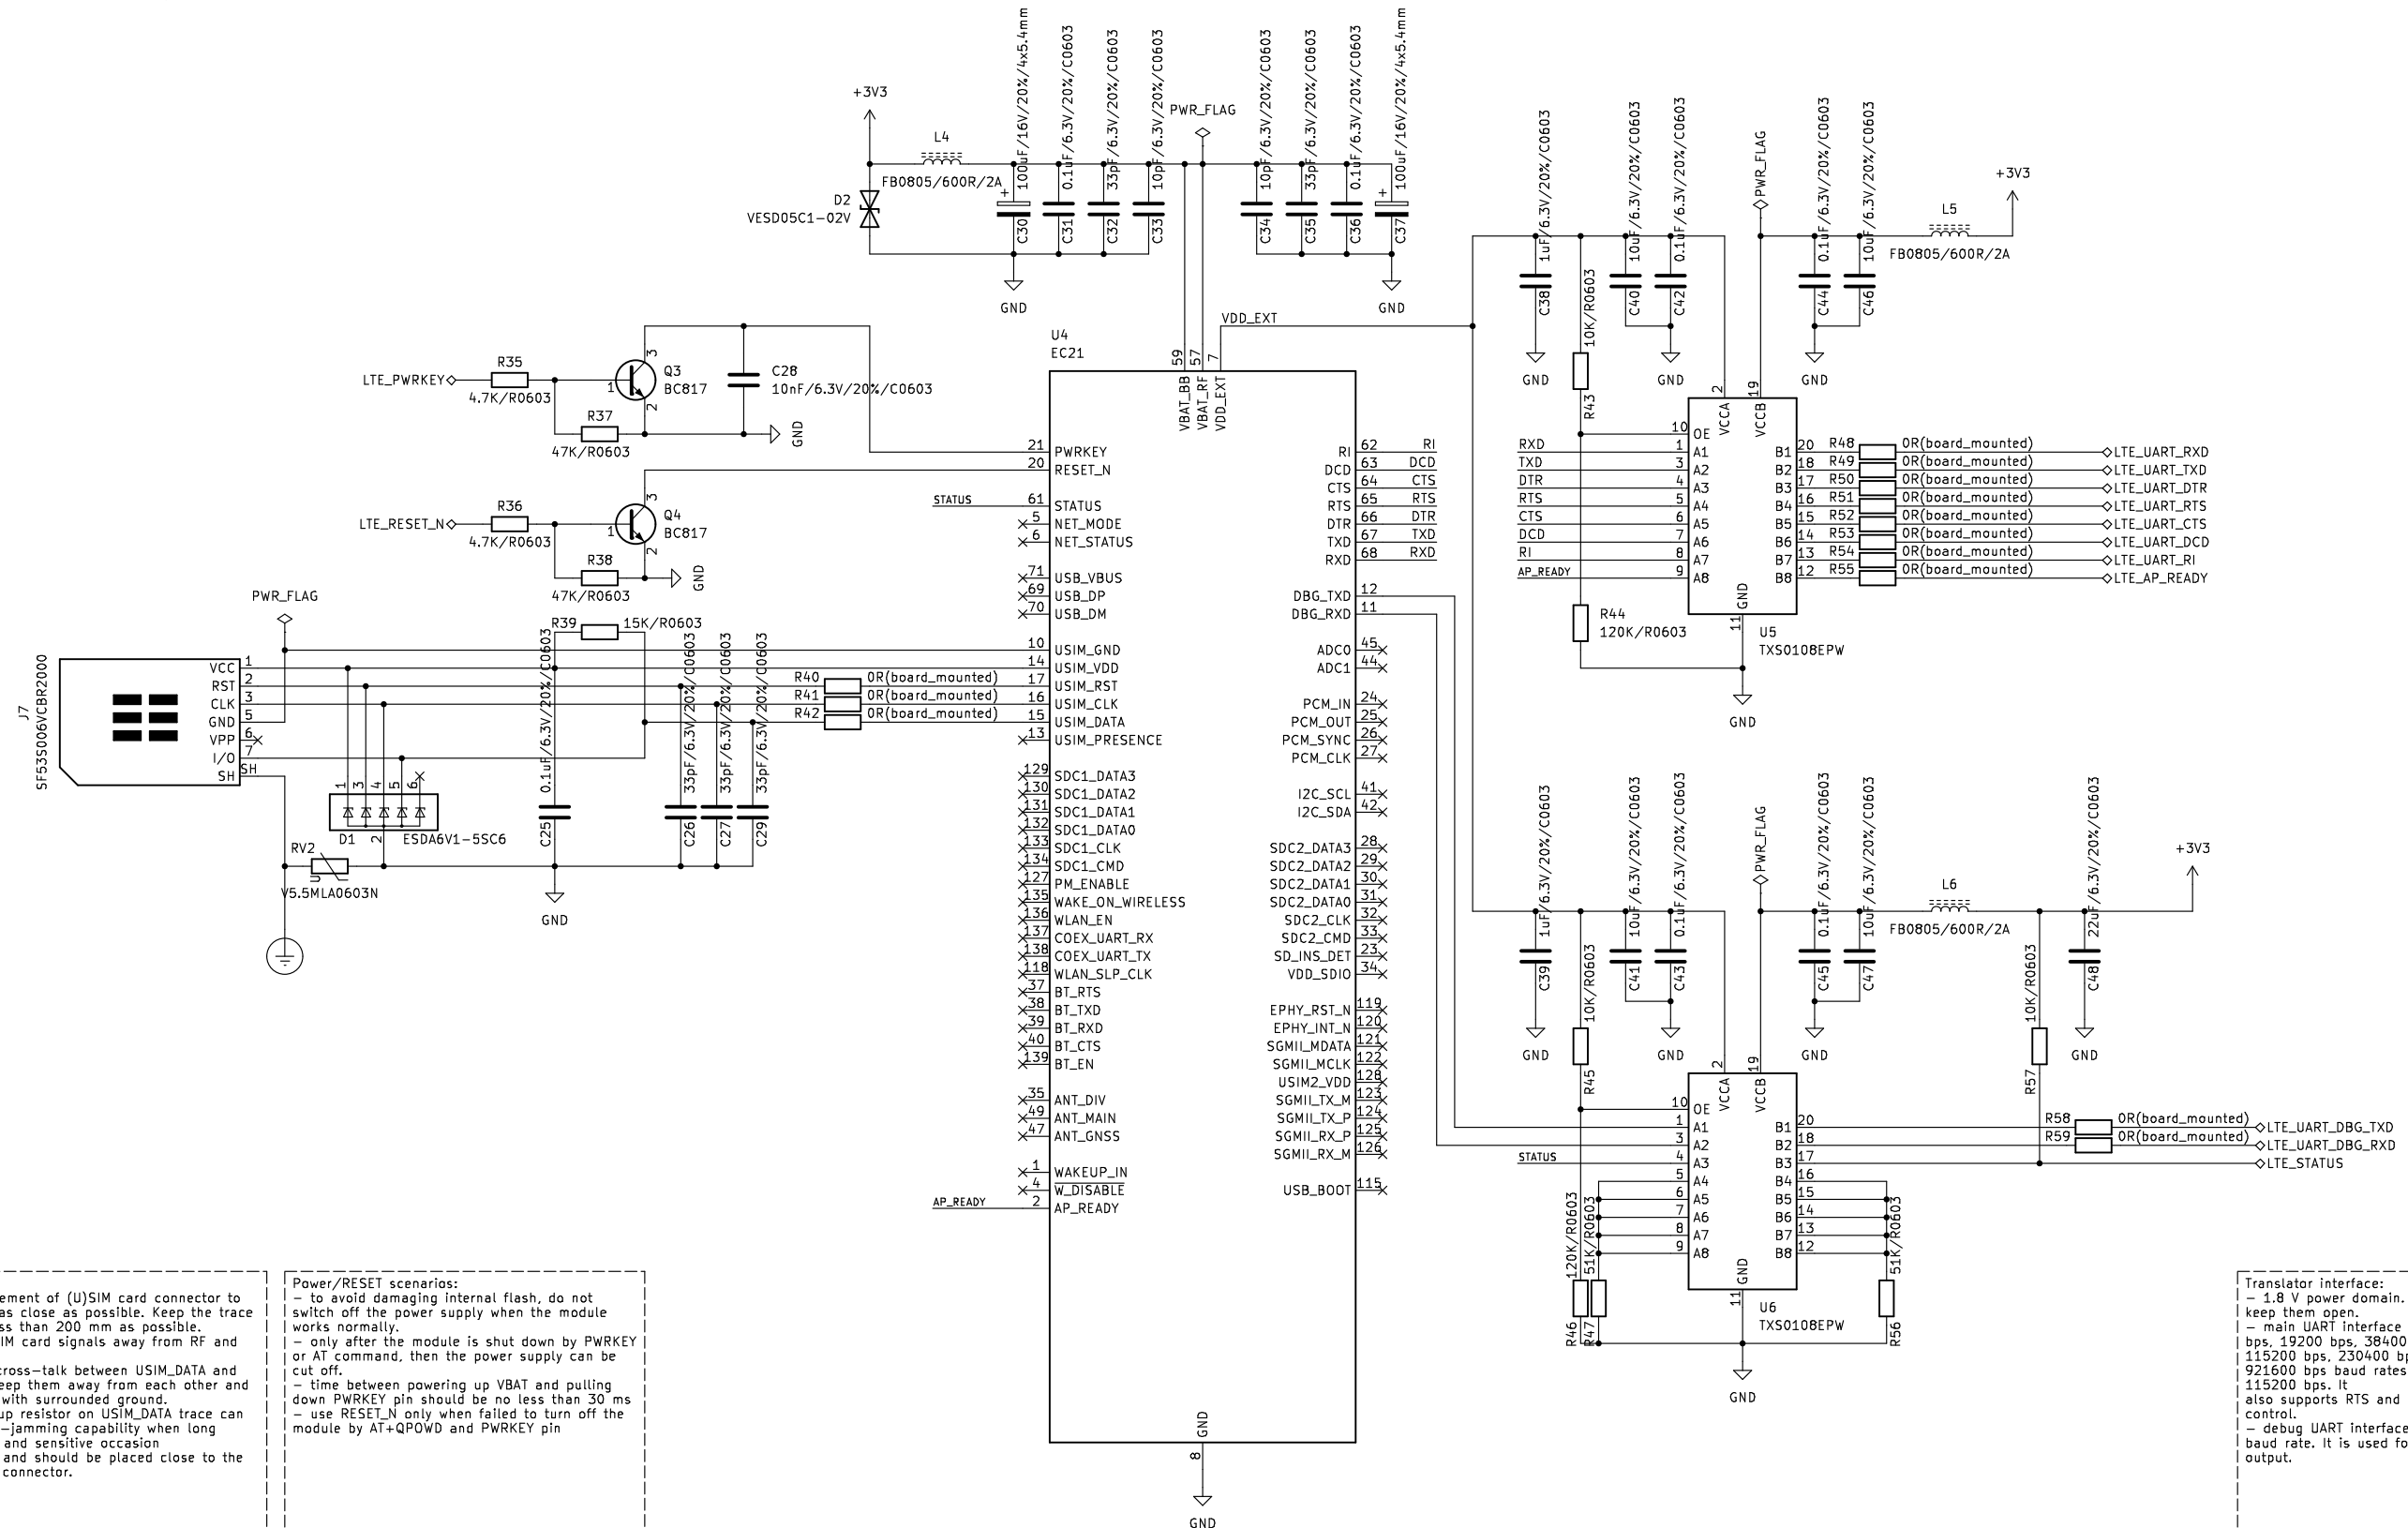

- keep placement of (U)SIM card connector to the module as close as possible. Keep the trace length as less than 200 mm as possible.
- keep (U)SIM card signals away from RF and VBAT traces.
- to avoid cross-talk between USIM_DATA and USIM_CLK, keep them away from each other and shield them with surrounded ground.
- the pull-up resistor on USIM_DATA trace can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the (U)SIM card connector.

- Power/RESET scenarios:
 - to avoid damaging internal flash, do not switch off the power supply when the module works normally.
 - only after the module is shut down by PWRKEY or AT command, then the power supply can be cut off.
 - time between powering up VBAT and pulling down PWRKEY pin should be no less than 30 ms
 - use RESET_N only when failed to turn off the module by AT+QPOWD and PWRKEY pin

```

Translater interface:
- 1.8 V power domain. If UART pins are unused,
keep them open.
- main UART interface supports 4800 bps, 9600
bps, 19200 bps, 38400 bps, 57600 bps,
115200 bps, 230400 bps, 460800 bps and
921600 bps baud rates, and the default is
115200 bps. It
also supports RTS and CTS hardware flow
control.
- debug UART interface supports 115200 bps
baud rate. It is used for Linux console and log
output.

```

RTC

