


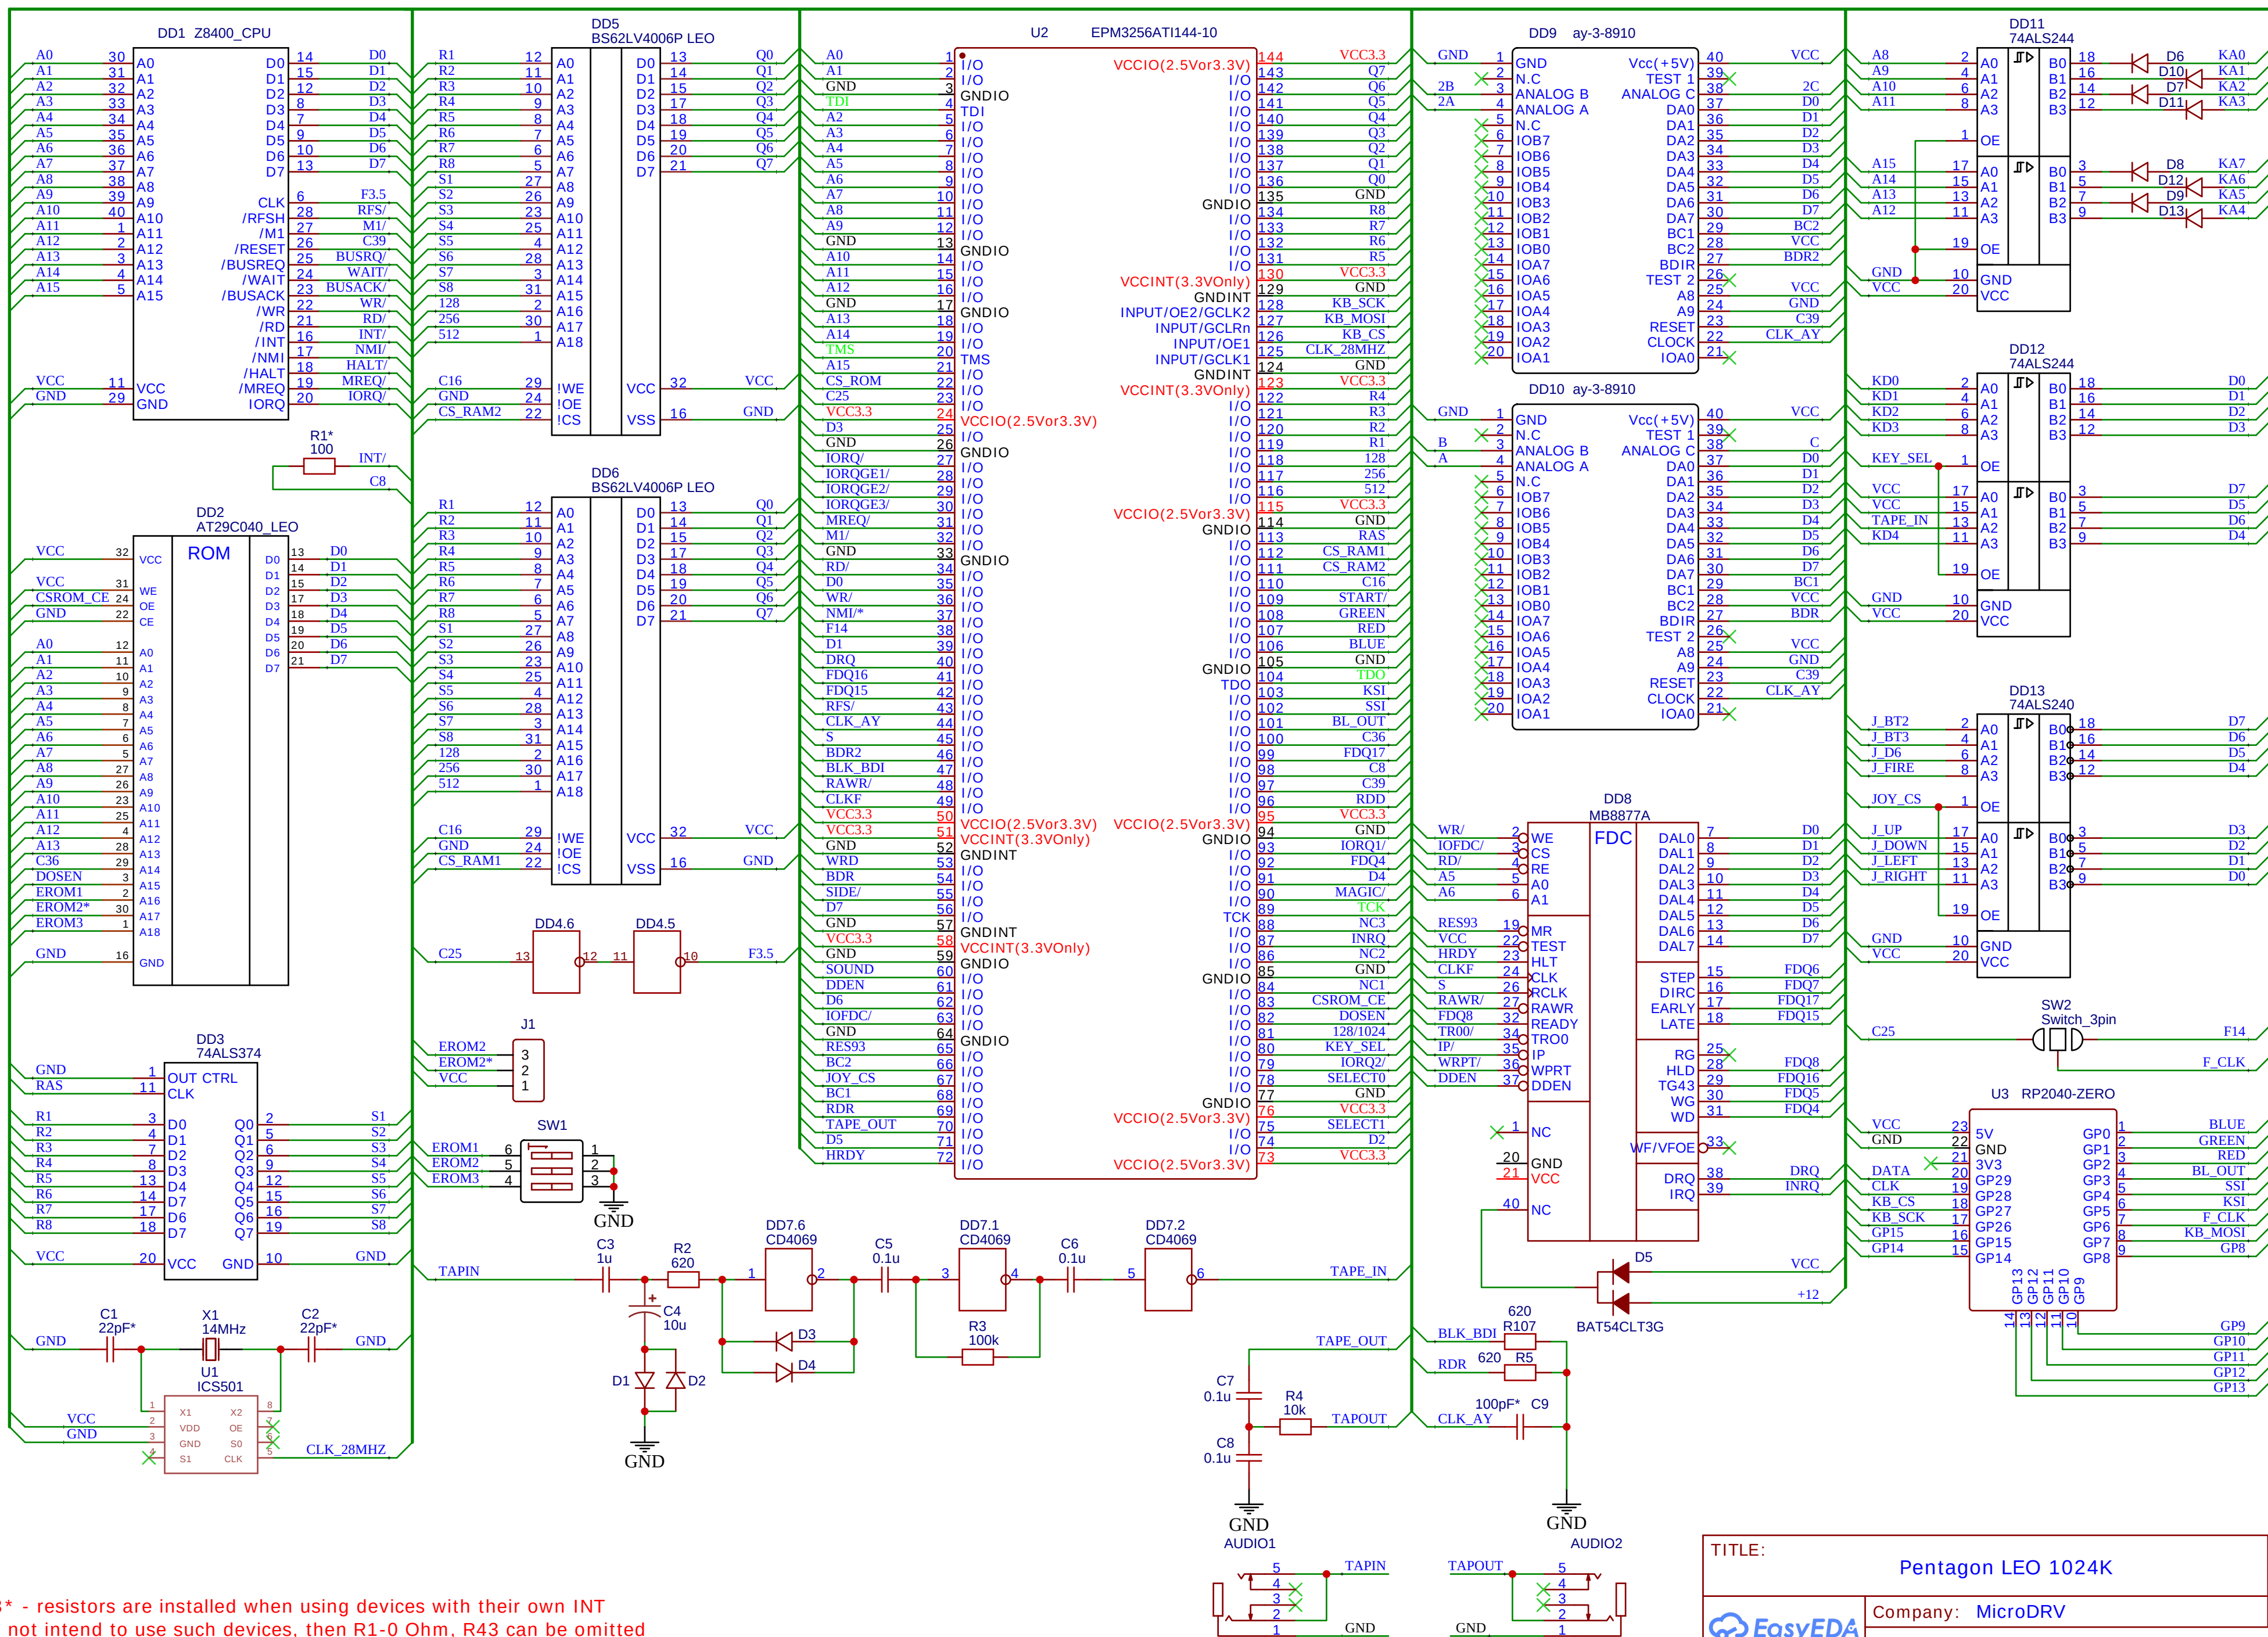

R1*, R43* - resistors are installed when using devices with their own INT
If you do not intend to use such devices, then R1-0 Ohm, R43 can be omitted

