


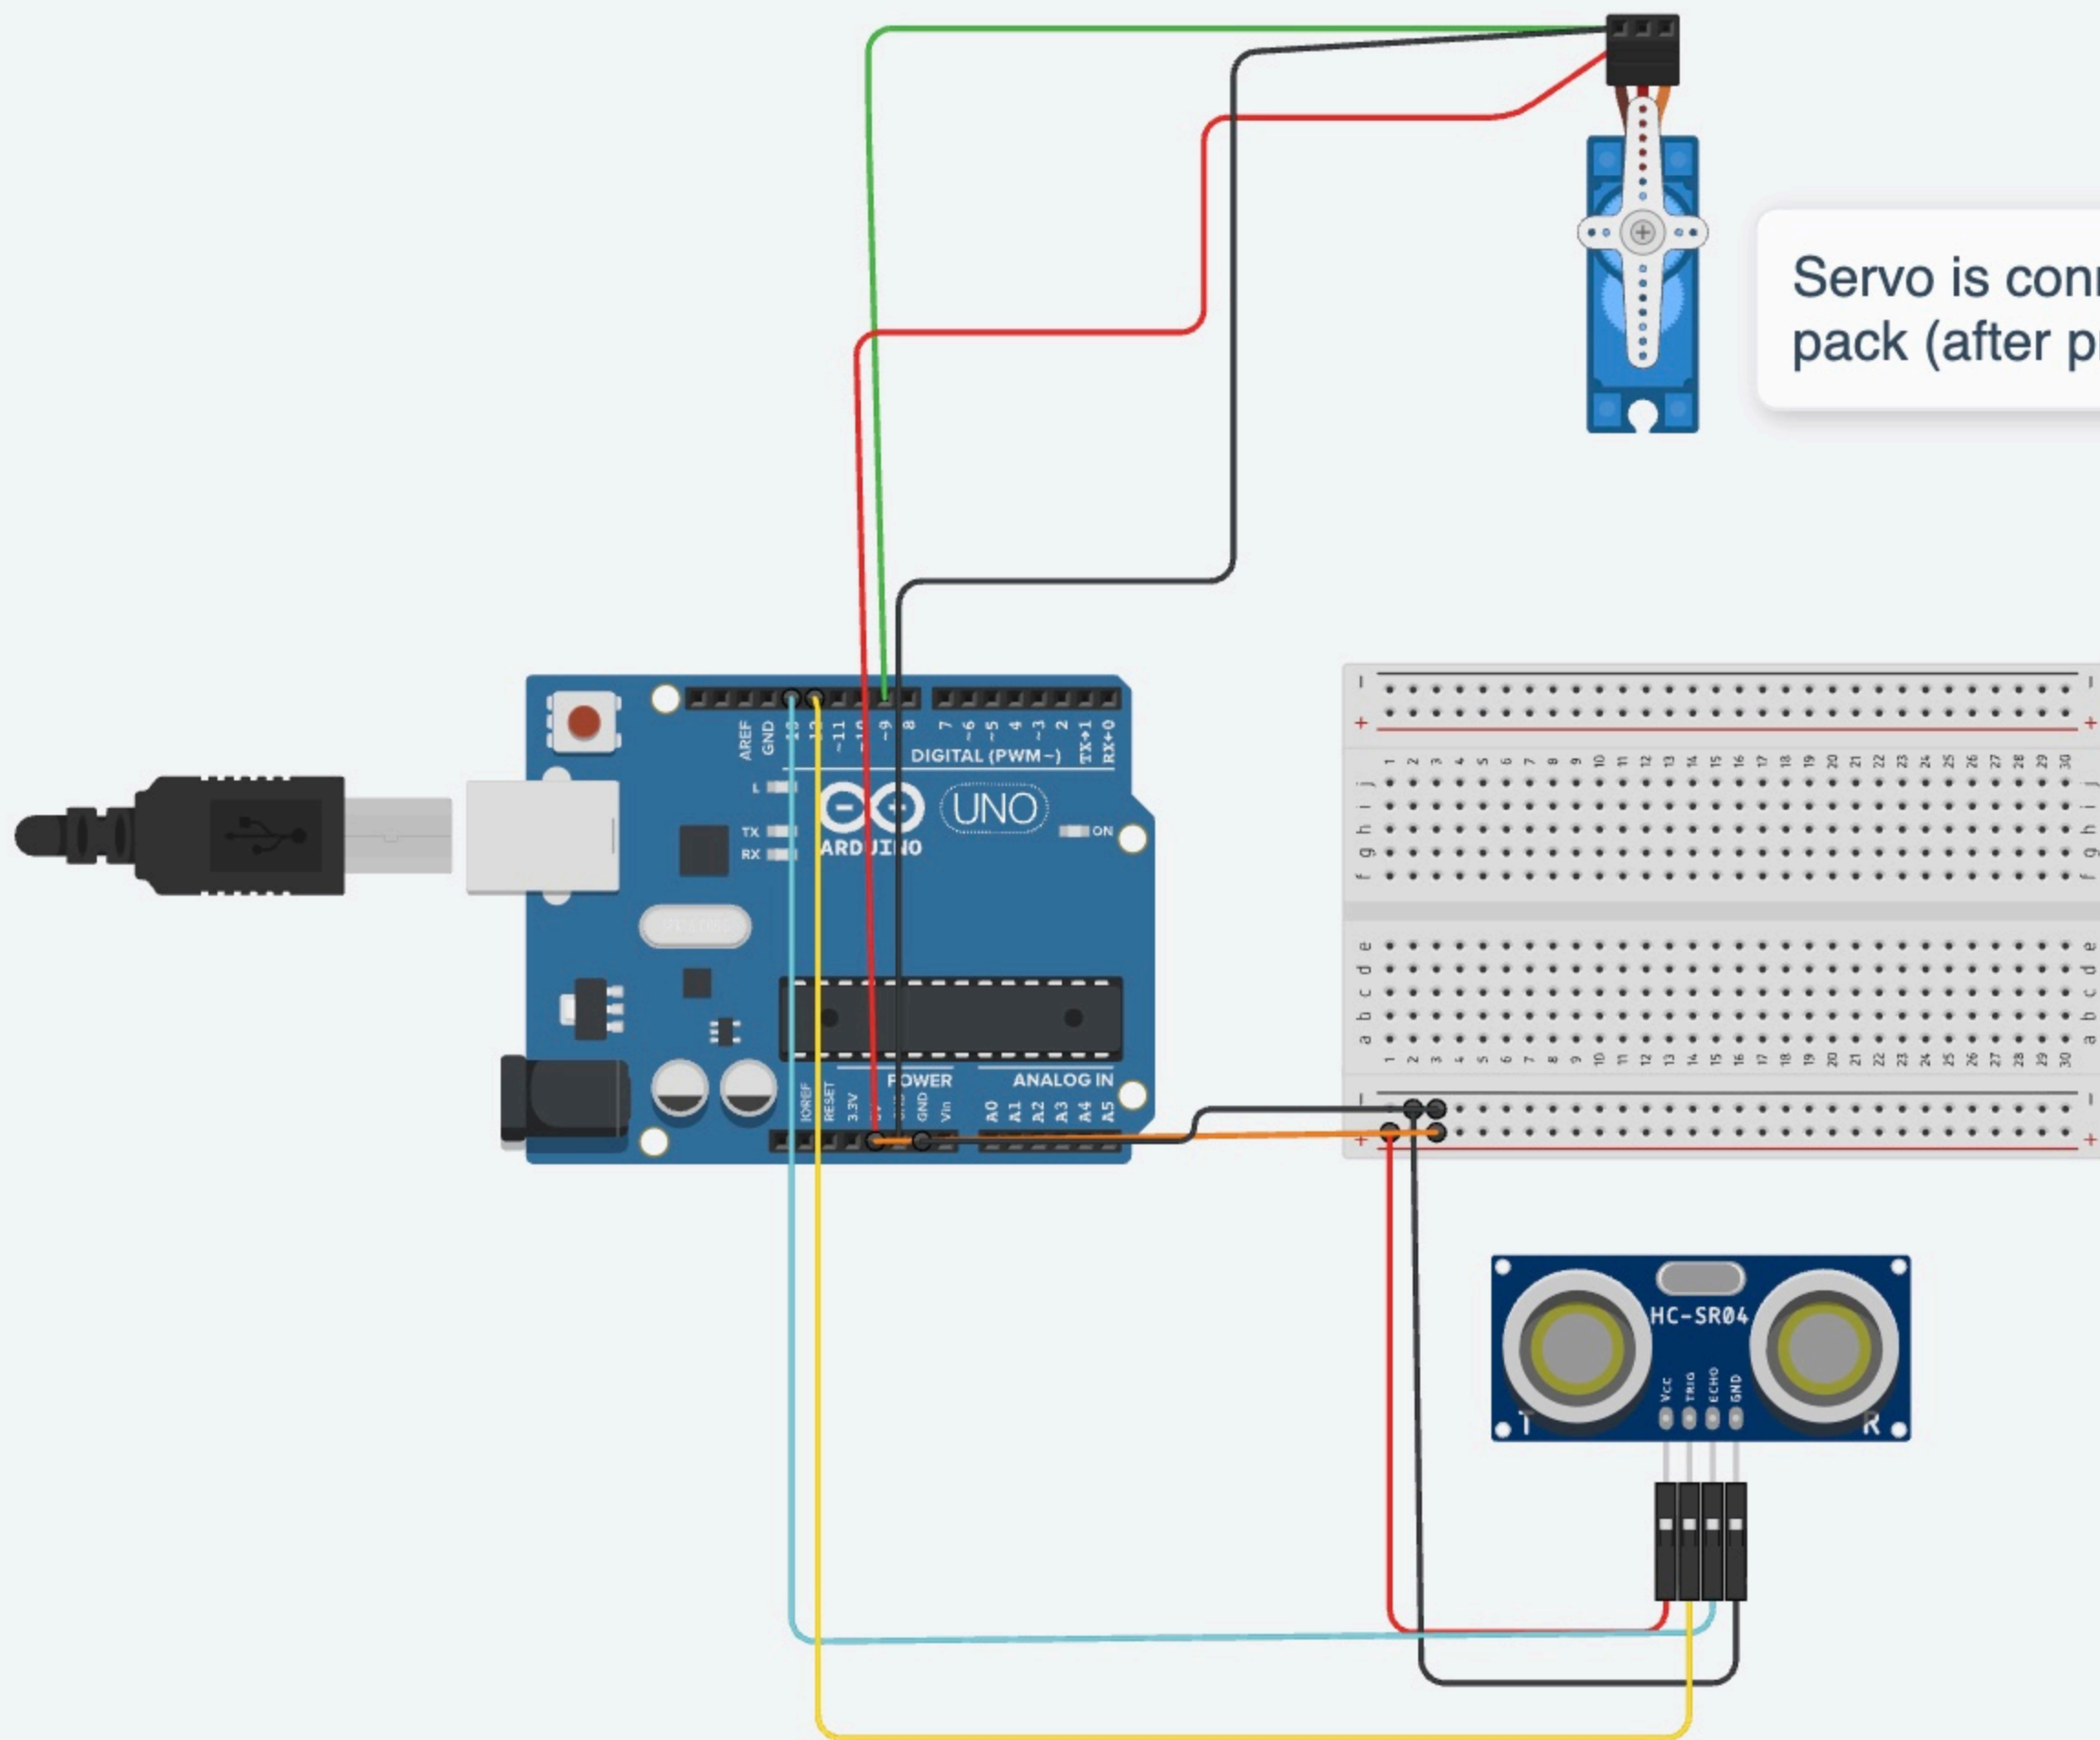

Servo is connected to + and - power rails. Powered by an 4 AA battery pack (after programming)

