Chapter 1

Automap

Automaper is a python script that converts a simple Excel description of a photonic chip into a complete measurement plan ready for chip characterization.

Instead of hardcoding device coordinates or manually programming measurement routines, the user only needs to describe the chip structure in an Excel file then automaper.py interprets this information and automatically generates the data structures required by the positioning software.

The Excel file is organized in independent sheets, where each sheet describes a different aspect of the chip as follows:

Metadata

Contains general information about the chip, answers the question: What is the context of this measurement?.

Typical information includes

- Project
- Wafer
- Die
- Operator
- Date
- Comments

This information is descriptive only and is not involved in the positioning process.

Devices

This worksheet answers the question: What devices are available on the chip for measurement?

Each row defines a single device together with the information required to identify it throughout the measurement plan.

The columns have the following purposes:

- **Device:** A unique identifier for each device. This identifier is used throughout the workbook to associate the corresponding ports and measurement paths with the correct device.

- **Type:** Specifies the type of photonic device (e.g., waveguide, MMI, ring resonator, splitter). Although this information is not required for positioning, it is useful for filtering devices, generating reports, and applying device-specific measurement or analysis routines.
- **Description:** An optional user-defined description. This field does not affect Automaper's operation or the alignment process; it is provided solely for documentation and traceability purposes.
- **Measure:** Enables or disables a device for the current measurement routine. When unchecked, the device is excluded from the measurement routine without requiring any modification to the measurement paths.

Ports

Where is every optical port located?

Measurement plan

Which optical paths should be measured?

Chapter 2

Instalación TwinCAT XAE eXtended Automation Engineering

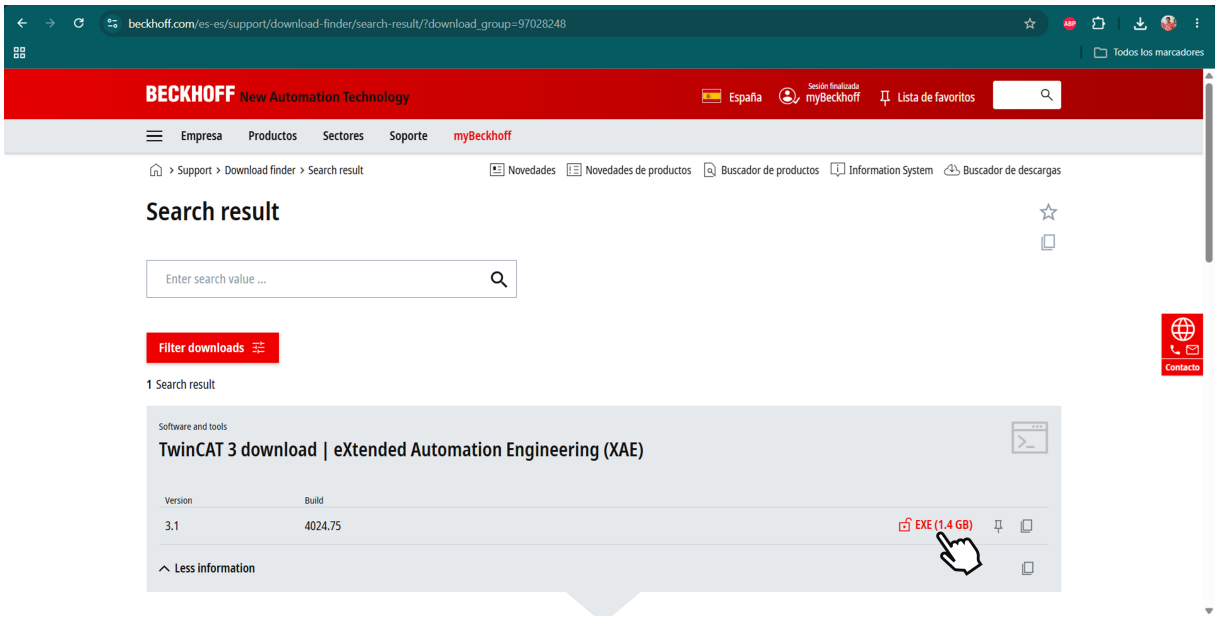


Figure 2.1: Pendiente.

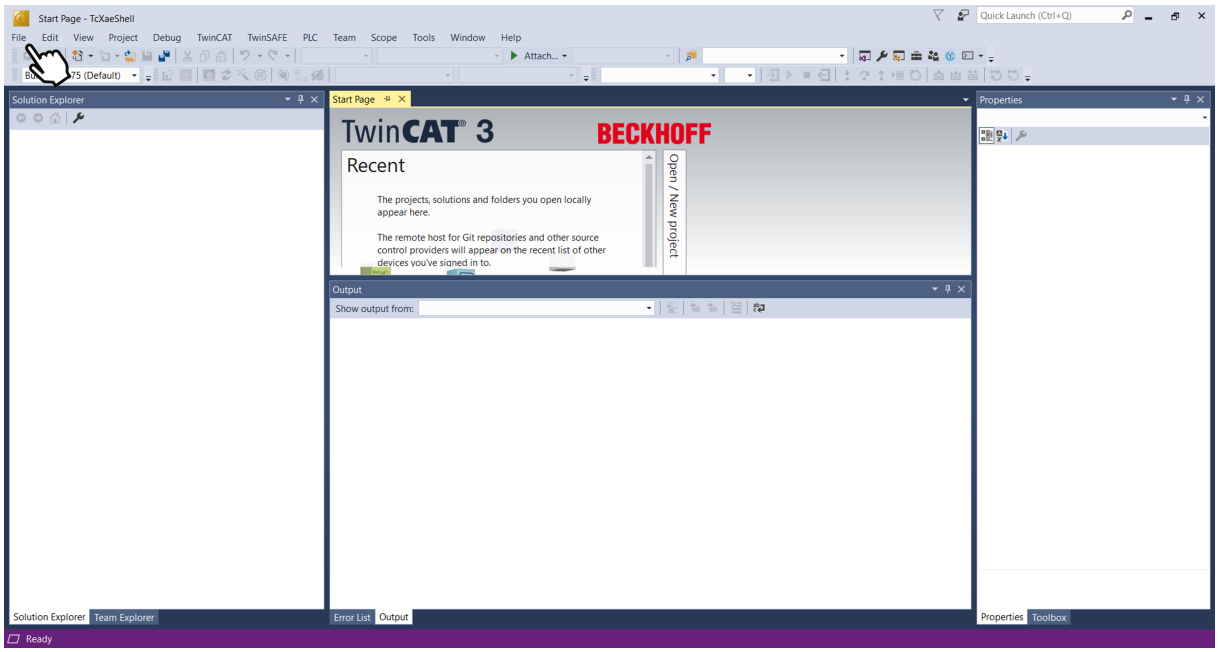


Figure 2.2: Pendiente.

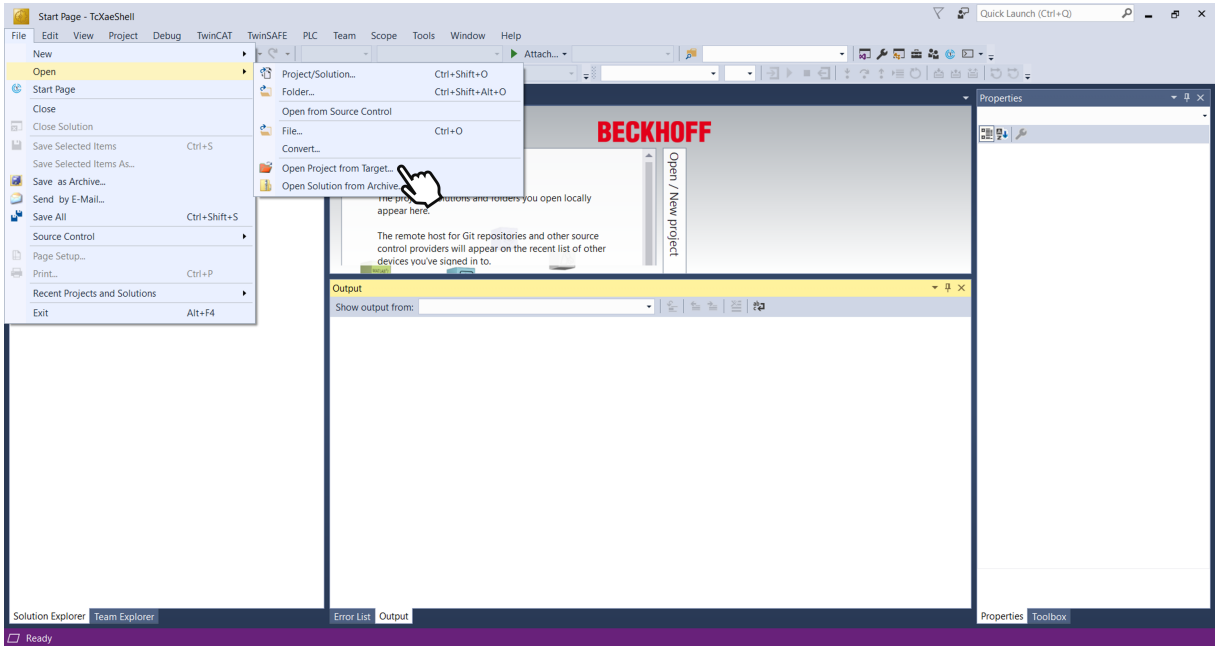


Figure 2.3: Pendiente.

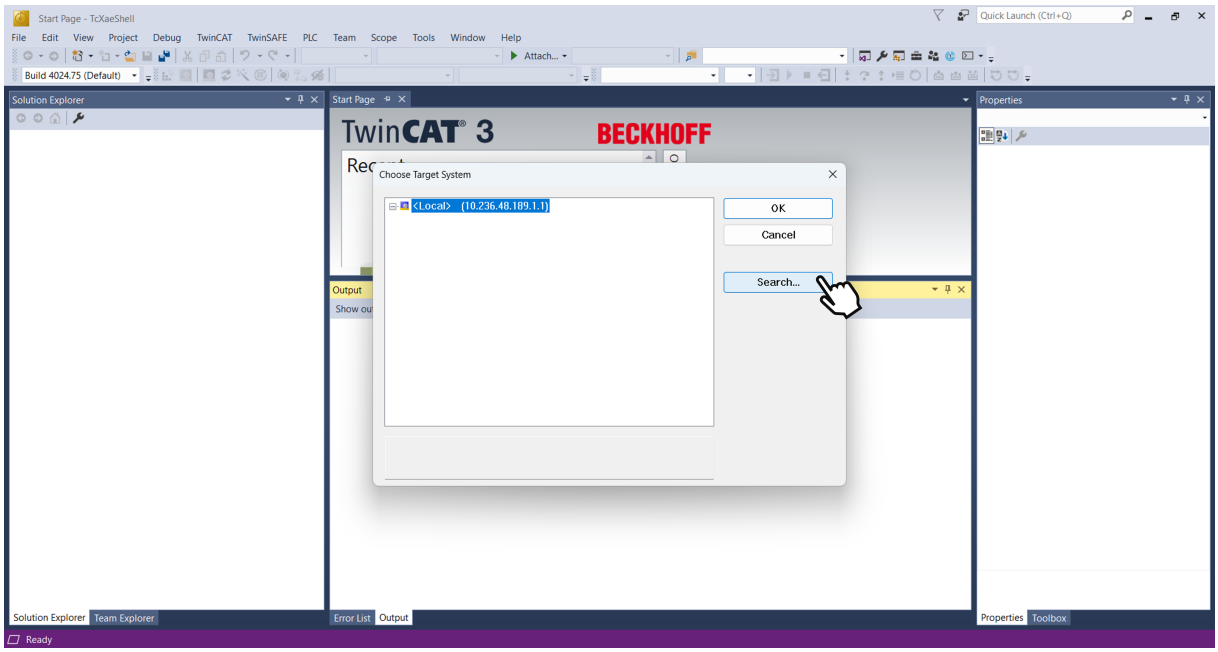


Figure 2.4: Pendiente.

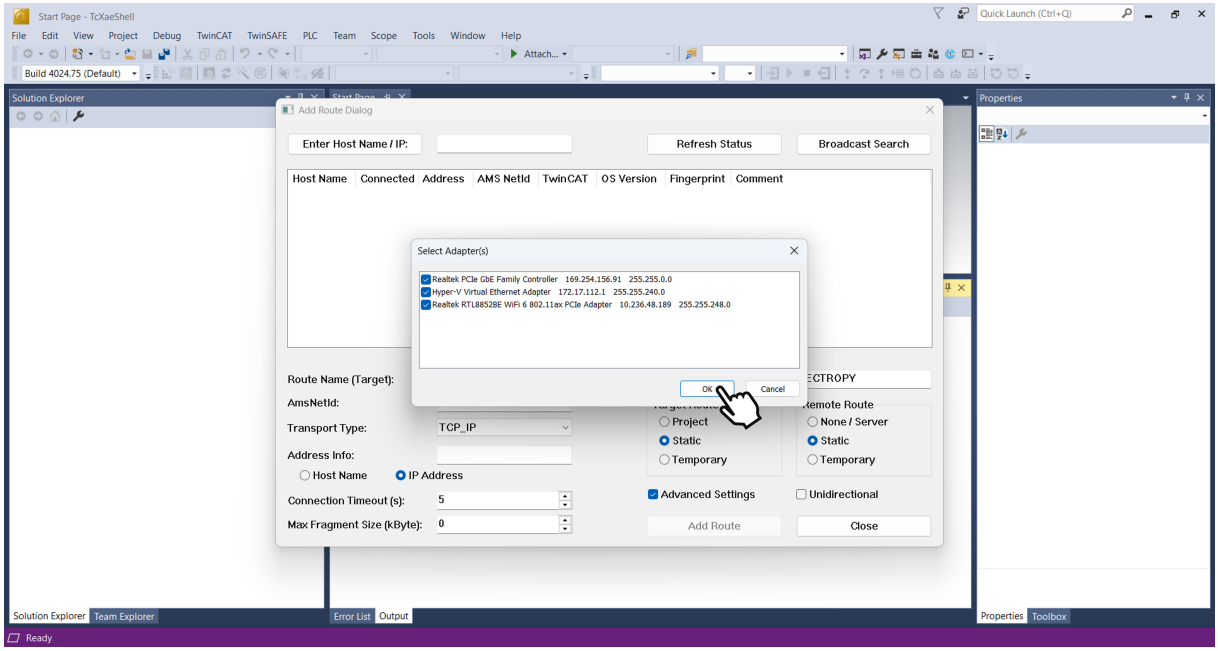


Figure 2.5: Pendiente.

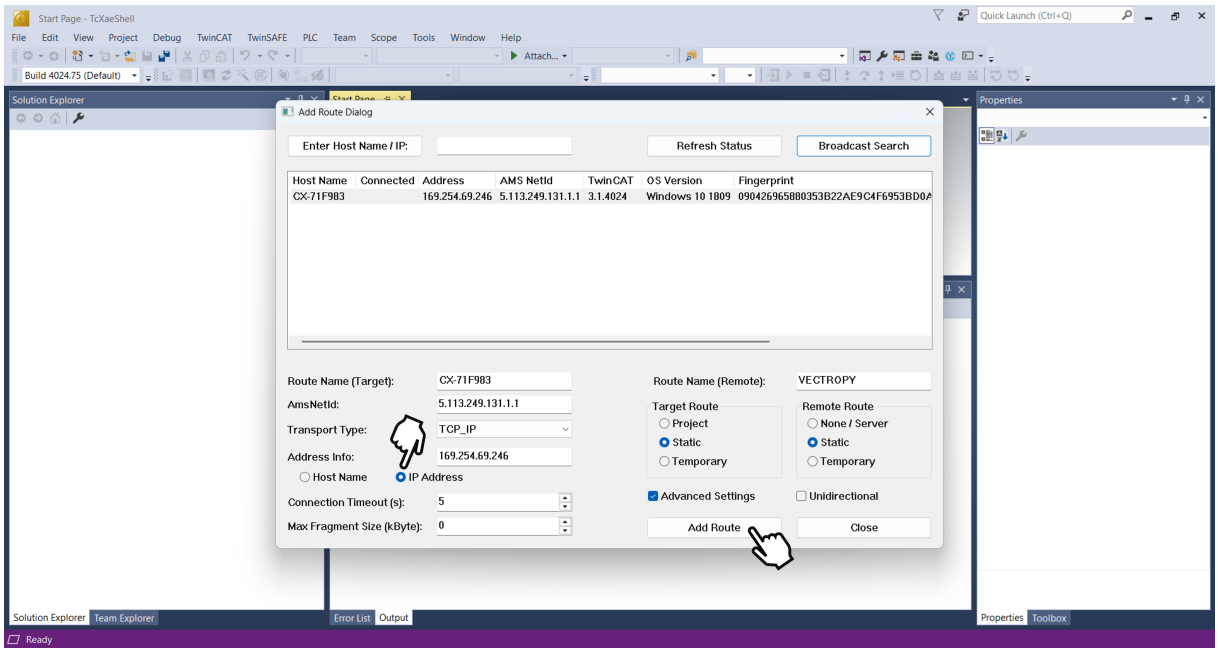


Figure 2.6: Pendiente.

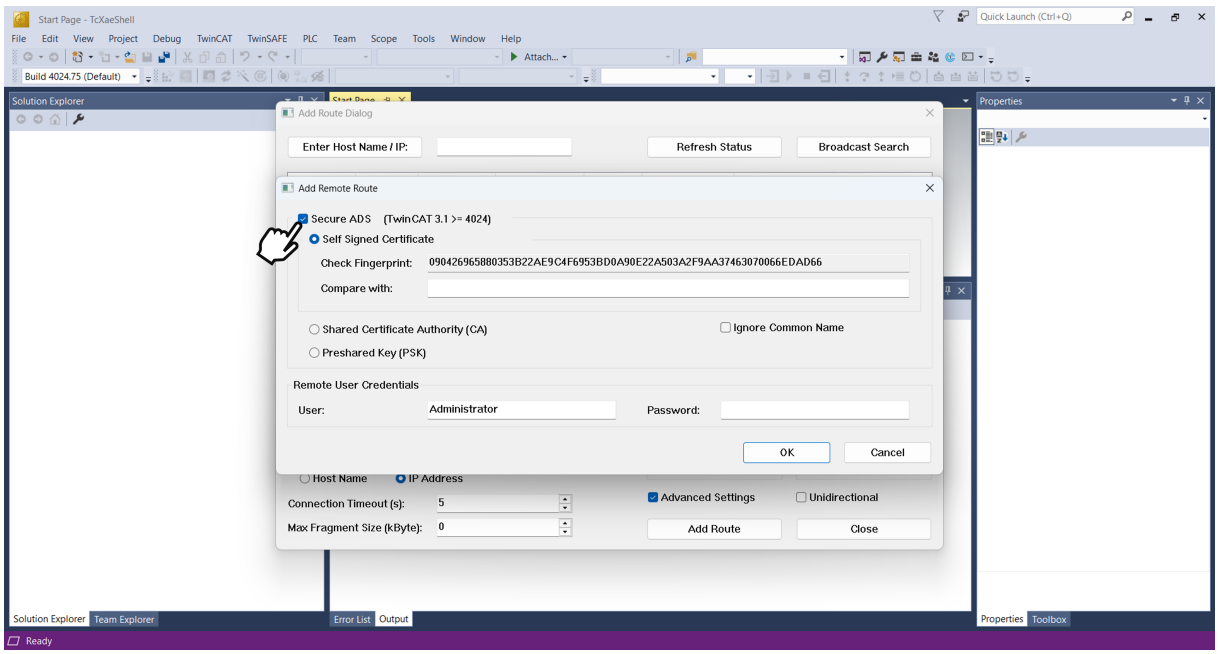


Figure 2.7: Pendiente.

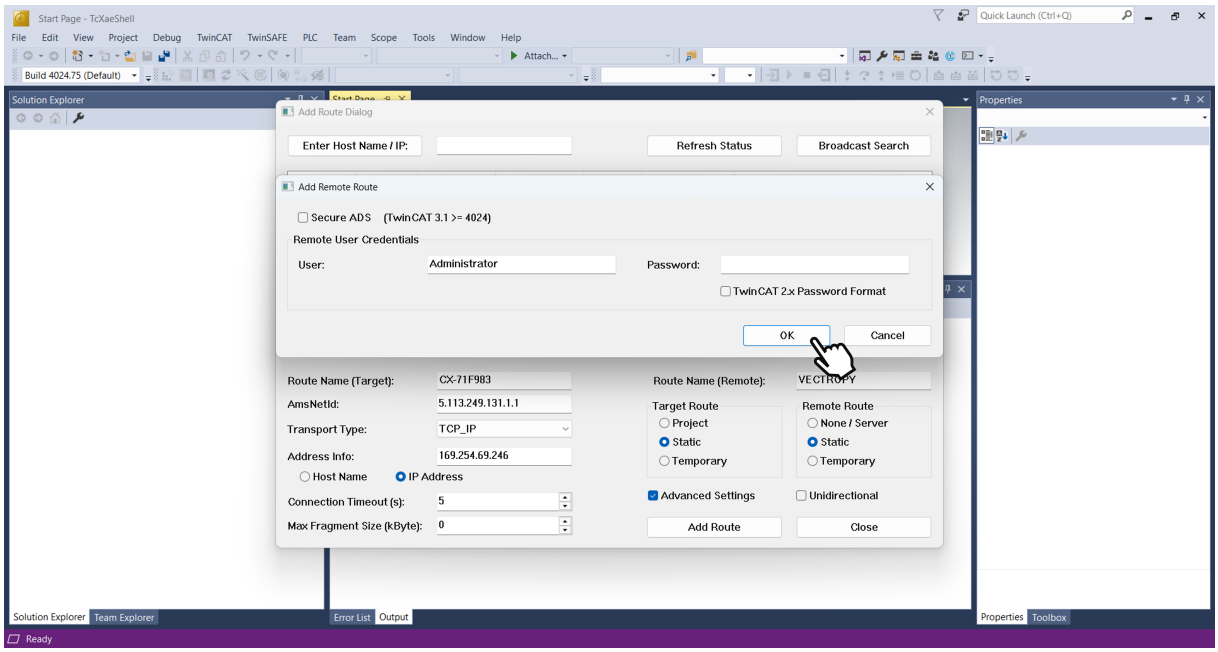


Figure 2.8: Pendiente.

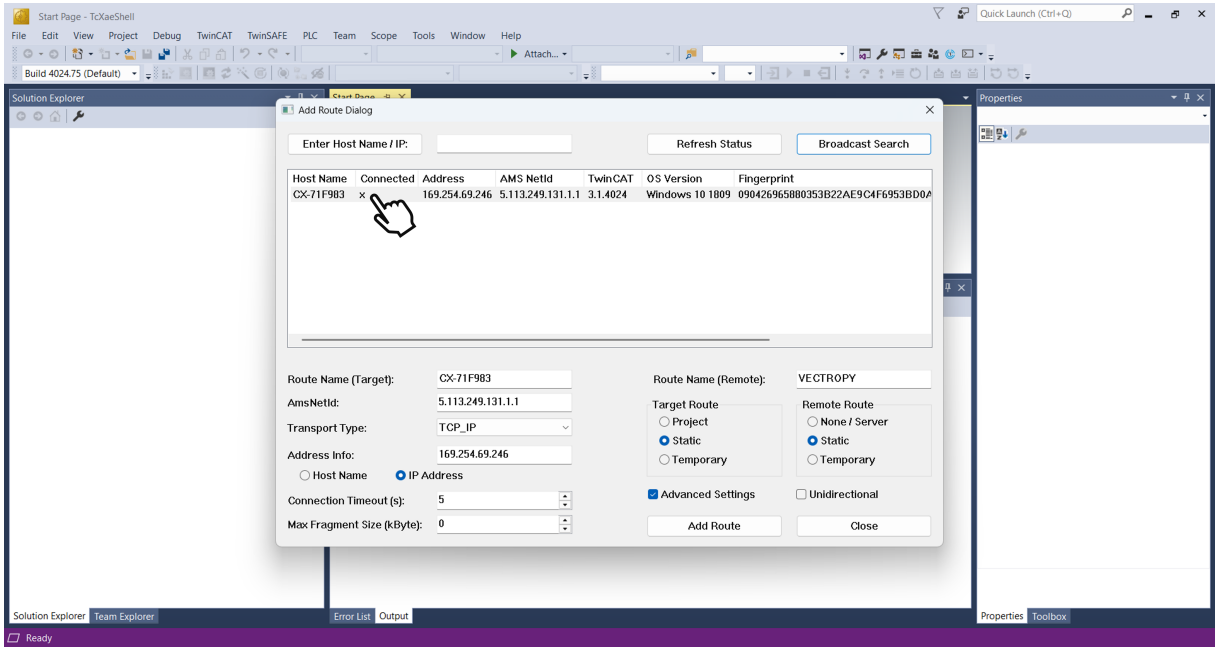


Figure 2.9: Pendiente.

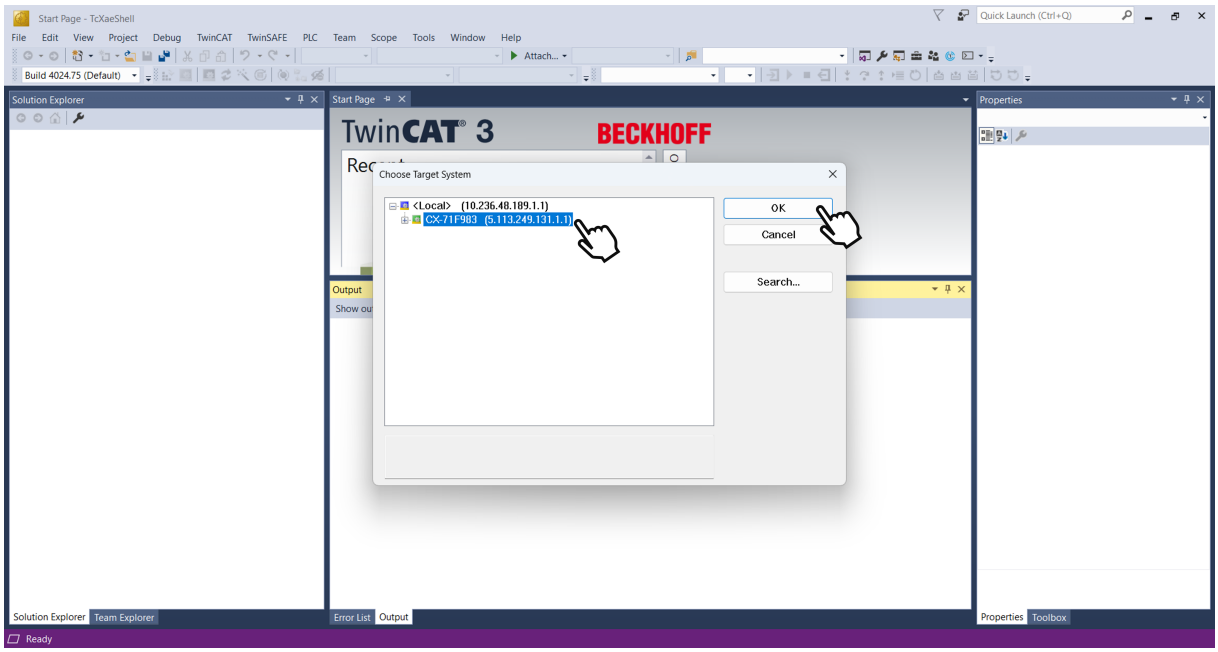


Figure 2.10: Pendiente.

Chapter 3

Suruga Seiki API Documentation

To interact with the Suruga Seiki platform from an external application, the corresponding .NET assembly must first be loaded. An assembly is a compiled unit of code that contains the classes, types, and functionality required by the application to interact with the Suruga Seiki system. The assembly exposes a set of classes that represent different components and functionalities of the platform.

From an object-oriented programming perspective, a class defines the structure and behavior of a particular type of object. Its methods represent the operations or actions that can be performed, while its properties describe characteristics or values associated with its objects. An object is a concrete instance of a class. As an analogy, a class can be understood as a construction blueprint, while an object is a concrete instance created from that blueprint.

The classes exposed by the Suruga Seiki .NET API generally follow a common structure. Each class provides a constructor that allows an instance of the corresponding class to be created and initialized, providing access to its associated functionality. The classes also expose a set of methods that allow the application to perform specific operations, interact with the platform, and retrieve information.

In addition to constructors and methods, the API uses nested types to organize and facilitate the interaction with related data. These nested types can be used to define a finite set of predefined values through enumerations or to group multiple related values into a structured data type. This organization allows related pieces of information to be handled as a single entity rather than as individual parameters.

3.1 Profile class

The `SurugaSeiki.Motion.Profile` class illustrates this structure. Its methods provide the operations required to configure, control, and monitor the profiling process. Some methods interact with the nested types by receiving them as input parameters or returning them as output values. For example, `Start()` and `Stop()` return an `ErrorCode`, `GetProfileStatus()` returns a `Status`, while `SetProfile()` receives a `ProfileParameter` and `RequestProfileData()` returns a `ProfileData`.

The nested types associated with the `Profile` class support different aspects of the profiling functionality. The `ProfileParameter` and `ProfileData` types are structured data types used to encapsulate, respectively, the profiling configuration parameters and the acquired measurement data. In contrast, `Status` and `ErrorCode` are enumerations that define a finite set of predefined values representing the current state of the profiling operation and the error conditions returned

by the API.

```
================================================================================================
SurugaSeiki.Motion.PowerMeter
================================================================================================

Constructores:
  PowerMeter()

Metodos:
  Double GetPower(UInt16 ch)
  AllowedRange GetRange(UInt16 ch)
  Double GetWavelength(UInt16 ch)
  ErrorCode SetRange(UInt16 ch, AllowedRange range)
  ErrorCode SetWaveLength(UInt16 ch, Double waveLength)
  ErrorCode PauseCommunication(UInt16 ch, Boolean isEnabled)

Tipos anidados/enums:
  SurugaSeiki.Motion.PowerMeter+ErrorCode
  SurugaSeiki.Motion.PowerMeter+AllowedRange

================================================================================================
SurugaSeiki.Motion.PowerMeter+AllowedRange
================================================================================================

Campos:
  Int16 value__
  static AllowedRange Minus60
  static AllowedRange Minus50
  static AllowedRange Minus40
  static AllowedRange Minus30
  static AllowedRange Minus20
  static AllowedRange Minus10
  static AllowedRange Zero
  static AllowedRange Plus10
  static AllowedRange Plus20
  static AllowedRange Auto
  static AllowedRange Invalid

================================================================================================
SurugaSeiki.Motion.PowerMeter+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode None
  static ErrorCode ChannelOutOfRange
  static ErrorCode Invalid
```

3.2 Clase Alignment

```
================================================================================================
SurugaSeiki.Motion.Alignment
================================================================================================

Constructores:
  Alignment()
  Alignment(UInt16 id)

Metodos:
  ErrorCode StartSingle()
  ErrorCode StartFlat()
  ErrorCode StartFocus()
  ErrorCode StartTwoChRotation()
  ErrorCode StartMMFRotation()
  ErrorCode StartLoopBack()
  ErrorCode StartCommon()
  ErrorCode Stop()
  ErrorCode GetErrorCode()
  Status GetStatus()
  UInt32 GetErrorAxisID()
  AligningStatusCode GetAligningStatus()
  UInt32 GetProfilePacketSumIndex(ProfileDataType profileDataType)
  ProfileData RequestProfileData(ProfileDataType profileDataType, UInt32 index)
  ProfileData RequestProfileData(ProfileDataType profileDataType, UInt32 index, Boolean isRotationCenterShift)
  Double GetVoltage(UInt32 alignmentAInCh)
  Double GetPower(UInt32 alignmentPMCh)
  Double GetMeasurementWaveLength(UInt32 alignmentPMCh)
  ErrorCode SetSingle(ISingleParameter parameter)
  ErrorCode SetSingle(ISingleParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetFlat(IFlatParameter parameter)
  ErrorCode SetFlat(IFlatParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetFocus(IFocusParameter parameter)
  ErrorCode SetFocus(IFocusParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetTwoChRotation(ITwoChRotationParameter parameter)
  ErrorCode SetTwoChRotation(ITwoChRotationParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetMMFRotation(IMMFRotationParameter parameter)
  ErrorCode SetMMFRotation(IMMFRotationParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetLoopBack(ILoopBackParameter parameter)
  ErrorCode SetLoopBack(ILoopBackParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetCommon(CommonParameter parameter)
  ErrorCode SetCommon(CommonParameter parameter, RotationCenter rotationCenter)
  ErrorCode SetMeasurementWaveLength(UInt32 alignmentPMCh, Double waveLength)
```

```
Tipos anidados/enums:
  SurugaSeiki.Motion.Alignment+AlignmentType
  SurugaSeiki.Motion.Alignment+ErrorCode
  SurugaSeiki.Motion.Alignment+Status
  SurugaSeiki.Motion.Alignment+AligningStatusCode
  SurugaSeiki.Motion.Alignment+ProfileDataType
  SurugaSeiki.Motion.Alignment+ZMode
  SurugaSeiki.Motion.Alignment+ISharingParameter
  SurugaSeiki.Motion.Alignment+ISingleParameter
  SurugaSeiki.Motion.Alignment+SingleParameter
  SurugaSeiki.Motion.Alignment+IFlatParameter
  SurugaSeiki.Motion.Alignment+FlatParameter
  SurugaSeiki.Motion.Alignment+IFocusParameter
  SurugaSeiki.Motion.Alignment+FocusParameter
  SurugaSeiki.Motion.Alignment+ITwoChRotationParameter
  SurugaSeiki.Motion.Alignment+TwoChRotationParameter
  SurugaSeiki.Motion.Alignment+IMMFRotationParameter
  SurugaSeiki.Motion.Alignment+MMFRotationParameter
  SurugaSeiki.Motion.Alignment+ILoopBackParameter
  SurugaSeiki.Motion.Alignment+LoopBackParameter
  SurugaSeiki.Motion.Alignment+ICommonParameter
  SurugaSeiki.Motion.Alignment+CommonParameter
  SurugaSeiki.Motion.Alignment+ProfileData

================================================================================================
SurugaSeiki.Motion.Alignment+AligningStatusCode
================================================================================================

Campos:
  Int32 value__
  static AligningStatusCode NotAligning
  static AligningStatusCode Initializing
  static AligningStatusCode FieldSearching
  static AligningStatusCode PeakSearchingX
  static AligningStatusCode PeakSearchingY
  static AligningStatusCode PeakSearchingZ
  static AligningStatusCode PeakSearchXCh2
  static AligningStatusCode PeakSearchYCh2

================================================================================================
SurugaSeiki.Motion.Alignment+AlignmentType
================================================================================================

Campos:
  Int32 value__
  static AlignmentType Single
  static AlignmentType Flat
  static AlignmentType Focus
  static AlignmentType TwoChRotation
  static AlignmentType MMFRotation
  static AlignmentType LoopBack
  static AlignmentType TwoChFlat

================================================================================================
SurugaSeiki.Motion.Alignment+CommonParameter
================================================================================================

Propiedades:
  AlignmentType alignmentType (get/set)
  ZMode zMode (get/set)
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 mainStageNumberZ (get/set)
  UInt16 subStageNumberX (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 rotateStageNumber (get/set)
  Double rotateSpeed (get/set)
  Int16 rotateDirection (get/set)
  Double coreDistance (get/set)
  UInt16 mmfStageNumber (get/set)
  Double mmfSpeed (get/set)
  Double mmfDistance (get/set)
  UInt16 pmCh (get/set)
  UInt16 pmCh1 (get/set)
  UInt16 pmCh2 (get/set)
  UInt16 analogCh (get/set)
  UInt16 analogCh1 (get/set)
  UInt16 analogCh2 (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRange (get/set)
  Int16 pmInitRangeCh1 (get/set)
  Int16 pmInitRangeCh2 (get/set)
  Double fieldSearchThreshold (get/set)
  Double fieldSearchThresholdCh1 (get/set)
  Double fieldSearchThresholdCh2 (get/set)
  Double peakSearchThreshold (get/set)
  Double peakSearchThresholdXY (get/set)
  Double peakSearchThresholdCh1 (get/set)
  Double peakSearchThresholdCh2 (get/set)
  Double peakSearchThresholdZ (get/set)
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double searchRangeZ (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
```

```
  Double fieldSearchPitchZ (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double fieldSearchSpeedZ (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  Double peakSearchSpeedZ (get/set)
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  UInt32 smoothingRangeZ (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double centroidThresholdZ (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  Double convergentRangeZ (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode None
  static ErrorCode Axis
  static ErrorCode Aligning
  static ErrorCode Parameter

================================================================================================
SurugaSeiki.Motion.Alignment+FlatParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThreshold (get/set)
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+FocusParameter
================================================================================================

Propiedades:
  ZMode zMode (get/set)
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 mainStageNumberZ (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThresholdXY (get/set)
  Double peakSearchThresholdZ (get/set)
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double searchRangeZ (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchPitchZ (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double fieldSearchSpeedZ (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  Double peakSearchSpeedZ (get/set)
```

```
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  UInt32 smoothingRangeZ (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double centroidThresholdZ (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  Double convergentRangeZ (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ICommonParameter
================================================================================================

Propiedades:
  AlignmentType alignmentType (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+IFlatParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberY (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThreshold (get/set)
  Double searchRangeY (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double peakSearchSpeedY (get/set)
  UInt32 smoothingRangeY (get/set)
  Double centroidThresholdY (get/set)
  Double convergentRangeY (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+IFocusParameter
================================================================================================

Propiedades:
  ZMode zMode (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 mainStageNumberZ (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThresholdXY (get/set)
  Double peakSearchThresholdZ (get/set)
  Double searchRangeY (get/set)
  Double searchRangeZ (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchPitchZ (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double fieldSearchSpeedZ (get/set)
  Double peakSearchSpeedY (get/set)
  Double peakSearchSpeedZ (get/set)
  UInt32 smoothingRangeY (get/set)
  UInt32 smoothingRangeZ (get/set)
  Double centroidThresholdY (get/set)
  Double centroidThresholdZ (get/set)
  Double convergentRangeY (get/set)
  Double convergentRangeZ (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ILoopBackParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberY (get/set)
  UInt16 mainStageNumberZ (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThresholdXY (get/set)
  Double peakSearchThresholdZ (get/set)
  Double searchRangeY (get/set)
  Double searchRangeZ (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchPitchZ (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double fieldSearchSpeedZ (get/set)
  Double peakSearchSpeedY (get/set)
```

```
  Double peakSearchSpeedZ (get/set)
  UInt32 smoothingRangeY (get/set)
  UInt32 smoothingRangeZ (get/set)
  Double centroidThresholdY (get/set)
  Double centroidThresholdZ (get/set)
  Double convergentRangeY (get/set)
  Double convergentRangeZ (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+IMMFRotationParameter
================================================================================================

Propiedades:
  UInt16 mmfStageNumber (get/set)
  Double mmfSpeed (get/set)
  Double mmfDistance (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ISharingParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberX (get/set)
  Double subAngleX (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Double searchRangeX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double peakSearchSpeedX (get/set)
  UInt32 smoothingRangeX (get/set)
  Double centroidThresholdX (get/set)
  Double convergentRangeX (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ISingleParameter
================================================================================================

Propiedades:
  ZMode zMode (get/set)
  UInt16 subStageNumberX (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThreshold (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ITwoChRotationParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberY (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleY (get/set)
  UInt16 rotateStageNumber (get/set)
  Double rotateSpeed (get/set)
  Int16 rotateDirection (get/set)
  Double coreDistance (get/set)
  UInt16 pmCh1 (get/set)
  UInt16 pmCh2 (get/set)
  UInt16 analogCh1 (get/set)
  UInt16 analogCh2 (get/set)
  Int16 pmInitRangeCh1 (get/set)
  Int16 pmInitRangeCh2 (get/set)
  Double fieldSearchThresholdCh1 (get/set)
  Double fieldSearchThresholdCh2 (get/set)
  Double peakSearchThresholdCh1 (get/set)
  Double peakSearchThresholdCh2 (get/set)
  Double searchRangeY (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double peakSearchSpeedY (get/set)
  UInt32 smoothingRangeY (get/set)
  Double centroidThresholdY (get/set)
  Double convergentRangeY (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+LoopBackParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 mainStageNumberZ (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThresholdXY (get/set)
  Double peakSearchThresholdZ (get/set)
```

```
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double searchRangeZ (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchPitchZ (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double fieldSearchSpeedZ (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  Double peakSearchSpeedZ (get/set)
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  UInt32 smoothingRangeZ (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double centroidThresholdZ (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  Double convergentRangeZ (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+MMFRotationParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 rotateStageNumber (get/set)
  Double rotateSpeed (get/set)
  Int16 rotateDirection (get/set)
  Double coreDistance (get/set)
  UInt16 mmfStageNumber (get/set)
  Double mmfSpeed (get/set)
  Double mmfDistance (get/set)
  UInt16 pmCh1 (get/set)
  UInt16 pmCh2 (get/set)
  UInt16 analogCh1 (get/set)
  UInt16 analogCh2 (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRangeCh1 (get/set)
  Int16 pmInitRangeCh2 (get/set)
  Double fieldSearchThresholdCh1 (get/set)
  Double fieldSearchThresholdCh2 (get/set)
  Double peakSearchThresholdCh1 (get/set)
  Double peakSearchThresholdCh2 (get/set)
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+ProfileData
================================================================================================

Campos:
  UInt16 mainAxisNumber
  UInt16 sub1AxisNumber
  UInt16 sub2AxisNumber
  UInt16 signalCh1Number
  UInt16 signalCh2Number
  UInt32 packetIndex
  UInt32 dataCount
  Double[] mainPositionList
  Double[] sub1PositionList
  Double[] sub2PositionList
  Double[] signalCh1List
  Double[] signalCh2List

================================================================================================
SurugaSeiki.Motion.Alignment+ProfileDataType
================================================================================================

Campos:
  Int32 value__
  static ProfileDataType FieldSearch
  static ProfileDataType PeakSearchX
  static ProfileDataType PeakSearchY
```

```
  static ProfileDataType PeakSearchZ
  static ProfileDataType PeakSearchXCh2
  static ProfileDataType PeakSearchYCh2

================================================================================================
SurugaSeiki.Motion.Alignment+SingleParameter
================================================================================================

Propiedades:
  ZMode zMode (get/set)
  UInt16 mainStageNumberX (get/set)
  UInt16 subStageNumberX (get/set)
  Double subAngleX (get/set)
  UInt16 pmCh (get/set)
  UInt16 analogCh (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRange (get/set)
  Double fieldSearchThreshold (get/set)
  Double peakSearchThreshold (get/set)
  Double searchRangeX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double peakSearchSpeedX (get/set)
  UInt32 smoothingRangeX (get/set)
  Double centroidThresholdX (get/set)
  Double convergentRangeX (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
SurugaSeiki.Motion.Alignment+Status
================================================================================================

Campos:
  Int32 value__
  static Status Stopping
  static Status Success
  static Status Aligning
  static Status FieldSearchRangeOver
  static Status ProfileDataOver
  static Status PeakSearchCountOver
  static Status PeakSearchRangeOver
  static Status InvalidParameter
  static Status ServoIsNotReady
  static Status ServoIsAlarm
  static Status StageOnLimit
  static Status VoltageLimit
  static Status PMRangeLimit
  static Status PMInitRangeChangeFail
  static Status PMDisconnected
  static Status RotationAdjustmentFail
  static Status InPositionFail
  static Status TorqueLimit

================================================================================================
SurugaSeiki.Motion.Alignment+TwoChRotationParameter
================================================================================================

Propiedades:
  UInt16 mainStageNumberX (get/set)
  UInt16 mainStageNumberY (get/set)
  UInt16 subStageNumberXY (get/set)
  Double subAngleX (get/set)
  Double subAngleY (get/set)
  UInt16 rotateStageNumber (get/set)
  Double rotateSpeed (get/set)
  Int16 rotateDirection (get/set)
  Double coreDistance (get/set)
  UInt16 pmCh1 (get/set)
  UInt16 pmCh2 (get/set)
  UInt16 analogCh1 (get/set)
  UInt16 analogCh2 (get/set)
  Boolean pmAutoRangeUpOn (get/set)
  Boolean pmInitRangeSettingOn (get/set)
  Int16 pmInitRangeCh1 (get/set)
  Int16 pmInitRangeCh2 (get/set)
  Double fieldSearchThresholdCh1 (get/set)
  Double fieldSearchThresholdCh2 (get/set)
  Double peakSearchThresholdCh1 (get/set)
  Double peakSearchThresholdCh2 (get/set)
  Double searchRangeX (get/set)
  Double searchRangeY (get/set)
  Double fieldSearchPitchX (get/set)
  Double fieldSearchPitchY (get/set)
  Double fieldSearchFirstPitchX (get/set)
  Double fieldSearchSpeedX (get/set)
  Double fieldSearchSpeedY (get/set)
  Double peakSearchSpeedX (get/set)
  Double peakSearchSpeedY (get/set)
  UInt32 smoothingRangeX (get/set)
  UInt32 smoothingRangeY (get/set)
  Double centroidThresholdX (get/set)
  Double centroidThresholdY (get/set)
  Double convergentRangeX (get/set)
  Double convergentRangeY (get/set)
  UInt16 comparisonCount (get/set)
  UInt16 maxRepeatCount (get/set)

================================================================================================
```

```
SurugaSeiki.Motion.Alignment+ZMode
================================================================================================

Campos:
  Int32 value__
  static ZMode Round
  static ZMode ForwardPlus
  static ZMode ForwardMinus
```

3.3 Clase AngleAdjustment

```
================================================================================================
SurugaSeiki.Motion.AngleAdjustment
================================================================================================

Constructores:
  AngleAdjustment(UInt16 id)

Metodos:
  ErrorCode Start()
  ErrorCode Stop()
  Status GetStatus()
  UInt32 GetErrorAxisID()
  AdjustingStatus GetAdjustingStatus()
  UInt32 GetProfilePacketSumIndex(ProfileDataType profileDataType)
  ProfileData RequestProfileData(ProfileDataType profileDataType, UInt32 index)
  ErrorCode SetParameter(AngleAdjustmentParameter parameter)
  ErrorCode SetParameter(AngleAdjustmentParameter parameter, RotationCenter rotationCenter)

Tipos anidados/enums:
  SurugaSeiki.Motion.AngleAdjustment+ErrorCode
  SurugaSeiki.Motion.AngleAdjustment+Status
  SurugaSeiki.Motion.AngleAdjustment+AdjustingStatus
  SurugaSeiki.Motion.AngleAdjustment+ProfileDataType
  SurugaSeiki.Motion.AngleAdjustment+AngleAdjustmentParameter
  SurugaSeiki.Motion.AngleAdjustment+ProfileData

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+AdjustingStatus
================================================================================================

Campos:
  Int32 value__
  static AdjustingStatus NotAdjusting
  static AdjustingStatus Initializing
  static AdjustingStatus ContactingZ
  static AdjustingStatus AdjustingTx
  static AdjustingStatus AdjustingTy

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+AngleAdjustmentParameter
================================================================================================

Campos:
  Double gap
  UInt16 signalChNumber
  Double signalLowerLimit
  UInt16 unlockDOutChNumber
  Boolean unlockDOutControlOn
  Boolean lockUnlockAdjustEnbale
  Double lockUnlockDifference
  UInt16 contactAxisNumber
  Double contactSearchRange
  Double contactSearchSpeed
  UInt32 contactSmoothing
  UInt32 contactSensitivity
  Double pushDistance
  UInt16 angleAxisNumberTx
  UInt16 angleAxisNumberTy
  Double angleSearchRangeTx
  Double angleSearchRangeTy
  Double angleSearchSpeedTx
  Double angleSearchSpeedTy
  UInt32 angleSmoothingTx
  UInt32 angleSmoothingTy
  UInt32 angleSensitivityTx
  UInt32 angleSensitivityTy
  UInt16 angleJudgeCountTx
  UInt16 angleJudgeCountTy
  Double angleConvergentRangeTx
  Double angleConvergentRangeTy
  UInt16 angleComparisonCount
  UInt16 angleMaxCount

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode None
  static ErrorCode Axis
  static ErrorCode Adjusting
```

```
  static ErrorCode Parameter

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+ProfileData
================================================================================================

Campos:
  UInt16 mainAxisNumber
  UInt16 sub1AxisNumber
  UInt16 sub2AxisNumber
  UInt16 signalCh1Number
  UInt16 signalCh2Number
  UInt32 packetIndex
  UInt32 dataCount
  Double[] mainPositionList
  Double[] sub1PositionList
  Double[] sub2PositionList
  Double[] signalCh1List
  Double[] signalCh2List

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+ProfileDataType
================================================================================================

Campos:
  Int32 value__
  static ProfileDataType ContactZ
  static ProfileDataType AdjustmentTx
  static ProfileDataType AdjustmentTy

================================================================================================
SurugaSeiki.Motion.AngleAdjustment+Status
================================================================================================

Campos:
  Int32 value__
  static Status Stopping
  static Status Success
  static Status Adjusting
  static Status ProfileDataOver
  static Status InvalidParameter
  static Status ServoIsNotReady
  static Status ServoIsAlarm
  static Status StageOnLimit
  static Status SignalLowerLimit
  static Status CouldnotContact
  static Status AdjustCountOver
  static Status AngleAdjustRnageOver
  static Status LostContact
```

3.4 Clase Axis2D

```
================================================================================================
SurugaSeiki.Motion.Axis2D
================================================================================================

Constructores:
  Axis2D(UInt16 mainStageNumber, UInt16 subStageNumber)

Metodos:
  ErrorCode SetAxisNumber(UInt16 mainStageNumber, UInt16 subStageNumber)
  UInt16[] GetAxisNumber()
  ErrorCode MoveAbsolute(Point targetPosition)
  ErrorCode MoveAbsolute(Double mainTargetPosition, Double subTargetPosition)
  ErrorCode MoveRelative(Point targetDistance)
  ErrorCode MoveRelative(Double mainDistance, Double subDistance)
  ErrorCode MoveAbsoluteAngle(Double mainTargetPosition, Double subAngle)
  ErrorCode MoveRelativeAngle(Double mainDistance, Double subAngle)
  ErrorCode Stop()
  Point GetTargetPosition()
  Point GetActualPosition()
  Boolean IsMoving()
  ErrorCode SetSpeed(Double speed)
  ErrorCode SetAccelRate(Double rate)
  ErrorCode SetDecelRate(Double rate)
  ErrorCode GetErrorCode()
  Status GetStatus()

Tipos anidados/enums:
  SurugaSeiki.Motion.Axis2D+Point

================================================================================================
SurugaSeiki.Motion.Axis2D+Point
================================================================================================

Campos:
  Double X
  Double Y
```

3.5 Clase Axis3D

```
================================================================================================
SurugaSeiki.Motion.Axis3D
================================================================================================

Constructores:
  Axis3D(UInt16 mainStageNumberX, UInt16 mainStageNumberY, UInt16 mainStageNumberZ)

Metodos:
  ErrorCode SetAxisNumber(UInt16 mainStageNumberX, UInt16 mainStageNumberY, UInt16 mainStageNumberZ)
  UInt16[] GetAxisNumber()
  ErrorCode MoveAbsolute(Point3D targetPosition)
  ErrorCode MoveAbsolute(Double targetPositionX, Double targetPositionY, Double targetPositionZ)
  ErrorCode MoveAbsolute(Point3D targetPosition, UInt16 dOutId, Int16 dOutOnDelayTime, Int16 dOutOffDelayTime)
  ErrorCode MoveAbsolute(Double targetPositionX, Double targetPositionY, Double targetPositionZ, UInt16 dOutId, Int16 dOutOnDelayTime, Int16
      dOutOffDelayTime)
  ErrorCode MoveRelative(Point3D targetDistance)
  ErrorCode MoveRelative(Double targetDistanceX, Double targetDistanceY, Double targetDistanceZ)
  ErrorCode MoveRelative(Point3D targetDistance, UInt16 dOutId, Int16 dOutOnDelayTime, Int16 dOutOffDelayTime)
  ErrorCode MoveRelative(Double targetDistanceX, Double targetDistanceY, Double targetDistanceZ, UInt16 dOutId, Int16 dOutOnDelayTime, Int16
      dOutOffDelayTime)
  ErrorCode Stop()
  Point3D GetTargetPosition()
  Point3D GetActualPosition()
  Boolean IsMoving()
  ErrorCode SetSpeed(Double speed)
  ErrorCode SetAccelRate(Double accelRate)
  ErrorCode SetDecelRate(Double decelRate)
  ErrorCode SetStageNumber(UInt16 mainStageNumberX, UInt16 mainStageNumberY, UInt16 mainStageNumberZ)
  ErrorCode SetSubStageNumber(UInt16 subStageNumberX, UInt16 subStageNumberY, UInt16 subStageNumberZ)
  ErrorCode SetRotationCenter(Double rotationOffsetX, Double rotationOffsetY, Double rotationOffsetZ)
  ErrorCode GetErrorCode()
  Status GetStatus()

Tipos anidados/enums:
  SurugaSeiki.Motion.Axis3D+Point3D
  SurugaSeiki.Motion.Axis3D+RotationCenter

================================================================================================
SurugaSeiki.Motion.Axis3D+Point3D
================================================================================================

Campos:
  Double X
  Double Y
  Double Z

================================================================================================
SurugaSeiki.Motion.Axis3D+RotationCenter
================================================================================================

Campos:
  UInt16 mainStageNumberX
  UInt16 mainStageNumberY
  UInt16 mainStageNumberZ
  UInt16 subStageNumberX
  UInt16 subStageNumberY
  UInt16 subStageNumberZ
  Double offsetX
  Double offsetY
  Double offsetZ
```

3.6 Clase AxisComponents

```
================================================================================================
SurugaSeiki.Motion.AxisComponents
================================================================================================

Constructores:
  AxisComponents(UInt16 axisNumberm)

Metodos:
  ErrorCode MoveAbsolute(Double position)
  ErrorCode MoveRelative(Double distance)
  ErrorCode ReturnOrigin()
  ErrorCode Stop()
  ErrorCode TurnOnServo()
  ErrorCode TurnOffServo()
  ErrorCode ResetError()
  Double GetTargetPosition()
  Double GetActualPosition()
  Boolean IsServoOn()
  Boolean IsServoAlarm()
  Boolean IsMoving()
  Boolean IsOriginSignalOn()
  Boolean IsCwLimitSignalOn()
  Boolean IsCcwLimitSignalOn()
  Boolean IsCwTorqueLimitOn()
  Boolean IsCcwTorqueLimitOn()
  Boolean IsOriginReturnSucceeded()
  ErrorCode SetAccelRate(Double rate)
```

```
  ErrorCode SetDecelRate(Double rate)
  ErrorCode SetSineMotion(Boolean sineMotion)
  ErrorCode SetFulcrumSpan(Double span)
  ErrorCode SetEncoderStepLength(Double length)
  ErrorCode SetMaxSpeed(Double speed)
  ErrorCode SetCWTorqueLimit(Double cWlimit)
  ErrorCode SetCCWTorqueLimit(Double cCWlimit)
  ErrorCode GetErrorCode()
  Status GetStatus()

Tipos anidados/enums:
  SurugaSeiki.Motion.AxisComponents+ErrorCode
  SurugaSeiki.Motion.AxisComponents+Status

================================================================================================
SurugaSeiki.Motion.AxisComponents+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode None
  static ErrorCode ServoAlarm
  static ErrorCode ServoOff
  static ErrorCode Moving
  static ErrorCode NotConnected
  static ErrorCode Limit
  static ErrorCode Origin
  static ErrorCode Parameter
  static ErrorCode Torque

================================================================================================
SurugaSeiki.Motion.AxisComponents+Status
================================================================================================

Campos:
  Int32 value__
  static Status ServoAlarm
  static Status ServoOff
  static Status Stopping
  static Status InPosition
  static Status Moving
  static Status NotConnected
  static Status CwLimit
  static Status CcwLimit
  static Status CwTorqueLimit
  static Status CcwTorqueLimit
```

3.7 Clase ErrorLog

```
================================================================================================
SurugaSeiki.Motion.ErrorLog
================================================================================================
```

3.8 Clase IO

```
================================================================================================
SurugaSeiki.Motion.IO
================================================================================================

Constructores:
  IO()

Metodos:
  Boolean GetPortState(DigitalIOType iOType, UInt16 id)
  Void SetPortState(UInt16 id, Boolean portState)
  Void SetPulseOutput(UInt16 id, UInt16 delayTime, UInt16 highWidth, UInt16 lowWidth, Int16 repetitionCount)
  Double GetAnalogValue(AnalogIOType iOType, UInt16 id)
  Void SetAnalogValue(UInt16 id, Double setValue)

Campos:
  static Int16 RepetitionCountForever

Tipos anidados/enums:
  SurugaSeiki.Motion.IO+DigitalIOType
  SurugaSeiki.Motion.IO+AnalogIOType

================================================================================================
SurugaSeiki.Motion.IO+AnalogIOType
================================================================================================

Campos:
  Int32 value__
  static AnalogIOType Input
  static AnalogIOType Output

================================================================================================
SurugaSeiki.Motion.IO+DOutControlParameterToAlignmentSystem
```

```
================================================================================================

================================================================================================
SurugaSeiki.Motion.IO+DigitalIOType
================================================================================================

Campos:
  Int32 value__
  static DigitalIOType Input
  static DigitalIOType Output
```

3.9 Clase PowerMeter

```
================================================================================================
SurugaSeiki.Motion.PowerMeter
================================================================================================

Constructores:
  PowerMeter()

Metodos:
  Double GetPower(UInt16 ch)
  AllowedRange GetRange(UInt16 ch)
  Double GetWavelength(UInt16 ch)
  ErrorCode SetRange(UInt16 ch, AllowedRange range)
  ErrorCode SetWaveLength(UInt16 ch, Double waveLength)
  ErrorCode PauseCommunication(UInt16 ch, Boolean isEnabled)

Tipos anidados/enums:
  SurugaSeiki.Motion.PowerMeter+ErrorCode
  SurugaSeiki.Motion.PowerMeter+AllowedRange

================================================================================================
SurugaSeiki.Motion.PowerMeter+AllowedRange
================================================================================================

Campos:
  Int16 value__
  static AllowedRange Minus60
  static AllowedRange Minus50
  static AllowedRange Minus40
  static AllowedRange Minus30
  static AllowedRange Minus20
  static AllowedRange Minus10
  static AllowedRange Zero
  static AllowedRange Plus10
  static AllowedRange Plus20
  static AllowedRange Auto
  static AllowedRange Invalid

================================================================================================
SurugaSeiki.Motion.PowerMeter+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode None
  static ErrorCode ChannelOutOfRange
  static ErrorCode Invalid
```

3.10 Clase System

```
================================================================================================
SurugaSeiki.Motion.System
================================================================================================

Propiedades:
  UInt16 MaxAxisStageNumber (get/set)
  UInt16 MaxAnalogInputChNumber (get/set)
  UInt16 MaxAlignmentNumber (get/set)
  UInt16 MaxAngleAdjustmentNumber (get/set)
  UInt16 MaxDInChNumber (get/set)
  UInt16 MaxDOutChNumber (get/set)
  UInt16 MaxAnalogOutputChNumber (get/set)
  UInt16 MaxPowerMeterChNumber (get/set)
  System Instance (get)
  Boolean Connected (get)
  String DllVersion (get)
  String SystemVersion (get)

Metodos:
  Boolean IsError()
  ErrorCode GetCurrentErrorCode()
  Boolean IsEmergencyAsserted()
  Void SetAddress(String addr)
  Void DisconnectAds()
```

```
Campos:
  static UInt16 MaxProfileNumber
  static UInt32 ProfileDataPacketMaxDataNumber

Tipos anidados/enums:
  SurugaSeiki.Motion.System+ErrorCode

================================================================================================
SurugaSeiki.Motion.System+AlignmentChParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AlignmentCommand
================================================================================================

Campos:
  Int32 value__
  static AlignmentCommand Null
  static AlignmentCommand StartSingle
  static AlignmentCommand StartFlat
  static AlignmentCommand StartFocus
  static AlignmentCommand StartTwoChRotation
  static AlignmentCommand StartMMFRotation
  static AlignmentCommand Stop
  static AlignmentCommand SetSingle
  static AlignmentCommand SetFlat
  static AlignmentCommand SetFocus
  static AlignmentCommand SetTwoChRotation
  static AlignmentCommand SetMMFRotation
  static AlignmentCommand StartLoopBack
  static AlignmentCommand SetLoopBack

================================================================================================
SurugaSeiki.Motion.System+AlignmentMainAxisParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AlignmentParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AlignmentPowerMeterInfo
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AlignmentStatusInfo
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AnalogOutputControlCommand
================================================================================================

Campos:
  Int32 value__
  static AnalogOutputControlCommand Null
  static AnalogOutputControlCommand SetAnalogOutput

================================================================================================
SurugaSeiki.Motion.System+AngleAdjustmentCommand
================================================================================================

Campos:
  Int32 value__
  static AngleAdjustmentCommand Null
  static AngleAdjustmentCommand SetParameter
  static AngleAdjustmentCommand Start
  static AngleAdjustmentCommand Stop

================================================================================================
SurugaSeiki.Motion.System+AngleAdjustmentParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AngleAdjustmentStatusInfo
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+Axis2DCommand
================================================================================================

Campos:
  Int32 value__
  static Axis2DCommand Null
  static Axis2DCommand MoveAbsolute
  static Axis2DCommand MoveRelative
  static Axis2DCommand MoveAbsoluteAngle
  static Axis2DCommand MoveRelativeAngle
  static Axis2DCommand Stop
  static Axis2DCommand SetCompositionSpeed
  static Axis2DCommand SetAccelRate
  static Axis2DCommand SetDecelRate
  static Axis2DCommand SetStageNumber

================================================================================================
SurugaSeiki.Motion.System+Axis2DParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AxisCommandStruct
```

```
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+AxisComponentCommand
================================================================================================

Campos:
  Int32 value__
  static AxisComponentCommand Null
  static AxisComponentCommand MoveAbsolute
  static AxisComponentCommand MoveRelative
  static AxisComponentCommand ReturnOrigin
  static AxisComponentCommand Stop
  static AxisComponentCommand TurnOnServo
  static AxisComponentCommand TurnOffServo
  static AxisComponentCommand ResetError
  static AxisComponentCommand SetMaxSpeed
  static AxisComponentCommand SetAccelRate
  static AxisComponentCommand SetDecelRate
  static AxisComponentCommand SetSineMotion
  static AxisComponentCommand SetFulcrumSpan
  static AxisComponentCommand SetEncoderStepLength
  static AxisComponentCommand SetCWTorquelimit
  static AxisComponentCommand SetCCWTorquelimit

================================================================================================
SurugaSeiki.Motion.System+AxisControlType
================================================================================================

Campos:
  Int32 value__
  static AxisControlType AxisComponents
  static AxisControlType Axis2D
  static AxisControlType Axis3D

================================================================================================
SurugaSeiki.Motion.System+AxisMethod
================================================================================================

Campos:
  Int32 value__
  static AxisMethod Null
  static AxisMethod MoveAbsolute
  static AxisMethod MoveRelative
  static AxisMethod MoveAbsoluteAngle
  static AxisMethod MoveRelativeAngle
  static AxisMethod Stop
  static AxisMethod SetCompositionSpeed
  static AxisMethod SetAccelRate
  static AxisMethod SetDecelRate
  static AxisMethod SetStageNumber
  static AxisMethod SetSubStageNumber
  static AxisMethod SetRotationCenter
  static AxisMethod SetFixedAxisOffset

================================================================================================
SurugaSeiki.Motion.System+AxisStatus
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+DOutControlCommand
================================================================================================

Campos:
  Int32 value__
  static DOutControlCommand Null
  static DOutControlCommand SetDout
  static DOutControlCommand SetPulseOutput

================================================================================================
SurugaSeiki.Motion.System+DeviceControlCommand
================================================================================================

Campos:
  Int32 value__
  static DeviceControlCommand Null
  static DeviceControlCommand SetWaveLength

================================================================================================
SurugaSeiki.Motion.System+DeviceStatusMap
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+ErrorCode
================================================================================================

Campos:
  Int32 value__
  static ErrorCode NoError
  static ErrorCode ConnectionLost
  static ErrorCode VersionError
  static ErrorCode MaxNumberOfErrorCode

================================================================================================
SurugaSeiki.Motion.System+Point2d
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+PowerMeterControlCommand
```

```
================================================================================================

Campos:
  Int32 value__
  static PowerMeterControlCommand None
  static PowerMeterControlCommand SetRange
  static PowerMeterControlCommand SetWaveLength
  static PowerMeterControlCommand SetCommunicationPaused

================================================================================================
SurugaSeiki.Motion.System+ProfileCommand
================================================================================================

Campos:
  Int32 value__
  static ProfileCommand Null
  static ProfileCommand SetParameter
  static ProfileCommand Start
  static ProfileCommand Stop

================================================================================================
SurugaSeiki.Motion.System+ProfileParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+RotationCenterParam
================================================================================================

================================================================================================
SurugaSeiki.Motion.System+SystemInfo
================================================================================================
```