



Google Lens



Chinese



English

Chapter 1 Overview

This manual is for users to install, debug, maintain, and use.

1. Unpacking and inspection

Remove the inverter from the packaging box and check the following: Is the product's exterior damaged or deformed? Are any components damaged or missing? Observe the rated values on the nameplate on the side of the chassis and verify that they match your order requirements. Check that all items listed in the packing box are complete. If there are any questions or the product is damaged, please contact the supplier immediately.

2. Please read carefully before use and store properly.

3. Use environment

Power supply: Single input AC220V±40%

Temperature: -10°C to 50°C

Humidity: 0%-65%

4. Precautions

The power must be turned off when wiring.

Make sure you do not connect the AC power supply to the motor output terminal.

5. There is no condensation, dust, or corrosive liquids/gases on site.

6. The installation location is sturdy and vibration-free.

7. Due to its small size, please handle the wire ends properly.

8. If the ambient temperature is high, please allow sufficient space for heat dissipation.

-01-



Translated text

T Select all

Listen

Share





Google Lens




Chinese



English

Chapter 2 Installation and Wiring

nay

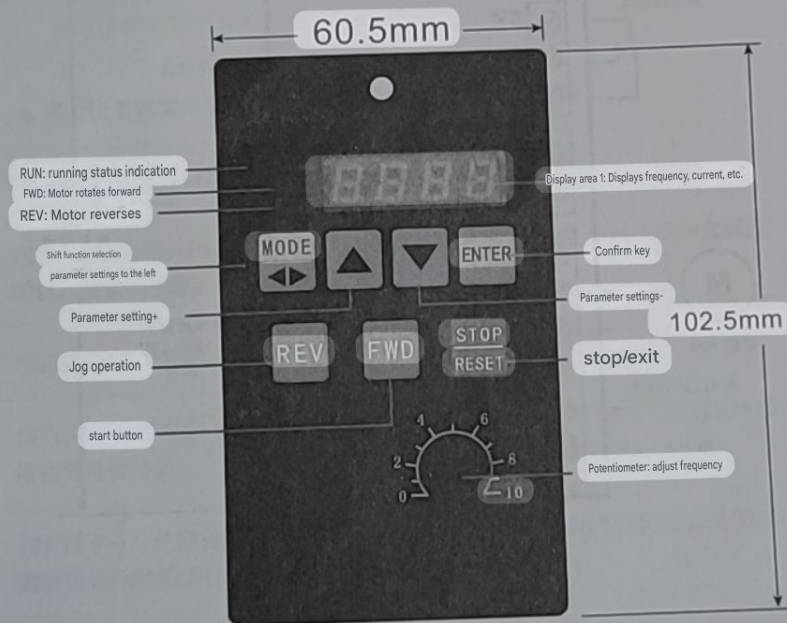

文A

Translated text

T Select all

Listen

Share





Google Lens




Chinese



English

Opening dimensions: 52.5mm * 80mm * 130mm

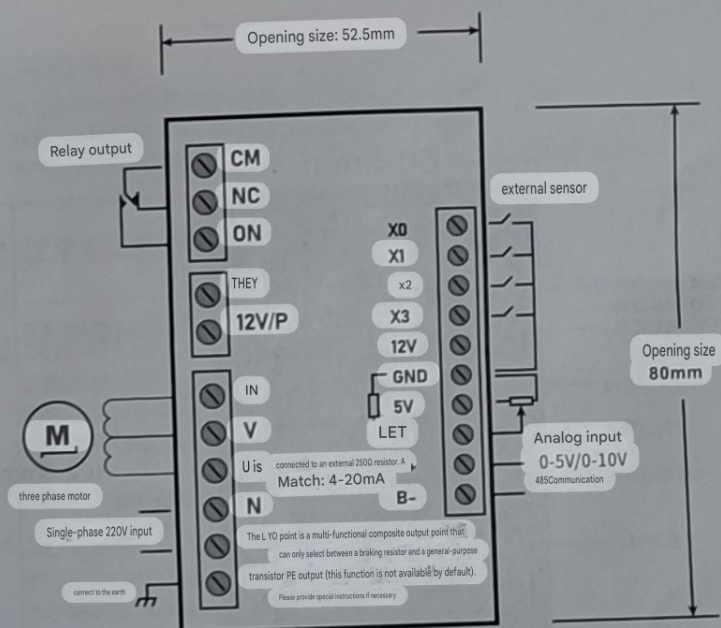

文A

Translated text

T Select all

Listen

Share





Google Lens



Chinese



English

Chapter 3 Button Instructions

The following XXX represents any data

(MODE key): This key can be used to view the inverter's set frequency (Fxxx) and operating frequency (Hxxx).

Operating current (Axxx), motor direction (FWD/REV), input voltage (Uxxx), inverter temperature (Txxx), input point status (Lxxx), and PID parameter display (X.X-X.X) represent the setpoint/feedback value.

(▲ key): Adds data when setting data or adds frequency when the frequency is controlled by the panel.

(▼ button): Decrease data when setting data or decrease frequency when the frequency is controlled by the panel.

(ENTER key): Press this key to enter parameter mode when entering Pxxx parameter settings. Press this key again to save the settings after modification.

(Jog button): Jog operation function. (Run button): Inverter panel operation start button.

(STOP/RESET key): Press this key to stop in operation mode, and press this key to clear the fault alarm function in fault display mode.

(ENTER+): This key is a combination key. In panel lock mode, you can press this key to unlock the function. After enabling the panel lock function, you can press this key to enter the panel lock function.

Panel setup instructions:

When the panel displays Pxxx, you can use the up and down arrow buttons to adjust to the specified parameter number, and then press ENTER to enter the data mode for this menu item. This data can be modified to a specified size according to the table below. Press ENTER to save the changes. If the panel does not display Pxxx mode, you can keep pressing the MODE button until Pxxx is displayed.

-04-



Translated text

T Select all

Listen

Share





Google Lens



Chinese



English

Chapter 4 Parameter Description

Function/Parameter Overview

Classification	Number	Function description	Setting range	Factory value
Basic parameters	P00	Main frequency input source setting	00: The main frequency input is controlled by a digital operator.	0
			01: Keyboard potentiometer input; output 0Hz below the minimum P35 setting.	
			02: Keyboard potentiometer input; if the value is lower than the set value on page 35, the output will be the value on page 45.	
			03: External analog input, output 0Hz if below the minimum P35 setpoint.	
			04: External analog input; if the output value is lower than the minimum P35 setting, the output value will be P45.	
			Communication is given at 05:485	
			06: PID control mode (PID input can be an external analog input)	
			07: Encoder Input (X2, X3 to encoder)	
	P01	Operation signal source setting	01: Operation commands are controlled by external terminals.	0
			00: Operation commands are controlled by a digital operator.	
			02: 485 Communication Control	
	P02	Motor stop mode setting	00: Stop by deceleration braking.	0
			01: Stop in free-running mode	
			02: External braking to stop (brake power required)	
	P03	Motor rating (maximum frequency) selection	1.00~400.00Hz	50

-05-



Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification	serial number	Function description	Setting range	Factory value
Basic parameters	P04	Maximum output voltage selection	230V:0.1~255.0V 460V:0.1~510.0V	220 380
	P05	Inter-mediate frequency selection	0.10~400.0Hz	1.5
	P06	Intermediate voltage selection	230V:0.1~255.0V 460V:0.1~510.0V	20 40
	P07	Minimum output frequency selection	0.10~20.0Hz	1.5
	P08	Minimum output voltage selection	230V:0.1~255.0V 460V:0.1~510.0V	10 20
	P09	First acceleration time selection	0.01~600.0s	10
	P10	First deceleration time selection	0.01~600.0s	10
	P11	Second acceleration time selection	0.01~600.0s	10
	P12	Second deceleration time selection	0.01~600.0s	10
	P13	First frequency setting	0.00~400.0Hz	0
	P14	Second stage correction rate setting	0.00~400.0Hz	0
	P15	Third stage knot rate setting	0.00~400.0Hz	0
	P16	The fourth frequency setting	0.00~400.0Hz	0
	P17	The fifth frequency setting	0.00~400.0Hz	0
	P18	The sixth frequency setting	0.00~400.0Hz	0
	P19	The seventh paragraph knot rate setting	0.00~400.0Hz	0
	P20	Disable reverse function setting	00: Reversible 01: No reversal	0
	P21	Carrier frequency setting	01~15; fc=1kHz~15kHz	15
	P22	DC braking current level setting	00~80%	0

-06-



Translated text

Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

	P23	DC braking time setting during startup	0.0~5.0s	0
	P24	DC braking time setting when stopping	0.0~25.0s	0
	P25	DC braking start frequency at stop	0.00~15.00Hz	0
	P26	Output frequency upper limit setting	0.10~400.0Hz	400
	P27	Output frequency lower limit setting	0.00~400.0Hz	0
Classification	serial number	Function description	Setting range	Factory value
Basic parameters	P28	Multi-function input selection 1 (X0)	0: X0: Forward rotation/stop; X1: Reverse rotation/stop	0
		Multi-function input selection 2 (X1)	1: X0: Run/Stop; X1: Reverse/Stop	
			2: X0: Forward/Stop; X1: Reverse/Stop	
	P29	Multi-function input selection 2 (X2)	X2: Jog forward; X3: Jog reverse	4
			0: no function	
			1: Stop the machine according to the deceleration time	
			2: Free parking	
			3: RESET instruction	
	P30	Multi-function input selection 3 (X3)	4: Multi-speed instruction 1	5
	P31	Multi-function input selection 4 (X4)	5: Multi-level speed command 2	6
	P32	Multi-function input selection 5 (X5)	6: Multi-level speed command 3	0
	P33	Arbitrary arrival frequency setting	0.00~400.0Hz	0

-07-



Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

P34	compensated gain	00-10	0
P35	Small land in AVI area	0.0v-P36	1
P36	AV road given	P35-10.0V	50
After P37 malfunction, automatically reset/startup count settings.		00-10	00
P38	After an error occurs, automatically reset/startup the time setting.	0.0-20s	0
P39	Analog output gain setting	00-200%	100
P40	Power start operation lock	(00: Operable; 01: Not Operable)	1
P41	Multi-function output RELAY contact	00: In operation indicator	3
		01: Set accuracy attainment indicator	
		02: Arrival indication at any frequency	
		03: Fault indication	
		04: Timer 1 Output	
		05: Timer 2 Output	
		06: Count 1 Output	
		07: Count 2 Output	
P42	Parameter lock/reset settings	100 All parameter values are set to read/write mode	0
		(01: All parameters are set to read-only mode)	
P43	Set frequency	0.00-400.00Hz	50
P44	DC braking frequency at startup	0.00-15.00Hz	0.5

-08-



Translated text

Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification	serial number	Function description	Setting range	Factory value
Common parameters	P45	Analog low-end frequency	0.00~400.00Hz	0
	P46	Trouble clearing	0	0
	P47	Fault record 1	*	*
	P48	Fault record 2	*	*
	P49	Fault record 3	*	*
	P50	Fault record 4	*	*
	P51	Latest fault record items	47~50	47
	P52	Motor rated current	0-65000	15
	P53	Motor no-load current	0-65000	10
	P54	Electrical slip compensation coefficient	0-1000	0
Common parameters	P55	Motor overload protection method	0: Thermal equivalent protection method 1: Isochronous protection method	0
	P56	Motor overload protection level	0~300%	150%
	P57	Motor overload protection time	0~600.0S	60.0S
	P58	Overvoltage stall voltage	0~999.9V	370.0V
	P59	Stall prevention current level during acceleration	0~300%	150%
	P60	Stall prevention current level during constant speed	0~300%	150%
	P61	Stall prevention current level during deceleration	0~300%	150%
	P62	Constant speed overcurrent deceleration time	0~600.0S	0.0S

-09-



Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification	serial number	Function description	Setting range	Factory value
	P63	Automatic mode selection	0: Accelerate startup from higher startup frequency 1: Frequency tracking starts	0
	P64	Fault restart startup method selection	0: Fault restart accelerates startup from the boot frequency. 1: Fault restart via frequency tracking startup	0
	P65	Adjusting the stop value of the plus and minus keys frequency	0~400.0Hz	0.10Hz
	P66	DAC output selection	0: Set frequency 1: Output frequency 2: Output current 3: Bus voltage 4: Inverter temperature 8: Restore factory settings	0
	P67	Restore parameters to factory values	Other values: invalid	
	P68	Frequency tracking current level	0~300%	150%
	P69	frequency tracking time	0~900.0S	3.0S
	P70	Frequency tracking voltage rise time		
	P71	Jog frequency	0~400.0Hz	0Hz
	P72	Multi-stage acceleration/deceleration time selection	0~255 weighted in binary Btl-bt7 correspond to P13-P19 respectively. 0: Acceleration/deceleration time 1 1: Acceleration/deceleration time 2	0
	P73	Inverter rated voltage	0~550.0V	2200
	P74	Inverter rated current	0~6500.0A	20

- 10 -

Translated text

Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification	serial number	Function description	Setting range	Factory value
Factory parameters	P75	Inverter overload protection level	0~300%	150%
	P76	Inverter overload protection time	0~600.0S	60.0S
	P77	Overvoltage protection voltage	0~999.9V	400.0V
	P78	Undervoltage protection voltage	0~999.9V	200.0V
	P79	Current detection coefficient	0~65535	1000
	P80 Voltage	Detection Coefficient	0~65535	2750
	P81	Output AC voltage coefficient	0~65535	1000
	P82	10 input filter coefficients	0~65535	50
	P83	fan start temperature	0~80	50
	P84	Motor type:	0: Three-phase output 1: Single-phase 2-wire output, capacitor not removed (UV connects to motor, W is not connected). 2: Remove capacitor from 2 single-phase 3-wire output terminals (U is the common terminal, V is the primary terminal, and W is the secondary terminal). 3: Single-phase 3-wire output, 2 capacitors removed (U is the common terminal, V is the primary terminal, W is the secondary terminal).	0
	p85	Inverter type	0: General-purpose frequency converter 1: Constant pressure water supply dedicated frequency converter	0
	P88	Software version number	.	
	P92	control mode	0: VF control 1: Voltage vector 2: Current-inductive vector	0



Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification Number	Function description	Setting range	Factory value
P93	Vf曲线	0: Straight line VF curve 1: 1.2 type VF curve	0
P94	Bus voltage filter time	10~1000MS	0.020S
P95	Output current sampling filter time	10~10000MS	1.000S
P96	Maximum number of encoder pulses per second	0~65535	10000
P97	Encoder sampling time	1~9999	0.010S
P98	Panel shows locked items	0-710 indicates no locking function; ENTER DOWN enables the locking function.	0
P99	Overcurrent protection detection sensitivity	0-9 (0 bit disables overcurrent protection)	2
P100	485 correspondence address	1-255	8
P101	(Modbus RTU 8-bit data. No parity, 1 stop bit) Communication format Address 40000 represents P00	0=1200, 1=2400, 2=4800, 3=9600, 4=19200, 5=38400 6=57600, 7=115200 Example of reading P00 (station number 109C40 0001 02 0001CRCL CRCH) Example of writing P00=1 (station number 109C40 0001 02 0001CRCL CRCH) A baud rate change requires restarting the inverter to take effect.	3
P102	485 frequency fixed value	0-400.00	50
P103	485 run settings	Each one represents a different function Bit0: 0 = Stop, 1 = Run Bit 1: 0 = Forward rotation, 1 = Reverse rotation Bit2: 0 = Jog Stop, 10 Force Jog Run Bit 3: 0 = Decelerate and stop, 1 = Free stop, 2 = Brake stop.	0

-12-

Translated text

Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification	serial number	Function description	Setting range	Factory value
	P106	PID configuration	Units digit: 0 = single item, 1 = two items Tens digit: 0 = negative effect, 1 = positive effect Hundreds digit: 0 = No alarm for PID fault 1. Decelerate and stop; 2. Park freely.	000
	P107	PID output limit	0-100	100%
	P108	PID given signal selection	0. Keyboard key settings 1. Keyboard potentiometer setting 2. A11 External Analog Quantity Given 3. A12 External Analog Quantity Given	0
	P109	PID feedback signal selection	0. Keyboard key given 1. Keyboard potentiometer setting 2. A11 External Analog Quantity Given 3. A12 External Analog Quantity Given	2
	P110	PID integration time	0.001-9.999	0.250S
	P111	PID differential time	0.000-9.999	0.0S
	P112	PID proportional gain	0.000-9.999	100.0%
	P113	PID sampling period	0.001-9.999	0.010S
	P114	PID deviation limit	0.0-20.0	5.0%
	P115	PID fault detection time	0.0-9.9	5.0S
	P116	PID fault detection value	0.0-100.0	10.0%
	P117	PID display range	0.00-1.99	1.00
	P118	PID keyboard given value	0.0-9.9	0.25

Classification

Constant pressure water supply
parametersInput and output
function expansion

Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Classification Number	Function description	Setting range	Factory value
P122	Starting pressure deviation	0.0-9.9	10
P123	Start delay time	0.0-32.000	5.0S
P124	Shutdown frequency	0.0-400.0	5.00Hz
P125	shutdown delay time	0.0-32.000	30.0S
P128	Scheduled rotation interval	0-65535 (Set as irregular timer function)	0min
P129	Electromagnetic switch action delay	0.0-9.999	0.500S
P130	Switch judgment time	0-9999	5S
P136	Sleep detection time	0-65535	60.00S
P139	Y0 multi-function output settings	00: In operation indicator 01: Frequency setpoint reached indicator 02: Arrival indication at any frequency 03: Fault indication 04: Timer 1 Output 05: Timer 2 Output 06: Count 1 Output 07: Count 2 Output 08: Train output	08
P140	Timer setting value	0-9999	1.000S
P141	Timer 2 setting value	0-9999	1.000S
P142	Counter 1 setting value	0-9999	100
P143	Counter 2 setting value	0-9999	100

-14-



Translated text

Select all

Listen

Share



Are these results useful?

Yes

No





Google Lens



Chinese



English

Chapter 5 Fault Codes

Classification	Alarm type	Fault description	Fault annotation
	OC	Instantaneous overcurrent	Fault notes:
	FATHER	Accelerate overcurrent	Check whether the motor is normal
	OCD	Deceleration overcurrent	Adjust acceleration time appropriately
	OCN	Constant speed overcurrent	Adjust the deceleration time appropriately
	OR	overvoltage	Check if the machine is working properly and if the voltage is stable.
	LU	Undervoltage	Adjust acceleration and deceleration times appropriately, and check if the mains power is normal.
	OH	Inverter overheating	Check if the mains power is normal (180V-240V)
	IF	external fault	Check if the frequency converter is dissipating heat properly.
	ERS	Failure restart failed	Check if the external sensor input is normal.
	LP	Input phase loss	Restart the frequency converter
	Olympics1	Motor overload	Check whether the mains power is normal
	OL2	Frequency converter overload	Check if the motor is working properly and if the load is too heavy.
	OL3	Motor is temporarily overloaded	Check if the motor is working properly and if its power is matched with the inverter.
	OL4	Inverter temporary overload	Check if the load matches the motor
	485	Communication failure	Check if the motor power is matched with the inverter power.
	PID	PID failure	Check if the communication cable is working properly and if the communication with the host computer is normal.
	NO	No fault alarm	Check if the analog input is outputting and if the sensor is functioning properly.

-15-



Translated text

T Select all

Listen

Share



Are these results useful?

Yes

No

