
EC NB-IoT SDK IDE Introduce

EigenCOMM Wireless Microcontroller

Document description

This document briefly describes the EC NB-IoT IDE of mobile communication NB IOT chip, aiming to help customers quickly complete the import of EC NB-IoT SDK and the corresponding development and debugging

Contents

Contents.....	2
1. General Information	3
1.1 Document purpose	3
1.2 Document structure.....	3
2. IDE debugging.....	3
2.1 Install download pack.....	3
2.2 Empty project	3
2.3 Debugging and download	4
2.4 Basic debugging	7
3. Matters needing attention and common problems.....	9
3.1 SDK	9
3.2 IDE	9
4. Version.....	9

1. General Information

1.1 Document purpose

Briefly describe the basic debugging methods of SDK. Through this document, you can quickly understand the steps of debugging with EC NB-IoT SDK, In this document using ec616 as example.

1.2 Document structure

This paper mainly introduces how to debug and compile project of the SDK


2. IDE debugging

This section make an example using the EC NB-IoT SDK, and mainly introduces the methods for basic download and debugging using Keil uVision5 IDE.

2.1 Install download pack


First install Keil uVision5, and then found the latest pack file in directory PLAT/tools/keil-pack /Eigencomm.EC616.1.0.4.pack.

Double click the pack file to install it. Below picture is the first install view.

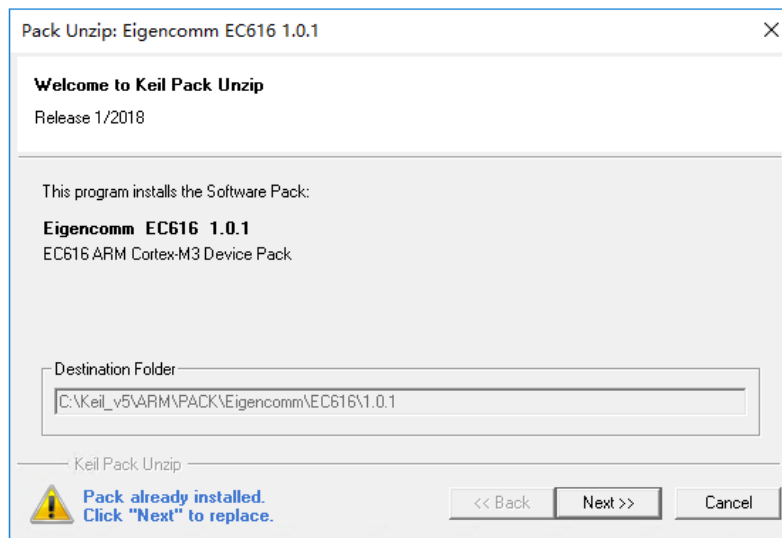


2.2 Empty project

In directory Tools/empty/, found the empty.uvprojx, double click to open it, shown as below:

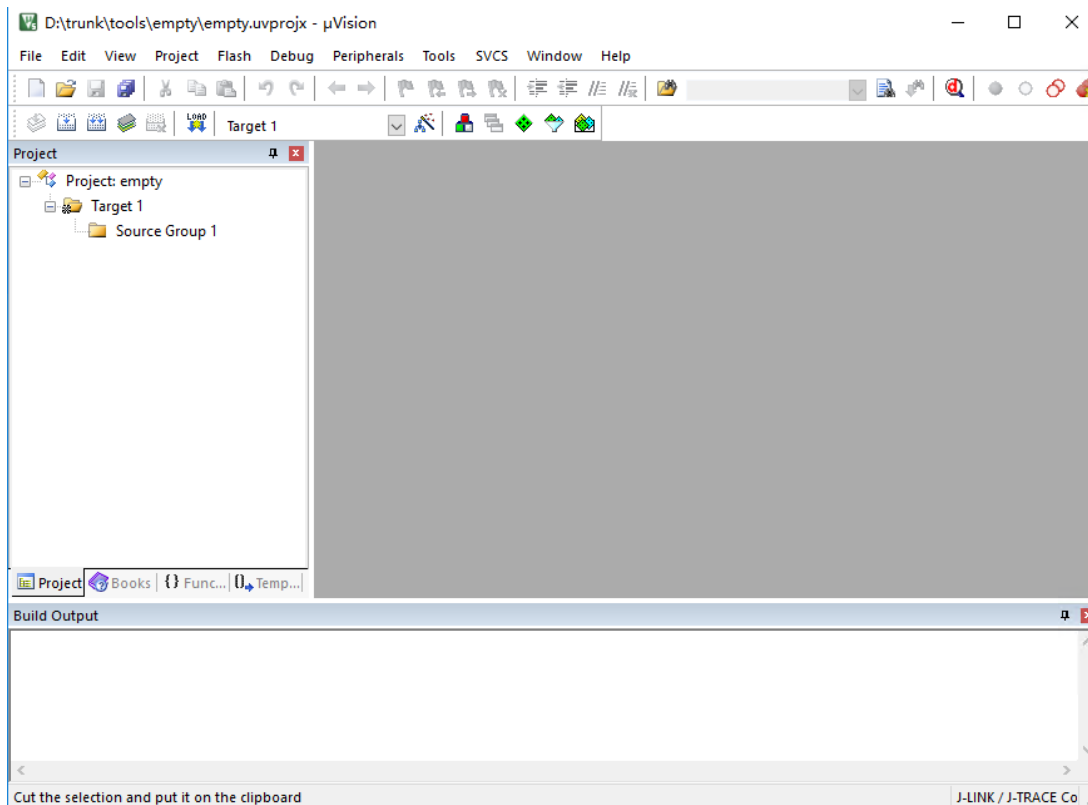


And then, click the config menu in high-light icon, select output tab, filled in high-light box with app-demo-flash.

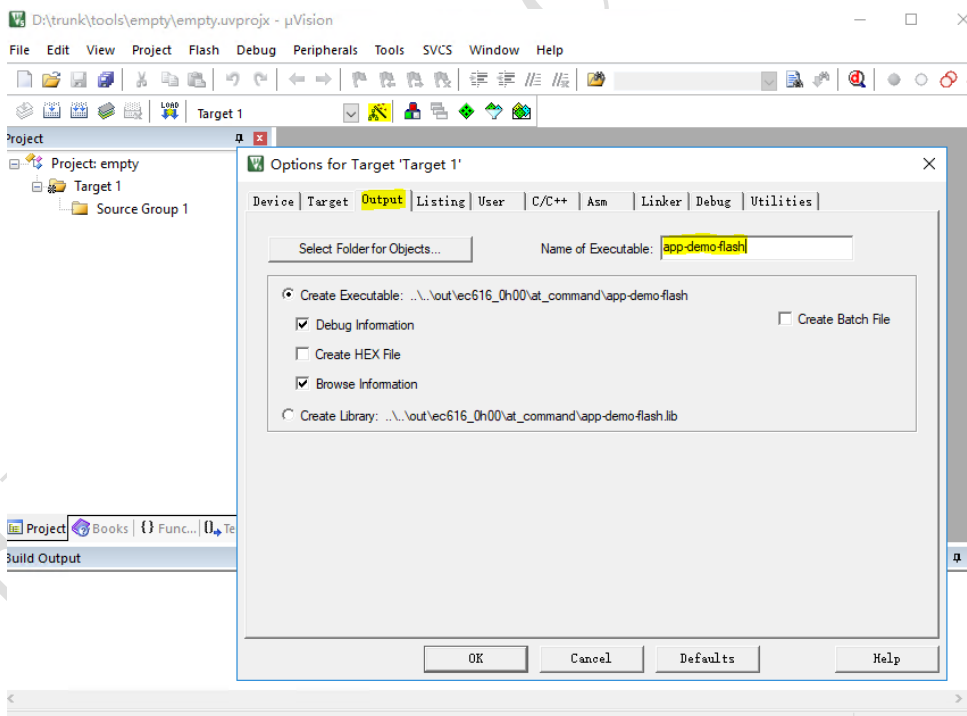


2.3 Debugging and download


When install over, if need to download need to do some config as below:

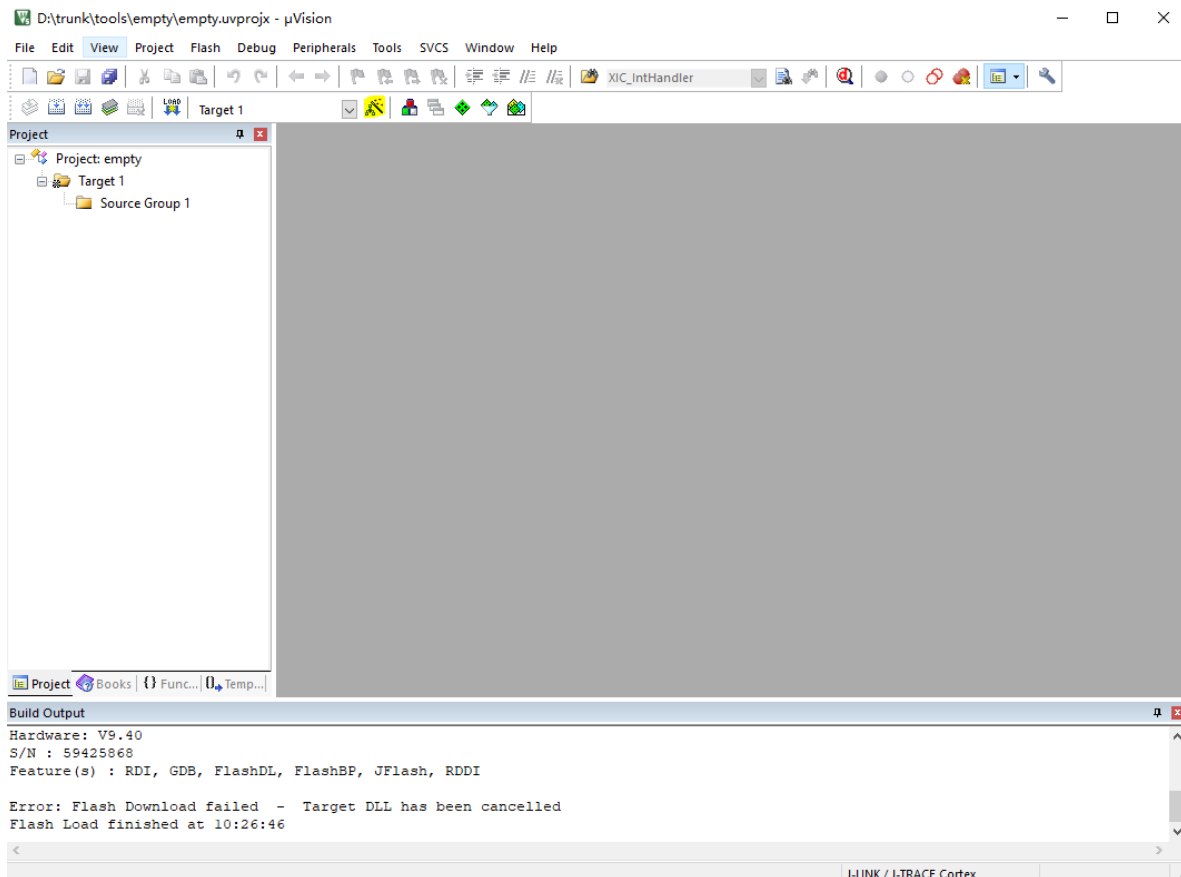


Open config view, in device tab select ec616, shown as below.

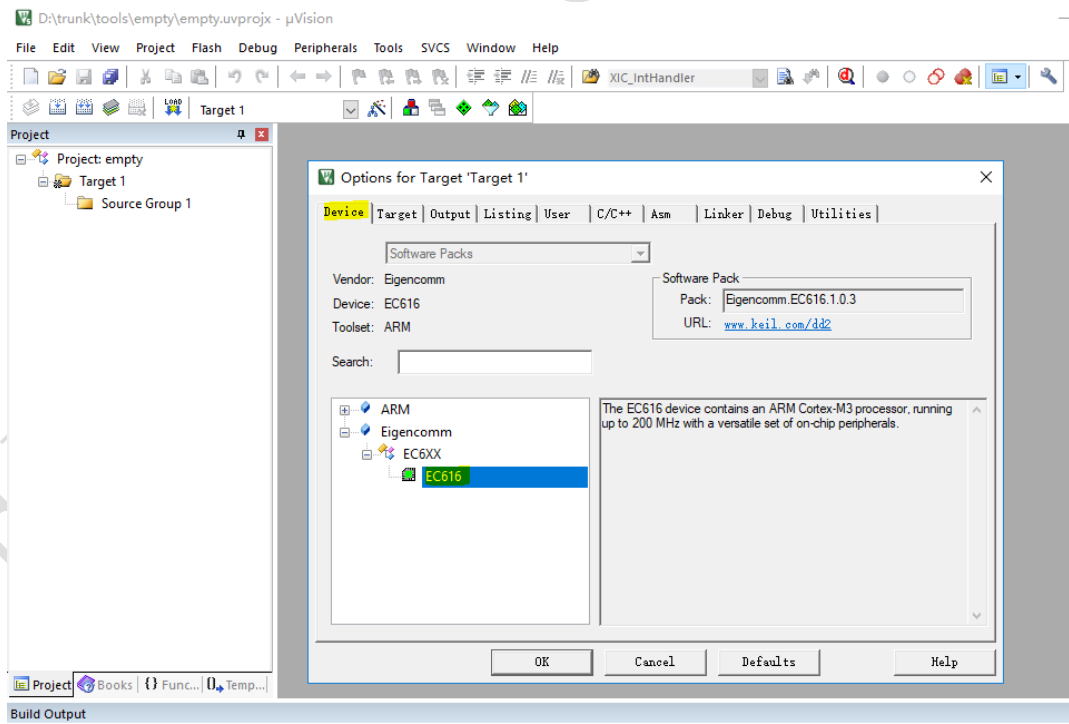


In utilities tab make some select as below picture, and click settings button to enter flash config view.

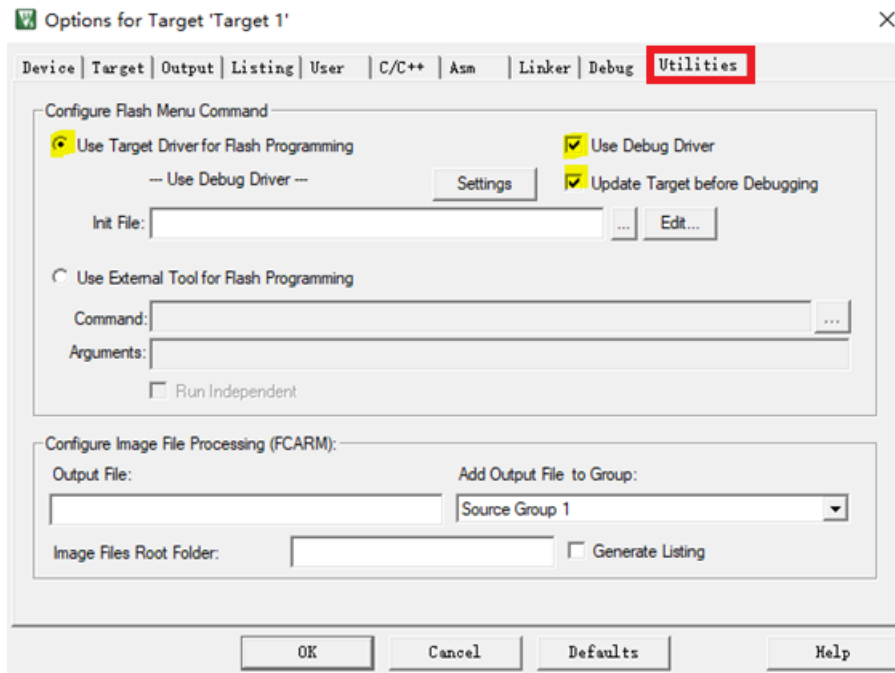

In flash config dialog, selected flash download tab, click add button and add EC616 flash, do some change as below picture high-light part.

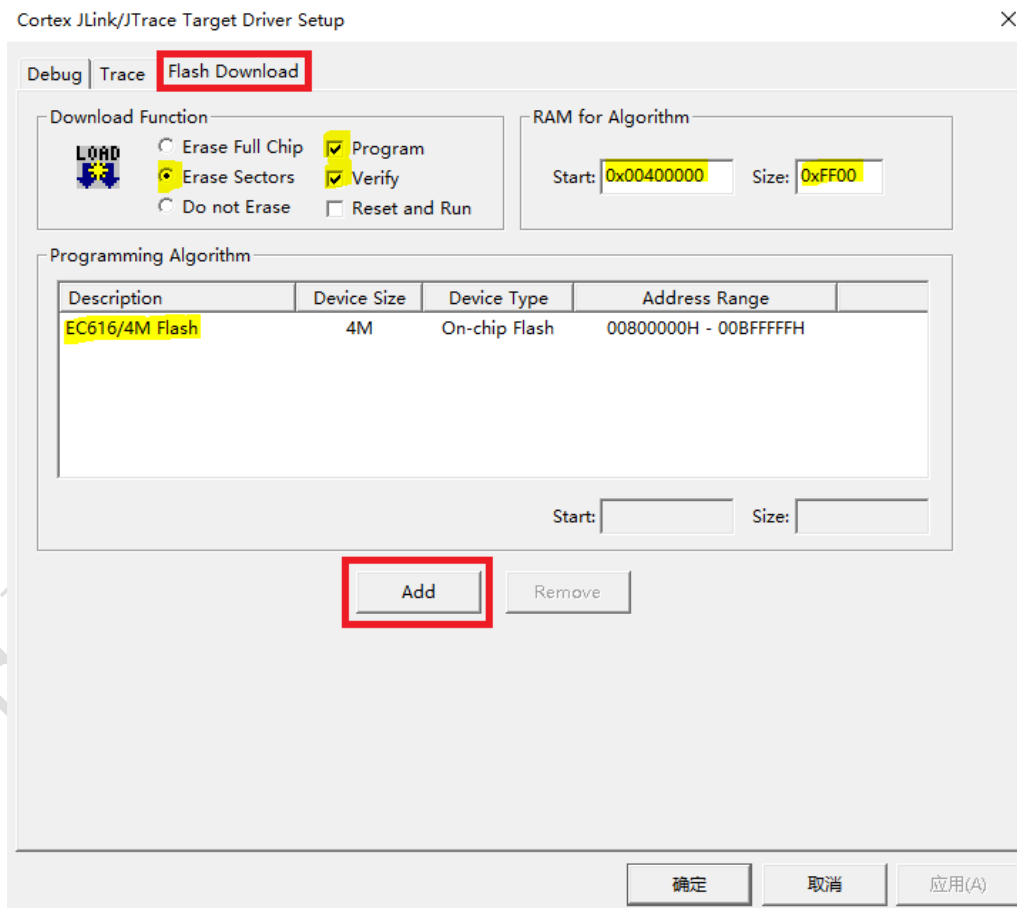


Finished flash config. Click the icon in red box to download axf to target board.

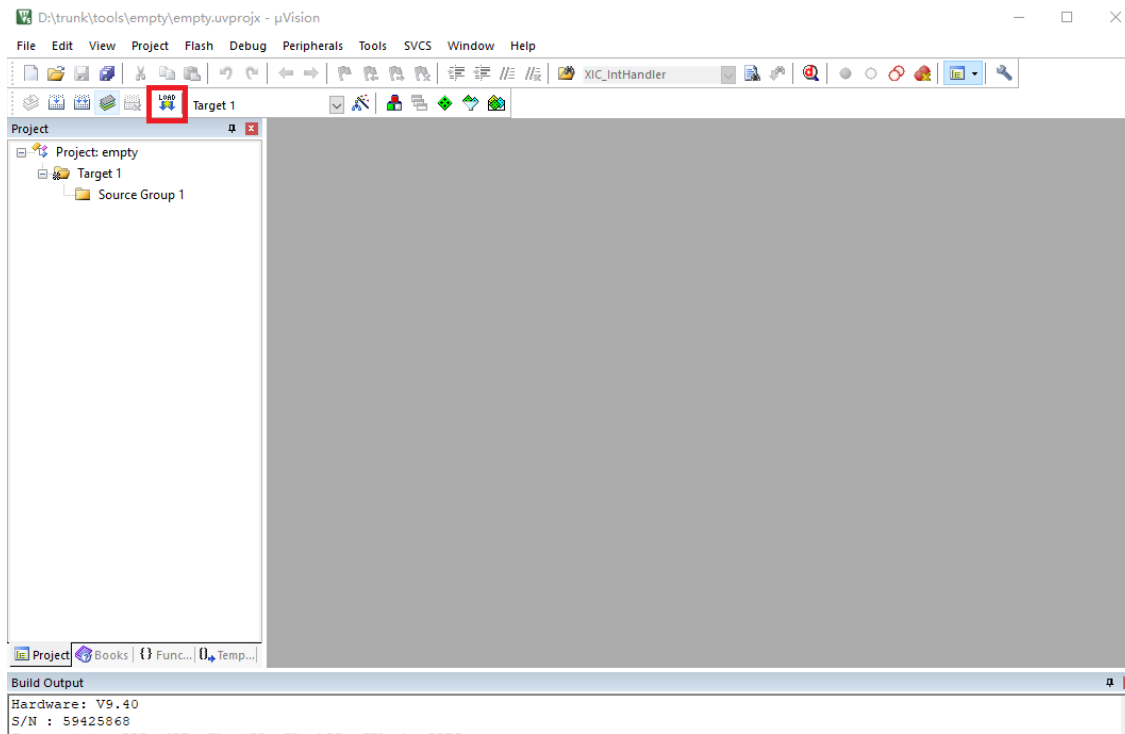


2.4 Basic debugging


In debug tab selected jlink and filled the correct ini file, shown as below

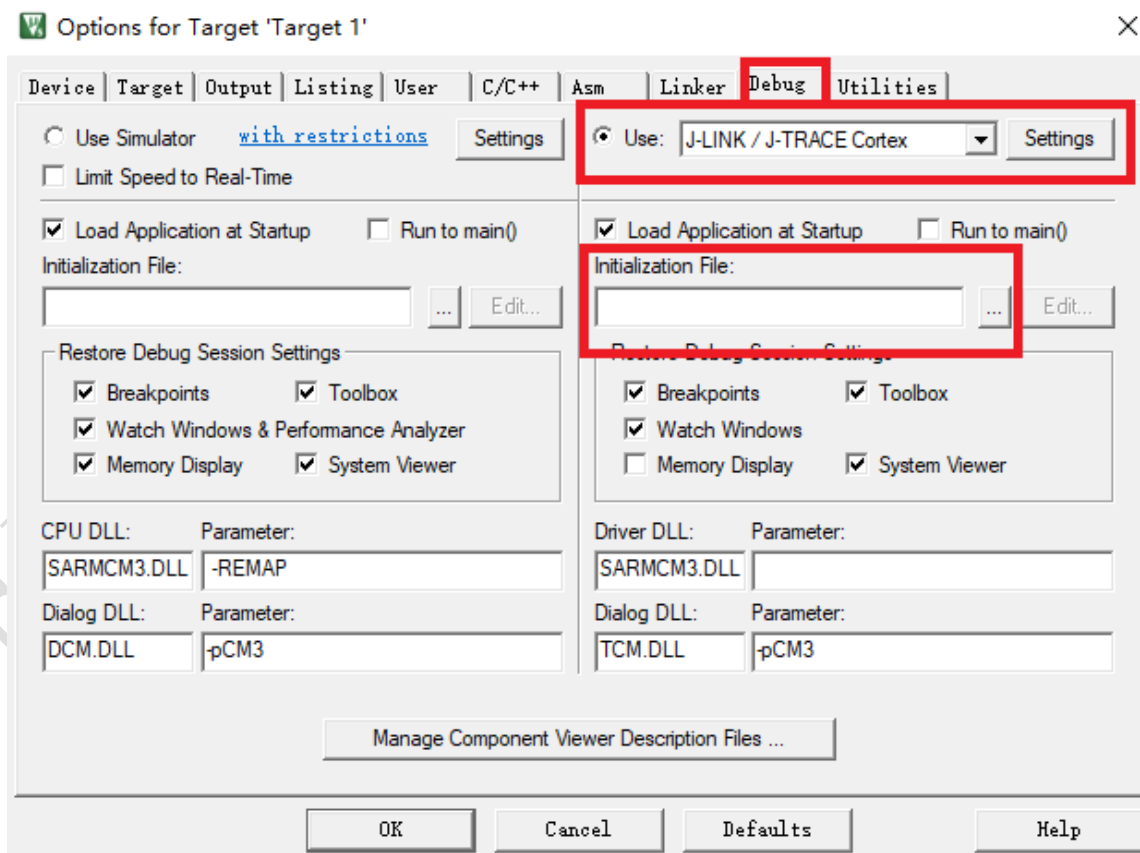


Config ini file, load the axf which you need, as below picture.

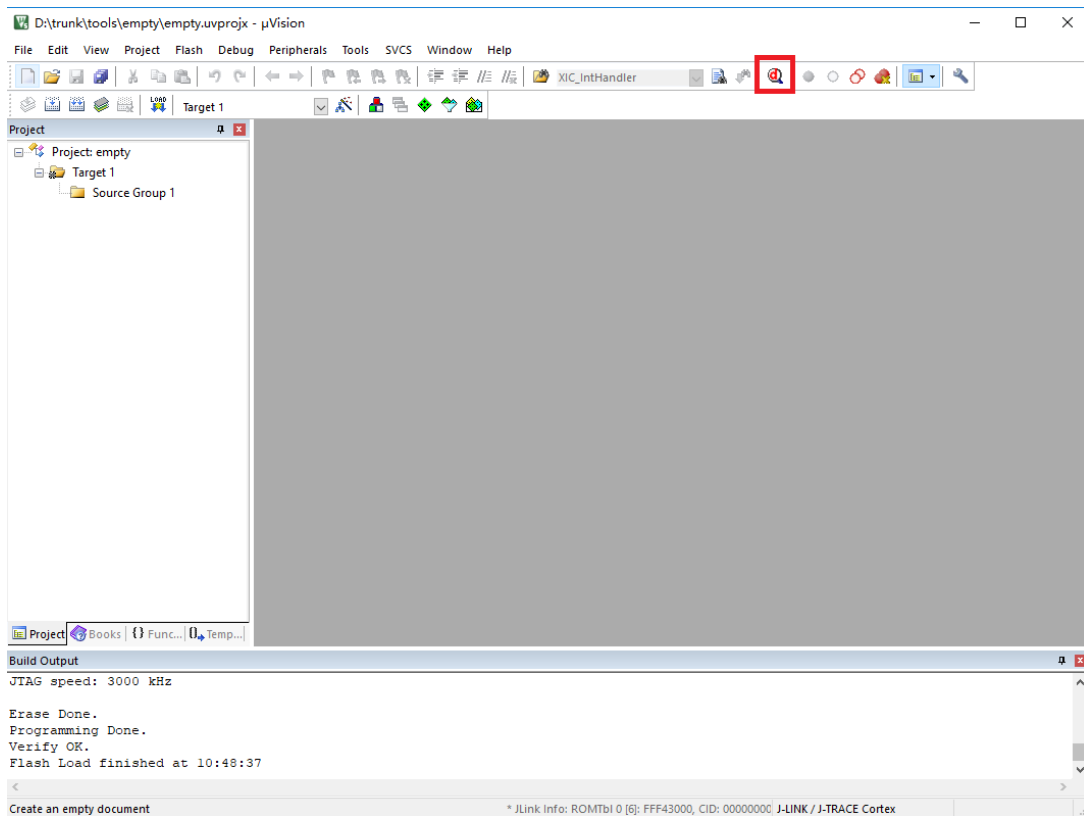

First click the blue icon to download axf to flash, and then click the right icon in red box to debug.

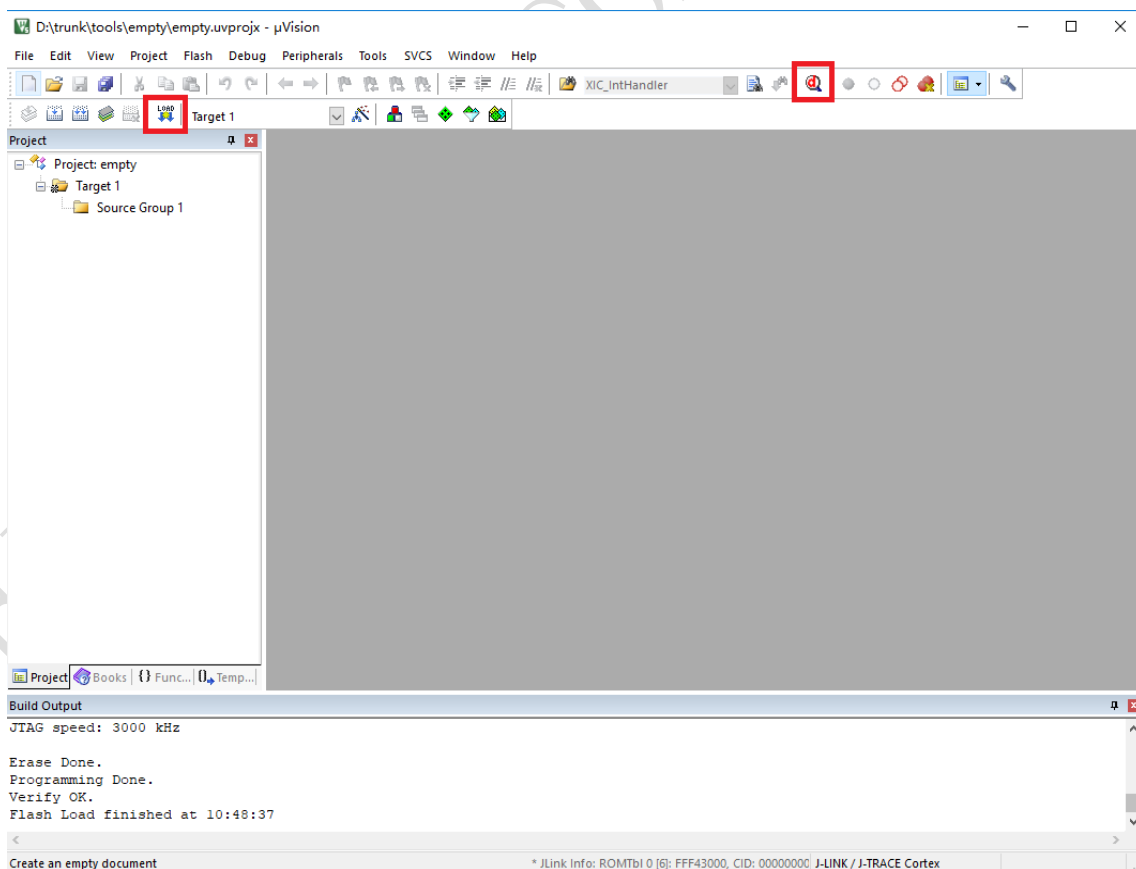

In below picture is enter debug mode

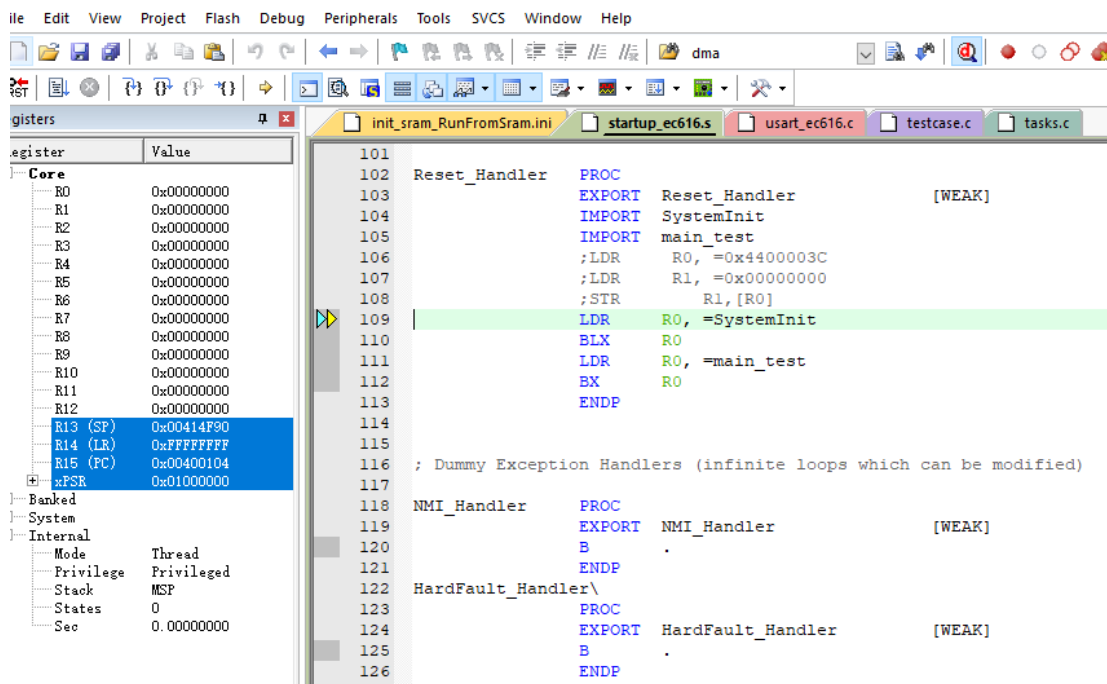

3. Matters needing attention and common problems

3.1 SDK

EC616 SDK IDE test in windows7/windows 10

3.2 IDE

Keil uVision5 is an integrated development environment developed by ARM for the Cortex M / R system MCU. This software is a fee-based software. You can contact ARM for details

JKINK is a JTAG emulator developed by SEGGER for ARM processor.

4. Version

Version	date	commet
Draft	2018-11-11	
A	2018-12-01	

5. About US

Shanghai EigenCOMM Technology Co.,Ltd is established in Feb 2017 in Zhangjiang Hi-Tech park, Shanghai China (www.eigencomm.com) . EigenCOMM focuses on cellular based IoT chipset and solution. With accumulation of experience over the years in algorithm, L1/L2/L3 protocol, SoC, RF , platform & application software as well as the communication architecture and system, team makes its way to IoT industry.

The ultra-low power NB-IoT chipset EC616(S) has already enter mass production stage. The 4G Cat.1 chipset EC618 is in engineering samples stage, 5G is also in the R&D stage.

Eigencomm Technoligies Ltd.

Address: Room 707, No 298 Xiangke Road, Shanghai, China

Zip Code: 201210

Phone:

E-mail:

Website: <http://www.eigencomm.com>

Support Window

E-Mail: support@eigencomm.com

EIGENCOMM CONFIDENTIAL