Illustrated Parts & Service Map

HP Pro 3000/3080 Business PC Microtower Chassis

© 2009 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. HP shall not be liable for technical or editorial errors or omissions contained herein. Intel, Core, Pentium, and Celeron are trademarks or registered trademarks of Intel Corporation in the United States and other countries. Microsoft, Windows, and Windows Vista are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Document Number 600836-001. 1st Edition November 2009.

Key Specifications

Processor Type	Intel® Core™ 2 Duo and Core™ 2 Quad, Intel Pentium®, Intel Celeron®
RAM Type	DDR3-SDRAM DIMMs, PC2-10600 (1333 MHz) non-ECC
Maximum RAM Supported	8 GB
Expansion Slots	• (2) PCI 2.3 • (1) PCIe-x16 • (1) PCIe-x1
Graphics Adapter	Intel Graphics Media Accelerator X4500HD with DX10 support
Chipset	Intel G45S Express
Drive Support	• (2) external 5.25-inch optical disk drives • (1) external 3.5-inch drive (for optional media reader or Pocket Media drive) • (2) internal 3.5-inch hard disk drives
I/O Interfaces	Front: (2) USB 2.0 ports, headphone output, microphone jack Rear: (6) USB 2.0 ports, serial port, parallel port, PS/2 mouse and keyboard ports, RJ-45 network interface, DVI-D and VGA video interfaces, microphone jack, audio in/out jacks
Operating Systems	• Windows 7 • Windows Vista • Windows XP Professional, Windows XP Home • SuSE Linux Enterprise Desktop 11 • FreeDOS • Red Flag Linux

Spare Parts

System Unit

1	Access panel	586372-001
2	Power supply, 300W, NPFC	463318-001
*	Power supply, 300W, 85% (APJ only)	575437-001
*	Power supply, 300W, PFC	508467-001
*	Power supply, 250W, PFC	508466-001
3	Chassis	not spared
4	Front bezel for use in HP Pro 3000	591599-001
*	Front bezel for use in HP Pro 3080	591606-001
*	5.25-inch bezel blank	536306-001
*	3.5-inch bezel blank	583094-001

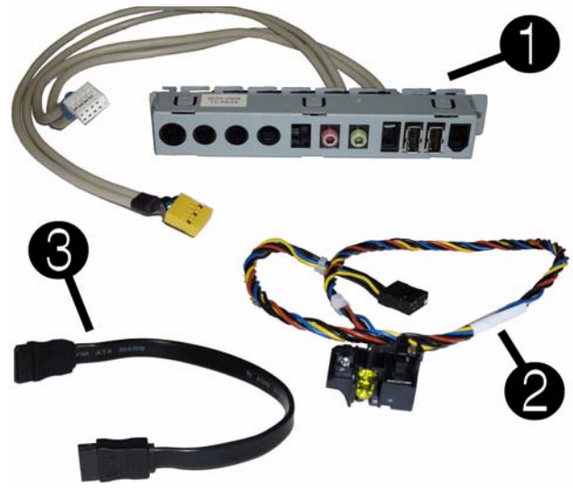

Cables

1	Front I/O assembly	508463-001
2	Power switch/LED assembly	592504-001
3	SATA cable, 8.66-inch (22-cm), 2 straight ends	591600-001
*	SATA cable, 17.5 inch, 2 straight ends	592503-001
*	SATA cable, 7-inch, 2 straight ends	592505-001
*	SATA power dongle, 4 inch	449283-001
*	DMS-59 to dual DVI cable	463024-001
*	RJ-11 modem cable	198220-005

**Not shown*

Keyboards (not illustrated)

PS/2, Basic	**537745-xxx**
USB, Standard	**537746-xxx**
USB SmartCard	**537747-xxx**
USB, Mini[e]	**535873-xxx**
USB, low cost	**537924-xxx**
Washable[f]	**577495-xxx**

Adriatic[a][c][d]	-BL1	Japanese[a]	-291
Arabic[b][c][d]	-171	LA Spanish[a]	-161
Belgian[d]	-181	Korean[a]	-KD1
BHCSY[b][d]	-B41	Norwegian[d]	-091
Czech[d]	-221	Portuguese[d]	-131
Danish[d]	-081	Romanian[b][d]	-271
Finnish[d]	-351	Russian[d]	-251
French[d]	-051	S. Chinese[a]	-AA1
French Arabic[d]	-DE1	Slovakian[d]	-231
French Canadian[a][e][f]	-121	Spanish[d]	-071
German[d]	-041	Swedish[d]	-101
Greek[d]	-151	Swiss[d]	-111
Hebrew[b][d]	-BB1	Taiwanese[a]	-AB1
Hong Kong[a][b][c]	-AC1	Thailand[a]	-281
Hungarian[d]	-211	Turkish[d]	-141
Iceland[a][d]	-DD1	U.K.[d]	-031
International English	-L31	United States[a][e][f]	-001
Italian[d]	-061		

[a] not for 537924-xxx
[b] not for 537924-xxx
[c] not for 537746-xxx
[d] not for 537745-xxx
[e] 535873-xxx only for -001, -121, -161
[f] 577495-xxx only for -001, -121

Mass Storage Devices (not illustrated)

Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive	581601-001
DVD±RW and CD-RW SuperMulti DL Combo Drive with LightScribe	581600-001
DVD-ROM drive	581599-001
500-GB SATA hard drive,	586720-001
320-GB hard drive	586969-001
250-GB SATA hard drive	586719-001
320-GB external USB hard drive	591387-001
160-GB SATA hard drive	586718-001

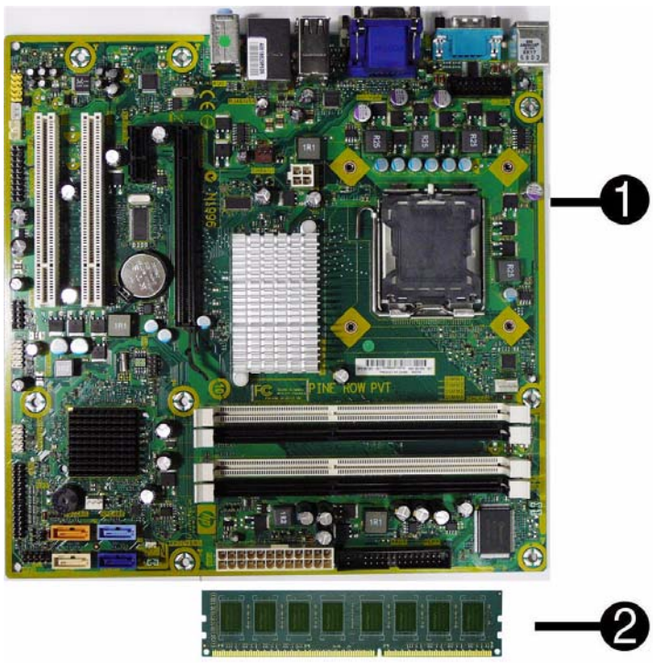

Miscellaneous Parts

1	Chassis fan	438741-001
2		1
3		1
*		1
*		1
*

Computer Setup

Basic system information regarding system information, setup, power management, hardware, and passwords is maintained in the Setup Utility held in the system ROM. The Setup Utility is accessed by pressing the F10 key when prompted (on screen) to do so during the boot sequence. If the screen prompt opportunity is missed, a restart will be necessary...

Computer Setup Menu

Heading	Option / Description	
Main	System Information	Lists the following main system specifications: • Product Name • SKU Number • Processor Type • Processor Speed • CPUID/PatchID • Cache Size • Memory Size • Integrated MAC • System BIOS • Chassis Serial Number • Asset Tag Number • UUID
	Set Time and Date	Allows you to set system time and date.
	SATA Port 1 SATA Port 2 SATA Port 3 SATA Port 4	Allows or displays the following for each SATA Port: • Port Configuration — Disable/enable SATA Port • Run HDD self-test for selected channel: SMART Status Check, HDD Short Self-Test, HDD Extended Self-Test • View vendor, size, and firmware
	SATA Emulation	Allows you to choose how the SATA controller and devices are accessed by the operating system. The following options are available: IDE, RAID, AHCI.
	Onboard FDC Controller	Disables/enables the diskette drive controller.
	Drive A	View only.
	Halt On	Allows you to set POST error behavior to: all errors, no errors, all but keyboard.
	POST Delay	Allows you to set POST delay to 0, 5, 10, 15, or 30 seconds
Advanced	Execute Disable Bit	Disables/enables hardware DEP function.
	Init Display First	Allows you to set primary display device to PCI slot, OnChip VGA, or PCIEx.
	MAX DVMT Allocation	Allows you to specify the DVMT/system memory allocated for video memory to:128MB, 256MB, Max.
	Onboard HD Audio	Allows you to disable/enable onboard HD audio.
	OnChip USB Controller	Disables/enables the universal host controller interface for USB (Universal Serial Bus).
	USB Legacy Support	Disable/enable (USB keyboard, mouse, and flash media).
	Onboard LAN	Disable/enable onboard LAN controller.
	Onboard LAN Boot ROM	Disable/enable the boot ROM of the onboard LAN chip.
	Onboard Serial Port 1	Allows you to select: Disabled, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, or 2E8/IRQ3.
	PCI Device SERR#	Disables/enables SERR#.
Boot	F9 Boot Menu	Disables/enables F9 Boot Menu.
	F10 Setup Prompt	Disable/enable F10 Setup prompt on the logo screen.
	F11 Recovery	Disables/enables F11 Recovery and provides the option of showing the F11 Recovery prompt message on the logo screen. Choose from the following: Disabled, Enabled no prompt, Enabled and prompt.
	F12 Boot from LAN Prompt	Disables/enables the F12 Boot from LAN prompt message on the logo screen.
	Hard Disk Boot Seq.	Allows you to specify the order of attached hard drive devices (USB HDD or USB flash media). The first attached drive in the order has priority and is recognized as drive C.
	Optical Drive Boot Seq.	Allows you to specify the order in which attached optical drives (including USB ODD) are checked for a bootable operating system image.
	Network Boot Seq.	Allows you to specify the order in which network devices (including UP NIC cards) are checked for a bootable operating system image.
	First, Second, Third, and Fourth Boot Device	Allows you to specify which devices will boot in which sequence or to disable any of the four: removable, CDROM, hard disk, or network.
	Set Supervisor Password	Allows you to establish a password to enter Computer Setup
	BIOS Write Protection	Disables/enables BIOS upgrading.
Power	After AC Power Loss	Allows you to select system power loss behavior: Off, On, Last State.
	Wake on PCI Device from S5	Disables/enables waking up from S5 by PCI device.
	RTC Resume Alarm	Disables/enables RTC (real-time clock) alarm.
PC Health	Chassis Opened Warning	Allows you to disable/enable the chassis intrusion function and clear the intrusion warning: Disabled, Enabled, Clear.
	System Fan Fail Check	Disables/enables detection of system fan during POST.
	Smart Fan Function	Disables/enables Smart Fan functionality. Enabling optimizes fan control for best acoustic behavior.
	Current CPU Temperature	View only
	Current System Temp	View only
	Current CPU Fan Speed	View only
	Current System Fan Speed	View only
Exit	Save and Exit Setup	Allows you to save current settings and exit Computer Setup.
	Discard Changes and Exit	Allows you to exit Computer Setup without saving changes.
	Load Optimized defaults	Allows you to reset Computer Setup to factory defaults.

POST Audible Codes

Beeps	Meaning	Recommended Action
1 short beep and 1 long beep followed by a three second pause	Bad memory or memory configuration error.	Check that the memory modules have been installed correctly and that proper modules are used.
2 short beeps and 1 long beep followed by a three second pause	No graphics card installed or graphics card initialization failed.	For systems with a graphics card: 1. Reseat the graphics card. Power on the system. 2. Replace the graphics card. 3. Replace the system board. For systems with integrated graphics, replace the system board.
3 short beeps and 1 long beep followed by a three second pause	CPU configuration error or invalid CPU detected before graphics card initialized.	1. Upgrade the BIOS to proper version. 2. Change the processor.
1 short beep followed by a one second pause	No optical drive found.	1. Check cable connections. 2. Run the Computer Setup utility and ensure the device port is enabled.
2 short beeps followed by a three second pause	No CD found.	1. Check the type of drive that you are using and use the correct media type. 2. Replace the CD with a new one.
3 short beeps followed by a three second pause	Flashing not ready (missing utility or BIOS image file, etc.)	Upgrade the BIOS to proper version.
4 short beeps followed by a three second pause	Flashing operation has failed (checksum error, corrupted image, etc.)	1. Verify the correct ROM. 2. Flash the ROM if needed. 3. If an expansion board was recently added, remove it to see if the problem remains. 4. Clear CMOS. 5. If the message disappears, there may be a problem with the expansion card. 6. Replace the system board.
5 short beeps followed by a three second pause	BIOS recovery was successful	No action required.

Password Security

Resetting the password jumper

1. Shut down the operating system properly, then turn off the computer and any external devices, and disconnect the power cord from the power outlet.
2. With the power cord disconnected, press the power button again to drain the system of any residual power.
3. Remove the access panel.
4. Locate the header and jumper labeled **PSWD**.
5. Remove the jumper.
6. Plug in the computer and turn on power.
7. When you see the HP logo screen, turn off the computer. This clears the current passwords.
8. Replace the jumper to its original position.
9. Replace the access panel.
10. reconnect external equipment.
11. Plug in the computer and turn on power. Allow the operating system to start.

Resetting the CMOS jumper

1. Turn off the computer and any external devices, and disconnect the power cord from the power outlet. The power must be disconnected from the system to clear CMOS.
2. Disconnect the keyboard, monitor, and any other external equipment connected to the computer.
3. Remove the access panel.
4. Locate the header and jumper labeled **CMOS**.
5. Remove the CMOS jumper from pins 1 and 2 and put the jumper on pins 2 and 3. This clears CMOS.
6. Put the jumper back on pins 1 and 2.
7. Replace the access panel.
8. Reconnect the external equipment.
9. Plug in the computer and turn on power.

NOTE: Use Computer Setup to reset any special system setups along with the date and time.