Panasonic

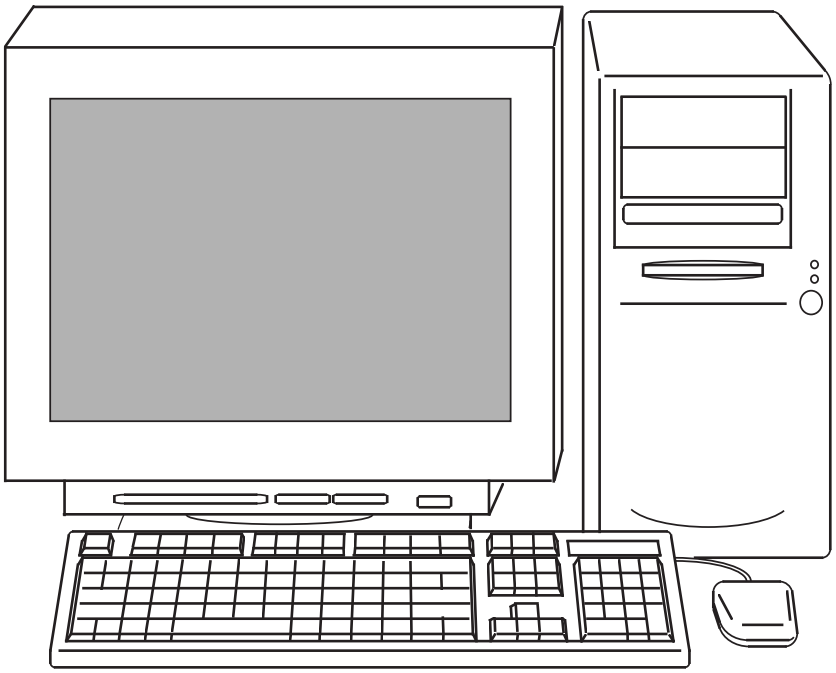
Operating Instructions

Traceability

MES for Electronics Assembly

PanaCIM-EE

Model No. **NM-EJS3B**



Thank you for purchasing the “Panasonic product.”
- Read the operating instructions carefully for proper and safe usage.
- Before placing the machine in service, be sure to read “Safety Precautions.”
- Store the operating instructions carefully.

N7201A443E12 (V08.08)
201801

Original Instructions

For using this system:
This system is designed with a purpose of visualization of work productivity, more efficiency and quality warranty in electronic component mounting process. Use this system solely for the purpose.

Do not use this system for other purposes.

Operating machines:
Any person who operates the machine should receive a special training.

Any operator who has not received the training is not allowed to operate.

For training, contact Panasonic Smart Factory Solutions Co., Ltd., Sales company or Sales agent.

⚠ Warning

Do not operate the machine without receiving special training



Risk of injury due to improper operation.

Prohibited

- About training, conduct in your company or contact us.

For machine training in Europe, you may contact Panasonic Industry Europe:

Panasonic Industry Europe GmbH FA Division
Robert-Koch-Strasse 100, 85521 Ottobrunn Germany
Phone number: 0049-(0)89-453541192

Software Terms of Use

1. **License Allowance** Upon required license fee paid by the Customer, Panasonic Smart Factory Solutions Co., Ltd. (hereinafter called the Licensor) grants the Customer a nonexclusive, nontransferable license (sub-license not included) to use the software (hereinafter called this software) for electronic component mounting device (hereinafter called mounter) only under this terms of Use. The Customer can use this software in as many number of production cells as license fee for which has been paid only for the purpose related to operation of a single mounter or a mounter that is a part of production cell.

2. **License Restrictions** Concerning mounter operation, copying this software and its related documents is prohibited for any other purpose than backup to keep using this software. Correction, alternation, adaption, translation or creation of derivatives of this software or its related documents or their copies without prior written consent from us. Reverse assemble or reverse compile or mechanical or electrical trace of all or a part of this software and its related documents is not allowed. Sale or lease or sublicense or distribution or transfer of this software and its related documents or their copies or/and all or a part of this software license to a third-party is not allowed.

3. **No Transfer/No Authorization** Concerning the algorithm, concept, design and idea expressed or integrated in this software and its related documents, the Customer does not acquire the property right or copy right or right to use copy right material or patent right or right to use patent or any rights related to this software except for the right to use granted at 1 License Allowance above, and the Customer is not allowed to remove any product identification label such as the copy right label or trademark from this software. Any copies of this software or its related documents should be labeled with the same copy right and product identification as this software.

4. **Confidentiality** This software and the data, documents, material and other information included in or related to this software are confidential information of the licensor. The Customer shall not disclose or distribute or provide the licensor's confidential information to any third-party without prior written consent from the licensor.

5. **Limited Warranties** The Licensor warrants the Customer that this software is free from defects for 90 days from the delivery date of this software (the date when the receipt of this software was signed by the Customer) under normal condition where this software can be used successfully. However, the Licensor's entire liability and sole and exclusive remedy for the Customer is limited to replacement of the media that had defects and was returned to us with the copy of the receipt within the warranty period. The Licensor shall not warranty or shall be liable for any of the following contents.
   (1) Achievements and result the Customer obtained by using this software
   (2) Any defects concerning the media where this software is recorded caused by the Customer's storage
   (3) Any defects caused by any media operations or environment that are not specified by the Licensor
   (4) Any defects caused by accident or abuse or neglect or handling mistake or unauthorized use or modification or alternation or force majeure or inappropriate install or maintenance
   (5) Media defects caused by modification or attempted medication of this software

   Express warranty provided in this article In lieu of any other warranties including but not limited to expressed or implied, and statutory warranties of non-infringement of third party rights or merchantability or fitness for a particular purpose.

6. **Limitation of Liability** The Licensor and its affiliates (including sales agents who are involved in sales of this software here and below) shall accept no liability whatsoever for the customer for any damages arising from use or inability to use or related to this software (special, indirect, incidental, consequential and exemplary damages (loss of including but not limited to profit, business, data, information, loss of use of this software or mounter or other related device, cost of substitute devices, facilities, services, clams from third party. This is the same even if the Licensor and/or its affiliates has known or been advice about the possibilities of such damages.

7. **License Period** This software license is valid without limitation unless otherwise provided by the Licensor or its affiliates. The Customer may at any time terminate this license by returning this software and its related documents and all of their copies to the Licensor at the Customer's cost. (A part or all of license fee paid is not refundable for any reason.) The Licensor and/or its affiliates reserve the right to terminate this software license without prior notice if the Customer breached this terms of use. The Customer shall discard or return to the Licensor this software and its related documents and all of their copies at the Customer's cost.

8. **Miscellaneous Provisions** These terms of use and other matters related to this license shall be governed by the laws of Japan regardless of conflict of laws. These terms of use are the sole and entire agreement between the Customer and the Licensor and its affiliates on this software license and supersede any promises, prior oral or written agreements or other communications. If any provision of these terms is found by a court of competent jurisdiction to be invalid or with no legal force, the remaining provisions of these terms shall remain in effect.

About the Instruction

■ Operating instruction contents

The following operating instructions are included in the DVD-ROM attached to this machine. The instructions are divided according to work or function. Use one that is appropriate for the purchased module (application) or your purpose.

∗ BM series machine is included in the explanation of this manual, but its functions are not supported.

Type	Description
<General>	
Introduction	Overview of machine and basic setting/operation/analysis/utility.
Basic Operation (PanaCIM Web Application)	PanaCIM Web application's basic operation.
<Modules>	
Production Analysis	Collect and analyze machine's running information and display its statistics on real time basis to support productivity improvements (recognition/pickup error rate improvement, machine trouble stop time reduction) for mounting line.
Traceability	Combine PCB information read by a barcode reader on machine or conveyor and production record or material/part information of machine to manage history of PCBs for quality control and market support.
Material Verification	Verify material/part information and recipes while setting up material/parts in production setup/model change/splicing/part exhaust to prevent wrong material/part set up.
Product Changeover and Control	Auto download recipe and adjust lane width based on PCB ID for quicker model change.
Production Monitoring	Retrieve production information and operation information on real time basis and display line status on the monitor and PDA to provide operators with instructions for events such as error or part exhaust. This is to reduce mount line stop time or to prepare in advance for better productivity.
Enterprise Link	A function to output the data collected from machines during production (material verification data, trace data, operation performance data) in the standard format so external applications can reuse the data. Part information can be loaded also in the standard format.

Type	Description
Material Control	A function to provide the location and the number of parts or feeders stocked in the production or preparation area. MSD function controls MSD parts' expired date.
Component Supply Navigator	The Component Supply Navigator optimizes the supply sequence to provide a shortest route of an operator without component shortage. It can prevent short time breakdown in the production line occurred due to component shortage and contribute to manpower saving.
Maintenance	For the purpose of reducing time spent on maintenance planning / control operations, asset (machines, heads and feeders) profiles can be controlled on the floor, or the maintenance history of each asset can be recorded.

License CD names for modules are as follows.

Module Name	License CD Name
Production Analysis	Production Analysis
Traceability	Traceability
Material Verification	Material Verification
Product Changeover and Control	Product Changeover and Control
Production Monitoring	Production Monitoring & Dispatch
Enterprise Link	Enterprise Link
Material Control Base	Material Control Base
Material Control Allocation	Material Control Allocation
Material Control MSD	Material Control MSD
Component Supply Navigator	Component Supply Navigator
Maintenance	Maintenance

TABLE OF CONTENTS

- Software Terms of Use 4
- About the Instruction 5

1. OVERVIEW 1-1

1.1 Overview 1-2
1.2 System Configuration 1-3
1.3 Functional Overview 1-5
1.4 Levels of Traceability 1-6
1.4.1 Trace Type 1-6
1.4.2 Level Functionality Comparison Chart 1-7
1.4.3 Supply Type Functionality Comparison Chart 1-7

2. SETTINGS 2-1

2.1 Overview 2-2
2.2 Settings 2-3
2.2.1 Settings of CIMC 2-3
2.2.2 Printer Trace Setting 2-7
2.2.3 Settings of Machine 2-10

3. FUNCTION - REPORTS 3-1

3.1 Overview 3-2
3.1.1 List of Reports 3-3
3.2 Setting 3-4
3.2.1 Filter Criteria 3-4
3.3 Operation 3-5
3.3.1 Operation Procedure 3-5
3.3.2 Create Traceability Report 3-5

= MEMO =

1. OVERVIEW

This chapter explains the overview of PanaCIM-EE/Traceability.

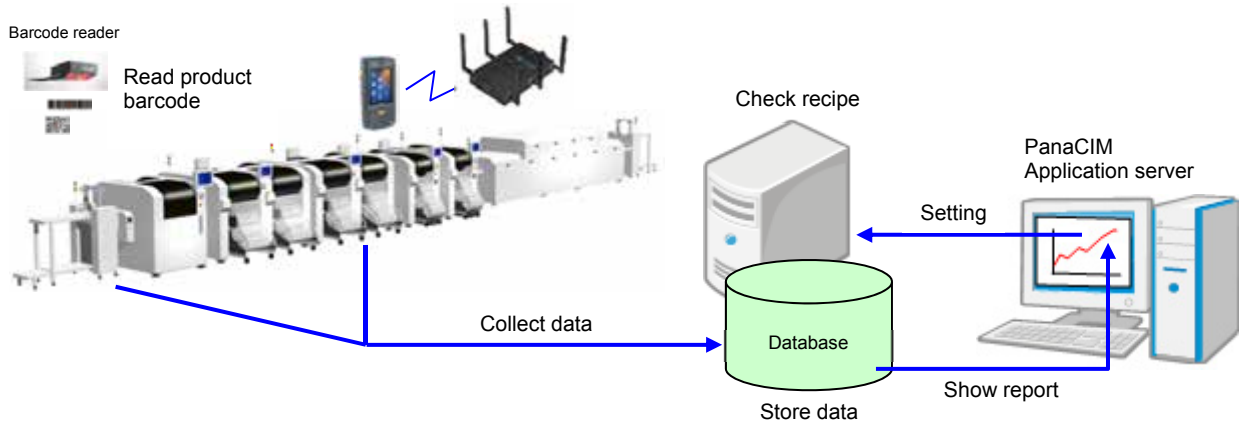
1.1 Overview

PanaCIM-EE (PanaCIM Enterprise Edition: Hereinafter called PanaCIM) provides PanaCIM/Traceability System to support mounting line quality management after production. Product barcode reader on an upstream machine reads product information in mounting to identify the machine used for the production and the time produced. Coordinating with PanaCIM/Material Verification enables linking product information and part information and identifying product, machine, time and more of specific parts.

PanaCIM/Traceability has the following functions.

- Product barcode definition/reading
- Store read product information (Model ID, serial number)
- Store machine trace data (machine pass time)
- Linking product information and trace data
- Linking product information and part data (material verification)
- Generate and display trace report

Function configuration diagram is shown below.

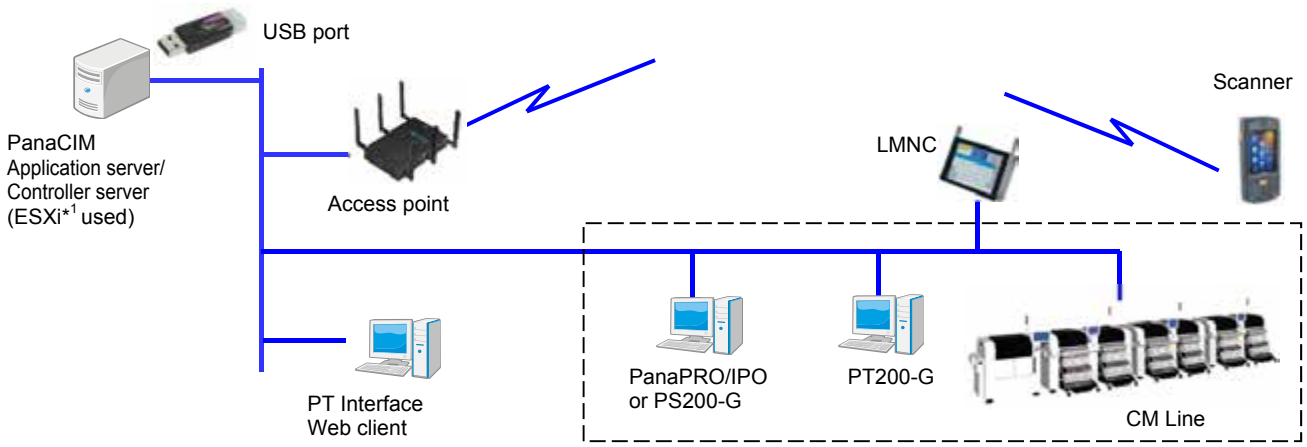


1.2 System Configuration

This section shows the schematics of systems with PanaCIM for small-scale and large-scale productions.

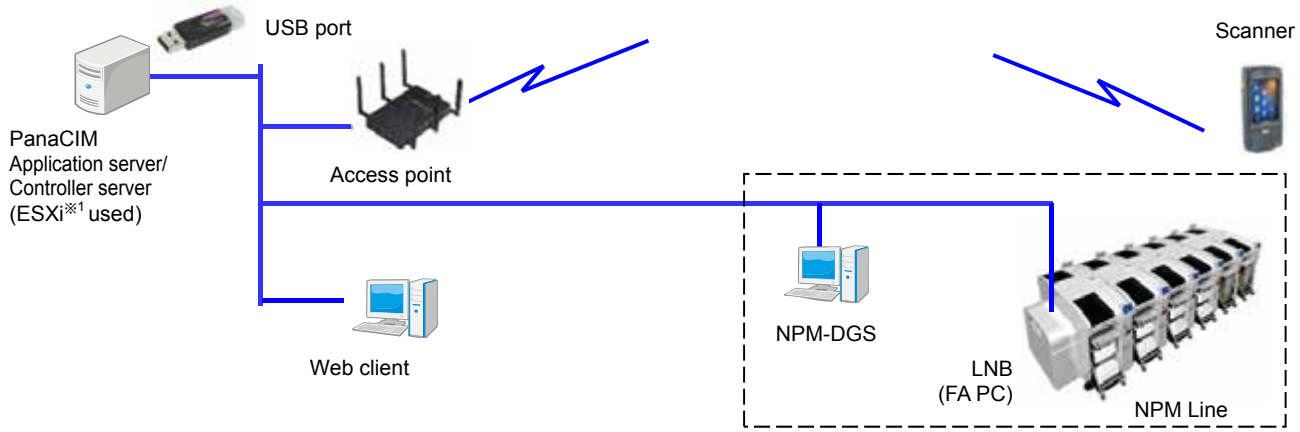
■ System with PanaCIM (for small-scale production)

CM line



Initially introduced system

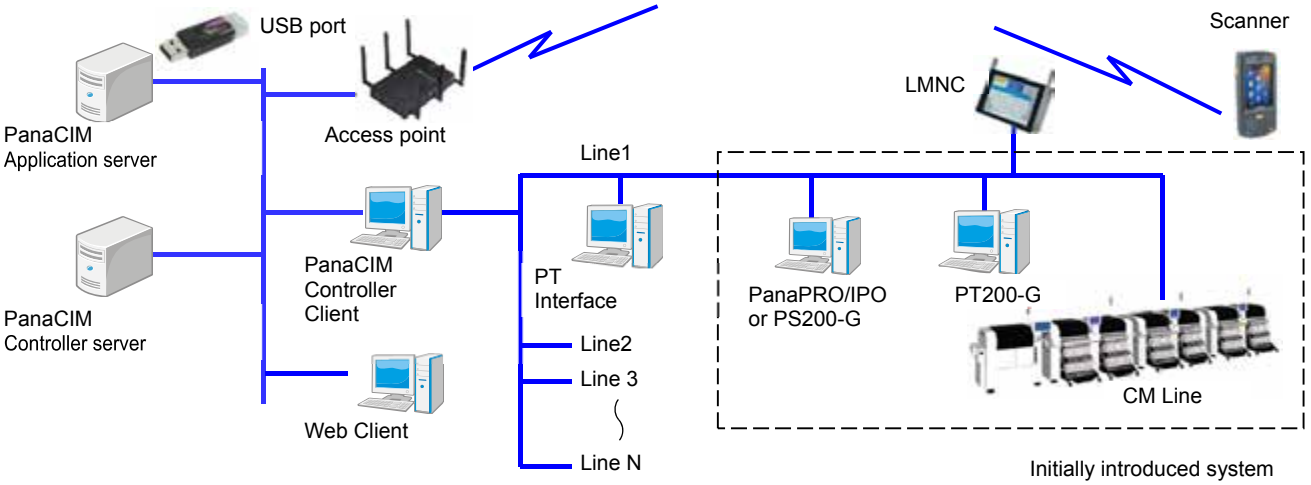
NPM line*2



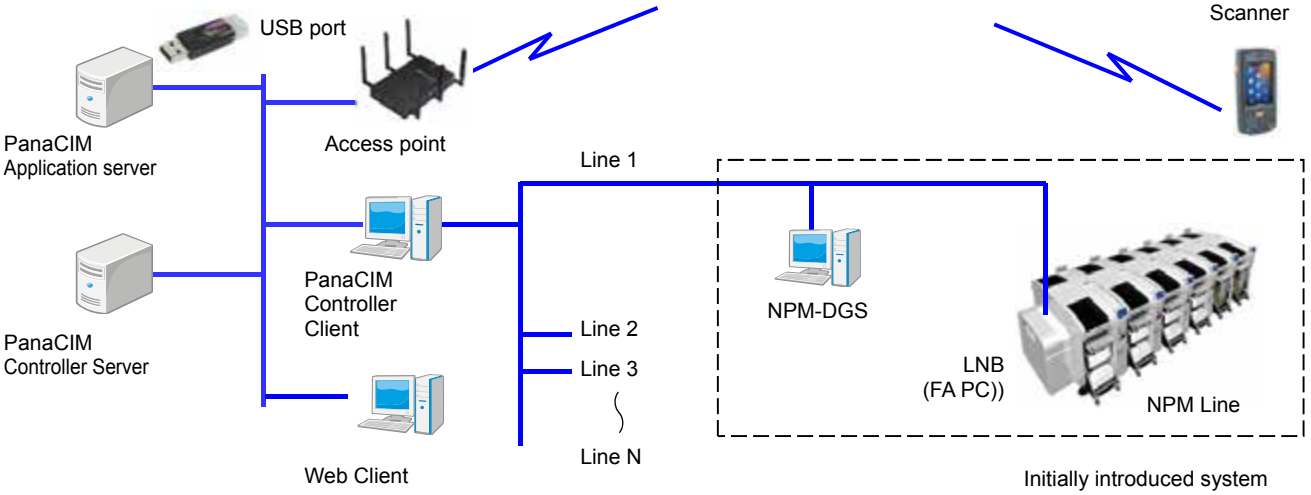
Initially introduced system

*1. ESXi: A virtualization tool that allows multiple applications to run on a single server.
*2. NPM line can also include the models such as AM100, SPD, SPG, SPV and SP70 as NPM-related machines.

■ System with PanaCIM (for large-scale production)



NPM line[*1]



*1. NPM line can also include the models such as AM100, SPD, SPG, SPV and SP70 as NPM-related machines.

1.3 Functional Overview

■ List of Traceability Module function

Main functions	Detailed functions		Description
	Large category	Small category	
Barcode reading function	Product information	LMNC	Fixed LMNC barcode reader reads the following barcode formats. (head camera reads them in NPM)
			1D barcode: Code 39, Code 128, Code 93, Code 2of5 Interleaved, UPC, EAN,CODEBAR, MSI
			2D barcode: Data Matrix, QR Code, PDF417
		Barcode specifications	Modifiable according to barcode format
Data Collection	Data Type		Model code, serial number
	Max. Machines to Collect Data		100 stages (per PanaCIM controller server)
	Max. Lines to Collect Data		Equivalent number of line(s) (per PanaCIM controller server)
	When to Collect Data		Per product (or any desired time)
Production Program Check	Check program		Prompt users to change the model when product model code does not match with the recipe being used in the mounter.
Data Storage	Backup	Auto Backup	Backs up data automatically at the specified intervals.
		Store Outside	Stores the backed up data outside (on other media).
	Restore	Restore	Data can be restored from the backup data.
Charts and Reports	Show reports	Type	The reports shown in the following table can be shown.
		Save	Parameters (attributes, range and others) necessary for generating reports can be saved as report configuration file.
		Quick Run	Reports can easily be shown by calling saved report configuration file.
		Time to Show	After finished setting report, reports can be shown from create report or quick run in a short time.
Settings	Trace level		Trace run on/off and trace level can be set
	Barcode setting		Product barcode setting can be changed

1.4 Levels of Traceability

The PanaCIM/Traceability provides the ability to search the trace information at the levels of product, part and placement to meet the needs of the users.

1.4.1 Trace Type

■ Panel Traceability

This type permits you to identify the produced PCB by specifying PCB.

Panel traceability is provided through the use of fixed barcode readers connected to an LMNC for the CM/DT series machines, and through the head camera at the head machine for the NPM series machines, to scan and record the model code and serial number of each panel as it approaches a piece of equipment.

From the model code, PanaCIM determines if the product name is valid based on product setup data configured prior to production. If the product name matches the currently running product, the panel is produced. If the product name is different, you will be prompted to perform a changeover for the CM/DT series machines, while for the NPM series machines (including AM100/SPD/SPG/SPV/SP70), product is changed over automatically because the Product Changeover and Control option is enabled (when reading with the head camera) to read model codes.

For the CM/DT series machines, if the barcode label is damaged, PanaCIM will allow you to manually key in the panel model code and panel serial number information via LMNC unit display terminal.

■ Component Traceability

This type permits you to identify when and where the part was used by specifying the part.

Component to panel traceability is provided when used in conjunction with Material Verification. Material Verification records the time and attribute detail for the materials mounted on each piece of equipment. This information along with the panel traceability data, allows identification of each panel serial number that could have been produced with specific material including: part number, lot/date code, vendor code, initial quantity, and (1) user-defined attribute.

■ Placement Traceability

Traceability at the placement level records the reference numbers for each placement point set by the data creation machine, besides the data to be recorded with the traceability at the part level. This allows you to identify not only the products produced with the materials concerned, but also the placement position through the part number, lot, vendor, initial quantity, and user defined attribute.

Moreover, in the NPM series, barcode information per pattern can be displayed in the details section of the placement point trace report by reading the barcode per pattern (pattern barcode) affixed on the PCB with the head camera of the machine. In addition, if you affix barcode on a nozzle, nozzle information can also be displayed in the details section of the placement point trace report.

1.4.2 Level Functionality Comparison Chart

■ The following table summarizes the traceability data captured at each level.

Attribute	Trace Panel		Trace Part		Trace Placement		
	BM	CM/DT NPM*1	BM	CM/DT NPM*1	BM	CM/DT	NPM*1
Panel Entry Time	Yes	No	Yes	No	Yes	No	No
Panel Exit Time	Yes	No	Yes	No	Yes	No	No
Panel Start Time	No	Yes	No	Yes	No	Yes	Yes
Panel Completion Time *3	No	Yes	No	Yes	No	Yes	Yes
Panel Serial Number	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Panel Model Code	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Product Name	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Equipment Name	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Stage Number	No	Yes	No	Yes	Yes	Yes	Yes
Part Number (P/N)	No	No	Yes	Yes	Yes	Yes	Yes
Lot	No	No	Optional	Optional	Optional	Optional	Optional
Vendor	No	No	Optional	Optional	Optional	Optional	Optional
Initial Qty	No	No	Optional	Optional	Optional	Optional	Optional
User Defined Attribute	No	No	Optional	Optional	Optional	Optional	Optional
Reference Designator	No	No	No	No	No	No	Yes
PatturnBarcode	No	No	No	No	No	No	Yes*2
PatturnDesignator	No	No	No	No	No	No	Yes*2
Nozzle Holder Address	No	No	No	No	No	No	Yes*2
Nozzle Changer Address	No	No	No	No	No	No	Yes*2
Nozzle Block Kit Serial Number	No	No	No	No	No	No	Optional

*1: NPM machine includes AM100/SPD/SPG/SPV/SP70.
*2: Support NPM only.
*3: A machine outputs either 'Panel Entry Time and Panel Exit Time' or 'Panel Exit Time' only depending on the machine model, and NPM and CM machines output 'Panel Exit Time' only. Because 'Panel Entry Time' is not output, 'Panel Exit Time' is entered and displayed in the 'Panel Entry Time' field as trace data.

1.4.3 Supply Type Functionality Comparison Chart

■ The following table summarizes the traceability levels dependent on the supply type of the component.

Traceability	BM					CM/DT					NPM*2				
	Reel	Tray	Bulk	Stick	Other	Reel	Tray	Bulk	Stick	Other	Reel	Tray	Bulk	Stick	Other
Panel	NOT APPLICABLE														
Component	Yes	Yes	No	No	No	Yes	Conditional*1	No	No	No	Yes	No	No	No	No
Placement	No	No	No	No	No	No	No	No	No	No	Yes	Yes	No	No	No

*1: Trace data must be collected in real time.
Trace data cannot be post-processed.
*2: NPM machine includes AM100.

= MEMO =

2. SETTINGS

This chapter explains the various setting items acquired from product barcode.

2.1 Overview

This section explains model ID and serial number obtained from product barcode and part information (vendor, lot and others) obtained from part barcode.

It also includes the machine setting procedures required to use the PanaCIM/Traceability.

2.2 Settings

2.2.1 Settings of CIMC

■ Route Editor

Before you start setting, make sure every hardware is connected properly and the line has been created and set at Route Editor/System Configuration.

☞ See [Introduction] manual for more details on Route Editor/System Configuration.

■ CM/DT machine

- Set LMNC at the head machine of the module.
- Set PT200 as module's interface.
- Set a product scanner at the module's head machine zone.
- Set VLMNC (virtual LMNC) to each machine zone added in the module.
- Set one or more CCS scanner(s) to the module (when using PanaCIM/Material Verification)

■ NPM machine

- Set LNB as module's interface.
- Set DGS that manages module's physical/virtual lines.
- Set one or more CCS scanner(s) to the module (when using PanaCIM/Material Verification)

* NPM machine includes AM100/SPD/SPG/SPV/SP70. The same applies to the explanations hereinafter.

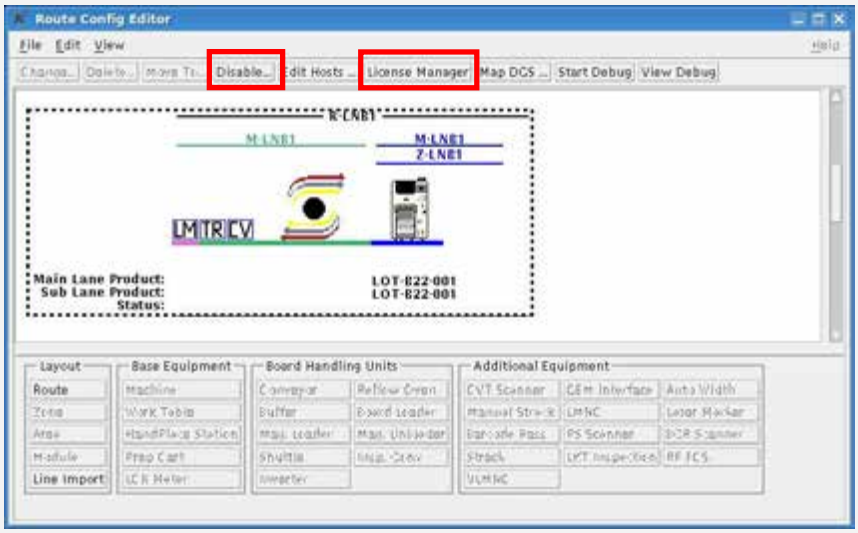
■ BM machine

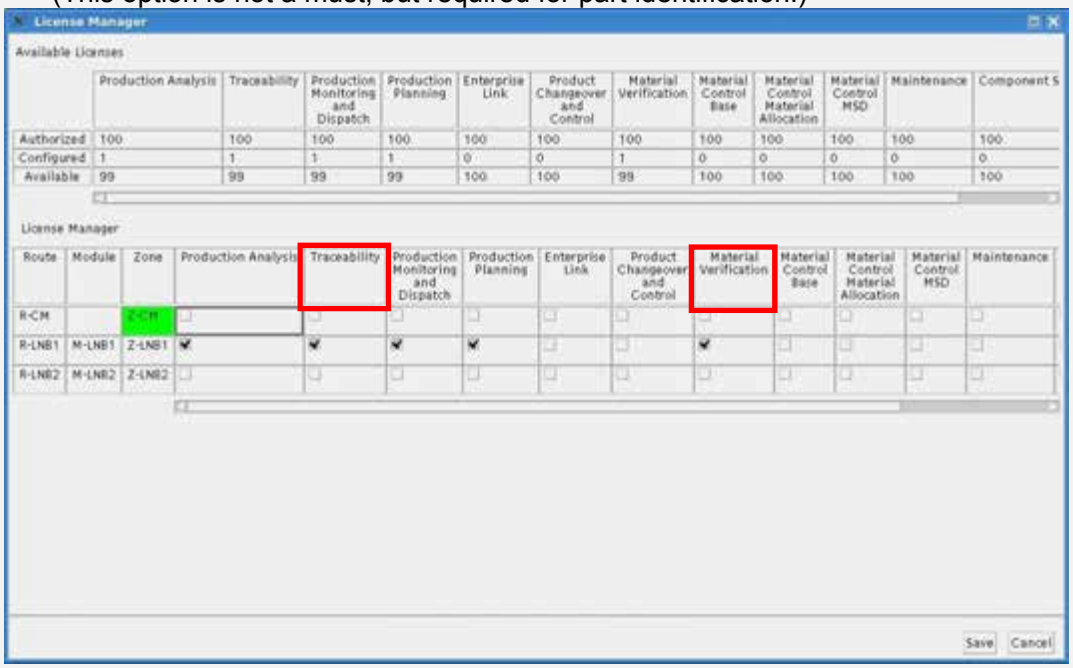
- Set LMNC to a zone.
- Set a product scanner to the zone.
- Set one or more CVT scanner to the zone.

* BM machine is not supported in this version. The same applies to the explanations hereinafter.

Configure Licenses

Before using the PanaCIM/Traceability, the license needs to be enabled via the Route Editor of the PanaCIM controller.

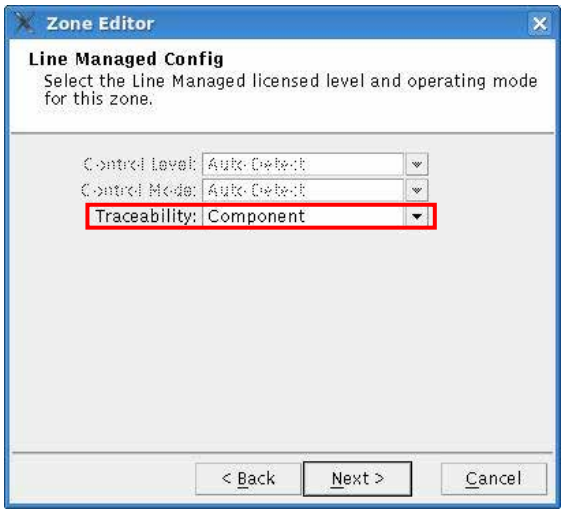
Step	Operation
1	Select <Route Editor> icon on the application toolbar of the PanaCIM controller to open the **Route Editor** Application. 
2	Select the route to change the license configuration and click [Disable]. 
3	From the menu on the toolbar, select [License Manager] to launch the License Manager.

4	Under Available licenses, select the license for modules and zones. To use the PanaCIM/Traceability, place a check mark in the following checkboxes: • **Traceability:** Enables the selected license zone by zone. • **Material Verify**： Enables the selected license module by module or zone by zone. (This option is not a must, but required for part identification.)  License Manager Available Licenses Production Analysis / Traceability / Production Monitoring and Dispatch / Production Planning / Enterprise Link / Product Changeover and Control / Material Verification / Material Control Base / Material Control Material Allocation / Material Control MSD / Maintenance / Component S Authorized 100 100 100 100 100 100 100 100 100 100 100 100 Configured 1 1 1 1 0 0 1 0 0 0 0 0 Available 99 99 99 99 100 100 99 100 100 100 100 100 License Manager Route / Module / Zone / Production Analysis / Traceability / Production Monitoring and Dispatch / Production Planning / Enterprise Link / Product Changeover and Control / Material Verification / Material Control Base / Material Control Material Allocation / Material Control MSD / Maintenance R-CM Z-CM R-LNB1 M-LNB1 Z-LNB1 R-LNB2 M-LNB2 Z-LNB2 Save Cancel * The lines available in the Route Editor appear in green. To change the configuration of the license, disable the lines by removing the check mark in the box.
5	After configuring the license, click **[Save]** and exit the License Manager

Route Editor Settings

Use the Zone Editor to set the zones in the module. On the Line Managed Config page of the Zone Editor, select the desired traceability level. Available traceability levels are shown after the module is configured via the Line Editor.

Refer to Base manual for details. For details of the traceability levels, refer to 1.4 in this manual.



The traceability level which can be set as traceability is shown below.

None:	With no trace
Panel:	Trace Panel
Component:	Trace Component
Placement:	Trace Placement

2.2.2 Printer Trace Setting

The settings when tracing is performed using the printer is described here.

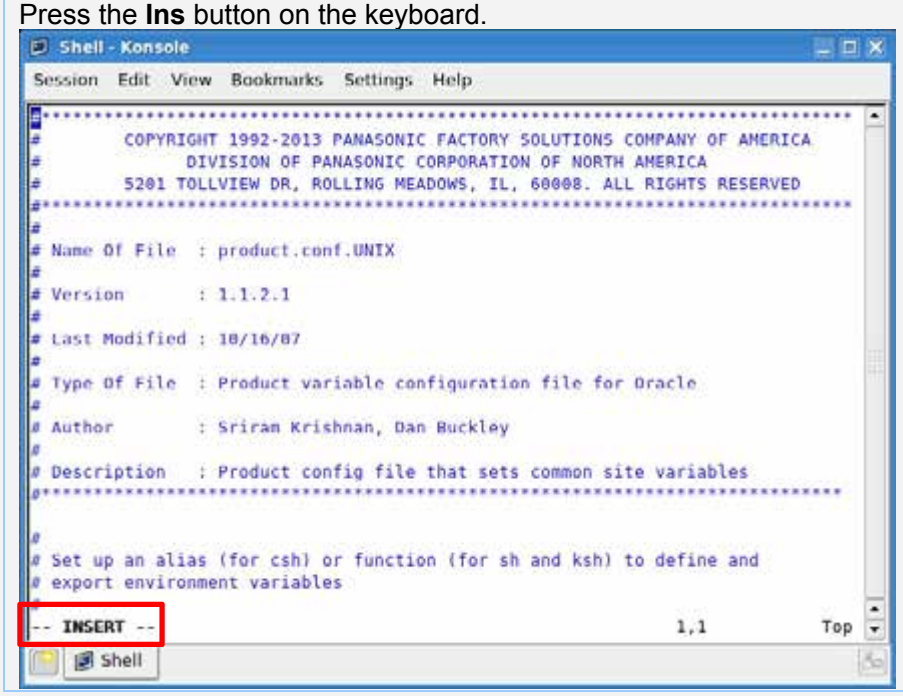
■ Editing the "product.conf" Setting File

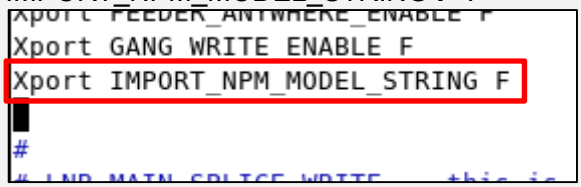
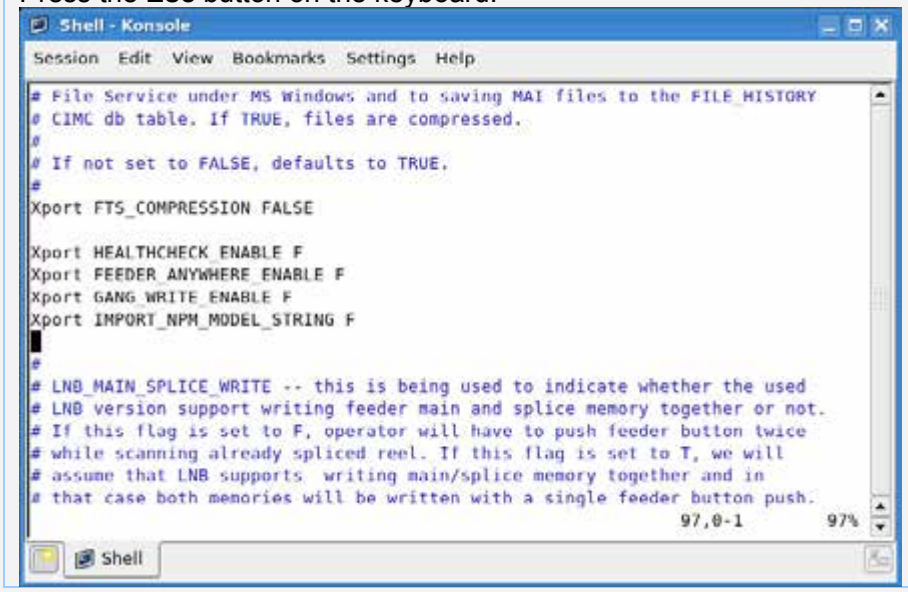
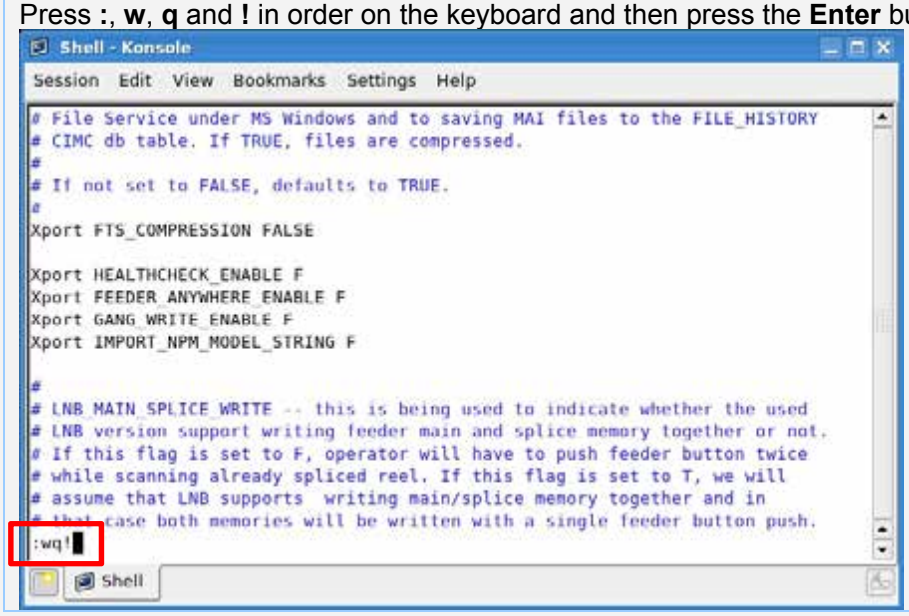
Using the text editor, **/home/panadmin/config/ product.conf** file in the PaneCIM controller server is edited. After **product.conf** file is edited, restart the PanaCIM controller server to reflect the changes.

*This setting is to deter automatic registration of model IDs set to the recipe in the placement machine with DGS.
The purpose of this setting is to avoid conflicts with model IDs in the recipe in the printer described later.

Step	Operation
1	Launch **Terminal** in the PanaCIM controller server. 
2	Run **cd /home/panadmin/config** command on **Terminal**.

3	Run **vi product.conf** command on **Terminal**.
	`CIMC-SRV:panadmin> cd /home/panadmin/config/`
	`CIMC-SRV:panadmin> cp product.conf product.conf_bk20150714`
	`CIMC-SRV:panadmin> vi product.conf`

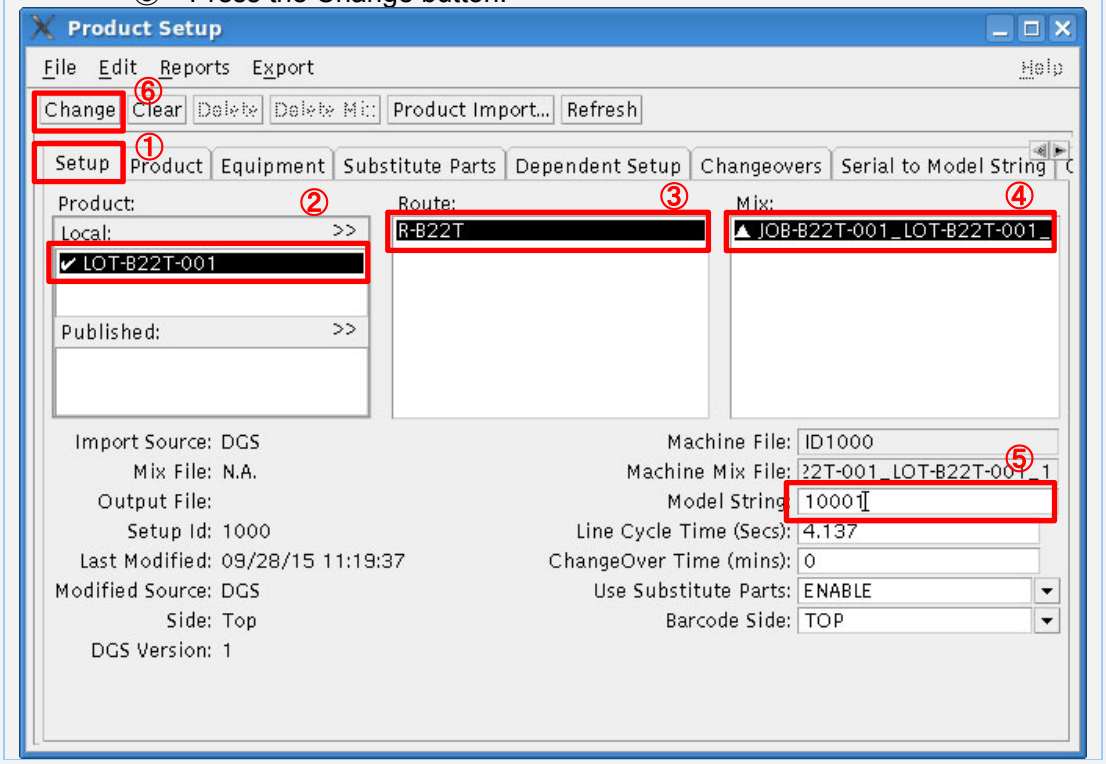
4	Press the **Ins** button on the keyboard. 

5	Press the down arrow cursor on the keyboard to go to "Xport IMPORT_NPM_MODEL_STRING **T**", and change it to "Xport IMPORT_NPM_MODEL_STRING **F"**. 
6	Press the **Esc** button on the keyboard. 
7	Press **:**, **w**, **q** and **!** in order on the keyboard and then press the **Enter** button. 
8	Restart the PanaCIM controller server to reflect the settings.

■ Product Setup

Model IDs are registered to the recipe in the printer using product setup. Each time new recipe is registered, you must register the model ID.

*Note that trace data in the recipe with no model ID being registered will not be registered in the PanaCIM system.

Step	Operation
1	Launch **Product Setup** on the PanaCIM main menu. 
2	Perform the steps below in "Product Setup" to register the model ID to the recipe in the printer. ① Click the **Setup** tab. ② Select a **product** from the list of Product. ③ Select a **route**. ④ Select a **mix**. ⑤ Type **model ID**. Unique model ID (letter string) which defines the production model must be contained in each product ID of the production model. ⑥ Press the Change button. 
3	Perform step **2** for all recipes in the printer.

2.2.3 Settings of Machine

■ CM/DT

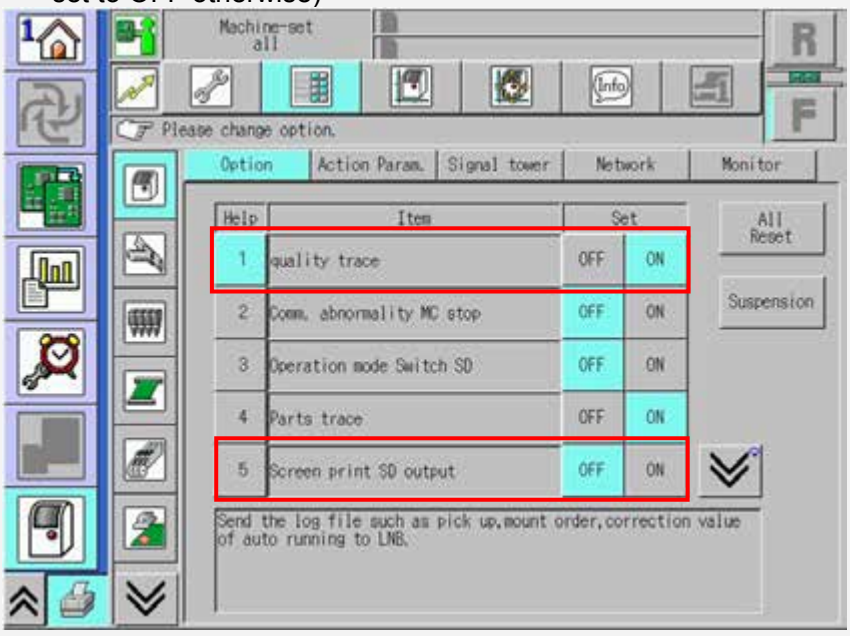
● Configure Machine Settings

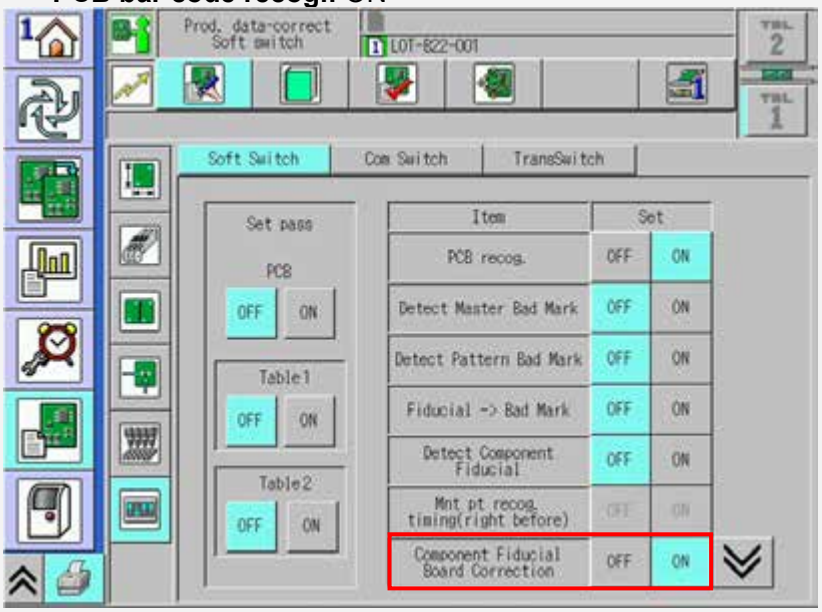
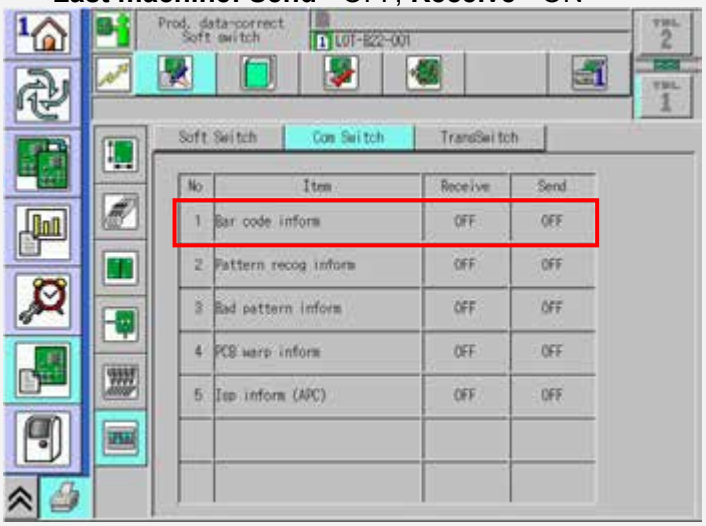
The machine and PT200 settings required to use PanaCIM/Traceability with the CM/DT series machines are to be made by our service personnel.

■ NPM

● Configure Machine Settings

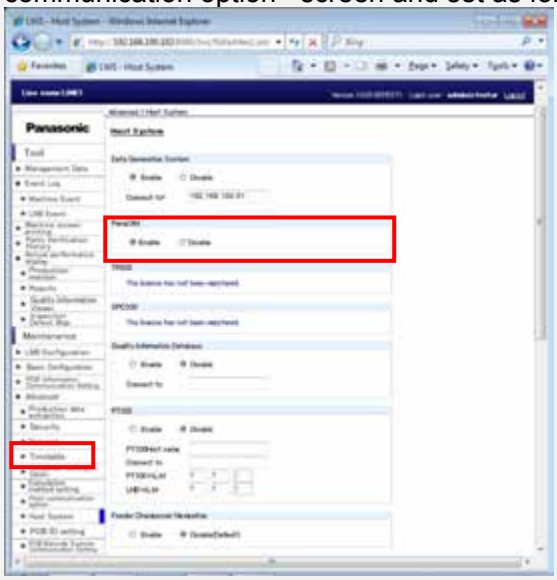
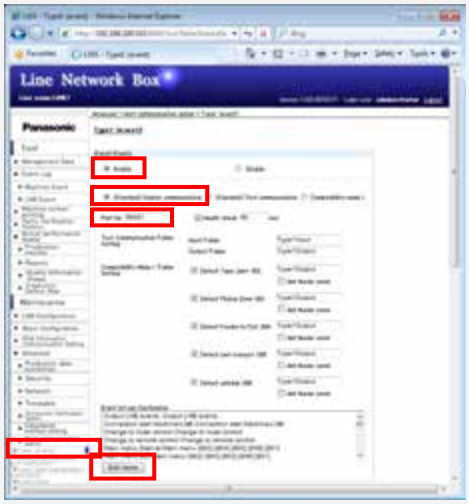
The following table shows necessary settings on a NPM machine to use traceability.

Step	Operation
1	Open [Setting] → [Action setting] → [General] → [Option] and set as follows. • **Quality trace:** ON • **Part trace:** ON • **Auto changeover:** ON • **Auto changeover mark recognition:** ON (only on the 1st machine, set to OFF otherwise) 

2	Open [Prod. data] -> [Soft Switch] → [Soft Switch] and set as follows. • **PCB bar code recog.:** ON 
3	Check if barcode information is the same as the setting in production program. Both Send and Receive are set to OFF in the following example. If the production program settings are correct, the items are set as below. • **Head machine: Send** - ON, **Receive** - OFF • **Middle machine: Send** - ON, **Receive** - ON • **Last machine: Send** - OFF, **Receive** - ON 

Configure LNB Settings

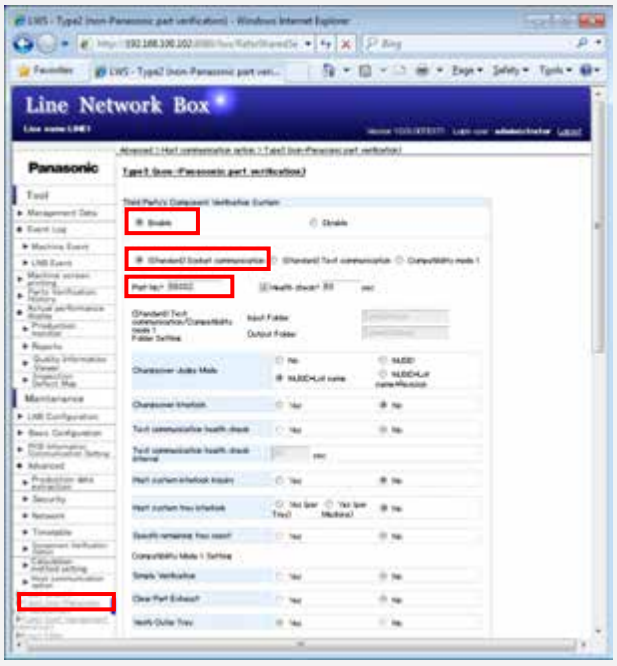
Follow the steps below to collect the traceability data on PanaCIM.

Step	Operation
1	Log on to LNB and select [Advanced] → [Host System] to open the <Host communication option> screen and set as follows:  • **PanaCIM** : ON
2	From [Host communication option], select <Type 1 (Event)> and set as follows: • **Export Events** : Enable • **Standard Socket communication** • **Port No.** : 58001 
3	Click [Edit Items] to open the <Event Filter> screen. Select all items and click [Add].



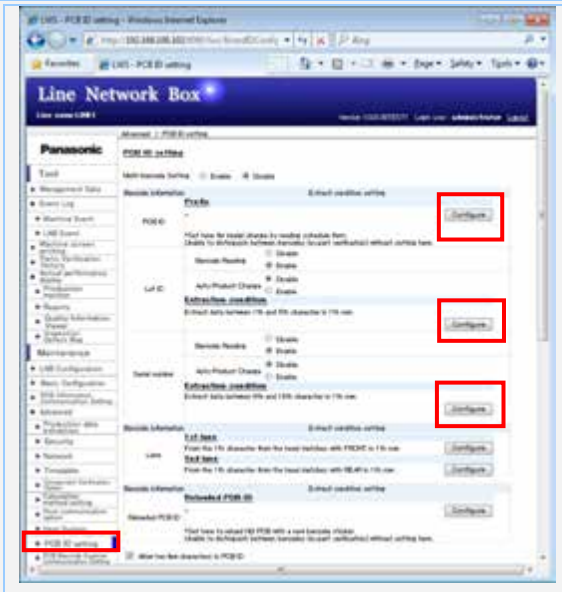
4 Next, select <Type 2 (non-Panasonic part verification)> from [Host communication option] and set as follows:

- Third Party's Component Verification S: **Enable**
- **(Standard) Socket communication**
- **Port No.**: 58002



5 From [Advanced], select [PCB ID setting] to open the <PCB ID setting> screen and configure how to extract the PCB ID data from the bar code information:

- PCB ID prefix
- Lot ID
- Serial No.



6 Under [Prefix], set the condition (A and B in in [n]th row) as instructed so that the prefix value that matches the PCB ID may be extracted.



Similarly, configure how to extract [Lot ID] and [Serial number] data from the barcode information
The Lot ID acts as the model ID on PanaCIM.

< Define barcode of [Lot ID] >

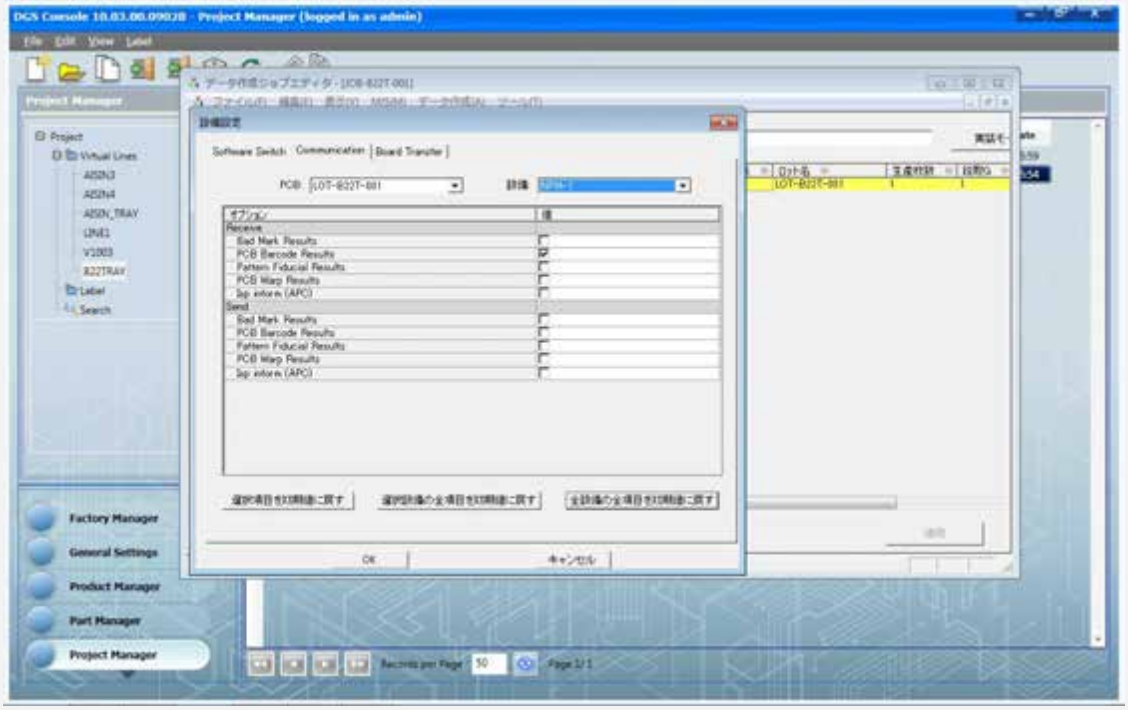


< Define barcode of [Serial number] >



Configure DGS Settings

The following table shows necessary settings to collect traceability data on PanaCIM.

Step	Operation
1	Go to [DGS Console Project Editor] and open a [Project]. On the opened <Project Editor>, open [Setting] → [Machine Setting] → [Communication] tab and set [Barcode Information]. Set as follows according to the position of machine: • **Head machine: Send** - ON, **Receive** - OFF • **Middle machine: Send** - ON, **Receive** - ON • **Last machine: Send** - OFF, **Receive** - ON 

2	Open DGS Console <PPD Manager> and go to [Auto Changeover] → [Barcode] screen. Right-click on a project to which you wish to set lot ID and select [New]. <Edit product code> screen opens. Set lot ID (PanaCIM Model ID), serial start and end number, and others necessary. 

= MEMO =

3. FUNCTION - REPORTS

This chapter explains the form for trace (report).

3.1 Overview

■ PanaCIM-EE Web Application

PanaCIM/Traceability creates various reports. To create reports, access to PanaCIM application server from a browser (Internet Expoler 11 or later) and launch PanaCIM Web application to create them.

For more details on PanaCIM Web application, see Basic Operations (Web Application).



3.1.1 List of Reports

The table below is a list of available reports.

■ Traceability

Report	Description
Panel to Component Traceability Report	Displays all parts used for producing products.
Barcode Trace Report	Displays a report based on all barcode information such as PCB and component information.
Component to Panel Traceability Report	Displays a panel produced by a specific component and lot. It is useful to identify a panel produced by defective component.
Panel Trace Report	Displays a list of panels that are passed through the placement machine during production.
Panel Hold Trace Report	Displays detailed information of the machine whose PCB production is interrupted.
Inspection/Repair Trace Report	Displays various attributes representing entire trace parameters.
Placement Load Measurement Report	Displays the placement load measurement data.

3.2 Setting

3.2.1 Filter Criteria

About filter criteria of reports, refer to [Basic Operations (Web application) 3.2.2 [Filter Criteria].

3.3 Operation

3.3.1 Operation Procedure

For how to output a report, refer to [Basic Operations (Web application) 3.3.1[Operation Procedure].

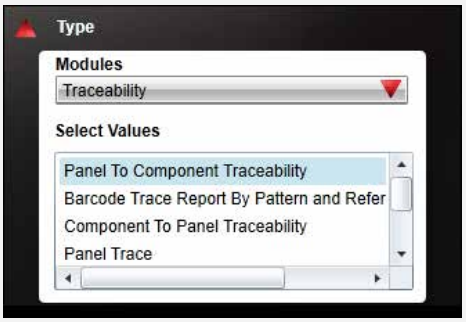
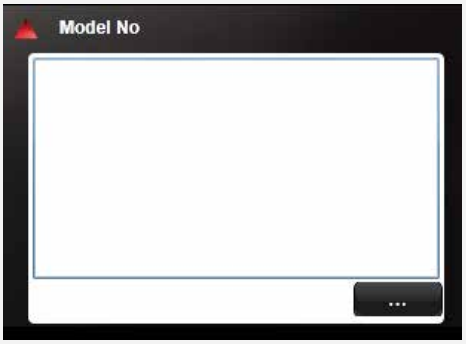
3.3.2 Create Traceability Report

As for the following reports, if you do not select any one of filter criteria during search (multiple selections are allowed), the pop-up message will appear and display / output of the reports will be disabled.

Report	Filter criteria
Panel to Component Traceability Report	Mode ID PCB barcode
Barcode Trace Report	Part number Lot number PCB barcode
Component to Panel Traceability Report	Part number Lot number

The following is the operations of how to display the <Panel to Component Traceability Report>.

Step	Operation
1	Launch PanaCIM Web application.
2	Select **Report** from the **Chart and Report** menu. 

Step	Operation
3	Select Traceability in **Type** - **Modules,** and select **Panel to Component Traceability** in **Select Values**. 
4	Select each filter. Clicking [・・・] on the bottom right of the screen allows you to select from the list. *You must select **Model ID** and **Panel Barcode** filters (multiple selections are allowed).  (If you need to sort the displayed list, enter a search word in the **Search Key Word** to search by all or selected item again.)  Check items and click OK.
5	The reports are displayed. <In case the number of reports exceeds 10,000> A message appears and you need to select either save into a CSV file or interrupt and search the data again. If you want to save into a CSV file, click **OK**. If you want to search again, click **Cancel**. <CSV output> Select one from **Open**, **Save** and **Save as**.

Notice

The contents of this document are subject to change without prior notice.

◍ Company and product names described in this document are trademarks or registered trademarks of their respective companies.
◍ Some of our products fall under the export control items (or technologies) established in the Foreign Exchange and Foreign Trade Act. When exporting (or providing technologies overseas), please check its legal restrictions and be sure to take necessary procedures such as to obtain the export permission.

Panasonic Smart Factory Solutions Co., Ltd.

4-1-62 Minoshima, Hakata-ku, Fukuoka City, Fukuoka, Japan
Phone number: +81-92-477-1205
Fax number: +81-92-477-1664

© Panasonic Smart Factory Solutions Co., Ltd. 2018
Unauthorized copying and distribution is a violation of the law.

Printed in Japan