

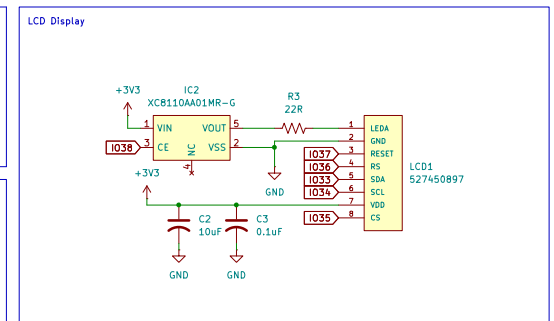
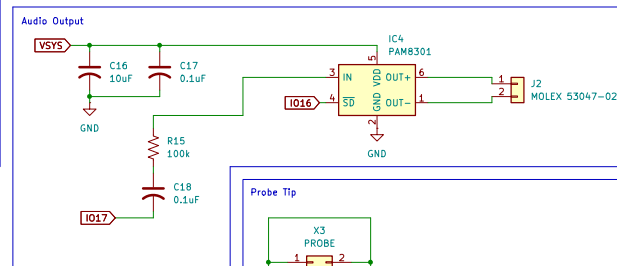
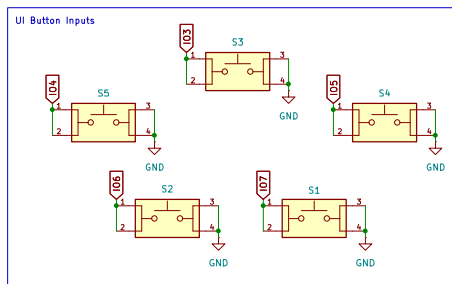
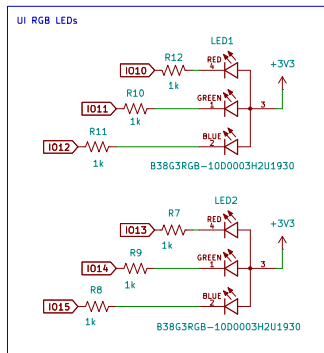
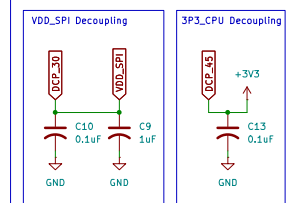
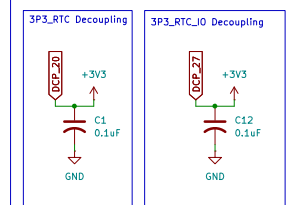
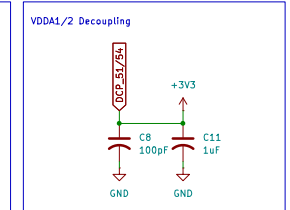
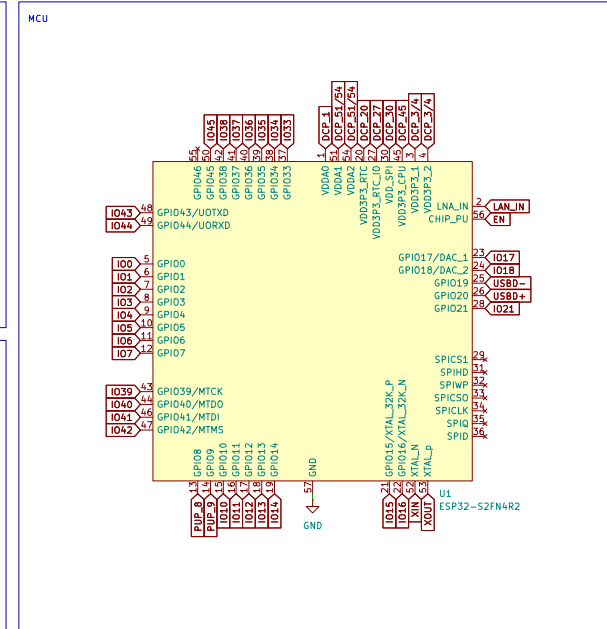
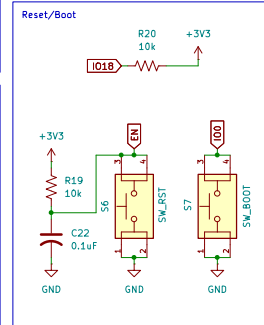
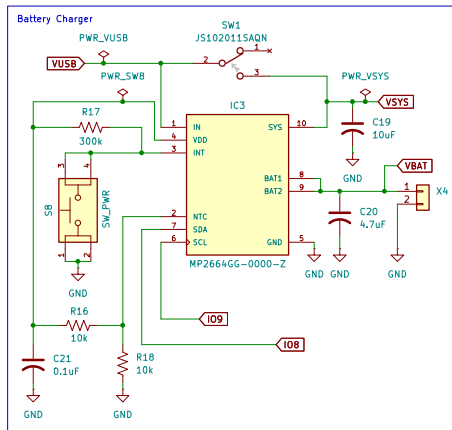
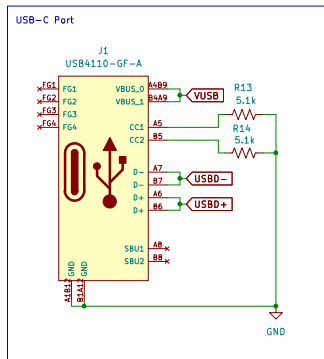
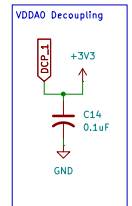
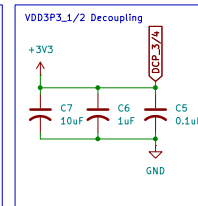
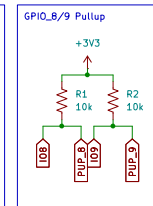
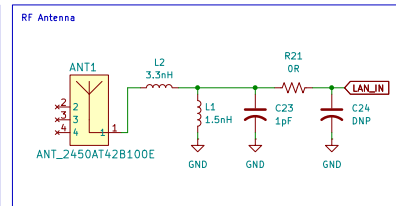


Noah Hensley Shawnee State University

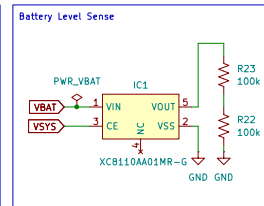

NOTES:

1. Battery is 500mAh 801350 LIPO
2. Screen options are PNNF114H-21AF or FP-22TSP09A
3. Button SW_PWR should power the system on through MP2664's shipping mode
4. Power off is through MP2664's shipping mode (see datasheet)
5. SW1 is only needed if the system is used without a battery and charger IC
6. Tech switches are ALPS FN 5KRP48B010
7. SW1 and SW_BOOT are for firmware update only and should not be exposed to exterior of case
8. SW_PWR is the power button and should be exposed in a recessed area away from the UI buttons
9. LCD panel connects with FPC display via MOLEX pin: 527450897

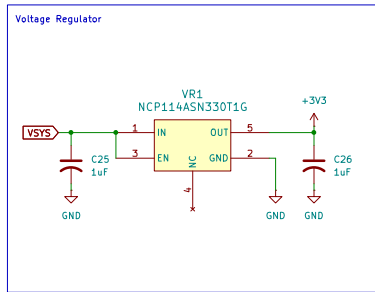