Panasonic

Operating Instructions

Bread maker (household use)

Model SD-MDX4

(1-loaf capacity)

Warranty enclosed separately

Premium white bread Pain de mie program

HOME BAKERY Bistro

Thank you for purchasing this Panasonic product.
- Read these instructions carefully and use the appliance correctly and safely.
- Before use, read “Safety precautions” (pp. 4-5).
- Check that the purchase date and retailer are recorded on the warranty, and keep it with these instructions.

Register your product with CLUB Panasonic.
(See the back cover.)

DZ50-2324 MX0621Y41025

From everyday loaves to artisan-style bread... Let the automatic programs do the work.

The bread-making process

1 Kneading

Flour, water and other ingredients are kneaded into an elastic dough that rises well.

2 Rising

Yeast produces gas in the dough, making it expand and form the structure of the loaf.

3 Baking

The dough is baked into fragrant, delicious bread.

Bread maker features

1 Kneading

Beating and stretching

Techniques learned from professionals

Key point
Ribs on the sides of the bread pan and the kneading blade reproduce a baker's hand movements.

2 Rising

Fluffy loaves all year round

Precise temperature control

Key point
Internal and room-temperature sensors select the best program for the season.

3 Baking

From the sides to the top

Even baking throughout

Key point
The reflective inner lid and far-infrared fluoropolymer-coated bread pan distribute heat evenly.

What is pain de mie?

French for "bread of the crumb". Unlike breads enjoyed for their crust, it is made to savour the soft crumb inside: a superior white loaf.

Panasonic pain de mie

Premium bread with a thin crust that brings out the flavour of its ingredients.

Manual functions

Select one of three stages - Knead, Rise or Bake - and set its level and duration. Fine-tune the settings to suit your bread and enjoy making it just the way you like.

• You need to judge when kneading and rising are complete.

Scan for recipes and other useful information.

Contents

Page
Page

Before use

Safety precautions 4

Important operating notes 5
Parts and accessories 6
• Setting the clock 7

Basics and preparation

Automatic programs 8
Automatic dough programs 11
Automatic bread making: steps and tips 12
Basic bread ingredients 14

• Bread mixes 16
Additional ingredients 17

How to use

Using dry yeast
Automatic baking from start to finish
Making pain de mie 18
Convenient features 20
• Raisin 20
• Gentle mixing 22
• Crust colour 23
• Timer 24
Rich pain de mie 25
White bread / Soft white bread 26
Sandwich bread 27
Rapid white bread 28
Quick sweet bread 29
60-minute bread 30
Cooked-rice bread 31
Rice French bread / French bread 32
Rye bread 33
Wholemeal bread 34
Low-carb bread 35
Brioche 36
Marbled bread 37
Custom bread 38
Pale-crust bread / Half loaf 40
Rice flour bread (with wheat) 41
Rice flour bread (no wheat) 42
Using natural yeast
Automatic baking from start to finish
Dried natural yeast bread 44
Using prepared starter
Making natural yeast bread 45
• Preparing the starter 45
• Natural yeast bread 46

Automatic programs for foods other than bread
Quick bread 48
Soy scones 50
Rice flour cake 52
Cake 54
Vegetable cake 56
Chocolate ganache 58
Milk jam 60
Jam 62
Fruit compote 64
Amazake 66
Sweet bean paste 68
Mochi 70

Automatic dough making
White bread dough 72
Crusty bread dough 73
Enriched dough 74
Natural yeast dough 75
Pizza dough 76
8-minute dough 77
Udon / Pasta 78

Bread making with manual functions
About the manual functions 80
Manual functions 81
• Knead 81
• Rise 82
• Bake 83
Convenient features 84

• My Knead 84

When needed

Cleaning 86
Frequently asked questions 88
Unsatisfactory results 92
If you make a mistake 99
Troubleshooting 100
Display messages 101
Specifications 102
Optional accessories 103
Warranty and after-sales service 103

Safety precautions

Always follow these instructions

These instructions must be followed to prevent personal injury and damage to property.
■ The severity of harm or damage from incorrect use is classified as follows.

WARNING Risk of death or serious injury.	CAUTION Risk of minor injury or damage to property.

■ The following symbols indicate the instructions to follow.

Prohibited actions.	Required actions.

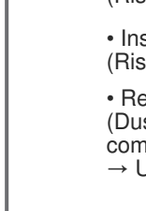

WARNING

To prevent fire, burns and electric shock...

Do not touch the steam vent.

• Take particular care around children. (Risk of burns.)

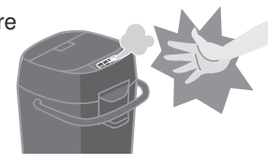

Power plug and cord

• Do not damage the power cord or plug.

Do not scratch, modify, place near hot surfaces, bend forcefully, twist, pull, place heavy objects on, bundle or pinch them.

(Risk of electric shock or fire from a short circuit.)

→ Consult your retailer for repairs.
• Do not use a damaged cord or a loose outlet.
(Risk of electric shock or fire from a short circuit.)
• Do not connect or disconnect the plug with wet hands. (Risk of electric shock.)

• Use a dedicated 100 V AC outlet rated at 15 A or higher.
(Risk of electric shock or fire.)

• Insert the plug fully.
(Risk of smoke, fire or electric shock.)

• Remove dust from the plug regularly.
(Dust on the pins can absorb moisture, compromise insulation and cause a fire.)
→ Unplug and wipe with a dry cloth.

If an abnormality or fault occurs, stop using the appliance immediately and unplug it.
(Risk of smoke, fire, electric shock or injury.)

Examples of abnormalities or faults
• The plug or cord becomes unusually hot.
• The cord is damaged or power is intermittent.
• The appliance becomes deformed or unusually hot.
• An unusual rotating noise occurs during operation.
→ Ask your retailer to inspect and repair it immediately.

CAUTION

To prevent fire and burns...

To prevent accidents...

• Keep out of reach of young children.
• Do not let children or people unfamiliar with the appliance use it unsupervised.
(Risk of burns, electric shock or injury.)

• Do not immerse the appliance in water or splash it with water.
(Risk of electric shock or fire from a short circuit.)

• Never disassemble, repair or modify the appliance yourself.
(Risk of fire, electric shock or injury.)
→ Consult your retailer for repairs.

Handling the appliance and bread pan

• Do not use on an unstable surface or a tablecloth.
• Take care where you set down the hot bread pan. (Risk of falling or fire.)
• Do not use on carpets or other heat-sensitive coverings. (Risk of fire.)
• Do not use on surfaces made slippery by flour, grease or dust.
• Remove flour and other deposits and place at least 10 cm from the edge.
(The appliance may slip and fall.)
• Do not use close to walls or furniture.
• Leave at least 5 cm clearance.
(Risk of deformation or discolouration.)

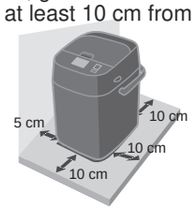

• Do not touch hot parts such as the bread pan, appliance body, vents, interior, heater or inner lid. (Risk of burns.)
→ Always use oven mitts to remove the bread pan.
• Do not use wet mitts.
(They conduct heat readily and may cause burns.)

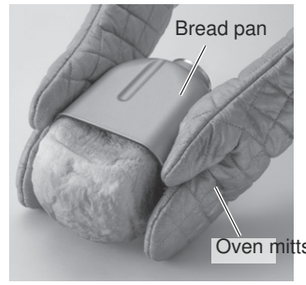

• Do not touch hot parts during use or for a while afterwards. (Risk of burns.)

• Measure ingredients and select programs correctly.
(Dough that scatters or overflows can burn on the heater, producing smoke or causing a malfunction.)

Power plug

• Do not press on the base of the cord when storing the plug in the cord compartment (p. 6).
(Risk of electric shock or fire from a short circuit.)

• Unplug when not in use.
(Risk of electric shock or fire from electrical leakage.)

• Always hold the plug, not the cord, when unplugging.
(Risk of electric shock or fire from a short circuit.)

Important operating notes

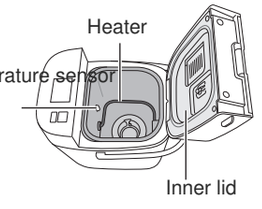

• Do not cover the lid with a cloth or similar item.
• Keep the handle lowered during use.
• Do not place in a damp area or near a flame.
• Do not apply excessive force to the parts shown on the right.
(Risk of damage or deformation.)
• If you have food allergies, consult your doctor before use.
• This appliance is not designed for use in vehicles, boats or outdoors.

Parts and accessories

Before first use, wash the bread pan, kneading blade and accessories (p. 86).

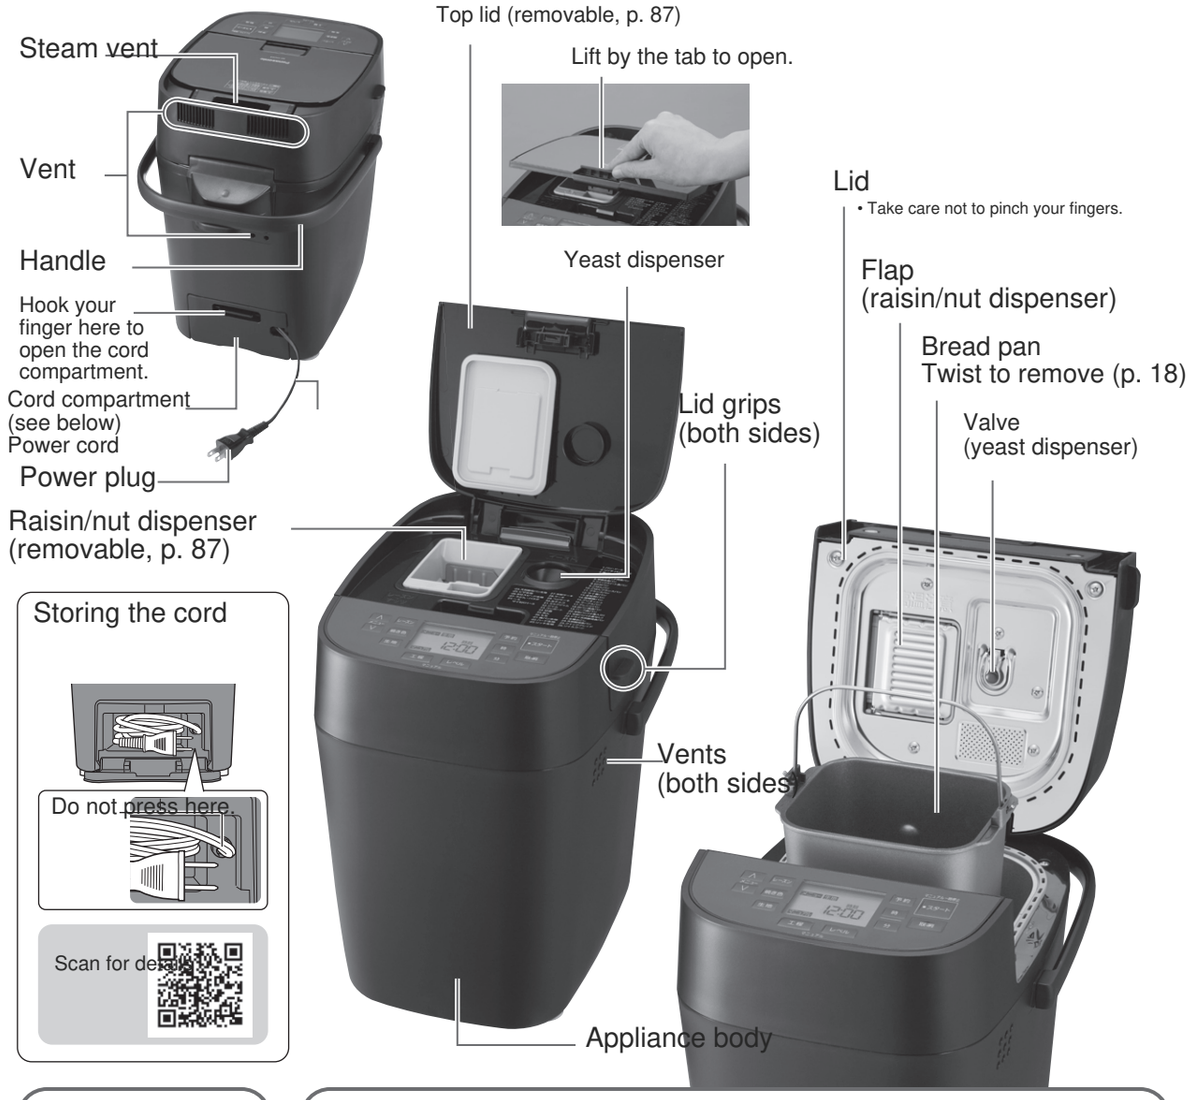

Storing the cord

Scan for details



Kneading blade (p. 18)



Noodle/mochi blade (pp. 70, 78)

Accessories

Starter container (with lid, p. 45)

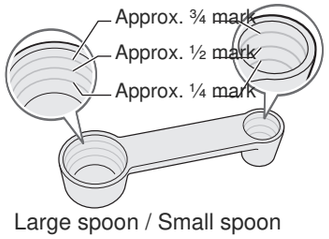

Large spoon / Small spoon

Measuring spoon

"1 large" means one large supplied spoonful.

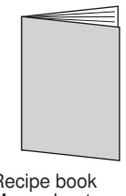



Recipe book
Menu sheet

refer to standard measuring spoons sold separately.

Control panel (The display goes out when unplugged.)

The display below is an illustration.

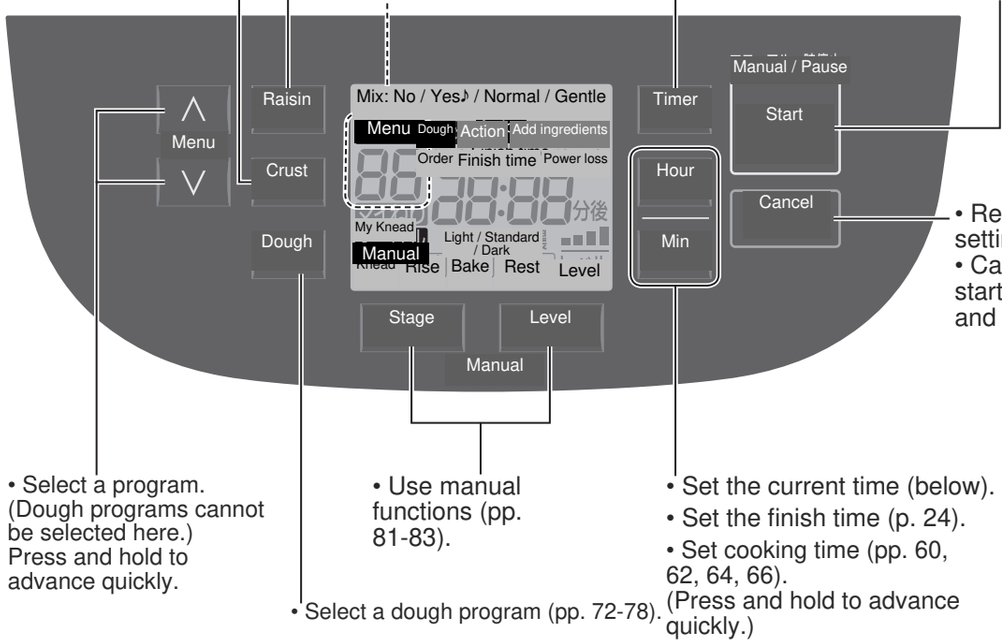

• Pressing Start to begin cooking saves the selected program and settings. These settings appear first the next time you select a program.

Setting the clock

• The clock uses a 24-hour format.

1 Plug in the appliance.
• The clock cannot be set unless it is plugged in.

2 Press and hold Hour or Minute. (The time display flashes.)

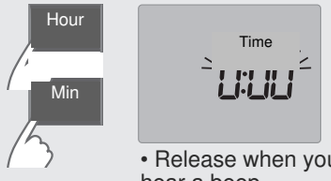

• Release when you hear a beep.

3 Set the time.
• Adjust while the time display is flashing.
(Example: setting it to 3:30 pm.)

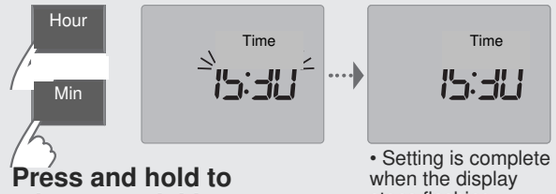

Press and hold to advance quickly.

• Setting is complete when the display stops flashing.

4 Unplug the appliance.

Automatic programs (select with ▲/▼)

メニュー

Program no. (Reference page)	Program	Raisin	Gentle mix	Crust	Timer	Time (approx.)	Stages
1 (p. 18)	Pain de mie	●	●	●	●	4 hr 50 min	Knead | Rest*1 | Rest | Knead | Rise | Bake
2 (p. 25)	Rich pain de mie	●	●	●	–	4 hr 50 min	Knead | Rest / Knead | Rest | Knead | Rise | Bake
3 (p. 26)	White bread	●	●	●	●	4 hr	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
4 (p. 26)	Soft white bread	●	●	●	●	4 hr 20 min	Rest*1 | Knead | Rest | Knead | Rest | Knead | Rise | Bake
5 (p. 27)	Sandwich bread	●	–	–	●	3 hr	Knead*2 | Rest*1 | Rest | Knead | Rise | Bake
6 (p. 28)	Rapid white bread	●	●	●	–	1 hr 55 min	Knead | Rest*3 | Knead | Rise | Bake
7 (p. 29)	Quick sweet bread	–	–	●	–	2 hr 20 min	Knead | Rest | Knead | Rise | Bake
8 (p. 30)	60-minute bread	–	–	–	–	1 hr	Knead | Rise | Bake
9 (p. 31)	Cooked-rice bread	●	●	●	●	4 hr	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
10 (p. 32)	Rice French bread	●	●	–	●	4 hr 40 min	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
11 (p. 32)	French bread	●	●	–	●	5 hr	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
12 (p. 33)	Rye bread	●	–	–	●	5 hr	Knead*2 | Rest*1 | Rest | Knead | Rise | Bake
13 (p. 34)	Wholemeal bread	●	●	–	●	5 hr	Knead*2 | Rest*1 | Rest | Knead | Rise | Bake
14 (p. 35)	Low-carb bread	●	–	●	–	2 hr 5 min	Knead | Rest | Knead | Rise | Bake
15 (p. 36)	Brioche	●	●	●	–	3 hr 15 min	Knead | Rise | Add butter | Knead | Rise | Bake
16 (p. 37)	Marbled bread	–	–	–	–	4 hr	Knead | Rest / Knead | Add ingredients | Rise | Bake • Add the marbling ingredients by hand 69-94 minutes after starting.
17 (p. 38)	Custom bread	●	–	–	–	2 hr 15 min	Knead | Rest | Knead | Rise | Manual work | Rise | Bake • Carry out the manual work 55 minutes after starting.
18 (p. 40)	Pale-crust bread	–	–	–	●	3 hr 50 min	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
19 (p. 40)	Half loaf	–	–	–	●	3 hr 35 min	Knead*2 | Rest*1 | Rest / Knead | Rise | Bake
20 (p. 41)	Rice flour bread (with wheat)	●	–	●	●	2 hr 30 min	Rest*1 | Rest | Knead | Rise | Bake
21 (p. 42)	Rice flour bread (no wheat)	●	–	–	●	1 hr 55 min	Knead | Scrape flour | Knead | Rest*1 | Rest*3 | Knead / Rise | Bake • Scrape down the flour by hand 5 minutes after starting.
22 (p. 44)	Dried natural yeast bread	●	●	●	●	4 hr 10 min	Knead*2 | Rest*1 | Rest | Knead | Rest | Knead | Rise | Bake
23 (p. 45)	Prepare starter	–	–	–	–	24 hr	Rise
24 (p. 46)	Natural yeast bread	●	●	●	●	7 hr (+ 24 hr*4)	Rest*1 | Knead | Rise | Knead | Rise | Bake

▽ Approximate time when dry yeast or dried natural yeast is released. (A sound is heard; p. 100.)
▼ Approximate time to add raisins and other ingredients (p. 21). When "Add ingredients" appears and the alert sounds, add them by hand.

Knead
The blade rotates to knead the dough (sound is heard).
• It may stop for up to 13 minutes.

Rest
Allows flour and water to combine (no movement).

Rise
Temperature is controlled to let the dough rise (very little movement).

Bake
Bakes the dough.

*1 When using the timer, the appliance waits before the next stage. It may remain still for up to 11 hours.
*2 With the timer, kneading alone takes place immediately after setting, followed by a waiting period.
*3 This stage may be omitted.
*4 Preparing the natural yeast starter takes 24 hours.

Continued on the next page

Automatic programs (select with ▲/▼), continued

メニュー

Program no. (Reference page)	Program	Available functions: Raisin	Gentle mix	Crust	Timer	Time (approx.)	Stages	
25 (p. 48)	Quick bread	–	–	●	–	54 min	Knead | Scrape flour | Knead | Shape | Rest*1 | Bake | Extra bake	• Scrape down the flour 2 minutes after starting, then shape 1 minute later, by hand.
26 (p. 50)	Soy scones	–	–	●	–	58 min	Knead | Scrape flour | Knead | Shape | Rest*1 | Bake | Extra bake	• Scrape down the flour 2 minutes after starting, then shape 2 minutes later, by hand.
27 (p. 52)	Rice flour cake	–	–	–	–	1 hr 40 min	Knead | Scrape flour | Knead | Rest*1 | Bake | Extra bake	• Scrape down the flour by hand 7 minutes after starting.
28 (p. 54)	Cake	–	–	●	–	1 hr 30 min	Knead | Scrape flour | Knead | Rest*1 | Bake | Extra bake	• Scrape down the flour by hand 12 minutes after starting.
29 (p. 56)	Vegetable cake	–	–	–	–	55 min	Bake | Extra bake	
30 (p. 58)	Chocolate ganache	–	–	–	–	17 min	Mix | Extra mix	
31 (p. 60)	Milk jam	–	–	–	–	1 hr 10 min–2 hr 10 min	Heat	ieve your preferred consistency.
32 (p. 62)	Jam	–	–	–	–	1 hr 30 min–2 hr 30 min	Heat | Extra heat	If to suit the recipe.
33 (p. 64)	Fruit compote	–	–	–	–	1–2 hr	Heat | Extra heat	If to suit the recipe.
34 (p. 66)	Amazake	–	–	–	–	6–10 hr	Heat | Scrape rice | Heat (Scrape rice)	• Scrape down the rice grains by hand 20 minutes after starting.
35 (p. 68)	Sweet bean paste	–	–	–	–	1 hr	Knead	
36 (p. 70)	Mochi	–	–	–	–	1 hr (+30 min*2)	Cook | Open lid | Pound	• Open the lid yourself 50 or 55 minutes after starting.

Knead
The blade rotates to kneading the dough (sound is heard).
• It may stop for up to 13 minutes.

Rest
Allows flour and water to combine (no movement).

Bake
Bakes the dough.

*1 This stage may be omitted.
*2 First wash the glutinous rice and drain in a sieve for 30 minutes.

Automatic dough programs (select with Dough)

生地

Program no. (Reference page)	Program	Available functions: Raisin	Gentle mix	Crust	Timer	Time (approx.)	Stages
d1 (p. 72)	White bread dough	●	●	–	–	1 hr	Knead | Rest*3 | Knead | Rise
d2 (p. 73)	Crusty bread dough	●	●	–	–	2 hr	Knead | Rest*4 | Knead | Rise
d3 (p. 74)	Enriched dough	●	●	–	–	1 hr	Knead | Rest*3 | Knead | Rise
d4 (p. 75)	Natural yeast bread dough	●	●	–	–	4 hr (+24 hr*5)	Knead | Rise | Knead | Rise
d5 (p. 76)	Pizza dough	–	–	–	–	45 min	Knead | Rise | Knead | Rise
d6 (p. 77)	8-minute dough	–	–	–	–	8 min	Knead
d7 (p. 78)	Udon / Pasta	–	–	–	–	15 min	Knead

▽ Approximate time when dry yeast or dried natural yeast is released. (A sound is heard; p. 100.)
▼ Approximate time to add raisins and other ingredients (p. 21). When "Add ingredients" appears and the alert sounds, add them by hand.

Knead
The blade rotates to knead the dough (sound is heard).
• It may stop for up to 12 minutes.

Rest
Allows flour and water to combine (no movement).

Rise
Temperature is controlled to let the dough rise (very little movement).

*3 The rest may be omitted and kneading may continue without a break.
*4 Depending on room temperature, the appliance may remain still for up to 40 minutes.
*5 Preparing the natural yeast starter takes 24 hours.

Automatic bread making: steps and tips

Prepare | Make the dough | Bake

Pages 18, 72–74, 76

Bread made with dry yeast or dried natural yeast

Natural yeast bread made with prepared starter

Gather the tools

Prepare the natural yeast starter

Add prepared starter

Add flour, water and other ingredients

Set up the bread maker

Fit the kneading blade.

Add flour, water and other ingredients

Dry yeast or dried natural yeast

Add

Page 45

* Made from Hoshino Natural Yeast Bread Starter.

Pages 46, 75

Bake in the bread pan

Dry yeast or dried natural yeast is added automatically.

Except 60-minute bread, natural yeast bread and 8-minute dough.

When adding ingredients (p. 20) or butter (p. 36)

Shape by hand

Remove the dough

Shape

Let rise

Bake in an oven or similar appliance

Remove the bread

Remove the bread

Recipe book, pp. 23-37

Use commercially available tools.

Oven mitts

Digital scale (1 g increments or smaller)



Tips for successful bread!

Always weigh water and flour! Use a digital scale to measure by weight. For accuracy, use a scale that measures in increments of 1 g or less.

Use a digital scale!

Chill the water in summer or a warm room.

Water has a major effect on rise. In summer, or at room temperatures of about 25°C or above, ingredients also become warmer. Add ice to chill the water to about 5°C. Remove the ice before use.

Chill in hot weather (remove the ice)

Homemade bread varies in shape and rise every time.

Bread making is sensitive to temperature, humidity, ingredients and timer settings. Even when you bake as usual, small differences in conditions affect the loaf's shape and rise (pp. 92, 93).

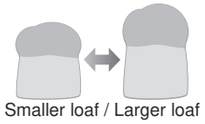

Smaller loaf / Larger loaf

Freshness matters! Are your ingredients stored correctly?

Yeast, which makes bread rise (p. 15), is perishable, just like meat and fish. Always refrigerate dry yeast, dried natural yeast, natural yeast bread starter and prepared starter. Use prepared starter within one week. Seal dry yeast and dried natural yeast after opening, and put the lid on prepared starter.

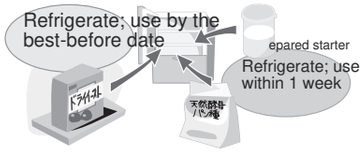

Basic bread ingredients

You can add ingredients of your choice to the basic recipe.
(The ingredients and quantities vary with the bread you want to make.)

Flour (bread flour / wheat flour)

Role When kneaded with water, flour proteins combine to form gluten.

Tip
- No need to sift.
- Protein content varies, so different flours rise differently.
- Always weigh flour. Do not use a measuring cup.



For bread making

Bread flour with a high protein content (12-15%) is the standard choice.
- Check the information on the bag.
- Nisshin Seifun Welna “Camellia” is recommended.

Fats (butter, unsalted butter, margarine, shortening)

Role Produces a fine, soft, moist crumb.

Tip
- Use solid, not melted.
- Unsalted butter is recommended.

Dairy products (skim milk powder, milk)

Role Improves flavour, aroma and colour, and helps keep bread from going hard.

Tip
- When using milk, reduce the water by the same amount.

Water

Role Combines with flour during kneading to form gluten.

Tip
- Use cold water (about 5°C, like iced water) for:
  - Rapid white bread
  - Quick sweet bread
  - Rice French bread
  - French bread
  - Rye bread
  - Wholemeal bread
  - Brioche
  - Custom bread
  - Room temperatures of 25°C or above.
- Alkaline water is unsuitable.

- Always weigh water. Do not use a measuring cup.



Sugars (sugar, brown sugar, honey)

Role Feeds the yeast and promotes fermentation and maturation. Also improves flavour, aroma and crust colour.

Tip
- Crush large granules into smaller ones.
- More sugar produces a slightly darker crust; less produces a lighter crust.
- Low-calorie sweeteners cannot be used.

Salt

Role Adds flavour and gives the bread a chewy texture. Also inhibits the growth of unwanted microorganisms.

Eggs

Role Improves flavour, aroma and colour, and strengthens gluten.

Bread yeast

Role Bread yeast feeds on sugar and produces carbon dioxide, making the bread rise.

Bread structure
Traps the carbon dioxide and expands.

Tip
- Yeast is alive. Freshness affects rise: use before the best-before date and store sealed in the refrigerator.
- Dry yeast and dried natural yeast rapidly lose their raising power when they absorb moisture.

Dry yeast

For soft, fluffy bread, normally use dry yeast that needs no pre-fermentation.
- Fresh yeast and baking powder cannot be used.
- Nisshin Seifun Welna “Super Camellia” is recommended (sachets or sticks are convenient for storage).

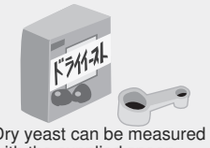

Dry yeast can be measured with the supplied spoon.

Natural yeast bread starter

Yeast cultivated from natural ingredients such as grains is used to make natural yeast bread with a chewy texture.

For Dried Natural Yeast Bread

- Use dried natural yeast that does not require starter preparation (called “dried natural yeast” hereafter). Use the dedicated program without pre-fermentation.
(It can be measured with the supplied spoon.)

For Natural Yeast Bread

- Ferment the bread starter with the Prepare Starter program (p. 45) before using it.
- Hoshino Natural Yeast Bread Starter is recommended for its reliable fermentation (5 × 50 g sachets).
Order from: Tomizawa Shoten Co., Ltd. https://tomiz.com/

For enquiries other than online: (042) 776-6488

Baking powder

Used for quick bread, soy scones, rice flour cake, cake and vegetable cake.
- It will not raise white bread or soft white bread.

Low-carb bread mix

For Low-carb Bread

- Use a low-carb bread mix.
- For mixes other than Nisshin Seifun Welna SD-LCM10, follow the recipe on the package.

Rice flour

Tip Rice flour does not contain the protein needed for bread to rise. Ordinary rice flour alone cannot be used to make bread. Use the specified flour for each program.

For Rice Flour Bread (with wheat)

- Use Glico Nutrition “Kome no Kaori (with gluten)”.
- This is bread-making rice flour with added wheat gluten.

For Rice Flour Bread (no wheat)

- Use Glico Nutrition “Kome no Kaori (gluten-free)”.
- Finely milled rice flour without gluten.

- Bread-making rice flour contains wheat gluten and must not be eaten by people with wheat allergies.
- Pay close attention to ingredients and cleaning methods, and consult your doctor before use.

➡ Order from: Ezaki Glico Co., Ltd.
Glico Direct Shop
- Online orders: https://shop.glico.com/

What is gluten?
When flour is kneaded with water, its proteins combine to form gluten. Gluten traps the carbon dioxide produced by yeast, expands and forms the bread’s structure.

Basic bread ingredients (continued)

Approximate weight per level supplied spoon

	Large spoon	Small spoon
Sugar	About 8.5 g	About 3 g
Skim milk powder	About 6 g	About 2 g
Salt	—	About 5 g
Dry yeast	—	About 2.8 g
Dried natural yeast	—	About 3.3 g
Original starter	About 10 g	—
Prepared starter	About 12.5 g	—

Adding eggs or milk

Reduce the water by the amount of egg or milk added.
• Eggs: up to 1
• Milk: up to half the water quantity

• Put the egg or other ingredient in the container first, then add and weigh the water.

• Do not use the timer. (Risk of spoilage in summer.)

Changing ingredient quantities or types

Use these quantities as a guide when adjusting the recipe to your preference.

Ingredient	To increase	To reduce
Butter	Up to about 2.5 times (except low-carb bread and brioche)	Down to about half
Sugar	Up to about twice (about 1.5 times for rich pain de mie and quick sweet bread)	Down to about half
Skim milk powder	Up to about twice	May be omitted
Salt	Do not increase	May be omitted (down to about half for natural yeast bread and rice flour bread with wheat)

• Margarine can replace butter, honey can replace sugar, and milk can replace skim milk powder (p. 14).
- Use no more than 25 g honey.
- 1 large spoon of skim milk powder is equivalent to 70 g (about 70 mL) milk.
• More sugar darkens the crust. Less sugar makes the crust lighter and the loaf shorter.
• Omitting salt produces bread with less bite.

Bread mixes

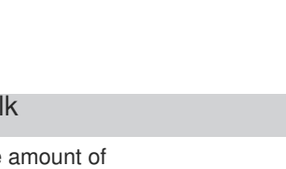

All basic ingredients and dry yeast are packed in individual portions.

• Premium range developed by renowned bakery Maison Kayser

• Low-carb bread mix for those who want bread with fewer carbohydrates

Product / Mode / Automatic program	Premium white bread mix (Gluten) SD-PMP10	White bread mix SD-MIX100A	Rapid white bread mix SD-MIX105A	Soft white bread mix SD-MIX62A	Sweet white bread mix SD-MIX30A	Low-carb bread mix SD-LCM10
Pain de mie	○	○		○		
White bread	○	○			○	
Soft white bread				○		
Sandwich bread	○	○		○		
Rapid white bread			○			○
Cooked-rice bread		○		○		
Low-carb bread						○
Dried natural yeast bread		○		○		
Natural yeast bread		○			○	

How to use

In the bread pan:
1 Add the bread mix.
2 Add the water quantity stated on the packet.
* For low-carb bread, add unsalted butter.
In the yeast dispenser:
3 Add the dry yeast quantity stated on the packet.

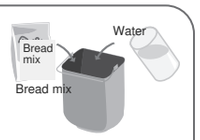

Available from retailers or Panasonic's official online store (p. 103).

Additional ingredients

These ingredient and quantity guidelines are based on white bread (p. 26). You can add ingredients of your choice to the basic recipe.

• Ingredients may affect crust colour, rise and loaf height.

Add your favourites to the basic ingredients...

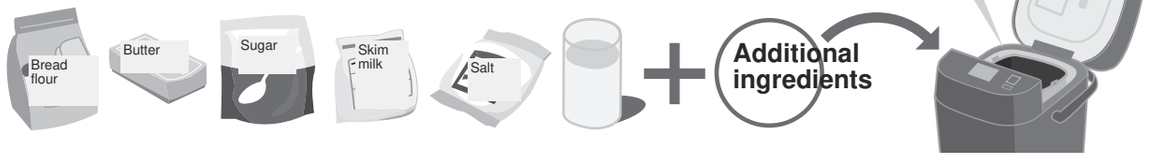

	Vegetables	Grains, including rice flour	Fruit juice
			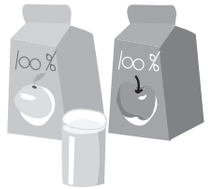
	15-20% of the flour weight (guide: 50 g) Examples: • Carrot: grate. • Pumpkin: boil, mash and cool. • Spinach: boil, finely chop and cool.	10-20% of the flour weight (guide: 30 g) Examples: rice flour, oatmeal, shiratamako glutinous rice flour, rye, wholemeal flour, roasted soybean flour, soybean flour.	Up to the water quantity* Examples: 100% orange, apple or tomato juice. → Chill thoroughly in the refrigerator.
Flour quantity	No change	Reduce by the weight of the grain. Example: Rye 30 g (12% of 250 g) Wheat flour 220 g	No change
Water quantity	Reduce by 80% of the vegetable weight. Example: Boiled pumpkin 50 g Water: 140 g (mL) 180 g (mL) minus 80% of 50 g (mL)	No change	Reduce by the amount of juice. Example: Orange juice 100 g (about 100 mL) Water: 80 g (mL) 180 g (mL) minus 100 g (mL)
	• Do not use the timer.		• Do not use the timer.

* Juice is not recommended for rich pain de mie or low-carb bread.

Making pain de mie

Time: about 4 hr 50 min

Add ingredients

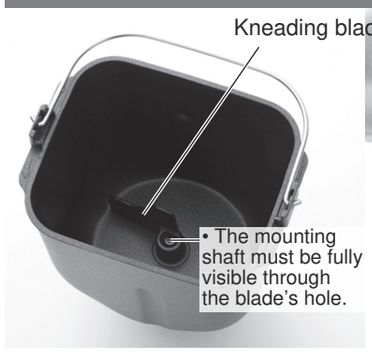

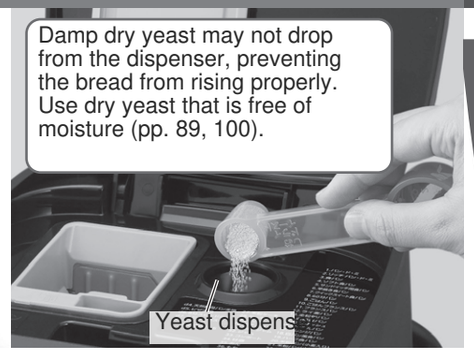

Set

Remove

1 Remove the bread pan and fit the kneading blade.

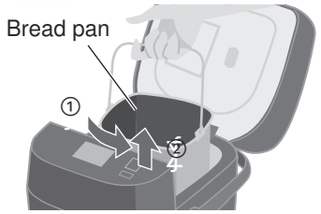

1 Twist the pan in the direction of the arrow.
2 Lift it out.
3 Push the blade firmly onto the shaft.

Pain de mie	1,120 kcal (per loaf)
Bread flour	250g
Butter	15g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Water	190g(mL)
Dry yeast	1.4g(small 1/2)

* At room temperatures of 25°C or above, use water chilled to about 5°C and reduce it by 10 g (mL).

2 Add flour, water and the other ingredients to the pan, except the dry yeast.

1 Add the flour and other ingredients, except dry yeast, in a mound at the centre.
2 Pour the water around the edges.

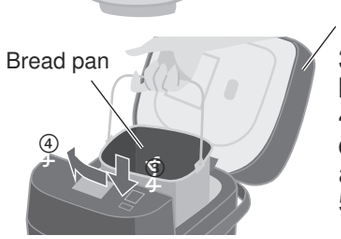

3 Put the dry yeast in the yeast dispenser.
4 Select program 1.
5 Close both lids securely and press Start.
6 When baking finishes and the beeps sound, switch off.
7 Remove the pan, set it on a surface covered with a cloth, and let it cool for about 2 minutes.
8 Remove the bread and let it cool.

• The pan handle is designed to stop partway down to make the pan easier to remove. You do not need to lower it fully.

3 Put the dry yeast in the yeast dispenser.

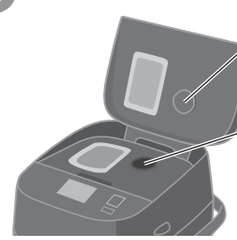

• Rubbing causes static electricity, which may prevent the yeast from dropping.

■ White bread mix or soft white bread mix can also be used (p. 16). Add 5 g extra butter and 10 g (mL) extra water, and halve the dry yeast quantity.

■ Premium white bread mix (plain) can also be used (p. 16). Halve the dry yeast quantity.



Use a digital scale!

4 Select program 1.

■ Adding raisins or other ingredients → Raisin (P.20) (P.22)

■ Selecting crust colour (p.) → Crust

■ Setting the finish time (p.) → Crust

5 Close both lids securely and press Start.

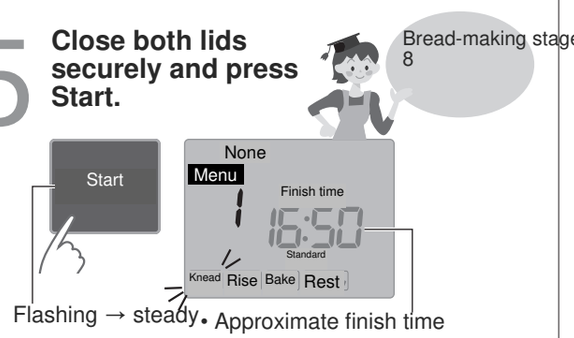

• Do not open the lid after starting: dry yeast may spill out. You may open it when adding ingredients by hand (p. 21), because yeast dispensing has already finished.
• A sound is heard when dry yeast is dispensed.

• Operating sounds: see p. 100.

6 When baking finishes and the beeps sound, switch off.



1 Press Cancel.
2 Unplug.

7 Remove the pan, set it on a surface covered with a cloth, and let it cool for about 2 minutes.

• Take care where you put the hot pan.
• Leaving the loaf in the pan too long may cause it to shrink and collapse.

8 Remove the bread and let it cool.

• If your mitts become hot, set the pan back on the cloth between attempts.

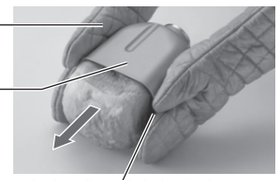

• Do not use a knife, fork or chopsticks: they damage the non-stick coating.
• Do not touch the underside. (The blade may turn and crush the inside of the loaf.)

• After removing the bread, check that the kneading blade is still in the pan. If not, remove it from the bottom of the loaf.

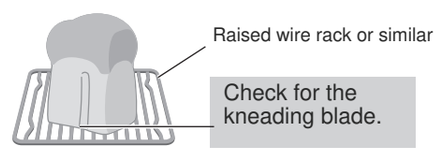

(Cutting the bread with the blade inside will damage the blade.)

Convenient features: Raisin

Raisin: add your favourite ingredients to bread

You can add ingredients of your choice. Depending on the ingredients, select automatic dispensing (“Yes” on the display) or manual adding (“Yes ♪”).

- Put raisins, walnuts and similar ingredients in the raisin/nut dispenser for automatic dispensing.
- Ingredients that cannot be dispensed automatically, such as cheese and chocolate (p. 21), must be added by hand when the beeps sound.
- To retain the shape of added ingredients, select “Yes / Gentle mixing” or “Yes ♪ / Gentle mixing” (p. 22).

Follow each recipe’s ingredient quantities and limits for additions. Otherwise, ingredients may fly out of the pan and burn on the heater, causing odours or smoke.

Automatic dispensing (leave it to the bread maker)

Preparation: Put your chosen ingredients in the raisin/nut dispenser.

Up to 100 g total in the dispenser.

Raisin/nut dispenser

1 Press Raisin and select “Yes / Normal”.

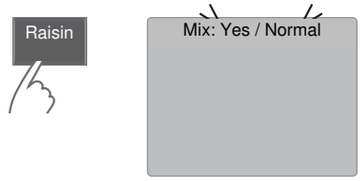

■ To retain the shape of ingredients (p. 22)

2 Press Start.

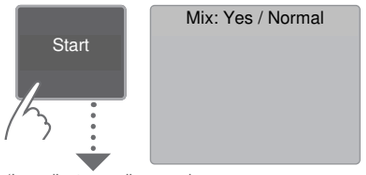

(Ingredients are dispensed automatically.)

- Kneading pauses briefly.
- A small amount of ingredients may stick inside the dispenser.
- In summer or when using the timer, sugar-coated fruit may become sticky as the sugar melts, and may not dispense.

Suitable for automatic dispensing
Dry ingredients that do not melt easily

Dried fruit (up to 100 g)

Raisins, orange peel, etc.

➡ Cut into pieces no larger than 5 mm.

Nuts (up to 100 g)

Cashews, walnuts, etc.



➡ Crush into pieces no larger than 5 mm.

Do not roast.

Green peas* (up to 100 g)

➡ Dry thoroughly.

Olives* (up to 100 g)

➡ Remove stones, cut into quarters and dry thoroughly.

Ham / Bacon* (up to 100 g)

➡ Cut into 10 mm strips.

- Spread ingredients level. Heaping them up may prevent the dispenser from opening.

* Do not use these ingredients with the timer. (They may spoil, especially in summer.)

After selecting a program...

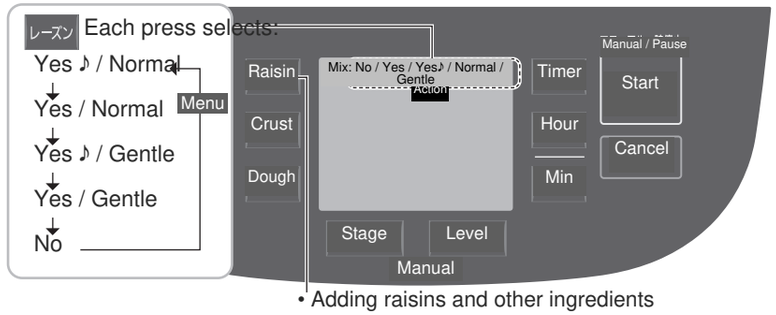

- Adding raisins and other ingredients

■ Add unsuitable ingredients by hand.

Unsuitable for automatic dispensing
Sticky, moist or easily melted ingredients may cling to the dispenser.
Add by hand when the alert (♪) sounds.

1 Press Raisin and select “Yes ♪ / Normal”.

■ To retain the shape of ingredients (p. 22)

2 Press Start.

- Once the timing is determined, the display shows the time remaining until the addition.

3 When the beeps sound, open the lid.



- The raisin/nut dispenser is open.

4 Add the ingredients to the pan, then close the lid.

Within 3 minutes

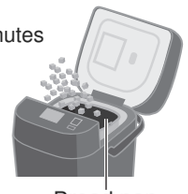

Bread pan

5 Press Start again.

- Even if you do not press Start, a beep sounds and operation resumes automatically after 3 minutes.

Alcohol-soaked fruit
Chopped vegetables, e.g. onion

Cheese
Chocolate

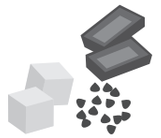

Small ingredients, e.g. sesame seeds

- Cut large, hard ingredients into pieces no larger than 5 mm.
- Larger quantities of additions reduce the rise.

■ When to add ingredients

The alert time varies with the program and room temperature.

Pain de mie: 1 hr 5 min-1 hr 45 min
Rich pain de mie: 2 hr 5 min-2 hr 15 min
White bread: 1 hr-1 hr 30 min
Soft white bread: 1 hr 45 min-2 hr 15 min
Sandwich bread: 1 hr 10 min-1 hr 20 min
Rapid white bread: 30-35 min
Cooked-rice bread: 1 hr 5 min-1 hr 35 min
Rice French bread: 50 min-1 hr 20 min
French bread: 40 min-1 hr 25 min
Rye bread: 1 hr 35 min-2 hr 50 min
Wholemeal bread: 1 hr 35 min-2 hr 50 min
Low-carb bread: 40-45 min
Brioche: 1 hr-1 hr 10 min
Custom bread: 35-40 min
Rice flour bread (with wheat): 45 min-1 hr
Rice flour bread (no wheat): 40-50 min
Dried natural yeast bread: 1 hr 30 min-1 hr 55 min
Natural yeast bread: 3 hr 30 min-3 hr 35 min
White bread dough: 25-40 min
Crusty bread dough: 35 min-1 hr
Enriched dough: 20-35 min
Natural yeast dough: 3 hr 30 min-3 hr 35 min

Convenient features: Gentle mixing

After selecting a program...

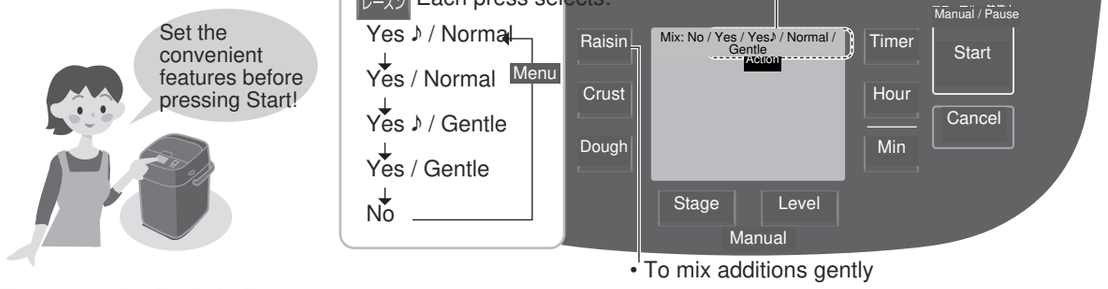

■ First read “Raisin” on pp. 20-21.

Gentle mixing helps delicate additions retain their shape.

1 Press Raisin and select “Yes ♪ / Gentle” or “Yes / Gentle”.

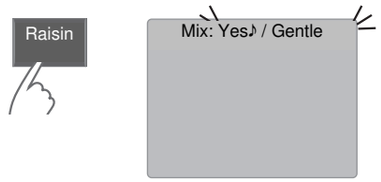

2 Press Start.

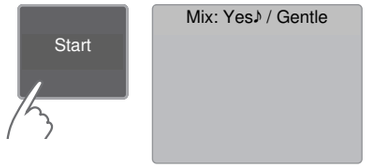

• Programs with Gentle mixing: pp. 8-11.

When using Gentle mixing:
• Add 10 g (mL) extra water, except for rich pain de mie and brioche.
• Freeze chocolate beforehand.

Ingredients suited to gentle mixing

Soft ingredients that break up easily

Automatic: “Yes”

Olives / Green peas

Ham / Bacon / Sausages

By hand: “Yes ♪”

Cheese

Chocolate

Cooked vegetables (sweet potato, potato, pumpkin, etc.)

Cooked beans / Sun-dried tomatoes, etc.

• Some ingredients may not retain their shape.

Take care with these additions!

• Cut large, hard ingredients into pieces no larger than 5 mm.

• Hard ingredients may cause the fluoropolymer coating on the pan or other parts to peel. Handle with care.
• Accidentally swallowing flakes of this coating does not harm the body.

- Cereal
- Fruit granola
- Roasted or coated nuts
- Maple sugar crunch
- Pearl sugar
- Coarse sugar crystals
- Arare sugar
- Rock salt, etc.

• Raw fruits with strong protein-digesting enzymes prevent the bread from rising.

• Melon • Kiwi • Fig • Mango • Pineapple • Papaya, etc.

Crust colour

After selecting a program...

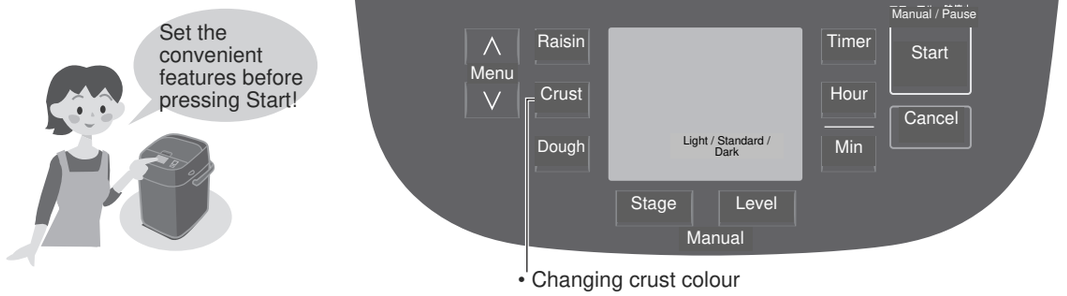

Crust colour: choose your preferred browning

Choose Light, Standard or Dark.

1 Press Crust colour and select your preferred colour.

2 Press Start.

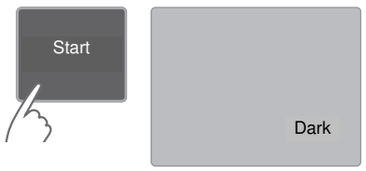

• Programs with Crust colour: pp. 8-10.

Convenient features: Timer

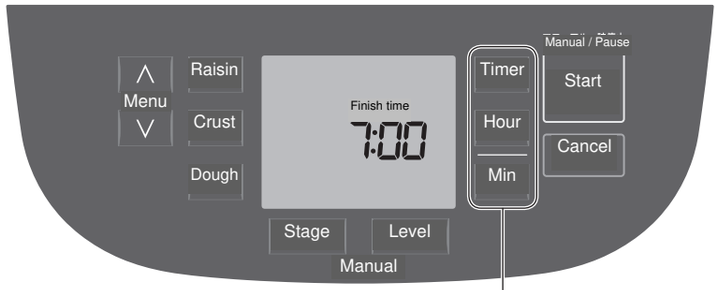

Timer: have bread ready at a chosen time

Useful for enjoying freshly baked bread in the morning.

1 Check that the clock is correct.

• If incorrect, set the clock (p. 7).

2 Select a program.

3 Press Timer.

4 Set the desired finish time.

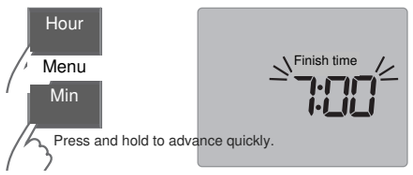

Only available finish times are displayed.
(See the list on the right.)

5 Press Start (timer set).

• When using Raisin or Crust colour:
1 Set Raisin and Crust colour.
2 Set the timer.

Available finish times

Time from now until completion:
Pain de mie: 4 hr 50 min-13 hr
White bread: 4-13 hr
Soft white bread: 4 hr 20 min-13 hr

Sandwich bread: 3-13 hr
Cooked-rice bread: 4-13 hr
Rice French bread: 4 hr 40 min-13 hr
French bread: 5-13 hr
Rye bread: 5-13 hr
Wholemeal bread: 5-13 hr
Pale-crust bread: 3 hr 50 min-13 hr
Half loaf: 3 hr 35 min-13 hr
Rice flour bread (with wheat): 2 hr 30 min-13 hr
Rice flour bread (no wheat): 1 hr 55 min-13 hr

Dried natural yeast bread: 4 hr 10 min-13 hr
Natural yeast bread: 7-10 hr

• Longer settings are unavailable because ingredients may spoil or results may deteriorate.
• The timer cannot be used for programs not listed above (pp. 8-11).

Example of available finish times

Program: Pain de mie
Current time: 8:30 pm (display: 20:30)
Available finish times: 1:20 am-9:30 am (1:20-9:30)

• Times outside this range cannot be set.

• Ingredients unsuitable for the timer: p. 20.

Rich pain de mie

Time: about 4 hr 50 min

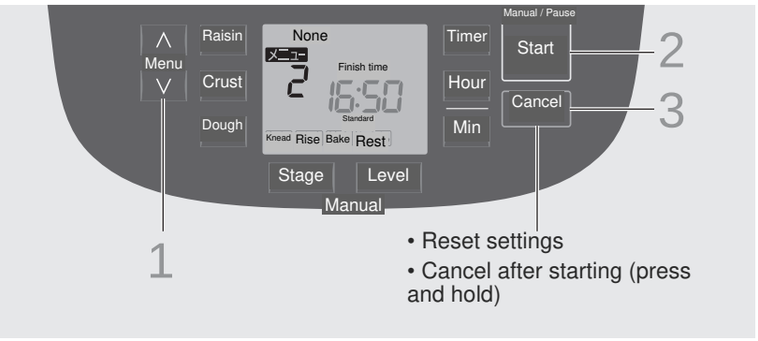

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Rich pain de mie	1,330 kcal (per loaf)
Bread flour	250g
Butter	10g
Sugar	21.5g(large 2½)
Salt	5g(small 1)
Sweetened condensed milk	15g
Cream	50g(about 50 mL)
Water	140g(mL)
Dry yeast	1.4g(small 1/2)

* At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).

• Do not add extra water when selecting Gentle mixing.

1 Select program 2.

■ Adding raisins or other ingredients → Raisin (20, 22)

■ Selecting crust colour (p. 23) → Crust

2 Press Start.

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

White bread / Soft white bread

Time:
White bread: about 4 hr
Soft white bread: about 4 hr 20 min

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

White bread	1,086 kcal (per loaf)
Bread flour	250g
Butter	10g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Water	180g(mL)
Dry yeast	2.8g(small 1)

* At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).

Soft white bread	1122kcal(per loaf)
Bread flour	250g
Butter	15g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Water	180g(mL)
Dry yeast	2.8g(small 1)

* At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).

• When using the timer, the program begins with a rest. The blade does not move immediately after starting.

1 White bread: select program 3. Soft white bread: select program 4.

White bread / Soft white bread

■ Adding raisins or other ingredients → Raisin (P.20) (P.22)

■ Selecting crust colour (p. 23) → Crust

■ Setting the finish time → Timer (P.24)

2 Press Start.

Bread-making stages: p. 8

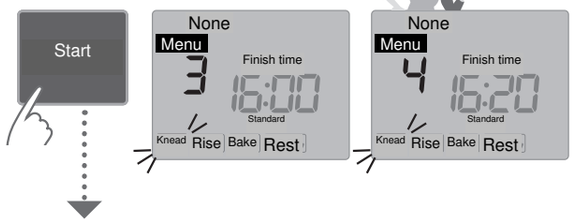

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

Sandwich bread

Time: about 3 hr

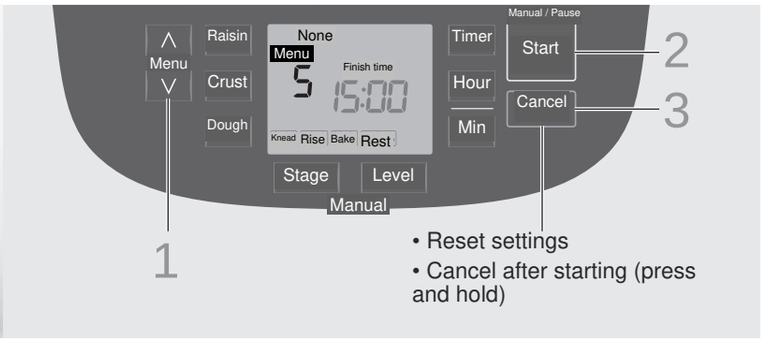

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Sandwich bread	1086kcal(per loaf)
Bread flour	250g
Butter	10g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Water	170g(mL)
Dry yeast	2.8g(small 1)

* At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).

• If the blade mark bothers you, trim it off.

■ Premium white bread mix (plain), white bread mix or soft white bread mix can also be used (p. 16). Reduce the water by 10 g (mL).

1 Select program 5.

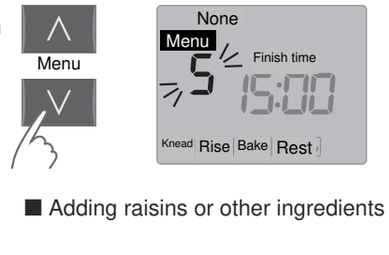

■ Adding raisins or other ingredients → Raisin (P.20)

■ Setting the finish time → Timer (P.24)

2 Press Start.

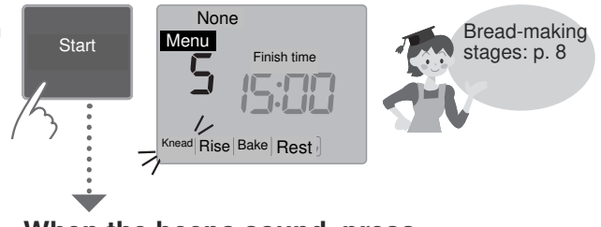

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

Rapid white bread

Time: about 1 hr 55 min

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Rapid white bread	1,200 kcal (per loaf)
Bread flour	280g
Butter	10g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Cold water (5°C)	200g(mL)
Dry yeast	4.2g(small 1½)

* At room temperatures of 25°C or above, reduce the water by 10 g (mL).

1 Select program 6.

■ Adding raisins or other ingredients ➡ Raisin (P.20) (P.22)

■Selecting crust colour ➡ Crust (P.23)

2 Press Start.

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

Quick sweet bread

Time: about 2 hr 20 min

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Quick sweet bread	1,312 kcal (per loaf)
Bread flour	250g
Butter	15g
Sugar	21.5g(large 2½)
Salt	5g(small 1)
Cold water (5°C)	140g(mL)
Honey	10g
Cream	50g(about 50mL)
Dry yeast	3.5g(small 1¼)

* At room temperatures of 25°C or above, reduce the water by 10 g (mL).

1 Select program 7.

■ Selecting crust colour ➡ Crust)

2 Press Start.

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

60-minute bread

Time: about 1 hr

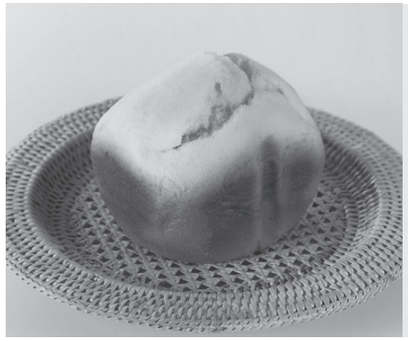

Preparation (p. 18)
1 Thoroughly dissolve 4.2 g dry yeast (1½ small spoonfuls) in 30 g (mL) lukewarm water until no lumps remain.
2 Fit the kneading blade in the pan.
3 Add flour and the other ingredients, except the yeast mixture and lukewarm water.
4 Fit the pan into the appliance, then add the yeast mixture and lukewarm water.

Ingredients

1,407 kcal (per loaf)

60-minute bread	
Lukewarm water	30g(mL)
Dry yeast	4.2g(small 1½)
Bread flour	280g
Butter	25g
Sugar	25.5g(large 3)
Skim milk powder	12g(large 2)
Salt	5g(small 1)
Beaten egg	25g(½ medium egg)
Lukewarm water	140g(mL)

* Lukewarm water: 35-40°C

1 Select program 8.

2 Press Start.

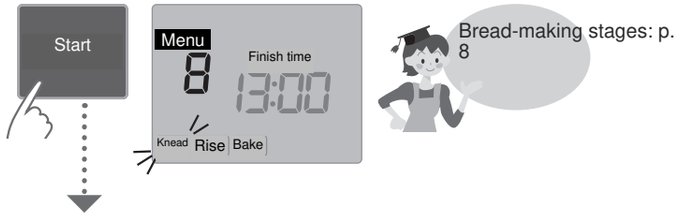

Bread-making stages: p. 8

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

Cooked-rice bread

Time: about 4 hr

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

1,272 kcal (per loaf)
(with 200 g cooked rice)

Cooked-rice bread	
Bread flour	210g
Cooled cooked white rice	100-200g
Butter	10g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Water	130g(mL)
Dry yeast	2.1g(small ¾)

* At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).

• Brown rice or cooked mixed grains can replace white rice.
• Loaf height and texture vary with the quantity of rice.
• More rice produces a chewier loaf. Keep other ingredients at the specified quantities.
• The timer can be used, but do not use rice cooked or thawed more than one day earlier.
• At room temperatures of 30°C or above, chill the flour in the refrigerator.
• Some rice grains may remain visible.

■ White bread mix or soft white bread mix can also be used (p. 16).

White bread mix or soft white bread mix	315 g (1 packet)
Cooled cooked rice (white rice)	Up to 60 g
Water	180 g (mL)
Dry yeast	2.7 g (1 packet)

The loaf may rise too much, leaving the top pale or causing some areas to burn.

1 Select program 9.

■ Adding raisins or other ingredients (p. 20, 22) Raisin

■ Selecting crust colour (p. 23) Crust

■ Setting the finish time (p. 24) Timer

2 Press Start.

Bread-making stages: p. 8

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

• Cooked-rice bread is moist and spoils easily. Eat promptly: the same day in summer, or by the next day in winter.

Rice French bread / French bread

Time:
Rice French bread: about 4 hr 40 min
French bread: about 5 hr

Rice French bread and French bread may be harder to remove than other loaves. Follow step 3 below.

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Rice French bread	1,016 kcal per loaf (using 130 g cooked rice)
Bread flour	210g
Cooled cooked white rice	80-130g
Sugar	6g(small 2)
Salt	5g(small 1)
Cold water (5°C)	140g(mL)
Dry yeast	2.1g(small ¾)

* At room temperatures of 25°C or above, reduce the water by 10 g (mL).

• Brown rice or cooked mixed grains can replace white rice.
• Loaf height and texture vary with the quantity of rice.
• More rice produces a chewier loaf. Keep the other ingredients at the specified quantities.
• The timer can be used, but do not use rice cooked or thawed more than one day earlier.
• Results deteriorate at room temperatures of 30°C or above.
• Some rice grains may remain visible.

• Rice French bread is moist and spoils easily. Eat promptly: the same day in summer, or by the next day in winter.

French bread	918kcal(per loaf)
Bread flour	225g
Cake flour	25g
Salt	5g(small 1)
Cold water (5°C)	190g(mL)
Dry yeast	1.4g(small ½)

* At room temperatures of 25°C or above, reduce the water by 10 g (mL).

• Results deteriorate at room temperatures of 30°C or above.

1 Rice French bread: select program 10. French bread: select program 11.

Rice French bread / French bread

■ Adding raisins or other ingredients → Raisin (P.20) (P.22)

■ Setting the finish time (p. 24) → Timer

2 Press Start.

Bread-making stages: p. 8

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

■ Removing rice French bread or French bread
Lay a towel on the work surface. Move the pan firmly downwards so your hands tap the padded surface (see illustration).

• Check that the blade is not lodged in the bottom of the loaf.

Rye bread

Time: about 5 hr

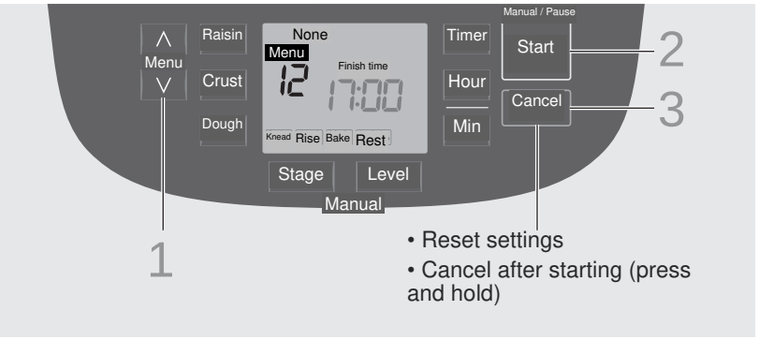

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Rye bread (50% rye flour)	1,056 kcal (per loaf)
Bread flour	125g
Rye flour*1	125g
Butter	5g
Sugar	17g(large 2)
Salt	5g(small 1)
Plain yogurt (unsweetened)	85g
Cold water (5°C)	80g(mL)
Dry yeast	1.4g(small ½)

*1 Finely milled rye flour is recommended.
*2 When adding extra ingredients, increase the water by 10 g (mL).

• Results deteriorate at room temperatures of 30°C or above.
• At 25°C or above, a timer setting of no more than 10 hours is recommended. (Longer settings increase sourness and impair results.)

1 Select program 12.

■ Adding raisins or other ingredients → Raisin (P.20)

■ Setting the finish time (p. 24) → Timer

2 Press Start.

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

■ Use 21-50% rye flour as a proportion of total flour.

For 20% or less, use program 3 (White bread).
• A higher rye proportion produces a shorter loaf.

■ Rye flour
Coarser flour produces a shorter loaf.
• Results and rise vary with the type of rye flour.

Wholemeal bread

Time: about 5 hr

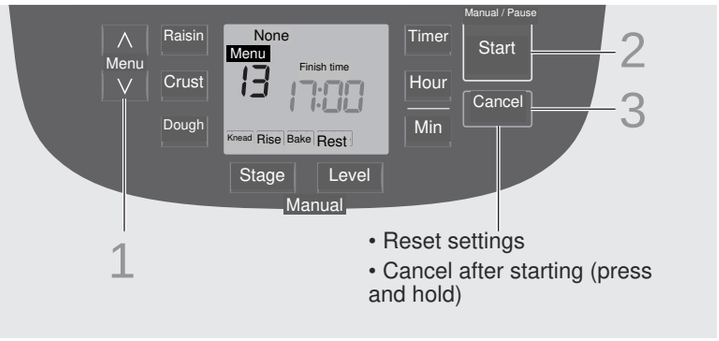

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Add flour, water and all ingredients except dry yeast to the pan.
3 Fit the pan into the appliance and put dry yeast in the yeast dispenser.

Ingredients

Wholemeal bread (50% wholemeal flour)	1,038 kcal (per loaf)
Wholemeal bread flour	125g
Bread flour	125g
Butter	10g
Sugar	17g(large 2)
Skim milk powder	6g(large 1)
Salt	5g(small 1)
Cold water (5°C)	200g(mL)
Dry yeast	2.8g(small 1)

*1 Do not use low-protein wholemeal cake flour or wholemeal flours from grains other than wheat.
*2 At 25°C or above, reduce the water by 10 g (mL).

• Results deteriorate at room temperatures of 30°C or above.

1 Select program 13.

■ Adding raisins or other ingredients → Raisin (P.20, 22)

■ Setting the finish time (p. 24) → Timer

2 Press Start.

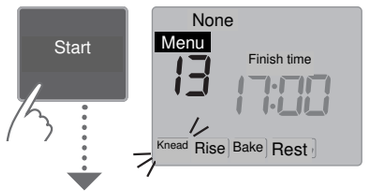

Bread-making stages: p. 8

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

■ Use 30-100% wholemeal flour as a proportion of total flour (30-40% for graham flour).

For less than 30%, use program 3 (White bread).
• A higher wholemeal proportion produces a shorter loaf.

■ When using graham flour (coarsely milled flour)

1 Reduce water by 20 g (mL). Soak the graham flour in the measured water overnight in the refrigerator to hydrate it.
2 Add it to the pan together with the soaking water.
3 At room temperatures of 25°C or below, add 10 g (mL) water before placing it in the pan.
• Results and rise vary with the type of wholemeal flour.

Low-carb bread

Time: about 2 hr 5 min

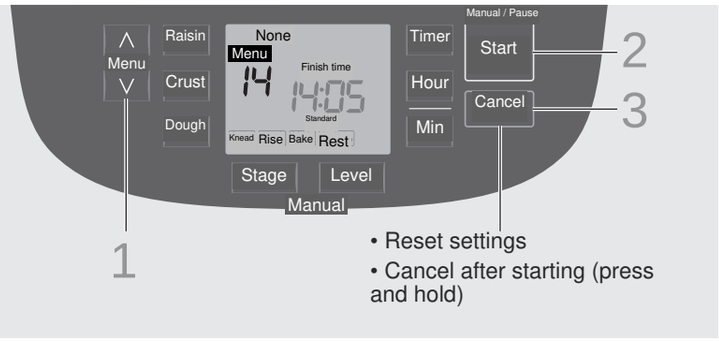

Preparation (p. 18)
1 Fit the kneading blade in the pan.
2 Add the low-carb bread mix, water and other ingredients except dry yeast.
3 Fit the pan into the appliance and put dry yeast in the dispenser.

Ingredients

Low-carb bread	762 kcal (per batch)
Nisshin Low-carb Bread Mix SD-LCM10 150 g	
Unsalted butter	30g
A ┌ Beaten egg	50g(1 medium egg)
A └ Water	110g(mL)
Dry yeast	2.7g(supplied)

Weigh accurately so that the combined weight of A is 160 g.
*1 Results may vary with egg size.
*2 At 25°C or above, use cold water (about 5°C).

• Add no more than 50 g extra ingredients.

• Results deteriorate at room temperatures of 30°C or above.

1 Select program 14.

■ Adding raisins or other ingredients → Raisin (P.20)

■ Selecting crust colour (p. 23) → Crust

2 Press Start.

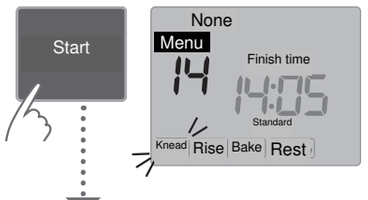

Bread-making stages: p. 8

3 When the beeps sound, press Cancel. Remove the pan, let it cool for about 2 minutes, then remove the bread.

Brioche

Approx. 3 h 15 min

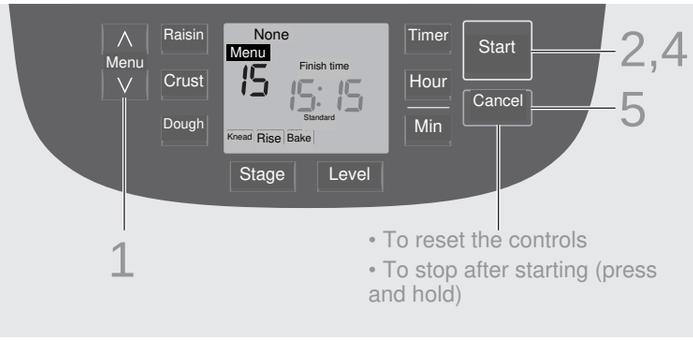

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients in the pan, except the dry yeast and butter to be added later.
3 Set the pan in the appliance and put the dry yeast in the yeast dispenser.

Ingredients

Brioche	1530kcal (per loaf)
Bread flour	170g
Cake flour	30g
Butter	30g
Sugar	25.5g (3 large spoon(s))
Skim milk powder	6g (1 large spoon(s))
Salt	3.8g (¾ small spoon(s))
1 egg, 1 egg yolk and cold water (5°C), combined: 140 g	
Dry yeast	2.1g (¾ small spoon(s))
Butter to add later (unsalted recommended): 40 g	

• Results deteriorate at room temperatures of 30°C or above.
• Do not increase the water when using gentle mixing.

Prepare the butter to add later!
1 Cut it into 1 cm cubes.
2 Space the cubes apart and wrap in plastic wrap or place in a sealed container.
3 Refrigerate until just before adding.
• At room temperatures of 25°C or above, freeze overnight (at least 10 hours).

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 10 minutes elapse in step 3
The buzzer sounds and the program restarts automatically, even if you have not added the butter.

Butter added after this will not mix in. Do not add it.

You can also add the reserved butter at the beginning.
Put all ingredients except the dry yeast into the pan, then start (steps 1, 2 and 5).
• Flavour, texture and rise will differ.

1 Select program 15.

Adding raisins or other ingredients (pp. 20–22)
Selecting crust colour (p. 23)

2 Press Start.

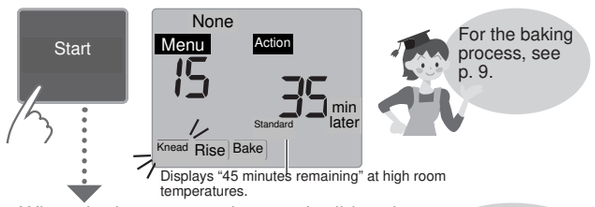

3

When the beeps sound, open the lid and **separate and add the reserved butter.**
• Do not press Cancel.

4 Close the lid and press Start again.

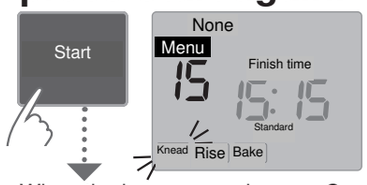

5

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

• Shaking vigorously to remove the loaf may damage its shape.

Marbled bread

Approx. 4 hours

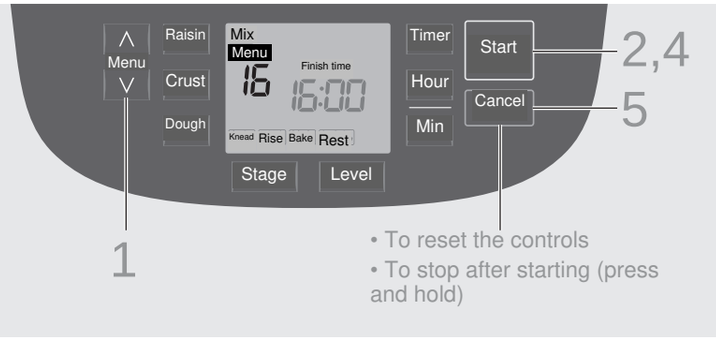

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients in the pan, except the dry yeast and instant coffee.
3 Set the pan in the appliance and put the dry yeast in the yeast dispenser.

Ingredients

Marbled bread	1095kcal (per loaf)
Bread flour	250g
Sugar	21.5g (2½ large spoon(s))
Salt	5g (1 small spoon(s))
Skim milk powder	6g (1 large spoon(s))
Butter	10g
Water	180g (mL)
Dry yeast	2.8g (1 small spoon(s))
To add later	
Instant coffee	3g

* At room temperatures of 25°C or above, use cold water (about 5°C) and reduce the amount by 10 g (mL).

• Ground coffee cannot be used.

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 5 minutes elapse in step 3
The buzzer sounds and the program restarts automatically, even if you have not added the instant coffee.

(Instant coffee added after this will not mix in. Do not add it.)

The marbled pattern varies each time.

1 Select program 16.

2 Press Start.

3

When the beeps sound, open the lid and add the instant coffee to the bottom of the bread pan.
• Do not press Cancel.

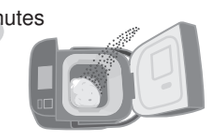

• Add it without letting it fall onto the dough.

4 Close the lid and press Start again.

5

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

Custom bread

Time required: approx. 2 hours 15 minutes

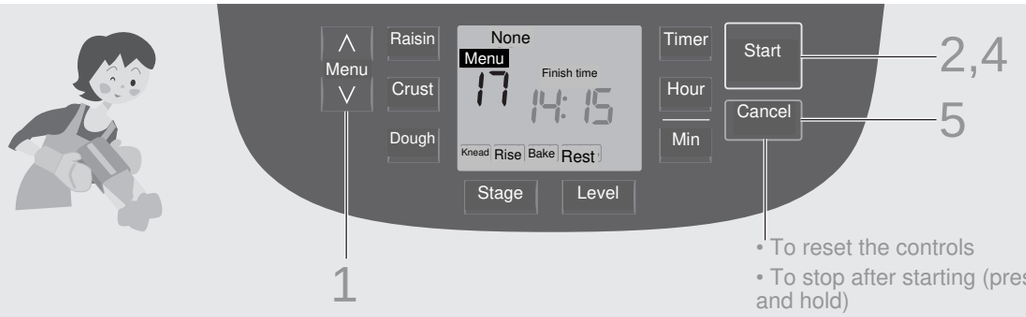

Preparation (p. 18)
1 Make the cookie dough and refrigerate (p. 39, steps 1-6).
2 Fit the kneading blade in the bread pan.
3 Put the flour, water and other ingredients in the pan, except the dry yeast.
4 Set the pan in the appliance and put the dry yeast in the yeast dispenser.

Ingredients

Melon bread	1734 kcal (per whole item)
Bread flour	150 g
Butter	15 g
Sugar	17 g (2 large spoon(s))
Skim milk powder	6 g (1 large spoon(s))
Salt	2.5 g (½ small spoon(s))
Cold water (5°C)	90 g (mL)
Dry yeast	2.1 g (¾ small spoon(s))

Cookie dough (melon bread crust)	
Butter: 50 g Sugar: 40 g Beaten egg: 25 g (½ medium egg) Cake flour: 100 g Baking powder: 3 g Vanilla essence: a few drops Granulated sugar (to finish): 2-3 teaspoons	

• Follow the quantities above exactly. Too much dough may overflow the bread pan and burn, producing an odour or smoke.

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 15 minutes elapse in step 3
The buzzer sounds and the program restarts automatically, even if you have not finished.

1 Select program 17.

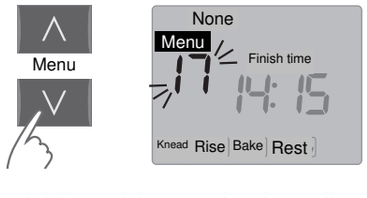

Adding raisins or other ingredients (p. 2) Raisin

2 Press Start.

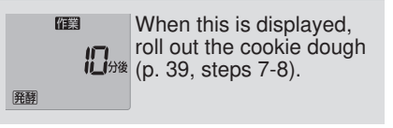

When this is displayed, roll out the cookie dough (p. 39, steps 7-8).

3

When the beeps sound, open the lid and place the cookie dough on top. Within 15 minutes

1 Reposition the bread dough in the centre of the pan.
2 Place the cookie dough on top, egg-brushed side down.
3 Press the edges lightly (do not press down hard).
4 Sprinkle granulated sugar over the top.

• Do not press Cancel.

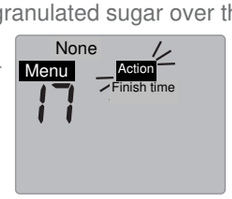

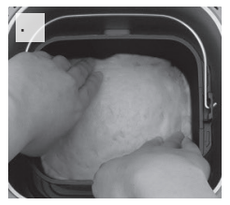

4 Close the lid and press Start again.

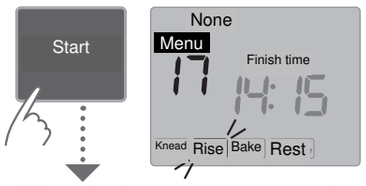

5

When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

• Shaking vigorously to remove the loaf may damage its shape.

Making the cookie dough

Making the dough
1 Sift the cake flour and baking powder together.

2 Beat the room-temperature butter with a wooden spatula or similar utensil until creamy.

3 Add the sugar gradually in 2-3 batches, beating after each addition until pale and smooth.

4 Add the egg gradually in 3-4 batches, beating after each addition. Add the vanilla essence last.
• Reserve ½ teaspoon of egg.

5 Add the mixture from step 1 and fold gently until no dry flour remains.

6 When the dough comes together, shape it into a smooth disc. Wrap in plastic wrap and refrigerate for at least 20 minutes.

Rolling out
7 Roll into a circle 14-15 cm in diameter.
• Rolling between sheets of plastic wrap makes handling easier.

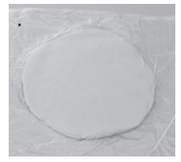

8 Brush one side with the reserved ½ teaspoon of egg.

Tips for making melon bread

• You may score a lattice pattern into the cookie dough.

Use a bamboo skewer or similar tool to make shallow marks no more than 1 mm deep.
Deeper marks can cause the cookie dough to crack and slide off.

• For best results, the cookie dough should be pliable enough to bend when you place it on the bread dough.

Pale-crust bread / Half loaf

Time required
Pale-crust bread: approx. 3 hours 50 minutes
Half loaf: approx. 3 hours 35 minutes

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients in the pan, except the dry yeast.
3 Set the pan in the appliance and put the dry yeast in the yeast dispenser.

Ingredients

Pale-crust bread	878kcal (per whole item)
Bread flour	180g
Butter	15g
Sugar	3g (1 small spoon(s))
Salt	2.5g (½ small spoon(s))
Starch syrup	20g
Skim milk powder	6g (1 large spoon(s))
Water	130g (mL)
Dry yeast	2.1g (¾ small spoon(s))

* At room temperatures of 25°C or above, use cold water (about 5°C) and reduce the amount by 10 g (mL).

• Recipes high in sugar or dairy ingredients, and some types of starch syrup, give a slightly darker crust.

Half loaf	786kcal (per whole item)
Bread flour	180g
Butter	10g
Sugar	12.5g (1½ large spoon(s))
Salt	2.5g (½ small spoon(s))
Skim milk powder	6g (1 large spoon(s))
Water	130g (mL)
Dry yeast	2.1g (¾ small spoon(s))

* At room temperatures of 25°C or above, use cold water (about 5°C) and reduce the amount by 10 g (mL).

1 Select program 18 for pale-crust bread, or program 19 for a half loaf.

Pale-crust bread | Half loaf

Setting the finish time (p. 24) ➡ Timer

2 Press Start.

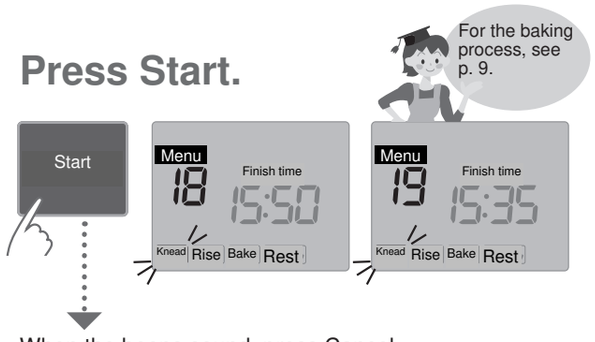

3

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

Rice flour bread (with wheat)

Approx. 2 h 30 min

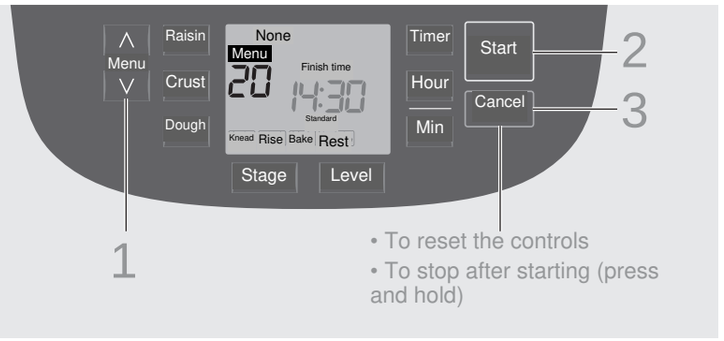

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Put the rice flour, water and other ingredients in the pan, except the dry yeast.
3 Set the pan in the appliance and put the dry yeast in the yeast dispenser.

Ingredients

Always use “Kome-no-Kaori (with gluten)” (p. 15).

Rice flour bread (with wheat)	1152kcal (per loaf)
Rice flour: “Kome-no-Kaori (with gluten)” 250 g	
Butter	20g
Sugar	17g (2 large spoon(s))
Skim milk powder	6g (1 large spoon(s))
Salt	5g (1 small spoon(s))
Water	190g (mL)
Dry yeast	4.2g (1½ small spoon(s))

* At room temperatures of 25°C or above, use cold water (about 5°C).

• At room temperatures of 25°C or above, using the timer gives poorer results (p. 95).
• At 30°C or above, always chill the flour and other ingredients in the refrigerator.

Rice flour should make up 21-100% of the total flour.

➡ For 20% or less, use program 3 (White bread).

1 Select program 20.

Adding raisins or other ingredients (p. 23) ➡ Raisin

Selecting crust colour (p. 23) ➡ Crust

Setting the finish time (p. 24) ➡ Timer

2 Press Start.

3

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

Rice flour bread (no wheat)

Time required: approx. 1 hour 55 minutes

Preparation (p. 18)
Ingredients

Rice flour bread (no wheat)	1404 kcal (per loaf)
Sugar	17 g (2 large spoon(s))
Salt	5 g (1 small spoon(s))
Shortening	30 g
Water	290 g (mL)
Bread mix “Kome-no-Kaori (gluten-free)”	300 g
Dry yeast	4.2 g (1½ small spoon(s))

• Follow the ingredients and quantities above exactly.
- Changing the type of fat will give poor results.
- Adding skim milk powder or dairy products will give poor results.
• Raisins and other additions may reduce the rise or mix into the dough poorly, depending on the ingredient.
• The dough will be soft and runny; this is normal.

1 Fit the kneading blade and put the sugar, salt and shortening in the pan.
2 Add the water.
3 Add the rice flour bread mix.
4 Set the pan in the appliance and put the dry yeast in the yeast dispenser.
• Contact the flour manufacturer if you develop allergic symptoms caused by the ingredients.

The finished loaf has a flat, pale top.

1 Select program 21.

Adding raisins or other ingredients (p. 20) Raisin

Setting the finish time (p. 34) Timer

2 Press Start.

3 When the beeps sound, open the lid and scrape down the flour.

• Use a rubber spatula or similar utensil to scrape flour from the sides. (Metal spatulas can damage the non-stick coating.)

• Do not press Cancel.

4 Close the lid and press Start again.

5 When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

Dried natural yeast bread

Time required: approx. 4 hours 10 minutes

- To reset the controls
- To stop after starting (press and hold)

Preparation (p. 18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients in the pan, except the dried natural yeast.
3 Set the pan in the appliance and put the dried natural yeast in the yeast dispenser.

Ingredients

Dried natural yeast bread	1037kcal (per loaf)
Bread flour	250g
Butter	5g
Sugar	17g (2 large spoon(s))
Salt	5g (1 small spoon(s))
Water	190g (mL)
Dried natural yeast	5g (1½ small spoon(s))

*1 At room temperatures of 25°C or above, use cold water (5°C) and reduce the amount by 10 g (mL).
*2 Its density differs from dry yeast.

- Results deteriorate at room temperatures of 30°C or above.
- To make additive-free bread, use additive-free dried natural yeast.

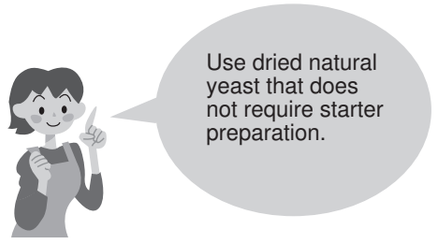

1 Select program 22.

Adding raisins or other ingredients (pp. 20–22) → Raisin

Selecting crust colour (p. 23) → Crust

Setting the finish time (p. 24) → Timer

2 Press Start.

3

When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the bread.

Making natural yeast bread with prepared starter

Preparing natural yeast starter

Approx. 24 hours

Prepare the starter used for natural yeast bread.

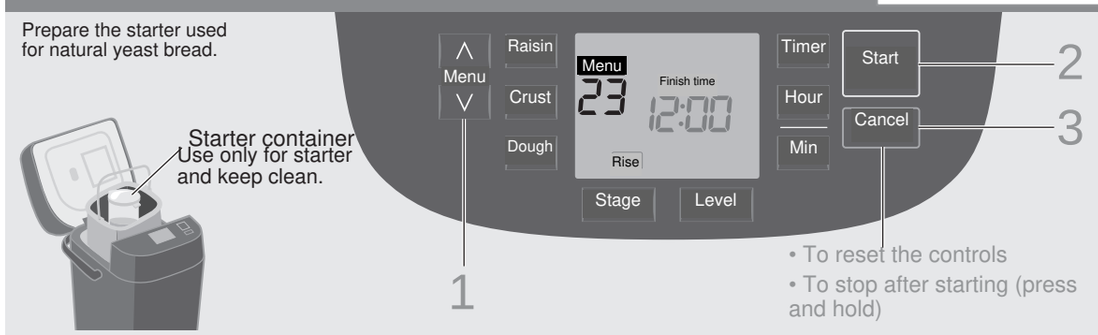

- To reset the controls
- To stop after starting (press and hold)

Ingredients
1 Measure the water into the starter container.
2 Add Hoshino Natural Yeast Bread Starter (dry starter) and mix thoroughly.
3 Put the lid on the starter container.
4 Place the container in the bread pan (without the kneading blade).
5 Set the bread pan in the appliance.

Ingredients

Use within one week!

Prepared starter

- For 4-5 batches of bread
  Hoshino Natural Yeast Bread Starter: 50 g (5 large spoons)
  Water (about 30°C): 100 g (mL)

- For about 3 batches of bread
  Hoshino Natural Yeast Bread Starter: 30 g (3 large spoons)
  Water (about 30°C): 60 g (mL)

- If the water is too hot or too cold, the starter may not develop properly.

Prepared starter is perishable!

- Always refrigerate and use within one week.
  Freezing or keeping it at room temperature destroys its leavening activity.
- Do not mix new and old starter.

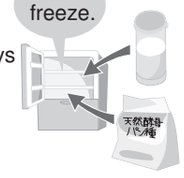

- Properly prepared starter smells slightly sour and alcoholic, like sake lees.
  (The starter may not develop properly at room temperatures of 30°C or above.)

1 Select program 23.

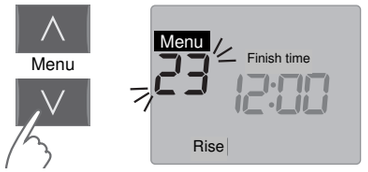

2 Press Start.

- Do not remove the starter before the program finishes.

3 When the beeps sound, press Cancel. Remove the starter container immediately and refrigerate.

- If left in the appliance, its leavening activity weakens and the bread will not rise.

Selecting the wrong program may melt the starter container.

Continued on the next

Making natural yeast bread with prepared starter (continued)

Time required: approx. 7 hours

Adding ingredients

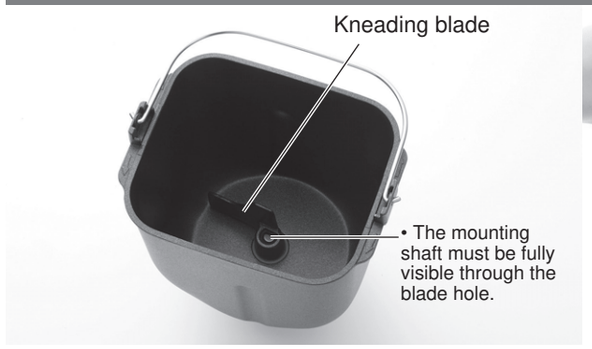

1 Remove the bread pan and fit the kneading blade.

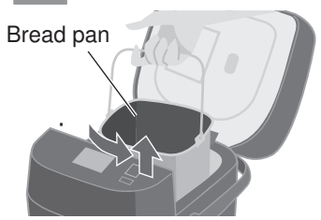

1 Twist the bread pan in the direction of the arrow.
2 Lift it out.
3 Push the kneading blade firmly into place.

• The tip moves about 3 cm when touched lightly.

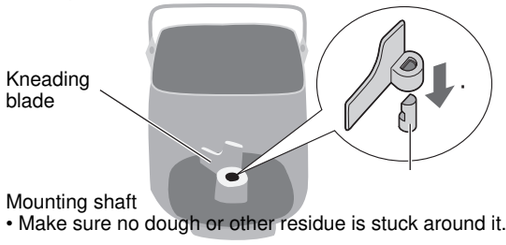

• Make sure no dough or other residue is stuck around it.

Natural yeast bread	1212kcal (per loaf)
Prepared starter	25g (2 large spoon(s))
Bread flour	300g
Sugar	17g (2 large spoon(s))
Salt	5g (1 small spoon(s))
Water	180g (mL)

* At room temperatures of 25°C or above, use cold water (about 5°C).

• Results deteriorate at room temperatures of 30°C or above.

2 Put the prepared starter in the bread pan.

Add the prepared starter.
• Stir before measuring.

3 Put bread flour, water and the other ingredients in the pan.

1 Add the flour and other dry ingredients in a mound in the centre.
2 Pour the water around the edges.

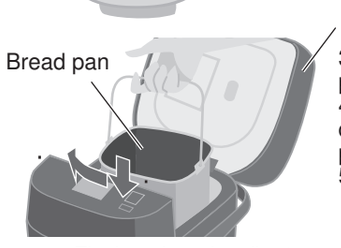

3 Return the bread pan.
4 Turn in the arrow direction to lock in place.
5 Close the lid.

• The bread pan handle stops partway down to make the pan easier to remove. It does not need to fold all the way down.

Set up

4 Select program 24.

Adding raisins or other ingredients → Raisin ·P.20· ·P.22·

Selecting crust colour (p. 23) → Crust

Setting the finish time (p. 24) → Timer

5 Close both lids securely and press Start.

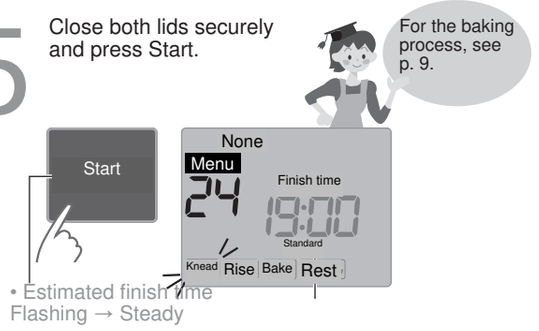

• Estimated finish time
Flashing → Steady

Remove

6 When baking finishes (beeps sounds), switch off.

1 Press Cancel.
2 Unplug the appliance.

7 Place the bread pan on a surface covered with a cloth and let it cool for about 2 minutes.

• Take care where you put the hot bread pan.
• Leaving the loaf in the pan makes it shrink and collapse.

8 Remove the bread and allow it to cool.

• If your oven mitts become hot, set the pan back on the cloth before continuing.

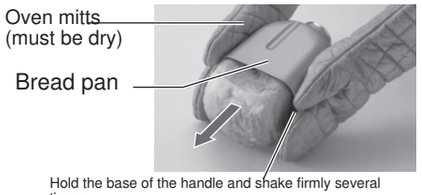

Hold the base of the handle and shake firmly several times.

• Do not use a knife, fork or chopsticks; they damage the non-stick coating.
• Do not touch the underside.

The blade mechanism may turn and crush the inside of the bread.

• After removing the loaf, check that the kneading blade is still in the pan. If it is not, remove it from the bottom of the loaf.

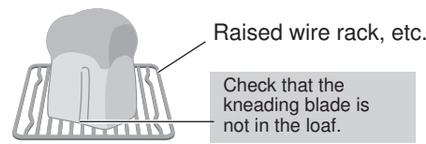

Cutting the bread with the blade inside will damage the blade.

Quick bread

Time required: approx. 54 minutes

Preparation
1 Fit the kneading blade, then add the egg-and-milk mixture followed by the plain yogurt.
2 Add the remaining ingredients.
3 Set the bread pan in the appliance.

Ingredients

Quick bread	1159 kcal (per whole item)
1 egg and milk, combined: 80 g	
Plain yogurt (unsweetened)	50 g
Cake flour	120 g
Bread flour	60 g
Baking powder	5 g
Butter (cut into 1 cm cubes)*: 35 g	
Sugar	25.5 g (3 large spoon(s))
Salt	2.5 g (½ small spoon(s))

* At room temperatures of 15°C or below, cut into 5 mm cubes.

Try variations with your favourite ingredients!
Add them to the pan at the beginning. Total additions: up to 120 g.

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 3 minutes or more elapse in step 3
The buzzer sounds and kneading starts automatically.

If you accidentally press Cancel in step 5
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 3 minutes or more elapse in step 5
The buzzer sounds and baking starts automatically.
Without shaping, the top of the baked quick bread will look uneven.

• Quick bread differs from white bread made with dry yeast.

1 Select program 25.

Selecting crust colour: Crust

2 Press Start.

3 Open the lid and scrape down the flour.

When the beeps sound,
Within 3 minutes

• Scrape flour from the sides with a rubber spatula or similar utensil. (Metal utensils damage the non-stick coating.)

• Do not press Cancel.

4 Close the lid and press Start again.

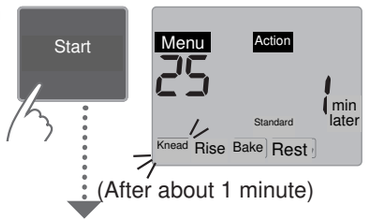

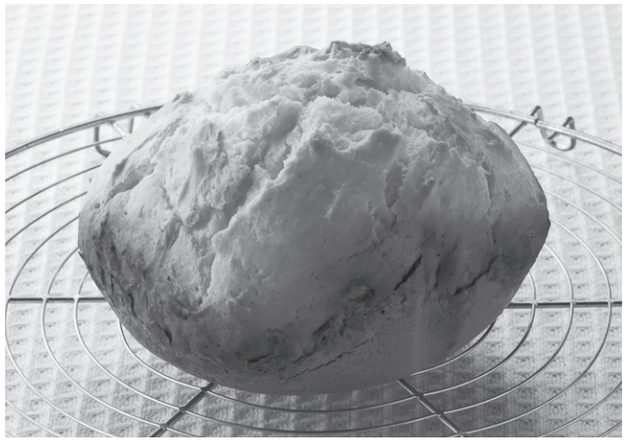

Within 3 minutes

5 When the beeps sound, open the lid and shape the top of the dough.

• Scrape dough from the sides with a rubber spatula or similar utensil, and shape it into a dome (see illustration).
Metal utensils damage the non-stick coating.

• Do not press Cancel.

6 Close the lid and press Start again.

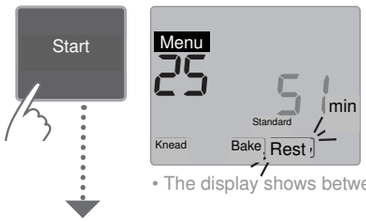

• The display shows between 45 and 51 minutes.

7 When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the quick bread.

• Check that the kneading blade is not in the bottom.
• If underbaked, use Additional baking (see right).
• Shaking vigorously to remove it may damage its shape.

• Oil fumes can soil the lid and steam vent. Always wipe them after use (pp. 86-87).

If underbaked: Additional baking

You can add up to two baking cycles after the program finishes.
• Additional baking can be selected for about 15 minutes after baking finishes. It is unavailable once the interior cools.

1 Select program 25.

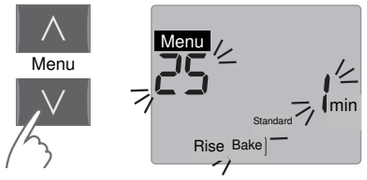

2 Set the baking time.

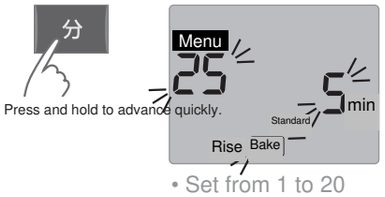

• Set from 1 to 20 minutes.

3 Press Start.

To cancel additional baking
Press and hold Cancel.

You can also start additional baking as follows.
If you have not pressed Cancel in step 7 (left):
1 Press the time key to set the baking time. Min
2 Press Start.
Start

Other programs

Soy scones

Time required: approx. 58 minutes

Preparation
1 Fit the kneading blade.
2 Put the ingredients in the bread pan in the order listed.
3 Set the bread pan in the appliance.

Ingredients

Soy scones (kinako)	898kcal (per whole item)
Olive oil	4g (1 tsp)
Egg (beaten)	50g (1 medium egg(s))
Plain soy milk	80g (about 80mL)
Plain yogurt (unsweetened)	70g
Roasted soybean flour (kinako)	100g
Wholemeal bread flour	80g
Baking powder	5g
Salt	2.5g (½ small spoon(s))

You can use soy flour instead of roasted soybean flour (kinako).

Soy scones (soy flour)	820kcal (per whole item)
Olive oil	4g (1 tsp)
Egg (beaten)	50g (1 medium egg(s))
Plain soy milk	80g (about 80mL)
Plain yogurt (unsweetened)	30 g
Soy flour	100 g
Wholemeal bread flour	70 g
Baking powder	5g
Salt	2.5g (½ small spoon(s))

• Do not press Cancel.
• Deodorised soy flour is recommended.

1 Select program 26.

Selecting crust colour (p. 26). Crust

2 Press Start.

3 Open the lid and scrape down the flour.

When the beeps sound, Within 3 minutes

• Scrape flour from the sides with a rubber spatula or similar utensil. (Metal utensils damage the non-stick coating.)

Try variations with your favourite ingredients!
Add up to 120 g of additional ingredients at the beginning.

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 3 minutes or more elapse in step 3
The buzzer sounds and kneading starts automatically.

(Using kinako)

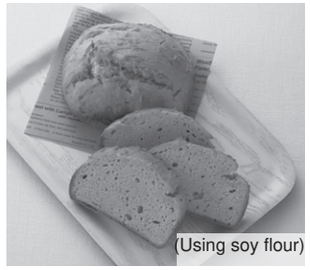
(Using soy flour)

4 Close the lid and press Start again.

5 When the beeps sound, open the lid and shape the top of the dough.

Within 3 minutes

• Scrape dough from the sides with a rubber spatula or similar utensil. Shape into a dome that covers the kneading blade (see illustration).

Metal utensils damage the non-stick coating.

• Do not press Cancel.

6 Close the lid and press Start again.

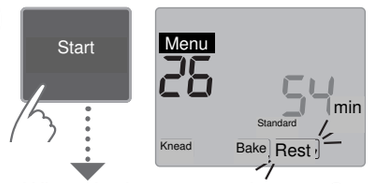

• The display shows between 48 and 54 minutes.

7 When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the soy scone loaf.

• Check that the kneading blade is not in the bottom.
• If underbaked, use Additional baking (see right).
• Shaking vigorously to remove it may damage its shape.

• Oil fumes can soil the lid and steam vent. Always wipe them after use (pp. 86-87).

If you accidentally press Cancel in step 5
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 3 minutes or more elapse in step 5
The buzzer sounds and baking starts automatically.
Without shaping, the top of the baked soy scone loaf will look uneven.

If underbaked: Additional baking

You can add up to two baking cycles after the program finishes.
• Additional baking can be selected for about 15 minutes after baking finishes. It is unavailable once the interior cools.

① Select program 26.

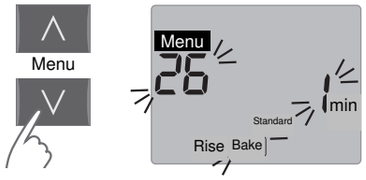

2 Set the baking time.

• Set from 1 to 20 minutes.

3 Press Start.

To cancel additional baking
Press and hold Cancel.

You can also start additional baking as follows.
If you have not pressed Cancel in step 7 (left):
1 Press the time key to set the baking time. Min
2 Press Start.

Start

Other programs

Rice flour cake

Time required: approx. 1 hour(s) 40 minutes

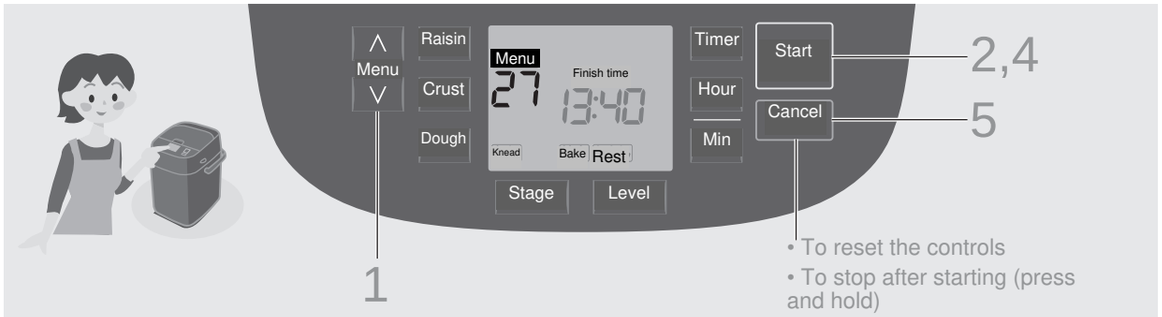

Preparation
1 Fit the kneading blade in the bread pan.
2 Add the ingredients in the order listed.
3 Set the bread pan in the appliance.

Ingredients

Rice flour cake	2393kcal (per whole item)
Vegetable oil	100g
Egg (beaten)	100g (2 medium egg(s))
Milk	80g (about 80mL)
Sugar	120g
Rice flour	140g
Ground almonds	50g
Baking powder	5g

Try variations with your favourite ingredients!

Cocoa
(15 g)

Earl Grey tea
(4 g)

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 15 minutes or more elapse in step 3
The buzzer sounds and kneading starts automatically.
Without scraping down the flour, the surface of the baked rice flour cake will look uneven.

• The result is similar to butter cake, not a commercial sponge cake. The crust will be dark.

• Some rice flour contains gluten. If you have a wheat allergy, always check the ingredients. Contact the flour manufacturer if you develop allergic symptoms caused by the ingredients.

1 Select program 27.

2 Press Start.

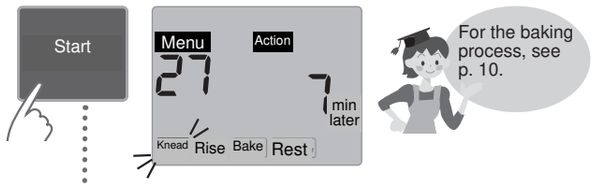

3 When the beeps sound, Open the lid and scrape down the flour.

Within 15 minutes
Within 15 minutes

• Scrape flour from the sides with a rubber spatula or similar utensil. (Metal utensils damage the non-stick coating.)

• Do not press Cancel.

4 Close the lid and press Start again.

5

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the rice flour cake.

• If underbaked, use Additional baking (see right).
• Shaking vigorously to remove it may damage its shape.

If underbaked: Additional baking

You can add up to two baking cycles after the program finishes.
• Additional baking can be selected for about 15 minutes after baking finishes. It is unavailable once the interior cools.

① Select program 27.

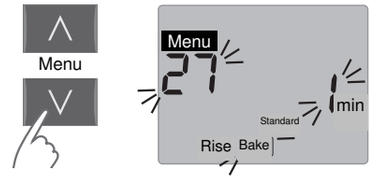

2 Set the baking time.

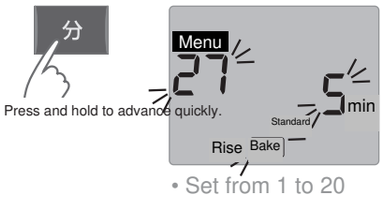

• Set from 1 to 20 minutes.

3 Press Start.

To cancel additional baking
Press and hold Cancel.

You can also start additional baking as follows.
If you have not pressed Cancel in step 5 (left):
1 Press the time key to set the baking time. Min
2 Press Start.
Start

Cake

Time required: approx. 1 hour(s) 30 minutes

Preparation
1 Fit the kneading blade in the bread pan.
2 Add the butter, sugar, milk and egg in that order.
3 Add the sifted A ingredients and set the pan in the appliance.

Ingredients

Butter cake	2048kcal (per whole item)
Unsalted butter	110g
Sugar	100g
Milk	15g (1 tbsp)
Egg (beaten)	100g (2 medium egg(s))
A Cake flour	180g
A Baking powder	7g

* Cut into 1 cm cubes and bring to room temperature.

Try variations with your favourite ingredients!
Add solid ingredients evenly when scraping down the flour.

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 15 minutes or more elapse in step 3
The buzzer sounds and kneading starts automatically.
Without scraping down the flour, the surface of the baked cake will look uneven.

• The result is similar to butter cake, not a commercial sponge cake.

1 Select program 28.

Selecting crust colour ⇨ Crust

2 Press Start.

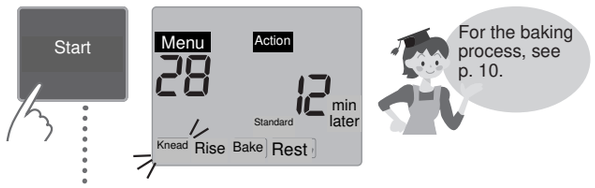

3 When the beeps sound, Open the lid and scrape down the flour.

• Scrape flour from the sides with a rubber spatula or similar utensil. (Metal utensils damage the non-stick coating.)

• Do not press Cancel.

4 Close the lid and press Start again.

5 When the beeps sound, press Cancel. Remove the bread pan and allow it to cool for about 2 minutes, then remove the cake.

• If underbaked, use Additional baking (see right).
• Shaking vigorously to remove it may damage its shape.

If underbaked: Additional baking

You can add up to two baking cycles after the program finishes.
• Additional baking can be selected for about 15 minutes after baking finishes. It is unavailable once the interior cools.

① Select program 28.

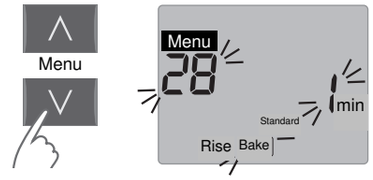

2 Set the baking time.

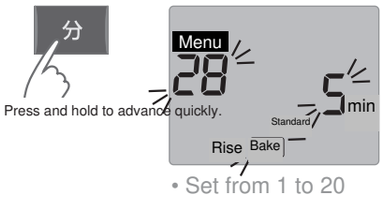

• Set from 1 to 20 minutes.

3 Press Start.

To cancel additional baking
Press and hold Cancel.

You can also start additional baking as follows.
If you have not pressed Cancel in step 5 (left):
1 Press the time key to set the baking time. Min
2 Press Start.
Start

Other programs

Vegetable cake

Time required: approx. 55 minutes

Preparation
1 Make the vegetable cake batter.
2 Remove the kneading blade from the pan and add the batter.
3 Set the bread pan in the appliance.

Ingredients

Vegetable cake	1220 kcal (per whole item)
A Egg	50 g (1 medium egg(s))
Carrot (grated): 50 g	
A + plain soy milk: 200 g	
Sugar: 60 g	
Vegetable oil: 40 g (3 tablespoons + 1 teaspoon)	
Cake flour: 130 g	
B Baking powder: 5 g	

Making the vegetable cake batter

1 Combine A and add soy milk to make 200 g in total.
2 Put A and the sugar in a bowl and whisk thoroughly.
3 Add the vegetable oil and mix until evenly combined.
4 Add the sifted B ingredients and mix until smooth.

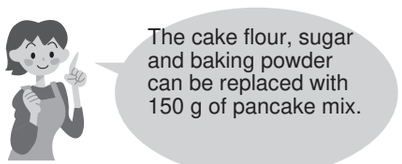

1 Select program 29.

2 Press Start.

3

When the beeps sound, press Cancel.
Remove the bread pan and allow it to cool for about 2 minutes, then remove the vegetable cake.

• If underbaked, use Additional baking (p. 57).

If underbaked: Additional baking

If additional ingredients leave the cake underbaked (batter sticks to a bamboo skewer), you can add up to two baking cycles.
• Additional baking can be selected for about 15 minutes after baking finishes. It is unavailable once the interior cools.

① Select program 29.

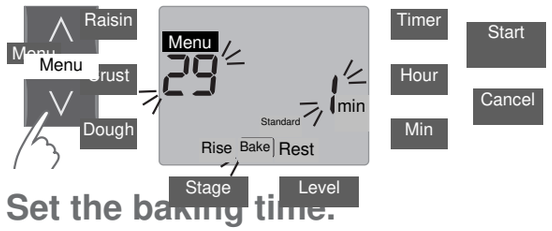

2 Set the baking time.

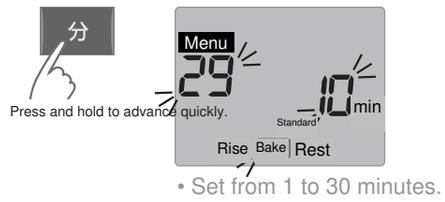

• Set from 1 to 30 minutes.

3 Press Start.

To cancel additional baking
Press and hold Cancel.

You can also start additional baking as follows.
If you have not pressed Cancel in step 3 (p. 56):
1 Press the time key to set the baking time.
2 Press Start.

Chocolate ganache

Time required: approx. 17 minutes

Preparation
1 Fit the kneading blade in the bread pan.
2 Break the chocolate bars into the pan.
3 Add the cream and honey, then set the pan in the appliance.

Ingredients (makes approx. 13 × 13 × 1 cm)

Milk chocolate ganache	1303 kcal
Milk chocolate (commercial bars): 165-174 g (3 bars)	
Cream (35% milk fat)	70g (about 70mL)
Honey	10g

White chocolate ganache	1186kcal
White chocolate (commercial bars): 160 g (about 4 bars)	
Cream (35% milk fat)	60g (about 60mL)
Honey	10g

Dark chocolate ganache	1416kcal
Dark chocolate (commercial bars): 165-174 g (3 bars)	
Cream (35% milk fat)	90g (about 90mL)
Honey	10g

• If the cream contains 41% milk fat or more, replace 10 g (about 10 mL) of the cream with milk.
Example: Dark chocolate ganache
Cream: 80 g (about 80 mL)
Milk: 10 g (about 10 mL)

• Follow the quantities above exactly; otherwise the fat may separate or the ganache may be too soft.

1 Select program 30.

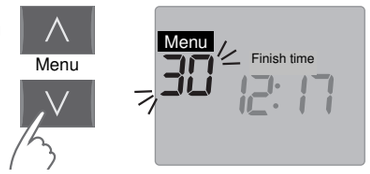

2 Press Start.

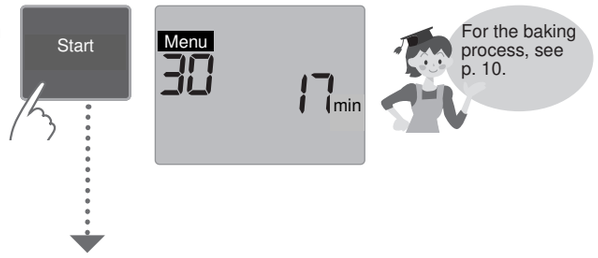

3

When the beeps sound, press Cancel and remove the bread pan. Scrape the chocolate off the blade with a rubber spatula, then remove the blade by hand.

• If unmelted pieces remain, use Additional mixing (p. 59).
• Always use a soft utensil such as a rubber spatula to remove the chocolate.
Hard utensils damage the bread pan's non-stick coating.

4

Use a rubber spatula to pour into a flat container, such as a tray lined with plastic wrap or baking paper.

5

Refrigerate for at least 2 hours until firm.

6 Cut into suitably sized pieces.

• You may coat the cut pieces with cocoa powder, icing sugar or similar ingredients.

If not fully mixed: Additional mixing

You can add up to two mixing cycles after the program finishes.
• Additional mixing can be selected for about 5 minutes after mixing finishes. It is unavailable once the interior cools.
• Scrape chocolate from the sides with a rubber spatula before additional mixing for better results.

① Select program 30.

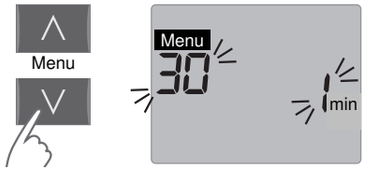

2 Set the mixing time.

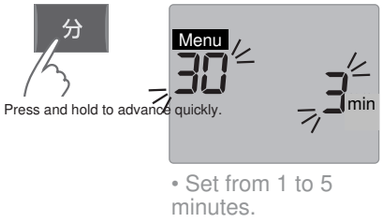

• Set from 1 to 5 minutes.

3 Press Start.

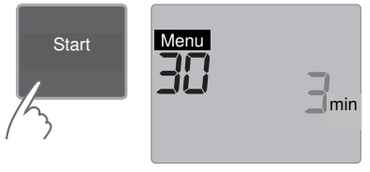

To cancel additional mixing
Press and hold Cancel.

You can also start additional mixing as follows.
If you have not pressed Cancel in step 3 (p. 58):
1 Press the time key to set the mixing time. Min
2 Press Start.
Start

Milk jam

Time required: approx. 1 hour 10 minutes to 2 hours 10 minutes

Preparation
1 Fit the kneading blade in the bread pan.
2 Add the granulated sugar, cream and milk in that order.
3 Set the pan in the appliance.

Ingredients

Milk jam	1215kcal (per batch)
Granulated sugar	80g
Cream (35% milk fat)	200g (about 200mL)
Milk	60g (about 60mL)

• If the cream contains 41% milk fat or more, replace 20 g (about 20 mL) of the cream with milk.
Example
Cream: 180 g (about 180 mL)
Milk: 80 g (about 80 mL)

• The final consistency may vary with the type and production date of the cream.

Do not over-reduce!
Milk jam thickens as it cools.

With less sugar and no additives, this is not suitable for long-term storage.
Refrigerate and eat promptly.
• Storage time: about one week.

1 Select program 31.

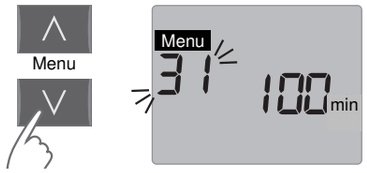

2 Set the cooking time.

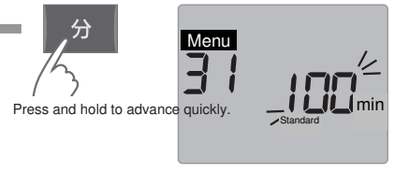

• Set 70-130 minutes in 10-minute increments to suit your preferred thickness.

3 Press Start.

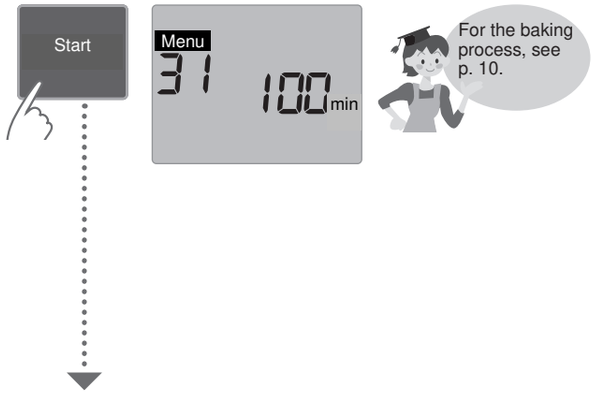

4

When the beeps sound, press Cancel and remove the bread pan.

• It is runny immediately after cooking but thickens as it cools.

5

Rest the bread pan over a stable, wide-mouthed container and slowly pour the jam into it using a rubber spatula.

• Always use a soft utensil such as a rubber spatula to remove it.
Hard utensils damage the pan's non-stick coating.
• If already thick immediately after cooking, stir in about 1 tablespoon of milk while hot. It will reach the right consistency as it cools.

6

Cover with plastic wrap or similar material until cooled, to prevent the surface from drying.

• If left uncovered, a skin may form and cause lumps.

Jam

Time required: approx. 1 hour 30 minutes to 2 hours 30 minutes

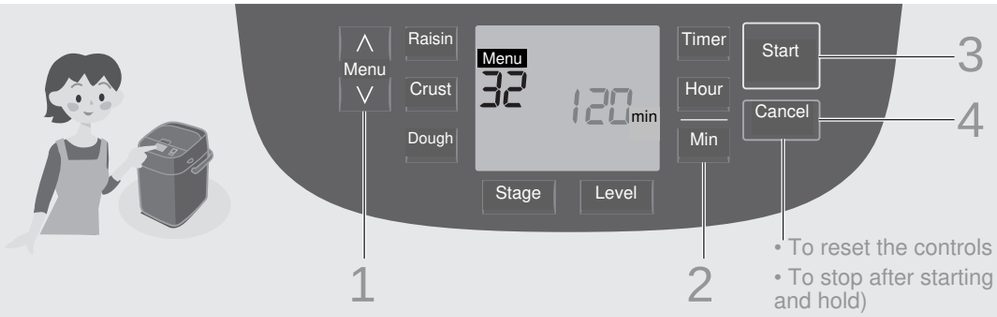

Preparation
1 Fit the kneading blade in the bread pan.
2 Add the sugar, fruit and lemon juice in that order.
3 Set the pan in the appliance.

Ingredients

Strawberry jam	683kcal (per batch)
Strawberries (washed and hulled; halve large berries): 400 g prepared weight	
Sugar	140g
Lemon juice	38g (2½ tbsp)

• Follow the quantities above exactly to prevent boiling over or scorching.

Do not over-reduce!
Jam thickens as it cools.

With less sugar and no additives, this jam has a loose consistency and is not suitable for long-term storage.
Refrigerate and eat promptly.
• Storage time: about one week.

1 Select program 32.

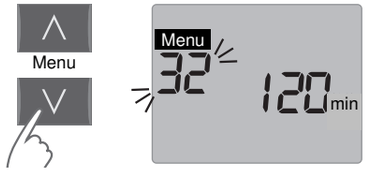

2

Set the cooking time (120 minutes for strawberry jam).

• The cooking time varies with the type of fruit.

• Set 90-150 minutes in 10-minute increments.

3 Press Start.

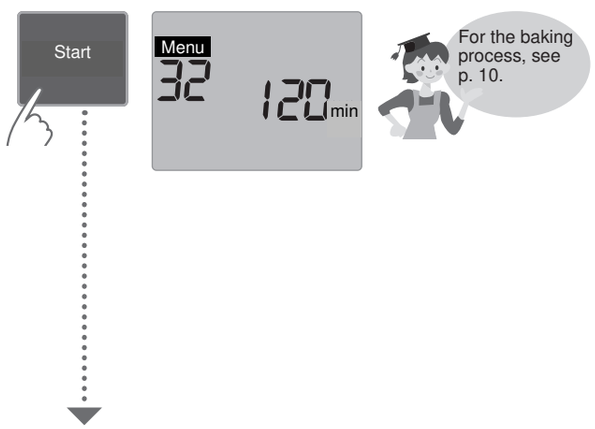

4

When the beeps sound, press Cancel. Remove the bread pan and let it cool for about 10 minutes.

• Place carefully so it cannot tip over.
• If insufficiently cooked (too watery and not thick enough), use Additional heating (see right).

5 Tilt the bread pan and slowly pour into a container using a rubber spatula.

• Always use a soft utensil such as a rubber spatula to remove it.
Hard utensils damage the bread pan's non-stick coating.

If insufficiently cooked: Additional heating

You can add up to two heating cycles after cooking finishes.
• Additional heating can be selected for about 5 minutes after cooking finishes. It is unavailable once the interior cools.

① Select program 32.

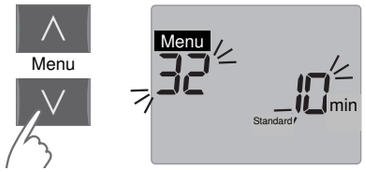

2 Set the cooking time.

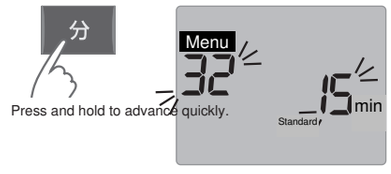

• Set 10-30 minutes in 1-minute increments.

3 Press Start.

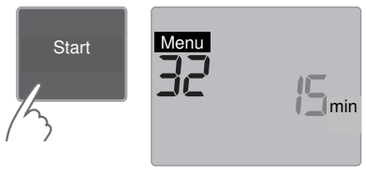

To cancel additional heating
Press and hold Cancel.

You can also start additional heating as follows.
If you have not pressed Cancel in step 4 (left):
1 Press the time key to set the cooking time.
Min
2 Press Start.
Start

Fruit compote

Time required: approx. 1-2 hours

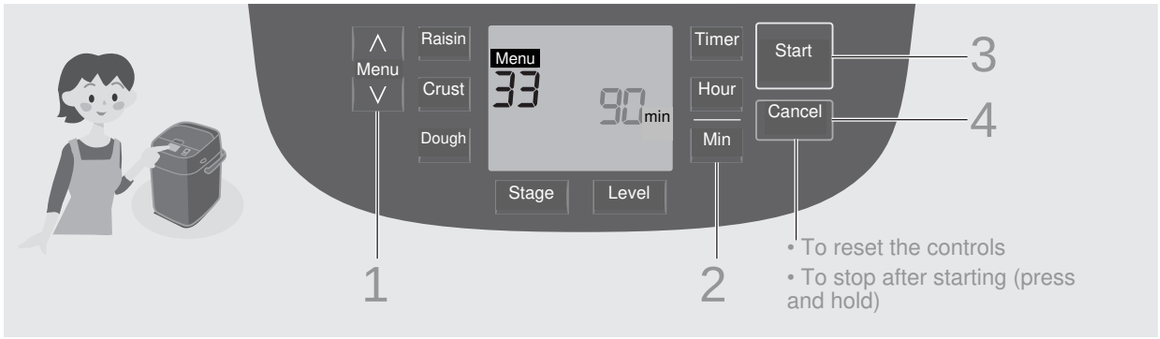

Preparation
1 Without the kneading blade, put the water, sugar and lemon juice in the pan. Stir with a rubber spatula until the sugar dissolves completely.
2 Arrange the fruit without overlapping.
3 Cut kitchen paper to fit the pan, make a hole about 1 cm wide in the centre and place it directly on the fruit.
4 Set the pan in the appliance.

Ingredients

Apple compote	341kcal (per batch)
Apple* Quarter, peel and core.	About 200 g (1 medium apple)
Water	250g (mL)
Sugar	60g
Lemon juice	10g (2 tsp)

* Some varieties break down easily. Firm-fleshed apples such as Fuji are recommended.

• Follow the quantities above exactly to prevent uneven cooking or syrup absorption, or scorching.

• Arranging the fruit (preparation step 2)

• Kitchen-paper drop lid (preparation step 3)

When to eat
Leave for about half a day after cooking so the fruit absorbs the syrup.

1 Select program 33.

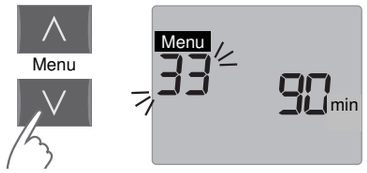

2

Set the cooking time (90 minutes for apple compote).

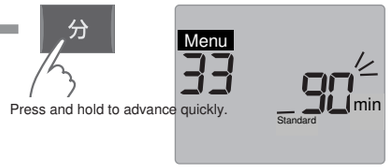

• The cooking time varies with the type of fruit.

• Set 60-120 minutes in 10-minute increments.

3 Press Start.

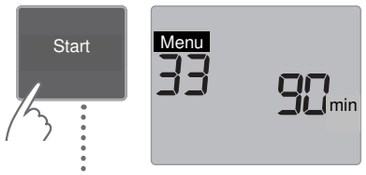

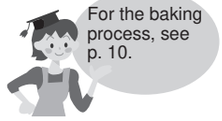

For the baking process, see p. 10.

4

When the beeps sound, press Cancel. Remove the bread pan and let it cool for about 10 minutes.

• Place carefully so it cannot tip over.
• If insufficiently cooked (pale in colour and firm when pierced with a bamboo skewer), use Additional heating (see right).

5

Transfer gently to a container and leave to cool in the cooking syrup.

• Always use a soft utensil such as a rubber spatula to remove it.
Hard utensils damage the pan's non-stick coating.
• After transferring to a container, turn the fruit over and let it cool slowly in the syrup. The syrup soaks into the fruit as it cools.

If insufficiently cooked: Additional heating

You can add up to two heating cycles after cooking finishes.
• Additional heating can be selected for about 5 minutes after cooking finishes. It is unavailable once the interior cools.

① Select program 33.

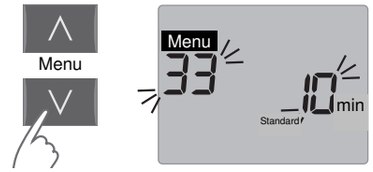

2 Set the cooking time.

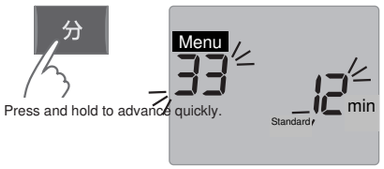

• Set 10-30 minutes in 1-minute increments.

3 Press Start.

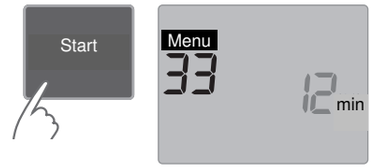

To cancel additional heating
Press and hold Cancel.

You can also start additional heating as follows.
If you have not pressed Cancel in step 4 (left):
1 Press the time key to set the cooking time. Min
2 Press Start.

Start

Amazake

Time required: approx. 6-10 hours

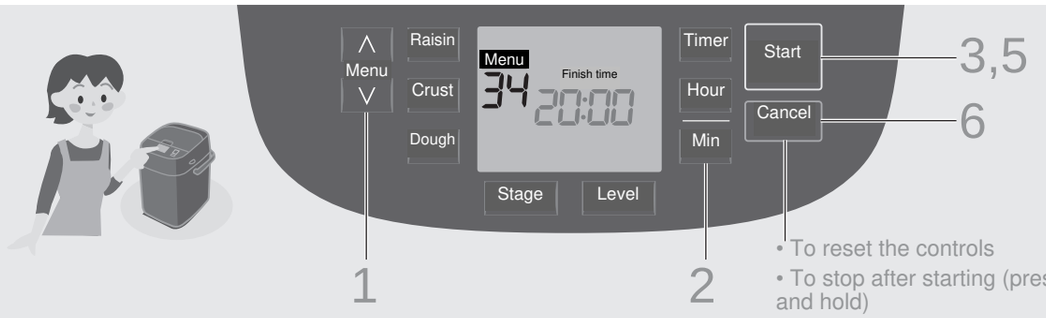

Preparation
1 Fit the kneading blade in the bread pan.
2 Add warm cooked rice and water. Break up the rice thoroughly with a rubber spatula.
3 Add the dried rice koji, breaking it up as you go. Stir with a rubber spatula until no lumps remain.
4 Set the bread pan in the appliance.
5 Close the lid.

Ingredients

Amazake — 622kcal (per batch)
- Warm cooked rice (white rice*): 200 g
- Water: 300 g (mL)
- Dried rice koji: 100 g

* Cooked brown rice, red rice or mixed-grain rice may also be used.

• Remaining lumps of rice or koji may prevent good results.

Flavour and sweetness vary with the type of rice koji.

If using fresh koji, replace 100 g of dried rice koji with 140 g of fresh koji.

With no additives, this is not suitable for long-term storage. Refrigerate and eat promptly.

If you accidentally press Cancel in step 4 Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 5 minutes or more elapse in step 4 The buzzer sounds and heating starts automatically.

Temperature control is important for amazake!

➡Always close the lid to maintain the required temperature.

1 Select program 34.

2 Set the finish time.

Press and hold to advance quickly.

• Set the finish time 6-10 hours ahead, in 10-minute increments, to suit your preference.
• Longer cooking makes it sweeter.

3 Press Start.

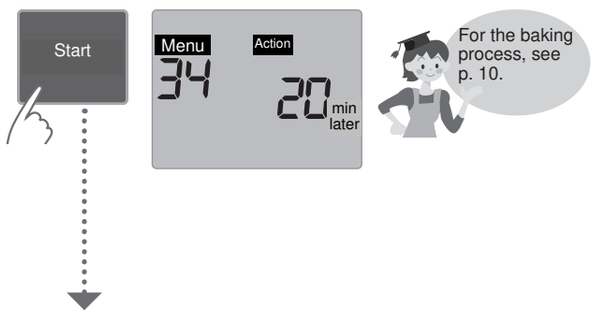

Within 5 minutes

4

When the beeps sound, open the lid and scrape down the rice grains.

• Use a rubber spatula or similar utensil to scrape rice from the sides. (Metal utensils damage the non-stick coating.)

• Do not press Cancel.

Close the lid. 5 Press Start again.

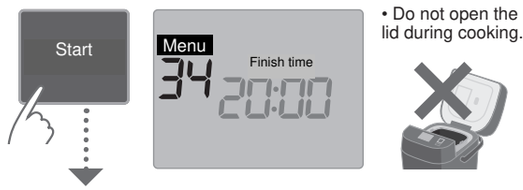

• Do not open the lid during cooking.

6

When the beeps sound, press Cancel. Remove the bread pan and let it cool for about 10 minutes.

• Place carefully so it cannot tip over.

7 Tilt the bread pan and slowly pour into a container using a rubber spatula.

• Always use a soft utensil such as a rubber spatula to remove it. Hard utensils damage the pan's non-stick coating.

Storage
Refrigerate immediately after cooling.

Mix with the finished amazake…

For seasonings

Sweet-salt sauce | 130 kcal
- Amazake: 100 g (about 100 mL)
- Coarse salt: 10 g

Amazake miso | 326 kcal
- Amazake: 100 g (about 100 mL)
- Miso: 100 g
- Grated ginger: 10 g

For dressings

Amazake dressing (plain) — 291 kcal

- Amazake: 3 tablespoons
- Vinegar: 1 tablespoon
- Olive oil: 2 tablespoons
- Salt: ½ teaspoon
- Coarsely ground pepper: a little

Amazake dressing (sesame oil) — 193 kcal

- Amazake: 4 tablespoons
- Vinegar: 1 tablespoon
- Sesame oil: 1 tablespoon
- Soy sauce: 1 tablespoon
- Toasted sesame seeds: 1 tablespoon

For drinks

Matcha milk amazake

Amazake lemon soda

Matcha milk amazake | 248 kcal
- Amazake: 150 g (about 150 mL)
- Milk: 75 g (about 75 mL)
- Matcha: ½ teaspoon

Amazake lemon soda | 129 kcal
- Amazake: 75 g (about 75 mL)
- Honey: ½ tablespoon
- Sparkling water: 100 g (mL)
- Lemon juice: ½ teaspoon
- Lemon: 1 thin slice

Sweet bean paste

Time required: approx. 1 hour(s)

Preparation
1 Boil the adzuki beans (see Boiling adzuki beans below).
2 Fit the kneading blade in the bread pan.
3 Add the sugar, then the boiled beans on top.
4 Set the bread pan in the appliance.

Ingredients (makes approx. 450 g)

Sweet bean paste	1276kcal
Boiled adzuki beans*: about 360 g	
Dried adzuki beans: 150 g	
Water: 450-600 g (mL)	
Sugar (Japanese white sugar): 200 g	

* Commercially prepared boiled beans do not give good results.

• Follow the quantities above exactly.

Boiling adzuki beans

1 Wash the beans and remove any insect-damaged beans and debris.
2 Put the beans and water in a saucepan over high heat.
3 Once boiling, reduce to medium heat and simmer for 4-5 minutes.
4 Drain in a colander to remove astringency.
5 Return the beans to the pan with plenty of water. Bring to a boil over medium heat, then reduce to low. Partially cover and simmer gently for about 60 minutes (time varies with the beans and heat).
• Add water whenever needed so the beans remain covered.
6 When the beans crush easily between your fingers, drain in a colander.

1 Select program 35.

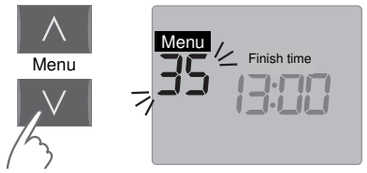

2 Press Start.

3

When the beeps sound, press Cancel and remove the bean paste with a rubber spatula.

• Always use a soft utensil such as a rubber spatula to remove it.
Hard utensils damage the pan's non-stick coating.
• Add a little salt if desired.

• The paste is soft immediately after cooking but firms up slightly as it cools.

Storage
Wrap in plastic wrap,
then:
➡ Refrigerate for about one week,
➡ or freeze for about one month.

Mochi

Time required: approx. 1 hour(s)

Preparation
1 Rinse the glutinous rice until the water runs clear.
• Do not soak it; soaking makes the mochi too soft.
2 Drain in a colander for 30 minutes.
3 Fit the noodle/mochi blade in the pan.
4 Add the glutinous rice, then the water.

Ingredients

Mochi	83 kcal per round mochi	
	2 go	3 go
Round mochi, about 35 g each	About 12	About 18
Glutinous rice	280 g (about 2 go)	420 g (about 3 go)
Water	180 g (mL)	260 g (mL)
Dusting starch	As needed	As needed

* Use potato starch, non-glutinous rice flour, cornstarch or similar.

• 1 go of glutinous rice weighs about 140 g.

Adjust the water to achieve your preferred softness.

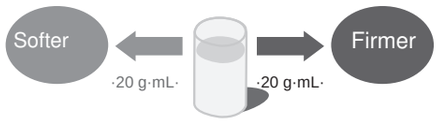

If you accidentally press Cancel in step 3
Press Start within 10 minutes to resume. (Once only. Pressing any other key disables this.)

If 30 minutes elapse in step 3
The buzzer sounds and pounding starts automatically with the lid still closed.
• The mochi will be softer and harder to remove.

If you soaked the glutinous rice
Reduce the water to allow for the amount absorbed.
Suggested reduction:
2 go: 80 g (mL)
3 go: 140 g (mL)

1 Select program 36.

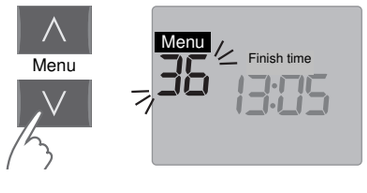

2 Press Start.

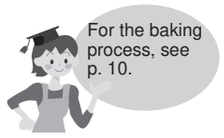

For the baking process, see p. 10.

Displays “55 minutes remaining” in a cool room.

• The blade rotates occasionally.

3 When the beeps sound, open the lid.

Within 30 minutes

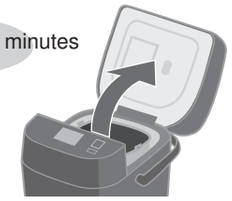

• Do not press Cancel.

4 Leave the lid open and press Start immediately.

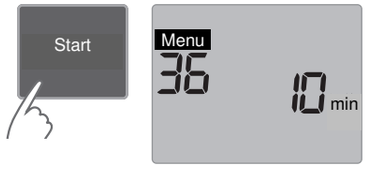

• Leave the lid open to let excess moisture escape.

Mugwort, sakura shrimp and similar ingredients may be added once pounding starts.
• Do not add hard ingredients such as beans; they can peel the non-stick coating from the pan.

Coat freshly pounded mochi with your favourite ingredients…

Sweet bean mochi

Kinako mochi

Grated radish mochi

Mix in during pounding…

Mugwort mochi

Once pounding starts, gradually add 30-50 g of mugwort and a little salt.

Boil the mugwort leaves, soak in cold water to remove bitterness, chop finely and squeeze well.)

Black sesame mochi

Once pounding starts, gradually add 2-3 teaspoons of black sesame seeds and a little salt.

Seaweed mochi

Once pounding starts, gradually add 2-3 teaspoons of aonori seaweed and a little salt.

Yuzu mochi

Once pounding starts, gradually add the grated zest of about ½ yuzu and a little salt.

5 When the beeps sound, press Cancel. Remove the bread pan immediately and let it cool until it can be touched (5-10 minutes).

• Results vary with the amount of water, the quantity and variety of glutinous rice, and whether it is newly harvested or older rice.

• If left too long, the surface of the mochi hardens.

6 Remove the mochi, lifting it from underneath.

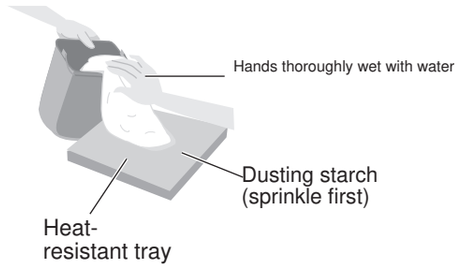

7 Pinch off portions and roll into balls.

To eat immediately: wet your hands with water.
For storage: coat your hands with dusting starch.

Storing mochi

1 Let the mochi cool, then brush off excess dusting starch.

2 At room temperature: keep in a cool, dry place and use within 2 days.

In the freezer: double-bag in plastic bags, seal and use within one month.

For an easier option, turn the mochi directly onto plastic wrap, wrap it and cut into blocks.

White bread dough

Time: approx. 1 hour

A simple, versatile dough for white bread and other everyday loaves.

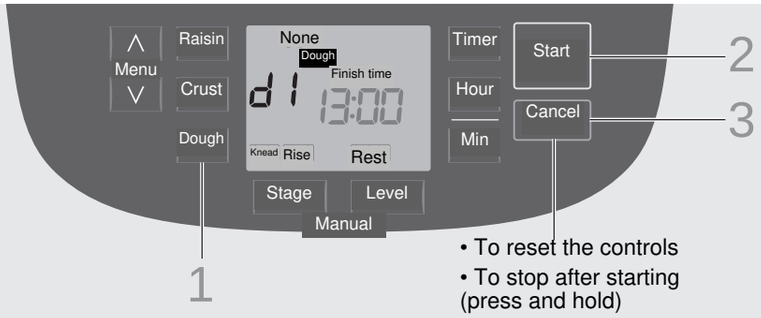

• To reset the controls
• To stop after starting (press and hold)

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients (except the dry yeast) in the pan.
3 Fit the pan in the machine and put the dry yeast in the yeast dispenser.

Ingredients

White bread dough	
Bread flour	250 g
Butter	15g 17 g (lar ge spoon 2)
Sugar	6 g (lar ge spoon 1)
Skim milk powder	5 g (1 small spoon)
Salt	180 g·mL· 2.8 g (1 small spoon)
Water	
Dry yeast	

* At room temperatures of 25°C or above, use cold water (about 5°C).

1 Select program “d1”.

Dough

■ Adding raisins or other extra ingredients (pp.20, 22) ➡ レーズン

2 Press Start.

3 When the beeps sound, press Cancel and remove the dough immediately.

• If left in the pan, the dough will continue to rise.
• Changing the dough recipe may slow down fermentation. (p.91)

Crusty bread dough

Time: approx. 2 hours

A chewy dough for French bread and other crusty loaves.

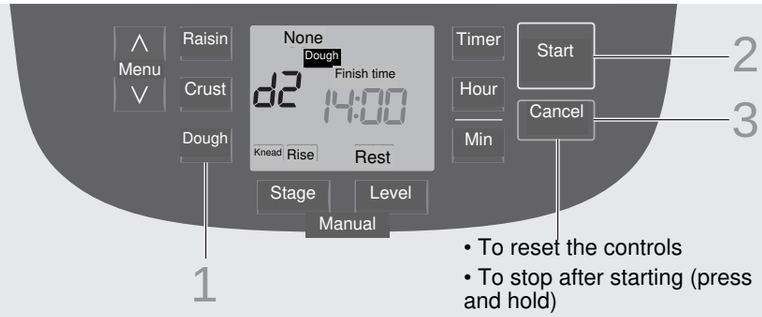

• To reset the controls
• To stop after starting (press and hold)

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients (except the dry yeast) in the pan.
3 Fit the pan in the machine and put the dry yeast in the yeast dispenser.

Ingredients

Crusty bread dough	
French bread flour	250 g
Malt powder	1g 5 g (1 small spoon)
Salt	190g·mL· 1.4 g (small spoon ½)
Cold water (5°C)	
Dry yeast	

• If French bread flour is unavailable, use 200 g bread flour and 50 g cake flour.

1 Select program “d2”.

Dough

■ Adding raisins or other extra ingredients (pp.20, 22) ➡ レーズン

2 Press Start.

3 When the beeps sound, press Cancel and remove the dough immediately.

• If left in the pan, the dough will continue to rise.
• Changing the dough recipe may slow down fermentation. (p.91)

Enriched dough

Time: approx. 1 hour

A soft, moist dough for butter rolls, sweet buns and other enriched breads.

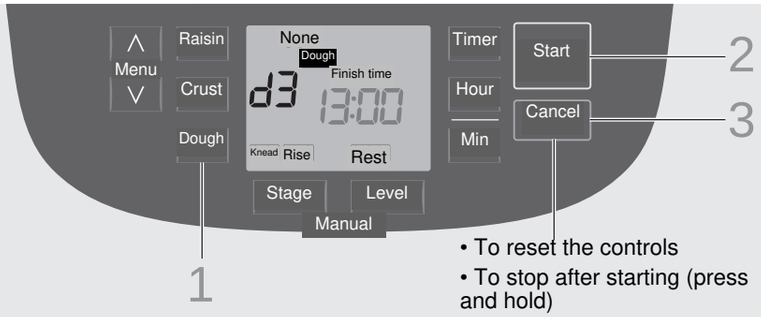

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients (except the dry yeast) in the pan.
3 Fit the pan in the machine and put the dry yeast in the yeast dispenser.

Ingredients

Enriched dough	
Bread flour	250 g
Butter	40g
Sugar	25.5 g (lar ge spoon 3)
Skim milk powder	12 g (lar ge spoon 2)
Salt	5 g (1 small spoon)
Egg (beaten)	25 g (½ medium e g g)
Water	140 g·mL·
Dry yeast	2.8 g (1 small spoon)

* At room temperatures of 25°C or above, use cold water (about 5°C).

1 Select program “d3”.

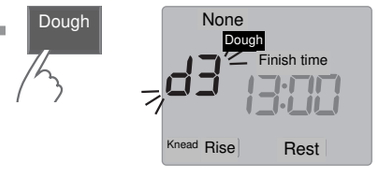

■ Adding raisins or other extra ingredients (pp.20, 22) → レーズン

2 Press Start.

3 When the beeps sound, press Cancel and remove the dough immediately.

• If left in the pan, the dough will continue to rise.
• Changing the dough recipe may slow down fermentation. (p.91)

Natural yeast bread dough

Time: approx. 4 hours

A flavourful dough for a variety of natural yeast breads.

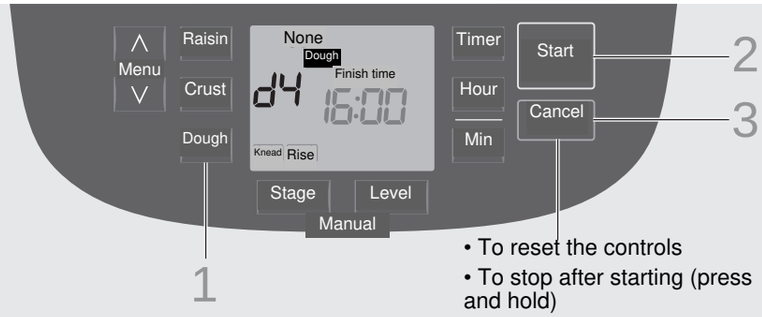

Preparation (p.46)
1 Prepare the natural yeast starter (p.45).
2 Fit the kneading blade in the bread pan.
3 Add the starter first, followed by the flour, water and other ingredients.
4 Fit the pan in the machine.

Stir the starter before measuring!

Ingredients

Natural yeast bread dough	
Prepared starter	25 g (lar ge spoon 2)
Bread flour	300g
Butter	10g
Sugar	17 g (lar ge spoon 2)
Salt	5 g (1 small spoon)
Water	160 g·mL·

* At room temperatures of 25°C or above, use cold water (about 5°C).

■ If the dough is sticky
(This dough is stickier than dough made with dry yeast.)

1 Put the dough in a bowl, cover with plastic wrap and rest in the refrigerator for 30–60 minutes.
2 Dust with flour (sprinkle bread flour on the work surface, rolling pin and dough).
• Dust several times if the dough is sticky.

1 Select program “d4”.

■ Adding raisins or other extra ingredients (pp.20, 22) → レーズン

2 Press Start.

3 When the beeps sound, press Cancel and remove the dough immediately.

Pizza dough

Time: approx. 45 minutes

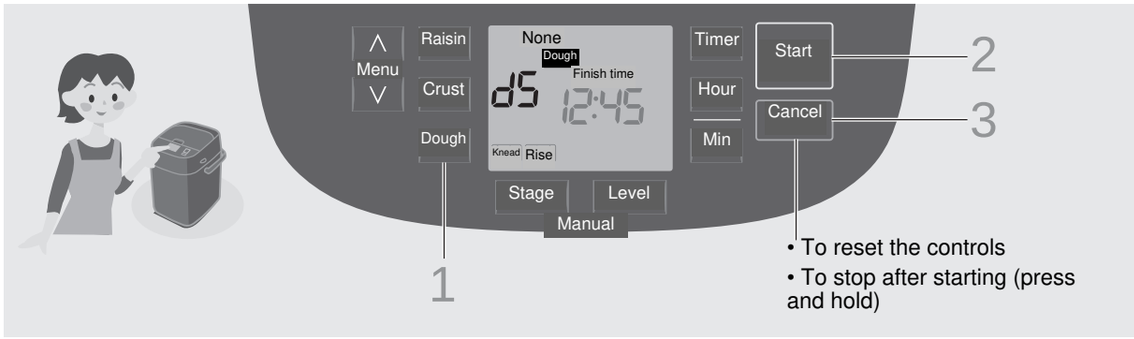

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water and other ingredients (except the dry yeast) in the pan.
3 Fit the pan in the machine and put the dry yeast in the yeast dispenser.

Ingredients

Pizza dough	
Bread flour	280 g
Butter	15g 8.5 g (lar ge spoon 1)
Sugar	6 g (lar ge spoon 1)
Skim milk powder	5 g (1 small spoon)
Salt	180 g·mL· 2.8 g (1 small spoon)
Water	
Dry yeast	

* At room temperatures of 25°C or above, use cold water (about 5°C).

1 Select program “d5”.

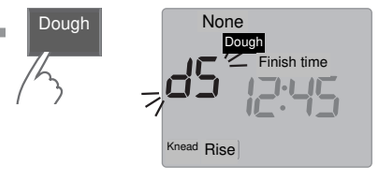

2 Press Start.

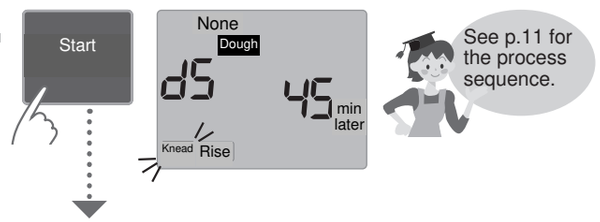

3 When the beeps sound, press Cancel and remove the dough immediately.

• If left in the pan, the dough will continue to rise.
• Changing the dough recipe may slow down fermentation. (p.91)

8-minute dough

Time: approx. 8 minutes

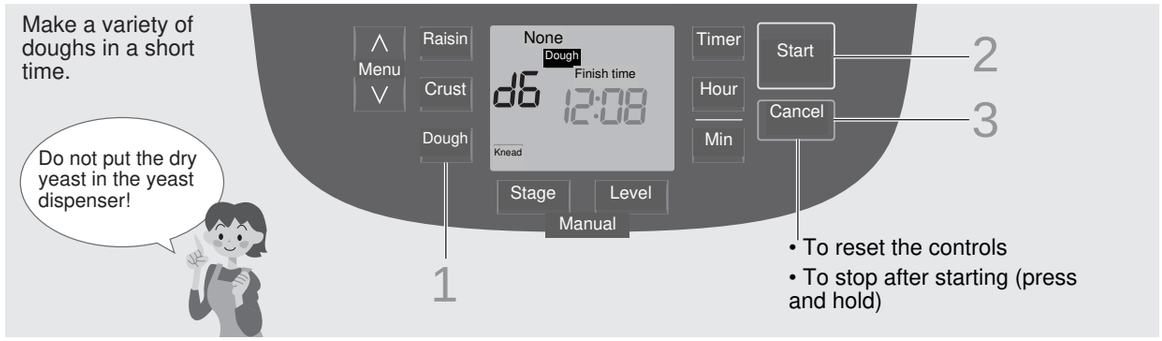

Ingredients

Crisp pizza dough	
Bread flour	250 g
Olive oil	30g 2.5 g (small spoon ½)
Salt	160 g·mL· 1.4 g (small spoon ½)
Water	
Dry yeast	

* At room temperatures of 25°C or above, use cold water (about 5°C).

Naan dough	
Bread flour	280 g
Olive oil	13g 8.5 g (lar ge spoon 1)
Sugar	2.5 g (small spoon ½)
Salt	190 g·mL· 2.8 g (1 small spoon)
Water	
Dry yeast	

* At room temperatures of 25°C or above, use cold water (about 5°C).

Tortilla dough	
Corn flour	100 g
Bread flour	100g 2.5 g (small spoon ½)
Salt	130g·mL·
Water	

* Dough firmness may vary with the type and particle size of the corn flour.

Sweet bean bun dough	
Cake flour	180 g
Bread flour	70g
Vegetable oil	13g 17 g (lar ge spoon 2)
Sugar	2.5 g (small spoon ½)
Salt	
White of 1 medium egg + milk (combined)	150 g
Baking powder	5g 2.8 g (1 small spoon)
Dry yeast	

Gyoza dough	
Bread flour	180 g
Cake flour	100g
Lukewarm water (35°C)	160g·mL·

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put all the ingredients in the pan.
3 Fit the pan in the machine.

1 Select program “d6”.

2 Press Start.

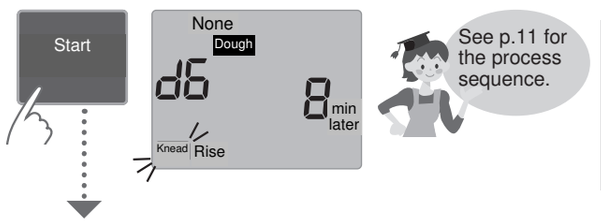

3 When the beeps sound, press Cancel and remove the dough immediately.

Udon / pasta

Time: approx. 15 minutes

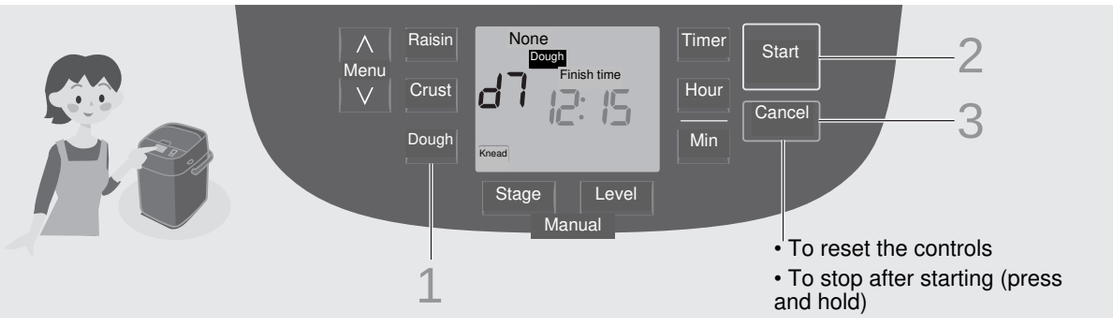

Preparation
1 Fit the noodle/mochi blade in the bread pan.
2 Mix ingredients A together in a bowl.
3 Mix ingredients B together in a separate container.
4 Put A, then B, into the bread pan. (For pasta dough, add the olive oil last.)

Ingredients

Soba and ramen dough cannot be made.

Udon (serves 3–4)	284 kcal
A. Bread flour	150 g
A. Cake flour	150g
A. Salt	10 g (2 small spoon)
B. Lukewarm water *1	150 g·mL·
Flour for dusting *2	As needed

*1 Use lukewarm water at 35–40°C.
*2 Use potato starch, bread flour or similar flour for dusting.

Pasta (serves 3–4)	302kcal
A. Bread flour	150 g
A. Durum semolina flour	150 g
A. Salt	5 g (1 small spoon)
B. Egg (beaten)	50 g (1 medium e g g)
B. Water	110g·mL·
Olive oil	4 g (tsp 1)
Flour for dusting *2	As needed

*1 Flour for pasta, available at department stores throughout Japan.
*2 Use potato starch, bread flour or similar flour for dusting.

■ You can also make colourful variations of pasta!

➡1 Boil the vegetables, then purée them in a food processor or similar appliance and put them in the bread pan.
➡2 Depending on the ingredient added, reduce the water by 10–30 g (mL).

(The basic amount is 110 g (mL).)
• With 1 tablespoon black sesame paste:
110 g (mL) water
With 47 g (3 tablespoons) tomato purée: 80 g (mL) water
With 50 g spinach purée: 80 g (mL) water

1 Select program “d7”.

2 Press Start.

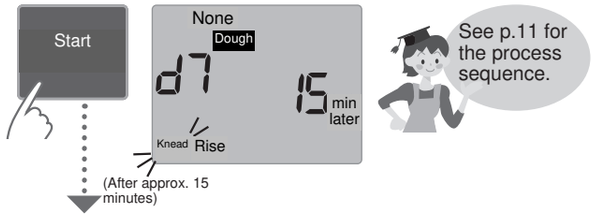

See p.11 for the process sequence.

3 When the beeps sound, press Cancel and remove the dough immediately.

• Pasta: about 1 hour in the refrigerator

4 Shape into a ball with the smooth side facing out, wrap in plastic wrap or similar covering, and leave to rest.

• Udon: approx. 2 hours at room temperature (in the refrigerator if the room is warm).

■ Storage
• Refrigerator: 2–3 days
Dust with flour and wrap in plastic wrap.
• Freezer: approx. 1 month
➡Cut into noodles (p.79), then wrap in plastic wrap.

Udon

● Roll out
● Cut
● Boil

1 Divide into 2–4 equal pieces with a knife or dough scraper.
2 Dust with flour and roll from the centre outwards to about 3 mm thick.

(Bring refrigerated dough to room temperature before rolling.)

3 Fold the dough and cut from one end into strips about 3 mm wide.
(Dust with flour if it is difficult to cut.)

4 Bring plenty of water to the boil in a large saucepan. Shake the dusting flour off the noodles and boil them.
(Approximate cooking time: 8–13 minutes.)
5 Rinse in cold water to remove surface starch and drain.

• The appearance, firmness and texture differ from commercially sold dried pasta.

Pasta

● Roll out
● Cut
● Boil

1 Divide into 4 equal pieces with a knife or dough scraper.
2 Dust with flour and roll from the centre outwards to about 1 mm thick.

3 Dust the surface with flour, roll up from one end, and cut into strips about 5 mm wide.

(Cut slightly narrower, as the noodles expand a little when boiled.)
4 Unroll the noodles and dust with flour.

5 Bring plenty of water to the boil in a large saucepan. Shake the dusting flour off the noodles and boil them.
(Approximate cooking time: 3–5 minutes.)

• A pasta machine can also be used for steps 1–3. (Dust the dough thoroughly with flour.)

About manual mode

Use individual stages of the bread-making process. Select Knead, Rise or Bake, then set the level and time.
• When using Knead or Rise, check the dough's condition as appropriate for the bread you are making.

- Capacity: 200–300 g flour
- For ingredients that must not be used during Knead, see "Take care with these ingredients!" on p.22.
- Always pause the machine before checking the dough during operation.

Knead

Rotation speed levels for different tasks
• Level 1: combining flour or making marbled dough
• Level 2: low speed / mixing in extra ingredients
• Level 3: medium speed
• Level 4: high speed

• For 30 seconds after starting, or restarting after a pause, the blade turns slowly to prevent flour from scattering. It then changes to the selected speed.
• The level can be changed after starting. During the first 30 seconds of slow rotation, however, the change takes effect only when that period has ended.

Time settings: Levels 1, 2 and 3: 1–30 minutes
Level 4: 1–15 minutes

Rise

Rising temperature levels for different uses
• Level 1: resting / bench rest
• Level 2: crusty breads
• Level 3: white breads and enriched breads
• Level 4: proofing after shaping / final proofing

• The level can be changed after starting.

Time settings: 10–120 minutes

Bake

Baking temperature levels for different breads
• Level 1: brioche / white breads (light crust)
• Level 2: pain de mie / white breads (medium crust)
• Level 3: rye / wholemeal / white breads (dark crust)
• Level 4: French bread

• The level can be changed after starting.

Time settings: 30–50 minutes
• If the bread is not baked enough when the program finishes, you can use Additional Baking.
Additional baking: up to 2 times*

* Available until the total set baking time reaches 50 minutes. After 50 minutes, "U50" appears on the display and additional baking is unavailable. (p.101)

Manual mode | Knead

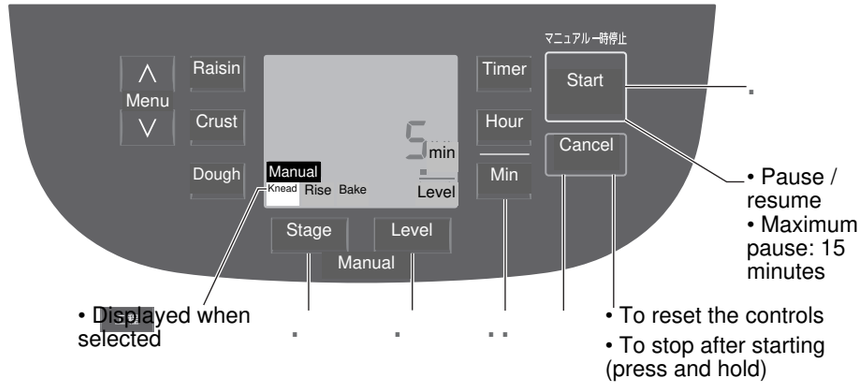

Kneading dough

Preparation (p.18)
1 Fit the kneading blade in the bread pan.
2 Put the flour, water, dry yeast or dried natural yeast, and other ingredients in the pan.
(Dry yeast and dried natural yeast are not dispensed automatically.)
3 Fit the pan in the machine.
4 Close the lid.

1 Press Stage to select Knead.

2 Press Level to select the rotation speed.

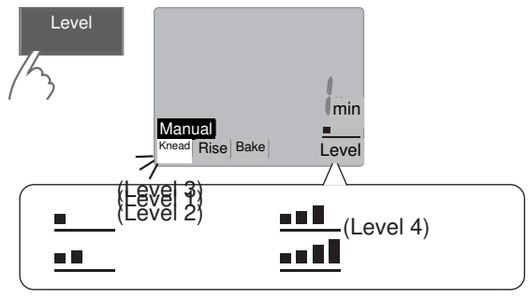

• For 30 seconds after starting, or restarting after a pause, the blade turns slowly to prevent flour from scattering. It then changes to the selected speed.
• The level can be changed after starting. During the first 30 seconds of slow rotation, however, the change takes effect only when that period has ended.

3 Set the kneading time.

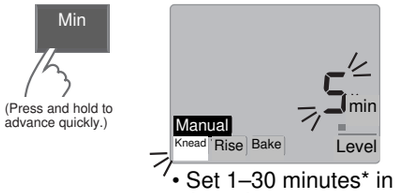

• Set 1–30 minutes* in 1-minute increments.

* When Level 4 is selected: 1–15 minutes

4 Press Start.

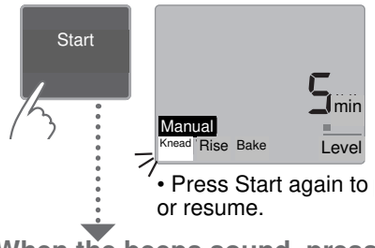

• Press Start again to pause or resume.

5 When the beeps sound, press Cancel and remove the dough immediately.

• To continue kneading, leave the dough in the pan and repeat from step 1.
• If you remove the dough before kneading again, remove any dough stuck to the blade mounting shaft. (p.86)

Manual mode | Rise

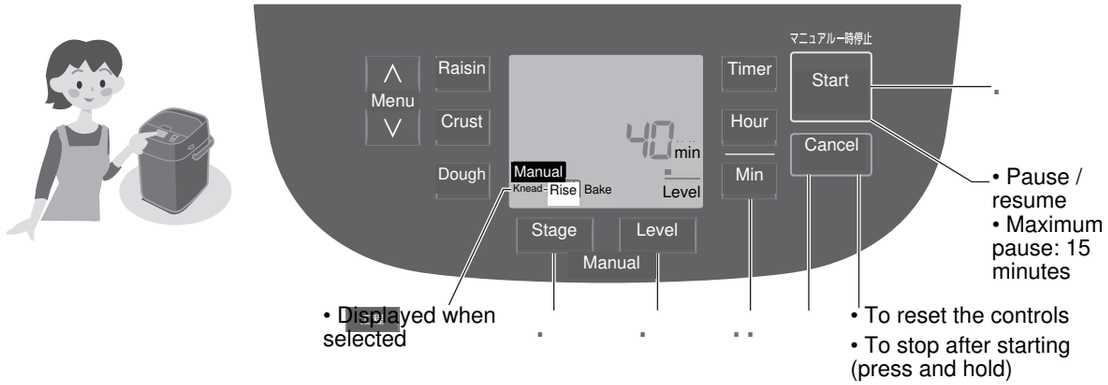

Rising dough

Preparation (p.18)
1 Put the dough in the bread pan.
2 Fit the pan in the machine.
3 Close the lid.

1 Press Stage to select Rise.

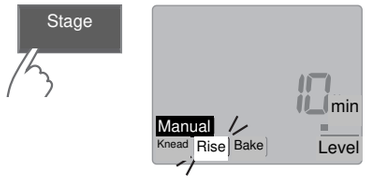

2 Press Level to select the rising temperature.

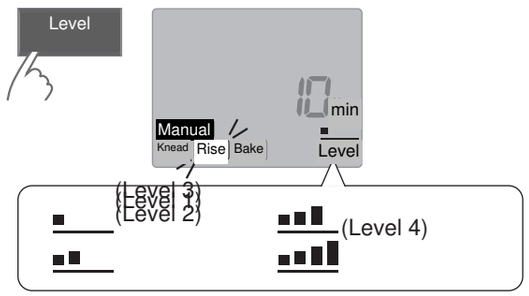

• The level can be changed after starting.

3 Set the rising time.

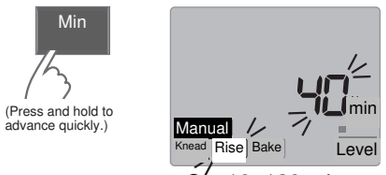

• Set 10–120 minutes in 5-minute increments.

4 Press Start.

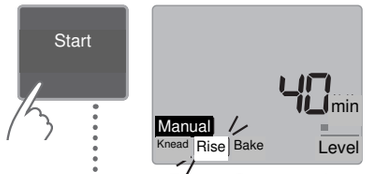

• Press Start again to pause or resume.

5 When the beeps sound, press Cancel and remove the dough immediately.

• To continue rising, leave the dough in the pan and repeat from step 1.

Manual mode | Bake

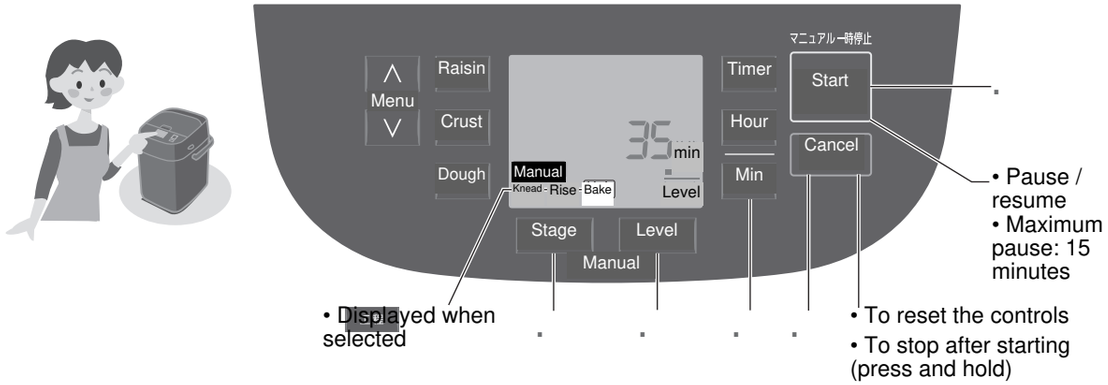

Baking dough

Preparation (p.18)
1 Put the dough in the bread pan.
2 Fit the pan in the machine.
3 Close the lid.

1 Press Stage to select Bake.

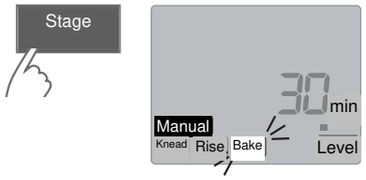

2 Press Level to select the baking temperature.

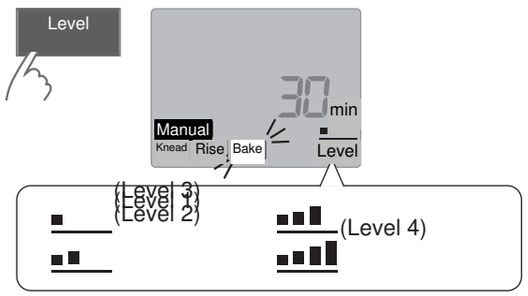

• The level can be changed after starting.

3 Set the baking time.

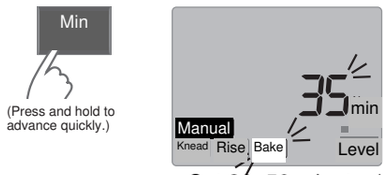

• Set 30–50 minutes* in 1-minute increments.

* For additional baking: 1–20 minutes

4 Press Start.

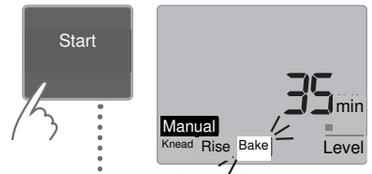

• Press Start again to pause or resume.

5 When the beeps sound, press Cancel and remove the bread pan. Let it cool for about 2 minutes, then remove the bread.

Additional Baking: when the bread needs more time

After baking, you can bake further until the total time, including the first bake, reaches 50 minutes. (For example, a 35-minute first bake allows 15 minutes of additional baking.)
Repeat from step 1 on the left.
• Additional baking can be selected for about 15 minutes after baking ends. It is unavailable once the oven chamber cools down.

■ You can also start Additional Baking as follows.
• If you have not pressed Cancel in step 5 above
1 Press 分 the time button and set the baking time.
2 Press スタート start.

Useful functions

My Knead

Save a pattern of up to three kneading stages (level and time), then recall it whenever needed.

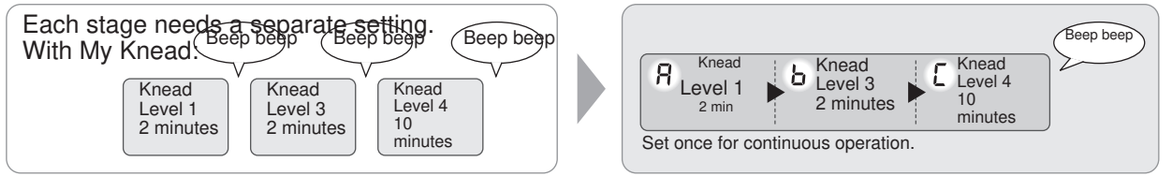

• To set My Knead

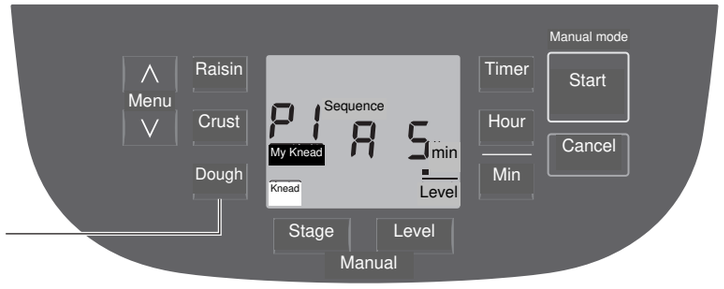

Make a note of the following details for convenient recall.

My Knead number	Saved settings			
	Recipe	Sequence A	Sequence b	Sequence C
P1		Level: Kneading time:	Level: Kneading time:	Level: Kneading time:
P2		Level: Kneading time:	Level: Kneading time:	Level: Kneading time:
P3		Level: Kneading time:	Level: Kneading time:	Level: Kneading time:
P4		Level: Kneading time:	Level: Kneading time:	Level: Kneading time:
P5		Level: Kneading time:	Level: Kneading time:	Level: Kneading time:

Setting and using My Knead

• Save up to five kneading patterns under My Knead numbers P1, P2, P3, P4 and P5.
• Each pattern contains up to three kneading stages (level and time), entered as Sequences A, b and C.

1 Press Dough to display the My Knead number under which you want to save the pattern.

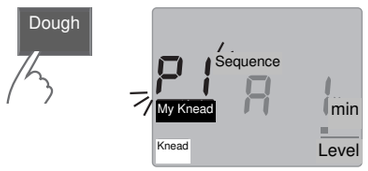

2 Press Stage to select Sequence A.

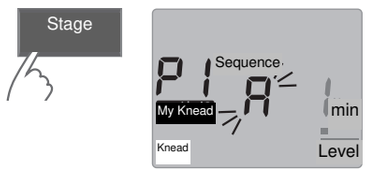

3 Press Level to select the rotation speed.

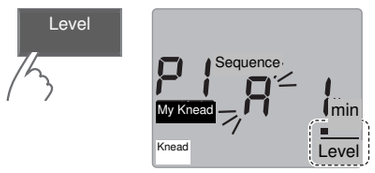

• The level cannot be changed after starting.

4 Set the kneading time.

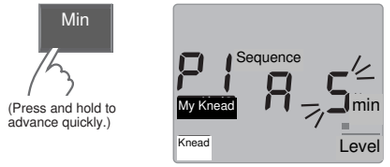

• Set 1–30 minutes* in 1-minute increments.
(Sequences b and C may be set to 0 minutes; Sequence A may not.)

* When Level 4 is selected:
1–15 minutes
(The total time set at Level 4 across Sequences A–C must not exceed 15 minutes.)

5 Press Stage to select Sequence b.

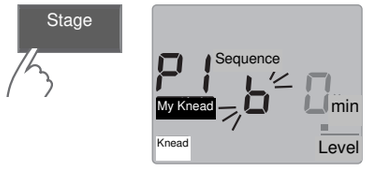

6 Set the level and kneading time (repeat steps 3–4).

⑦ To set Sequence C, repeat steps ②–④.

• If you want to change a sequence setting or save the pattern under another My Knead number, press Cancel before Start to restore the previous settings.

⑧ Press Start.

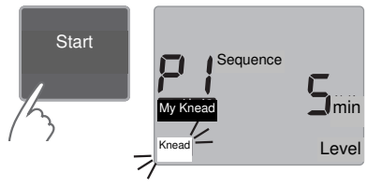

• Displays the total time remaining across Sequences A–C.

• Pressing Start saves your settings. Recall them the next time you make the same recipe (right).
• Keeping a record of your settings makes them easier to recall (above).
• If settings are not saved, the lithium battery has reached the end of its life.

Have the battery replaced by the retailer.
• During operation, press Stage to display the current sequence and its remaining time.
• To change an existing My Knead pattern, repeat from step 1 to overwrite its settings.

Recalling a My Knead pattern

Convenient when making the same recipe again.

Display the My Knead number you want to use.

• Press Stage to check the settings for Sequences b and C.

② Press Start to begin.

Cleaning

To avoid damaging parts…

- Wash and dry promptly.
- Do not wash in a dishwasher.
- Do not use the following (they damage surfaces).

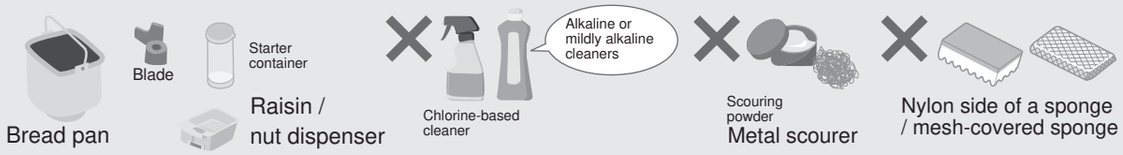

Bread pan / blades

Remove any remaining dough and rinse with water.

1 Pour warm water into the bread pan and leave it to soak for a while.

- If the blade is difficult to remove, turn it left and right, then pull it off.

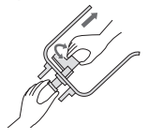

2 Thoroughly wash the bread pan and blade with water and a sponge.

- If there is a white film on the blade, wash it with mild dishwashing detergent. Residue makes dough more likely to stick and can leave the blade inside the loaf.

- Do not leave dough around the mounting shaft. This can damage the pan's fluororesin coating.

3 Use a bamboo skewer to remove dough caught in the blade or mounting shaft.

- Dough left on the mounting shaft can make the blade come off more easily or remain inside the loaf.

Lid

Wipe with a well-wrung damp cloth.

- After wiping the dispensing valve with a damp cloth, check that the ingredient opening is closed.

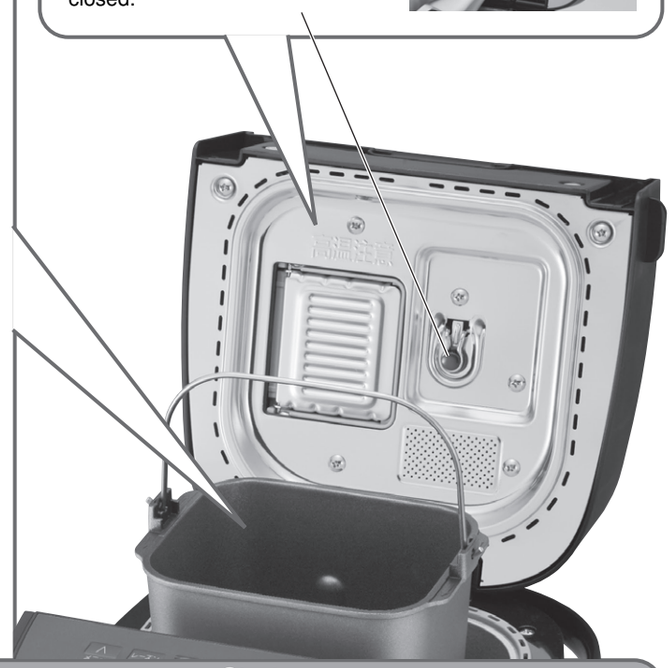

Starter container

Wash thoroughly with mild dishwashing detergent and dry.

- Starter residue allows bacteria to multiply and cause spoilage, preventing the next starter batch from developing properly.

■ If spoilage occurs:
1 Soak in diluted chlorine-based kitchen bleach.
2 Rinse thoroughly.

Upper lid

Remove and wipe with a well-wrung damp cloth.

[Removal]

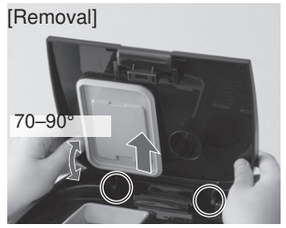

- Open to 70–90° and pull upwards.

Yeast dispenser

Wipe with a well-wrung damp cloth and allow to air-dry.

Do not dry-wipe the yeast dispenser!

Static electricity may prevent the yeast from dropping.

Main unit

Wipe with a well-wrung damp cloth.

- Remove flour, ingredients and extra ingredients scattered inside the oven chamber.
- Oil residue or water droplets may collect around the steam vent.

Raisin/nut dispenser

Remove and wash with mild dishwashing detergent.

- Pull upwards.

- Press to open the flap.
- Remove all oily residue.

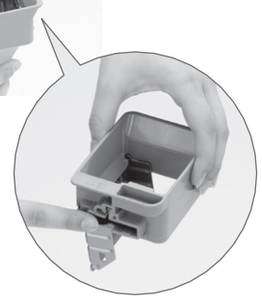

Frequently asked questions

Scan the QR code for detailed support information.

Can I use any brand of Japanese wheat flour?

Use Japanese bread flour with a high protein content (at least 11%). Many flours made from Japanese wheat are lower in protein. Protein content varies by brand and harvest season, so results and loaf height will vary.

Can I use Japanese wheat flour in recipes other than those on the recipe book's back cover?

You can try, but the loaf will be smaller and chewier. (Try reducing the water in the basic recipe by 10 g (mL).)
It is not recommended for Soft White Bread, French Bread and similar programs because their characteristic texture will be lost.

Can I use specialist flour?

White bread
Yes, but adjust the water. The loaf may rise too much or develop a cavity near the top, so reduce the water by 5–10%.

French bread
Yes, but the result and loaf height vary depending on the specialist flour used.

Udon (medium-strength flour)
If the dough is too firm, add 10 g (mL) more water. If it is too soft, reduce the water by 10 g (mL).

Can I substitute another ingredient for butter or shortening?

Yes. Solid fats such as butter, margarine and shortening can be substituted in equal amounts.

• Different fats may make the crust lighter or darker, or affect the result.

Can I substitute another ingredient for skim milk powder?

Yes.
6 g skim milk powder (1 large spoon) is equivalent to 70 g milk (about 70 mL).
• When using milk, reduce the water by the same amount.

Can I use quantities from a commercially published cookbook?

The quantities in this manual are tailored to this bread maker. Different quantities may not give good results.

Can I make a half loaf?

Only the Half Loaf program (p.40) can be used. Halving the ingredients in other programs does not suit the machine's process: kneading and resting (degassing), for example, may be too vigorous.

Can I use homemade natural yeast?

Its fermentation strength tends to be inconsistent, so it will not give reliable results.
➡We recommend Hoshino Natural Yeast Bread Starter, which has relatively consistent fermentation strength.

How should I store natural yeast granules and prepared starter?

Natural yeast granules (p.15)
Sensitive to high temperatures: seal tightly and refrigerate.
• Use before the best-best-before date (valid for unopened products stored as directed).

Prepared starter (p.45)
Keep in the starter container with the lid on and refrigerate.
• Use within one week.

How should I store dry yeast and dried natural yeast?

Refrigerate. (After opening, seal tightly and use promptly.)
• Use before the best-before date (valid for unopened products stored as directed).
• Do not freeze. (Condensation may prevent the yeast from dropping out of the dispenser.)

Can bread mixes be used with natural yeast programs?

Dried Natural Yeast Bread program
White bread mix and soft white bread mix can be used.
➡Instead of the supplied dry yeast, put 5 g dried natural yeast per bag of bread mix into the yeast dispenser.

Natural Yeast Bread program
White bread mix and sweet white bread mix can be used.
➡Instead of the supplied dry yeast, use 25 g prepared starter (2 large spoons) and 170 g (mL) water per bag of bread mix.

Can I make rice flour bread with ordinary rice flour (joshinko)?

Do I have to use the specified flour?

Joshinko contains no gluten and its particles are coarse, so bread cannot be made from it alone.
Always use the specified flour for the Rice Flour Bread (with wheat / no wheat) programs.
Ordinary rice flour (joshinko) can replace up to 20% of the total flour in a wheat-flour bread. (Bake using program 3, White Bread.)

Can I use a different bread-making rice flour for Rice Flour Bread (with wheat)?

No. Rice flours produce doughs of different firmness even with the same recipe, so the dough cannot be kneaded properly.

What cooked rice can I use for Cooked-rice Bread / Rice French Bread?

Use cooled cooked white rice, preferably at 30°C or below. Refrigerated rice can also be used. If it has clumped together, loosen it first with the recipe's water to help it mix (p.94).
Thaw frozen rice and allow it to reach room temperature before use.
Use rice that has been kept warm for no more than 12 hours, and cool it before use.

Can I freeze the cookie dough for melon bread before use?

Yes. Thaw it naturally beforehand and make sure it is not too firm when placing it on the bread dough.

Where can I buy durum semolina flour?

It is available at department stores throughout Japan.

What flour should I use for dusting?

We recommend bread flour when shaping bread, and potato starch for mochi. (Cornstarch, bread flour and similar flours can also be used.)

Can I use glutinous rice soaked overnight?

Yes, but it becomes too soft, so this is generally not recommended. Reduce the water to allow for what the rice has absorbed: 80 g (mL) for 2 go, or 140 g (mL) for 3 go.

Frequently asked questions

Why is my loaf small when I use Japanese wheat flour?

Some brands of Japanese wheat flour have a lower protein content and may produce a smaller loaf.

Can I bake a square-topped loaf?

This bread maker produces domed loaves: the dough expands upwards during baking (oven spring).

How can I slice bread neatly?

Bread is difficult to slice straight after baking. Wait a little before slicing.

• Lay the loaf on its side and move a bread knife back and forth.

Why is the bread difficult to remove?

If it is still difficult to remove after taking out the bread pan and letting it cool for about 2 minutes, return the pan to the machine for 5–10 minutes, then try again. (p.32)
• Leaving it too long may cause the loaf to shrink and its sides to collapse.

• Do not use a knife, fork, chopsticks or similar utensil to remove the bread. (This damages the fluororesin coating.)

Why is dough left on the kneading blade?

Low-viscosity (soft) dough may stick to the blade. Remove the remaining dough and rinse the blade with water. (p.86)

What can I do with bread trimmings?

Use them to make rusks or breadcrumbs.

Can I freeze bread or dough?

White bread
Slice, wrap each slice individually in plastic wrap and freeze. For the best flavour, freeze bread while it is as fresh as possible.

• For best flavour, keep frozen for about one month.

Butter rolls
After shaping and proofing, arrange on a tray, cover with plastic wrap and freeze. Once frozen, transfer to a plastic bag.
To bake, thaw at 30–35°C, brush with beaten egg and bake.

• If short of time, brush with beaten egg while still frozen and add about 5 minutes to the baking time.

Pizza
Wrap the rolled-out dough in plastic wrap and freeze.
To bake, add toppings to the frozen dough and bake.

Why does bread made with natural yeast differ slightly from bread made with dry yeast?

Texture and flavour vary with the natural yeast used. Natural yeast bread generally has these characteristics:

• A slightly smaller loaf and darker crust
• A distinctive flavour: the crust smells somewhat like rice crackers or soy sauce, with a mildly sour and sweet taste
• A slightly coarser crumb
• A chewy, substantial texture
During baking, it also gives off a fermented smell similar to yoghurt.

Why is dry yeast still visible in dough made with a dough program?

As long as it has been kneaded into the dough, this is not a problem. It will work during dividing, shaping and the second rise.

Why is the dough soft?

Try reducing the water by 5–10 g (mL). Dusting with flour makes the dough easier to handle.

Why does the kneading blade remain in the loaf?

As the bread rises, the blade may unlock and come out with the loaf. Always remove it before slicing, as cutting the loaf with the blade inside will damage the blade.

Why can't I remove the kneading blade?

Dough has hardened around the mounting shaft.
➡Pour warm water into the pan and leave to soak. Then turn the blade left and right and pull it off. (p.86)

Why does the blade come off during operation?

Dough hardened on the mounting shaft prevents the blade from fitting securely. Clean the blade and mounting shaft. (p.86)

Why hasn't the dough risen much in the bread dough or pizza dough program?

Some recipes ferment more slowly. After the bread dough or pizza dough program ends, leave the lid closed to allow more rising time. (Approx. 20–30 minutes.)

Can I reuse dough from an unsuccessful batch?

For example, dough that has not been baked…

You can use it for doughnuts, pizza and similar recipes. Check the stage at which the machine stopped, then proceed as follows.

Programs using dry yeast or dried natural yeast
• If yeast remains in the yeast dispenser:

➡Use program d3 (Enriched Dough) to make dough for doughnuts (Recipe Book p.33), or d5 (Pizza Dough) to make pizza dough (Recipe Book p.36).
• If no yeast remains in the yeast dispenser:

➡Remove the dough and make doughnuts (Recipe Book p.33) or pizza (Recipe Book p.36).

Programs using natural yeast
➡Remove the dough and make doughnuts (Recipe Book p.33).

Why does the pasta feel different from commercially sold dried pasta?

The preparation method differs from dried pasta, so its appearance, firmness and elasticity are different.

Why are the noodles difficult to cut?

Measure accurately and dust the dough thoroughly with flour.

The fluororesin coating on the bread pan or another part has peeled.
Can I still use it?

Hard ingredients may cause the fluororesin coating on the pan or other parts to peel. (p.22)
Accidentally swallowing a flake of this coating does not cause harm to the body.

Ingredients remain in the raisin/nut dispenser.

Depending on the ingredient and how it is processed, some may remain in the dispenser. You can set the buzzer (♪) and add them by hand.

Troubleshooting results

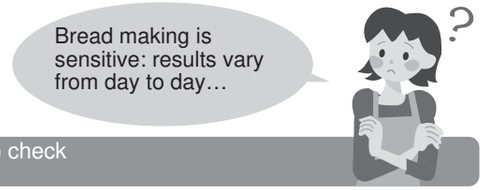

Bread: rising

Problem	What to check	
Not enough rise Approximate size White Bread / Soft White Bread Loaf height: below 15 cm Other programs Loaf height: below 14 cm • Pain de mie • Cooked-rice bread • Rice flour bread: with wheat Below 13 cm • Rapid white bread • Quick sweet bread • Wholemeal bread (50% wholemeal flour) • Brioche • Marbled bread Below 12 cm • Rich pain de mie • Sandwich bread • Rice French bread • Low-carb bread • Natural yeast bread Below 11 cm • Wholemeal bread (100% wholemeal flour) Below 10 cm • French bread • Custom bread • Rice flour bread: no wheat • Dried natural yeast bread Below 8 cm • 60-minute bread • Rye bread • Pale-crust bread • Half loaf	• Shape and rise vary with temperature, humidity, ingredients, timer settings and other conditions. • Did you add too many raisins or other extra ingredients? • Is the room too hot? (High room temperatures can impair the result.) Chill the flour and other ingredients in the refrigerator. • Are you using Japanese wheat flour with less than 11% protein? (p.90)	
	Flour (except Japanese wheat flour)	• Did you weigh it with a scale? • Is the flour outside the 12–15% protein range? • Did you use bread flour? • Is the flour old? For French Bread and Brioche: • Is the ratio of bread flour to cake flour incorrect?
	Water	• Did you use too little? For Rapid White Bread, Quick Sweet Bread, Rice French Bread, French Bread, Rye Bread, Wholemeal Bread, Brioche and Custom Bread: • Do you always use cold water at about 5°C? At room temperatures of 25°C or above: • Did you use cold water at about 5°C?
	Sugar • Did you use too little?	
	Dry yeast / dried natural yeast	• Are you using dry yeast that does not require pre-fermentation? • Are you using dried natural yeast that does not require starter preparation? • Did you put it in the yeast dispenser? • Did you use too little? • Is it stored in the refrigerator? (p.13) • Has the best-before date passed?
	Prepared starter	• Did you use starter prepared from Hoshino Natural Yeast Bread Starter? • Did you stir the starter before measuring? • Did you put it in the bread pan? • Did you use too little?
Rises too much Approximate size 20 cm or more (18 cm or more for Sandwich Bread)	Flour • Did you use too much?	• Are you using specialist bread-making flour? (p.88)
	Water • Did you use too much?	
	Dry yeast / dried natural yeast / prepared starter	• Did you use too much? If the loaf rises too much with the specified quantities, try reducing the dry yeast, dried natural yeast, prepared starter or sugar by ¼–½. • At altitudes above 1,000 m, the loaf may rise too much.

Bread: shape

Problem	What to check	
Does not rise at all (white and lumpy throughout) 	Dry yeast / dried natural yeast / prepared starter	• Did you forget to add it? • Was it stored poorly, or has its best-before date or use-by period passed? • Did you use baking powder by mistake?
		• Did you forget to fit the kneading blade? • Was there a power failure during operation?
Shape and rise vary from day to day		• Homemade bread varies in shape and rise from day to day under conditions such as these: Room temperature: High temperatures (such as in summer), or changes during operation (for example, switching off the air conditioner). Ingredient type / quality: Flour with less protein than usual; dry yeast or similar ingredients stored poorly or past their best-before date.
Sticky bottom or deeply sunken sides 		• Did you remove the loaf from the pan immediately after baking and let it cool on a raised wire rack? • In a warm room, reducing the water by 10 g (mL) may help.
Sunken top (crust is baked) Flat, square top Collapses		• Did you use too little flour? • Did you use too much water? For Wholemeal Bread: • This is more likely with a high proportion of wholemeal flour or certain types of flour. For Rice Flour Bread (no wheat): • A white, flat top is normal. • Did you add ingredients not listed in the recipe, such as dairy products or cocoa? • Did you use the wrong type of oil? • Did you add the fat listed in the recipe?
Large hole in the bottom / crushed loaf 		• The kneading blade will leave an impression. • Did you touch the underside of the bread pan while removing the loaf? (This may turn the blade and damage the bread.)  Do not turn.
Flour remains around the outside		• Did you use too much flour? • Did you use too little water?

Bread: other issues

Problem	What to check
The crust is not the colour I expected. Parts of the top burn.	• Change the crust setting (p.23) or adjust the sugar. Less sugar gives a slightly lighter crust; more gives a slightly darker crust. • If the loaf rises above the pan, reduce the dry yeast, dried natural yeast or water. • Oven spring may make the top look as though it has peeled away.
Hard crust	• Let the loaf cool until just warm, then put it in a plastic bag to soften the crust slightly.
Chocolate melts even with Gentle Mixing.	• The dough's rising temperature is above chocolate's melting point, so it may melt. Keep the chocolate frozen until just before adding it. Large pieces can obstruct the blade: use chocolate chips or chop into cubes no larger than 5 mm.

Troubleshooting results

	Problem	What to check
Bread: other issues	**Extra ingredients collect on one side.**	• Distribution can vary with the ingredient type, dough firmness and other factors.
	Shaped and proofed dough is slack and sticky.	• Over-proofed dough sags and becomes slack. Rising time varies by bread, but generally, if you lightly press the side of the risen dough with a fingertip and it slowly springs back, proofing is complete.
	Croissants do not turn out well.	• If the butter enclosed in the dough melts, proper layers will not form. Chill the dough thoroughly before enclosing the butter. • In a warm room, butter melts more easily, so chill for longer. 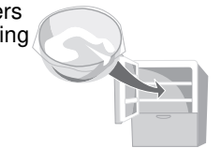
60-minute bread	Does not rise	• Did you use lukewarm water (35–40°C)? • Did you dissolve the dry yeast at the start of preparation?
Cooked-rice bread / Rice French bread	**Rice grains remain.**	• Put the rice and the recipe's water in a separate container, loosen the rice thoroughly, then add it to the bread pan.
Low-carb bread	Sunken sides	• Did you use a medium egg? • Too high a proportion of egg may make the loaf rise too much and its sides sink. • Did you use cold water when the room was 25°C or below? • If the sunken sides bother you, reduce the water by 10 g (mL).
Custom bread / Melon bread	The cookie topping cracks.	• Did you mix the cookie dough thoroughly? • Did you bring the cookie dough together until smooth? • Did you try to wrap the cookie dough tightly around the bread dough? • Simply place it on top. (Press lightly to make it adhere for a neat shape.) • Did you score the grid pattern too deeply?
	The cookie dough becomes soft and slack.	• The butter melted while softening, leaving too much liquid in the dough. • Once the butter has melted, the dough will tend to sag and tear even after chilling.
	The cookie topping is uneven.	• Did you reposition the bread dough in the centre?

	Problem	What to check
Custom bread / Melon bread	The cookie topping does not stay on top.	• Is the cookie dough too cold and firm? • When "Work in 10 minutes" appears, take the cookie dough out of the refrigerator and roll it out. It should be flexible enough to bend easily.
	The cookie topping protrudes from the pan.	• Did you lightly press the edges when placing the cookie dough on top? • Pushing it in will make the surface crack during baking.
Custom bread / Sweet bean buns	A cavity forms inside.	• Bread dough rises, but sweet bean paste does not expand in the same way. Steam from the filling pushes the dough upwards, creating a cavity. This is not a problem.
Brioche	Oil collects at the bottom / butter is unevenly distributed.	• Was the butter for adding later cut into 1 cm cubes? • Did you add that butter within 10 minutes of the buzzer? • Did you separate the butter pieces before adding them? • At room temperatures of 25°C or above, did you use frozen butter for the later addition?
Rice flour bread	Much flour remains when making rice flour bread without wheat.	• Did you scrape down the flour? • Use a rubber spatula to scrape flour from the sides of the pan. • Did you put the rice flour in before the water?
	Rice flour bread with wheat does not turn out well.	• Is the room too hot? (High room temperatures can impair the result.) • Did you use the delay timer at 25°C or above? • The ingredients become too warm while waiting, impairing the result.
Pale-crust bread	Hard crust The crust is not completely white.	• Once the loaf has cooled slightly, seal it in a plastic bag to keep the crust soft. • The crust will brown slightly.
Quick bread / Soy scones	**Not enough rise**	• Did you add baking powder? (Dry yeast or dried natural yeast will not make it rise.) • Did you use the specified quantities?
	Uneven butter distribution (uneven colour, cavities, etc.)	• Did you cut the butter into 1 cm cubes? • At room temperatures of 15°C or below, did you cut the butter into 5 mm cubes?
	Flour remains around the outside.	• Did you scrape down the flour? • Did you shape the dough?

Troubleshooting results

	Problem	What to check
Rice flour cake	**Not enough rise**	• Did you use the specified quantities? • Did you add baking powder?
	Flour sticks around the outside.	• Did you scrape down the flour? • Did you add the ingredients in the correct order?
	The cake is not as expected.	• The result is similar to a butter cake, not a commercially sold sponge cake.
Cake	Not enough rise	• Did you use the specified quantities? • Did you add baking powder? • Did you sift the cake flour and baking powder before adding them?
	Butter remains on top.	• Did you cut the butter into 1 cm cubes? • Did you bring the butter to room temperature? • Did you add the ingredients in the correct order?
	Flour sticks around the outside.	• Did you scrape down the flour? • Did you add the ingredients in the correct order?
	The cake is not as expected.	• The result is similar to a butter cake, not a commercially sold sponge cake. Reducing the cake flour to 160 g makes a slightly fluffier cake.
egetable cake	**The result is sticky.**	• Did you use too much soy milk?
Chocolate ganache	The mixture separates.	• Cream with a high milk-fat content (41% or above) combined with high-cocoa chocolate may separate. Adding 10 g milk (about 10 mL) makes separation less likely.
	Too soft	• Chocolate with a high milk content gives a softer result. Reduce the cream by 10–20 g (about 10–20 mL).
	Chocolate sticks to the sides of the bread pan.	• Within 5 minutes, scrape down the chocolate with a rubber spatula and mix for a further 2–3 minutes.

	Problem	What to check
Milk jam	**The mixture separates.**	• Is the cream old?
	Too soft	• Did you use the specified quantities?
	Too firm	• Did you use the specified quantities? • Leaving it in the bread pan instead of removing it promptly may make it firm, as residual heat continues to cook it.
	Lumps form.	• When pouring the finished milk jam into a container, including the solids stuck to the pan's sides can cause lumps.
	It sticks to the sides of the pan.	• This happens as the mixture reduces. Scrape out just the mixture around the sides and allow it to set: it becomes like soft caramel and can be eaten as it is.
Jam	Does not set (not thick)	The jam is relatively runny because it is lower in sugar and contains no additives. • Underripe, overripe or stale fruit may have too little pectin to set well. • Did you use too much fruit? • Did you reduce the sugar or lemon juice? (Jam needs the right amounts of sugar, acid and pectin to set.)
Fruit compote	**The fruit falls apart.**	• Was it overripe? • Some fruit varieties break down more readily.
	Some parts have not absorbed enough syrup.	• Did you cover the fruit with a paper-towel drop lid? • After removing it from the syrup, place the less-soaked portions face down in the syrup and leave to cool. • It is best eaten after resting for half a day to one day.
Amazake	**Lumps form.**	• Is the kneading blade fitted? • Did you break up the cooked rice and koji when adding them?
	Rice grains stick to the sides.	• Did you scrape down the rice grains? • Did you break up the cooked rice and koji when adding them?
	It does not become sweet.	• Is the koji old? • Was the koji stored correctly? If it is past its best-before date or was stored poorly, the amazake may not become sweet. • Did you use the specified quantities? • Did you add the ingredients in the correct order? Mixing hot rice directly with koji may prevent sweetness from developing. • Did you use hot water? This raises the overall temperature and may prevent sweetness from developing. • Did you use sake lees? This program makes rice-koji amazake; sake lees cannot be used.

Troubleshooting results

	Problem	What to check
Amazake	Not sweet enough	• Sweetness and flavour vary with the type of koji. • If it is not sweet enough, a longer cooking time generally makes it sweeter.
Amazake	**It is not white.**	• Without preservatives, it may have more colour than a commercial product. Colour also varies with the type of koji.
Amazake	**Too thick**	• Dilute to taste.
Sweet bean paste	**It does not turn into paste.**	• Did you boil the adzuki beans until soft? • Did you use too many adzuki beans?
Mochi	Grains remain in the pounded mochi.	• Did you use too much glutinous rice? • Did you use too little water? • Did the rice become too dry while draining? (For example, was it exposed directly to air-conditioning airflow?) • Is non-glutinous rice mixed in? • Did you use old rice?
Dough	**Sticky**	• Dust with flour. (Sprinkle bread flour on the work surface, rolling pin and dough.)
Dough	Shaped and proofed dough is slack and sticky.	• Over-proofed dough sags and becomes slack. Rising time varies by bread, but generally, if you lightly press the side of the risen dough with a fingertip and it slowly springs back, proofing is complete.
8-minute dough	Flour remains around the outside.	• Did you use too much flour? • Did you use too little water?
Udon / pasta	Lumps form.	• Did you fit the bread kneading blade instead of the noodle/mochi blade? • Did you use too little flour? • Did you mix the flours well before adding them to the pan? • Did you use too much water? • For udon, did you use lukewarm water?
Udon / pasta	The dough sticks to my hands and will not come together.	• Did you use too little flour? • Did you dust with flour? • Did you use too much water?
Udon / pasta	**The noodles stick together.**	• Has too much time passed since cutting them? • Did you dust them thoroughly with flour?

If you make a mistake…

I pressed Start before adding all the ingredients!

Missing ingredients cannot be added for 60-minute Bread or 8-minute Dough.

Ingredients other than prepared starter may be added within the times below. However, they may not mix properly during the initial kneading stage, so the bread may not turn out well.

Missing ingredient	Time allowed
Butter Sugar Skim milk powder Salt Honey	• Programs using dry yeast or dried natural yeast Add to the bread pan before the yeast dispenser releases its contents. • Pizza dough: within 1 minute • Brioche, rice flour bread (no wheat): within 5 minutes • Sandwich bread, pale-crust bread, half loaf, bread dough: within 10 minutes • Rice flour bread (with wheat): within 35 minutes • Other programs: within 20 minutes Open the lid as little as possible to avoid spilling the yeast dispenser's contents. • Programs using natural yeast Add to the pan within 10 minutes so it mixes during the first kneading stage.
Dry yeast / dried natural yeast	Add to the yeast dispenser before it releases its contents. • Pizza dough: within 1 minute • Brioche, rice flour bread (no wheat): within 5 minutes • Sandwich bread, pale-crust bread, half loaf, bread dough: within 10 minutes • Rice flour bread (with wheat): within 35 minutes • Other programs: within 20 minutes

I started with the wrong program, Raisin setting or crust colour!

You can reset immediately after starting. Press and hold Cancel to stop, then start again with the correct program*, Raisin setting and crust colour.
* Do not change to Rice Flour Bread (with wheat), as its initial stage is different.

I started with the wrong blade fitted!

Press and hold Cancel to stop, fit the correct blade and start again.
(If left as it is, the blade may stop turning.)

I unplugged the machine!

Plug it back in within 10 minutes and operation resumes automatically.

I pressed Cancel by mistake during operation!

Press Start within 10 minutes to resume.
• This works only once. Do not press any other buttons.

■ Dough from an unsuccessful batch can be reused for doughnuts or pizza. (p.91; Recipe Book pp.33, 36)

Is it a fault?

These are not faults. Check the following before requesting service.

Problem	Cause	Remedy
Buttons do not respond.	• Is the power plug unplugged?	Insert the power plug.
It does not run (knead) after Start.	• Rice Flour Bread (with wheat) starts with a resting stage, so it does not move at first.	
Dry yeast or dried natural yeast does not drop.	• Automatic dispensing time varies with the program and room temperature.	
	• The yeast dispenser is wet or has a static charge.	Wipe with a well-wrung damp cloth and allow to air-dry.
	• Is the dry yeast or dried natural yeast damp or covered in condensation?	Use fresh dry yeast or dried natural yeast.
Extra ingredients do not drop from the raisin/nut dispenser.	• Are the ingredients heaped up? Spread them level.	
Operation stopped partway through. (The current time is displayed.)	• Manual mode was left paused for 15 minutes.	
	• Operation stops if a power failure lasts longer than about 10 minutes during preparation.	If it stopped while still at the dough stage, the dough can be reused. (p.91)
I cannot set the desired timer time.	• Are you trying to set a time outside the allowed range? The time required to finish baking varies by program. [Example of timer range] Program: Pain de mie Current time: 8:30 p.m. (Display: “20:30”) Available finish times: 1:20 a.m.–9:30 a.m. (“1:20”–“9:30”) • Other times cannot be set.	Set a time within the following ranges, measured from the current time: • Pain de mie: 4 h 50 min–13 h • White bread: 4–13 h • Soft white bread: 4 h 20 min–13 h • Sandwich bread: 3–13 h • Cooked-rice bread: 4–13 h • Rice French bread: 4 h 40 min–13 h • French bread: 5–13 h • Rye bread: 5–13 h • Wholemeal bread: 5–13 h • Pale-crust bread: 3 h 50 min–13 h • Half loaf: 3 h 35 min–13 h • Rice flour bread (with wheat): 2 h 30 min–13 h • Rice flour bread (no wheat): 1 h 55 min–13 h • Dried natural yeast bread: 4 h 10 min–13 h • Natural yeast bread: 7–10 h
It starts kneading immediately even though I set the timer.	• For Pain de mie, White Bread, Sandwich Bread, Cooked-rice Bread, Rice French Bread, French Bread, Rye Bread, Wholemeal Bread, Pale-crust Bread, Half Loaf, Rice Flour Bread (no wheat) and Dried Natural Yeast Bread, only the first kneading stage starts immediately when the timer is started. (pp.8–9)	
There are noises during operation or while waiting the timer. Video	The following sounds are normal: • When kneading or degassing dough, or pounding mochi: “Creaking / slapping”: dough being kneaded “Whirring”: the motor turning “Clattering”: mochi being pounded • When ingredients drop from the yeast or raisin/nut dispenser: “Clunking”: the dispensing valve or flap opening	

Problem	Cause	Remedy
Rotation stops partway through. (The blade does not turn.)	• Too many ingredients, or hard ingredients caught in the blade, overload the motor and activate its protective device, stopping rotation. (The ingredients remain as flour and are not baked even when the program finishes.) • Contact your retailer for repairs.	
The blade is loose.	• A gap is provided between the blade and mounting shaft. (The tip moves about 3 cm.)	
The clock reads “0:00”.	• The lithium battery has reached the end of its life.	Have your retailer replace the battery. • The machine can still be used with a dead battery.
The ingredients remain as flour and are not baked.	• Did you forget to fit the blade?	Fit the blade securely. (p.18)
	• Has the blade mounting shaft inside the pan become stiff and unable to turn?	If the mounting shaft will not turn with the blade fitted, replace the bread pan. (Contact your retailer.)
Dough leaks from the bottom of the pan.	• A small amount of dough may come out of the outlets with use. (Dough that enters the rotating mechanism is expelled so it does not obstruct rotation.) This is normal, but check that the blade mounting shaft turns. 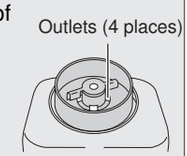	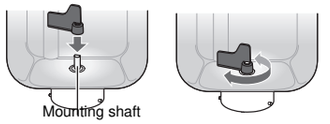
The bottom of the pan becomes black.	• Rubbing during kneading may blacken the bottom of the pan. Wipe it off with damp kitchen paper or a similar cloth.	
A spark came from the plug.	• A small spark may occur when plugging in or unplugging. This is a characteristic of the motor and is not a fault.	

• Smoke or odour may occur during initial use but will disappear with continued use. This is normal.

If these messages appear…

Power outage Displayed	• Indicates a power failure during preparation. After an outage of up to 10 minutes, operation resumes automatically when power returns. (The bread’s quality may be affected.) • This also appears after preparation if the machine was unplugged and plugged back in during operation.	
U50 Displayed	• The oven chamber is hot (40°C or above), for example after baking. • In manual Bake mode, additional baking has been used twice or the total time has exceeded 50 minutes.	Open the lid and allow the oven chamber to cool thoroughly. (About 1 hour immediately after completion.)
U53 Displayed	• The motor is overloaded.	Measure the ingredients accurately. Crush large pieces, such as walnuts, before adding them. (Press Cancel.)
H01 to H99 Displayed	• A fault has occurred. • Contact your retailer for repairs.	

Specifications

Power supply	AC 100 V, 50–60 Hz	Overheat protection	Thermal fuse
Rated power	430 W	Dimensions (approx.)	W 26.3 × D 35.6 × H 35.3 cm
Weight (approx.)	6.0 kg	Cord length (approx.)	1.0 m

• Power consumption when plugged in but not operating is approximately 0.5 W.

• This product is designed for use in Japan. It cannot be used abroad where the supply voltage or frequency differs. After-sales service is also unavailable abroad.

	Program	Capacity	Delay timer
Dry yeast	Pain de mie	Flour 250g	Up to 13 h ahead
	Rich pain de mie	Flour 250g	.
	White bread	Flour 250g	Up to 13 h ahead
	Soft white bread	Flour 250g	Up to 13 h ahead
	Sandwich bread	Flour 250g	Up to 13 h ahead
	Rapid white bread	Flour 280g	.
	Quick sweet bread	Flour 250g	.
	60-minute bread	Flour 280g	.
	Cooked-rice bread	Flour 210g	Up to 13 h ahead
	Rice French bread	Flour 210g	Up to 13 h ahead
	French bread	Flour 250g	Up to 13 h ahead
	Rye bread	Flour 250g	Up to 13 h ahead
	Wholemeal bread	Flour 250g	Up to 13 h ahead
	Low-carb bread	Mix 150 g (varies by manufacturer)	.
	Brioche	Flour 200g	.
	Marbled bread	Flour 250g	.
	Custom bread	Flour 150g	.
	Pale-crust bread	Flour 180g	Up to 13 h ahead
	Half loaf	Flour 180g	Up to 13 h ahead
	Rice flour bread (with wheat)	Rice flour 250 g	Up to 13 h ahead
	Rice flour bread (no wheat)	Rice flour 300 g	Up to 13 h ahead
Natural yeast	Dried natural yeast bread	Flour 250g	Up to 13 h ahead
	Starter preparation	Hoshino natural yeast granules 50 g	.
	Natural yeast bread	Flour 300g	Up to 10 h ahead
Other	Quick bread	Flour 180g	.
	Soy scones	Roasted soy flour 100 g	.
	Rice flour cake	Rice flour 140 g	.
	Cake	Flour 180g	.
	Vegetable cake	Flour 130g	.
	Chocolate ganache	Chocolate 160–174 g	.
	Milk jam	Cream 200 g (about 200 mL)	.
	Jam	Fruit 400 g	.
	Fruit compote	Fruit 300 g	.
	Amazake	Dried rice koji 100 g	.
	Sweet bean paste	Adzuki beans 150 g	.
	Mochi	Glutinous rice 280–420 g	.
Dough	White bread dough	Flour 250 g	.
	Crusty bread dough	Flour 250 g	.
	Enriched dough	Flour 250 g	.
	Natural yeast bread dough	Flour 300 g	.
	Pizza dough	Flour 280 g	.
	8-minute dough	Flour 200g–280g	.
	Udon / pasta	Flour 300 g	.
	Manual mode (Knead)	Flour 200g–300g	.

Optional accessories
Suggested retail prices as of October 2021

Bread kneading blade
• Part no.: ADD08-197
• Suggested retail price: ¥990 (tax included)



Noodle/mochi blade
• Part no.: ADD82-150-K0
• Suggested retail price: ¥550 (tax included)



Measuring spoon
• Part no.: ADD25-143-P0
• Suggested retail price: ¥220 (tax included)

Bread pan assembly
• Part no.: ADA12-232
• Suggested retail price: ¥7,150 (tax included)

Starter container (without lid)
• Part no.: ADD45-173-P0
• Suggested retail price: ¥330 (tax included)

Starter container lid
• Part no.: ADD26-173-P0
• Suggested retail price: ¥220 (tax included)

Optional accessories are available from retailers. Some are also available from Panasonic's official online shop. See the website for details.

Panasonic official online shop
https://panasonic.jp/store/

Warranty and after-sales service

For use, cleaning, repairs and other enquiries:
■ First contact the retailer where you purchased the product.
Retailer:

▼ Fill this in at the time of purchase for convenience.

Telephone: ( )
Date of purchase: Year Month Day

Requesting repairs

Check "Troubleshooting results" (pp.92–98), "Is it a fault?" and "If these messages appear…" (pp.100–101). If the problem persists, unplug the machine, then provide the purchase date and the details shown on the right.

• Product: Bread maker
• Model: SD-MDX4
• Fault: Describe as specifically as possible.

• During the warranty period, your retailer will repair the product under the terms of the warranty. Please bring the product and warranty certificate to the retailer.
Warranty period: 1 year from purchase for the main unit.

• After the warranty period, we can diagnose the fault and, if repair is possible, carry out the repair at your request.

* Repair charges comprise the following:
Labour: diagnosis, repair, adjustment, inspection and similar work
Parts: parts and supplementary materials
Call-out: dispatching a technician

* Retention period for functional repair parts: 6 years
We retain functional repair parts for this bread maker (parts required to maintain the product's functions) for 6 years after production is discontinued.

• If you have moved or received the product as a gift, contact the enquiry service on the back cover.

Please register your product with CLUB Panasonic, Panasonic's membership service.

Register and manage your home appliances together and access product support.
Learn more: https://panasonic.jp/membership/mylist

Register using the QR code on the back of the machine. There is no need to enter the model or serial number, making registration simple.

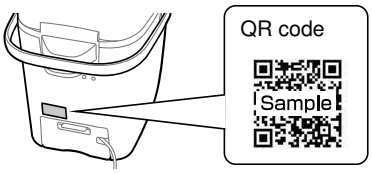

• QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Support enquiries https://panasonic.jp/support/

Cooking appliances Use, cleaning and other enquiries

Toll-free
0120-878-694
Hours: 9:00–18:00, Mon–Sat
(excluding holidays and January 1–3)

■ If the number above is unavailable: **06-6907-1187**
■ Toll-free fax **0120-878-236**

Repair enquiries

Toll-free
0120-878-554
Hours: 9:00–18:00
(excluding some regions)

■ If the number above is unavailable: **03-6633-6700**

https://panasonic.jp/support/repair.html

• Accessing the mobile website and watching videos is free, but you are responsible for data charges. (Without a flat-rate data plan, charges may be high.)
• Some lines, such as IP or optical telephone services, may be disconnected after a few minutes if the line is congested.
• The URLs above may not display correctly on some mobile phones.
• Check the website for the latest information, including opening hours.

[Handling of personal information provided to enquiry services]

Panasonic Corporation and its group companies use your personal information to respond to enquiries and arrange repairs, and record enquiries. We also use caller identification to enable return calls. Personal information is managed appropriately and is not disclosed or provided to third parties except when repair work is outsourced or there is another legitimate reason. For enquiries about personal information, contact the service you consulted.

Safety check **Have your long-serving bread maker inspected!**

Do any of these symptoms apply?

- The plug or cord becomes unusually hot.
- The cord is damaged, or power is intermittent.
- The unit is deformed or becomes unusually hot.
- An unusual rotating noise occurs during use.

Stop using it

To prevent an accident, stop using the appliance, unplug it, and have your retailer inspect it.

Panasonic Corporation | Lifestyle Appliances Company

2-3-1-1 Nojihigashi, Kusatsu, Shiga 525-8520, Japan

© Panasonic Corporation 2021