SD-MDX4

For Panasonic bread maker users

# How your bread rises

**Please read carefully**



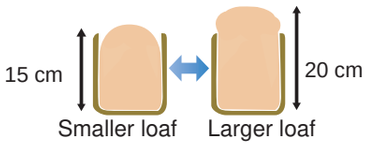
Rise, shape, crust colour and height vary with every loaf.
* Room temperature, humidity, ingredients and timer settings all affect the result.



## Always use oven mitts

Use commercially available oven mitts.

**Approximate size (White bread)**




Even with the same bread maker, results vary from day to day.



Some programs produce smaller loaves.

## How to measure ingredients

Always measure water and flour by weight!

Use a digital scale to weigh ingredients accurately. Choose a scale that measures in increments of 1 g or less.




Use a digital scale!



Do not use a measuring cup.

## Using and storing ingredients

### Water

- At room temperatures of 25°C or above, use cold water (about 5°C).
- Some programs always require cold water (e.g. Rapid White Bread and French Bread).
- When adding juice or milk, reduce the water by the same amount.



### Dry yeast / dried natural yeast / prepared starter

- Refrigerate immediately after purchase.
- Seal after opening and refrigerate.

* Yeast is a living organism!
• Do not use yeast that has been stored poorly. (Damp yeast may not drop from the dispenser.)




- Check the best-before date.

### Flour

- Use bread flour with 12–15% protein (at least 11% for Japanese wheat).

* Nisshin Seifun Welna “Camellia” flour is recommended.




- Seal after opening and refrigerate.
- Check the best-before date.

### Sugar and salt

- Use the supplied spoon and measure level spoonfuls.




Incorrect ingredient or water measurements, or the wrong program, can cause dough to scatter or overflow from the bread pan.
(It may burn on the heater, produce smoke or cause a malfunction.)



- Measuring flour in a cup
  → Only half the required amount
- Replacing skim milk powder with milk without reducing the water



- Adding twice as much flour
- Doubling both the dry yeast and the sugar

## Still having trouble? Try the white bread recipe!

You cannot judge the condition of ingredients by appearance. Always try again with fresh flour and dry yeast.



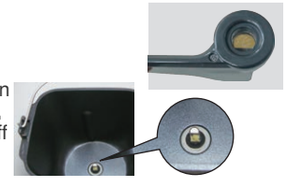
| Ingredients for one loaf of white bread | | | |
|---|---|---|---|
| Bread flour | 250 g | Salt | 5 g (1 small*) |
| Butter | 10 g | Water | 180 g (mL) |
| Sugar | 17 g (2 large*) | Dry yeast | 2.8 g (1 small*) |
| Skim milk powder | 6 g (1 large*) | | |

* Use the supplied spoon.

# If your bread looks like this…



For details, see the instruction manual.

| Bread appearance | What to check |
|---|---|
| Not enough rise (but shaped like a loaf)  | • Did you use too little sugar or water?<br>→ Weigh water and flour in grams.<br>• Did you use cold water (about 5°C)?<br>* This depends on the room temperature and program.<br>• Are the flour, dry yeast or dried natural yeast old? Is the flour outside the 12–15% protein range?<br>→ Nisshin Seifun Welna “Camellia” is recommended.<br>• Is your Japanese wheat flour below 11% protein?<br>Flour with a low protein content may produce a smaller loaf. |
| Does not rise (does not form a loaf)  (60-minute bread) | • Did you use lukewarm water (35–40°C)?<br>• Did you dissolve the dry yeast at the start of preparation? |
| White, lumpy top  | • Did you forget the dry yeast or dried natural yeast?<br>• Has the dry yeast or dried natural yeast lost its activity?<br>→ Refrigerate it immediately after purchase. Seal tightly after opening.<br>• Did you forget to fit the kneading blade?<br>• Has the kneading blade come off?<br>If the mounting shaft or the hole in the blade is not cleaned properly, the blade may lift up and come off during kneading.  |
| Sunken top (crust is baked)<br>Flat, square top  | • Did you use too much water?<br>• Did you use too little flour?<br>→ Weigh water and flour in grams. |
| Sticky bottom or deeply sunken sides  | • Did you remove the loaf from the pan immediately after baking and let it cool on a raised wire rack?<br>• In a warm room, reducing the water by 10 g (mL) may help. |
| Rises too much  | • Did you use too much flour, dry yeast, dried natural yeast, sugar or water?<br>• Are you using specialist bread-making flour?<br>→ This type of flour tends to rise too much. Reduce the water by 5–10%. |
| Large hole in the bottom  | • The kneading blade will leave an impression.<br>• Did you touch the underside of the bread pan while removing the loaf? (This may turn the blade and damage the bread.) |

# From everyday loaves to artisan-style bread…

Add the ingredients, select a program and press Start.

SD-MDX4

## Bread (dry yeast)


Pain de mie menu 1


Rich pain de mie menu 2


White bread menu 3


Soft white bread menu 4


Sandwich bread menu 5


Rapid white bread menu 6


Quick sweet bread menu 7


60-minute bread menu 8


Cooked-rice bread menu 9


Rice French bread menu 10


French bread menu 11


Rye bread menu 12


Wholemeal bread menu 13


Low-carb bread menu 14


Brioche menu 15


Marbled bread menu 16


Custom bread menu 17


Pale-crust bread menu 18


Half loaf menu 19


Rice flour bread (with wheat) menu 20


Rice flour bread (no wheat) menu 21

## Natural yeast bread


Dried natural yeast bread menu 22


Natural yeast bread menu 24

## Prepare yeast starter



Prepare yeast starter menu 23

## Cakes and sweet treats


Quick bread menu 25


Soy scones menu 26


Rice flour cake menu 27


Cake menu 28


Vegetable cake menu 29

## Chocolate ganache


Chocolate ganache menu 30

## Jam


Milk jam menu 31


Jam menu 32

## Fruit compote


Fruit compote menu 33

## Amazake


Amazake menu 34

## Sweet bean paste


Sweet bean paste menu 35

## Mochi


Mochi menu 36

## Dough making

* Photos show examples of recipes made from the dough.

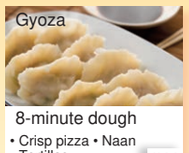

White bread dough menu d1


Crusty bread dough menu d2


Enriched dough menu d3


Natural yeast dough menu d4


Pizza dough menu d5


8-minute dough
• Crisp pizza • Naan
• Tortillas
• Sweet bean buns • Gyoza
menu d6


Udon / pasta menu d7

# おうち 乃が美

What is “Nogami at Home”?

A soft, rich white bread recipe developed under Nogami’s supervision specifically for Panasonic bread makers.

* This is different from Nogami’s premium soft white bread recipe.

* Nogami’s premium bread recipe is not publicly available.

* The delay timer cannot be used.



### Nogami at Home Program 2

1,263 kcal / loaf

| | |
|---|---|
| Bread flour (Eagle) | 250g |
| Unsalted butter (Yotsuba) | 15g |
| Sanonto sugar | 35g |
| Salt (Nuchima-su) | 5 g (1 small spoon) |
| Cream (35% milk fat) | 40g |
| Water* | 160g (mL) |
| Dry yeast (SAF Instant Gold) | 1.4 g (½ small spoon) |

* At room temperatures of 25°C or above, use cold water (about 5°C) and reduce the amount by 10 g (mL).

See website for details

### Nogami at Home: Lemon & Orange Peel Program 2

1,448 kcal / loaf

| | | |
|---|---|---|
| Bread flour (Eagle) | | 250g |
| Unsalted butter (Yotsuba) | | 15g |
| Sanonto sugar | | 35g |
| Salt (Nuchima-su) | | 5 g (1 small spoon) |
| Cream (35% milk fat) | | 40g |
| Water*1 | | 160g (mL) |
| Dry yeast (SAF Instant Gold) | | 1.4 g (½ small spoon) |
| Orange peel (5 mm pieces) | *2 | 30g |
| Lemon peel (5 mm pieces) | *2 | 30g |

*1 At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).
*2 Use the Raisin function (see manual): select “Yes ♪ / Normal mixing”.



### Nogami at Home: Matcha & Sweet Chestnuts Program 2

1,520 kcal / loaf

| | |
|---|---|
| Bread flour (Eagle) | 250g |
| Matcha | 6g |
| Unsalted butter (Yotsuba) | 15g |
| Sanonto sugar | 35g |
| Salt (Nuchima-su) | 5 g (1 small spoon) |
| Cream (35% milk fat) | 40g |
| Water*1 | 150g (mL) |
| Dry yeast (SAF Instant Gold) | 1.4 g (½ small spoon) |
| Chestnuts in syrup (5 mm pieces) | 100g |

*1 At 25°C or above, use cold water (about 5°C) and reduce it by 10 g (mL).
*2 Use the Raisin function (see manual): select “Yes ♪ / Gentle mixing”.

