

UTP Suite



UTP Template

User Manual

Version 8.0

Table of Contents

Glossary	3
Installation	4
Welcome to UTP Template	4
Select UTP Template	4
Ready to Install.....	5
Finishing installation.....	5
Folder structure	6
General.....	6
Folders	6

UTP Template is a ready-to-use template for creating UTP test systems software. It includes the following components:

- Basic UTP test system configuration
- Examples of product and interface sequences
- Clean and simple folder structure linked to TestStand



Glossary

Product: collection of UUT (unit under test) types with a similar testing procedure.

Variant: a specific version of the UUT within one product. Variants may differ in test step limits. In addition, some test steps may be skipped for specific Variants.

Operation: UUT test phase, e.g. FCT (Functional test), ICT (In-circuit test) or Labeling.

Station: test system(s) assigned to a specific operation.

Interface Sequence: TestStand sequence containing a general procedure for operations on Test Sockets, such as adapter handling or UUT handling. The file name for an interface sequence file has the following format: `<Operation>_Interface.seq`. Interface Sequences run on test socket executions.


Station Interface Sequence: TestStand sequence containing callbacks for a System, such as Begin (startup of the tester), End (shutting down the tester) as well as Pre Batch and Post Batch callbacks (if system uses the Batch Model). Also, the sequence contains callbacks for Product Selection dialog and a custom button available in UTP TEF. The file name is always `Station_Interface.seq`.

Product Sequence: TestStand sequence created accordingly to the test specification of a product. The file name for a test sequence file has the following format:


`<Operation>_<Product>.seq`. If there is more than one variant of the product, Product Sequence should contain the maximum number of test steps as well as configuration parameters with standard settings and values.

Installation

Welcome to UTP Template

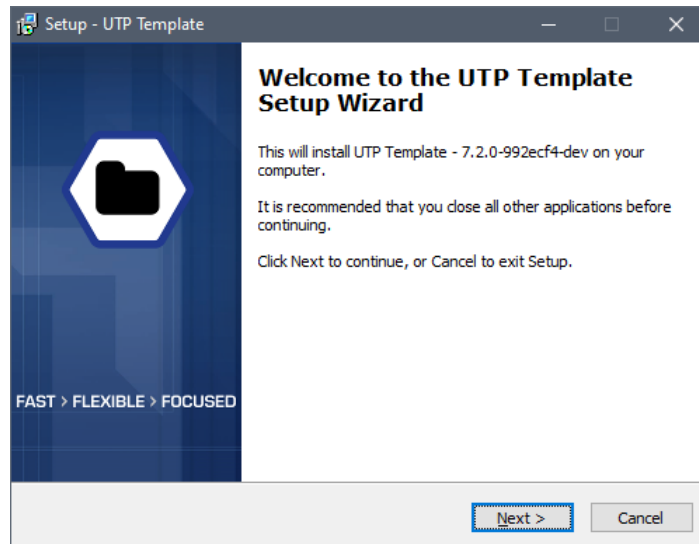


Select UTP Template

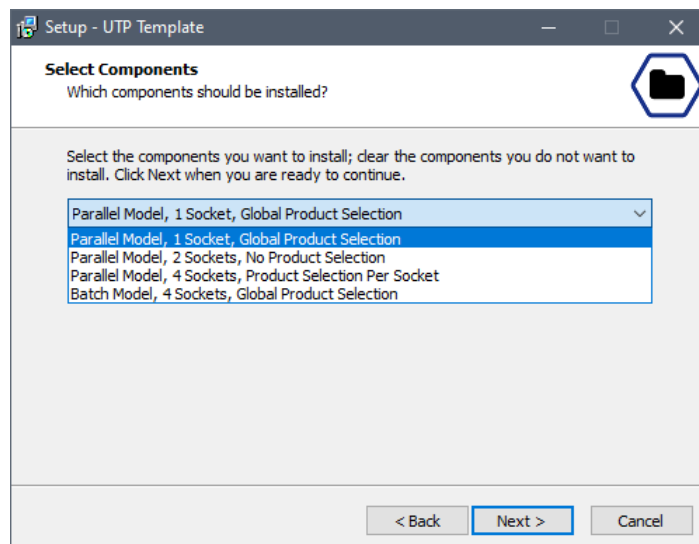


Select the UTP Template you want to install.

Ready to Install

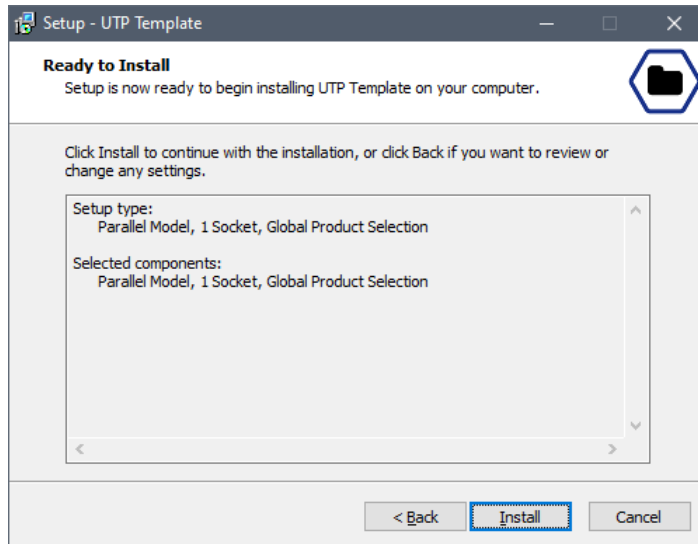

Finishing installation

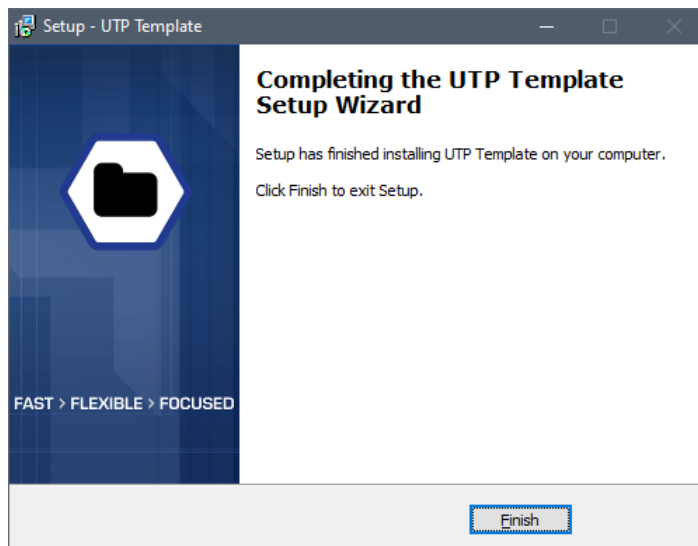

Folder structure

General

UTP Template installs to `C:\UTP` folder. This location cannot be changed. UTP Template is delivered with example sequences created for Functional Testing (FCT) Operation. These sequences shall be modified according to specific project requirements. To ensure efficient development, it is highly recommended to keep `UTP` folder under version control.

Folders

UTP folder has a predefined structure. You are allowed to add system and project related files and folders to UTP Template.

Path	Description
 <code>C:\UTP\ package.version</code>	A file containing version information about the UTP Template

config

 **config** folder contains configuration files for UTP Suite components and TestStand. It may also contain all config related files for the system.

Path	Description
 NI MAX	Placeholder for NI MAX system reports
 TestStand	TestStand Configuration Directory (<code>Cfg</code>)
 <code>TestStand\ ModelPlugins</code>	TestStand plugin configurations
 <code>TestStand\ModelPlugins\ ResultProcessing.ini</code>	Pre-configured settings for report generation
 <code>TestStand\ Users.ini</code>	List of TestStand users
 <code>TestStand\ ToolsMenu.ini</code>	List of menu items in TEF/TestStand
 UTP Dashboard	Folder containing UTP Dashboard configuration files
 <code>UTP Dashboard\ UTPDashboardSettings.xml</code>	Settings file for UTP Dashboard

 UTP Data Manager	Folder containing UTP Data Management Package configuration files
 UTP Data Manager\ Noffz.UTP.DataManager.Connections.config	Configuration file containing database connections
 UTP Data Manager\ Noffz.UTP.DataManager.TestStandPlugin.config	TestStand Plugin configuration file
 UTP Data Manager\ Noffz.UTP.DataViewer.config	UTP Data Viewer configuration file
 UTP IO	Placeholder for UTP IO Package configuration files (.pool and .poolview)
 UTP Log	Placeholder for UTP Log Package configuration file (.nlog)
 UTP TEF	Folder containing UTP TEF configuration files
 UTP TEF\ Noffz.UTP.Starter.config	Configuration file for system components start-up
 UTP TEF\ Noffz.UTP.TEF.config	Contains Model configuration settings for the System and for the Sockets. Change this file to configure Product Selection, set number of Sockets, assign Sockets to Operations and so on.
 UTP TEF\ Noffz.UTP.UserInterface.config	UTP TEF UI appearance settings: path to selected predefined UTP TEF layout (can be found in C:\ProgramData\Noffz\UTP TEF\UTP User Interface\Layouts\), UTP TEF logo, UTP TEF window appearance, connection info for station(s)
 UTP Variant Editor	Products and variants configuration
 UTP Variant Editor\ ProductConfiguration.xml	Product(s) configuration file. This file defines products to be tested, paths to Interface and Product sequences

and product variants. See UTP Variant Editor help for more info

docs

docs folder contains user manuals and documentation for the test system, such as wiring diagrams, system specifications etc. Please feel free to add your files here.

Path	Description
 UTP Template - User manual.pdf	Documentation for the UTP Template

logs

logs folder is a placeholder for log files.

misc

-  **misc** folder is a placeholder for supporting files, images and so on.

Path	Description
 wallpaper	Folder with NOFFZ Wallpapers for Desktop background

reports

reports folder is a placeholder for test reports or database files

source

source Folder contains the test system source code

Path	Description
 InterfaceSequences	UTP Interface Sequences folder. These sequences implement TestStand entry points such as <code>Pre UUT</code> and <code>Post</code>

	UTP, which are called by the process model
 InterfaceSequences\ FCT_Interface.seq	Socket Interface Sequence file for an FCT Operation. This file is an example of a possible implementation. This file runs in Socket Executions
 InterfaceSequences\ Station_Interface.seq	Station Interface Sequence file. This file is an example of a possible implementation. There can be only one System Interface Sequence file. This file runs in System Execution
 Language	TestStand language folder. To enable multi-language support in UTP TEF, a separate subfolder containing the file <code>Noffz.UTP.Strings.ini</code> must be created for each language
 Language\ Deutsch	TestStand language folder for German language
 Language\Deutsch\ Noffz.UTP.Strings.ini	Translation file for UI elements (German language)
 Language\ English	TestStand language folder for English language
 Language\English\ Noffz.UTP.Strings.ini	Translation file for UI elements (English language)
 ProductSequences	UTP Product Sequences folder. These sequences implement product specific tests
 ProductSequences\ FCT_ProductName.seq	An example of a Product Sequence for FCT Operation. Modifications shall be done in <code>MainSequence</code>