



PT 331SCC Air Automatic Feed Slit-Cut-Crease Operator Manual

755 Griffith Court, Burlington, Ontario, Canada L7L 5R9
Tel: +(905) 633-7663 Fax: +(905) 637-4419 Toll Free: 1-800-265-3376
www.graphicwhizard.com

Table of Contents

Introduction	3
Safety	3
Specifications	4
Main Parts & Assemblies	5
Unboxing and Inspection	7
Machine Assembly	8
Outfeed Tray and Card Catcher	8
Extension Table Installation	8
Power Socket and Switch	9
Touchscreen Display	9
Initial Power On	9
Home Screen	10
Maintenance Screen	11
Smart Input Programming	12
Shrink & Stretch	14
Manual Input Programming	15
Manual Shift Adjustment	15
Manual Setup	16
Job Layout Creation	19
Layout Parameters	19
Job Layout Parameters (12"x18" Sheet)	20
Creating a Register Mark	24
Using the Cut Mark Registration	25
Saving a Job	25
Setting Slitters	26
Positioning	27
Side Trimming	27
Slitter Removal and Replacement	28
Slitter Blade Removal Procedure	30
Setting Outfeed Tray	32
Slide-in Tools	33
Changing Perf Crash Pad	33
Crease Depth Adjustment	34
Hardware Setting	35

Side Guide Setting..... 35

Skew Adjustment 35

Feeder Adjustments..... 36

Center Lag Kit 36

Maintenance 37

Introduction

This manual only applies to the PT 331SCC Air. This manual contains information regarding machine safety and use. Please keep the manual on hand for easy access when required. Do not operate the Graphic Whizard PT 331SCC Air until you read and understand the instructions in this manual. Any questions regarding this machine, please contact Graphic Whizard.

Graphic Whizard pursues a policy of continuing improvement in design and performance of the product. Therefore, the product design and specifications are subject to change without notice.

Safety

- Please shut down and disconnect the power to the machine before performing maintenance. Make note of connections before disconnecting. Ensure all cables are properly secured to the board.
- Read this entire manual before running the machine.
- Ensure all accessories are installed properly before running the machine.
- Ensure all safety covers are in place. Do not run the PT 331SCC Air without the covers installed. The top cover has an interlock switch that will stop the machine if open or removed.
- For personal safety, disconnect power before cleaning the interior of the machine.
- The blade edges are very sharp. Use caution whenever accessing the interior of the unit.
- Disconnect the power cord if the machine will not be used for an extended period.
- Install the PT 331SCC Air on a level surface.
- Never operate the unit with wet hands or connect or disconnect the power cord when wet or when standing in water.
- Keep hair and clothing away from the unit.
- Keep hands clear of the unit when operating. Keep liquids away from the PT 331SCC Air.
- Do not place any heavy material on the machine.
- To avoid risk of shock or fire, keep metal and flammable materials out of the machine. If the unit is exposed to shock or fire and if it is safe to do so, power off and unplug the unit then call a service technician. Do not power on the unit without consulting a service technician.
- If the machine overheats or if you detect an odor or see smoke, immediately shut down the unit and contact your local service technician.

Power Supply

- The AC input voltage frequency is AC110/50-60Hz. Please use a power cord rated for 10A or higher.
- If the voltage or frequency is not within range, the machine may fail to function.
- Do not remove the power cord while machine is in use. Power down the PT 331SCC Air before disconnecting the power cord.
- Ensure the unit is connected to a properly grounded outlet before powering on.

Environmental

Temperature : 10°C to 35°C / 50°F to 95°F

Humidity: 30% to 70%

Specifications


Item	Parameter	
Package Dimensions	Length*Width*Height	1330 x 570 x 980mm (52.3" x 22.4" x 38.5")
Machine Dimensions	Length*Width*Height	1702 x 610 x 1170mm (67" x 24" x 46")
Power Input		AC110V, 50/60Hz, 150W
Output Size	Max (W*L)	318 mm x 640mm (12.5" x 25.5")
	Min (W*L)	55 mm x 48mm (2.1" x 1.8")
Infeed Size	Max (W*L)	330 mm x 650mm (13" x 25.5")
	Min (W*L)	210 mm x 210mm (8.25" x 8.25")
	Thickness	150g - 350g/0.15 - 0.35mm (0.006" - 0.014")
	Paper Waviness	±3mm (0.118")
Cut	Max Qty for Cutter Per Sheet	32
	Accuracy for Cutting	±0.2 mm-0.4mm (0.008" - 0.016")
	First Cut	3.2 mm-15mm (0.126" - 0.591")
	Last Cut	5 mm-15mm (0.197" - 0.591")
	Gutter Cut	3 mm-15mm (0.118" - 0.591")
Slit	Slitters	4
	Side Trim	3.2mm-10mm (0.126" - 0.375") 15mm or greater
	Gutter Slit	10mm (0.375")
	Accuracy for Slitting	±0.3mm (0.0118")
Crease	Max Qty for Crease Per Sheet	32
	Crease Depth Adjustment	Infinite Manual Adjustment
	Crease Direction	Both
	Crease Die Spec.	1.0mm
Perforator	Perforate Die Spec.	12 TPI
Speed	A4 Trimming 4 Sides, Crease in Middle	20 sheets/min
Feeding	Method	Top Suction and Middle Registration
	Loading Capacity	50mm
	Double Detect	Ultrasonic Detect
	Skew Adjustment	Yes
Custom Memory Storage	30	
Register Mark	Y direction only	
Image Compensation	Y direction compensation only	

Note: Graphic Whizard pursues a policy of continuing improvement in design and performance of the product. Therefore, the product design and specifications are subject to change without notice.

Main Parts & Assemblies



No.	Item	Description
1	Waste Bin	Catches the cut waste
2	Outfeed Tray Extension	Extends the outfeed tray for longer stocks
3	Outfeed Tray	Outfeed tray catches finished projects
4	Card Collector	Finished business cards are collected
5	Slitter Head Adjustment	Turning the knob adjusts the position of the slitter head
6	Air Adjustment Knobs	Turn knobs to find the ideal air pressure to separate sheets
7	Touch Screen	Allows you to set up job
8	Emergency Stop	Automatically stops machine
9	Feed Table	Extends the size of the paper input
10	Machine Body	Working body of the PT 331SCC Air
11	Tool Storage	Holder for crease or perforate tools
12	Side Cover	Access panel for changing the crease or perf die
13	Stand	Holds waste bin and tool accessories

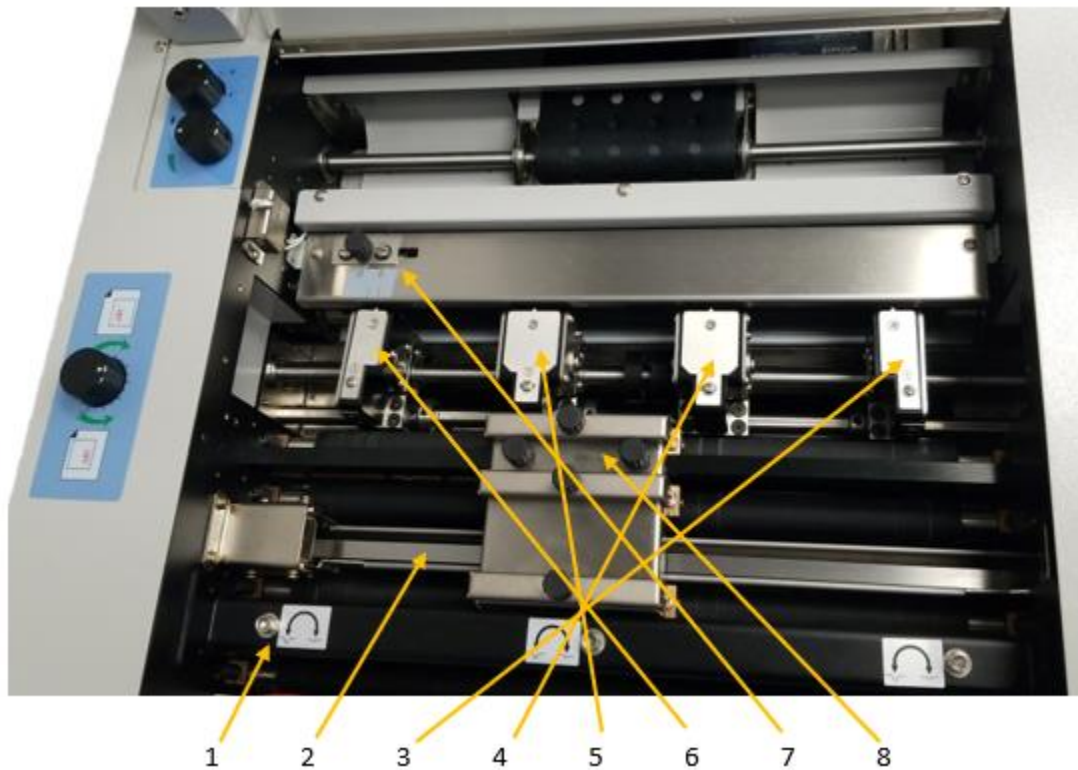

No.	Description	Remark
1	Crease Depth Adjustment	Turn clockwise to lighten the depth, and counterclockwise to deepen the depth
2	Cross Cutter	Cuts paper in a cross direction
3	Slitter #4	Slit the op side edge of paper
4	Slitter #3	Slit with fixed gutter, gutter is 8 mm or 3/8"
5	Slitter #2	Slit the non op side edge of paper
6	Slitter #1	Slit with fixed gutter, gutter is 8 mm or 3/8"
7	Register Adjust Knob	Moves the register reader. Gauge shows the position of the register reader based on the sheet size and slitter set positions.
8	Lag Kit	The Lag Kit applies pressure to the two rollers before the knife assembly and the roller after the knife. Roller pressure can be individually adjusted for each roller.

Unboxing and Inspection

- Check for any obvious damage as soon as the item is received.
- If the package is damaged, perform a visual inspection before uncrating the PT 331SCC Air.
- If there is no visible damage, open the package and use the packing checklist to check for any missing or broken parts. If there is any visible damage or parts that are missing, please take pictures and notify Graphic Whizard immediately.



Remove the straps and the screws securing the PT 331SCC Air to the skid. Lift the box up and over the 331SCC Air.

Remove the brackets securing the PT 331SCC Air to the skid. The PT 331SCC Air is on casters. Once the brackets have been removed, carefully roll the PT 331SCC Air off the skid.



Remove the shipping cross bracket and the shipping plate. This is located on the feed table.


Install the touch screen display by removing the cover and the bracket screws. Insert the cable as pictured below. Replace the covers and secure the touch screen bracket to the PT 331SCC Air with the provided screws.



Machine Assembly


Outfeed Tray and Card Catcher

The card catcher is designed to sit just behind the exit rollers, allowing the cards to fall freely from the machine. Use the deflectors to help guide the cut stock

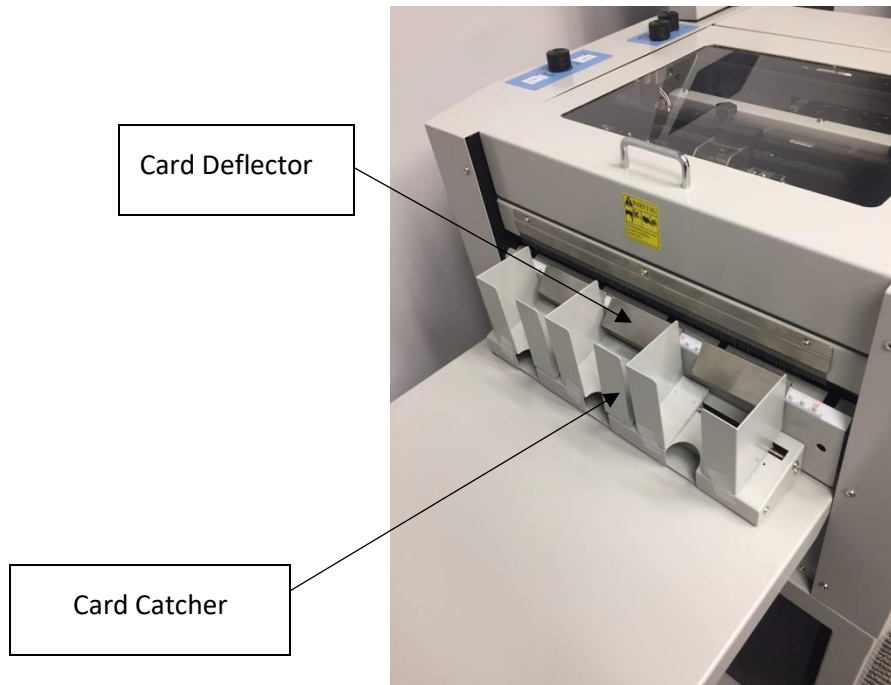

Extension Table Installation

Attach the feed extension table to the PT-331SCC Air by loosening the three hex screws and slipping the tray over the screws. Ensure the tray remains level when tightening the screws.

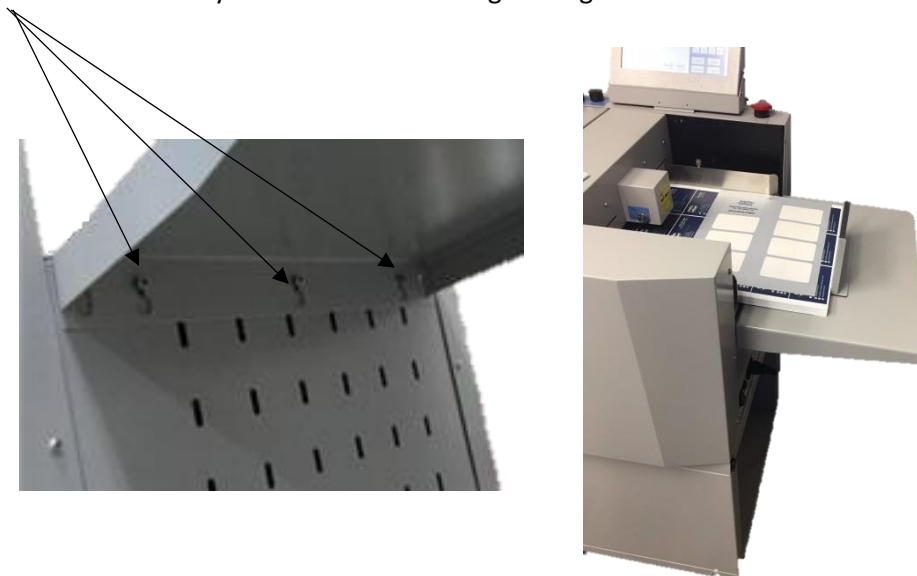

Power Socket and Switch

AC input, Voltage/Frequency is 110V/50-60Hz. For machine and operator safety, there is a 6A/250V fuse in the power inlet. If the machine does not power on when connected to a functioning 110V power outlet, check the fuse.




Touchscreen Display

Initial Power On


With the PT-331SCC Air connected to a properly grounded outlet, power on the unit by releasing the Emergency Stop and flipping the power switch to the on position. An interface screen will be displayed with the following information:

- Software Version
- Serial Number
- Sheet Count
- Cut Count
- Crease Count

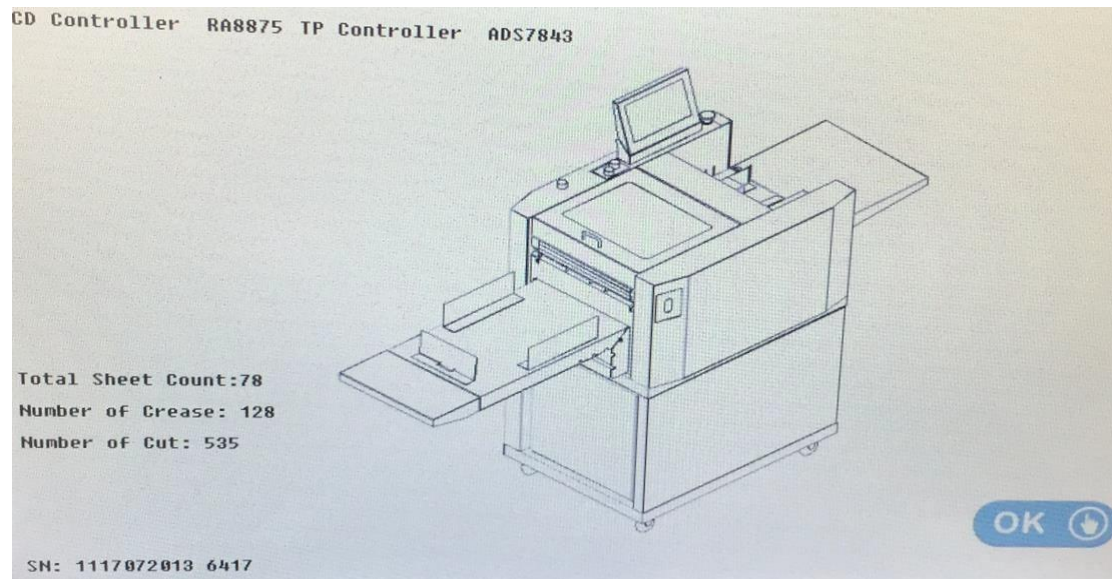

The PT 331SCC Air will self-diagnose. If there are any errors, an error message will be displayed. The error must be addressed before the PT 331SCC Air will advance to the home screen. Once the error is addressed, press OK to advance to the home screen


Home Screen

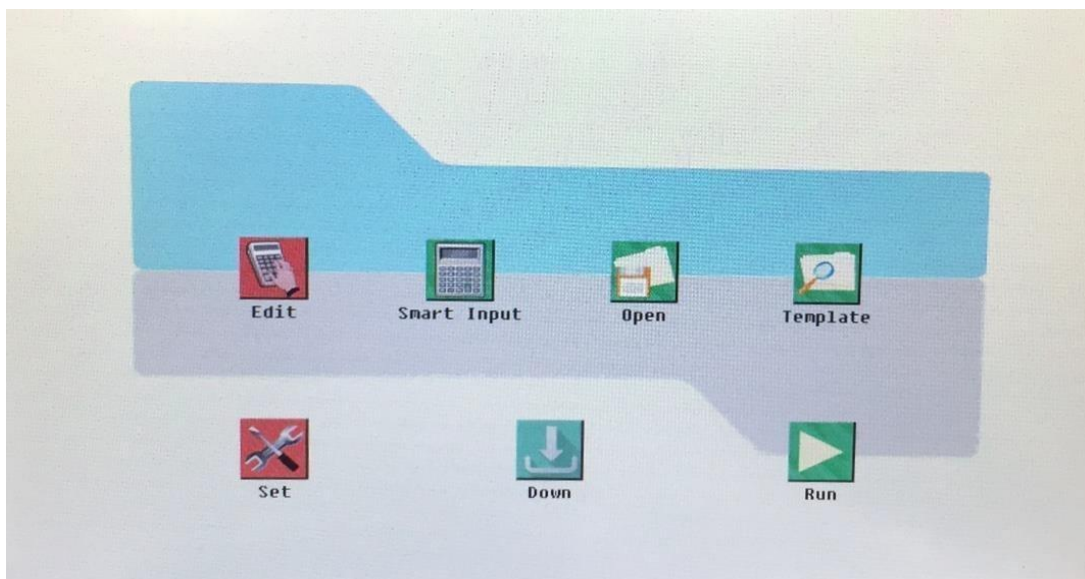


Edit	Allow the user to manually create a job.
Smart Input	Launches step-by-step job creation.
Open	Open jobs that have been saved.
Template	Displays pre-programmed jobs.
Set	Allows user to change limited settings. Access to service screens.
Down	Sends the feed table to the lowest position.
Run	Displays the last job run.

Maintenance Screen

After pressing the  maintenance button, you will be directed to the screen below.

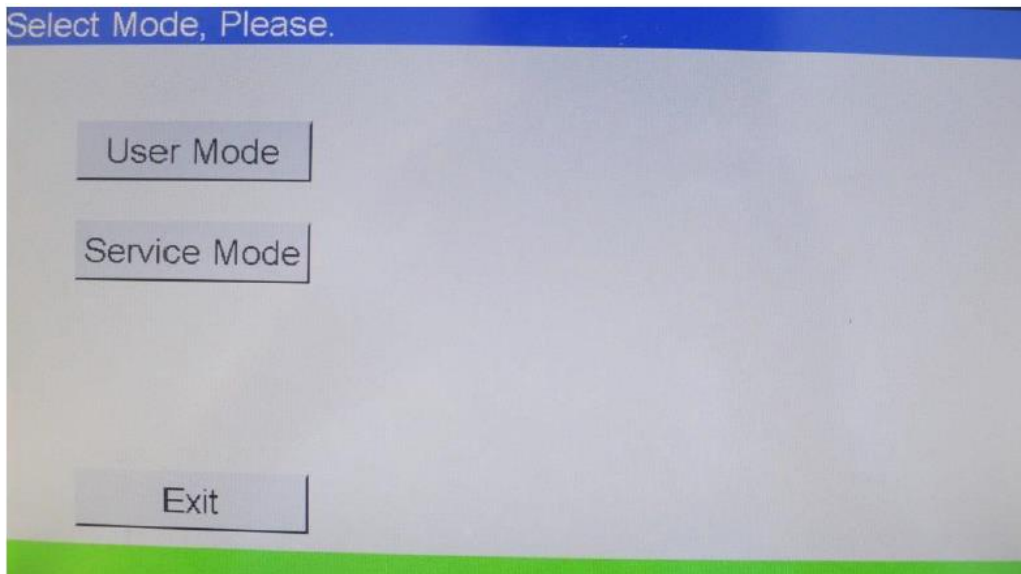

Selecting "User Mode" will bring up a new screen, which allows the user to change the measurement system between metric and imperial. This menu will also give the option to turn on/off "Double Feed Detect". This menu also displays "LCD +" and "LCD -". These are used to control the screen brightness.

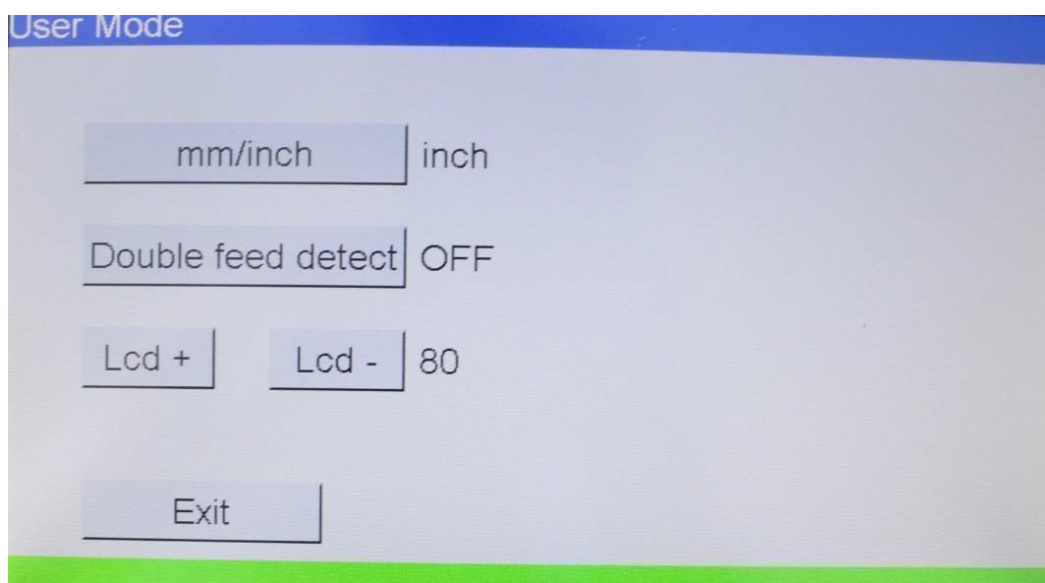

Smart Input Programming

Using the Smart Input to set up a job is the easiest and most convenient way to set a new job. The Smart Input prompts you for the initial values and programs the rest of the cuts and slits accordingly.

To set a job through the Smart Input, please complete the following:



1. Select the smart input icon from the home screen. It will bring you to a screen to input length, width, and cut mark specifications.

Return

Length: 18.000

Width: 12.000

Reg cut mark: 0

1 2 3 -

4 5 6 +

7 8 9 Esc

. 0 C Ent

Letter Legal

Ledger Digital

2. Input the size of your finished piece. The default image shows a standard 2" x 3.5" business card. This image will not change to reflect the actual values of your finished piece. Press Next to advance to the next screen.

2. Set card size

Card Length: 2.000

Card Width: 3.500

Length

Width

←

Back Next

1 2 3 -

4 5 6 +

7 8 9 Esc

. 0 C Ent

3. Input your Lead Trim and Gutter Cut (if applicable). Press Next to advance to the next screen.
- **Lead Trim:** Distance from the lead edge of the paper to the first cut.
 - **Gutter Cut:** Distance from the cuts in the middle of the paper.

3.Set Trim and Gutter

Lead Trim:

Gutter Cut:

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent


4. If your finished piece has creases, input the crease values based on the finished product. The PT 331SCC Air will calculate distance from lead edge for you. Press Next to advance to the next screen. The crease option comes with several preset options, or you can set your own values.

4.Set Creases for each finished piece

1	0	7	0
2	0	8	0
3	0		
4	0		
5	0		
6	0		

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

- Once all the programming is complete, the PT 331SCC Air will provide a Preview of the job. If the user is happy with the setup, they can press OK to advance to the Manual Input screen. If changes are required, pressing Back will return to the previous screens.

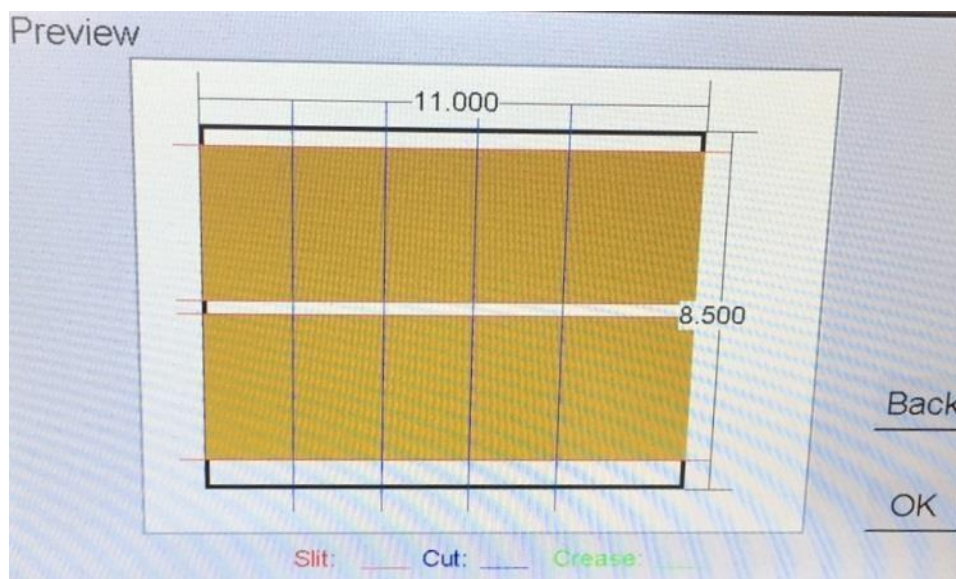

Shrink & Stretch

The printed job may not be perfect due to the nature of the machinery on which it is printed. There is the possibility that there is a very slight difference between the input value and the actual value of the printed piece. When the actual job is slightly larger than the value, you may notice the finished job is shifting away.

- Stretching the cut from head to tail will compensate for the slightly larger size.
- If the image is shrinking, use the shrinking icon to compensate.
- There are also icons that will allow you to shift the cuts towards the head or tail.




Stretch from Head to Tail/Shrink from Head to Tail – this will stretch or shrink the cut horizontally (length of the sheet). If the cut image is evenly placed but too small or too large for the finished piece, use the appropriate button to shrink or stretch the cut for a better fit.

Shifting Towards Tail/Shifting Towards Lead Edge – this will shift the cut towards the tail edge or towards the lead edge. If the cut image is shifted up or down on the finished piece, use the appropriate button to move the cut towards the tail or lead edge.

Manual Input Programming

Pressing the  button it will take you to the Manual Input screen.

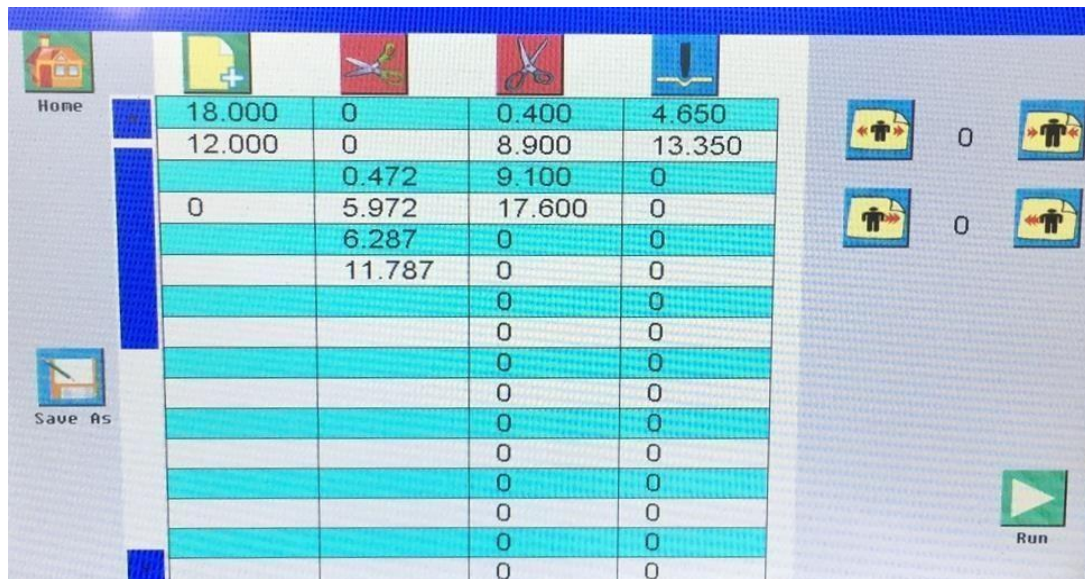

The four icons across the top and the next button allow the user to manually input the job data. Their definitions are as follows:

-  Paper size
-  slit programming
-  cut programming
-  crease programming


Manual Shift Adjustment




Although the slitters are fixed, it is possible to adjust the slitter position to compensate for **vertical image shift**. As depicted in the image above, turning the knob will shift the slitters left or right. Turning to the right will shift the slitters toward the OP side. Turning the knob to the left will shift the slitters to the non-OP side. Ensure the slitters are secure to the shaft with the set screws. Use the provided blue handled 2.5mm hex tool to tighten the set screws.

Manual Setup

1. Select paper size by pressing the Paper Size icon. Input the values according to the sheet size you are using. Once this button is selected you will be asked "Do you want to clear all values?"
2. The PT 331SCC Air is programmed with four default settings: Letter, Legal, Ledger and Digital. Touch the field box to make changes, press Enter to save changes. Press the Back button to return to the Input Screen.

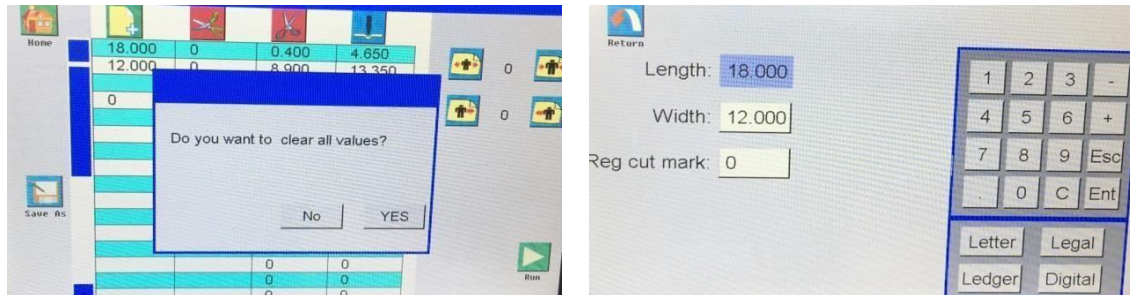


3. Select the  Slitter icon. Enter the slit values for each slitter. Please note, the slitters have a limited range in which they can operate. If the job does not accept the programming (displays a different number) try programming a different slitter for the required value. Press back button when slitter programming is complete.

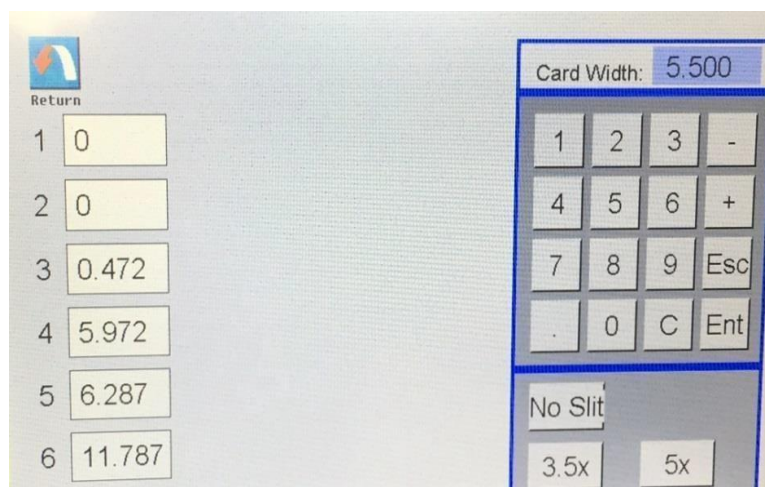


Note: This feature is just for user reference to show the slitter positions on the display. A "Card Width" value must be entered or else the slitter heads will not turn. If the slitter heads are in the path of the paper and the "Card Width" has not been entered, the sheet will jam when going through the slitter heads.

4. Select the  Cut icon to program the cuts required for the job. The PT 331SCC Air has 32 cut positions per sheet. Press the Back button when cut programming is complete.

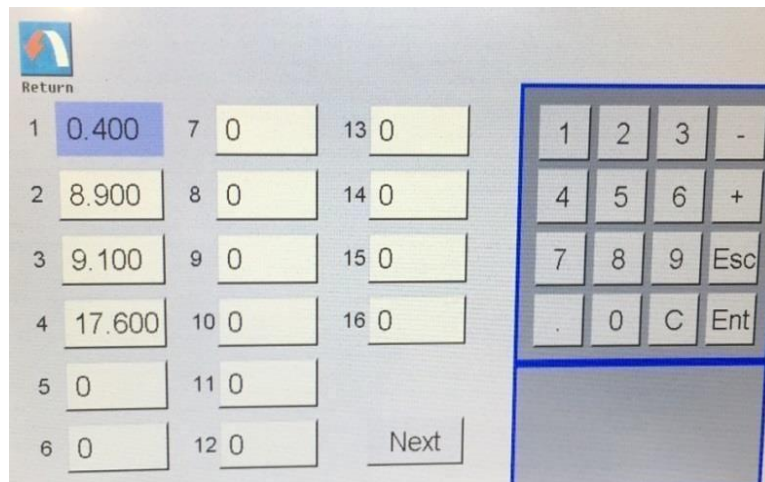


5. Select the  Crease button to program the creases for the job. The PT 331SCC Air has 32 crease positions per sheet. Press the Back button when crease programming is complete.

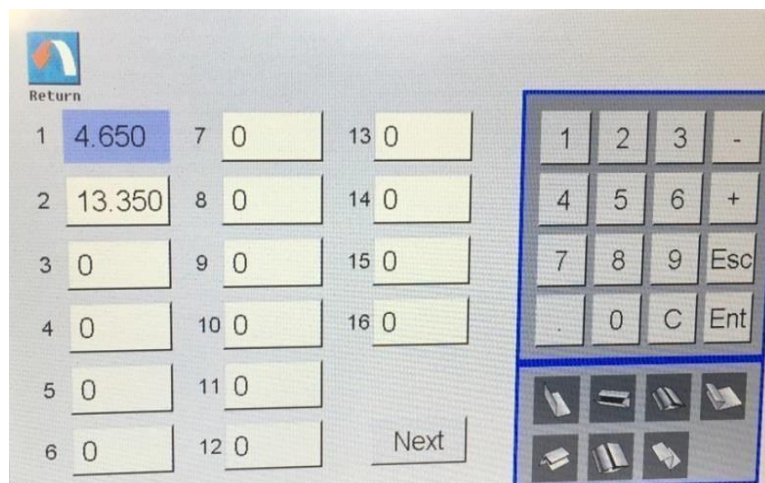

6. Press the Next button to advance to visual display. Once all the slits, cuts, creases, and perfs are programmed, press the Run button from the manual input screen.

7. The PT 331SCC Air will display a visual of the job. Confirm the layout matches your finished product. The settings are color-coded as follows:

- Yellow: Perforate
- Red: Slit
- Blue: Cut
- Green: Crease

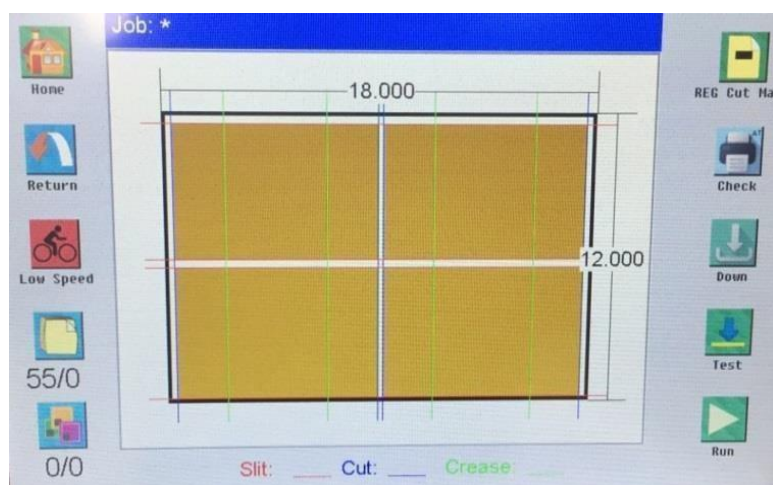

	Home	Returns to Home screen.
	Back	Goes back to the previous screen.
	Speed	Sets the speed of the PT 331SCC Air. There are two speeds: bicycle (regular) and airplane (faster) mode.
	Sheet Count	Sets the number of sheets per job.
	Batch Count	Sets the number of batches per job.
	Cut Mark Registration	Turns on/off the Cut Mark Registration.
	Table Down	Lowens the feed table.
	Check	Sends a sheet partially through the PT 331SCC Air to allow for slitter alignment. After pressing Check button, a screen will appear reading "C-5 Paper Jam Near Infeed Roller". Use the forward/reverse arrows to adjust.
	Test	Sends one sheet through the PT 331SCC Air.
	Run	Runs the current job (will use all paper unless "Batch Count" is set)


Job Layout Creation


Layout Parameters

Setting	Minimum	Maximum
Cut from Lead Edge	0.125"	0.59"
Cut from Tail Edge	0.19"	0.59"
Slit from Side Edge	0.125"	0.59"
Gutter Cut	0.118"	0.59"
Fixed Gutter Slit Width	0.375"	
Registration Mark Specifications	0.118" x 0.472" (L x W)	
Registration Cut Mark Location	12" Sheet: 5.484" from center of sheet	
	13" Sheet: 5.984" from center of sheet	
Minimum Card Size (W x L)	2" x 1.2"	


Note: The sample jobs to follow are based on 12" x 18" sheet size. For 13" x 19" sheets, adjust the lead cut and side slit accordingly to keep the same layout, keeping within the parameters defined above.

Job Layout Parameters (12"x18" Sheet)

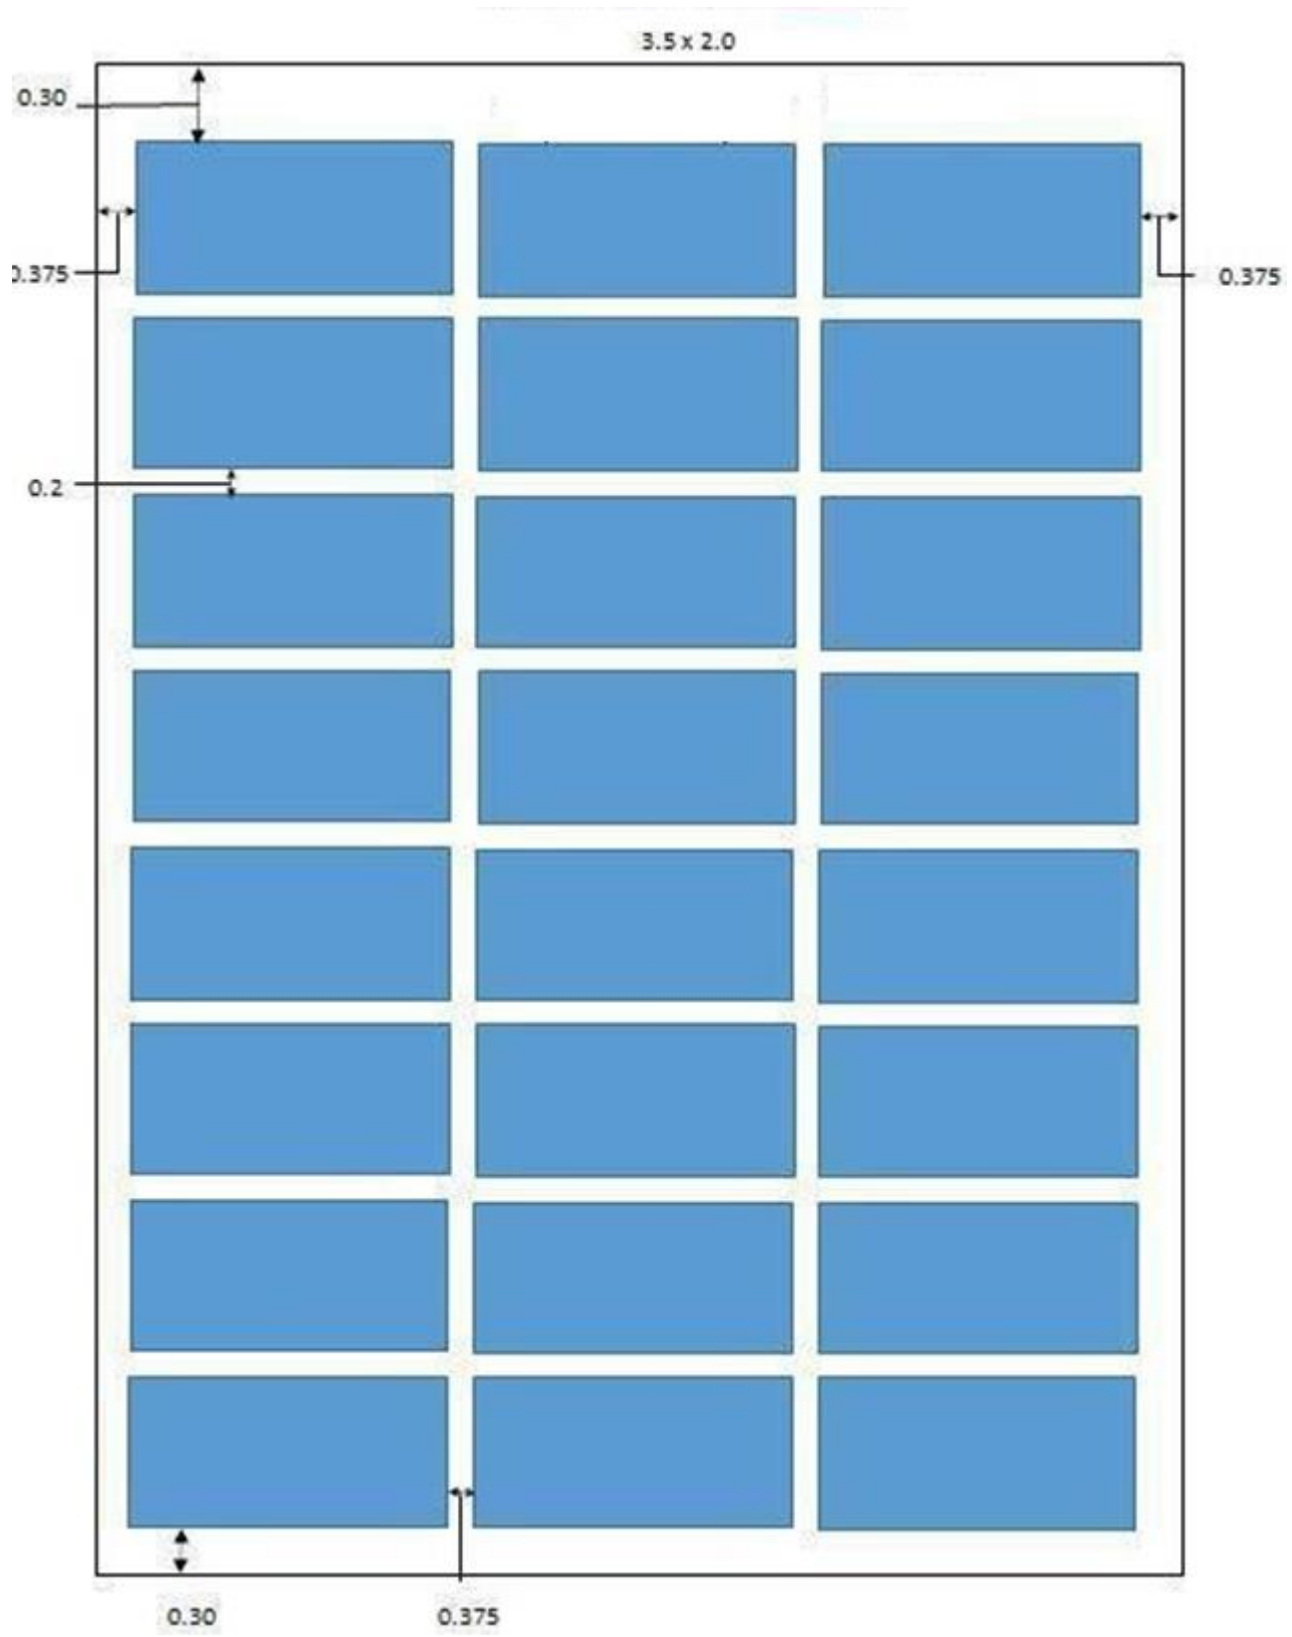

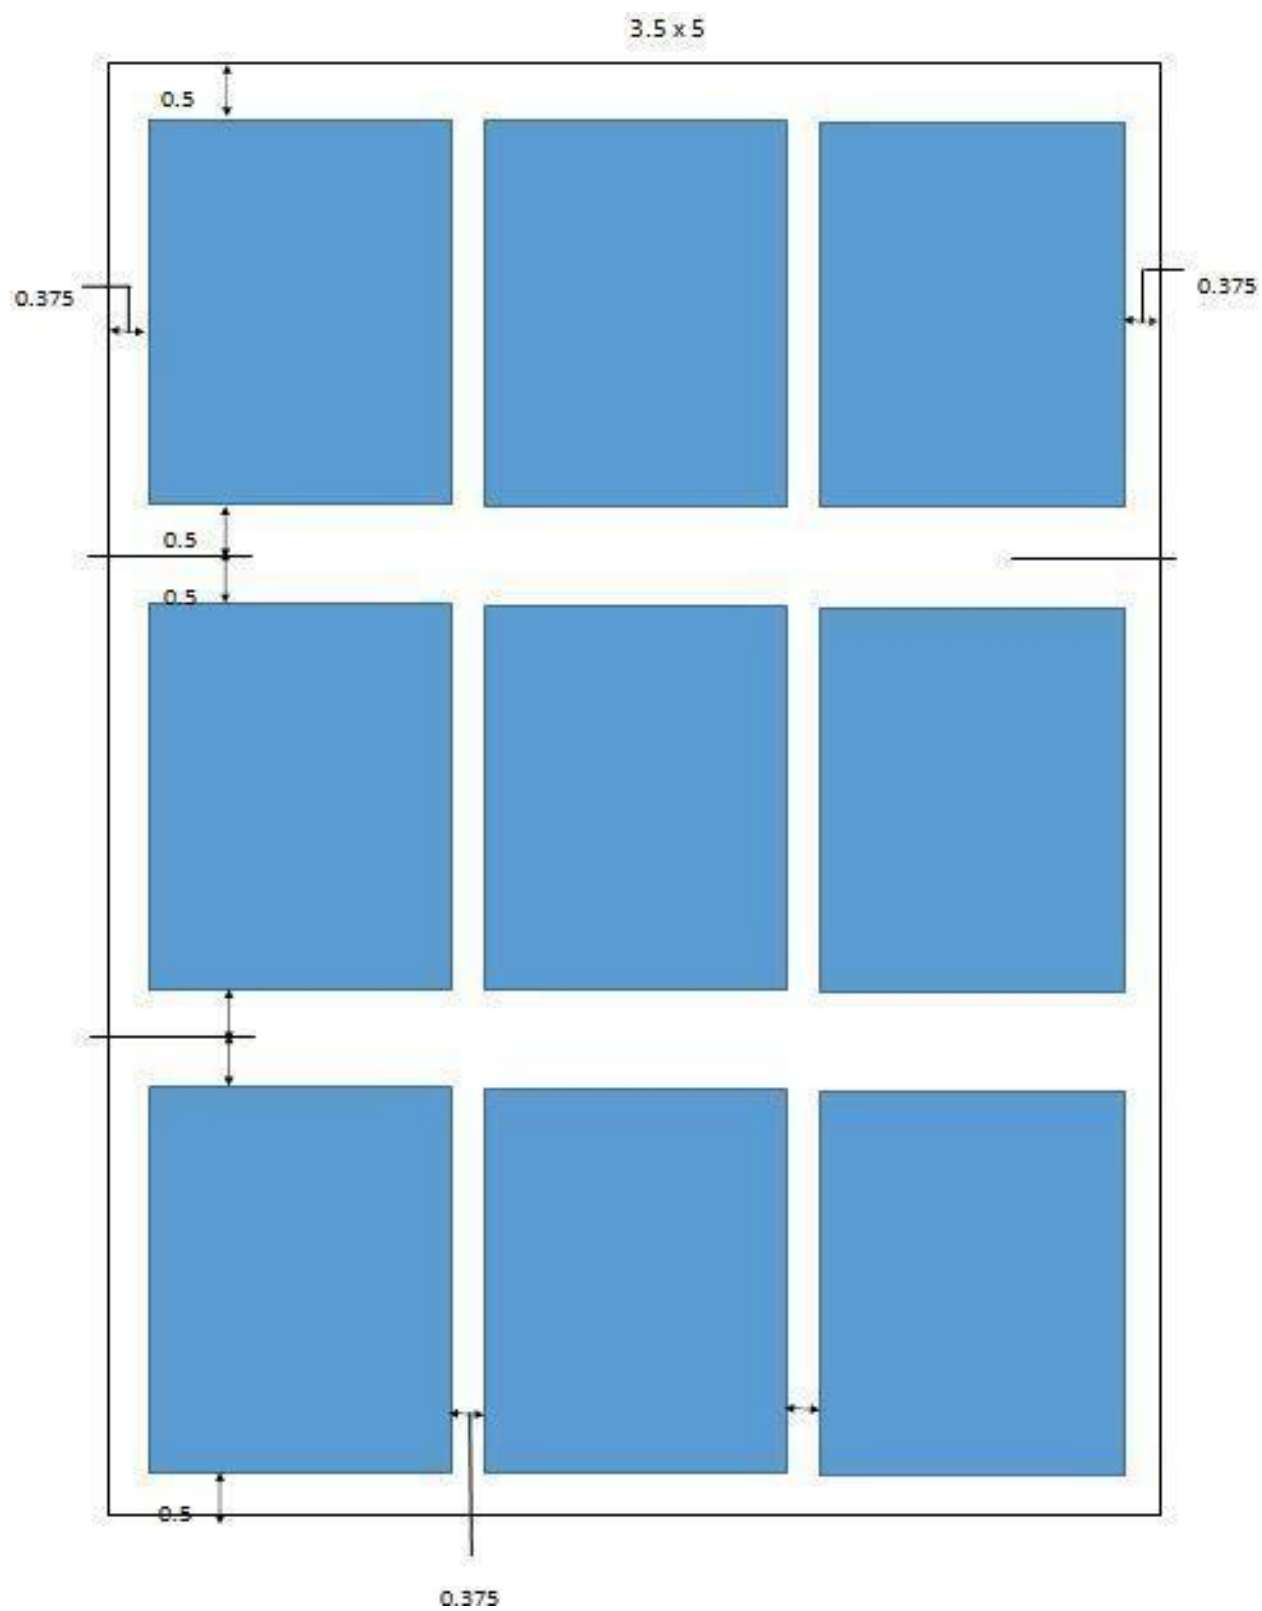

3.5 x 8

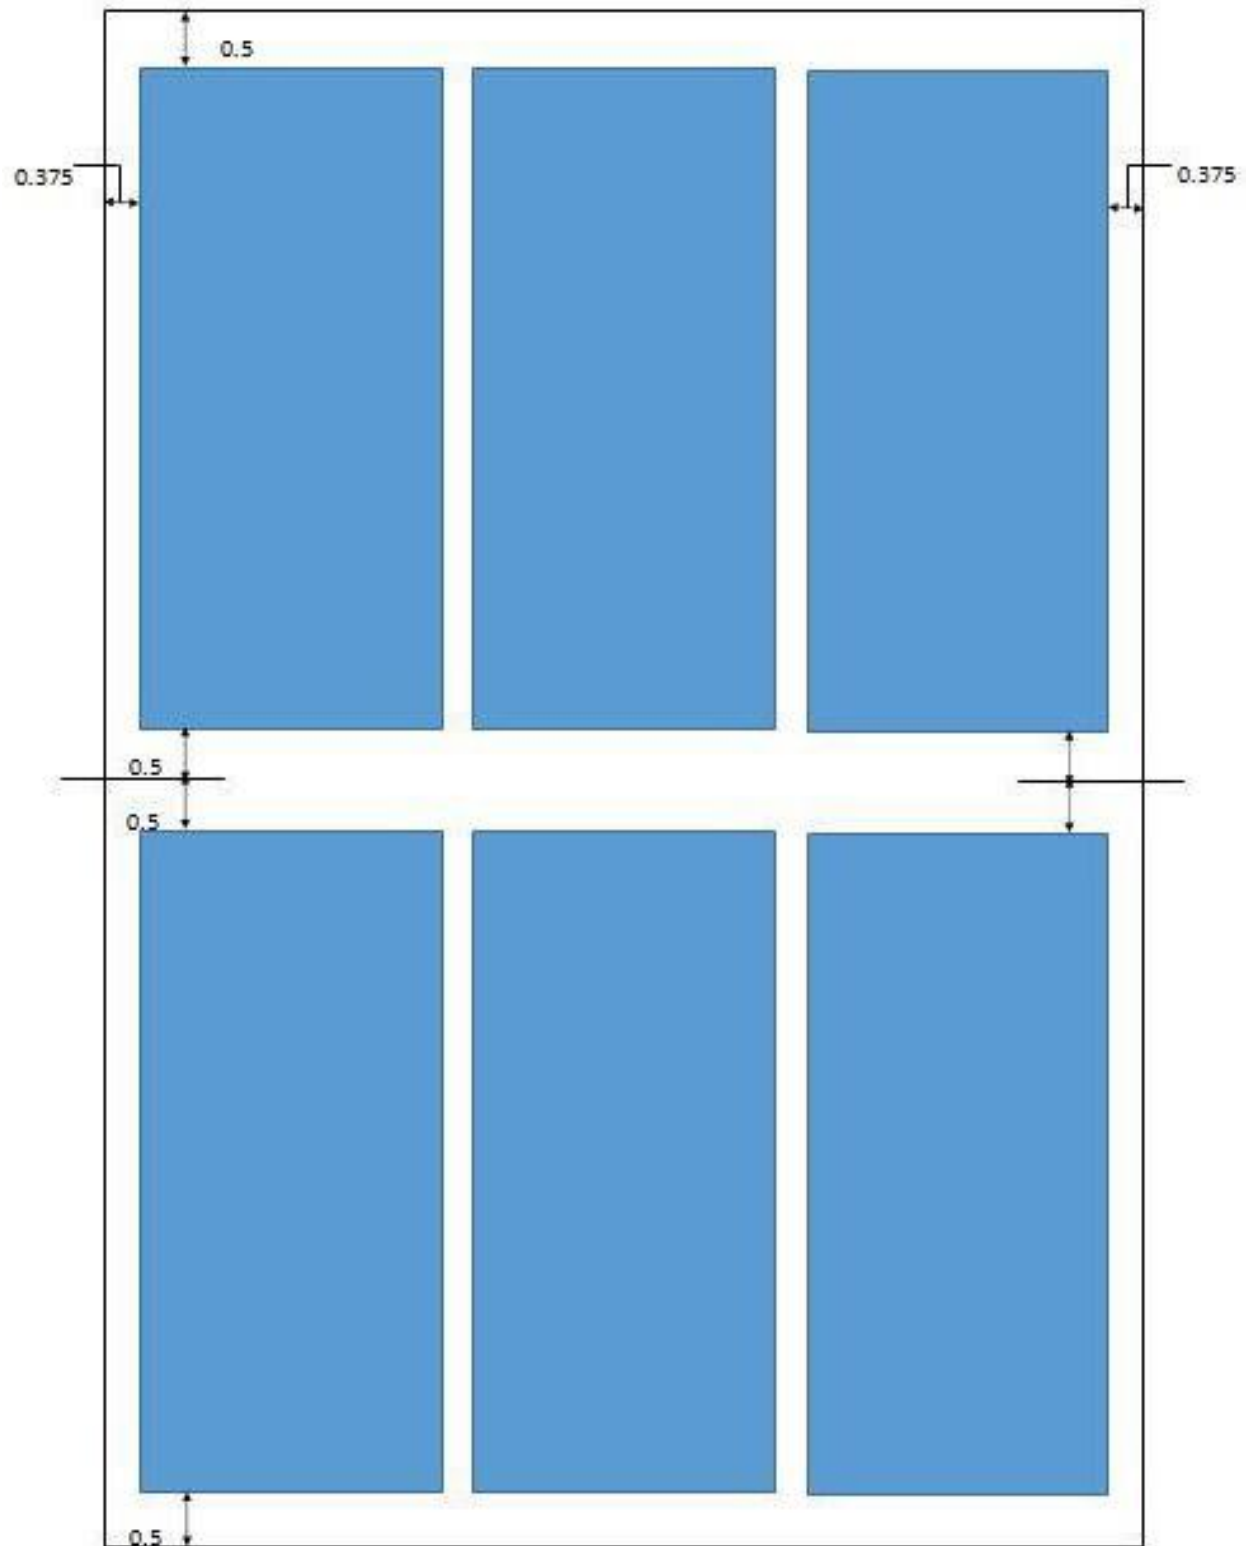
0.375⁻

0.375

0.5


0.5

0.54

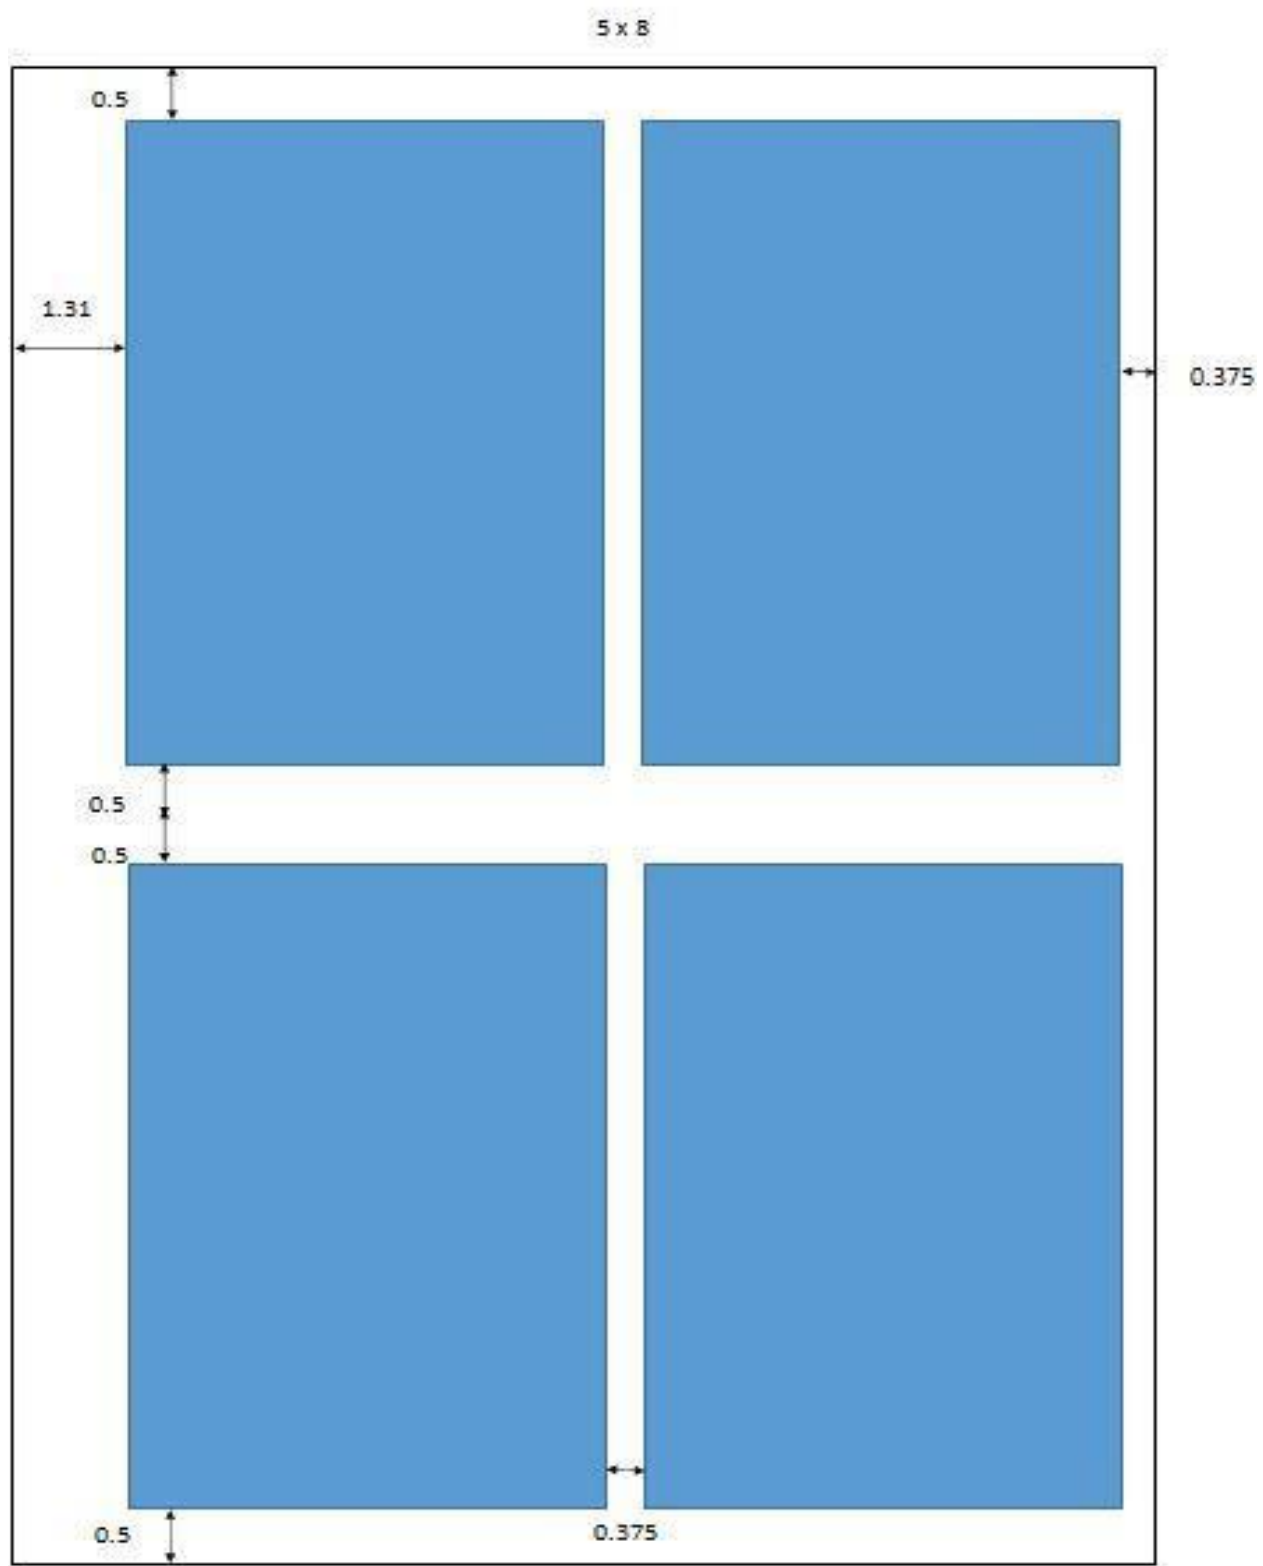

Creating a Register Mark

The registration mark (black area) should be in the left corner and near the leading edge of the stock. If the registration mark is in a different place, the PT 331SCC Air will not be able to accurately read the mark.

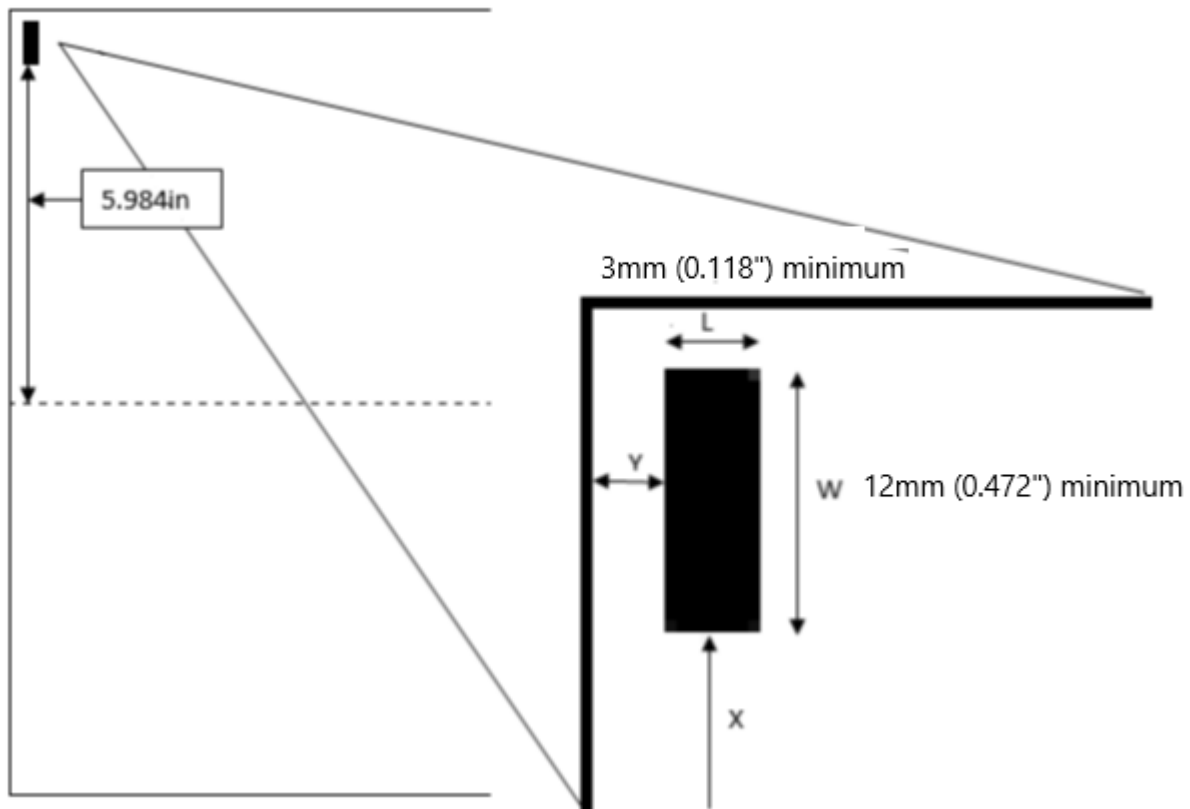


- The register mark reference point is the top edge of the mark.
- For a 12" wide sheet, the mark should be 5.484" from center (X distance).
- For a 13" wide sheet, the mark should be 5.984" from center (X distance).
- Register cut mark distance should be between 0.118" - 0.591" (3-15mm) from leading edge (Y distance).
- The black mark should be more than 3x12mm ($W \geq 0.472"$, $L \geq 0.118"$) ($W \geq 12\text{mm}$, $L \geq 3\text{mm}$)
- The area above the mark should be blank. Any color could potentially interfere with the registration mark reader.

Using the Cut Mark Registration

The PT 331SCC Air is equipped with a Cut Mark Reader. A cut mark is a solid black bar that is printed at the top of the sheet, usually to the left-hand side. When the cut mark registration is used, the PT 331SCC Air will read the placement of the cut mark and adjust the slitter and knife location to compensate for image shifting on the sheets. This helps to ensure that each job is uniformly cut.

First, manually adjust the Cut Mark Reader (located internally before the slitters) sliding the positioning knob to the proper sheet size (12" or 13").

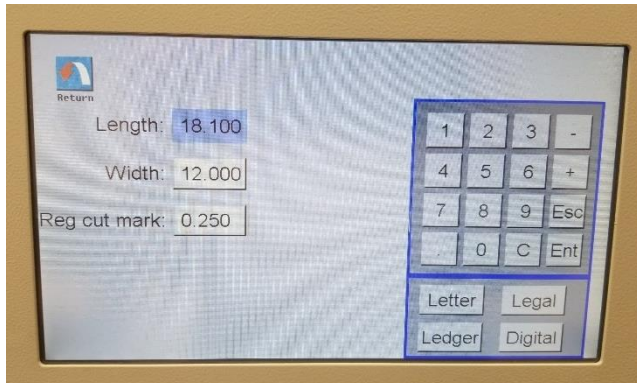

Next, input the placement of the cut mark in the sheet parameter screen. This can be done with the smart input and/or through manual input. **Reg Cut Mark** is the distance from the lead edge of the sheet to the lead edge of the mark.


Once the cut mark registration parameters are set, there is one last step that needs to be performed before the PT 331SCC Air will activate the cut mark reader. Set the job according to the parameters and press the Play button. This will display the preview screen. There are several options available on this screen.

Select this button  to turn on the Cut Mark Registration. This will only activate if the sheet has been set up with values in Reg Cut Mark. When selected, a small checkmark will appear in the lower right corner of the icon. Using the Cut Mark Registration will slow down the PT 331SCC Air enough to read the mark position and move the cuts accordingly. This is generally an insignificant pause.


Saving a Job

After pressing the  key, a keyboard will appear where the user can input the job name and save the job. The name of the job cannot exceed sixteen characters. After typing in the file name, press "Ent" to save the job. To exit without saving, press the "Esc" button. Once the

job has been saved, it can be activated through the  icon that is displayed on the home screen at any time.

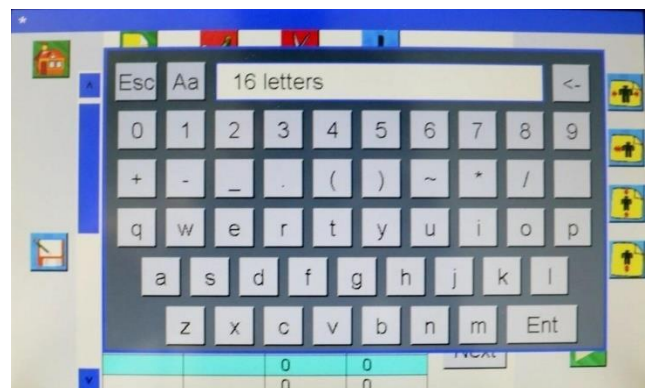



Setting Slitters

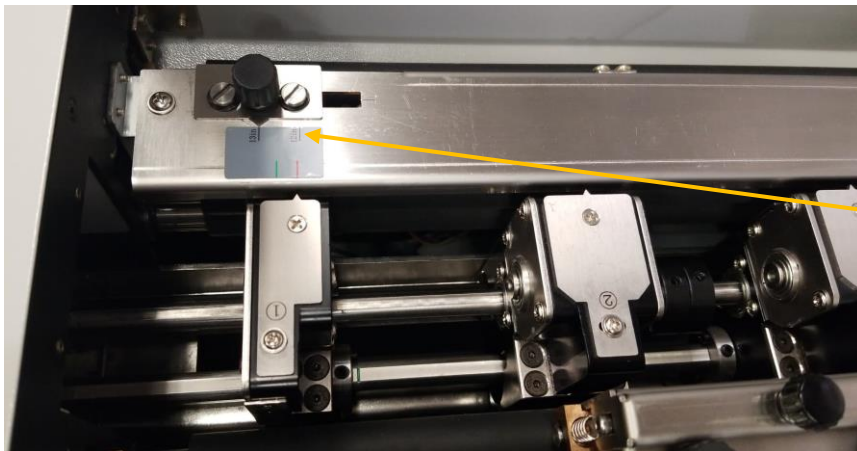

To make switching between standard sized jobs easier, the PT 331SCC Air is equipped with a slitter placement gauge. The gauge is etched with two standard widths: 3.5" (business cards, etc.) and 5.5" (greeting cards).

Set the slitters in the positions marked on the gauge that match the desired job. Line up the slitters with the notched positions on the slitter shaft.


Using the provided hex tool, secure the slitters in position by tightening the set screws to the shaft.

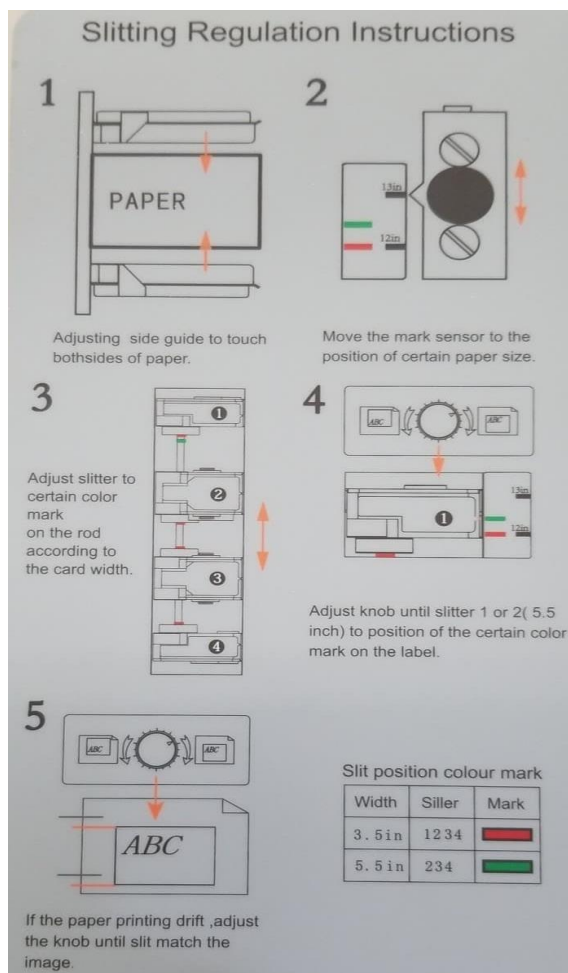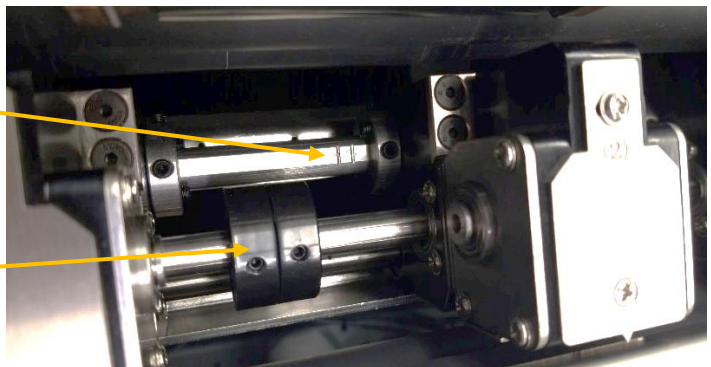

Use this quick set-up guide, located on the feed tray, to assist in setting the slitters.

Positioning

The shaft on which the slitters are mounted have lock positions. These lock positions have markings on the positioning shaft. Slide the slitter assemblies until they 'click' into the required lock position (3.5" or 5.5"). Fix the slitter assembly to the shaft by positioning the locking collars against the side of the slitter assembly. Tighten the set screws to secure.

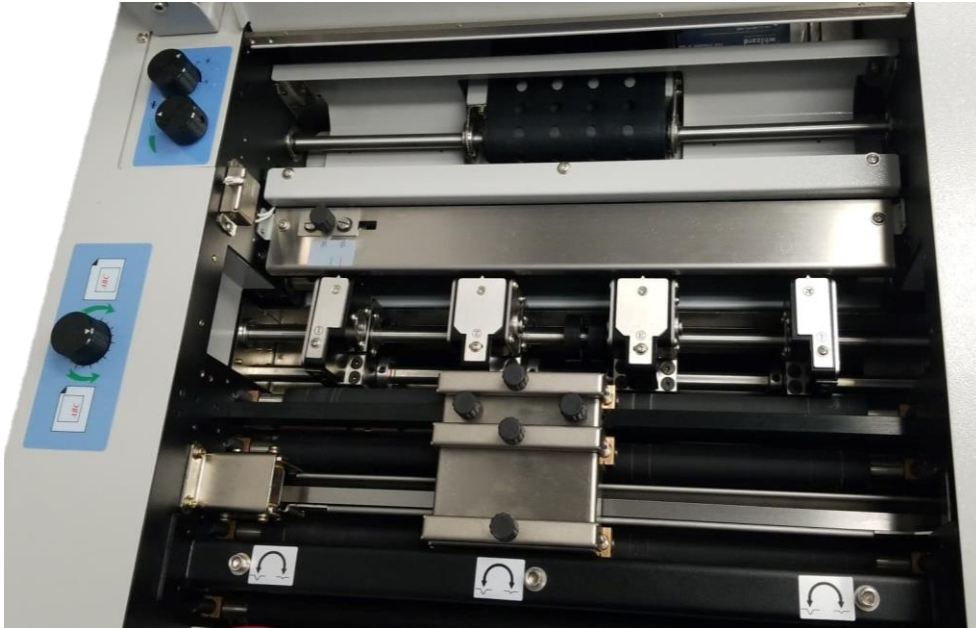


Side Trimming

Move the Slitters #1 and #4 all the way to the side. Slitter #2 and Slitter #3 will be used to trim the sides. Since they are a fixed gutter slitter, the amount of trim that can be done has the same limitations. Trying to trim less than 3.2mm (0.126") will be too thin and the waste will not go into the bin and can get stuck in the slitter head.

Trimming 3.2mm (0.126")-10mm (0.375") is OK as the waste is thick enough and will go into the waste bin.

Trimming from 10mm-15mm will cause a similar issue. The paper under the 10mm position will go into the waste bin but the paper outside the second slit (10mm-15mm position) can get stuck in the slitter head but everything past the 10mm position will come out the exit rather than going to the waste bin.

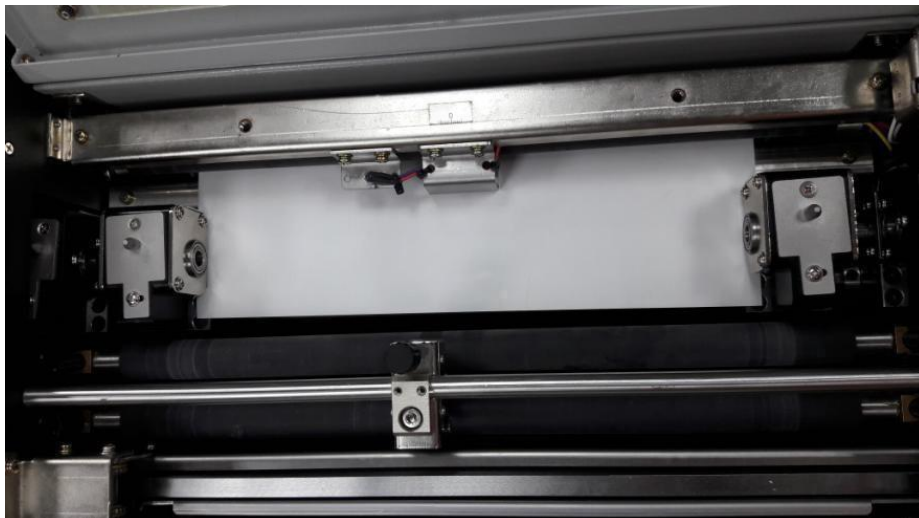


Slitter Removal and Replacement

Complete the following steps to remove the slitters.

Note: this procedure is applicable for both the 331SCC manual and 331SCC Air


1. Power down the 331SCC. This is for safety.
2. Locate the slitter removal tools that were shipped with the 331SCC. There should be two thumb screws and two notched plates.
3. If installed, remove the template. You now have access to the slitter assemblies.
4. Loosen the two countersunk screws, if removing slitter assembly 1 or 4, or four screws if removing slitter 2 or 3, that secure the upper slitter assemblies to the lower assembly.
5. Carefully lift the slitter assembly.

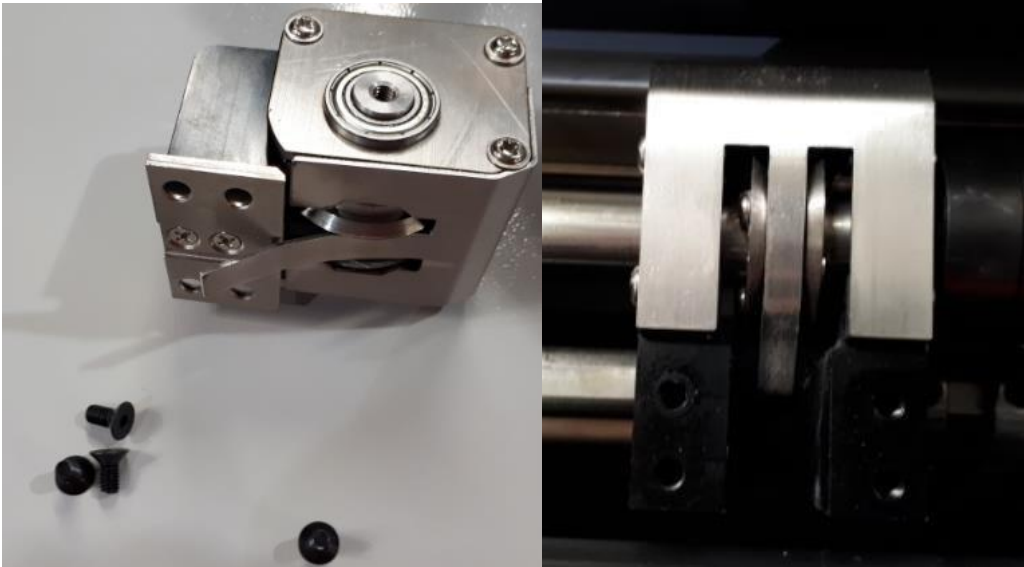

6. Clean out the upper and lower assemblies.
7. Skip to Slitter blade removal if removing blades. This covers the lower slitter assembly removal procedure.
8. When all dust and debris has been removed from the upper and lower assemblies, install the thumb screws in the center of the upper slitter assembly.



9. Insert the notched plates between the slitter removal shaft and bearings by pulling on the thumb screws. The slitter blades are spring loaded.

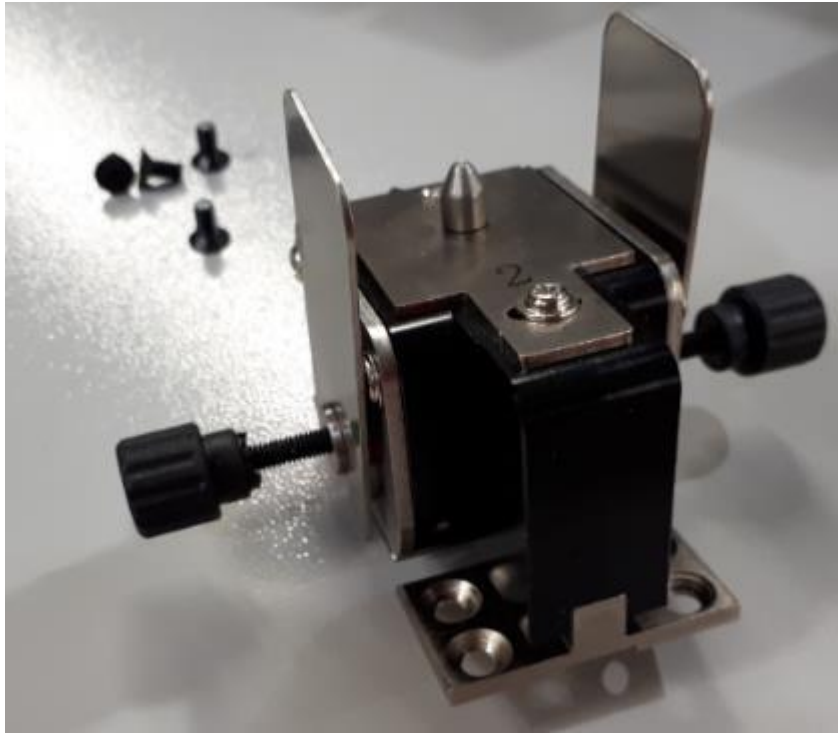


10. The upper slitter blades rest outside of the lower blades. When installing, ensure the blades remain to the outside by pinching the notched plates in or pulling on the thumb screws. **Note:** *you may need to move the other slitter assemblies to create room for the thumb screws.*




11. Tighten the screws, keeping the tools in place to ensure the blades don't shift out of position.
12. Run a test sheet. If the slit is jagged, loosen the screws and adjust the slitter blades by pulling on the thumb screws.
13. Continue testing until the slitters produce a clean slit.
14. Remove the notched plates. Remove the thumb screws.
15. Test the 331SCC for clean slits.

Slitter Blade Removal Procedure

1. Complete the steps listed above, stopping at step 6.
2. Remove the op and non-op side covers.
3. Locate and remove the slitter side cover from the op and non-op side.

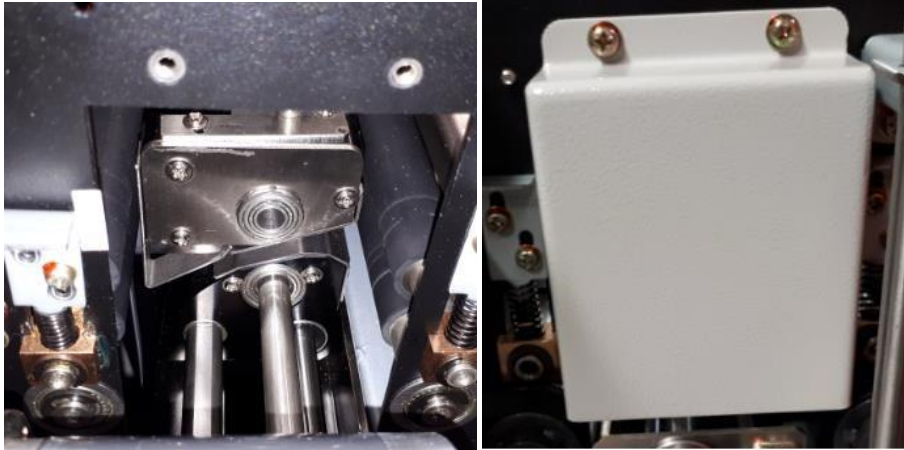

4. Remove the slitter drive belt. You can remove the gear as well, but it's not necessary.

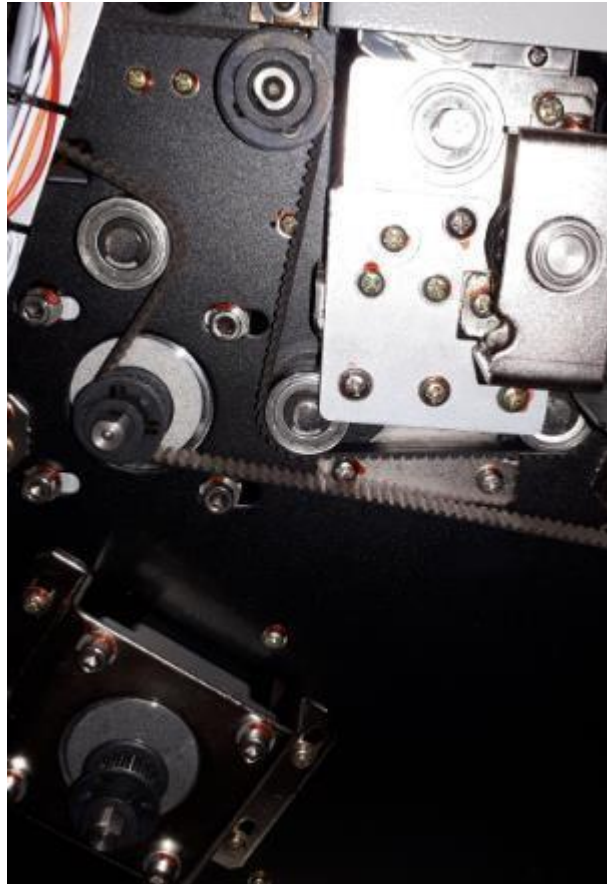

5. Remove the brackets securing the slitter drive assembly to the chassis.



6. Carefully remove the entire assembly from the machine. You now have access to all four slitter assemblies.
7. Remove the 2 screws securing the deflector plate.
8. The slitter blade hub can be removed by sliding the slitter drive rod through the hub. **Note:** *there is a T-pin that fits into the groove in the slitter drive shaft.*
9. Replace the blades on the hub. When reinstalling the hub, ensure the pin is present and slotted into the groove. This is required for all hubs.
10. Reinstall the deflector plate.
11. Install the upper slitter assembly as per the instructions above.
12. Install the slitter drive assembly into the chassis and secure with the brackets.
13. Attach the drive belt and gear.
14. When everything is secure, run a test page. If the slit is jagged, follow the instructions above, testing between each step.
15. When the slits are clean, your work is done.

Setting Outfeed Tray

Set the outfeed tray and guides as per the finished sheet size.



Slide-in Tools

The PT 331SCC Air has the option of two slide-in tools. **Crease (1mm)** and **Perf (12 TPI)**. Each tool is comprised of two individual dies.

1. Open the cover and slide out the die.
2. Insert the desired crease or perf bar. (*Crash pad portion of perf die must always be on the bottom and the blade portion on top to prevent jams*)
3. Close the side cover.





Crease Die



Perf Die


Changing Perf Crash Pad

The rubber crash pad is a consumable item. To maintain the life of your perf blade, please check the perf die regularly and replace the crash pad if worn. The pad is fixed to the lower die. Peel off the worn pad from the die and stick the new one onto it. **Note:** It is essential to perforate the new pad for some time without paper to make trace marks, or the perf bar may not perforate through the sheet.

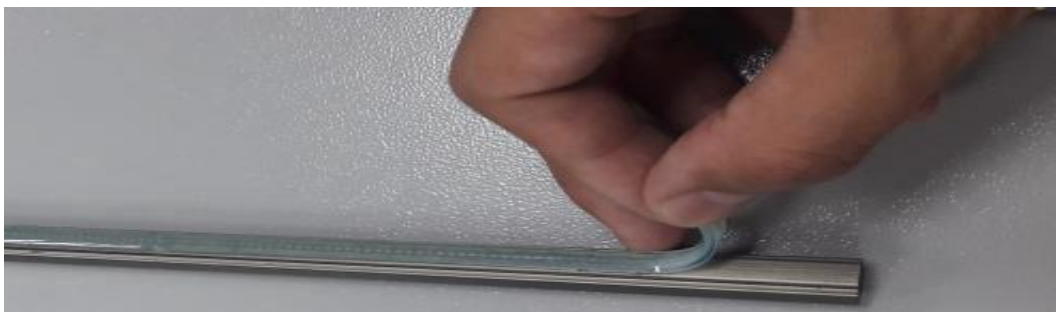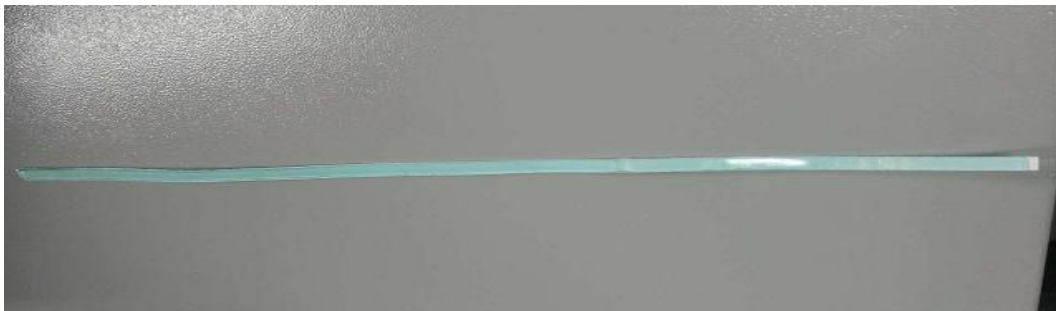

Crease Depth Adjustment

Crease depth is important for crease quality. Depth should be adjusted according to the paper thickness. Low depth will produce a light crease and deeper depth may cause cracking. Adjustment is required if the crease depth is not balanced on both sides.

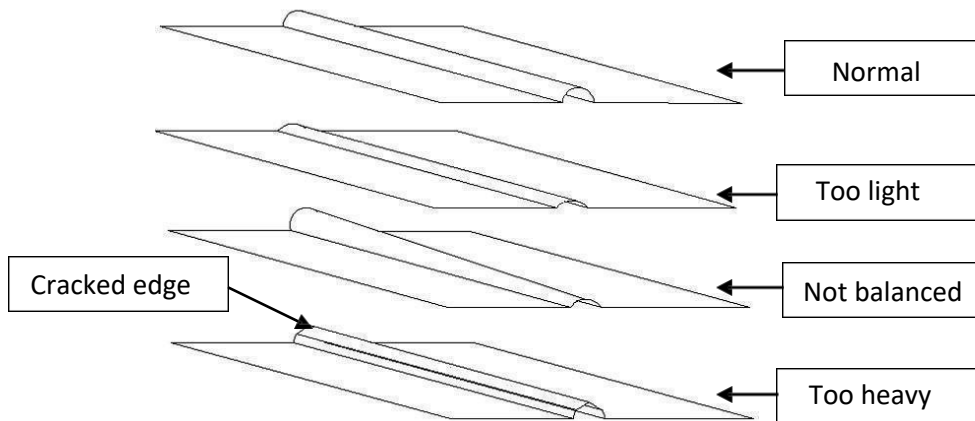

To adjust the Depth:


- Open the top cover.
- Adjust screws clockwise and crease depth becomes shallow
- Adjust screws counterclockwise and crease depth becomes deeper.



Hardware Setting

Side Guide Setting


To adjust the side guides, release the two screws circled in red as shown in the following picture, then move the side guides out wide enough to easily add paper.

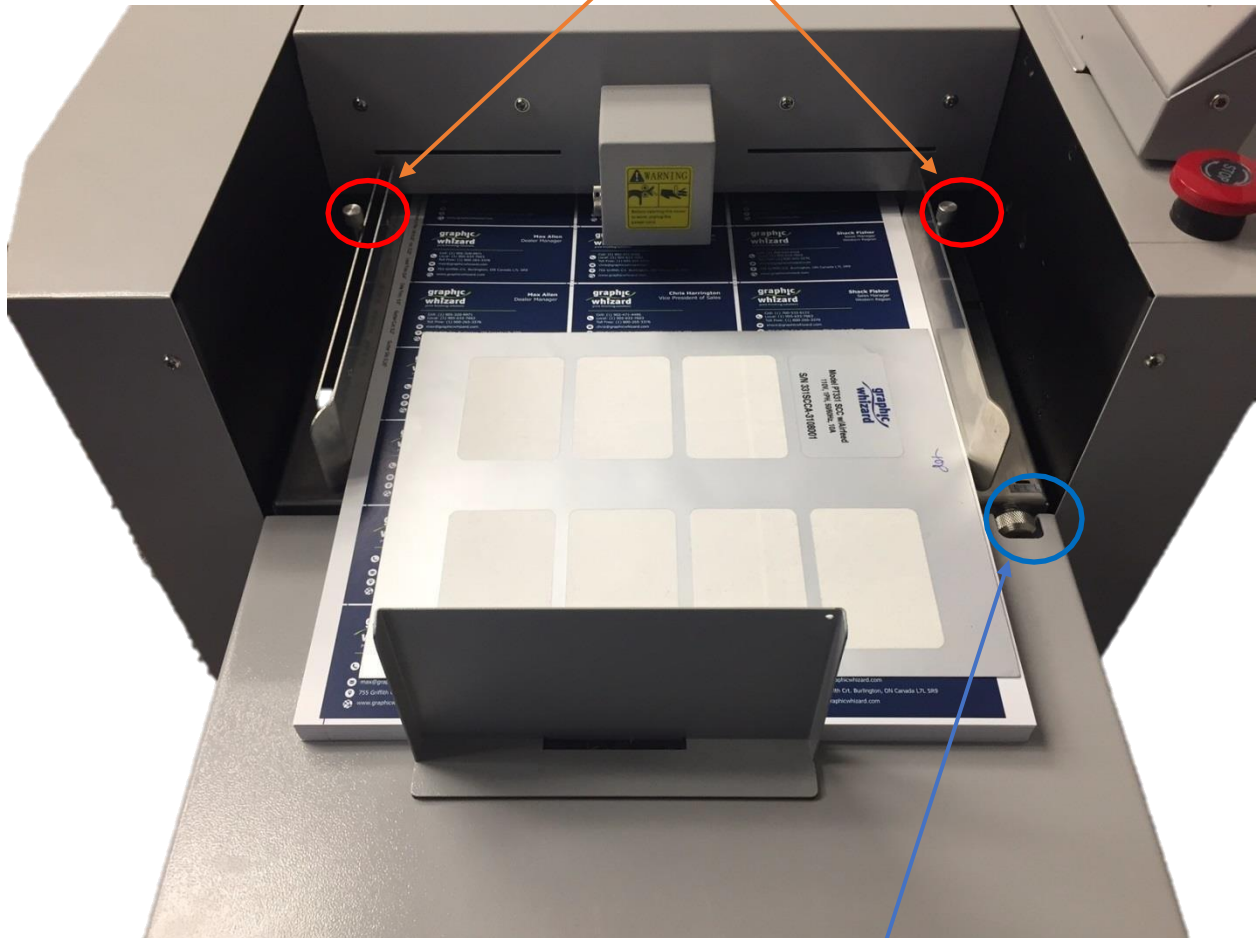

Skew Adjustment

To adjust paper skew, turn the knob that is circled in blue (shown in picture above). Adjust the skew as per the ruler above the knob little by little to get the right feeding angle.


Feeder Adjustments

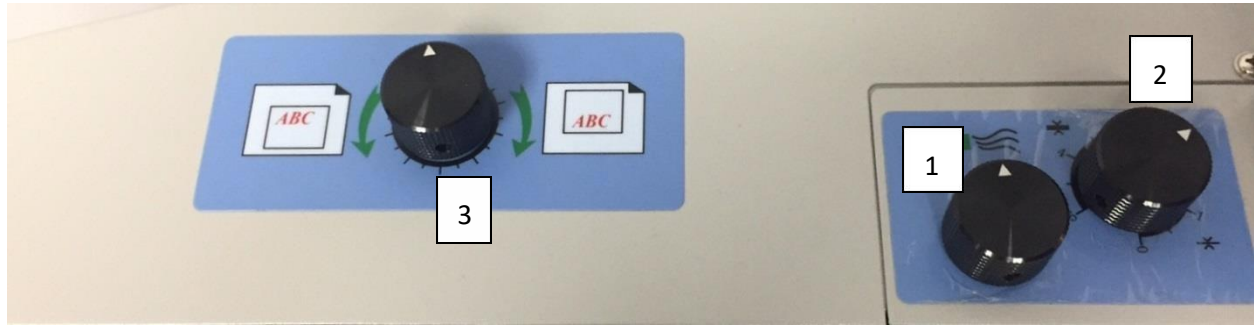

- 1) **Air Adjustment** – The air flow acts as a paper separator. The Air Adjust Knob is located on the top of the PT 331SCC Air unit next to the Paper Separator Adjust Knob. Turn the knob left or right to increase or decrease the amount of air blowing on the paper.
- 2) **Front Guide** – The adjustable paper separators are located under the feed unit. The adjustment control is located on the top of the PT 331SCC Air to the left of the display. Rotate the knob left or right to raise or lower the fingers
- 3) **Slitter Head Adjustment** – This knob allows you to shift the slitter head assembly to compensate for vertical image shift. Turning the knob to the right will shift the slitter assembly toward the OP side of the PT 331SCC Air. Turning the knob to the left will shift the slitter assembly toward the non-OP side of the machine. **Note:** the slitter assemblies must be tight to the shaft or the slitters will not shift. Use the provided 2.5mm blue handle hex tool to tighten the set screws in the collars positioned against the slitter heads.

Center Lag Kit

The center lag kit assembly applies pressure to the two rollers before the knife assembly and the roller after the knife. It will assist in maintaining straight and accurate cutting. The roller pressure can be individually adjusted for each roller.

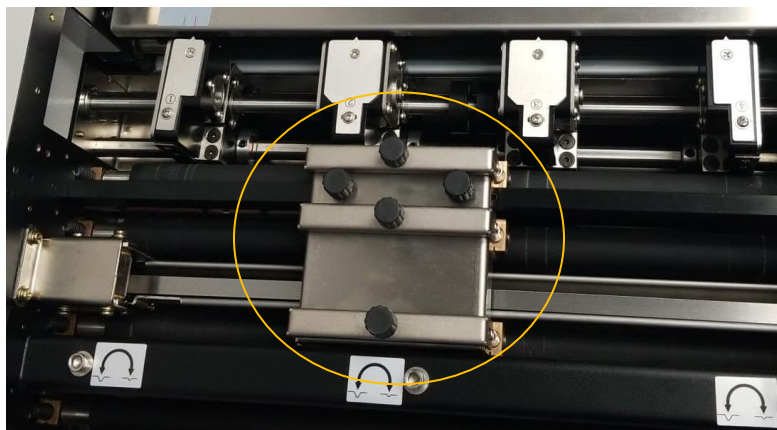


Maintenance

To extend the life of the PT 331SCC Air, regular maintenance should be performed.

User Maintenance

- For a deep clean, use the GW roller cleaner. Wash rollers with water after the roller cleaner.

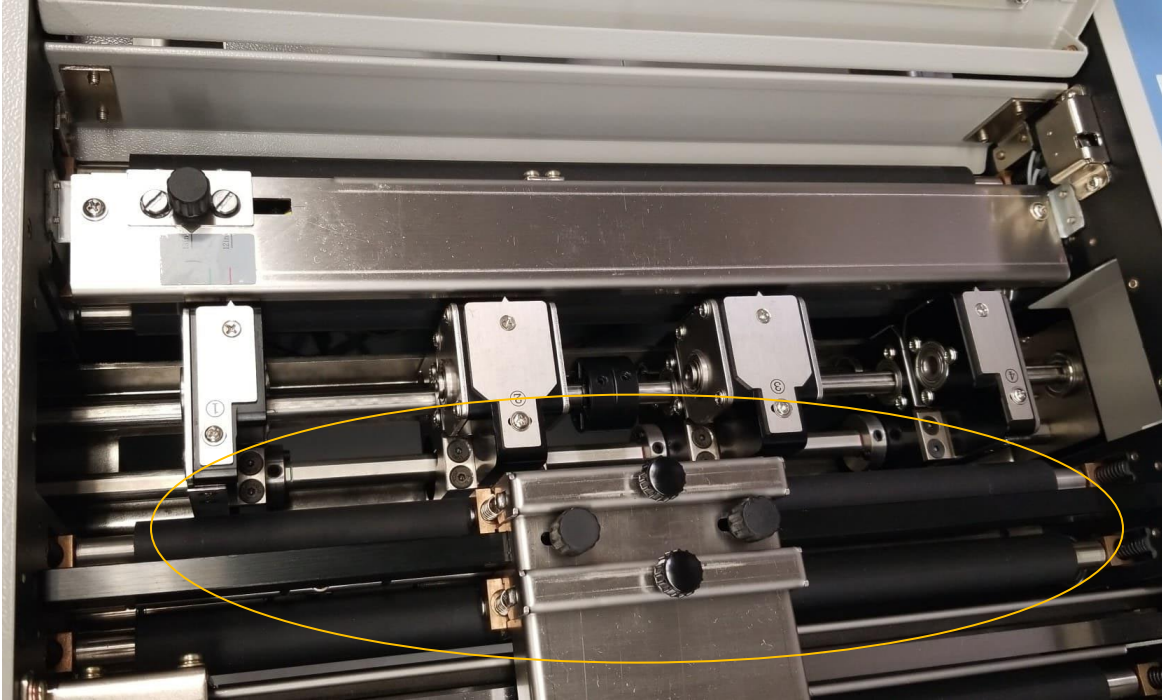

- Clean Sensors with compressed air or a soft cloth.



- Check the PT 331SCC Air regularly for paper scraps and debris.
- Lubricate the roller bushings with a 3-in-1 oil.
- Add a touch of grease on the knife guide.
- Lubricate the knife pivot points and springs with a 3-in-1 oil after every 200,000 cuts.
- Empty the waste bin after every job or if the PT 331SCC Air starts jamming.
- Contact your local GW dealer for preventative maintenance and service.

