



PT 335B Multi

Automatic Creaser

Operator Manual

755 Griffith Court, Burlington, Ontario, Canada L7L 5R9
Tel: +(905) 633-7663 Fax: +(905) 637-4419 Toll Free: 1-800-265-3376
www.graphicwhizard.com

Table of Contents

Introduction	2
Important Information	2
Safety Precautions	3
Specifications	4
Parts and Assemblies	5
Installation	7
Uninstall the Protection Bar	7
Exit Tray, Stops and Guides	7
Feed Tray Extension	8
Power Socket and Switch	8
Fuses	9
Quick Start	10
Operation	12
Control Panel	12
Function and Operation	13
Hardware Setting	21
Crease Depth	21
Front Guide Adjustment	22
Air Gate Adjustment	22
Pile Height Sensor	23
Skew Adjustment	23
Optional Parts	24
Slide-in Tools	24
Linear Tools	25
Maintenance	27
Troubleshooting	28
Error Codes	28

Introduction

The PT 335B Multi is a versatile automatic creaser with multiple finishing options; cross perforating (with the capability to do partial perfs), choice of three creasing widths, and an array of rotary tools; perforating, scoring, slitting, and kiss-cutting. Equipped with a 4" vacuum pile feeder, an easy to use LCD screen and keyboard, skew compensation, and sheet size up to 13" x 25.5". With a maximum of 32 crease/perf positions per sheet, 30 job memory, and speeds up to 4,500 SPH, the PT 335B Multi is a capable and affordable finishing option.

Important Information

This manual is designed to help you operate the PT 335B Multi. Please read, understand, and keep this manual in a convenient place for easy access.

DO NOT operate the PT 335B Multi until you have read and understand the instructions in this manual. If you have any questions, contact your local dealer or Graphic Whizard before operating this machine.

Graphic Whizard shall not be held liable for consequential damages or incidental consequential damages resulting from: improper or inadequate maintenance by the customer; unauthorized modifications or misuse; or operation outside of the environment specified for the machine.

Graphic Whizard is committed to continually improving the design and performance of the product line. Please note: the design and specifications of this machine are subject to change without notice and without legal obligation.

All rights are reserved. No part of this manual may be photocopied, reproduced, or translated to another language without the prior written consent of Graphic Whizard.

Safety Precautions

Please read this entire manual before attempting to operate the PT 335B Multi.

- **DO NOT** operate the machine when any covers are removed, or safety switches disabled. The machine should be serviced only by qualified personnel. Obey all safety instructions and warning labels. Graphic Whizard Inc. cannot anticipate every possible situation that might involve a potential hazard.
- The instructions in this manual and the warning labels on this machine are not all inclusive.
- Please read and understand all safety instructions which include the terms **WARNING** or **CAUTION**.



- Understand that if the safety instructions are ignored, personal injury or damage to the machine may occur.
- The term **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in injury.
- The term **CAUTION** indicates a potential hazardous situation which could result in damage to the machine or personal injury. It also may indicate procedures to follow to avoid unsafe practices.

- Ensure all parts are in good working order prior to starting the machine each day. Replace worn parts immediately and do not operate the machine until you have done so.
- All electrical & mechanical service/repair is to be performed by qualified and approved personnel only.




- **NEVER** insert a hand or fingers into the machine while it is running.
- **DO NOT** wear loose fitting clothing when working with the machine. Tie back long hair.
- Make sure that the machine stands on a level position and is well ventilated.
- Ensure that the power cord has been unplugged prior to performing service

on the machine.





- It is the responsibility of the customer to supply power to the machine in accordance with all applicable electrical and safety codes and standards.

Specifications

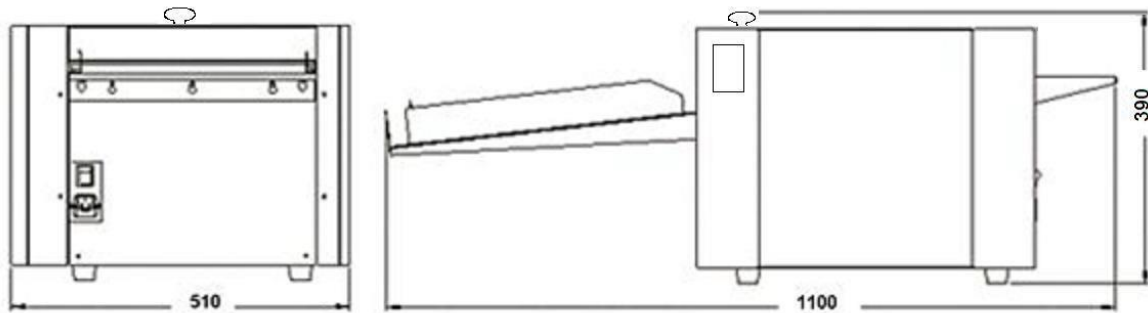

Item	Spec
Electrical	110-130V, 50/60Hz, 15A
Speed	4,500 SPH (based on 8.5"x11" run landscape, 1 crease)
Maximum Stock Size	13"x25.5"
Minimum Stock Size	4.7"x 5.5"
Stock Weight	26# bond – 16 pt.
Tabletop/Floor Model	Tabletop (image on previous page; machine shown with optional stand)
Maximum # Crease Positions	32
Program Memory	30
Feeder	4" air fed vacuum pile feeder

Parts and Assemblies

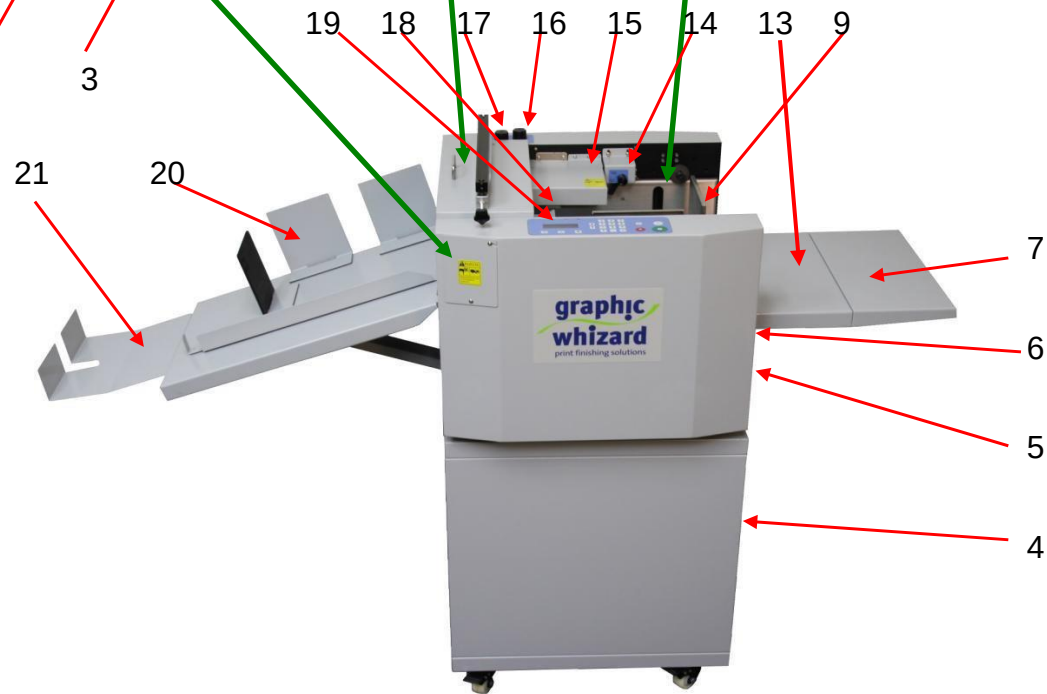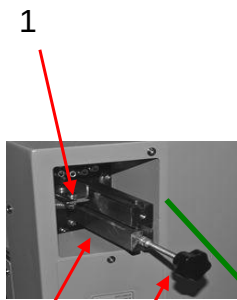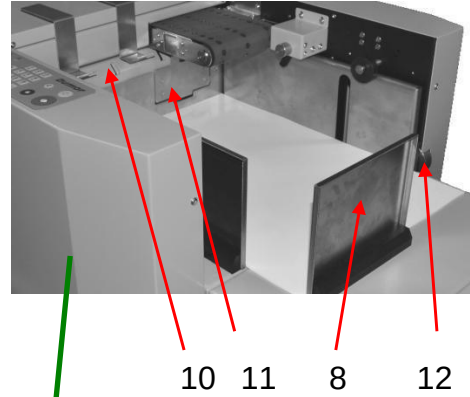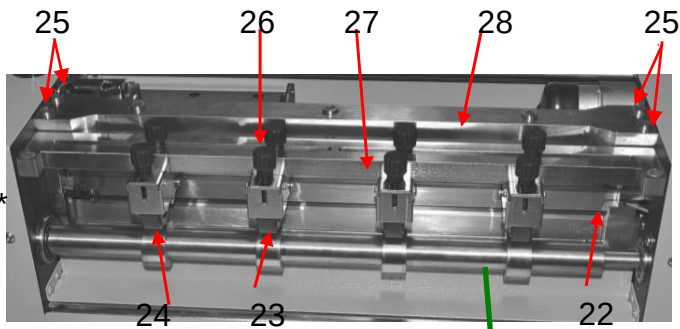


No.	Parts	Description
1	Slide-In Bar Lock	Crease/Perf bar entry lock
2	Slide-In Bar	Crease bar or perforation bar
3	Handle	Crease/Perf bar handle
4	Stand	Optional with casters
5	Power Socket	For system power
6	Power Switch	On/off
7	Feed Table Extension	To load longer sheets
8	Paper Stop	To hold the paper when it is feeding
9	Fixed Side Guide	For skew adjustment
10	Air Gate	Adjustable to control air flow
11	Front Guide	Let one sheet enter without double feeding
12	Skew Adjust Wheel	To change the angle of fixed side guide
13	Feed Table	To load sheets
14	Stack Height Sensor	Controls table height
15	Vacuum Feed System	Assists in feeding sheets
16	Front Guide Knob	To adjust the height of sheet separators on front guide
17	Blower Knob	To adjust the blower power
18	Paper Deflectors	Controls sheet in feeder
19	Control Panel	Display and input
20	Tray Guides	Adjustable guides to stack sheets on output
21	Exit Tray	Exit tray
22	Clip	Release to uninstall the shaft
23	Outfeed Shaft	To install the outfeed counter rollers
24	Linear Tool & Exit Tire Anvil	Works together with linear tools and exit wheels
25	Depth Adjust Screw	To adjust the depth or crease or perforate
26	Depth Adjust Screw	To adjust the depth of liner tools
27	Linear Tools	Roller, scorer, kiss cutter, slitter, or perforator
28	Mounting Bar	To install exit wheels and linear tools

Installation

Uninstall the Protection Bar


Ensure all brackets are removed for shipping purposes (see images below). There should not be any brackets installed holding the feed table down once set up begins. During shipping there will be a support bar installed across the feeding table, as well as a small bracket holding the table down. Please remove both.

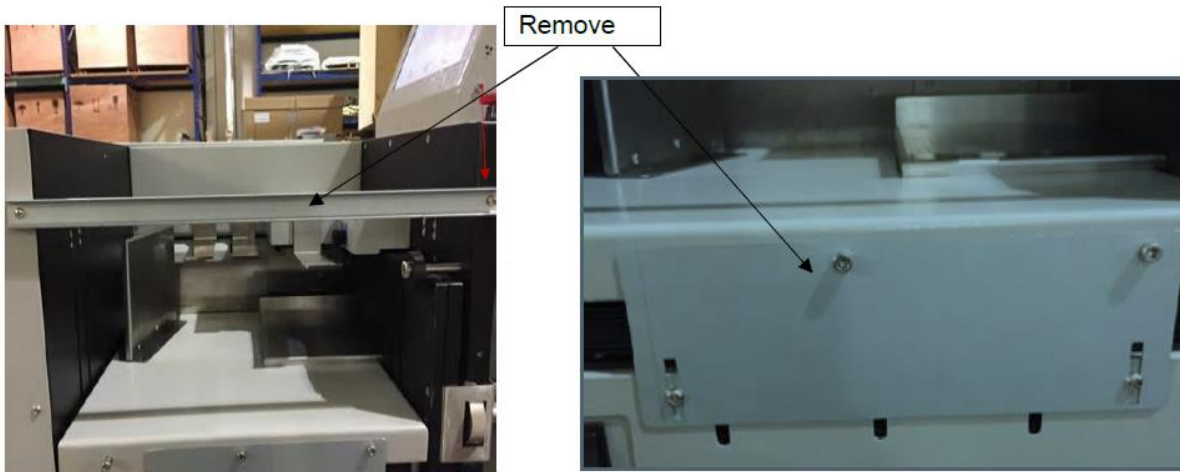

Exit Tray, Stops and Guides


Unpack and install the parts as per illustration below.

Note : Guide and stops will be determined by paper size.

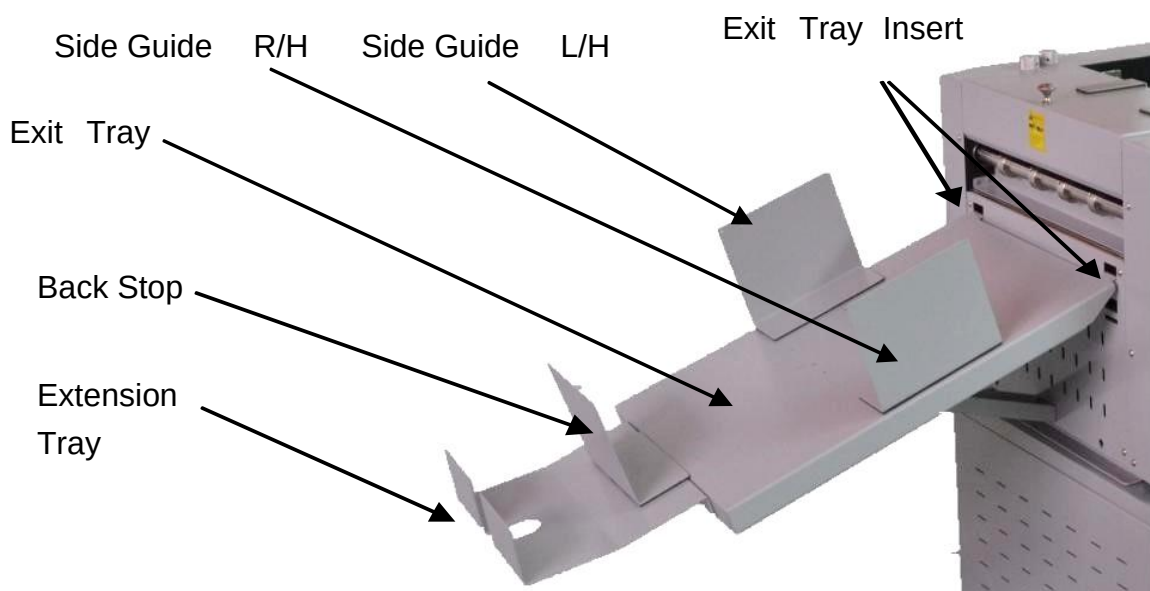

Feed Tray Extension

There are 2 screws on the tail of the feeding table (Figure A), and there are 2 holes on the side of the extension table (Figure B). Align and secure.

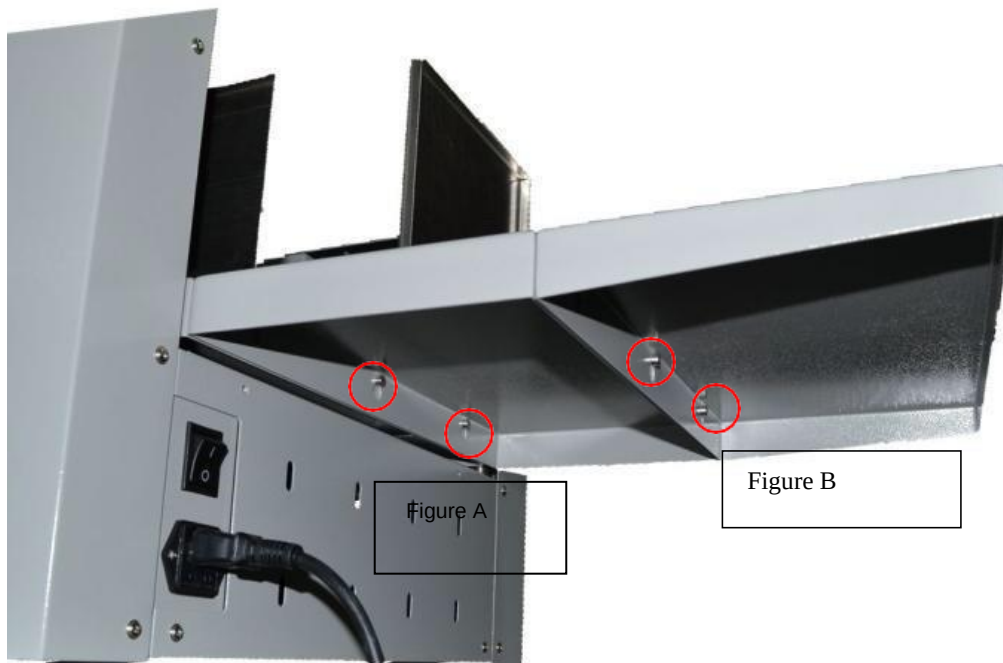

Power Socket and Switch



Before using the machine, ensure that the electrical output at the source is adequate for the machine specifications. Connect the power cord provided to the socket. Press the switch to turn the machine ON and OFF.



Fuses

If there is a power surge, or the power exceeds machine requirements and the fuse requires replacing, the fuse is housed beneath the power socket.

*****Ensure power is disconnected before performing any maintenance.***

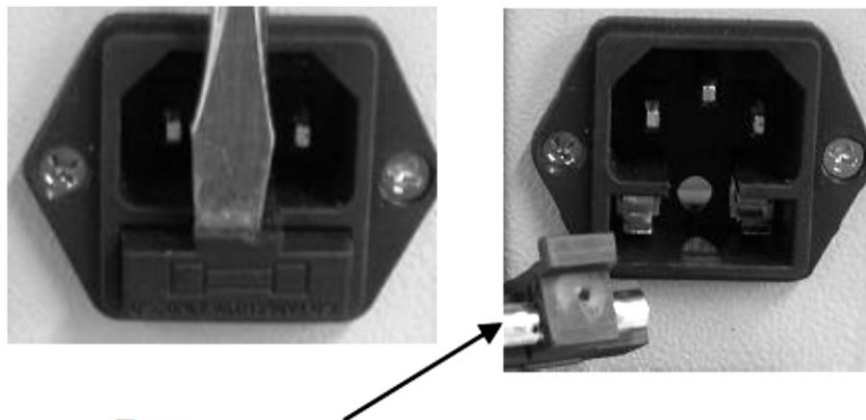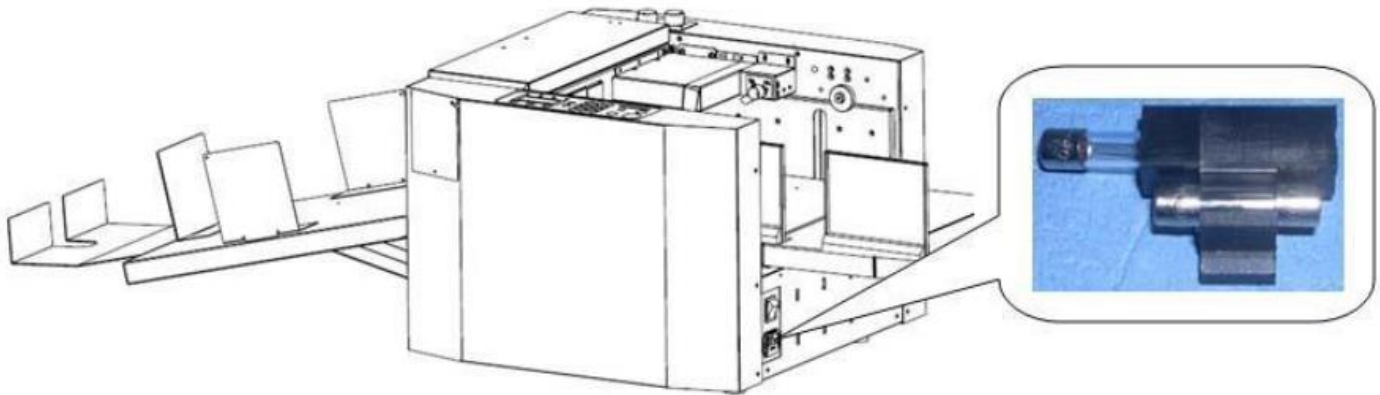

Fuse

Quick Start

(See machine diagram for parts listing)

1. Turn on machine.
2. To lower tray, press STOP.
3. Put stock in the feed tray, against the fixed guides, front and side. The paper guides (pillars) and back stop work together to keep the paper aligned and from slipping out of the feeder.



4. Fit tray and outfeed tray extensions as required. Ensure that the stockpile is even and square.
5. Position side guides close to the side and the end with enough gap to let the paper move freely (0.5 mm gap). Never put the guides under the feed head or they may get trapped when the tray lifts. This could damage the feed head and invalidate the warranty.
6. Set the guides on the exit tray to catch the paper.
7. Adjust front air flow by turning the left knob according to paper weight. i.e. Heavy stock requires more airflow, turn counterclockwise. Lighter stock requires less airflow, turn clockwise. See section *Front Guide Adjustment*.
8. Adjust pile height limiter as needed. Clockwise = higher. Counterclockwise = lower. See section *Air Gate Adjustment*.
9. Adjust front separator (right knob) according to paper caliper. Thicker = down, turn clockwise. Thinner = up, turn counterclockwise. See section *Front Guide Adjustment*.
10. As necessary, adjust crease depth using the 4 screws on crease bar. Clockwise = down. Counterclockwise = up. Adjust max 1/4 turn evenly on all 4 at a time. See section *Crease Depth*.
11. Adjust skew as needed to compensate for paper cut out square. Knob down = paper to the right, knob up = paper to the left.

12. For thin paper you may need to use 1 or 2 magnetic deflectors to stop the paper from lifting.



13. Programming a Crease Job:

- Turn on machine. Screen 1 will appear after the welcome page.

Ready	0/0
[1] 0.0	[2] 0.0

Screen 1

Input CR Data	
[1] 0.0	[2] 0.0

Screen 2

- Press M button once, the screen will change to Screen 2 and line [1] will flash.
- Enter line [1] value, 3 (3.0). Press ENTER, line [2] will flash.
- Enter line [2] value, 6 (6.0). Press ENTER, screen change to Screen 3, line [3] will flash.

Ready	0/0
[1] 3.0	[2] 6.0

Screen 3

[3] 9.0	[4] 0.0
[5] 0.0	[6] 0.0


Screen 4

- Enter line [3] value 9 (9.0). Press Enter, line [4] will flash.
- Press ENTER when line [4] is 0, screen will change to Screen 4.
- Press RUN to feed a sheet. Paper is creased at 3", 6", 9" (crease line distance from the leading edge).
- Press STOP if you want to stop the job.

Operation

Control Panel

The control panel consists of a keypad and screen, as per the following diagram.

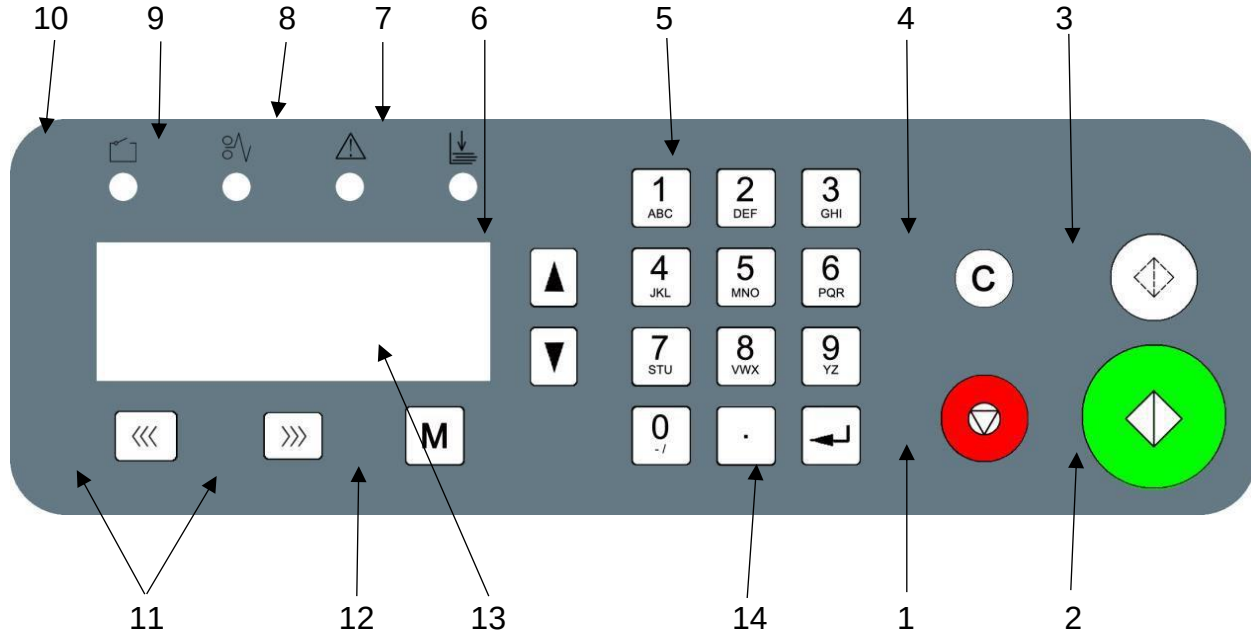

No	Key	Description
1	Stop	Stop the machine.
2	Start	Run the machine.
3	Test	Machine will stop after one sheet.
4	Clear	Clear the data or clear the error display.
5	Numbers	Input data.
6	Scroll	Turn the page.
7	Indicator- No Paper	If the machine does not sense stock when it is running, the button will light and return an error report. <i>"C-4 No Paper or Jam."</i>
8	Indicator- Blade Jam	If the crease motor locks, the button will light up and return an error report <i>"E-1 CR Motor Error."</i>
9	Indicator- Paper Jammed	If the paper is jammed inside the machine, the button will light and return an error report. <i>"C-2 Jam at Infeed"</i> or <i>"C-3 Jam at Outfeed."</i>
10	Indicator- Safety Cover	If the safety cover is not secure, the button will light and return an error report <i>"C-1 CR Cover Open."</i>
11	Unjam Forward/ Reverse Button	When paper jams, press them to move rollers, so that the paper can be easily cleared.
12	Mode	Change the modes.
13	Screen	Display information.
14	Enter	After the data input, press ENTER to confirm.

Function and Operation

Turn on the machine. A welcome page will appear which will last for approximately 2 seconds, then jump to operation mode automatically. All system screens are divided into 5 MODES as per different functions. Scroll through the modes by pressing the mode key M. In each MODE, there may be more than 1 page to display different information. Scroll the page by pressing ↓ or ↑.

MODE 1 Main operation Page 1:

READY: Not running, screen can be edited.

RUNNING: Feed paper and crease.

Note: In "Ready" state, pressing RUN or TEST button will shift screen into "Running" state. In "Running" state, pressing STOP will return to "Ready" state.

Ready 0/0

[1] 10.0 [2] 20.0

Running 12/20

[1] 10.0 [2] 20.0

Displays the first 2 crease data inputs of 6

Note: Crease data can't be input in this mode.

Press **Down** arrow to advance to page 2

Preset QTY: input desired amount of sheets through the keypad. Press Enter to confirm.

Feed QTY: counts up from 0 the number of sheets fed while in "Running" state. Cannot be edited.

Note: If Preset QTY is not 0, the machine will stop automatically when Preset QTY is reached.

If Preset QTY is set to 0, the machine will not stop running until the STOP button is pressed or the feeder runs out of paper.

Page 2-9:

[3] 30.0 [4] 40.0

[5] 50.0 [6] 60.0

.

.


[31] 0.0 [32] 0.0

Displaying the last four crease data input out of a possible six.


Note: Data cannot be input in this mode. Display only.

Press **Down** arrow to advance to pages 3 through 9

Page 10:

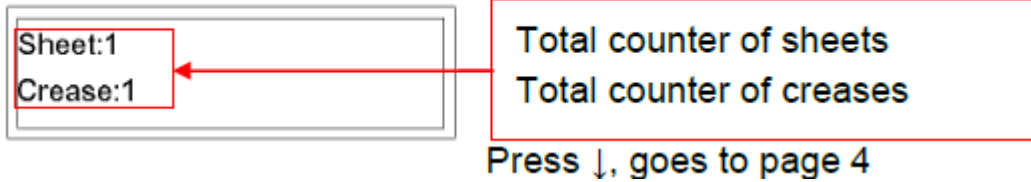


Page11:

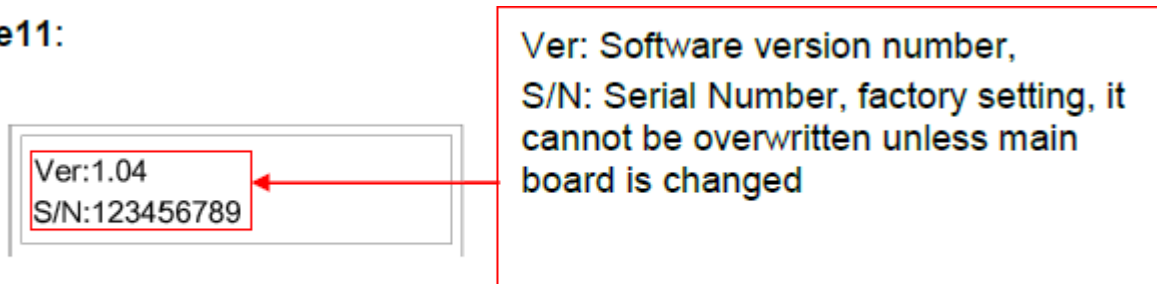

Press **[M]** button/key one time to go MODE 2

MODE 2 Crease data Input

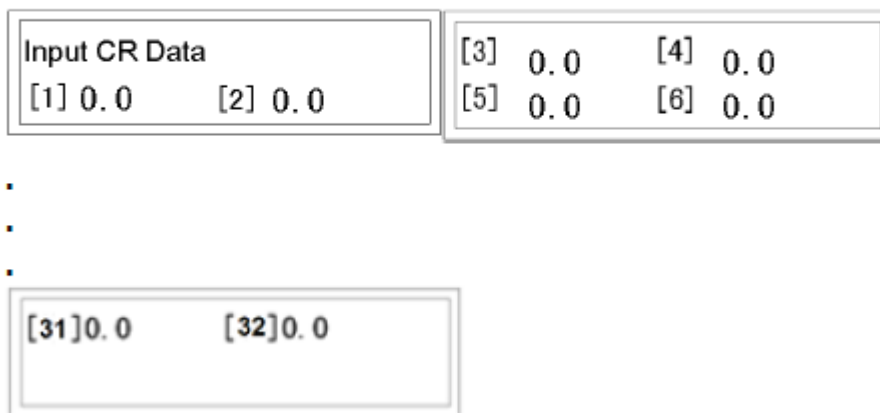

- Initially in Mode 2, Line [1] flashes (which means data can be input). Input the data from 0-900.0 (accurate to one decimal place).
- Press ENTER, [1] will stop flashing, [2] will begin flashing.
- Input data, press ENTER.

[2] stop flashing, screen automatically jump to 2nd page.

[3] flashes.....

- Input all 32 possible creases following these steps. **Note:** Each value must be greater than last value.
- If all 32 lines are needed, after the 32nd crease is entered the screen will automatically jump to MODE 1, page 1. Input finished.
- If less than 32 creases are needed, after the last data is inputted (i.e. the 3rd crease), press Enter, Line [4] will flash, press ENTER again. When line [4] is 0 the screen will jump to main operation mode. Input finished.

Press **[M]** button/key 2 times, and the machine will go to MODE 3.

MODE 3 Cover Hinge


This is a mode specifically for book cover making. The following is an explanation of the setup and function of this mode, in which you can input 2 parameters. SPINE and THK.

SPINE means the first spine line to the leading edge.

THK means the thickness of the book, namely the spine width.

Cover hinge SPINE:200	THK: 10
Input CR Data [1] 0.0 [2] 0.0	[3] 0.0 [4] 0.0 [5] 0.0 [6] 0.0

The following drawing illustrates 2 parameters leading to 4 lines. The other 2 is 8mm outside of 2 spine lines as hinge lines.

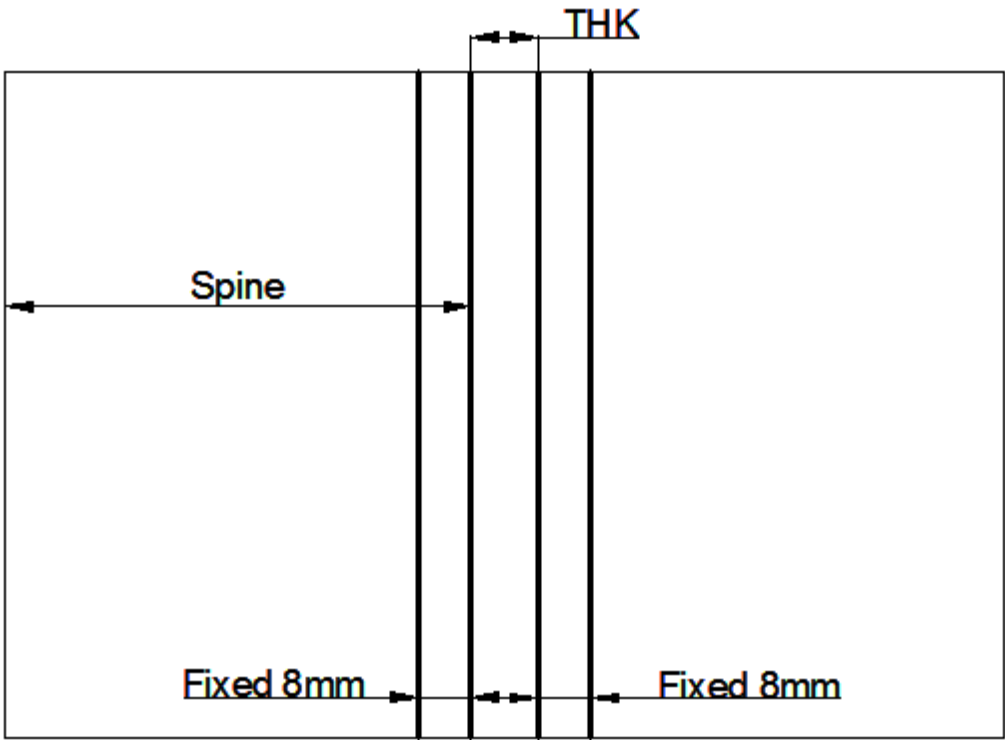

MODE 4 Progressive Crease


Progressive	
1=OFF*	2=ON

If you want to shut down the function, press 1, then Enter. Screen will jump to the main operation mode.


Ready	0/0
[1]10.0	[2]20.0

If you want to activate the function, press 2, then Enter. Screen will jump to the following to input settings for the progressive crease:


1= Inc*	2= Dec	Sheet : 2	Initial :1.0 Depth:1.0
3= I&D	4= V		

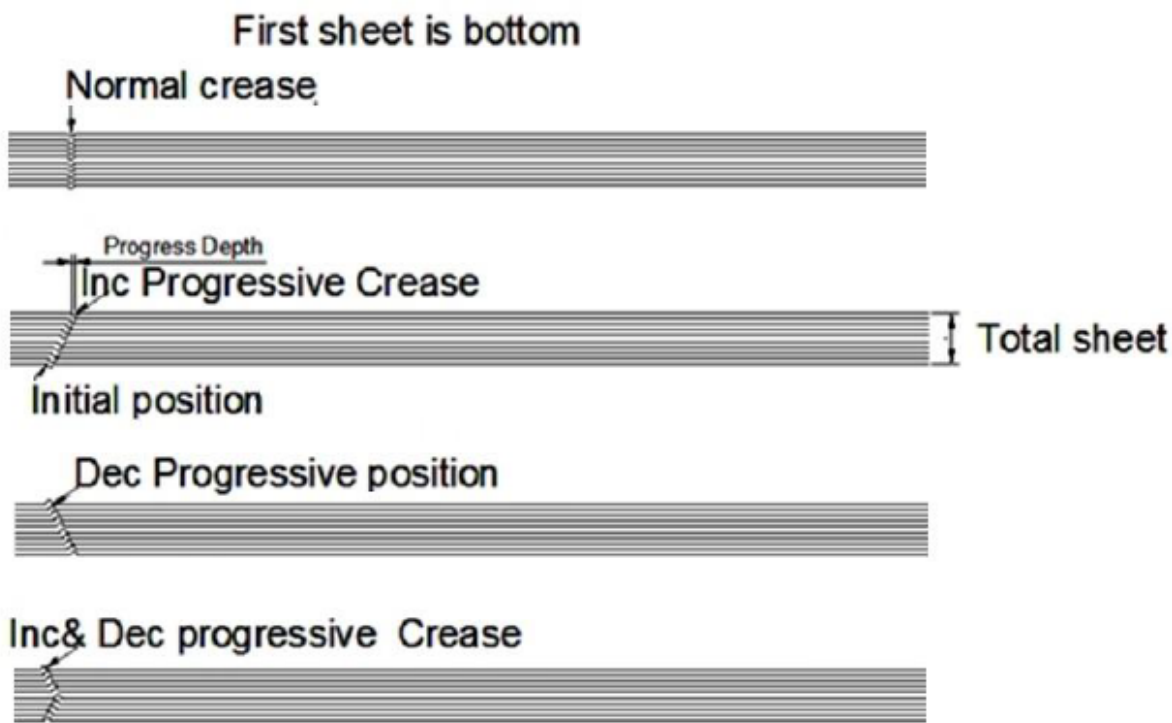


If all the sheets are creased on same position, the bounded book cannot be turned over to lay flat like this drawing.

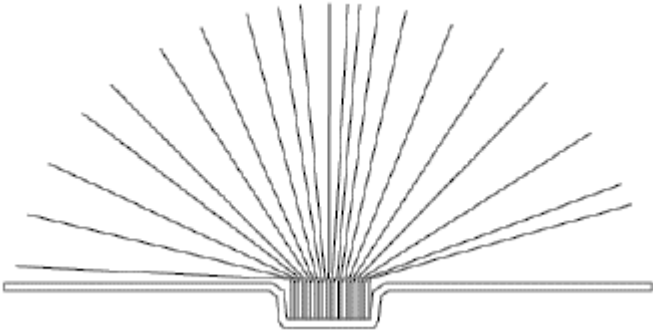

With 3 crease modes, even thick paper can be turned over very easily and lay flat after binding.




The illustration for V mode is as follows:

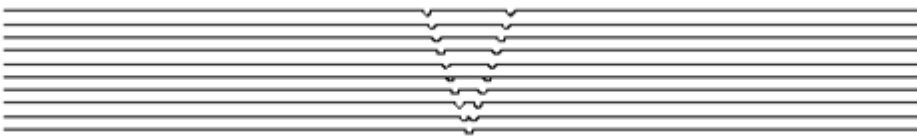

Define the first position and crease gap and the qty in one batch. The first page line as reference and following sheets will be 2 creases that goes further successively to the reference line.

In this way the book can be folded with a square back after saddle stitched. of the above 4 parameters is illustrated in the drawings above.


Staple

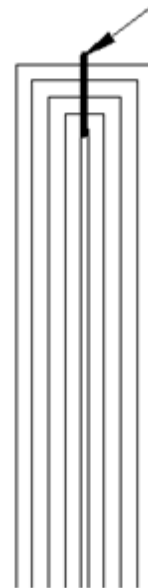

will be one

The effect


With Progressive Crease function is activated and all input is completed, the screen will jump to the main operation mode. But the screen is different, and it has only 1 page as follows:

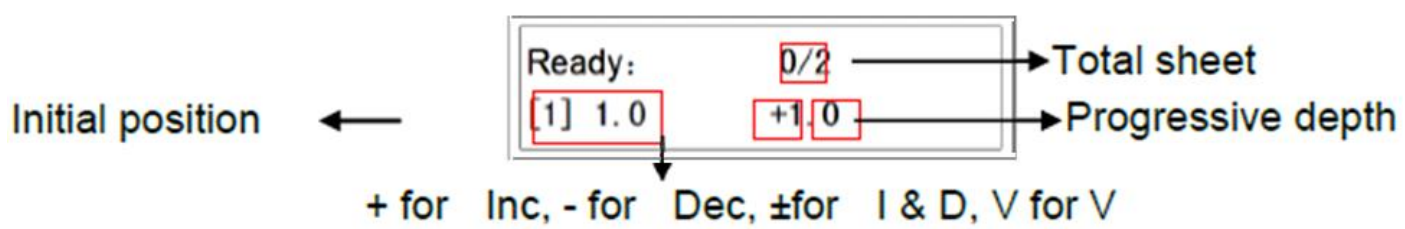

Press M, go to MODE 5. Press M again, go to MODE 6.

MODE 5 Feed Mode

The user can choose Auto feeding mode or Manual feeding mode. Press 1 to choose Auto or 2 to choose Manual. The chosen mode has a '*' symbol beside it. Press Enter to select mode.

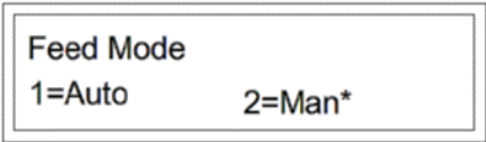


In **Auto Mode**, put a thick stack of stock on the loading table. Press the START button. The loading table will rise. After the top paper touches the stack height sensor, the feeding system will begin.

In **Manual Mode** no stock is placed on the loading table. After the START button is pressed the table will rise and will stop after the stack height sensor is triggered. Stock can now be fed sheet by sheet into the machine under the friction of the belt.

Press M button 3 times to go to MODE 4. Press 4 times and to go to Mode 5.

MODE 6 to Recall Job and MODE 6 to Save Job

Frequently used crease data can be saved and recalled, so that the user does not need to have to input data each time. The system memory holds up to 30 jobs.

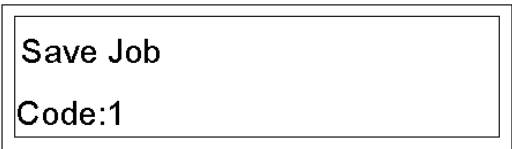

1. How to save a job

- See MODE 2. Let us input a job, i.e. 10, 20, 30, 0, 0, 0.

Ready	0/0	[3] 30. 0	[4] 0.0
[1] 10. 0	[2] 20. 0	[5] 0.0	[6] 0.0

- Press M button 2 times to go to Save Job Mode.
- Input a number between 1-30, i.e. 1. Screen changes into:

Save Job
Code:1

- Press Enter, save successful.

Save Job
Success

2. How to recall a job

- See above steps Save a Job.
- Press M until Recall Job mode is reached (4 lines), until the following screen appears:

Recall Job
Code:1

- Input a number between 1-30 (1 according to the above example).

Save Job
Code:1

- Press Enter. Recall successful.

Save Job
Success

- Screen jumps to main operation MODE. The data becomes 10, 20, 30 as determined by previous data input.

Ready	0/0	[3] 30. 0	[4] 40. 0
[1] 10. 0	[2] 20. 0	[5] 50. 0	[6] 60. 0

Note: It is advisable for users to record the job numbers in memory to avoid overwriting previously saved jobs.

Press M button 5 times and the machine will advance to MODE 7.

MODE 7 Speed

Speed	Speed
1=Low	1=Low
2=High*	2=High*

1. For LOW speed, press 1. The "*" will indicate "Low." Press Enter, the screen will jump to main operation MODE and low speed is chosen.
2. For HIGH speed, press 2. The "*" will indicate "High." Press Enter, the screen will jump to main operation MODE, high speed is chosen.

Press M button 6 times and the machine will advance to MODE 8.

MODE 8 Recalibrate

If the crease line gap is shrinks or stretches, the crease tolerance will be accommodated as the crease changes. For quick calibration, we operate on Recalibrate mode.

1. Measure the real length of the paper stock.
2. Input the real length of the paper as seen below (420mm)

Recalibrate
Length: 420

3. Press Enter, machine runs.

Testing
Length: 420


4. Pass the paper through the machine and the recalibrate is done automatically. **Note:** If the input data is more than 3% greater than the real length, the machine will fail to recognize a length difference and recalibrate.

Press M button in Recalibrate mode. The machine will advance to MODE 7


Hardware Setting

Crease Depth

Crease depth is important to overall crease quality. Depth should be adjusted according to the paper thickness. Low depth will perform an unclear crease, but a heavy depth may cause cracking, or cause the system to take it as a double feed. An adjustment is also needed if the crease depths are not balanced on both sides.

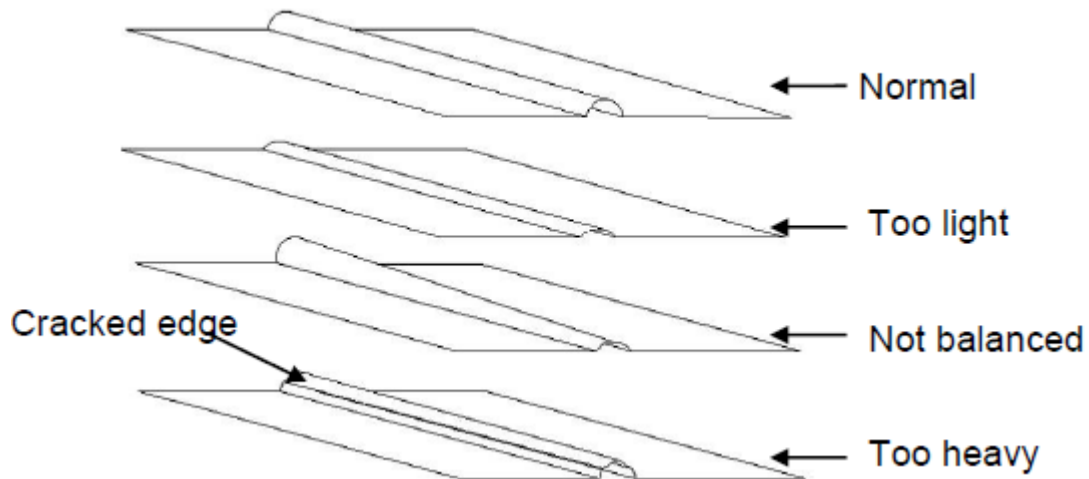

To adjust the depth:

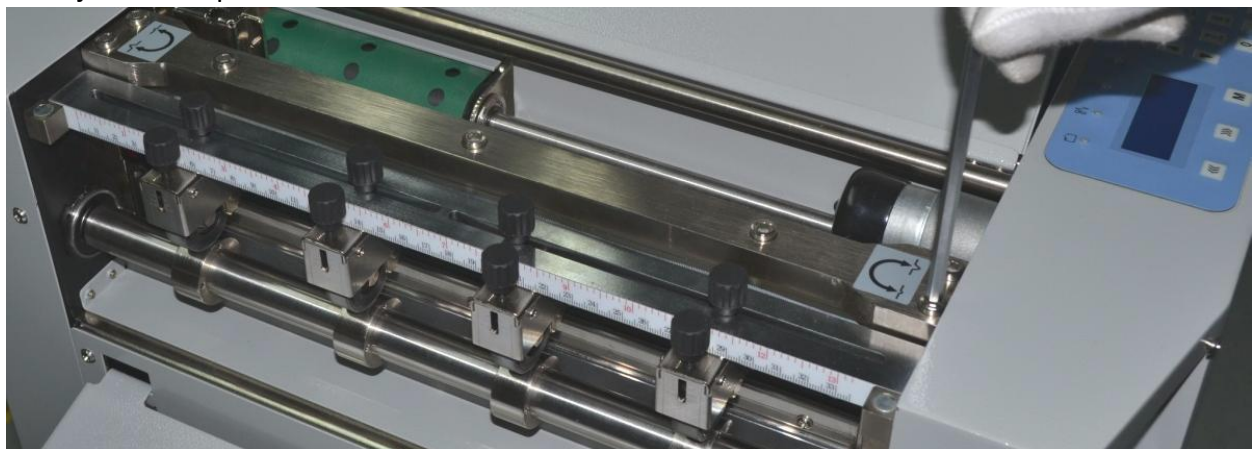


1. Open the safety cover.
2. Find 4 screws on both sides, turn the Allen screws as shown above to make the crease line deeper or lighter.
3. DO NOT EVER adjust 3rd screw in the middle.

Front Guide Adjustment

Turn the knob clockwise to decrease the gap if double feeding occurs or turn the knob counterclockwise to increase the gap if paper is unable to pass through.




Front Guide Knob

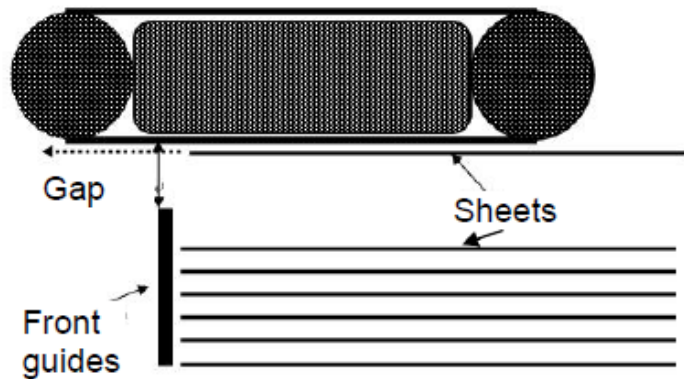

Air Gate Adjustment

Turn the knob clockwise to make the air vents smaller, and counterclockwise to increase the air vent sizes. If stock is thin, the air vent size should be smaller, air vent sizes should be larger when paper is thicker. The air adjustment is an important factor in good feeding.

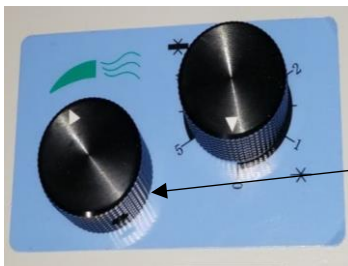

Blower Adjust Knob


Air Flow Gates



Pile Height Sensor

In Auto Feed Mode, turn the knob clockwise, the pile height will rise higher. Turning the knob counterclockwise will keep the paper pile lower.


In Manual Feed Mode, the knob should be turned clockwise to its maximum, or there will be error report *E-2 (Elevator Motor Error)*

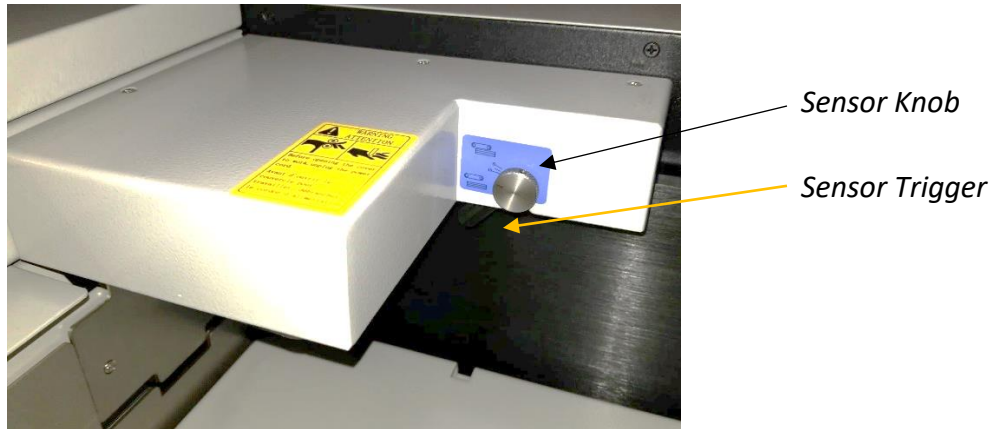

Skew Adjustment

If the crease / perforation is skewed, the angle of fixed side guide needs to be adjusted to change the crease angle.

Turning the Skew adjustment wheel will skew your stock, to account for any paper skew error. If the wheel is turned downward, the fixed side plate will turn leftward, and vice versa. Normally, if the paper is perfectly square, no adjustment needs to be made.

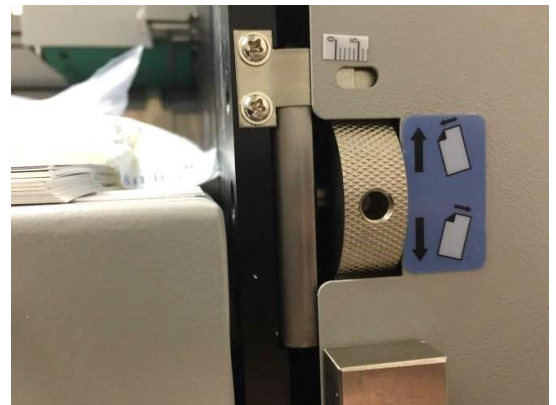

IMPORTANT! When using skew adjustment, you must move paper back stop and magnetic side guides away from the edge of the paper stack. This will allow sheets to move as the skew wheel is turned. Return paper back stop and magnetic side guides to the edge of the paper stack. If skew adjustment is not set at center, lead edge of paper pile should not be flush with front edge of feeder.

Optional Parts

Slide-in Tools

There are 2 kinds of cross bars: Crease tool and Perforate tool.

Crease tools: 1.0mm version is standard. Optional versions are: 0.4mm, 0.6mm, 1.2mm, 1.4mm.


Perforate tools: 12 TPI, 24 TPI and 52 TPI versions all are optional.



To make the sliding easy, install the screw on the bar. To insert the tool, please follow the directions shown below:



To slide out the tool move the safety release latch. Slide the tool out using the screw as per the image below:

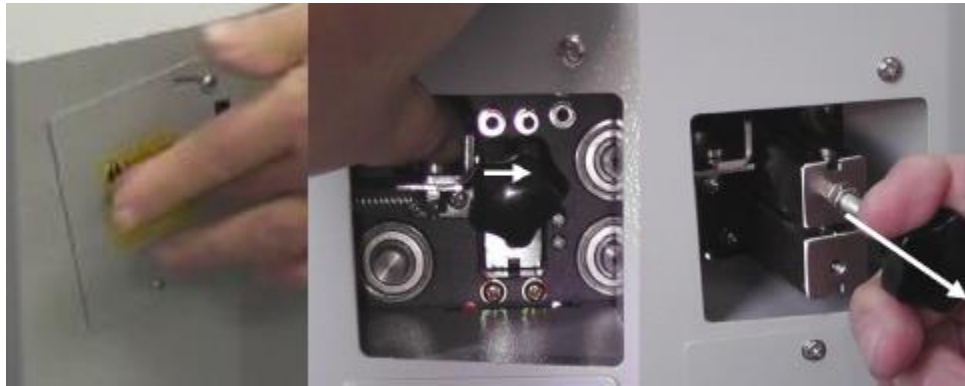

Linear Tools

There are 4 kinds of optional linear tools: scorer, perforator, kiss cutter and slitter. Each tool consists of blade and anvil.



Slitter

Perforator

Kiss cutter


Scorer

Kiss cutter

Perforator

Scorer

Slitter

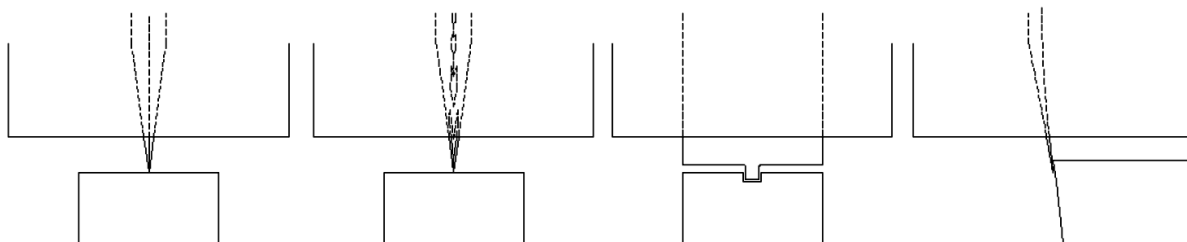

Steel

Black Plastic

Steel

Steel

Install the blades on the tool mount shaft as shown below:




Screw 1 fixes the tool onto the machine.

Screw 2 adjusts the tool depth of the tool, i.e. crease depth, perforate depth, kiss cutter depth, etc. This screw is important to the kiss cutter adjustment.

Mount the anvil on the outfeed shaft after it is uninstalled from the machine.

Removing Roller:

1. Remove the clip at the operator side of the roller.

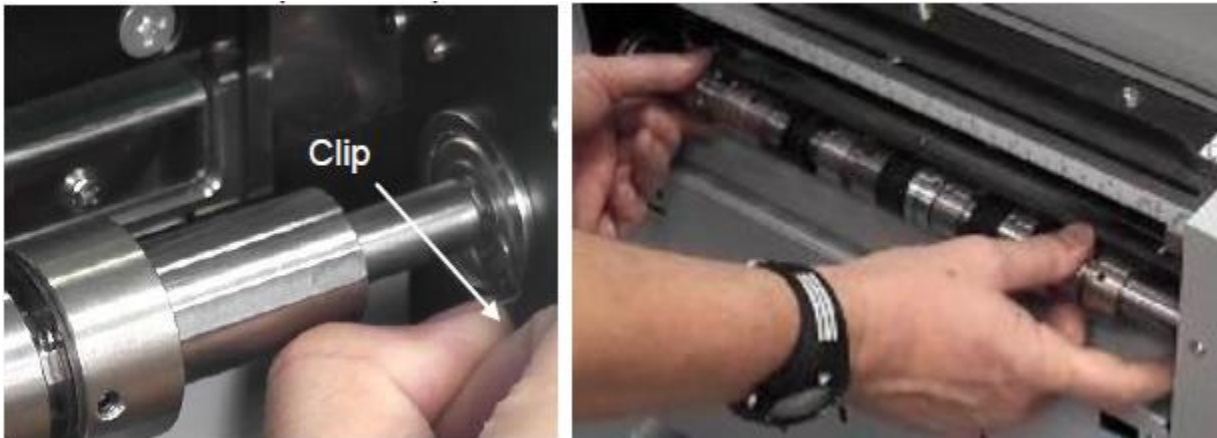

2. Grab the shaft, slide right to loosen it, and remove it from the machine.
3. Loosen the set screw of anvils and install the new anvils in order. Mind the flat part of the shaft, all set screws should touch this flat surface.



4. After all anvils are mounted again, re-install the shaft, and secure the clip.

Note: There are 2 threaded holes in each tool, but only 1 is required. The bottom anvils are all different among different tools.

The kiss cutter and slitters look similar but **SHOULD NOT** be interchanged, or the blade will be damaged. The kiss cutter is chamfered on both sides while the slitter has only one side chamfered.

Maintenance

Proper maintenance will prolong the life and functionality of the PT 335B Multi. These maintenance procedures are recommended with the assumption that the customer is completing daily and weekly cleaning. To ensure your machine is running at its best, please regularly perform the following:

- Using the GW Roller Cleaner, clean ink/toner dirt and debris from rollers. This should be done regularly to prevent build-up and protect the integrity of the rollers.
- Follow the rejuvenator cleaning with a wash of water and Simple Green: 1-part Simple Green to 30 parts water. Too much Simple Green will leave a soap residue.
- Lubricate the roller bushings with a 3 in 1 oil. This lubrication will ensure the paper is feeding properly and prevent the rollers from slowing or sticking.
- Clear paper dust from all sensors with compressed air.
- Clean all surfaces with a water-soluble cleaner.

Troubleshooting

Error Codes

Code	Description	Remark
E-1	CR Motor Error	Home position sensor finds nothing after starting motor.
E-2	Elevator Error	Limit switch closed or sensor finds nothing when starting motor after a period, or pulse from pulse sensor stops.
E-3	Elevator Error	Both table up sensor and lower sensor are triggered.
C-1	CR Cover Open	Safety cover is open.
C-2	Jam at Infeed	Infeed sensor is activated while machine is not running.
C-3	Jam at Outfeed	Outfeed sensor is activated while machine is not running.
C-4	No Paper or Paper Jam	Infeed sensor is not activated after machine starts for 12 seconds.
C-5	Please Set Paper	Press start but no paper.
C-6	Please Insert Tools	Press start but tools not installed.
C-7	Tray Level Err	