



PT 335SCC Multi Operator Manual

755 Griffith Court, Burlington, Ontario, Canada L7L 5R9

Tel: +(905) 633-7663 Fax: +(905) 637-4419

www.graphicwhizard.com

Table of Contents

Important Information	3
General Overview	3
Specifications	4
Environmental	4
Safety Precautions	5
Unpacking and Assembly	6
Unpacking	6
Touchscreen Assembly	9
Parts Installation	10
Set Up	12
Feeder Adjustments.....	12
Paper Size Adjustment.....	12
Paper Skew Adjustment.....	12
Deflectors.....	13
Stack Height Knob & Sensor	13
Cutting Principles and Limitations	14
Slitters	14
Touchscreen Display	16
Initial Power On	16
Home Screen.....	17
Preview Screen	18
Maintenance Screen	19
Saving a Job.....	20
Cutmark Registration	20
Programming the PT 335SCC	22
Programming a New Job Using Job Creator	22
Shrink/Stretch/Shift Adjustment	24
Programming a New Job Using Manual Input	25
Job Layout	28
SCC Parameters.....	28
Registration Mark Specifications and Location	28
Register Mark and Barcode Reader Position	29

Sample Jobs	31
Sample Layouts with Bleeds: 24 Up Business Cards	31
Sample Layouts with Bleeds: 6 Up Tickets.....	32
Sample Layouts with Bleeds: 4 Up Greeting Cards.....	33
Sample Layouts without Bleeds: 15 Up Tickets	34
Accessories	35
Cross Perf Installation and Adjustment	35
Partial Cross Perf.....	37
Strike Perf Installation	38
Strike Perf Adjustment.....	41
Rotary Tool Installation.....	42
Troubleshooting	43
Error Codes	43
Maintenance	46
Consumables List	46

Important Information

This manual is designed to help you operate the PT 335SCC Multi (may be referred to as the "PT SCC" or "SCC" for convenience from here on). Please read, understand, and keep this manual in a convenient place for easy access. **DO NOT** operate the PT 335SCC Multi until you have read and understand the instructions in this manual. If you have any questions, contact your local dealer before operating this machine.

Graphic Whizard shall not be held liable for consequential damages or incidental consequential damages resulting from: improper or inadequate maintenance by the customer. Unauthorized modifications or misuse. Operation outside of the environment specified for the machine.

Graphic Whizard is committed to continually improving the design and performance of the product line. Please note: the design and specifications of this machine are subject to change without notice and without legal obligation.

All rights are reserved. No part of this manual may be photocopied, reproduced, or translated to another language without the prior written consent of Graphic Whizard.

General Overview

The PT 335SCC Multi is a complete full-bleed finishing system to fit the digital marketplace. Equipped with interchangeable creasing/perfing dies the PT 335SCC Multi can quickly switch over from perfing to creasing while preventing digital toner cracking. Strike perf capabilities means that the PT 335SCC Multi can do partial perfs in both directions for "T" or "box" perfs.

The 335SCC Multi makes short work of business cards, greeting cards, invitations, brochures, pamphlets, catalogs, posters, book/CD covers, photographs, tent cards, and more by simply loading the high capacity 4" pile feeder. Processing sheets up to 350 GSM at speeds of 25 sheets per minute (8.8" x 11", 2 cuts, 1 crease). The PT 335SCC Multi is an ideal finishing solution to maximize efficiency while minimizing operator intervention.

Specifications

Electrical	110-130V, 50/60Hz, 15A
Operating Speed	25 sheets per minute (based on 8.5"x 11" run landscape, 2 cuts, 1 crease)
Paper Type	Non-coated, coated, laminated
Maximum Stock Size	13" x 40" (36.8 cm x 101.6 cm)
Minimum Stock Size	8.27" x 8.27" (21 cm x 21 cm)
Stock Weight	100# Text - 16 pt (146-350 GSM)
Slit/Cut/Crease	Up to 6 slits, 32 cuts, 32 creases or perfs per sheet
Program Memory Capacity	64
Margin Slit	Side Trim 0.125" - 1.5"
Gutter Slit	Width 0.2" - 0.59" *larger gutters can be run, but will output on the exit tray
Linear Multi- Tool Options	Linear Strike Perf Option, up to 4 12 or 24 TPI Perf Tools Linear Score or Kiss-Cut Tools
Interchangeable Crease/Perf Dies	Crease die options- 0.4mm, 0.6mm, 1mm, 1.2mm, 1.4mm Perf die options- 12 TPI or 24 TPI 8 depth settings controlled through the touch screen
Image Shift Compensation	Both X and Y axis
Image Shrink/Stretch Compensation	Both X and Y axis
Machine Dimensions	60" L x 24" W x 32" H
Machine Weight	560 lbs.

Please note that numerous variables affect the speed at which a machine can run. Setting the machine to run at a slower speed may be necessary to optimize results.

It is the responsibility of the customer to supply power to the machine in accordance with all applicable electrical and safety codes and standards.

While every effort was made at time of publication to ensure accuracy, Graphic Whizard Inc. will not be liable for omissions or errors. Due to continued improvements in this product line, specifications and information are subject to change without notice. Actual results are dependent upon application. Paper stock, print engine used, and environmental conditions will affect results.

Environmental

Optimal recommended operating conditions:

Temperature: 10°C to 35°C / 50° to 95°
Humidity: 30% to 70%
Altitude: Below elevation 1,000 meters / 3,280 feet



Safety Precautions

The term **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in injury. The term **CAUTION** indicates a potential hazardous situation which could result in damage to the machine or personal injury. It also may indicate procedures to follow to avoid unsafe practices. Please read and understand all safety instructions which include the terms **WARNING** or **CAUTION**. Understand that if the safety instructions are ignored, personal injury or damage to the machine may occur.

DO NOT operate the machine when any covers are removed, or safety switches are disabled. The machine should be serviced only by qualified personnel. **OBEY** all safety instructions and warning labels. Graphic Whizard cannot anticipate every possible situation that might involve a potential hazard. The instructions in this manual and the warning labels on this machine are not all inclusive.

Ensure all parts are in good working order prior to starting the machine each day. Replace worn parts immediately and do not operate the machine until you have done so. **ALL** Electrical & Mechanical Service/Repair is to be performed by qualified and approved personnel only. Make sure that the machine is level and is well ventilated.

NEVER insert a hand or fingers into the machine while it is running. **DO NOT** wear loose fitting clothing when working with the machine. Tie back long hair. Ensure that the power cord has been unplugged prior to performing service on the machine. Ensure that all safety covers, and interlock switches are in place and working properly.



Unpacking and Assembly

Video demo of how to uncrate the PT 335SCC

<https://youtu.be/0FGWNKKewtA>


Unpacking

The PT 335SCC Multi ships in one crate with little additional assembly needed. Unbox the machine by removing the screws securing the top of the crate to the pallet. Then, lift the top of the crate straight up and off carefully. Do not attempt to lift the crate alone.



To unpack the SCC, complete the following:

1. Uncrate the machine and tally all the parts according to the packing slip. Make sure the machine has come with all the correct parts. Contact your dealer if otherwise.
2. Remove the screws attaching the 335 SCC Multi to the shipping pallet. Do this by removing; either the three top screws on both sides and sliding the machine out, or by removing all screws and taking the brackets off. Keeping these materials once removed will ensure the machine can be shipped safely in the future. The image shown is the front view of the machine once uncrated (an identical bracket is also on the back side of the machine).

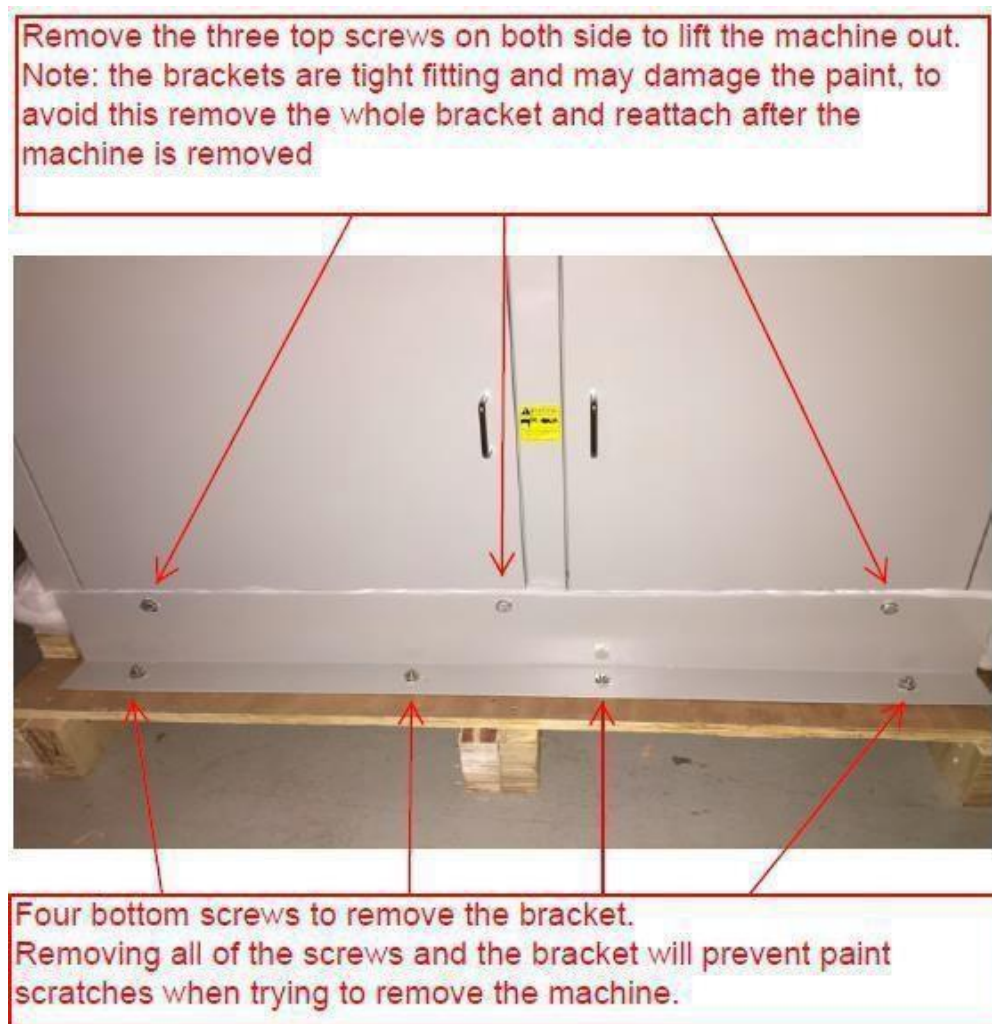

During shipping the PT 335SCC Multi is equipped with two brackets to secure the pile feed tray.

1. Remove the first by removing the two screws shown below, removing the metal support bar, and then replacing the screws to hold the cover in place.



2. Remove the second bracket by removing and replacing two hex key screws and the two Philips screws securing bracket.



Touchscreen Assembly

Video of how to assemble the touchscreen

<https://youtu.be/t-GjzzUboPE>

To prevent damage during shipping, the touchscreen is removed and placed in the bin below the machine along with other parts. To install the touchscreen on the PT 335SCC, complete the following:




Remove the four small screws securing the back cover and remove the back cover.

Remove the two screws in the base of the bracket. These screws are used to secure the touchscreen assembly to the SCC back cover.



Hold the touchscreen over the SCC cover and connect the ribbon cable by feeding it through the access hole. Ensure the cable is secure in the connector.

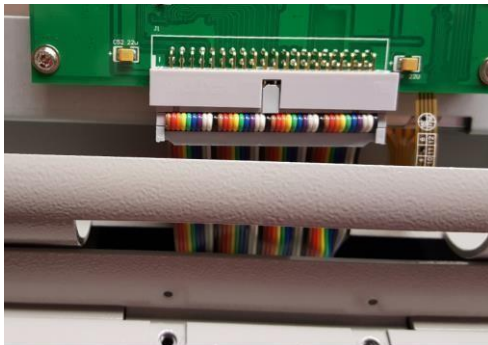

Secure the touchscreen to the SCC by slipping the foot of the bracket under the back cover then moving it forward until the screw holes are aligned with the holes in the cover. Install the screws.



Replace the back cover.

Align the touch screen within the bracket for optimum viewing angle and secure with the two screws. The screen is now installed.

Parts Installation

The PT 335SSC comes with the following parts:

- Feed table extension
- Exit tray
- Exit tray extension
- Business card catcher
- Business card deflectors (3)
- Back stops
- Paper feed guides and back stop
- Paper deflectors (5)



The feed table extension attaches to the three hex screws on the edge of the feed table. This is used for longer sheets.


The exit tray slips into the bracket holders with the arm secured in one of the available sets of slots.



The exit tray extension attaches to the three hex screws on the edge of the exit tray.


The business card catcher fits at the rear of the SCC, just under the exit rollers. There are two hex screws for fixed alignment.



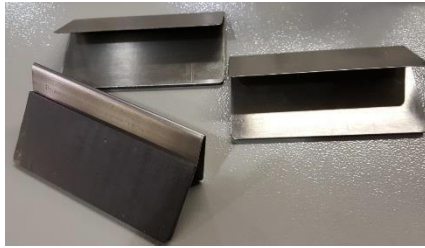

The business card deflectors are used to ensure the card fall into the catcher.


The variety of backstops allow the user to match the placement to the size of the finished piece.

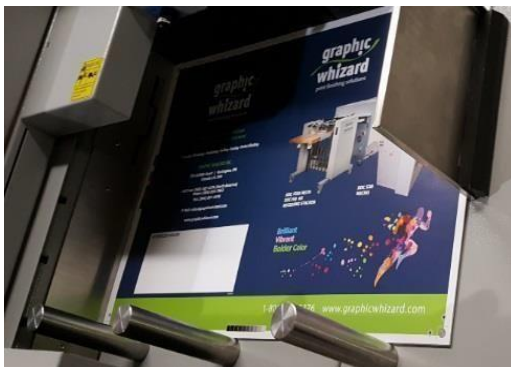

The paper feed guides (pillars) and feed table back stop work together to keep the paper aligned and from slipping out of the feeder.

The paper deflectors help keep the paper in line with the feed entrance and are used when the stock is light or if the feeder is struggling to feed.


Note: it is not necessary to use all deflectors all the time. Add or remove deflectors to suit the job.

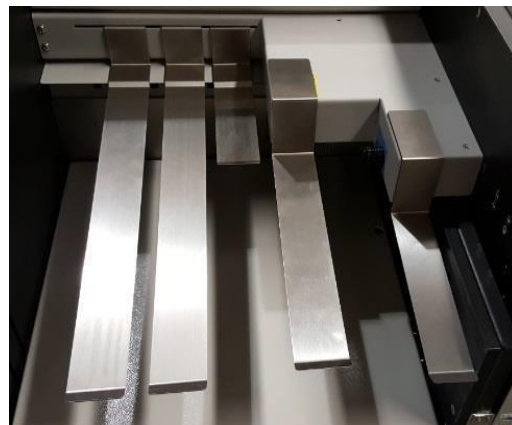

Set Up

Feeder Adjustments


There are two main adjustments for the feed unit:

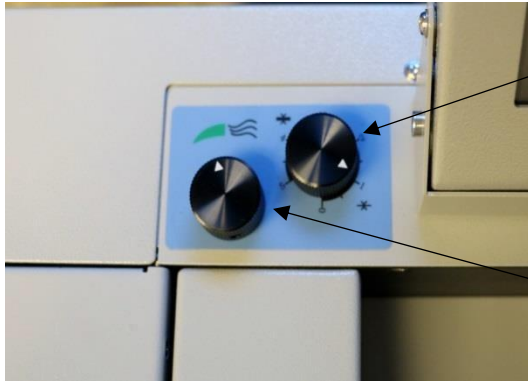

Front Guide (Right Knob) – the adjustable paper separators are located under the feed unit. The adjustment control is located on the top of the SSC to the left of the display. Rotate the knob left or right to raise or lower the fingers.

Air adjustment (Left Knob) – The air acts as a paper separator. The air adjust knob is located on the top of the SSC unit next to the paper separator adjust knob. Turn the knob left or right to increase or decrease the amount of air blowing on the paper.

Paper Size Adjustment

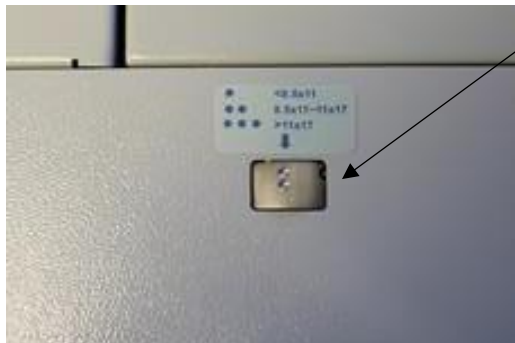

For wider sheets, the PT SCC is equipped with a manual tension adjustment. This adjustment increases the roller pressure.

Change the settings to match the width of paper being used. There are three settings:

1. **< 8.5x11** – for sheets smaller than 8.5x11 "
2. **8.5x11 – 11x17** – for sheets between the two values
3. **>11x17** – for sheets larger than 11x17"


Note: the widest sheet the PT 335SCC can feed is 13"

Paper Skew Adjustment



The paper skew adjustment allows the user to ensure the paper is straight as it enters the rollers. Adjust the skew by turning the knob up or down.

Deflectors

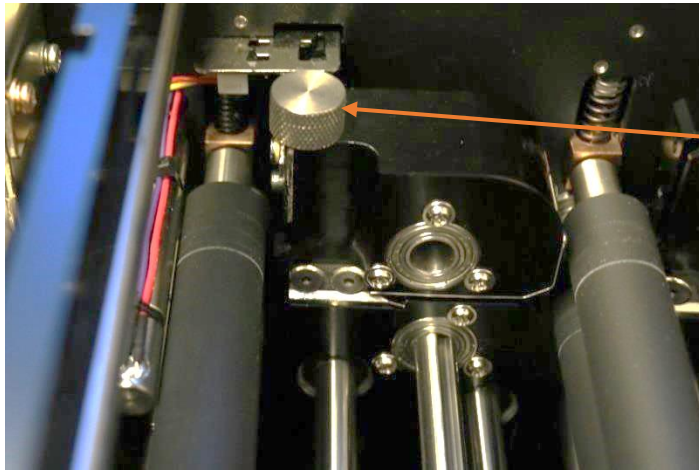

The Deflectors send the waste into the waste bin during the cutting process. For jobs that do not have slit gutter waste, the software will instruct the user to pull up the deflectors.

For jobs with slit gutters (e.g.: 24up business cards) the software will prompt the user to push down the deflectors. Press OK to advance from the message screen.

Stack Height Knob & Sensor



Use the Stack Height Knob & Sensor to make small adjustments to raise or lower the feed table to increase the gap between the feeding and second sheet. Turn the knob clockwise and the table will raise higher, counter- clockwise to lower the table.


Cutting Principles and Limitations

Slitters

The PT 335SCC uses six (6) individual slitters.

Slitter #1 and Slitter #6 have fixed deflectors to push the side trim down into the waste bin. Therefore, it is recommended to always use Slitter #1 and Slitter #6 to do the side trims. When running paper without slitting or making side trim with Slitter #1 and Slitter #6, the unused slitters will come out to guide the paper.

Slitter #3 and Slitter #4 have an adjustable deflector that allows you to choose to either push the gutter trim down to the waste bin or allow a job without a gutter to pass through. With the deflectors down, the waste trim will be pushed into the waste bin. Before you run a job without gutters or a job that needs to have adjustment made on the adjustable deflector, a message will appear on the screen asking you to either raise the deflectors or push them down. Follow the instructions that appear on the screen and press OK.

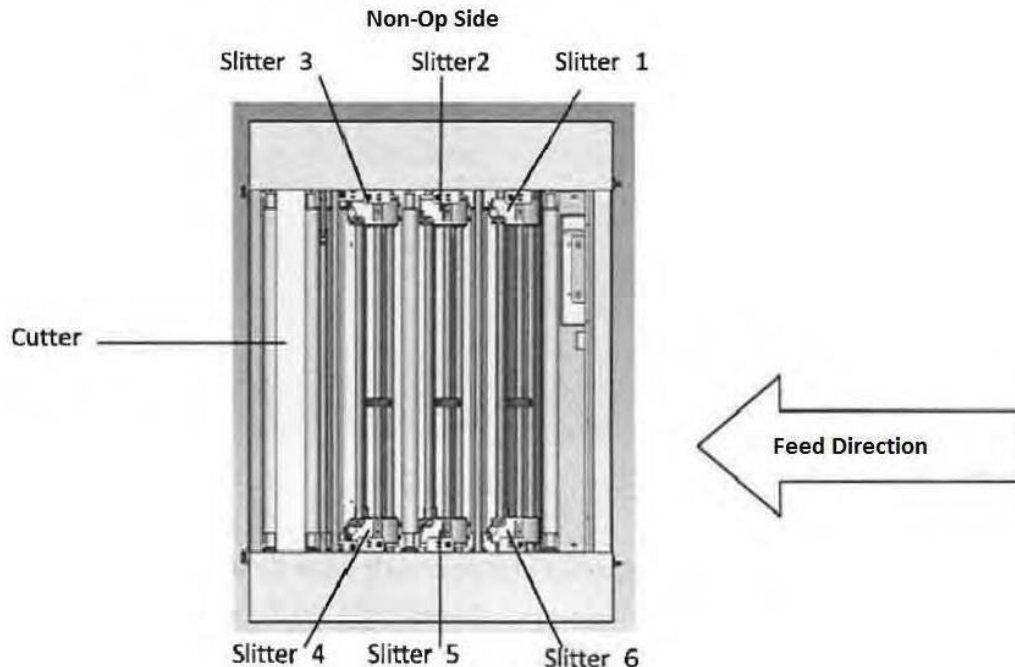

It is important to take into consideration the parameters and limitations of the PT 335SCC when laying out a job. To ensure best cut accuracy a gutter is recommended between cuts.

- The minimum distance between slitters on the operator side versus the non-operator side is 1.968". This is also the minimum output size.
- The minimum output size for the cut is 1.772".
- The limitation on side trim is a maximum of 1.5" on each side and a minimum of 0.126".
- The gutter between strips needs to be set between 0.197" and 0.59"
- For cutting on the PT 335SCC, the machine can cut multiple cuts on the leading edge. Each cut must be less than 0.59" to allow the cut piece to fall into the waste bin.
- For the cut between two cards, a gutter between 0.126" and 0.59" must be used unless the job calls for no gutter.
- The final cut of the sheet that goes to the waste bin must be larger than 0.197" and smaller than 0.59".
- If the tail end of the sheet is to be passed through the machine and into the receiving tray, the tail end must be larger than 1.97".
- The PT 335SCC features a slit-cut mark reader that is located on the non-operator side of the machine. The user will need to input the location of the cut mark on the sheet size input screen. Measure from the lead edge of the paper to the lead (top) edge of the cut mark for the cut value. Measure from the non-op side edge to the side edge of the cut mark for the slit value.
- The mark reader will read the actual distance and compare it to the values input by the user. If a discrepancy is found the machine will compensate in both directions to ensure job cutting accuracy.
- The mark needs to be located between 3 – 20mm (0.118" - 0.787") from the non-operator side and between 0.118" and 0.787" from the lead edge of sheet. The recommended distance is 8mm from each edge.
- The minimum width of the cut mark is 0.0787" and the minimum length is 0.118".


Touchscreen Display

Initial Power On

With the PT 335SCC connected to a properly grounded outlet, power on the unit by releasing the Emergency Stop and flipping the power switch to the on position. The PT 335SCC will complete a power-on self-test. If there are any errors, an error message will be displayed. The error must be addressed before the PT 335SCC will advance to the home screen. Once the slitter heads have returned to the home position, press OK to advance to the home screen.


An interface screen will be displayed with the following information:

- Software version
- Serial number
- Sheet count
- Cut count
- Crease count

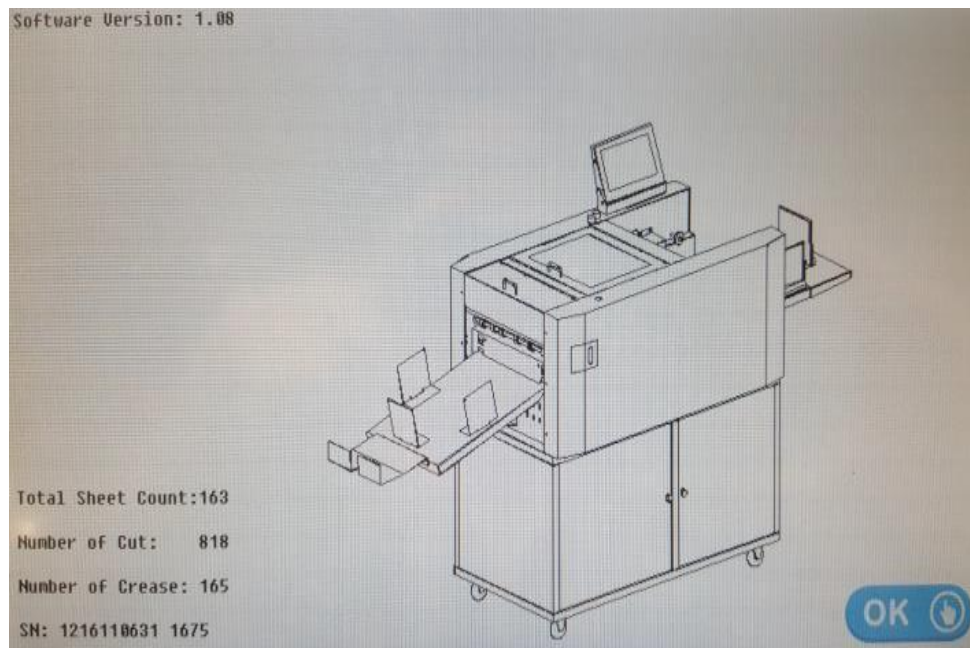


Home Screen


Below is a description of the 9 buttons found on the home screen. Where applicable, expanded information is listed further in this document.

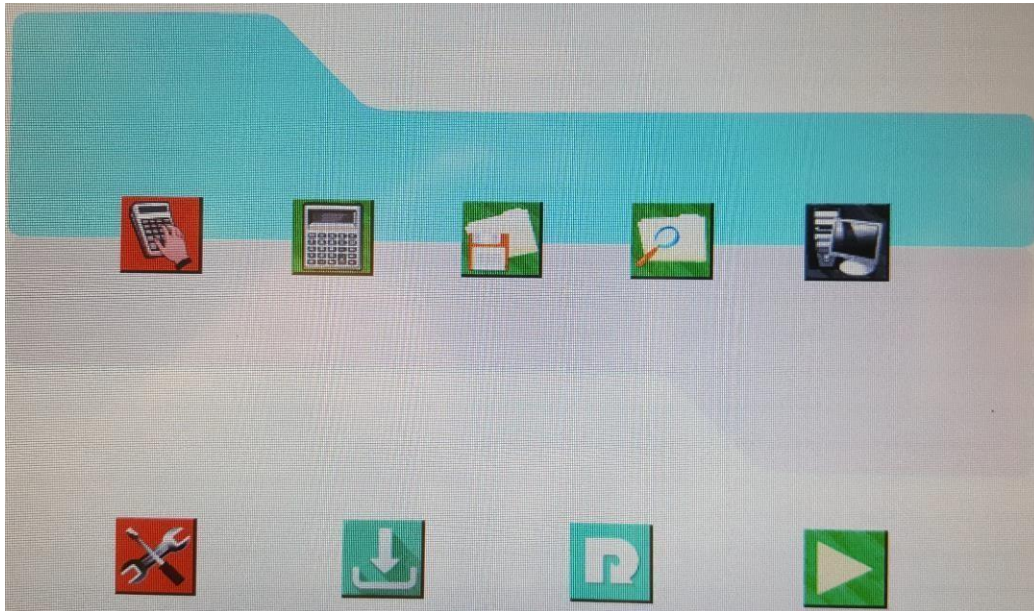

	Manual Input	Allows user to manual create a job.
	Job Creator Input	Launches the step-by-step job creation.
	Saved Jobs	Save jobs are stored and accessed here.
	Default Templates	Displays the default templates stored in PT 335SCC.
	Not Currently in Use	
	Maintenance	Access to service screens. Allows user to change limited settings.
	Table Down	Sends the feed table to the lowest position.
	Reset	Returns the slitters to the home position, cycles the cut blade and crease motor.
	Run	Displays the last job run.


Preview Screen

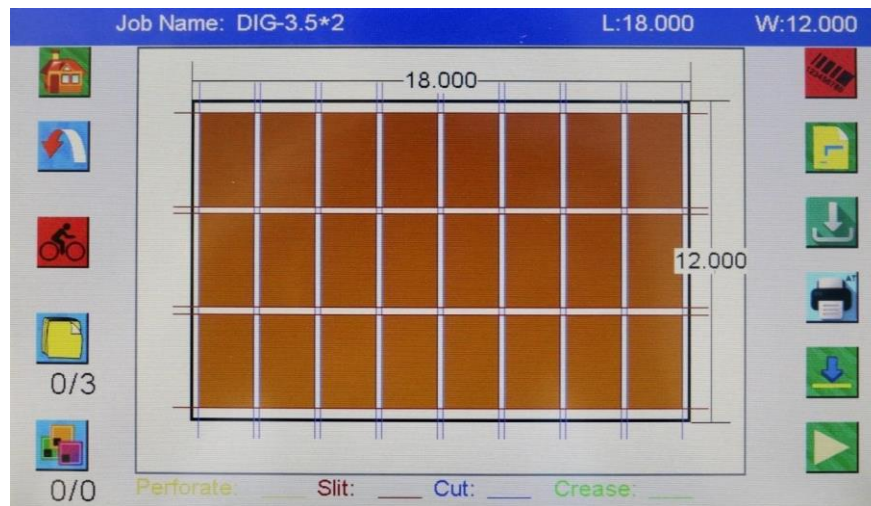

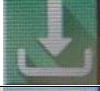
	Home	Returns to home screen.
	Back	Goes back to the previous screen.
	Speed	Sets the speed of the SCC.
	Job Count	Sets the number of sheets per job.
	Batch Count	Sets the number of batches.
	Barcode Reader	Turns on the barcode reader.
	Cutmark Registration	Turns on the cutmark registration.
	Table Down	Lowers the feed table.
	Perf Alignment	Sends a sheet partway through the SCC to allow for alignment of the strike perf(s).
	Test	Sends one sheet through the SCC.
	Run	Runs the current job (will use all paper unless "job count" is set).

Maintenance Screen

After pressing the maintenance button  you will be directed to this screen. The user can choose from “User Mode” or “Service Mode”.

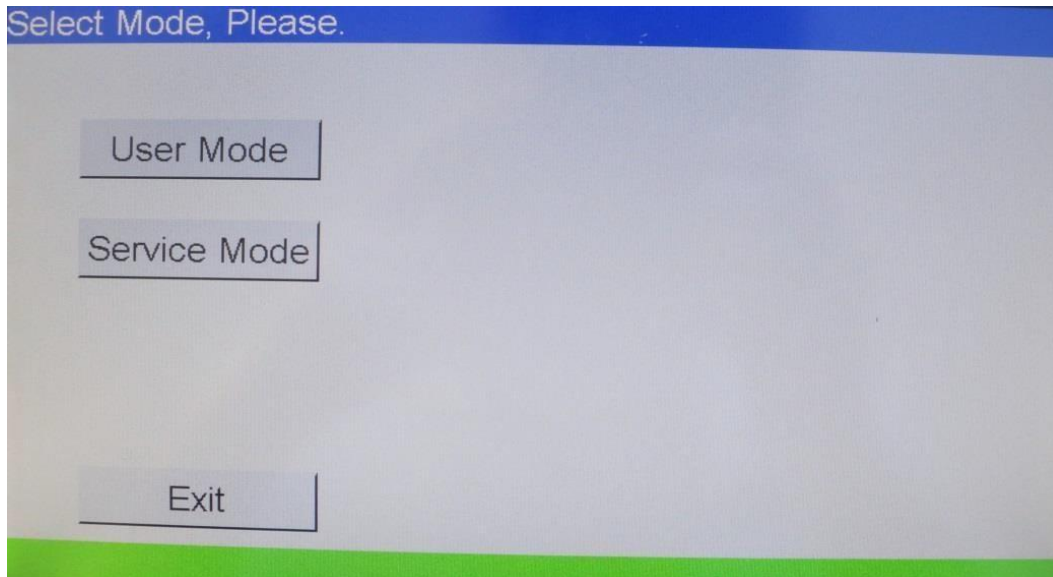


Selecting “User Mode” will bring up a new screen, which allows the user to change the measurement system between metric and imperial. This menu will also give the option to turn on/off “Double Feed Detect”. This menu also displays “LCD +” and “LCD –”, these are used to control the screen brightness. “Service Mode” is password protected and is intended for service technicians only.

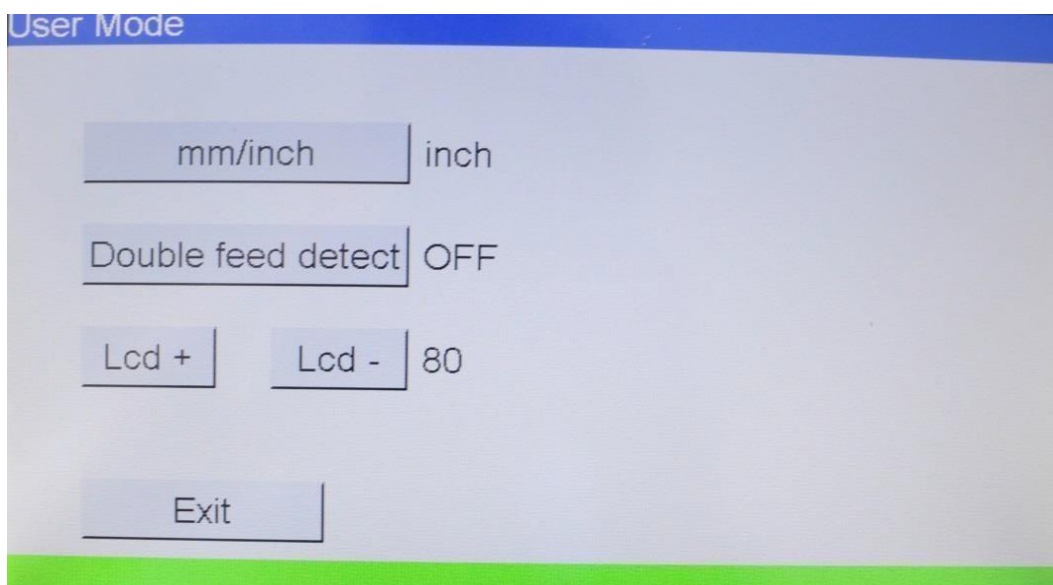

Saving a Job


After pressing the  key, a keyboard will appear where the user can input the job name and save the job. The name of the job cannot exceed sixteen characters. After typing in the file name, the user will hit “Ent” to successfully save that job. To exit without saving the user will have to hit the “Esc” button.

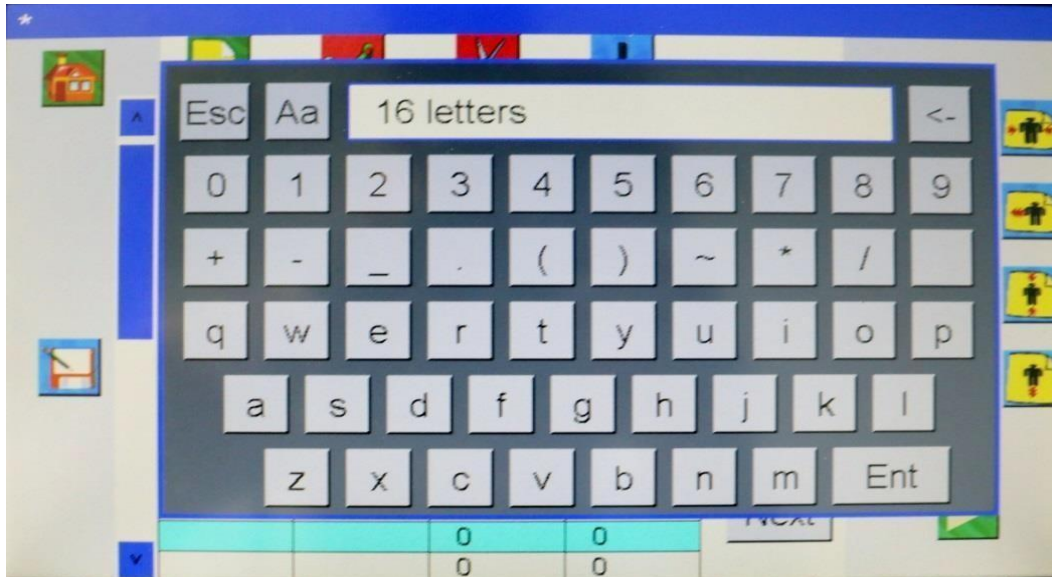

Once the job has been saved, it can be activated through the  icon that is displayed on the home screen at any time.

Registration Mark

The PT 335SCC is equipped with a Cutmark Reader and a Bar Code Reader. A cutmark is a solid black bar or “L” shape that is printed at the top of the sheet, usually to the right-hand side. When the Cutmark Registration is used, the PT 335SCC will read the placement of the cutmark and adjust the slit and knife location to compensate for image shifting on the sheets. This helps to ensure that each job is uniformly cut.

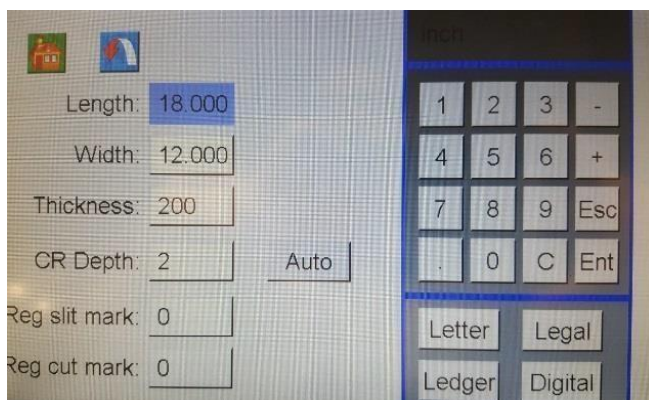


To use the Cutmark Registration, input the placement of the cutmark in the sheet parameter screen. This can be done with the job creator and through manual input.

Reg Slit Mark is the distance from the right edge of the sheet to the right edge of the mark. Reg Cut Mark is the distance from the lead edge of the sheet to the lead edge of the mark.

Once the Cutmark Registration parameters are set, there is one last step that needs to be performed before the PT 335SCC will activate the cutmark reader. Set the job according to the parameters and press the play button. This will display the preview screen. There are several options available on this screen.

Select this button  to turn on the Cutmark Registration. This will only activate if the sheet has been set up with values in the Reg Slit Mark and Reg Cut Mark. When selected, a small checkmark will appear in the lower right corner of the icon.

Using the cutmark registration will slow down the PT 335SCC enough to read the mark position and move the slitters accordingly. This is generally an insignificant pause.

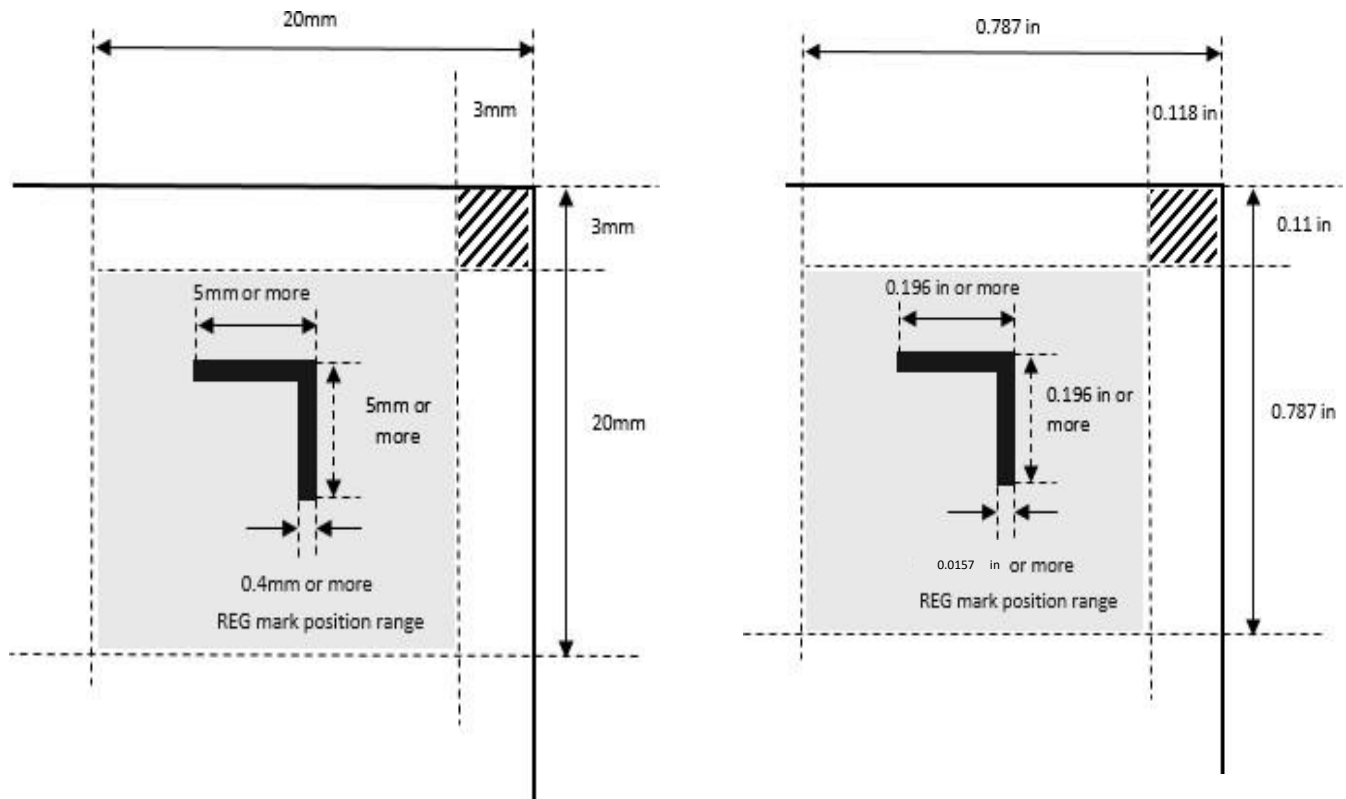

The above image shows the parameters for the placement of the cutmark.

- **Right Edge:** $\geq 3\text{mm}$ (8mm is recommended) / $0.150''$ ($0.236''$ is recommended)
- **Lead Edge:** between 3 – 20mm (8mm is recommended) / $0.150''$ – $0.750''$ ($0.236''$ is recommended)
- **Blank Area:** when setting the cutmark, the space above the lead edge and to the right of the right must be kept blank. Any color or mark in this space may affect the sensor's ability to read the Cutmark Registration.

Programming the PT 335SCC

Programming a New Job Using Job Creator

Video example of programming 12"x18" 24 up business cards using job creator

https://youtu.be/z_0lgYNKta8



Using the Job Creator to set up a job is the easiest and most convenient way to set a new job. The Job Creator prompts you for the initial values and programs the rest of the cuts and slits accordingly.

To set a job through the Job Creator, please complete the following:

From the home screen, select the Job Creator icon.

Input the values for the size of stock you are using, e.g. 12x18"

Press Next to advance to the next screen.

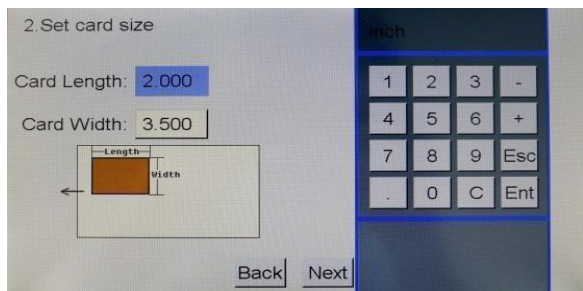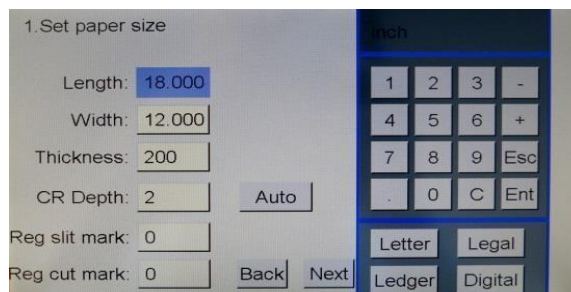

Input the size of your finished piece. The default image shows a standard 2x3.5" business card. This image will not change to reflect the actual values of your finished piece.

Press Next to advance to the next screen.

Input your Lead Trim, Side Trim (non-op side), Gutter Cut (if applicable), and Gutter Slit (if applicable).


Lead Trim: Distance from the lead edge of the paper to the first cut.


Side Trim: Distance from the non-op side to the first slit.

Gutter Cut: Distance from the cuts in the middle of the paper.

Gutter Slit: Distance from the slits in the middle of the paper.

Press Next to advance to the next screen.

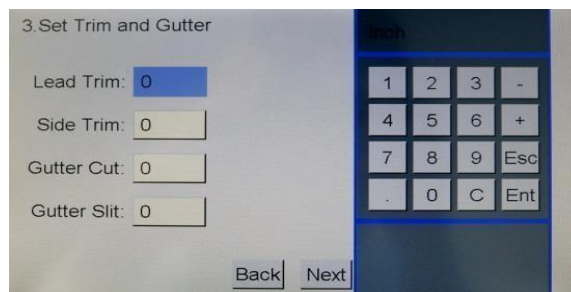

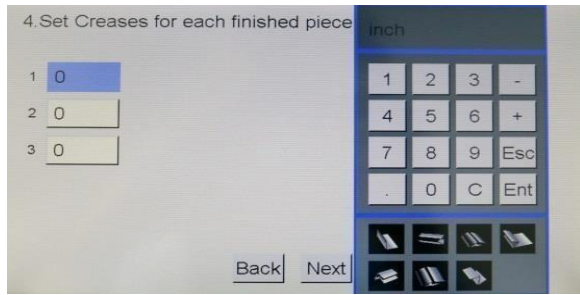


If your finished piece has creases, input the crease values based on the finished product. The PT 335SCC will calculate distance from lead edge for you. The crease option comes with several preset options, or you can set your own values.

Press Next to advance to the next screen.

If your finished piece has any strike perfs, you can enter them here. The Job Creator is capable of only one strike perf program. When Job Creator has completed setting up the job, it will display the same strike settings for all strike perfs, regardless of how many are installed. It will be the responsibility of the user to manually program the strike perfs (if different) and set their location on the exit shaft.

Press Next to advance to the next screen.

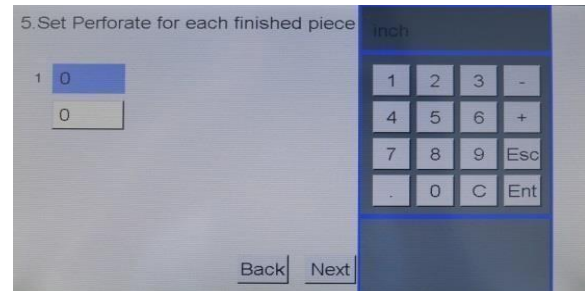

Once all the programming is complete, the PT 335SCC will provide a preview of the job. If the user is happy with the setup, they can press OK to advance to the manual screen. If changes are required, pressing Back will return to the previous screens.




Shrink/Stretch/Shift Adjustment

Video example for programming the Shrink/Stretch/Shift functions

<https://youtu.be/1rmQHkzU2fs>

The printed job may not be perfect due to the nature of the machinery on which it is printed. There is the possibility that there is a very slight difference between the input value and the actual value of the printed piece. When the actual job is slightly larger than the value, you may notice the finished job is shifting away. Stretching the cut from head to tail will compensate for the slightly larger size. If the image is shrinking, use the Shrinking icon to compensate. There are also icons that will allow you to shift the cuts towards the head or tail.

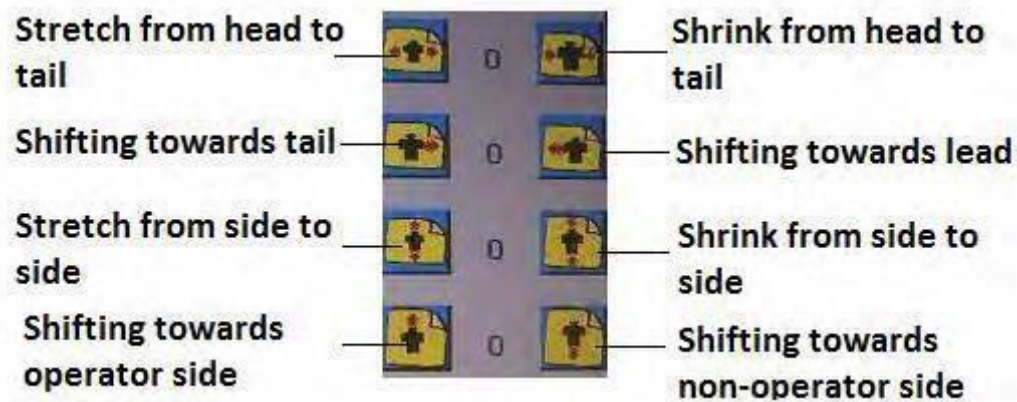

Stretch from Head to Tail/Shrink from Head to Tail – this will stretch or shrink the cut horizontally (length of the sheet). If the cut image is evenly placed but too small or too large for the finished piece, use the appropriate button to shrink or stretch the cut for a better fit.

Shifting Towards Tail/Shifting Towards Lead Edge – this will shift the cut towards the tail edge or towards the lead edge. If the cut image is shifted up or down on the finished piece, use the appropriate button to move the cut towards the tail or lead edge.

Stretch from Side to Side/Shrink from Side to Side – this will stretch or shrink the cut vertically (width of sheet). If the cut image is evenly placed but too narrow or too wide for the finished piece, use the appropriate button to shrink or stretch the cut for a better fit.

Shifting Towards Operator Side/Shifting Towards Non-Operator Side – This will move the image vertically to one side (length) or the other. If the cut image is shifted left or right on the finished piece, use the appropriate button to move the cut towards the right or left edge.

Programming a New Job Using Manual Input

From the home screen press the Manual Input button to access the following screen.



The four icons across the top and the Next button allow the user to manually input the job data. Their definitions are as follows:



Paper size



Slit programming




Cut programming



Crease programming



Strike perf programming (hit Next from the main programming screen to access)

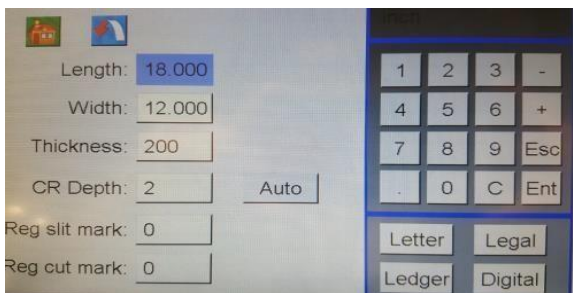


Select paper size by press the Paper Size icon. Input the values according to the sheet size you are using. The PT 335SCC is programmed with four default settings: Letter, Legal, Ledger and Digital. Touch the field box to make changes, press Enter to save changes.

Press the Back button to return to the input screen.

Select the Slit icon. Enter the slit values for each slit. Please note, the slitters have a limited range in which they can operate. If the job will not take the programming (displays a different number) try programming a different slit for the required value.

Press Back button when slit programming is complete.

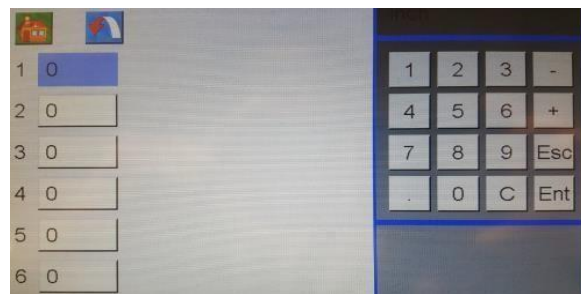



The above image shows the values for the 6 slitters.

The value for slitters, based on the image above, are as follows:



Slitter 1:	.500
Slitter 2:	4.00
Slitter 3:	4.250
Slitter 4:	7.750
Slitter 5:	8.000
Slitter 6:	11.500

Holding down the + or - button when setting the slit, cut, or crease values will add the values.

- E.g. for Slitter one, set 0.5.
- Now, press and hold the + button for 3 seconds. When the button is released, it will turn green.
- Enter 3.5 (the size of the business card, as in the example above) as the value for Slitter 2 and press enter.
- The PT 335SSC now adds 0.5 to 3.5 and the value changes to 4.00.
- You can continue adding the values in this manner until all values are programmed.

Select the Cut icon to program the cuts required for the job. The PT 335SSC has 32 cut positions per sheet.

Press the back button when cut programming is complete.

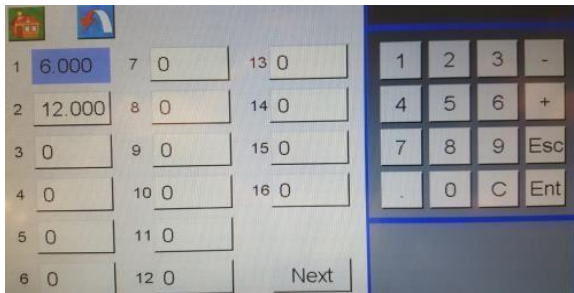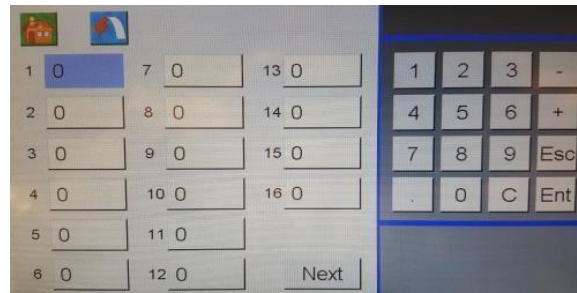


Select the Crease button to program the creases for the job. The PT 335SSC has 32 crease positions per sheet.

Press the Next button to access strike perf programming.

For strike perf, you must set an on point and an off point, even if the strike starts at the beginning of the sheet or ends at the end of the sheet.



Once all the slits, cuts, creases, and perfs are programmed, press the Run button from the Manual Input screen. The PT 335SSC will display a visual of the job. Confirm the layout matches your finished product.

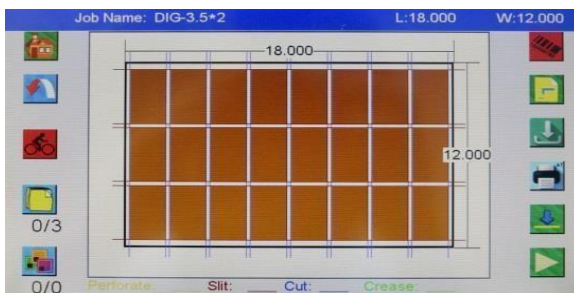

The settings are color-coded as follows:

Yellow: perforate

Red: slit

Blue: cut

Green: crease

Press the Test button to run a test. Press the Run button to run batched number or number of sheets in the feed tray.

Job Layout

SCC Parameters

Parameter	Measurement
Minimum Cut from Lead Edge	0.126"
Maximum Cut from Lead Edge	2" (increments of 0.5") *
Minimum Cut from Tail Edge	0.197"
Maximum Cut from Tail Edge	2.56" (increments of 0.5") *
Minimum Slit from Side Edge	0.126"
Maximum Slit from Side Edge	1.5"
Minimum Gutter Cut	0.126"
Maximum Gutter Cut	0.59"
Minimum Slit Gutter	0.197"
Maximum Slit Gutter	0.59"
Registration Mark Specifications	0.315" -1" wide x 0.197" - 0.25" long
Registration Cut Mark Location	0.118" (0.314" is recommended) from side and 0.118" - 0.787" from lead
Minimum Card Size	2" wide x 1.772" long

**Job creator will calculate increments automatically*

Registration Mark Specifications and Location

Registration Mark


	Millimeters	Inches
From Side Edge	3 – 20 mm (8 mm is recommended)	0.150 – 0.750" (0.236" is recommended)
From Lead Edge	3 – 20 mm (8 mm is recommended)	0.150 – 0.750"
Min Size	2 x 3 mm	0.078 x 0.118"

Barcode

	Millimeters	Inches
From Side Edge	144 – 155 mm	5.669 – 6.102"
From Lead Edge	3 – 20 mm (8 mm is recommended)	0.157 – 0.787" (0.236" is recommended)
Size	45 – 46 mm length 6.5 – 7 mm width	1.772 – 1.811" 0.256 – 0.276"

The following register mark and barcode reader positions reference PT 335SCC machines with serial numbers higher than 3104120. If your serial number is lower, please request a manual with your correct barcode and register mark specifications from Graphic Whizard.

Register Mark and Barcode Reader Position

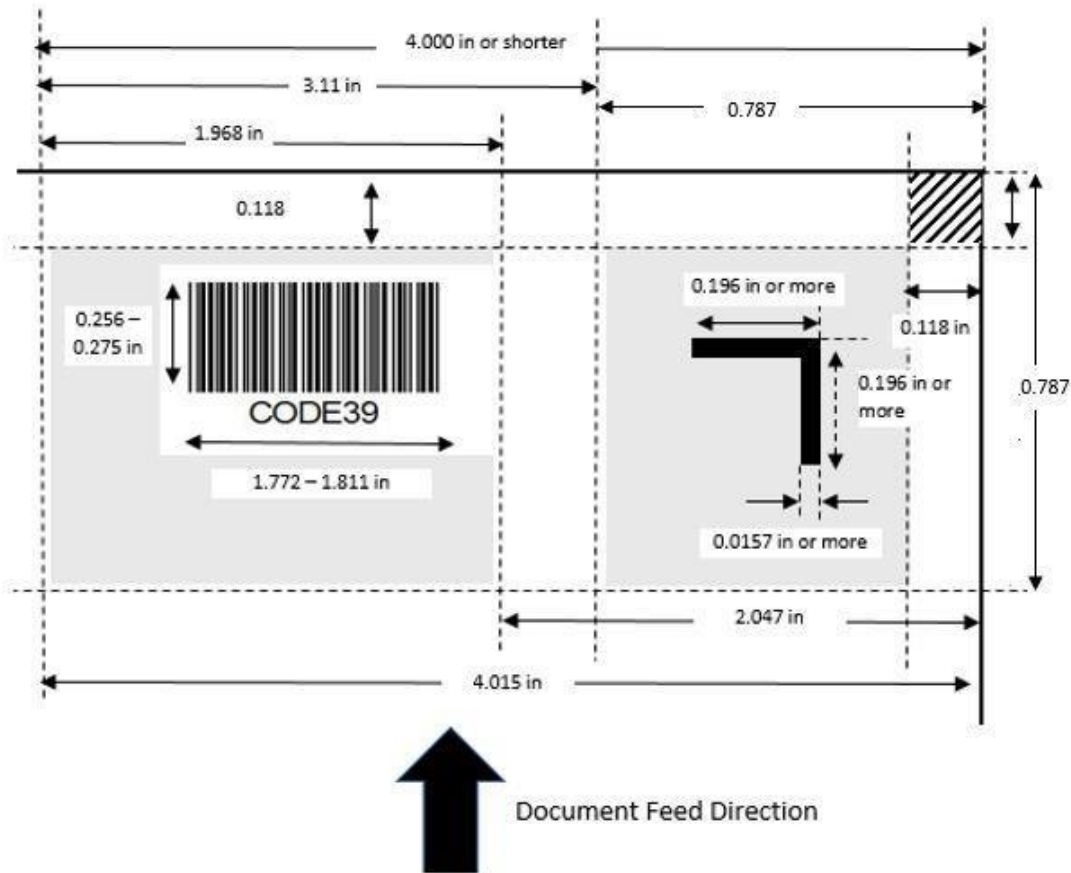


Note: There should be nothing printed in the grey area. Print in this space may interfere with the reader's ability to isolate the register mark or barcode.

Register Mark Position:

- **Lead Edge:** the register mark should be within 0.118"-0.787" from the lead edge. The recommended position is 0.315".
- **Side Edge:** the register mark should be within 0.118"-0.787" from the right edge. The recommended position is 0.315".

Register Mark Size:

- Register mark does not need to be in an “L” shape, it can also be rectangular
- Rectangular register mark must be: ($X \geq 2\text{mm}$, $Y \geq 3\text{mm}$) ($X \geq 0.079''$, $Y \geq 0.118''$)

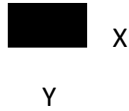

Barcode Position:

- **Lead Edge:** the whole barcode should be within 0.118” – 0.787” from the lead edge. Leave 0.039” between the code and the image.
- **Side Edge:** the barcode must start more than 2.047” from the side and finish 4.016” from the side. The barcode should be within 2.047”- 4.016” from the right edge.

Barcode Size:



6.5mm to 7mm (0.256”-0.275”)



45mm to 46mm (1.772”-1.811”)

If the barcode does not read, the paper or image may be too glossy. To fix this issue, place a light dull background behind the bar code.

Barcode Generator:

The PT 335SCC bar code reader uses a standard “Code 39” bar code. if user does not already have this font it can be downloaded for free from various third-party online sources or contact your local GW dealer who will provide you with font file.

- As Code 39 defines, first digit of the bar code is the “ * ” symbol start of the string.
- Followed by 3-digit number which is the job number the user can see on the saved job or factory default in PT 335SCC. Factory default templets range from 001 – 064, and user saved jobs range from 165 –228.
- The next two digits are the quantity of the job, it can range from 00 – 99.
- Last digit of this bar code string is the “ * ” symbol the end.

Sample Jobs

Note: Sample jobs to follow are based on a 12" x 18" sheet. For a 13" x 19" sheet you can use same layout by adjusting the lead cut and side slit accordingly, and by staying within parameters outlined above.

Sample Layouts with Bleeds: 24 Up Business Cards

12" x 18" 24 up business cards with registration mark. Data for Job Creator as follows:

Registration Mark: 0.236" from lead and 0.236" from side

Barcode Start: 2.126"

Barcode End: 3.937"

First Cut from Lead: 0.4"

Slit from Side: 0.5"

Slit Gutter: 0.25"

Cut Gutter: 0.2"



Sample Layouts with Bleeds: 6 Up Tickets

12" x 18" sheet 3.5" x 8" 6 up tickets with perf and registration mark. Data for Job Creator as follows:

Registration Mark: 0.236" from lead and 0.236" from side

Barcode Start: 2.126"

Barcode End: 3.937"

First Cut from Lead: 1.5"

Slit from Side: 0.5"

Slit Gutter: 0.25"

Cut Gutter: 0.25"

Perf Location on Finished Piece: 2"



Sample Layouts with Bleeds: 4 Up Greeting Cards

12" x 18" sheet 5" x 7" 4 up Greeting Card with Crease and registration mark. Data for Job Creator as follows:

- **Registration Mark:** 0.236" From Lead And 0.236" From Side
- **Barcode Start:** 2.126"
- **Barcode End:** 3.937"
- **First Cut from Lead:** 1.5"
- **Slit from Side:** 0.75"
- **Slit Gutter:** 0.5"
- **Cut Gutter:** 1"
- **Crease Location on Finished Piece:** 1.5"



Sample Layouts without Bleeds: 15 Up Tickets

12" x 18" sheet 2" x 5.5" 15 up tickets with perf and registration mark. Data for Job Creator as follows:

Registration Mark: 0.236" from lead and 0.236" from side

Barcode Start: 2.126"

Barcode End: 3.937"

First Cut from Lead: 0.5"

Slit from Side: 0.5"

Slit Gutter: 0.0"

Cut Gutter: 0.25"

Perf Location on Finished Piece: 1.5"



Accessories

The PT 335SCC can be enhanced with the following accessories to meet your print finishing needs:

- Strike Perf – maximum of four (4) per machine
- Cross Perf
- Rotary Perf
- Kiss Cut
- Score
- Rotary Slit


All the above accessories, except for the cross perf, are installed on the exit shaft.

Cross Perf Installation and Adjustment


Video example for PT Series Cross Perf Tool

<https://youtu.be/qVracO6RZ1I>

The cross perf creates a perforation across the width of the sheet. To install the cross perf open the tool access door.

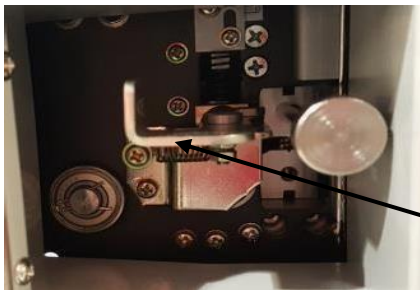

Press the secure latch in toward the handle of the crease tool (if installed).

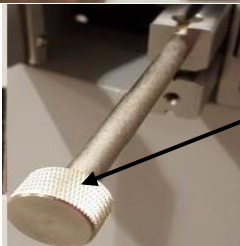

While pressing the latch, remove the crease tool.

Install the cross perf assembly with the white deflector at the top, facing the inside of the SCC.

Installing the cross perf in any other orientation will cause jams and may damage the machine.

Close the tools access door.



1. Set paper size

Length:	18.000
Width:	12.000
Thickness:	200
CR Depth:	2
Reg slit mark:	0
Reg cut mark:	0

Auto Back Next

Run a test sheet to ensure perf depth is correct. If adjustment is required, press the Paper Size icon . You will be asked if you want to change values. Touch Yes or No to advance to the sheet size screen.

CR Depth sets the crease pressure. The cross perf uses the same crease mechanism as the crease bar. The SCC default setting is 2. Increase the number for a deeper crease. Test the perforation between adjustments.

Partial Cross Perf

The cross perf uses a rubber crash pad with the perf blade to create the perforations.


To create a partial perf, remove the cross perf assembly from the SCC by pressing the secure latch in toward the handle and sliding the tool out.



Remove the three screws securing the crash pad holder.




Measure length of perf on stock by lining up crash pad. It is recommended to cut the pad slightly larger to compensate for potential miscalculations.

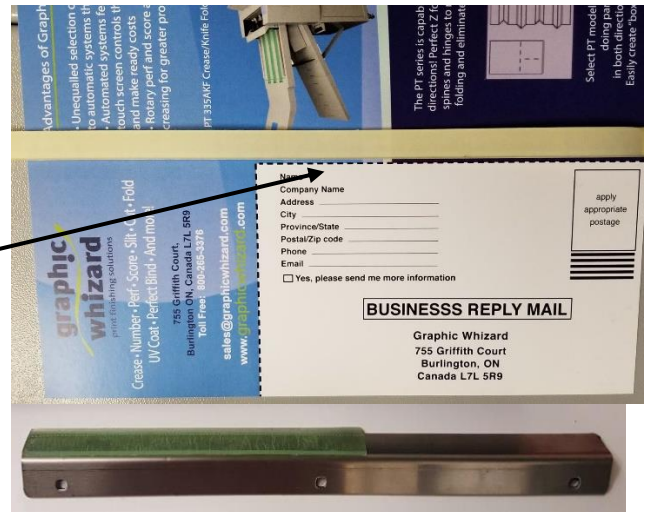

Secure a fresh crash pad to the holder, trimming it to the size of the perf line on the sheet. This will create a partial perforation.


Install the crash pad holder into the cross perf assembly and insert the unit into the SCC.

Program a crease to test cross perf for accuracy and adjust as needed.

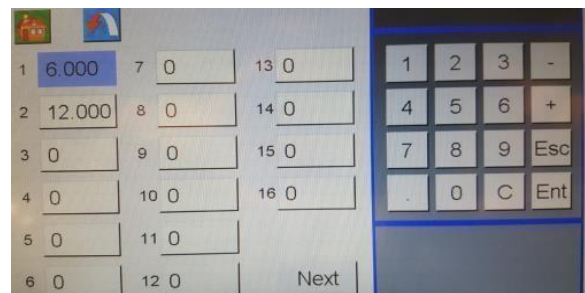

Strike Perf Installation



The strike perf allows for multiple vertical perforations on one sheet. A total of four (4) strike perfs can be installed in one SCC.

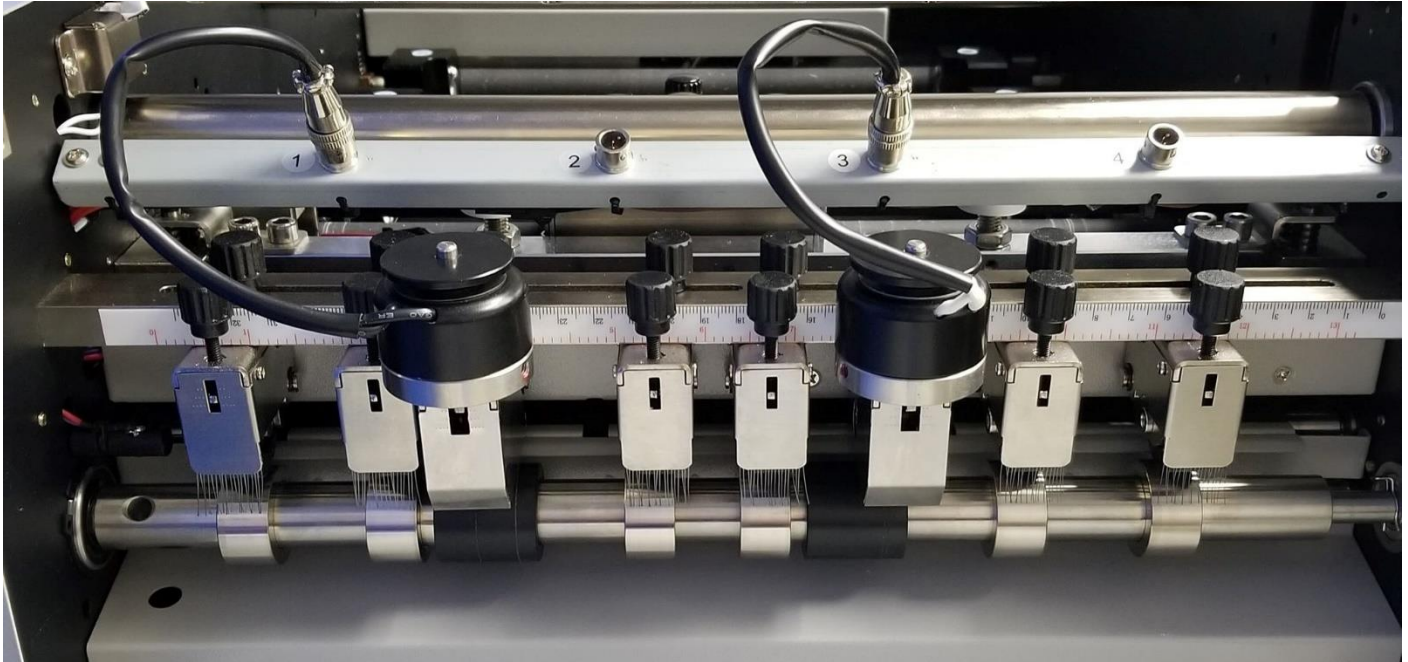

Exit shaft of a PT 335SCC with two strike perfs installed. Strike perfs use a nylon anvil (black in above image)


The strike perf assembly includes a nylon anvil. To install the strike perf, complete the following:

Remove the exit shaft by removing the exit shaft clip from the right-hand side of the machine.

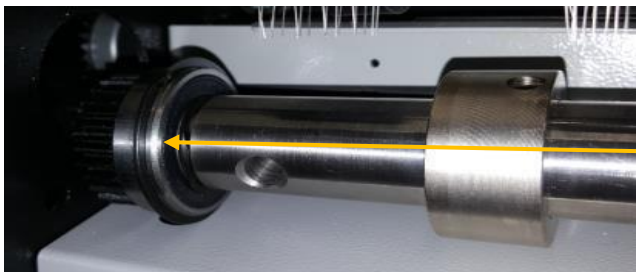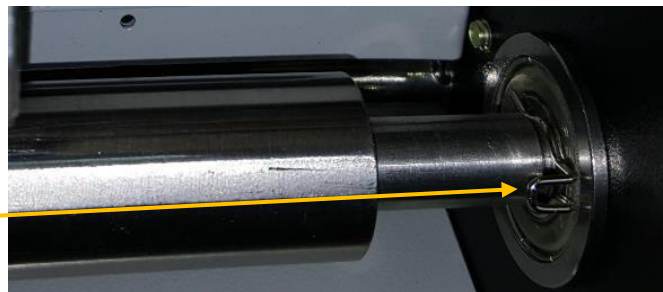

Slide the shaft to the right until the bearing is against the lip of the shaft. Angle the left side of the exit shaft and slip the right side out.


Remove the second exit shaft clip and the bearing.

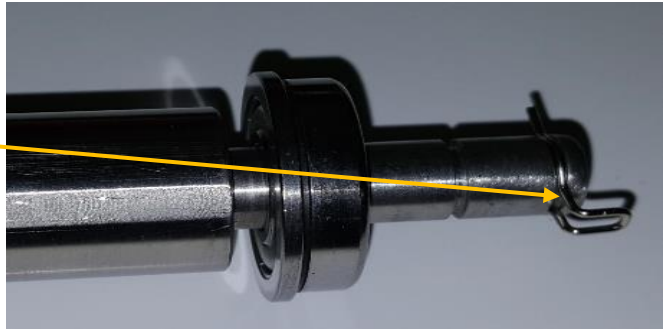

The metal wheels are secured to the exit shaft with a 2mm hex screw. Loosen the screws to slide the metal wheels off the shaft.



The number of removed wheels will depend on the placement of the strike perf assembly. If installing more than two strike perfs, one or two of the lag wheel assemblies may have to be removed to accommodate the strike perfs.

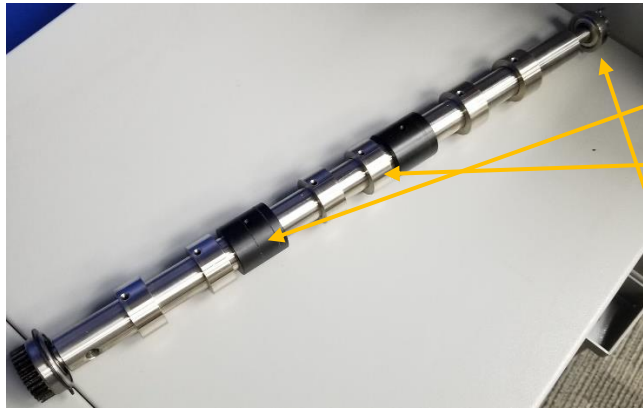


Install the provided perf anvil.

Reinstall the removed metal wheels.

Install the bearing. Slip the exit shaft clip onto the end groove on the exit shaft. Reinstall the exit shaft into the SCC and secure with the second clip.

With the exit shaft installed, attach the strike perf assembly by slipping the guide through the tools holder and securing the screw.

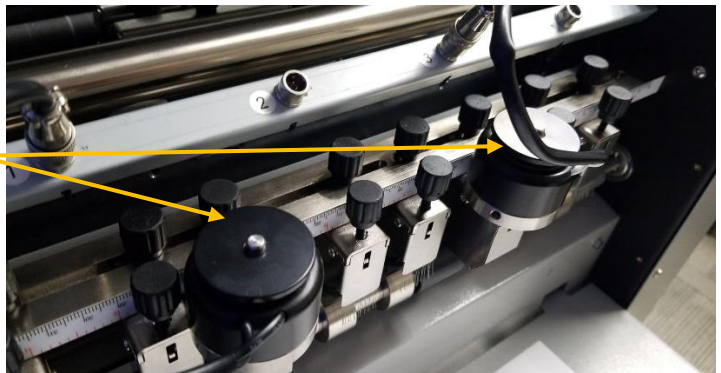

Strike Perf Adjustment

- The strike perf has 2 set screws for securing the solenoid head to the assembly.
- When making depth adjustments, the entire solenoid head rotates.



To adjust the perf depth, complete the following:

1. Disconnect the cable and remove the strike perf assembly from the SCC to access both screws.
2. Locate and loosen the two 2mm set screws securing the solenoid head to the base.
3. Adjust the depth by rotating the solenoid head. Test between adjustments.
4. Once adjusted, secure the screws and test again.



Rotary Tool Installation

Video explanation of PT 335 series Multi Tool Shaft

<https://youtu.be/F1Gllunh7cw>

The rotary tool, whether rotary perf, rotary slit, or rotary score, is installed in the same manner.

1. Remove the exit shaft by removing the exit shaft clip from the right-hand side of the machine. Slide the shaft to the right until the bearing is against the lip of the shaft. Angle the left side of the exit shaft and slip the right side out.
2. Remove the second exit shaft clip and the bearing.
3. The metal wheels are secured to the exit shaft with a 2mm hex screw. Loosen the screws to slide the metal wheels off the shaft. The number of removed wheels will depend on the placement of the strike perf assembly. If installing more than two accessory tools, one or two of the lag wheel assemblies may have to be removed to accommodate the accessory tools.
4. Install the provided anvil. For the rotary perf, a nylon anvil will be provided. For the rotary slit, a metal anvil will be provided, for the rotary score, a grooved metal anvil will be provided, and for the kiss cut, a metal blade will be provided.
5. Reinstall the removed metal wheels.
6. Install the bearing.
7. Slip the exit shaft clip onto the end groove on the exit shaft.
8. Reinstall the exit shaft into the SCC and secure with the clip.
9. With the exit shaft installed, attach the tool assembly by slipping the guide through the tools holder bar and securing the screw.
10. Align the anvil so the blade is clear of the set screw. If blade rolls over the set screw, the paper will leave a blank in that spot.
11. Using the strike perf alignment button , feed a sheet of stock through the SCC and align the tool.
12. When the alignment is correct, ensure the set screw is tight.
13. Run a test sheet to ensure correct alignment and tool depth. Adjust the depth as needed. Note:
14. unlike the strike perf, these tools can only be set to on or off. If set to on, they will run the length of the sheet.



Metal Anvil

Rotary Tool

Rotary Score

Rotary Kiss Cut

Troubleshooting

Error Codes

Code	Description	Action
C-2	Please Set Paper	Feed table is empty. Pressing return on the display will remove this message.
C-4	Crease Unit Cover Open	The crease cover is open, or the limit switch is not activated when the cover is closed. Check for contact when closing the lid. If the lid is contacting the switch and the error still appears, the switch may require replacement. Contact your local GW dealer for technical assistance.
C-5	Crease/Perforate Tools Not in Place	Crease die or cross perf is not inserted in the crease unit. Try reseating the die by removing and reinserting. The die should 'click' into place and cannot be removed without opening the release latch. If the tool is properly inserted and the error still exists, there may be an issue with the switch. Contact your local GW dealer for technical assistance.
C-6	Crease Unit Side Cover Open	Ensure the side cover is fully closed. If the error still exists with the cover fully closed, there may be an issue with the switch. Contact your local GW dealer for technical assistance.
C-7	SC Unit Safety Cover Open	Like the crease unit, the top cover has a safety switch. Open and close the top cover to ensure the switch is activated when the cover is closed. If the cover is closed and the error message remains, there may be an issue with the switch. Contact your local GW dealer for technical assistance.
C-8	SCC Unit Waste Bin Door Open	Both bottom doors of the SCC have safety switches. Ensure both doors are properly closed. Check for scrap paper that may be blocking the door from fully closing. If the doors are properly closed, there may be an issue with one or both switches. Contact your local GW dealer for technical assistance.
C-9	Paper Jam at Infeed Table	The SC unit is unable to feed a sheet. The SCC will attempt to feed a sheet then lower the feed table and try again. If the SC unit still cannot feed, the error will be displayed. Check for something blocking the feeder. Ensure the vacuum feeder belt is moving. Check the paper, ensure there are no curls, turned corners, or tears that may be preventing the unit from feeding.

Code	Description	Action
		Readjust the paper guides. If they are too tight, the paper will not feed. Add or remove paper deflectors.
		If problem remains or if the vacuum feed motor is not running, contact your local GW dealer for technical assistance.
C-10	Paper Jam Near Outfeed Roller	Paper did not clear outfeed roller or outfeed sensor is blocked. Check for debris or paper jam. Clean sensor.
		This error can occur when the actual paper length does not match the length indicated in the programming.
		If the sensor is clear and there is no debris or jammed paper and the paper length is set correctly, contact your local GW dealer for technical assistance.
C-11	Paper Jam Near Cutter	There is a sensor just before the cutter unit. Ensure the sensor is clean and no paper is blocking the sensor.
		If the sensor is clear, contact your local GW dealer for technical assistance.
C-12	Double Feed	The SCC is equipped with a double-feed detector. This detector reads the thickness of a sheet and will stop the feed unit if the thickness is not within specs. This error will also appear if the actual length of the paper is not the same as the length specified in the job program.
		If applicable, remove the multiple sheets from the feeder. Run a test feed. If the unit pulls two sheets again, check the paper separator height. If the gap is too large for the thickness of stock, reduce the gap by adjusting the knob on the top of the SCC unit and test again.
		If the error continues, contact your local GW dealer for technical assistance.
E-2	Elevator Error	The SSC unit is equipped with a table height sensor as well as a lower safety switch. The elevator error will appear if one of these sensors is triggered.
		For the lower limit sensor, power off the SCC unit then press and hold the green elevator button while powering the SCC back on. This should permit the feed table to rise.
		If the table is up and the error occurs, this may indicate the paper stack is too high to feed. For correct feeding, the table needs room to rise. Power the unit on and off, remove some paper and try again.
		If the paper stack is not too large and the error keeps occurring, there may be an issue with the table height sensor. Contact your local GW dealer for technical assistance.

Code	Description	Action
E-3	Limit Sensor Error	To prevent elevator error, the SCC has a limit sensor. This sensor is designed to ensure the table is not overloaded. Remove some of the paper and try again.
		If the error continues, contact your local GW dealer for technical assistance.
E-4	Crease Motor Locked	When operating, the crease motor position sensor does not find home. This could indicate a motor issue or a jam.
		Power off and check the crease unit for paper jam. If present, clear the jam and try again.
		If the error continues, the crease unit motor or sensor may be defective. Contact your local GW dealer for technical assistance.
E-5	Cutter Motor Locked	When operating, the cutter motor will cycle and return to the home position. This error will occur when the cutter does not return to the home position.
		Power off and check for a paper jam. If present, clear the jam and test again.
		If the error continues and no jams are present, there may be an issue with the sensor or the cutter motor. Contact your local GW dealer for technical assistance.
E-6	Slit Motor Locked	Each slitter has a home sensor. If a slitter fails to reach the home position, the slit motor locked error will appear.
		Power off the unit and check for debris, paper that may be blocking the sensor. Empty the waste bin.
		If the error remains, contact your local GW dealer for technical assistance.
E-7	Creasing Depth Motor Locked	This error can occur if the programmed job CR depth is set too high or the crease unit does not complete a full cycle and return to home.
		Restart the unit and reduce the CR depth. If the unit fails again, contact your local GW dealer for technical assistance.

Maintenance

Proper maintenance will prolong the life and functionality of the 335SCC. These maintenance procedures are recommended with the assumption that the customer is completing daily and weekly cleaning. To ensure your machine is running at its best, please regularly perform the following:

- Using the GW Roller Cleaner, clean ink/toner dirt and debris from rollers. This should be done regularly to prevent build-up and protect the integrity of the rollers.
- Lubricate the roller bushings with a 3 in 1 oil. This lubrication will ensure the paper is feeding properly and prevent the rollers from slowing or sticking.
- Lubricate the knife pivot points and drop some oil on the springs at each end.
- Clean and lubricate the slitter worm drive shafts.
- Clear paper dust from all sensors with compressed air.
- Clean all surfaces with a water-soluble cleaner.

Consumables List

Part Number	Description
PT-117	Lag Wheel Rubber
PT-024	Home Position Sensor
PT-024	Sensors
PT-102	Brass Pin (for crease tool)
PT-102-S	Brass Pin Spring (for crease tool)
PT-124	Lag Wheel
PT-130	Rubber Only Lag Wheel
PT-155	Feed Belt
PT-300	Separator Finger (order 2)
PTSCC-0008 NOP	Knife Spring Right (for knife assembly)
PTSCC-0008 OP	Knife Spring Left (for knife assembly)
PT-SCC-0098	Slitter Blade
PTSCCM-0021	Knife Assembly
PTSCCM-0165	Lag Bearing
PTSCCM-0172	Lower Feed Roller
PTSCCM-0173	Upper Feed Roller
PTSCCM-0240	Exit Sensor Wire Harness