



PT 375BSCC Multi Operator Manual

755 Griffith Court, Burlington, Ontario, Canada L7L 5R9

Tel: +(905) 633-7663 Fax: +(905) 637-4419

www.graphicwhizard.com

Table of Contents

Introduction	3
Specifications	4
Important Tips.....	6
Double Feeding	6
Auto Conveyor	6
Two Crease Stations.....	6
Safety	7
Power Supply	8
Main Parts and Assembly.....	9
Feeding Unit.....	9
Perforation Unit	11
Slitters/Cutter Unit.....	13
Crease Unit.....	14
Exit Conveyor	15
Installation	16
Touch Screen Installation.....	16
Feeding Table Installation	17
Conveyor Installation	18
Deflectors and Side Guide Placement.....	20
Operation	21
Welcome Screen	21
Main Screen	21
How to Start a New Job	22
Smart Input	24
Manual Input.....	30
Limit for Tail Cut (Trail Margin)	39
Save or Recall a Template	42
Save a Template	42
Recall a Template	42
Important features.....	43



Register Mark.....	43
Register Mark Specifications.....	43
How to Activate the Register Mark.....	44
Barcode Reader.....	45
Barcode Specifications.....	45
How to Generate the Barcode.....	45
How to a Create Barcode.....	47
Run A Job with Barcode Activated.....	47
Important Tips for Register Mark and Barcode.....	48
Optional Tools.....	50
Cross Tools.....	50
Crease Tool.....	50
Perforation Tool.....	51
Linear Tools.....	51
Strike Perforator.....	52
Installing Strike Perfs.....	53
Trouble Shooting.....	55
Warning Messages.....	55
Images Shrink/Stretch or Shift Caused by Printing.....	58
Maintenance.....	59



Introduction

This manual is designed to help you operate the PT 375BSCC Multi (may be referred to as the "PT SCC" or "SCC" for convenience from here on). Please read, understand, and keep this manual in a convenient place for easy access. DO NOT operate the PT 375BSCC Multi until you have read and understand the instructions in this manual. If you have any questions, contact your local dealer before operating this machine.

Graphic Whizard Inc. shall not be held liable for consequential damages or incidental consequential damages resulting from: improper or inadequate maintenance by the customer. Unauthorized modifications or misuse. Operation outside of the environment specified for the machine.

Graphic Whizard Inc. is committed to continually improving the design and performance of the product line. **Please note:** the design and specifications of this machine are subject to change without notice and without legal obligation.

All rights are reserved. No part of this manual may be photocopied, reproduced, or translated to another language without the prior written consent of Graphic Whizard Inc.

Specifications

Items	Parameter	
Machine Dimensions	Length X Width X Height	110.8" x 27.7" x 52.1" 2815 x 706 x 1325mm
Power Source	Ac 110v, 130v, 8a	
Power	900w	
Weight	485 Lbs. / 220kg	
Infeed Paper Specs	Max (W*L)	14.56" x 25.59" 370 x 650mm Max. length can be up to 35.43" / 900mm.
	Min (W*L)	8.268" x 8.268" 210 x 210mm
	Gram Weight/Thickness	150g-400g/0.15-0.4mm
	Programming	8.268" - 47.244" / 210 x 1199mm (L) 8.268" - 14.606" / 210 x 371mm (W)
Output Size	Max (W x L)	14.56" x 35.43" / 370 x 900mm
	Min (W x L)	50 x 48mm / 1.96" x 1.88"
Cutting Limits	First Cut	0.125" x 0.590" / 3.2-15mm, (It will chop up if it is larger than 15mm)
	Last Cut	0.196" x 0.590" / 5-15mm
	Gutter Cut	0.118" x 0.590" / 3-15mm, (It will chop up if it is larger than 15mm)
	Max. Cutting Qty Per Sheet	32
	Accuracy for Cutting	±0.3mm
Slitting Limits	Quantity	6
	Side Trim	0.125" x 1.515" / 3.2-38.5mm
	Gutter Slit	0 or 0.196"-0.590" / 0 or 5-15mm
	Accuracy for Slitting	±0.3mm
Creasing Limits	Max Qty for Crease Per Sheet	32 per crease
	Crease Direction	Both
	Standard Crease Die Spec.	1.0mm (Pressure 1-5)
	Accuracy for Creasing	±0.2mm
Optional Tools	Scoring Tools	Optional

	Cross Perforator Die	Options: 12/24TPI
	Rotary Perforator Assembly	Options: 12/24TPI
	Max Qty for Rotary Perf. Assembly	8 sets
	Strike Perf. Assembly and Max Qty	Optional 12TPI 2 Auto position heads 2 Manual position heads (on/off 8 times per head)
Feeding Type	Top Vacuum	
Speed	A4 Trimming 4 Sides with Crease in Middle	24 Sheets/min
	24up Business Cards	9 sheets/min, 6 seconds per sheet
Loading capacity	5.9" / 150mm	
Double-Feed Detection	Available	
Skew Adjustment	On screen adjustment	
Image Compensation	X/Y direction compensation	
User Templates Storage	60	
Environmental Conditions	Temperature: 64.4°F to 82.4°F / 18°C to 28°C Humidity: 40% to 70% Altitude: Below elevation 3,280' / 1,000m	

Important Tips


Double Feeding

If two sheets of paper overlap or distance between the leads of two double fed sheets is less than or equal to 7.87"/200mm, the SCC will automatically make them drop to the bottom tray and keep running until it has finished the set batch or paper has run out, then show "Double Feed Error".

If the distance between the leads of two double fed sheets is larger than 8.26"/210mm, the SCC will stop immediately and display "Double Feed Error".

Auto Conveyor

- If there is no cutting data input, the belt on the conveyor will not move and the roller on the conveyor will stop slightly farther than the programmed distance.
- Conveyor belt control button will only work when the SCC is on normal standby status.
- When the finished sheet is larger than 25.5"/650mm, you have to first manually set one sheet on the conveyor ahead of the foam roller. Remember to take the finished sheet away from the conveyor in time. As shown in the following figure, the manually set sheet is used to guide the incoming finished longer sheets so that it will not get stuck at the bottom of foam roller. The foam roller cannot be used for long sheets.

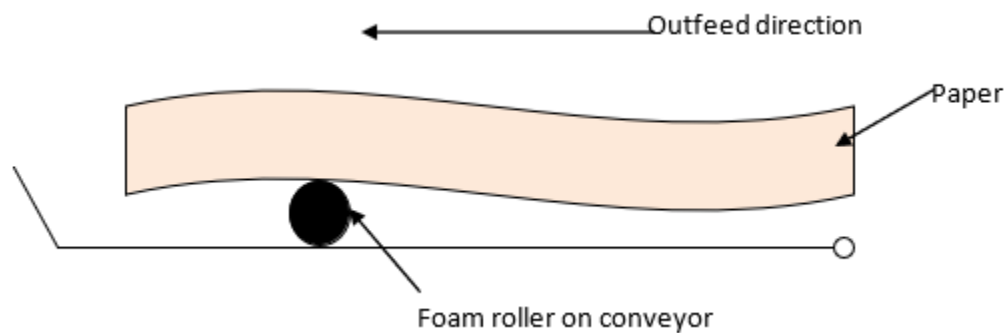

Two Crease Stations

While using both crease bar dies at the same time, the first crease line made by crease #1 must be greater than or equal to 0.125"/3.2mm.

Safety



Please read and fully understand this manual before operation. The term **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in injury. The term **CAUTION** indicates a potential hazardous situation which could result in damage to the machine or personal injury. It also may indicate procedures to follow to avoid unsafe practices. Please read and understand all safety instructions which include the terms **WARNING** or **CAUTION**. Understand that if the safety instructions are ignored, personal injury or damage to the machine may occur.

Ensure all parts are in good working order prior to starting the machine each day. Replace worn parts immediately and do not operate the machine until you have done so. **ALL** electrical & mechanical service/repair is to be performed by qualified and approved Graphic Whizard personnel only.

If machine becomes hot, produces smoke, catches fire or electronic shock happens shut down the power, disconnect the cord, and then contact the technician.





- Do not operate the SCC when any covers are removed, or safety switches are disabled.
- Obey all safety instructions and warning labels.
- Make sure that the machine is level and is well ventilated.
- Never insert a hand or fingers into the machine while it is running.
- Do not wear loose fitting clothing when working with the machine. Tie back long hair.
- Ensure that the power cord has been unplugged prior to performing service on the machine.
- Check the plug, voltage, and frequency to your main power supply.
- Check the that the socket is grounded.
- Make sure all safety covers are in place. The top covers have an interlock switch that will disable the unit if removed.
- Open or close the cover slowly.
- Disconnect the power before cleaning inside.
- Unplug the unit if not in use for long periods of time.
- Blade edge is sharp. Use caution.
- Do not operate with wet hands.
- Do not place any liquid receptacles on the surface of machine.
- Do not put other pieces on loading table.
- Do not alter or uninstall the machine, unless by Graphic Whizard authorized engineer.
- Do not touch any running parts while in operation.
- Do not shut down the SCC while in operation.
- Do not put the side guide under the feeding system.

Graphic Whizard Inc. cannot anticipate every possible situation that might involve a potential hazard. The instructions in this manual and the warning labels on this machine are not all inclusive.

Power Supply

- Always shut down the machine before maintenance.
- To avoid any mistakes when re-connecting wires, it is advised to mark each connector before replacing any electrical component.
- Every connection should be firm. Hold both sides of the connector and then press the middle. Loose connections can cause damage to the electrical components.

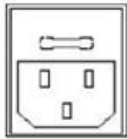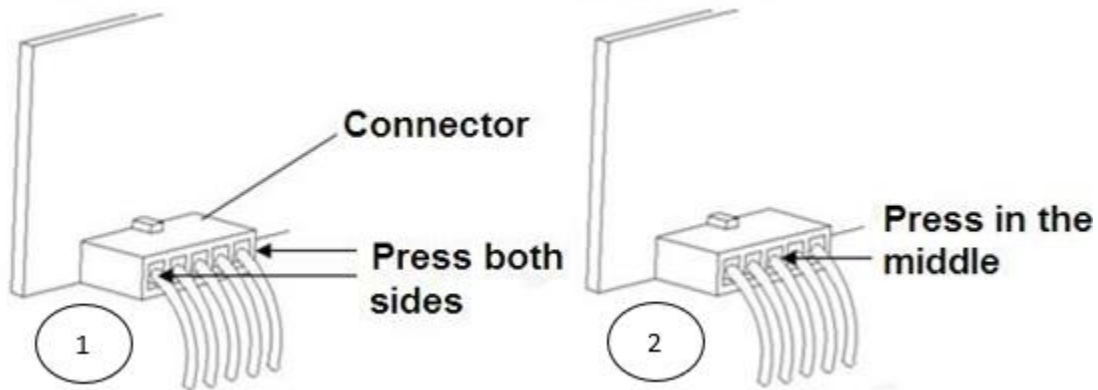

AC input, Voltage/Frequency is:
AC 110-130V, 50Hz/60Hz




Do not remove the cord when the machine is running.
Remove the cord when you are installing components.




Ground symbol.

Main Parts and Assembly


Feeding Unit

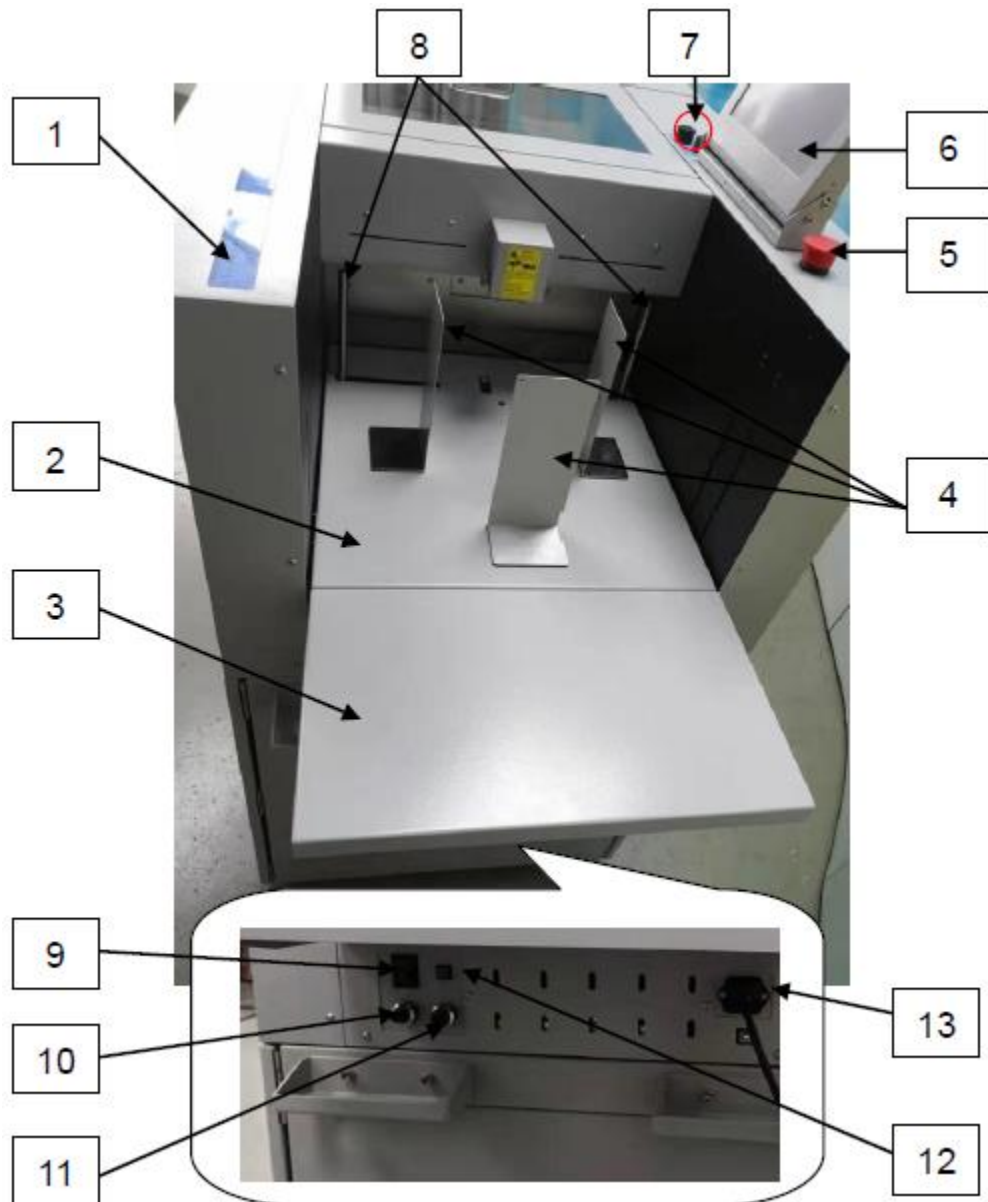

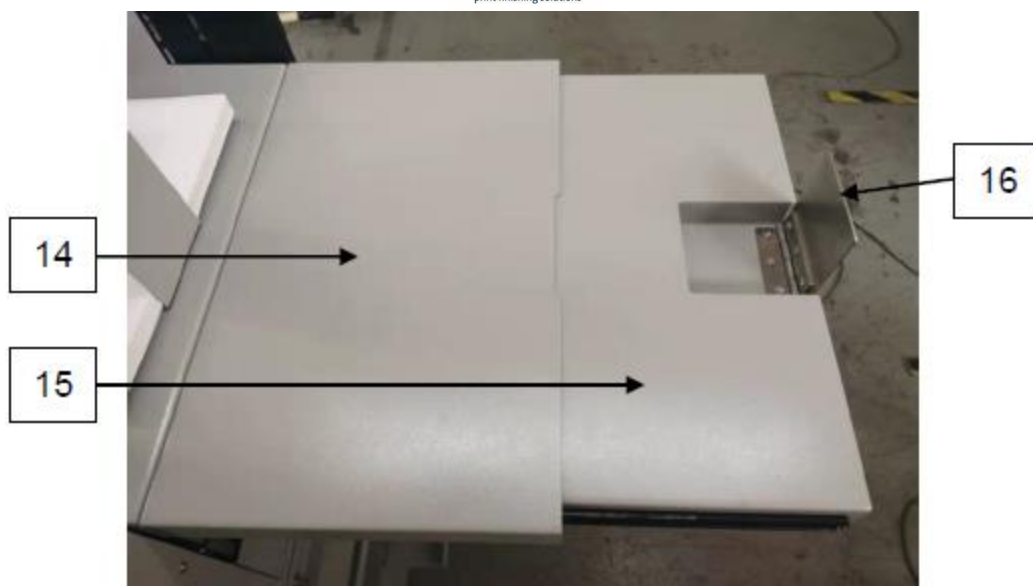


No.	Description	Remarks
1	Ruler Bar	Used to measure the length of sheets
2	Feeding Table	Used to put the sheets on
3	Feeding Extension Table	Used to support the longer sheets (N/A)
4	Stop Guide	Used to square the sheets on the table
5	Emergency Switch	Emergency stop
6	Touch Screen	Display
7	Blow and Separator Adjustment Knob	Used to adjust the blowing and separator fingers
8	Side Pillar	Used to keep the sheets square
9	Power Switch	Power on or off
10	Suction Adjust Knob 1	Suction power adjustment on auto skew adjuster
11	Suction Adjust Knob 2	Suction power adjustment on feeder
12	Table Release Button	Works together with START or STOP button
13	Power Socket	Plug in power cord
14	Feeding Extension Table 1	For longer sheets (new version only)
15	Feeding Extension Table 2	For longer sheets (new version only)
16	Back Stop Guide	Prevent tail of sheets from shifting (new version only)

Perforation Unit

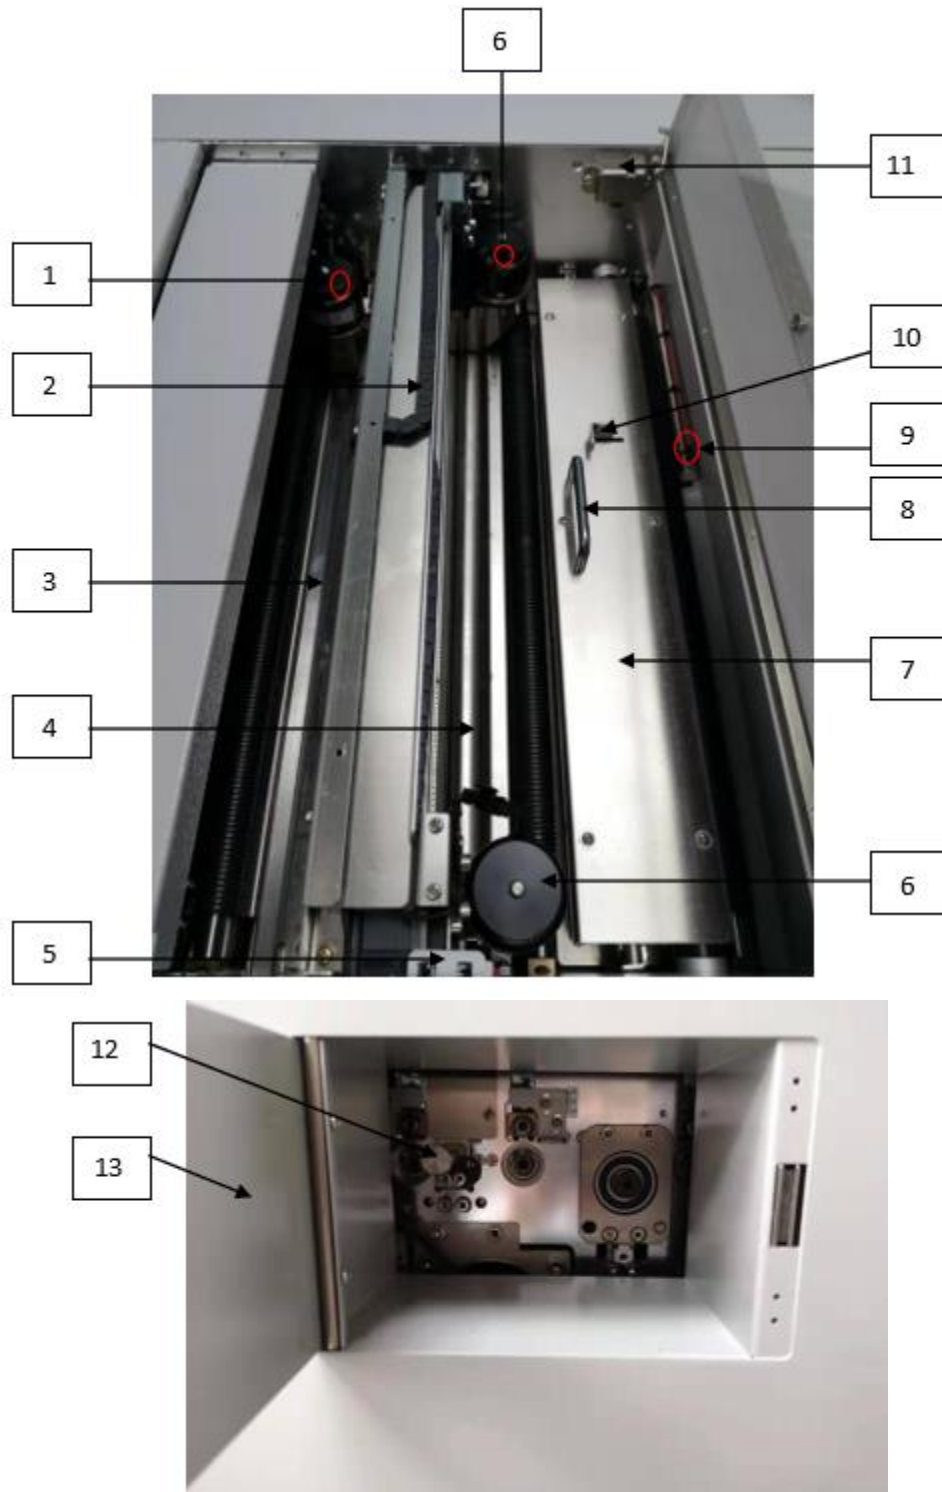


No.	Description	Remarks
1	Cross Partial Perforator	Used to do the cross partial perf line
2	Wire Protecting Chain	Used to protect the wires of perforator
3	Perforating Anvil	Used for partial cross perforator
4	Perforating Anvil	Used for partial linear perforator
5	Home Position Sensor	Used for partial linear perforator
6	Linear Partial Perforator	Used to do the partial linear perf line
7	Barcode/Register Reader Box	The barcode/register reader is located inside
8	Barcode/Register Reader Box Handle	Used to turn the box over
9	Infeed Sensor	Feeding detection
10	Barcode/Register Reader Box Paddle	Unlock the box via push to the right
11	Cover Secure Switch	Switch to detect top cover
12	Handle for Perf Anvil	Used to take out the partial cross perf anvil
13	Side Cover for Perf Anvil	Open the cover to check the anvil

Slitters/Cutter Unit

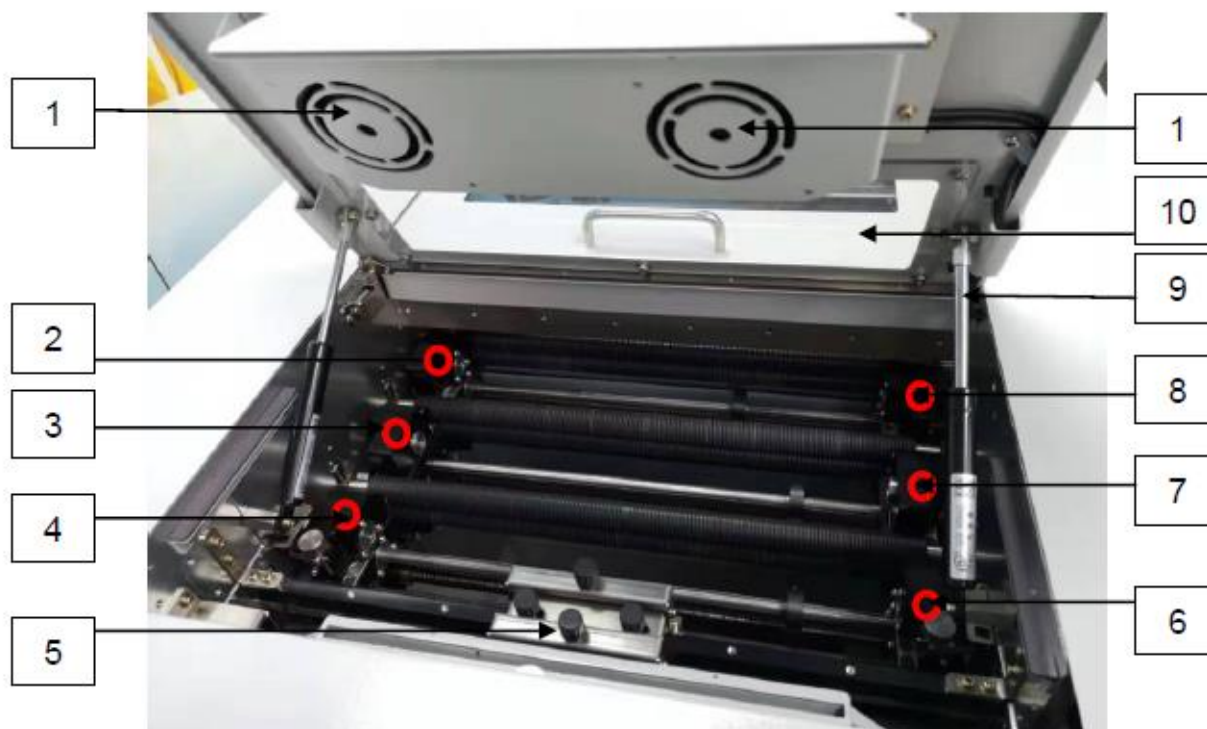


No.	Description	Remarks
1	Blowing Fan	Used to blow the bleed cuts down into waste
2	Slitter #1	Side trim for non-operator side
3	Slitter #2	Middle slitting
4	Slitter #3	Gutter slitting
5	Lag Kit Wheel	Used to add pressure on the rollers and stability near the cutter
6	Slitter #4	Gutter slitter
7	Slitter #5	Middle slitting
8	Slitter #6	Side trim for operator side
9	Gas Spring	Supports the top cover
10	Window	Used to view inside unit

Crease Unit

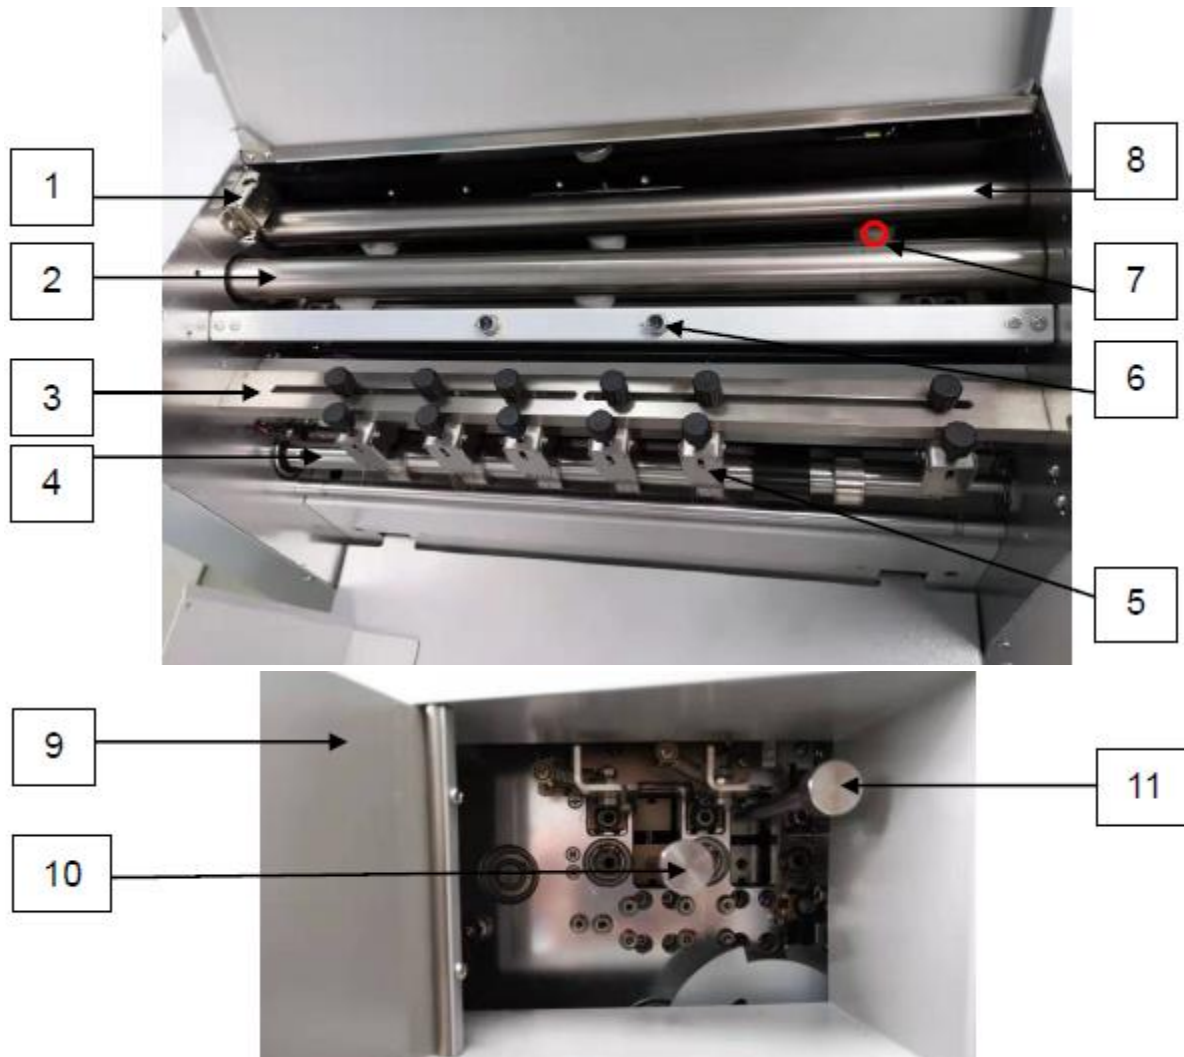

No.	Description	Remarks
1	Top Cover Secure Switch	For the top cover at crease unit
2	Adjust Shaft for Crease Bar #2	For crease bar #2
3	Mounting Bar	For exit rollers and optional tools
4	Exit Fixed Shaft	Mount the anvil for optional tools
5	Exit Rollers	To drive out the paper
6	Plug	For linear partial perforators
7	Depth Adjust Knob	Used to adjust the crease depth (factory adjusted only)
8	Adjust Shaft for Crease Bar #1	For crease bar #1

Exit Conveyor

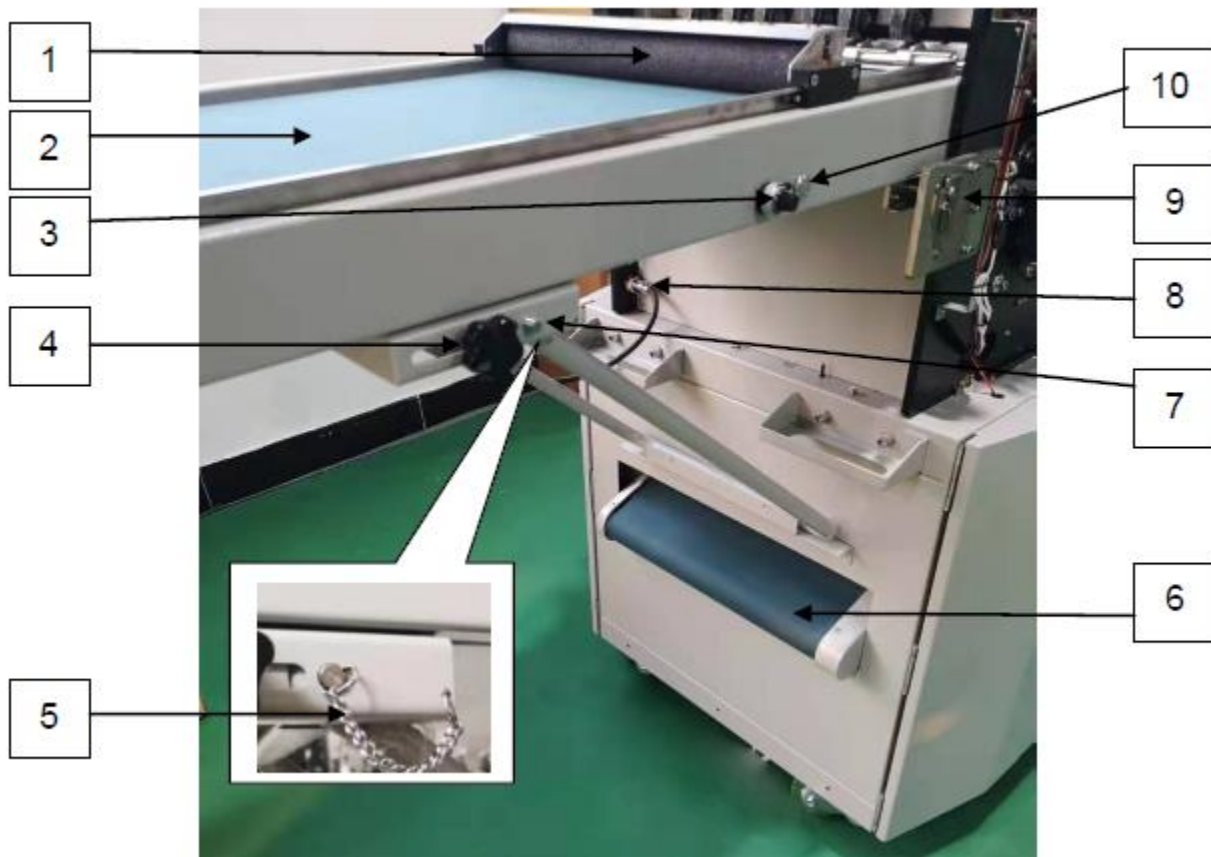


No.	Description	Remarks
1	Foam Roller	Used to drive out and stack the stock
2	Conveyor Belt	Drive the stock
3	Speed Adjust Knob	Adjust speed of the conveyor belt
4	Fixed Screw	Fasten the support shaft
5	Fixed Chain	Used to hang the fixed shaft
6	Waste Discharge Belt	Used to drive the waste out
7	Fixed Shaft	Used to attach the support shaft
8	Conveyor Cable	Connect conveyor to SCC
9	Thumb Screw	Used to fasten shaft to the conveyor
10	Discharge Button	Use to collect all the cards on the conveyor

Installation

Touch Screen Installation



Locate the touch screen packed inside the waste box.
Then install as per the following picture:

1. Plug the cable for the touch screen first. Make sure the cable is connected firmly.
2. Fasten the screws for screen casing.

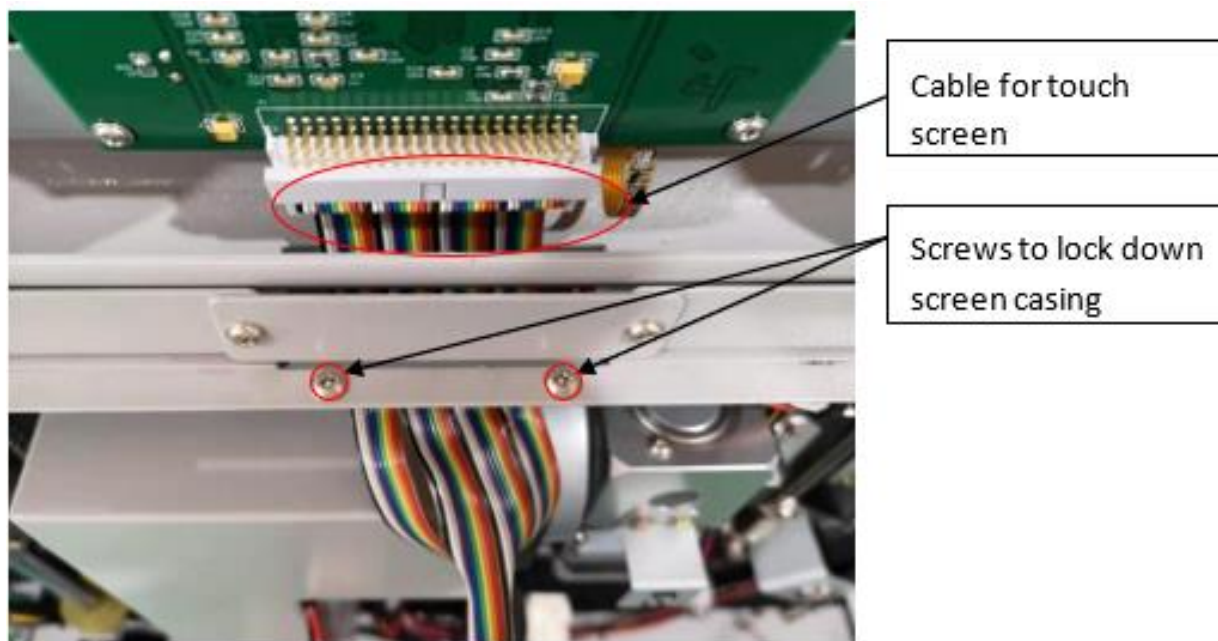

Feeding Table Installation


As shown in the following picture, the feeding extension table ① and ② are fixed together as one piece. The extension table has guide rails on both sides. Pull it out in a straight line, otherwise it could become stuck if pulled askew.

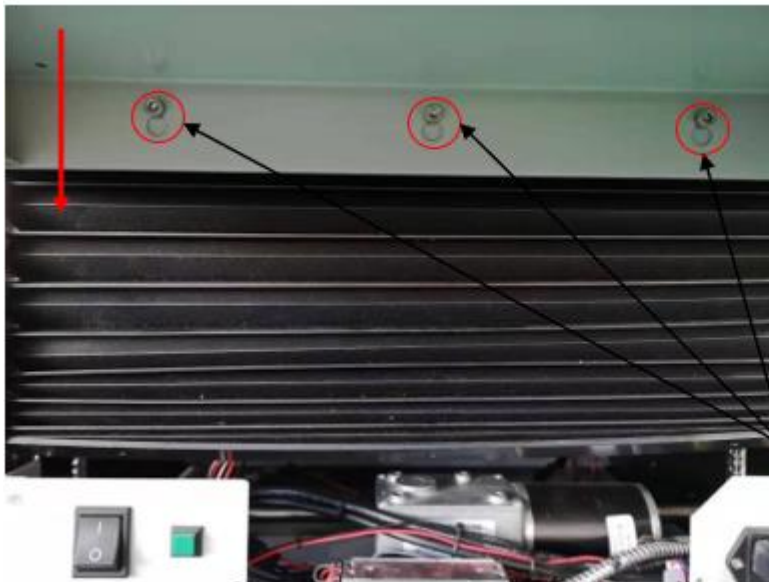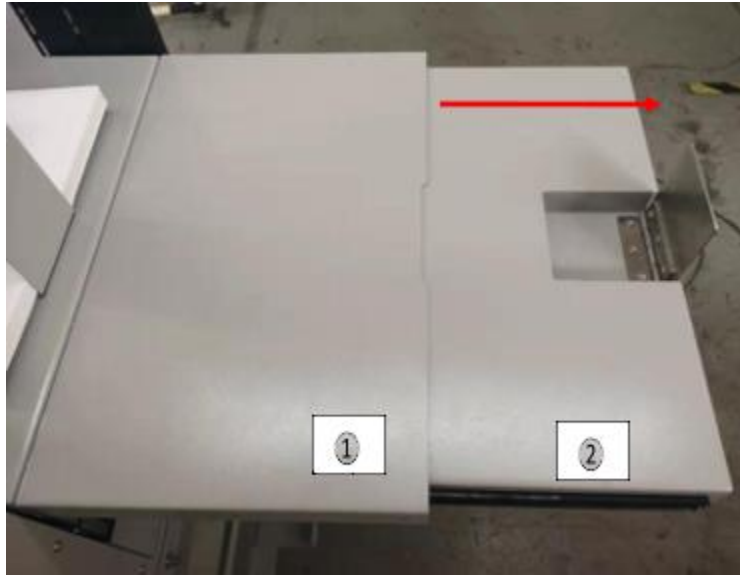


Hang this part to the feeding table by fastening to the three hex screws shown in the picture.

Conveyor Installation


Rotate the U-shaped bracket into position on the shaft. Fasten the screws on both sides as shown in picture ① before hanging the conveyor on the machine.

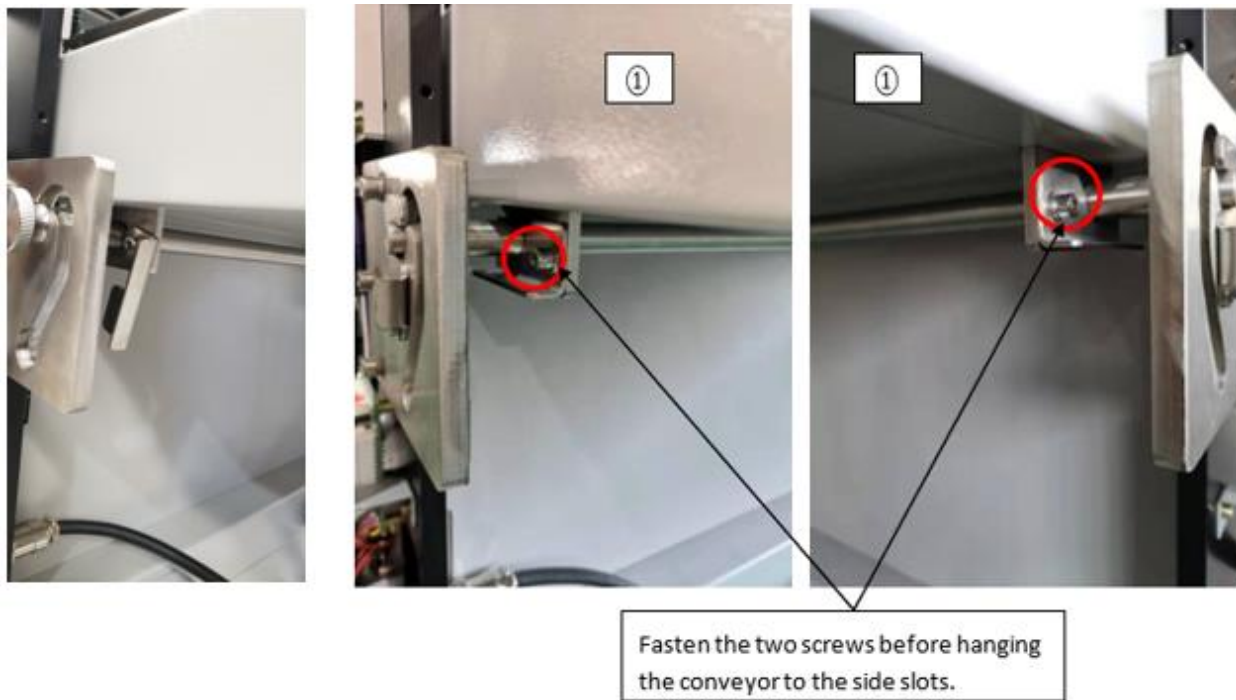

Then put the support shaft to the bottom slot and lock it to the fixed cover. Shown in the following picture.

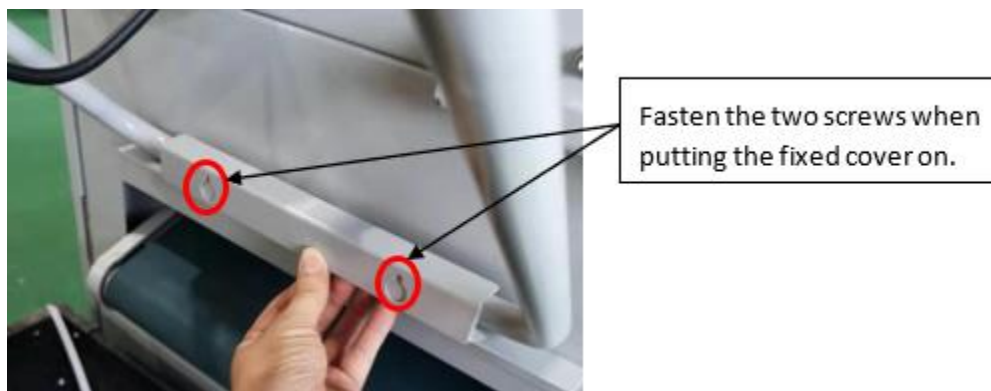


Finally, secure thumb screw to end of shaft on both sides of conveyor place.

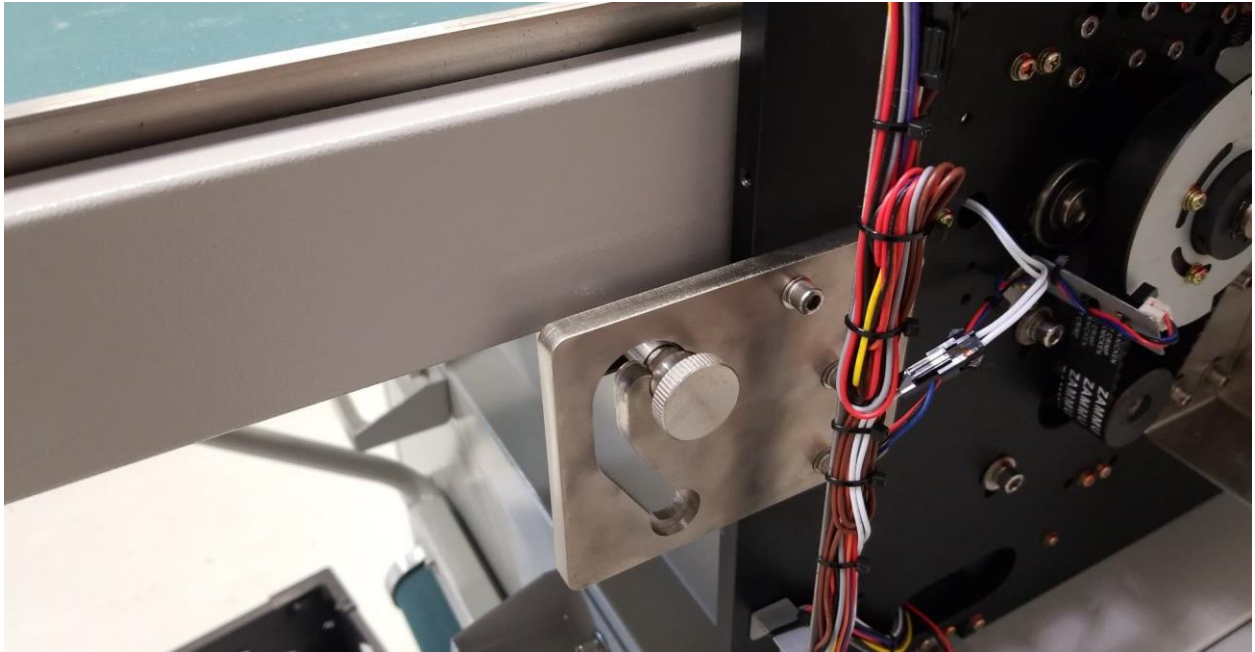

Deflectors and Side Guide Placement


Place the deflectors and side guide as the following picture.

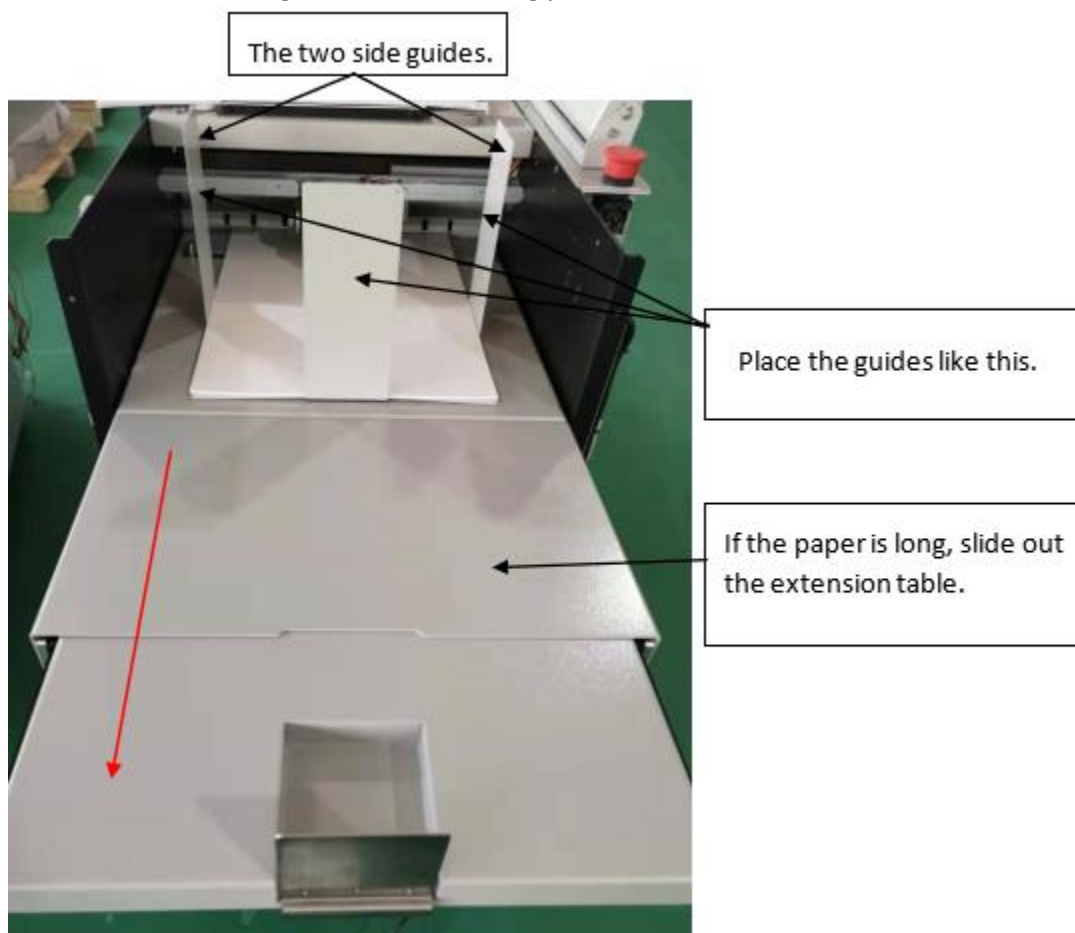

Operation


Welcome Screen

The *Welcome Screen* will appear first after powering on the machine. It displays the basic (software version, serial number) and historical (job count, etc.) information for the unit.

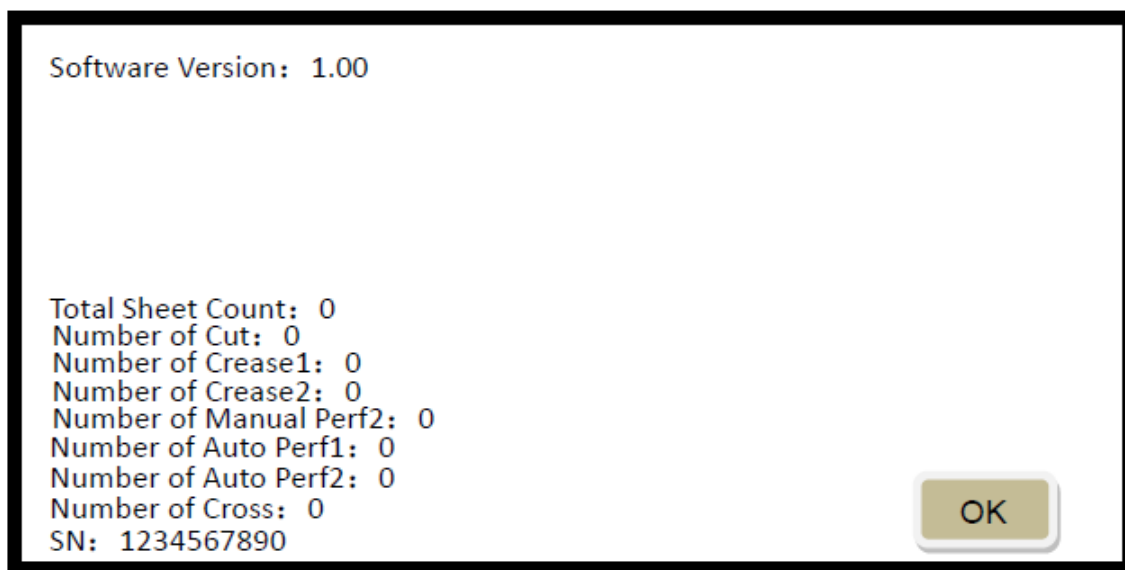

Main Screen


After clicking OK, enter the *Main Screen*.

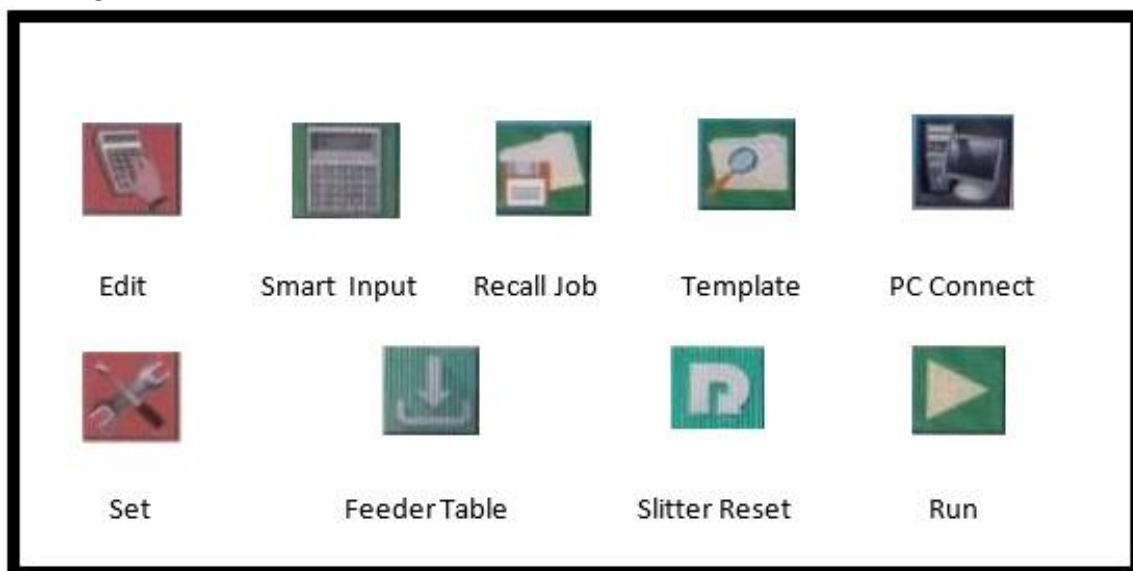

Edit	Set up a job manually or edit last run program
Smart Input	Set up a job efficiently step by step
Recall Job	User saved jobs will be saved under this option
Template	Factory preset jobs
PC Connect	Connect unit to computer (Trimposer software)
Set	Enter the service mode before setting up a new job
Feeder Table	Push the feeder table down. Can also be used to fix elevator error when pressed together with the release button when the feeder table is stuck at the top
Slitter Reset	Used to drive the all the slitters back to home position
Run	Access the last programmed job

How to Start a New Job

Before setting up a new job, enter to the user mode to set the basic parameters first. Click the *Set* option and select *User Mode*.

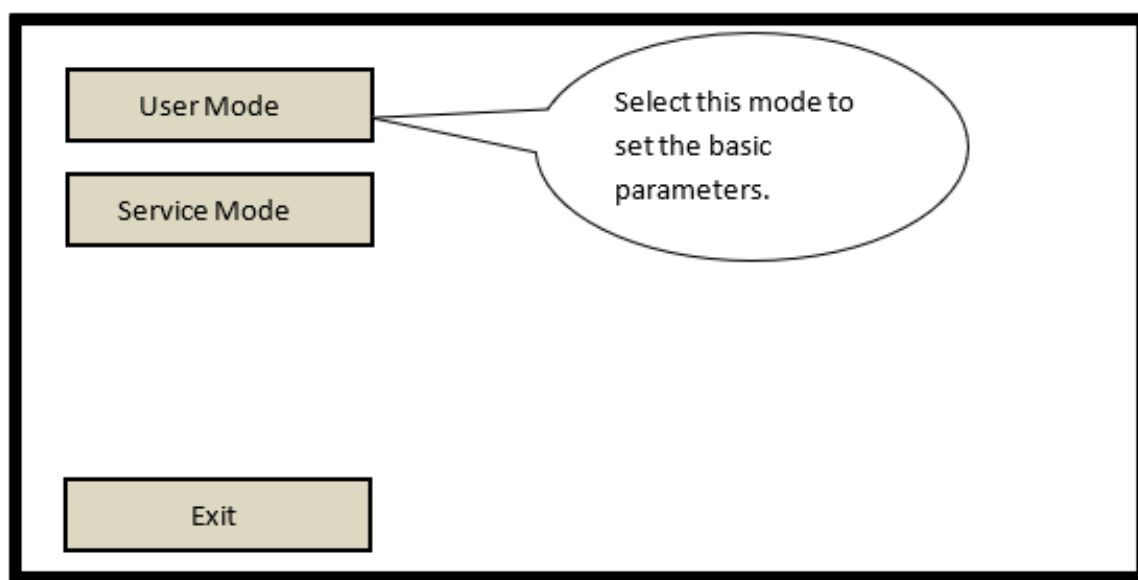

Then we will be able to enter to the following interface:

mm/inch mm Gutter Cut Blower ON


Double Feed Detect ON Feed Auxiliary Info OFF

LCD+ LCD - 80

Exit

mm/inch	Click to select a different unit.
Double Feed Detect	Double feed detector ON or OFF (turn the detector off when running one sheet but keeps showing Double Feed Error.
LCD+/LCD-	Adjust the brightness of touch screen ("LCD+" increasing, "LCD-" decreases).
Gutter Cut Blower	Turn on/off the blowing fans over the cutter. When cutting waste is not going down to the waste bin or has static, turn on the blowers to force it down.
Feed Auxiliary Info	Gives the operator a message to manually move supporting parts out from the home position for running wider or thinner sheets.
Exit	Return to the Main Screen after setting the basic parameters.

Smart Input

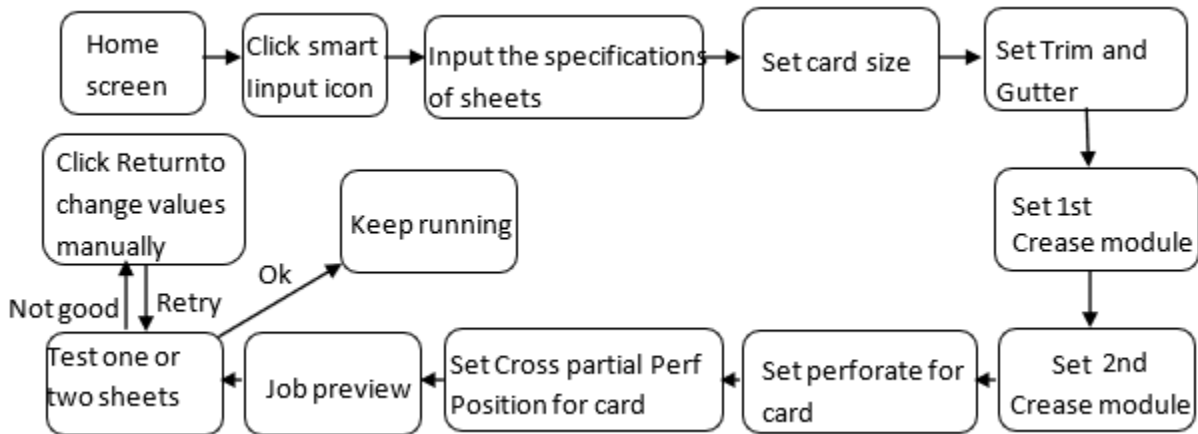

1. Click *Smart Input* icon to enter the following interface. Input the paper details in *Set Paper Size*. CR1 and CR2 Depth are the crease depth. For perforating they depend on the thickness of the paper. Click *Auto* after we input the thickness of paper. It will automatically show the depth recommendation for perf depth. It is practical values. You will be able to obtain a better result by selecting the recommended values.

1.Set paper size

Length:

Width:

Thickness:

CR1 Depth:

CR2 Depth:

Reg slit mark:


Reg cut mark:

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

Auto sizes

As shown in the following picture the **Reg slit mark** is the distance from the top side edge of paper to the top side edge of register mark. The **Reg cut mark** is the distance from the lead edge of paper to the lead edge of register mark.

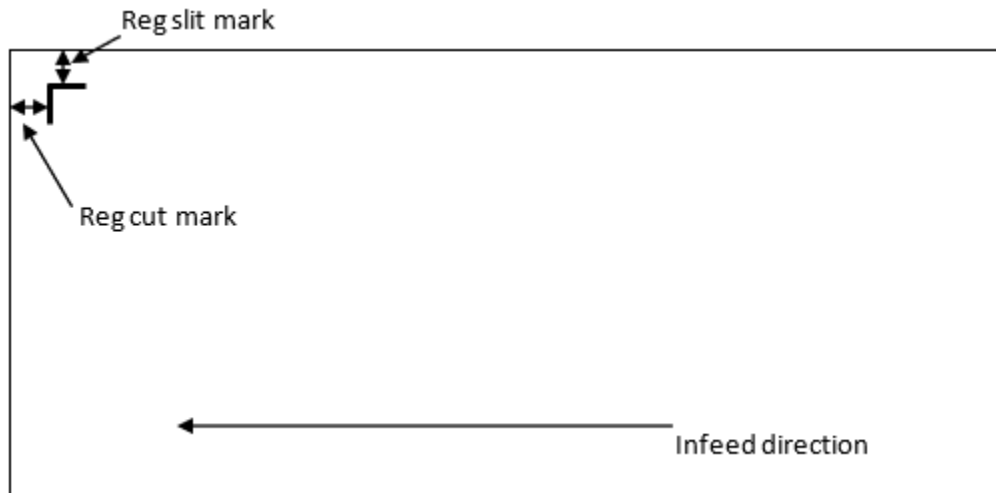

2. Next *Set Card Size*. There are preset sizes of 2", 5.5", 8", 17" for operator convenience.

2.Set card size

Card Length:

Card Width:

Length

Width

Back

Next

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent


2

5.5

8


17

3. Then *Set Trim and Gutter*. It is recommended to have trim and gutter for a normal job. **Please notice that the recommended values may not match the specific templates. You may need to do some calculations to make sure the all the values are in within tolerance.*

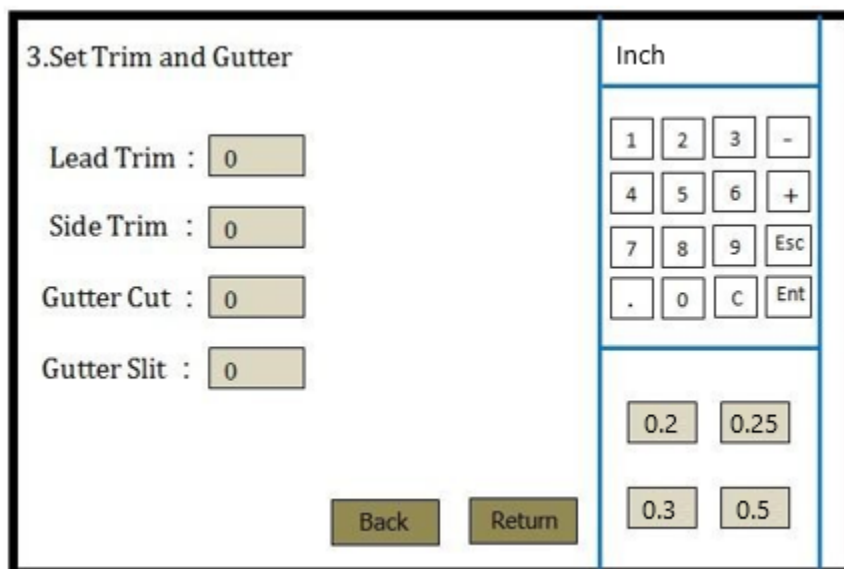

As shown in the above picture, there are four parameters to set up. **It is particularly important to keep these parameters in mind so that our user can set up a successful template.*

Lead Trim	0.125"-0.590"/3.2mm-15mm. <i>It will be automatically chopped up if it was set over 0.590"/15mm.</i>
Side Trim	0.125"- 1.515"/3.2mm-38.5mm. <i>Usually we do not recommend the user to set too large of side trim. Larger trim bleeds will not be able to fall to the waste bin efficiently.</i>
Gutter Cut	0.118"-0.590"/3mm-15mm. <i>Will be automatically chopped up if it is set over 0.590"/15mm.</i>
Gutter Slit	0 or 0.196"-0.590"/5mm-15mm.
Trail Margin	0.196"-0.590"/5mm-15mm.

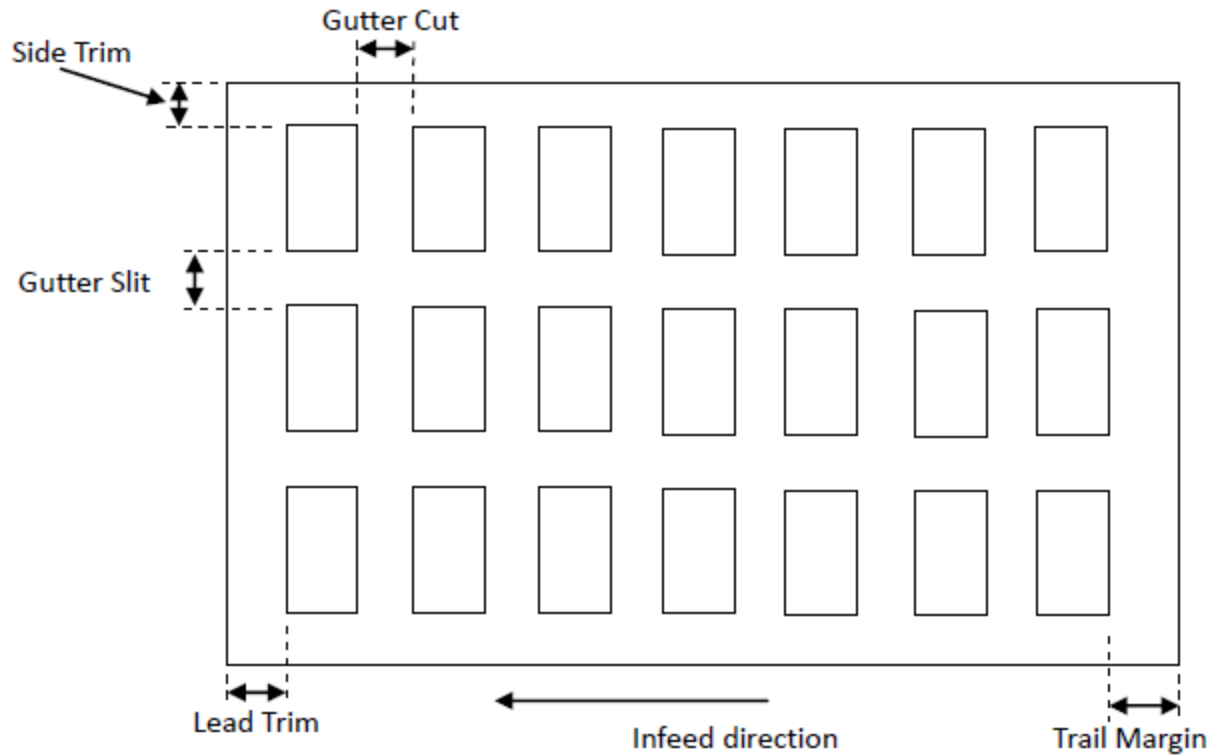

4. After that you can set the crease line by using 1st crease bar-tool if needed.

4.Set 1st Crease module

1
2
3
4

Back Next

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

5. You can also use the 2nd crease bar-tool to do the crease job. Typically, it is recommended to just set the crease job on 1st crease bar-tool.

5.Set 2nd Crease module

1

2

3

4

Back Next

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent



6. Then you can set the linear automatic partial perforator data. PST is the position from the side edge. You can set two partial perf lines on one card. If the card is longer, the user can set more lines.

6.Set perforate for Card

1

2

PST :

Back Next

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

**Please notice that our user only needs to input the data for linear automatic partial Perforator1. Perforator2 will calculate the data for itself automatically.*

- Next, set the cross partial perforator. First input the position for the perf line. It is calculated from the card's lead. In this picture you can set two cross partial perf lines on one card. But it depends on the card width.

7-1.Set Cross Partial Perf Position for card

1

0

...

2

0

...

Back

Next

mm

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

And then click  to enter the following interface. It is used to set the start and end of the partial perf lines.

7-2.Set Cross Partial Perf Position for card

1

0

0

2

0


0

Return


Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

Manual Input

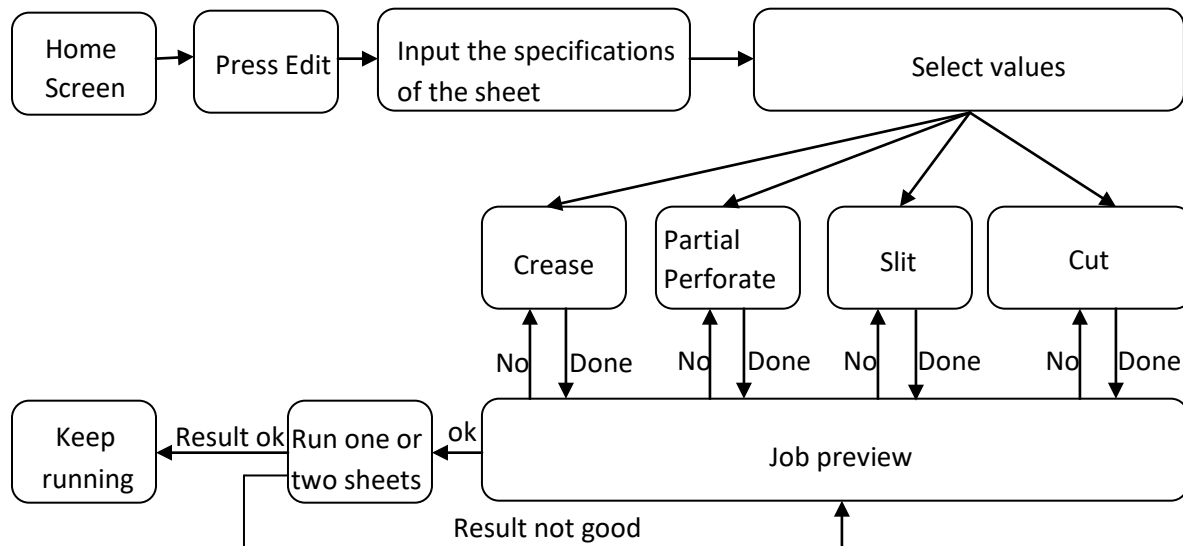

Click *Edit* to enter the *Manual Input* interface.

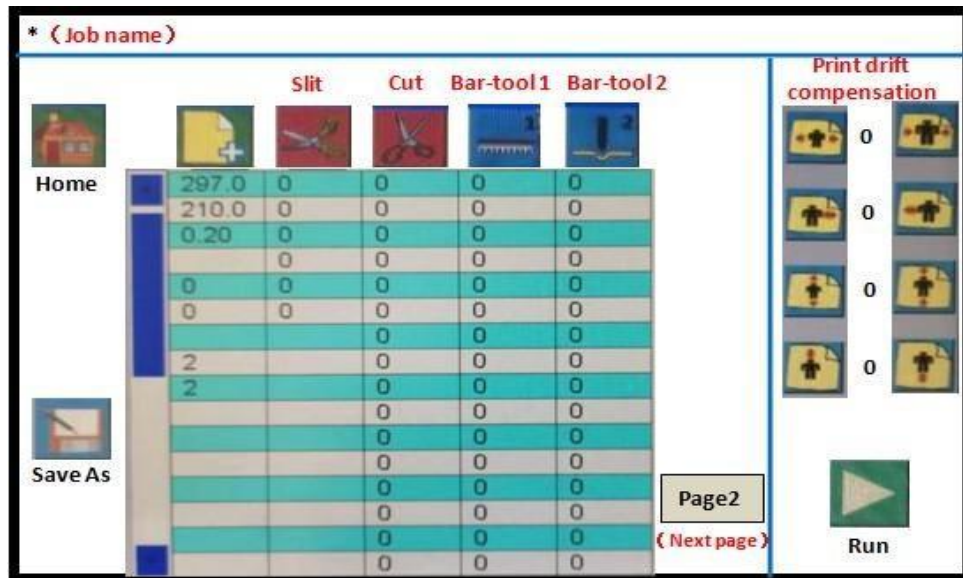



Click *Set Paper Size* icon to enter the interface. You can change the length and thickness of sheets, position of register mark and so on under this interface.

1.Set paper size

Length:

Width:

Thickness:

CR1 Depth:

CR2 Depth:

Reg slit mark:

Reg cut mark:

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent



trim

Click *Set Slit Data* icon to set the slitting values. There are 6 slitters. It does not mean we need to set a value for every slit. Slitter 1 is used for non-op side trim. Slitter 6 is used for op side

Set slit data

Home
 Return

1

2

3

4

5

6

Inch

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent



Click **Set Cut Data** icon to set or change the cutting values. It can set 32 cuts in total. Click **Next** to enter the next page.

Set cut data

 Home
  Return

1	0	7	0	13	0
2	0	8	0	14	0
3	0	9	0	15	0
4	0	10	0	16	0
5	0	11	0		
6	0	12	0		

Next

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent



These icons are used to input or change the crease/perf values. The machine has two cross bar-tool stations: *Crease1* and *Crease2*. When the operator inserts the cross perf bar, the icon will show the comb icon (as shown in image 1). If the operator inserts a cross crease bar, it will be shown like image 2.

Set crease1 data

 Home
  Return

1	0	7	0	13	0
2	0	8	0	14	0
3	0	9	0	15	0
4	0	10	0	16	0
5	0	11	0		
6	0	12	0		

Next

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

Set crease2 data

 Home
  Return

1	0	7	0	13	0
2	0	8	0	14	0
3	0	9	0	15	0
4	0	10	0	16	0
5	0	11	0		
6	0	12	0		

Next

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

Click **Page 2** to enter the next page.

* (Job name)

 Home
  Slit
  Cut
  Bar-tool1
  Bar-tool2

11.692	0	0	0	0
8.260	0	0	0	0
0.007	0	0	0	0
0	0	0	0	0
0	0	0	0	0
2	0	0	0	0
2	0	0	0	0
	0	0	0	0
	0	0	0	0
	0	0	0	0
	0	0	0	0
	0	0	0	0
	0	0	0	0

Save As

Page2
(Next page)

Print drift compensation

0	0
0	0
0	0
0	0

Run

You can set the values of the partial tools as shown in the following picture.

The screenshot shows a software interface with a table of tool values and a 'Print drift compensation' section. The table has 10 rows and 5 columns. The first row contains values 0.787, 1.968, 0, 0, 0. The second row contains 2.362, 3.937, 0, 0, 0. The third row contains 3.149, 0, 0, 0, 0. The fourth row contains 5.118, 0, 0, 0, 0. The remaining rows contain 0. The 'Print drift compensation' section on the right has a vertical list of icons, each with a '0' next to it, and a 'Run' button at the bottom.




This icon is for the *Partial Perf Tool1* in the perf unit. Click the icon to set the values as shown in the following image.

The screenshot shows a dialog box titled 'Set linear partial perf1 data'. It has a 'Position' field set to 25.0. There are two columns of input fields, numbered 1 through 8. The first column has fields for 'ON' and 'OFF' values. The second column has fields for '0' values. The third column has fields for '0' values. The 'ON' field for position 1 is set to 0.787, and the 'OFF' field for position 1 is set to 1.181. The 'Next' button is at the bottom right. There is a numeric keypad on the right side of the dialog box.

Pressing “=AP1”, etc. will copy the parameters from that strike head.

=AP1	Changes the current input to equal the linear partial perf1 data. "AP" is the auto position strike head.
=AP2	Changes the current input to equal the linear partial perf2 data. "AP" is the auto position strike head.
=MP1	Changes the current input to equal manually moved partial perf1 data. "MP" is the manual position strike head.
=MP2	Changes the current input to equal manually moved partial perf2 data. "MP" is the manual position strike head.
Position	Means the distance from the side edge of paper to the perf line. For example, you want to set a perf line on the first card. The position is 0.984"/25mm away from the side edge. The perf line starts from 0.787"/20mm to 1.181"/30mm. The length of the perf line is 0.393"/10mm. The perf tool will be automatically driven to the position.

To set a partial perf job, at the feeding end we need to set the side position first and then set the start and the end of the perf line. Shown in the following picture.

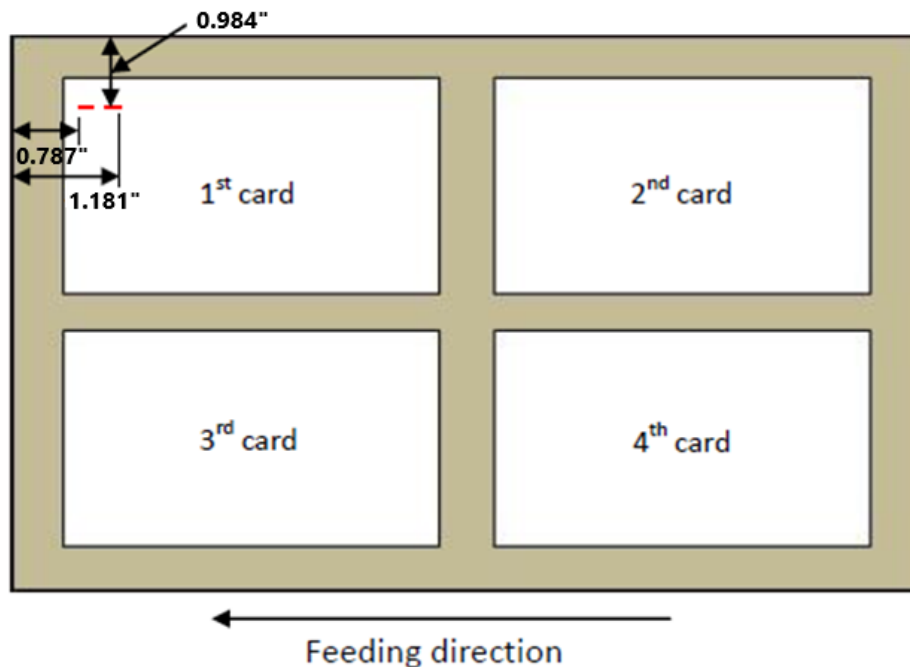



This icon is for the *Partial Perf Tool2* in the perf unit.

Set linear partial perf2 data

Home Return Position : 5.905


1	1.968	4	0	7	0
	3.149		0		0
2	0	5	0	8	0
	0		0		0
3	0	6	0		
	0		0		

Next

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

=AP1 =AP2

=MP1 =MP2

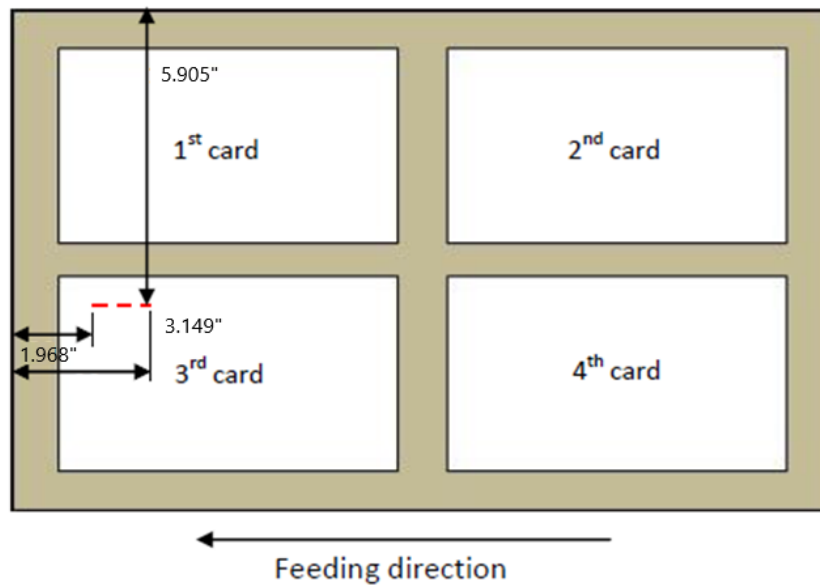



This icon is for the manually moved horizontal *Partial Perf Tool1*. As shown in the following picture, because we need to move the tool manually to the position there is no value needed to be input. However, we need to input the start and the end of the perf line.

If we select “=AP1”, it will copy the data of linear *partial perf1* to the *perforate2*. The same as the other features.

Set perforate1 data

Home

Return

1

0

0

4

0

0

7

0

0

2

0

0

5

0

0

8

0

0

3

0

0

6

0

0

Next

1

2

3

-

4

5

6

+

7

8

9

Esc

.

0

C

Ent

=AP1

=AP2

=MP1

=MP2



This icon is for the manually moved horizontal *partial perf tool2*. It is set in the same technique as the data as the *perforate1*.

Set perforate2 data

Home

Return

1

0

0

4

0

0

7

0

0

2

0

0

5

0

0

8

0

0

3

0

0

6

0

0

Next

1

2

3

-

4

5

6

+

7

8

9

Esc

.

0

C

Ent

=AP1

=AP2

=MP1

=MP2



This icon is for the *cross partial perf* tool. First enter the position of the cross partial perf line. For example, 1.968"/50mm for the first cross partial perf line and 3.937"/100mm for the second cross partial perf line.

Set cross partial perf position

Home Return

1	1.968	1	...	9	0	...
2	3.937	1	...	10	0	...
3	0		...	11	0	...
4	0		...	12	0	...
5	0		...	13	0	...
6	0		...	14	0	...
7	0		...	15	0	...
8	0		...	16	0	...

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent

Then set the first cross partial perf line from 2.362"/60mm to 3.149"/80mm.

Set cross partial perf data


Return

1	2.362	4	0	7	0
	3.149		0		0
2	0	5	0	8	0
	0		0		0
3	0	6	0		
	0		0		

1	2	3	-
4	5	6	+
7	8	9	Esc
.	0	C	Ent


= C1

In conclusion, we need to set the position first before we set the start and the end of the partial perf line. The result is as follows:

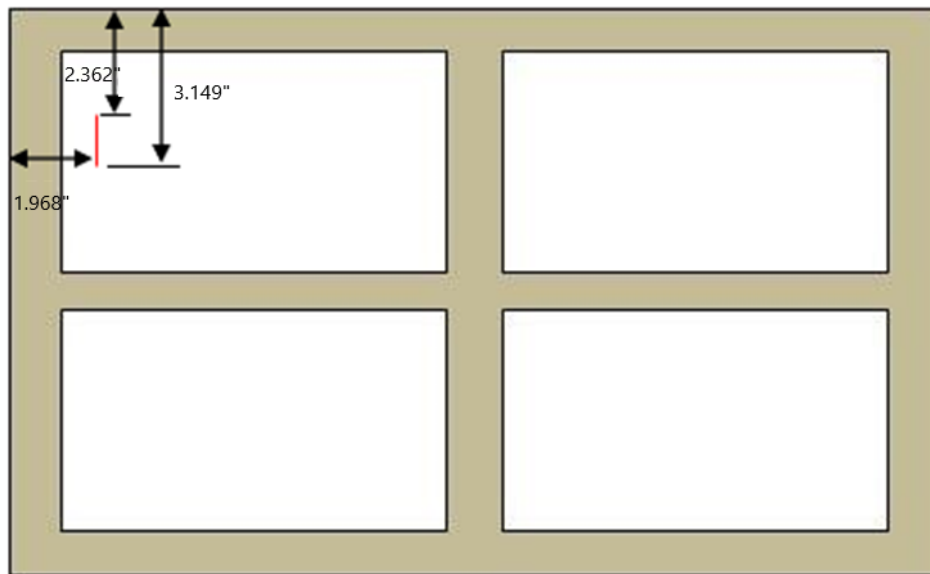

Limit for Tail Cut (Trail Margin)

A risk of jam near the cutter will occur if templates with a longer tail over 0.590"/15mm are used. The SCC will **NOT** chop up the tail if it is over 0.590"/15mm and will not accept a template with multi-cuts on tail. This is especially important.

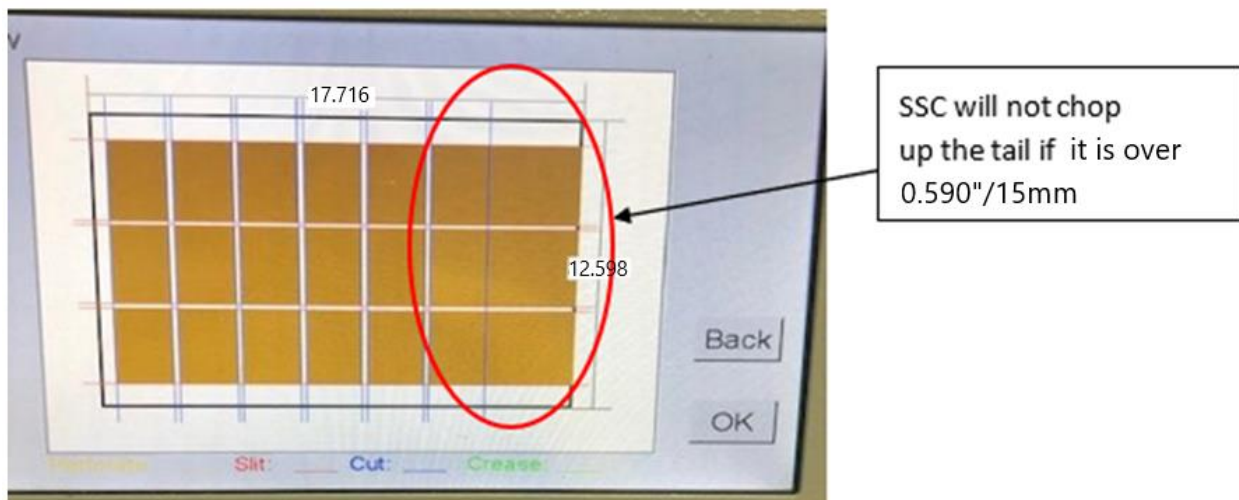

The following are examples to help decrease the confusion when making new templates.

Example 1:

Sheet size: 125.598"/320mm (Width) * 17.716"/450mm (Length)

Lead trim: 0.590"/15 mm

Gutter cut: 0.196"/5mm

Product length: 2.125"/54mm

We use *Smart Input* to make this template. It will be all normal until we input the lead trim and gutter cut. If we set the lead trim to 0.590"/15 mm and gutter cut to 0.196"/5mm, it will look like the preview template Fig.4. It looks abnormal.

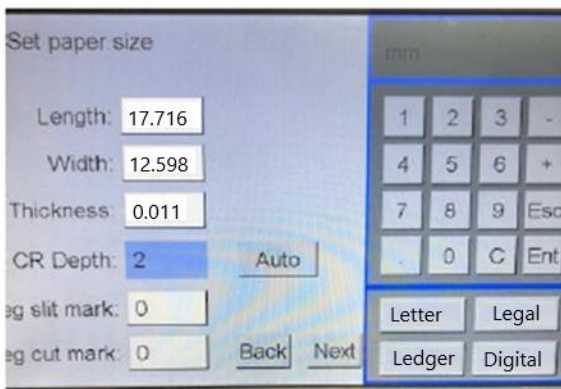


Fig.1



Fig.2

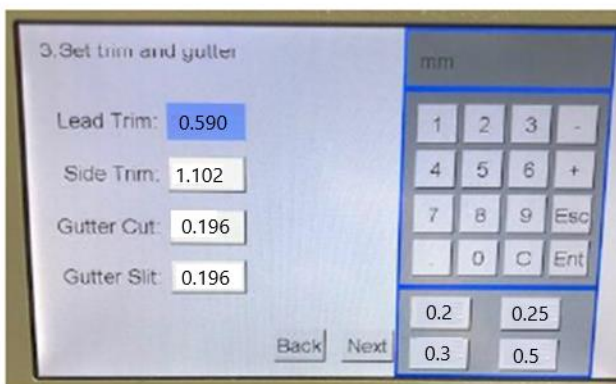


Fig.3

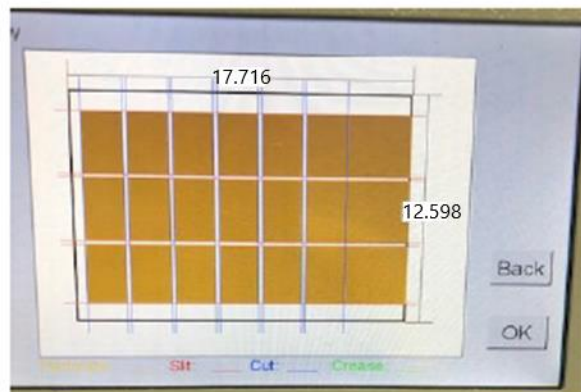


Fig.4


Important features

Register Mark


Register mark is used for the compensation of the cutting and slitting accuracy. Because the register mark is printed together with the customer's content, both the mark and the image will shift together. It will help the cutter and the slitter to cut and slit at the correct position.

Register Mark Specifications

The size of the register mark is shown in the following picture.

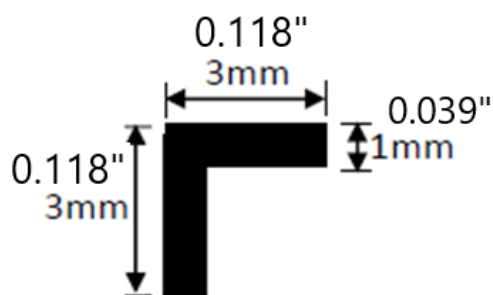


The position of the register mark is shown in the following picture. The distance from both edges is from 0.118"-0.787"/3-20mm.

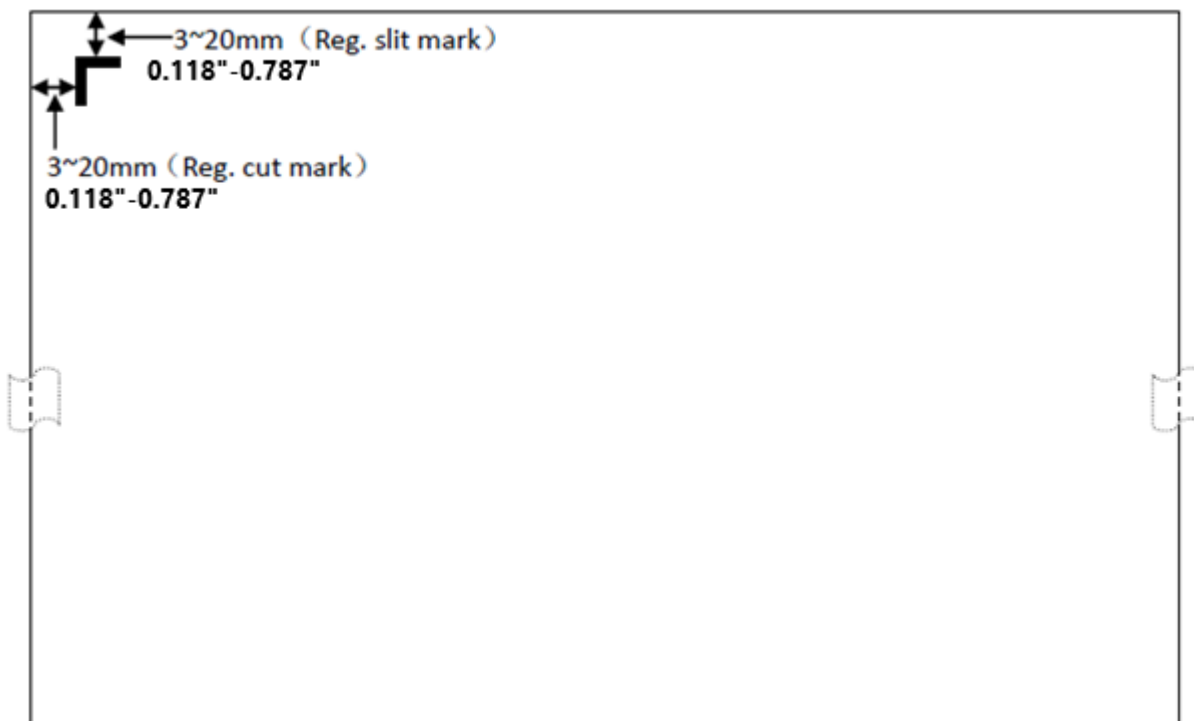


How to Activate the Register Mark

After printing the register mark correctly on the sheet, input the **Reg. Slit Mark** and the **Reg. Cut Mark** values first.

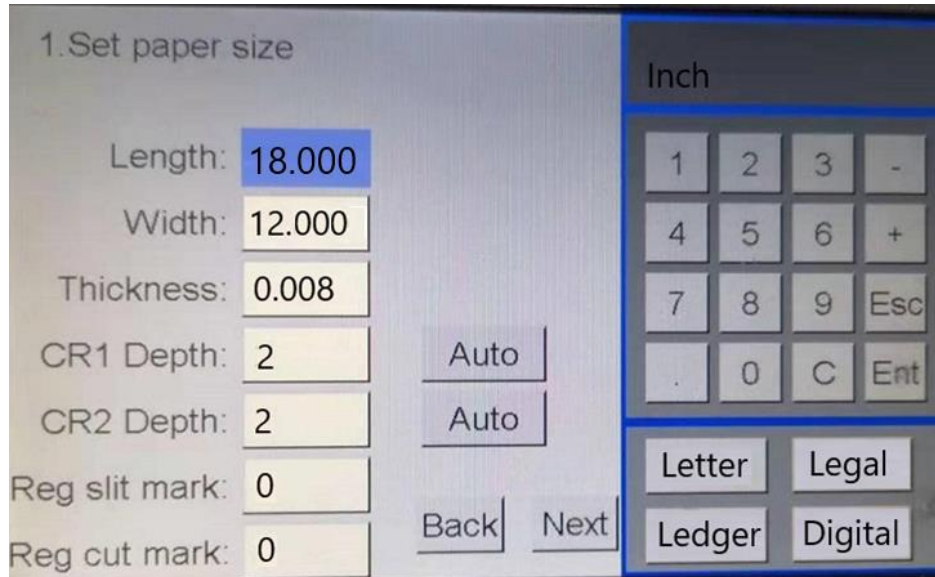


Then go to the standby interface to select the **REG Mark** icon. If it is activated successfully, a “v” will appear on the icon. If not, check whether the **Reg. Slit Mark** and **Reg. Cut Mark** values are already input.

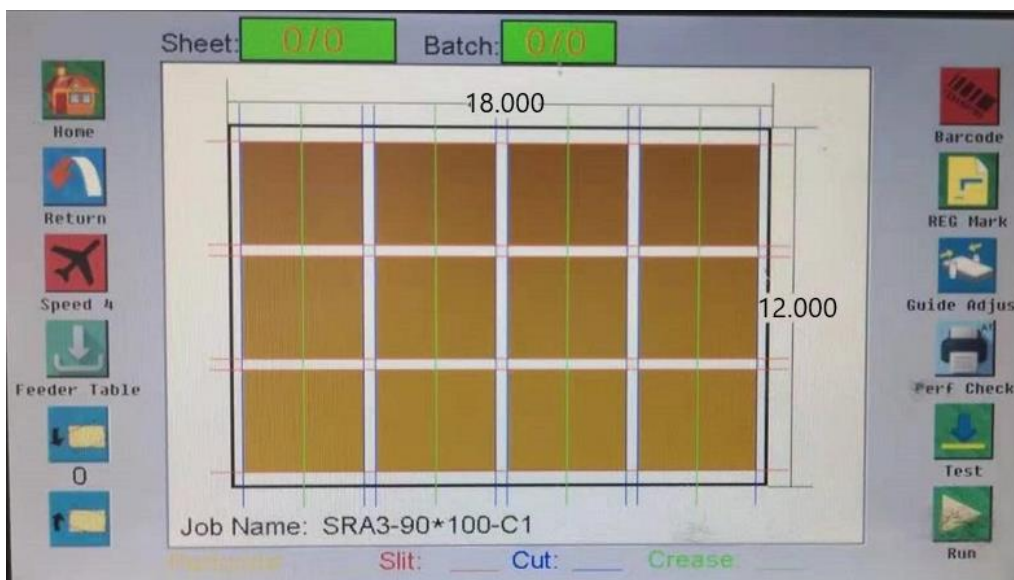

Barcode Reader

Barcode Specifications

As shown in the following picture, the width and the length should be within a certain scale. Please notice that the Barcode detector may fail to read the barcode if it is shrunk or stretched.

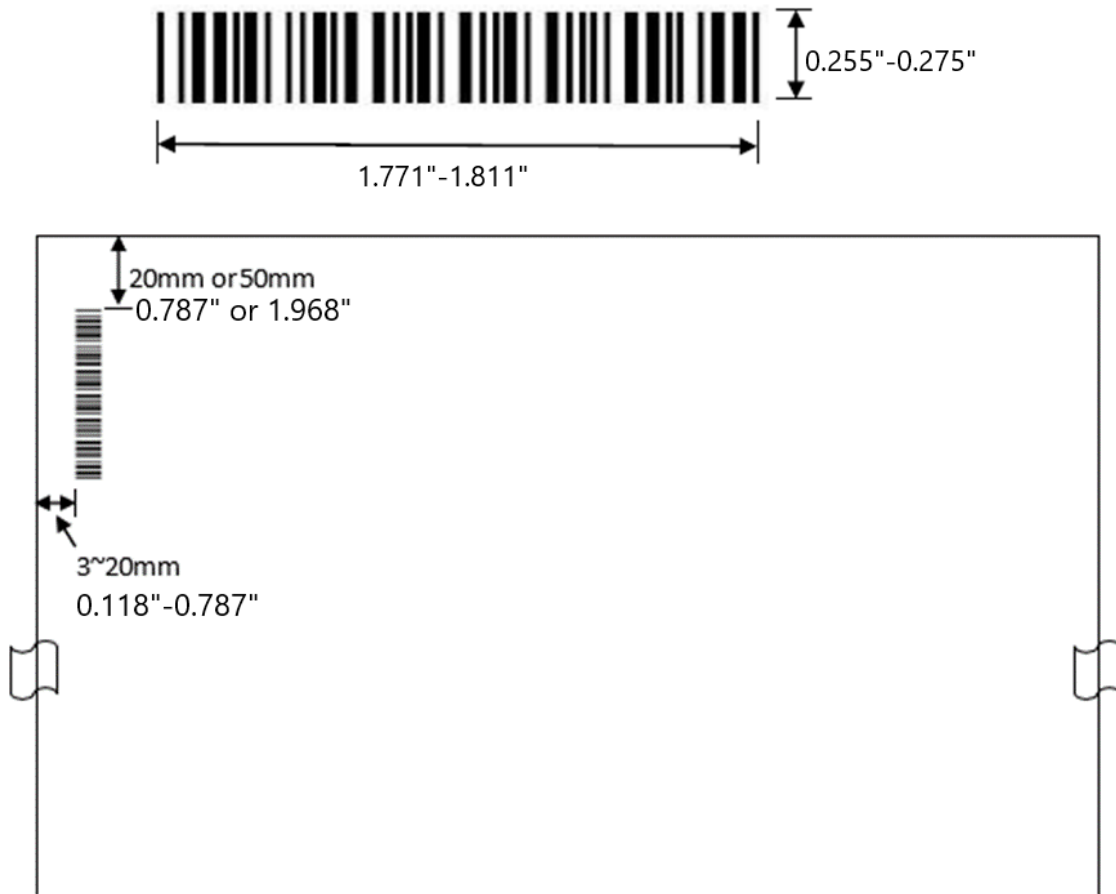

How to Generate the Barcode

- The barcode is generated by Code39. It is a standard for barcodes. Code 39 is one of the protocols that define symbols as barcodes. The definitions are as following:

- Each code consists of 9 bars, 5 in black, 4 in blank (white).
- In 9 bars, only 3 are wide, others are narrow.



- Left drawing is an example of a barcode. 9 bars are coded from 1-9.
- There are 5 black bars (Nr. 1 3 5 7 9), 4 blank bars (Nr. 2 4 6 8).
- 3 bars (Nr. 2, 5, 7) are wide and other 6 are narrow.
- If this bar is read, system will take it as star symbol “*”
- In Graphic Whizard barcode, the wide bar is 1mm wide, the narrow is 0.5mm wide.

How to a Create Barcode

Barcodes can be input by keyboard. The user should install a *True Type Font of Code 39*.

Step1: Access <https://www.barcodesinc.com/free-barcode-font/> or type Code 39 in an online search engine and download the free font file.

Step 2: Click *START* on windows, enter *CONTROL PANEL*, copy the **.ttf** file to the Font folder. The font will be installed automatically.

Step 3: When you are using software like Word, Excel, Photoshop, Adobe etc. you will find Code 39 in the font menu. After this font is chosen, when you are click a key, for example say “5”, there will be a barcode showing rather than a “5”.

In Graphic Whizard barcode, wide bar is 1mm (0.039”) wide, narrow is 0.5mm (0.019”) wide. The width will be exact if you choose 21 font size. *Example:* 

Step 4: When you are making the layout with any software, remember to edit the barcode on the specified area. Fox example, if this layout is for program number 152, and there are 50 sheets total, choose code 39 font. Then input ***15250***. The barcode  will show on the layout rather than the figure string ***15250***.




Run A Job with Barcode Activated


1. Set up a new template in the machine.
2. Create the barcode with the same number.
 - For example, the template number is 165. Then the barcode should be **“*165xx*”**. Please notice that the template name is different from the template number. The template number is automatically given by the machine. It can be from 165 to 225. You can use *Trimposer* create a barcode job in a much faster way. If we print the template generated by Trimposer, the barcode or register mark will be automatically generated.
3. Then go to the standby interface to click the barcode icon. The barcode has been already activated successfully after the icon shows a “V” on it.

Important Tips for Register Mark and Barcode


1. The barcode mark cannot be placed over the center line of the paper width. For example, if the paper width is 8.5"/210mm, the barcode should not be out of the range of 4"/105mm from the side. If it is over the center line of width, the reader will not be able to detect the barcode.

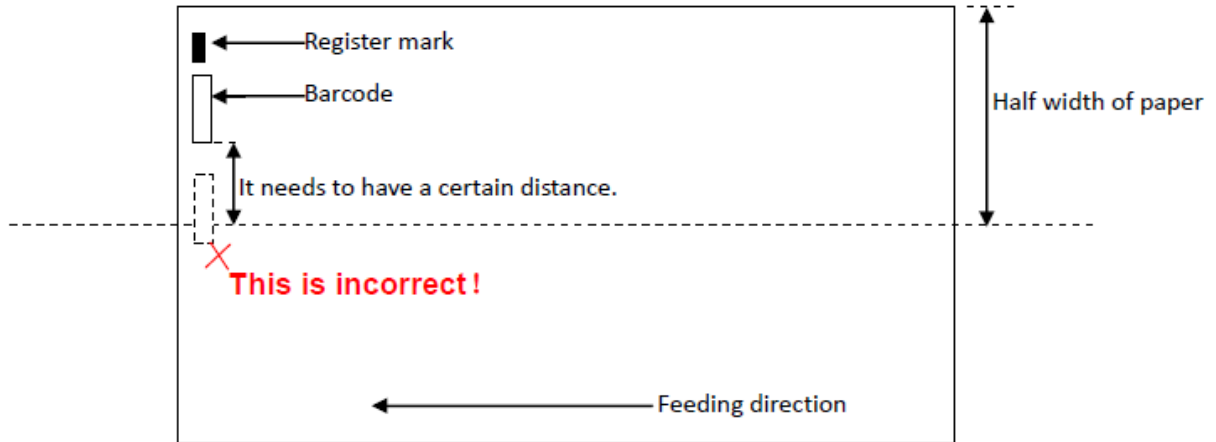

2. When the register mark and barcode are used at the same time, the barcode should be at 2"/50mm or greater than 2"/50mm from the side edge.

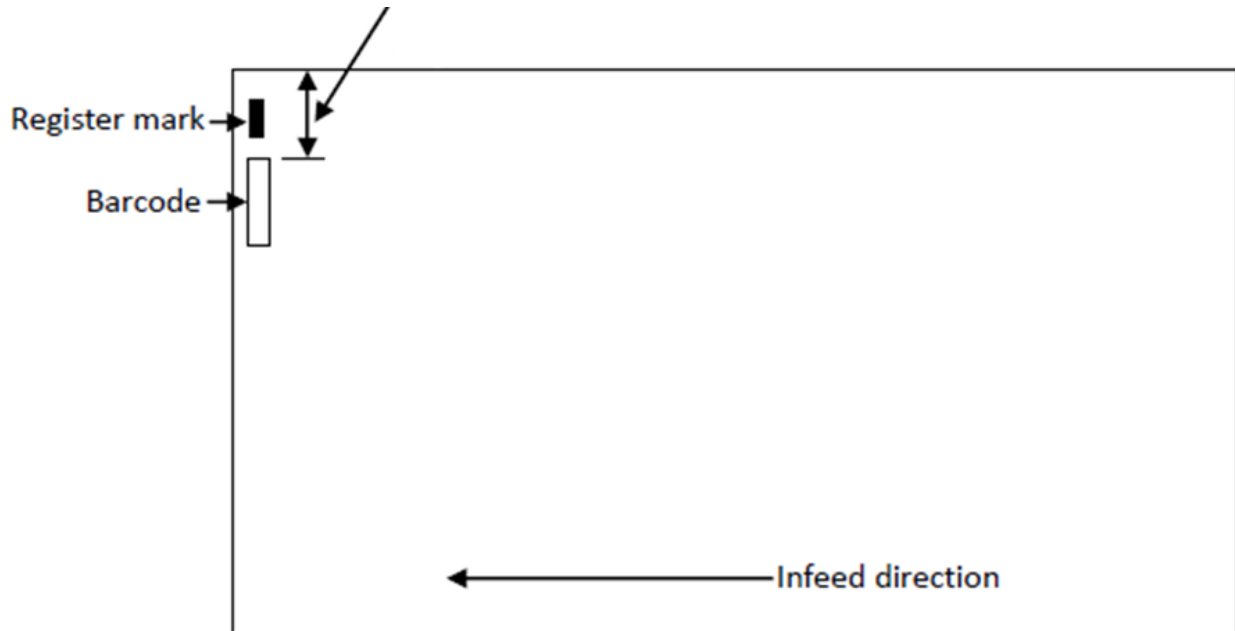

3. When only the barcode is used, it should be at 1"/25mm or larger than 1"/25mm from the side edge.

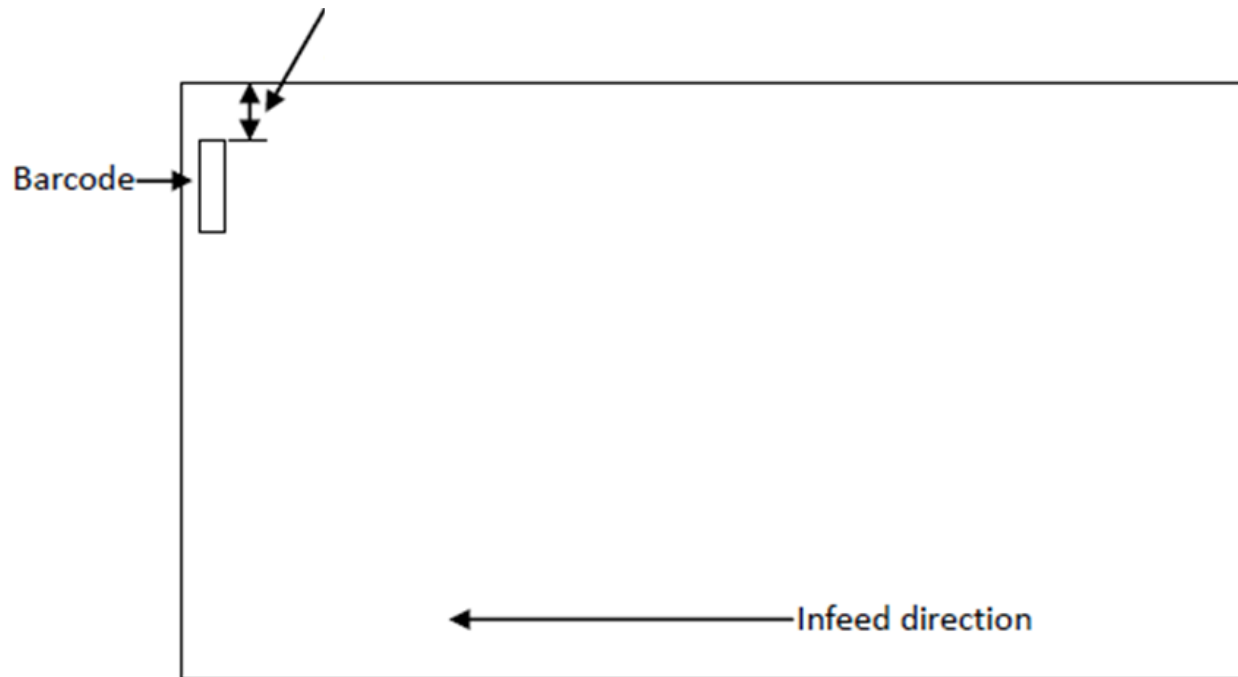

4. The register mark and barcode reader may fail to read correctly in the following situations:
- The lead of paper curls too much.
 - The register mark and barcode are not printed on white color sheet.
 - There are black spots existing on the register mark and barcode area.
5. When the barcode and register mark are used at the same time the operating speed will decrease.

Optional Tools

Cross Tools

There are two types of removable cross bar tools: crease tool and perforation tool. To make the sliding the tool easy, install the handle on the bar.

Crease Tool

Standard: 1.0mm

Optional: 0.6mm

1.2mm

1.4mm



Perforation Tool

Optional: 8 TPI

12 TPI

24TPI



Linear Tools




Slitter

Perforator

Kiss cutter


Scorer

There are 4 kinds of linear optional blades, **Scorer**, **Perforator**, **Kiss Cutter** and **Slitter**. Each tool consists of a removable blade and an anvil.

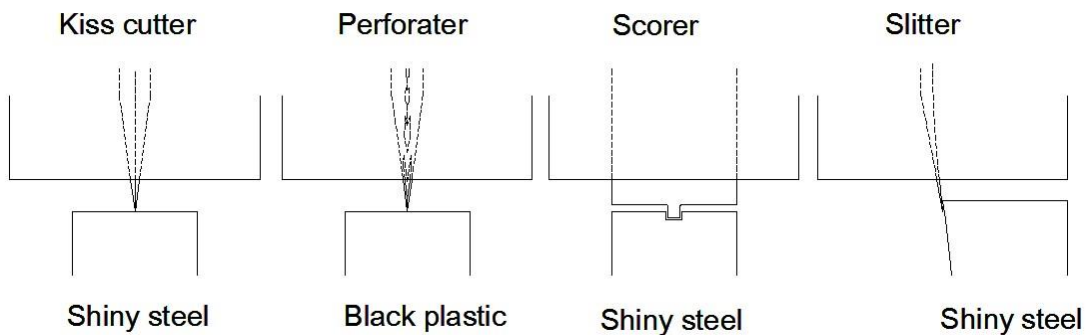


Strike Perforator

There are two optional strike perf tools located on the exit of the unit for partial perforating (circled). These tools need to be set manually in the cross direction.

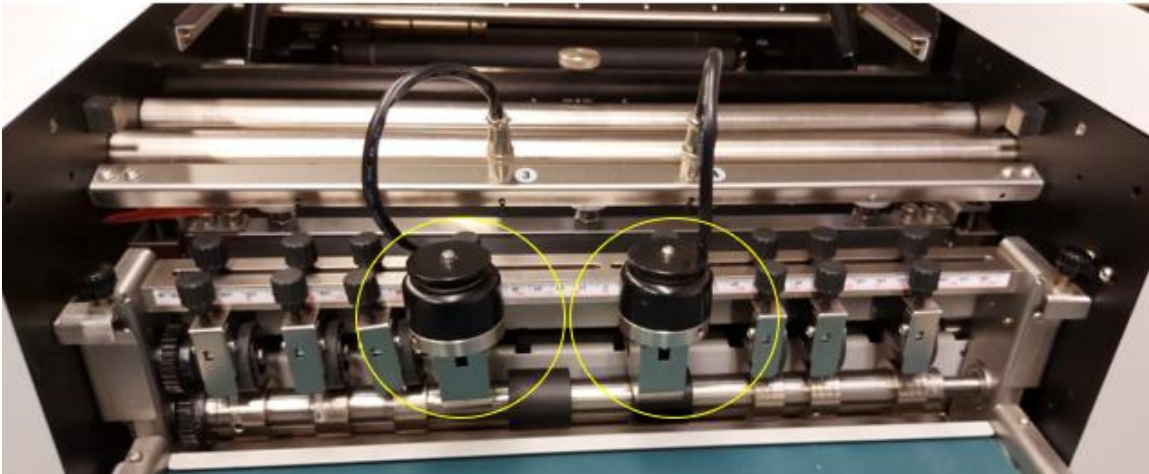

NOTE: There are two other auto-adjusted strike perf tools located in the first chamber after the feed table (circled).

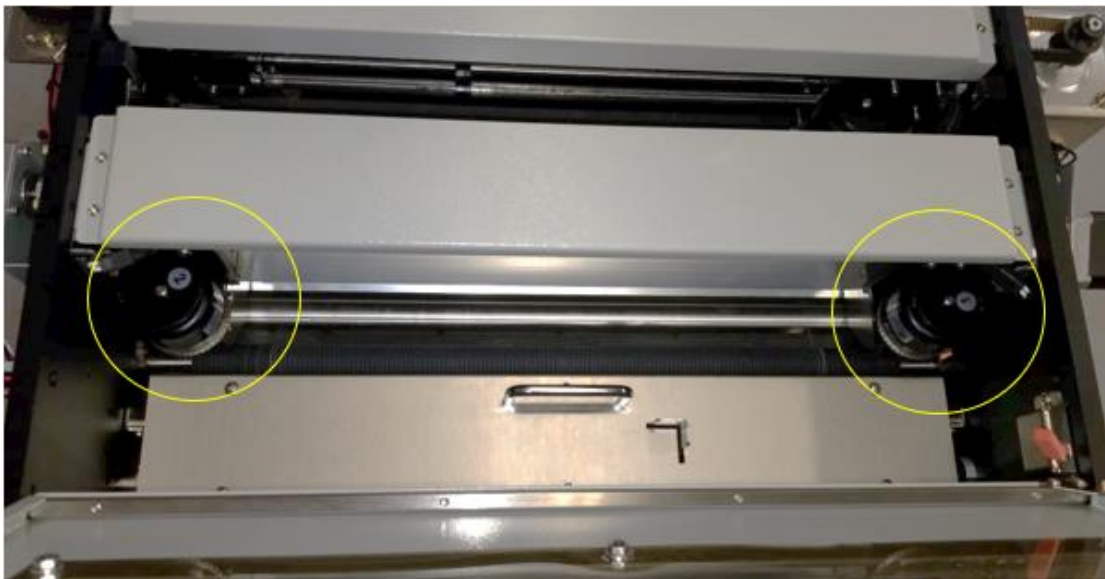

The optional strike perf has 2 set screws for securing the solenoid head to the assembly. When making depth adjustments, the entire solenoid head rotates.



To adjust the perf depth, complete the following:



1. Disconnect the cable and remove the strike perf assembly from the SCC to access both screws.
2. Locate and loosen the two 2mm set screws securing the solenoid head to the base.
3. Adjust the depth by rotating the solenoid head. Test between adjustments.
4. Once adjusted, secure the screws and test again.

Installing Strike Perfs



1. Remove the thumb screws on either side of the optional tools exit assembly.


2. Lift the assembly straight up and out of its brackets. Now you can adjust exit roller tires and install strike perfs.

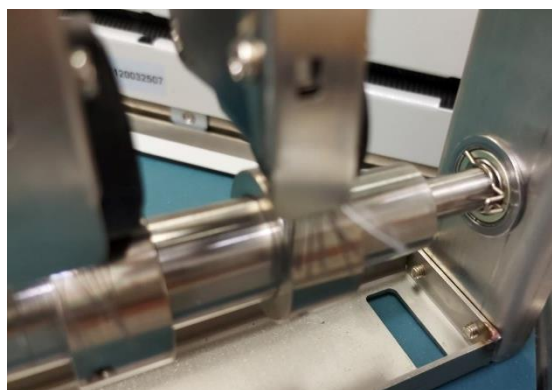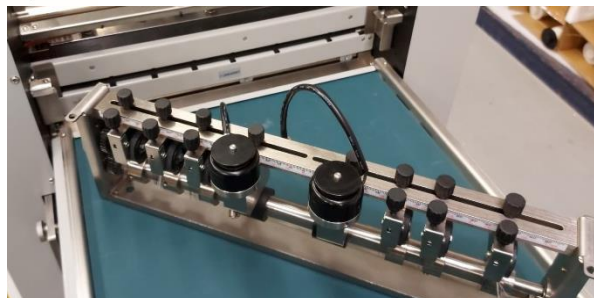

3. Remove the safety pin from the shaft to release the shaft from the assembly. Slide the bearing over to the left. Remove shaft. This will allow you to slide the anvils off and on.



4. After sliding the exit pullout tires aside, install the strike perfs.

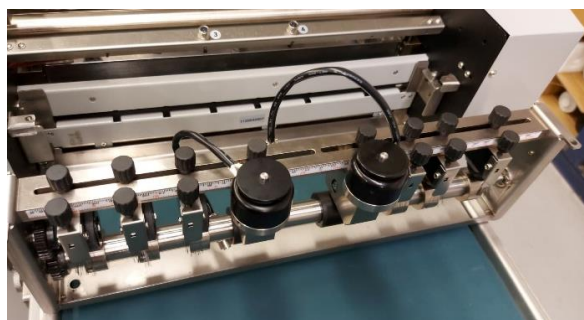

5. Install nylon anvils for strike perfs. Do not use metal anvils. This will cause the blade to become dull or cause damage. Return shaft to assembly. Make sure to replace the locking pin to keep it secure.


6. Return the assembly to the exit area by sliding it down in the brackets. Secure the thumbscrews on both sides. Finally, plug in the strike perfs and run a test.



Trouble Shooting

Warning Messages

C-2 - Please Set Paper

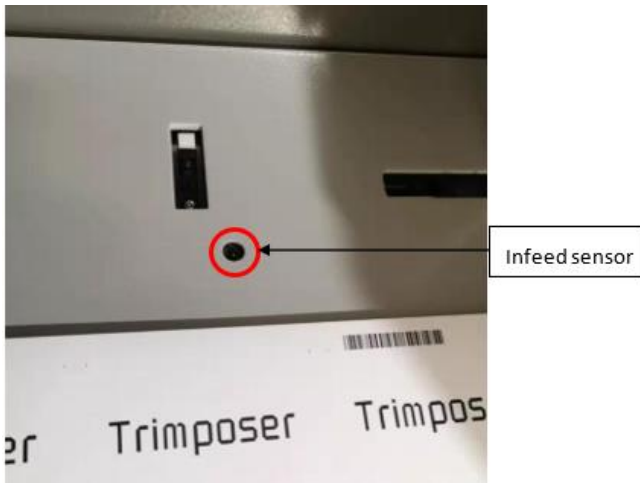

No sheets are loaded on the feeding table.

It shows up after the sheets run out. When the machine displays this message, put some sheets on the table and then press the RETURN button on the touch screen to clear it.

If there is no paper on the table and no warning message is displayed, clean the paper detect sensor on feeding table.

C-4 - Top Cover Opened at Crease Unit

C-8 - Top Cover Opened at SC Unit

C-9 - Top Cover Opened at Feeding Unit



Fig. Secure switch

Top cover is opened.

When this warning message is displayed, check whether the top cover is opened or not.

If the top cover is not open, the trigger on the top cover may not be pressing down the secure switch or the secure switch has failed.

C-5 - No Bar-Tool in Station #1

C-6 - No Bar-Tool in Station #2

C-12 - No Anvil in Position for Cross Partial Perf

No crease or perf tool in bar-tool station.

Cross bar tool may not be inserted in the station or the bar tool is not in correct position. There is a secure switch on the other end of station that must be triggered.


When this message is displayed, check whether there is a tool inside or not. If not put one in. If the bar-tool is already in, try to push the tool all the way in until the ticking sound is heard.

C-7 - Side Cover Opened at Crease Unit
C-10 - Waste Bin Door Opened
C-11 - Tool Door Opened

Cover or door is opened.

Check whether the cover or door is opened or not. If the cover or door is not open, the trigger on the cover or door may not be pressing the secure switch down or the secure switch has failed.


C-14, Paper Jam Near Outfeed Roller

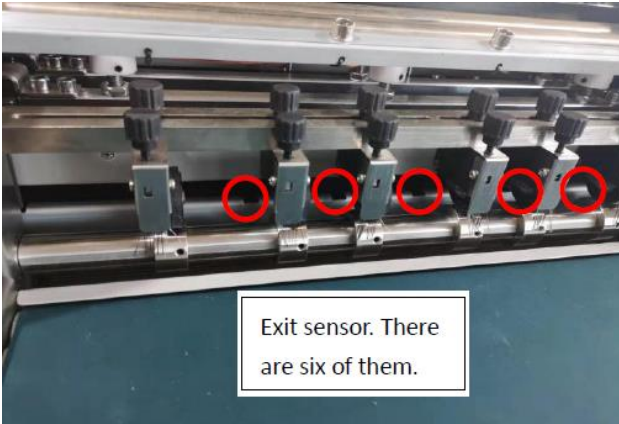

Sheets or dust may be covering in the exit sensor area.

Check this area. If there is no paper jam in the area, there may be dust covering the exit sensor. In this case use an air gun or dry lint-free cloth to clean the sensor surface.

C-15 - Paper Jam Near Cutter

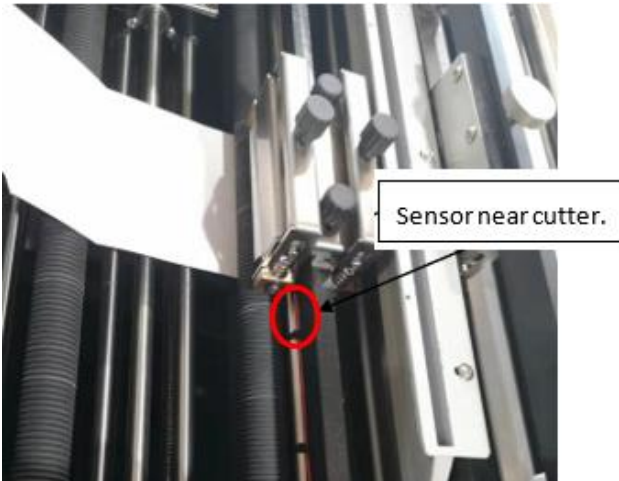

Sheets or dust may be covering the sensor near the cutter area.

Check this area. If there is no paper jam in the area, there may be dust covering the exit sensor. In this case use an air gun or dry lint-free cloth to clean the sensor surface.

C-16 - Double Feed Jam


Double sheet feed.

If there is no double feed, the double detect sensor may need to be recalibrated. If it cannot be fixed, enter User Mode to switch off the double feed detector.

C-17 - Paper Jam at Infeed Table

Sheets or dust may be covering in the infeed sensor area.

Check this area. If there is no paper jam in the area, there may be dust covering the exit

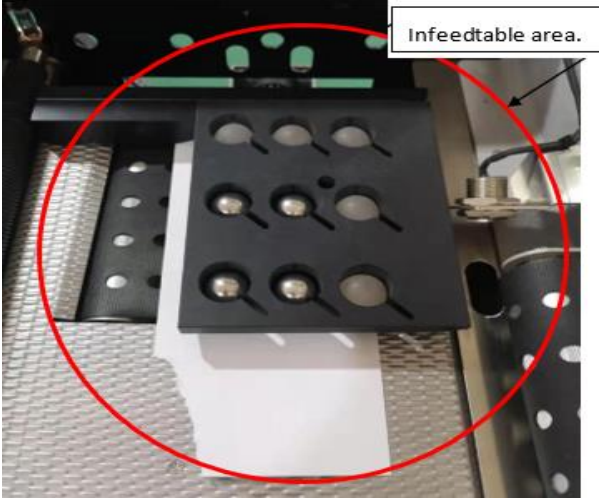

sensor. In this case use an air gun or dry lint-free cloth to clean the sensor surface.

E-1 - Elevator Motor Error

When this happens, try turning off the machine and then turning on. If that does not work, try the following steps:

- If the feed table stop on the top, press the green release button and the downward button at the same time to release the table from the top.
- If the feed table stops at the bottom, press the green release button and the START button at the same time to free the table from the bottom.

E-3 - Crease Motor Error for Station #1

E-4 - Crease Motor Error for Station #2


This is probably caused by the thickness of paper and the crease depth. For thicker paper, it may show this error if we set a large crease depth. In this case try a smaller crease depth.

E-5 - Cutter Motor Error

This is probably caused by thicker paper or special material. If the paper thickness is over parameter or we run some extremely hard material, the cutter is unable to cut it off. It will show this error.

Images Shrink/Stretch or Shift Caused by Printing

The cards in same column resemble following picture:

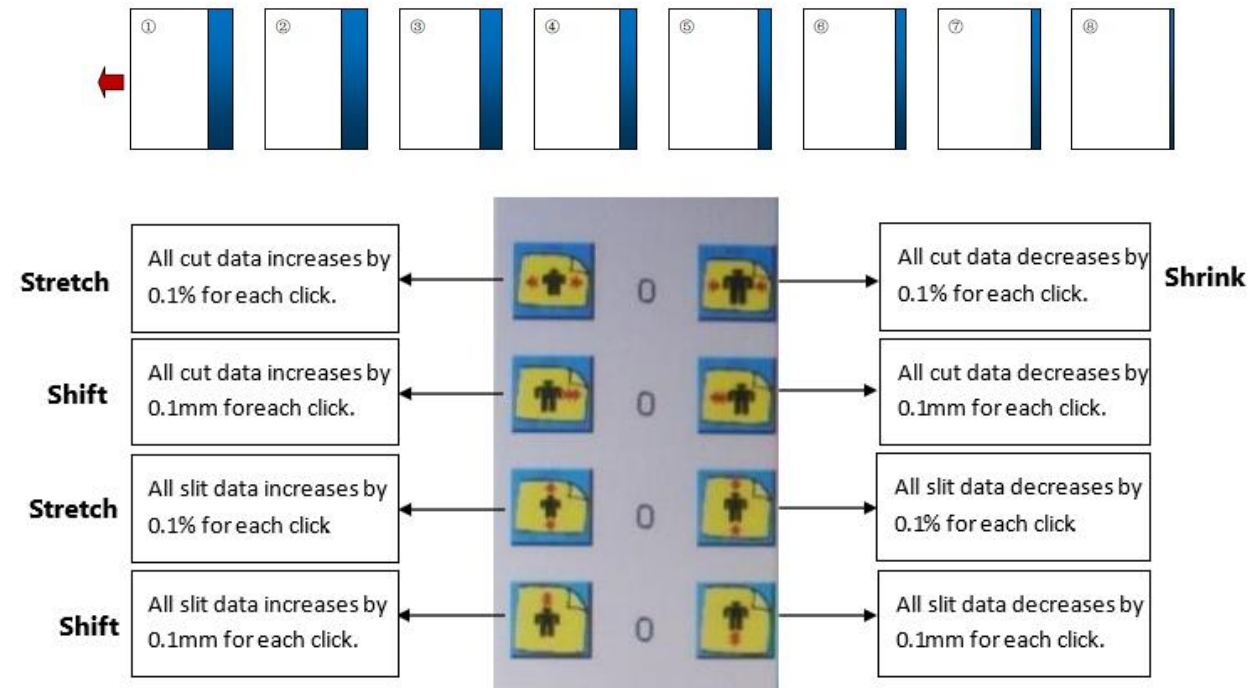

Steps to correct the issue:

Assume the first card is the standard card. The following card's color edge is smaller and smaller.

1. Open the register mark function if the register mark has been printed onto the sheet.



2. Click the icon to increase the cut data by 0.1% each time and run one sheet to check until the color edge is nearly the same.

3. If the color edge is nearly the same, but the color edge is bigger than standard card. Click the icon  to decrease cut data by 0.1mm/0.003" each time and run one sheet to check until it reaches correct size.

Maintenance

Maintenance is important and will prolong the life and functionality of the machine. It consists of user maintenance and technician maintenance. These maintenance procedures are recommended with the assumption that the customer is completing daily and weekly cleaning.

To ensure your machine is running at its best, please regularly perform the following:

- Using the GW Roller Cleaner, clean ink/toner dirt and debris from rollers. This should be done regularly to prevent build-up and protect the integrity of the rollers.
- Lubricate the roller bushings with a 3 in 1 oil. This lubrication will ensure the paper is feeding properly and prevent the rollers from slowing or sticking.
- Lubricate the knife pivot points and drop some oil on the springs at each end.
- Clean and lubricate the slitter worm drive shafts.
- Clear paper dust from all sensors with compressed air.
- Clean all surfaces with a water-soluble cleaner.