


Charge-on-solar for Tesla:

EVCC with Home Assistant and Bluetooth via ESP32 (without cloud)

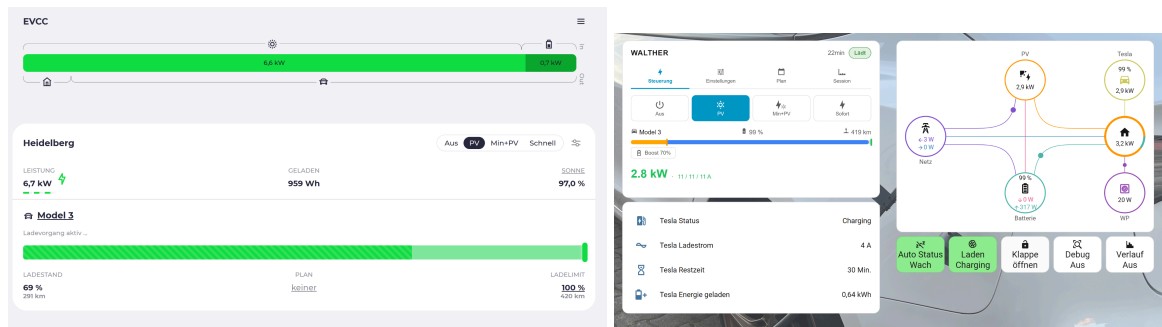

1. Installing the ESP32:	2
2. Connect EVCC	2
2.1. Setting up the car	2
2.2. Setting up the wallbox:	6
3. PV system configuration	10
3.1 Network meter	10
3.2 Inverter power meter:	11
3.3 Home battery:	12
4. Finish!	12

1. Installing the ESP32:

There are separate instructions for

this: https://docs.google.com/document/d/1W33jPQH4uAfSzb8rHvg7sBFm9zY_D-149qrtlnRN2xQ/edit?usp=sharing

If you prefer English instructions, follow the original guide on the official repo:

<https://github.com/PedroKTFC/esphome-tesla-ble>


Attention: In Chapter 4: In the configuration, the # characters must be removed from the package evcc.yml:

```
packages:
  remote_package_files:
    url: https://github.com/PedroKTFC/esphome-tesla-ble/
    files:
      - packages/base.yml
      - packages/common.yml
      - packages/project.yml
      - packages/client.yml
      # - packages/listener.yml # Uncomment this to scan find your VIN BLE MAC address
      - packages/evcc.yml # Uncomment this if you use the ESP for EVCC charge control
```


2. Connect EVCC

2.1. Setting up the car


In EVCC, click on More/Configuration, then on “Add vehicle”:

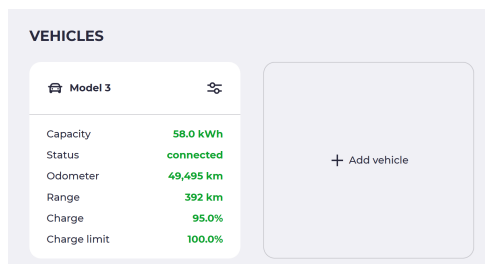

We then select “Home Assistant” as the manufacturer (far down):

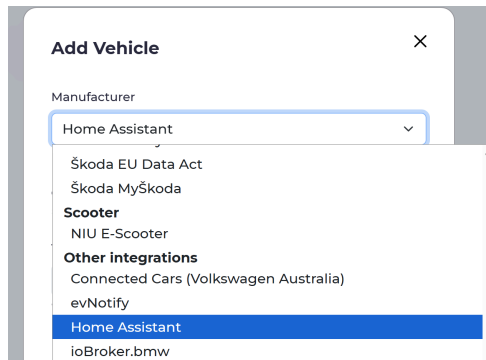

Next, the Home Assistant server is specified. It is usually found automatically; otherwise, the server's IP address is entered here.

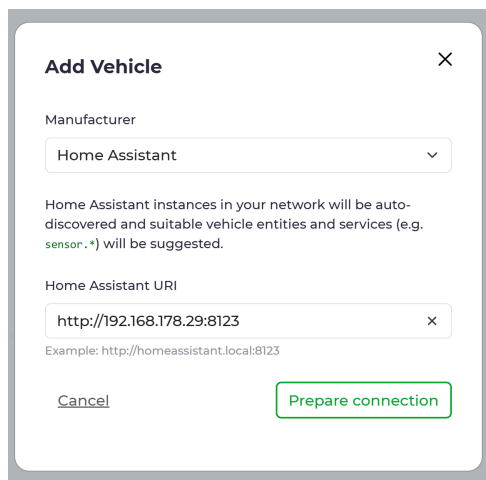

Now click “Prepare connection”. The first time you do this, a Home Assistant login window will appear, where you need to enter a valid HA username and password. Don't worry, the username is not stored in EVCC, only a “persistent login token”.

From here on, sensors need to be entered. Vehicle name and battery capacity are entered manually. I've allocated 2 kWh of degradation from the nominal capacity. The nominal value is also quite accurate.

Edit Vehicle



Manufacturer

Home Assistant

Home Assistant instances in your network will be auto-discovered and suitable vehicle entities and services (e.g. `sensor.ble_f549c4_charge_level`) will be suggested.

Title

Model 3

Will be displayed in the user interface

Icon



Will be displayed in the user interface

Home Assistant URI

http://192.168.178.29:8123

Example: http://homeassistant.local:8123

State of charge [%]

sensor.tesla_ble_f549c4_charge_level

Example: sensor.vehicle_soc

Entity ID for the vehicle's battery state of charge in percent

Battery capacity optional

58 kWh

Example: 50

Remaining range [km] optional

sensor.tesla_ble_f549c4_range

Example: sensor.vehicle_range

Entity ID for the vehicle's remaining range in kilometers

Charging status optional

sensor.tesla_ble_f549c4_charging_state

Example: sensor.vehicle_charging

Entity ID for charging status (A=disconnected, B=connected, C=charging)

Target state of charge [%] optional

number.tesla_ble_f549c4_charging_limit

Example: number.vehicle_target_state_of_charge

Entity ID for the vehicle's target state of charge in percent (`number` or `input_number` entity)

Odometer [km] optional

sensor.tesla_ble_f549c4_odometer

Example: sensor.vehicle_odometer

Entity ID for the vehicle's odometer reading in kilometers

Climatisation active optional

binary_sensor.tesla_ble_f549c4_climate

Example: binary_sensor.vehicle_climater

Entity ID for the vehicle's climatisation state (`binary_sensor` with on/off state)

Finish time optional

sensor.tesla_ble_f549c4_minutes_to_limit

Example: sensor.vehicle_finish_time

Entity ID for the estimated charging finish time (ISO8601 or Unix timestamp)

Service to start charging optional

switch.tesla_ble_f549c4_charger

Example: script.vehicle_start_charge; switch.vehicle_charger

Entity ID for a script or a switch that starts charging the vehicle. Only useful with the [docs.evcc.io](#). If a switch is provided, Service to stop charging must be left empty.

Service to stop charging optional

Example: script.vehicle_stop_charge

Entity ID for a script that stops charging the vehicle. Only useful with the [docs.evcc.io](#)

Service to wake up vehicle optional

Example: script.vehicle_wakeup; button.wakeup_vehicle
Entity ID for a script or a button that wakes up the vehicle

Set charging current [A] optional

number.tesla_ble_f549c4_charging_amps x

Example: number.vehicle_charging_current
Entity ID for setting the maximum charging current in amperes (number or input_number entity)

[Hide advanced settings](#) ▲

Maximum number of phases optional

Used to determine the minimum solar surplus and plan duration.

Default charging mode optional

Solar ▼

Applied when a vehicle is connected. Leave empty to keep the current mode.

Minimum current optional

1 A

Example: 6

The minimum current per connected phase that can be used

Maximum current optional

16 A

Example: 16

The maximum current per connected phase that can be used

Maximum charging power hint optional

11000 W

Example: 10000

Defines the maximum charging power of the vehicle. Helps improve charge plan accuracy when the vehicle typically uses less than the offered current or supports higher single-phase current compared to three-phase. The offered current of the loadpoint is not affected.

RFID identification optional

Used to assign the vehicle to a loadpoint via RFID card. The identifier is shown on the loadpoint. Copy the value from there. [Learn more](#).

Priority optional

Priority of the loadpoint or vehicle in relation to other loadpoints or vehicles for allocating surplus energy (higher values, higher priority).

1A current control optional

no yes

Vehicle supports 1A current steps only

Supports streaming optional

no yes

Streaming data is received asynchronously

Charge on connection optional

no yes

Charger will enable charging for short time when vehicle is connected, irrespective of configured charge mode. This is useful for vehicles that require power supply when connecting.

Status: successful	validate
Capacity	58.0 kWh
Status	connected
Odometer	49,495 km
Range	392 km
Charge	95.0%
Charge limit	100.0%

[Delete](#)


Save

The number of phases and the current must be specified manually. The absolute minimum for Tesla is 1A, but for efficiency reasons I use 2A.


Finally, click “validate”. Plausible values must be displayed when the car is within range. Then, click “Save”.

2.2. Setting up the wallbox:


Click “Add charger or heater”:

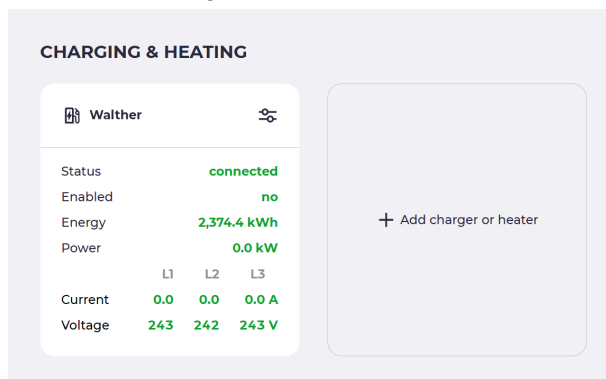

Then click “Add charging point”:

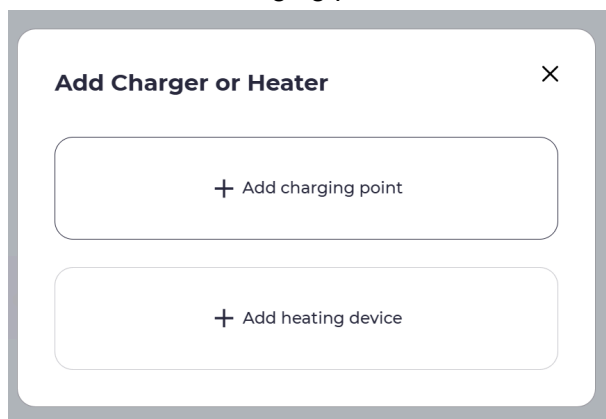

Assign a name (e.g., manufacturer name, garage left, carport,...) and select “Add charger”

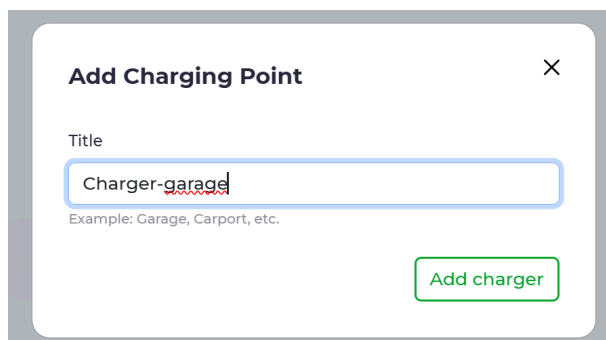

Select “Home Assistant Charger” again (this time near the top) and click “Prepare connection”:

Add Charger

×

Manufacturer

Home Assistant Charger

Home Assistant instances in your network will be auto-discovered and suitable charger entities and services (e.g. `sensor.*`, `switch.*`, `number.*`) will be suggested.

Home Assistant URI

http://192.168.178.29:8123

Example: http://homeassistant.local:8123

Cancel

Prepare connection

The entities are again selected via autocomplete:

Edit Charger

ⓘ ×

Manufacturer

Home Assistant Charger

Home Assistant instances in your network will be auto-discovered and suitable charger entities and services (e.g. `sensor.*`, `switch.*`, `number.*`) will be suggested.

Home Assistant URI

http://192.168.178.29:8123

Example: http://homeassistant.local:8123

Charging status sensor

sensor.tesla_ble_f549c4_charging_state_iso

Example: sensor.charger_status
Entity ID for charging status (A=ready, B=connected, C=charging)

Enabled status sensor

switch.tesla_ble_f549c4_charger

Example: binary_sensor.charger_enabled
Entity ID for enabled state (`sensor`, `binary_sensor` or `switch` with `on/off` or `true/false` state)

Enable switch

switch.tesla_ble_f549c4_charger

Example: switch.charger_enable
Entity ID for enable/disable control (`switch` or `input_boolean`)

Maximum current entity [A]

number.tesla_ble_f549c4_charging_amps_evcc

Example: number.charger_max_current
Entity ID for setting maximum current in amperes (`number` or

Moving on – the power output is intentionally left blank here! The car provides a value, but it's rounded to the nearest kW, which is very inaccurate. EVCC can calculate the power itself from voltage and current. Notice: The current and voltage sensors are entered thrice on 3-phase-systems. On single- or dual-phase systems, leave the unused sensors empty.

Hide advanced settings ▲

Power entity optional

▼

Example: sensor.charger_power
Entity ID for instantaneous power measurement in watts

Energy entity optional

sensor.tesla_ble_f549c4_charge_energy_added

×

Example: sensor.charger_energy
Entity ID for cumulative energy measurement in kWh

L1 current entity optional

sensor.tesla_ble_f549c4_charge_current

×

Example: sensor.charger_current_l1
Entity ID for L1 current measurement in amperes

L2 current entity optional

sensor.tesla_ble_f549c4_charge_current

×

Example: sensor.charger_current_l2
Entity ID for L2 current measurement in amperes

L3 current entity optional

sensor.tesla_ble_f549c4_charge_current

×

Example: sensor.charger_current_l3
Entity ID for L3 current measurement in amperes

L1 voltage entity optional

sensor.tesla_ble_f549c4_charge_voltage

×

Example: sensor.charger_voltage_l1
Entity ID for L1 voltage measurement in volts

L2 voltage entity optional

sensor.tesla_ble_f549c4_charge_current

×

Example: sensor.charger_voltage_l2
Entity ID for L2 voltage measurement in volts

L3 voltage entity optional

sensor.tesla_ble_f549c4_charge_current

×

The last entities:

L1 voltage entity optional

sensor.tesla_ble_f549c4_charge_voltage x

Example: sensor.charger_voltage_l1
Entity ID for L1 voltage measurement in volts

L2 voltage entity optional

sensor.tesla_ble_f549c4_charge_voltage x

Example: sensor.charger_voltage_l2
Entity ID for L2 voltage measurement in volts

L3 voltage entity optional

sensor.tesla_ble_f549c4_charge_voltage x

Example: sensor.charger_voltage_l3
Entity ID for L3 voltage measurement in volts

Phase switching entity optional

Example: select.charger_phases
Entity ID for 1p/3p phase switching (select entity with options "1" and "3")

Heating device optional

no yes

Shows °C instead of %

Integrated device optional

no yes

Integrated device. No charging sessions

Status: unknown validate

Cancel Validate & save

L3 Spannungsentität optional

sensor.tesla_ble_f549c4_charge_voltage x

Beispiel: sensor.charger_voltage_l3
Entitäts-ID für L3 Spannungsmessung in Volt

Phasenumschaltungs-Entität optional

Beispiel: select.charger_phases
Entitäts-ID für 1p/3p Phasenumschaltung (Select-Entität mit Optionen "1" und "3")

Wärmeerzeuger optional

nein ja

Zeigt °C anstatt % an

Integriertes Gerät optional

nein ja

Fest angeschlossenes Gerät. Keine Ladevorgänge

Status: unbekannt prüfen

Löschen Überprüfen & speichern

After clicking "Check", values should reappear. It's normal for very low voltage values to appear; expect 2-6V when you are not charging, and normal 115 or 230V when charging.

Status: successful

validate

Status	connected		
Enabled	no		
Energy	2,374.4 kWh		
Power	0.0 kW		
	L1	L2	L3
Current	0.0	0.0	0.0 A
Voltage	242	242	242 V

Delete

Save

Click “Save”.

3. PV system configuration

EVCC can query most PV systems directly; alternatively, the data can also be retrieved via Home Assistant. For my Huawei system, there's a very comprehensive integration that queries the system via Modbus/TCP every 15 seconds. Some might use a Modbus proxy, which involves a lot of effort and querying the data a second time. It's simpler to just let Home Assistant do the work and retrieve the data from there. Regarding energy data, it's important to note that EVCC always expects positive values when power or energy flows towards the vehicle, e.g., from the roof to the home network, from the home battery to the home network, or from the grid to the home network. The opposite direction (feed-in or charging the home battery) must be negative. If the integration provides the values in reverse, add a hyphen ("-") before the sensor name; this reverses the measurement direction for EVCC.

3.1 Network meter

Edit Grid Meter

Manufacturer

Home Assistant Meter

Home Assistant instances in your network will be auto-discovered and suitable entities (e.g. `sensor.*`) will be suggested.

Home Assistant URI

http://192.168.178.29:8123

Example: http://homeassistant.local:8123

Power Entity

-sensor.power_meter_active_power

Example: sensor.house_power
Entity ID for instantaneous power measurement in watts. The entity must provide numeric values only (e.g., "1234", not "1234 W").

Show advanced settings

Status: unknown

validate

Delete

Validate & save

The grid meter for my Huawei system is a case in point: grid feed-in is positive, grid consumption is negative. That's why there's a "-" before the sensor name. Note: I've seen the opposite meter direction with Huawei devices using Emma. In that case, the "-" is omitted.

3.2 Inverter power meter:

Edit Solar Meter

Title

Huawei

Manufacturer

Home Assistant

Home Assistant instances in your network will be auto-discovered and suitable entities (e.g. `sensor.*`) will be suggested.

Home Assistant URI

http://192.168.178.29:8123

Example: http://homeassistant.local:8123

Power Entity

sensor.inverter_input_power

Example: sensor.house_power
Entity ID for instantaneous power measurement in watts. The entity must provide numeric values only (e.g., "1234", not "1234 W").

Show advanced settings

Status: unknown

validate

Delete

Validate & save

3.3 Home battery:

The screenshot shows the 'Edit Battery' configuration page in Home Assistant. The page has a title bar with an information icon and a close button. The configuration fields are as follows:

- Title:** A text input field containing 'Luna'.
- Manufacturer:** A dropdown menu showing 'Home Assistant'.
- Home Assistant URI:** A text input field containing 'http://192.168.178.29:8123'. Below it, an example is provided: 'Example: http://homeassistant.local:8123'.
- Power Entity:** A text input field containing 'sensor.battery_discharge_charge_power'. Below it, an example is provided: 'Example: sensor.house_power'. A note states: 'Entity ID for instantaneous power measurement in watts. The entity must provide numeric values only (e.g., "1234", not "1234 W").'.
- Battery capacity optional:** A numeric input field with '15' and a unit dropdown showing 'kWh'. Below it, an example is provided: 'Example: 50'.
- Minimum charge optional:** A numeric input field with '0' and a unit dropdown showing '%'. Below it, an example is provided: 'Example: 25'. A note states: 'Lower limit when discharging the battery in normal operation'.
- Maximum charge optional:** A numeric input field with '100' and a unit dropdown showing '%'. Below it, an example is provided: 'Example: 95'. A note states: 'Upper limit when charging the battery from the grid'.

4. Finish!

Once the PV system is registered, EVCC is functional; nothing more is needed. Optionally, you can also set up the EVCC integration from Marq24, which allows you to display EVCC data, for example, in dashboards.

<https://github.com/marq24/ha-evcc>

And there are some nice maps for Home Assistant from mkshb:

<https://github.com/mkshb/hass-evcc-card>