


How to get device data by Modbus TCP

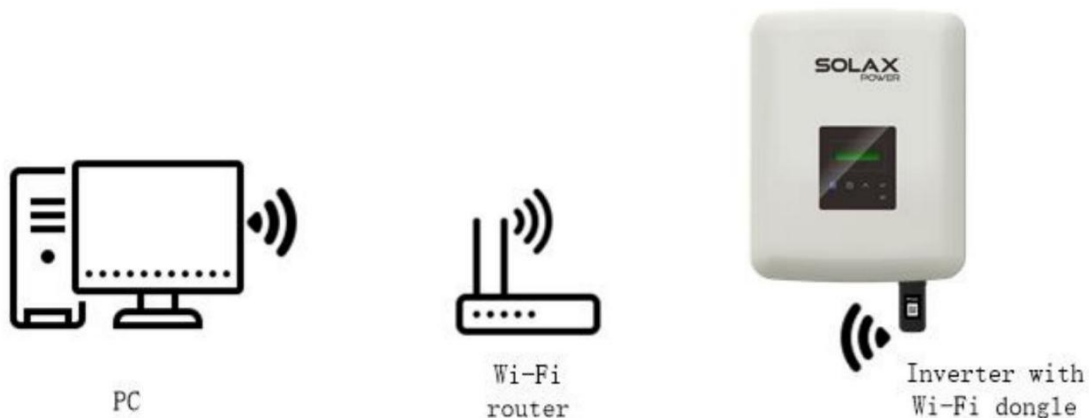

Disclaimer

This document is not a replacement of official user manual or installation guide of SolaX products. It is intended as a knowledge base to assist solar installers for further details or troubleshooting. All rights are reserved by SolaX Power Network Technology (Zhejiang) Co.,Ltd.



1. Get inverter IP

Refer to the user manual to finish the installation of Pocket Wi-Fi and Solax inverter.

Step:

1. Use a PC to search the inverter Wi-Fi signal from the Pocket WiFi. (SSID: Wifi_Sxxxxxxx)
2. Connect to the inverter Wi-Fi.
3. Open browser (IE, Firefox or Chrome) and type in <http://5.8.8.8/>.
4. Log in
Username: admin
Password: admin or Registration No. (dongleSN) of your device.
5. DHCP setting page.
 1. Connect to the home router Wi-Fi by clicking 'Find AP' or by manually inputting the home router's SSID.
If you already have configured network (e.g. by APP) skip to step 4.
 2. Input the home router's password as the 'Key'.
 3. Click 'Save'.
 4. Refresh and remember the IP address

SETTING PAGE

The screenshot shows the 'Static IP' configuration page of a Solax Power inverter. The page has three tabs: 'DHCP', 'Static IP', and 'System'. The 'Static IP' tab is active. The form contains the following fields: Firmware Version (2.31), MAC address (C8-93-46-CE-E1-B3), SN (SWUJVGPK04H), IP address (192.168.0.103), SSID, and Key. A blue 'Find AP' button is located to the right of the SSID field. A blue 'save' button is at the bottom right of the form. Below the form are two language buttons: 'EN' and '中文'. Three orange arrows point to specific elements: one points to the IP address field (labeled 5.2), one points to the 'Find AP' button (labeled 5.1), and one points to the 'save' button (labeled 5.3). A small number '6' is located to the left of the IP address field.

2. Modbus software connect and get data from inverter

PC connect to the same home router with inverter.

- Open Modbus software.
- Select connection type as Modbus TCP/IP.
- Input the inverter IP address which you got at step 5.4.
- Inquiry the Inverter register data.

3. Check Solax Power Modbus protocol document

Search the Register data meaning in Solax Power Modbus protocol document.

Note

1. Please contact Solax Power to get the latest Solax Power Modbus protocol document.

Compatibility

Device		Hardware	Firmware
Energy Storage Inverters	Single phase	X1-IES	ARM V1.23
	Three phase	X3-Hybrid G4	ARM V1.20
		X3-Hybrid G4 Pro(Need LAN)	ARM V4
		X3-IES	ARM V13
		X3-Ultra	ARM V4.04
On-grid Inverters	Single phase	X1-MINI G3	ARM V1.46
		X1-MINI G4	ARM V1.0
		X1-MINI G4 Plus	ARM V1.0
		X1-SMART G2	ARM V2.05
		X1-BOOST G3	ARM V1.46
		X1-BOOST G4	ARM V1.0
	Three phase	X3-MIC G2	ARM V1.17
		X3-PRO G2	ARM V1.17

		X3-MEGA G2	ARM V008.02
		X3-FORTH	ARM V015.01
		X3-FORTH Plus	ARM V002.01
		X3-GROUND	ARM V1.00
Wi-Fi dongle		Pocket WiFi 2.0/Plus(Transition)(SX/SJ)	V3.005.01
		Pocket WiFi 3.0(SV/SR)	V3.005.01
		Pocket WiFi 3.0(SS)	V3.031.02
		Pocket WiFi+LAN(SN)	V1.001.20(WiFi、LAN all support)
		Pocket WiFi+4GM(SM)	V1.001.23(Only WiFi)
		Pocket WiFi+LAN 2.0(XW)	V001.31(WiFi、LAN all support)