

Application Scenario and Configuration of ECC and ECC-PLC



Application Scenario of ECC

Solax Microinverter applies the WiFi wireless communication and Power line communication for different microinverter series. For Solax X1-Micro 2 in 1 and X1-Micro 4 in 1 series, they can not directly communicate with ECC(Energy Control Center), though ECC and X1-Micro 2 in 1 and X1-Micro 4 in 1 series microinverter have built-in WiFi modules. In this scenario, ECC is not necessary, but if the microinverter system needs to achieve zero export or interact with external devices (such as heat pumps etc.), ECC is required. Both of microinverter and ECC will connect to the router and upload their data to the Solax Cloud on the hour.

Application Scenario of ECC-PLC

Currently, we developed A1-Micro 1 in 1, X1-Micro 2 in 1 and X1-Micro 4 in 1 series. 2 in 1 and 4 in 1 are applicable to WiFi version, and 1 in 1 is applicable to PLC version. For 2 in 1 and 4 in 1, ECC only needs to be connected to meter. For 1 in 1, ECC-PLC connects to ECC and matches to the whole system for use.

APP Operation of ECC

1. Download APP(SolaxCloud APP)
2. Create an Account

Step 1: Click register at the bottom of the login page to start creating an account. Select country and server site and select user roles to improve the registration information and click to register.

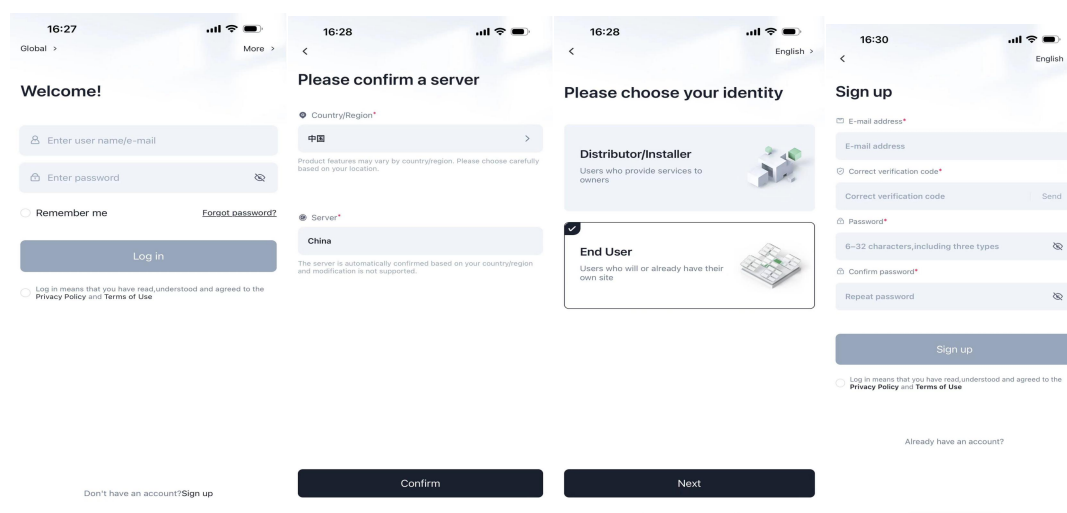


Figure 1 Create an Account

3. Create a Site

Step 1: Click on the "+" icon on the homepage to start creating the power station (for users who create the power station for the first time). Click the "+" icon in the upper right corner of the homepage to select Add Power Station from the drop-down menu (for users who have created power stations).



Figure 2 Create a Site

Step 2: The following boot page (4 pages in total) appears. If you already know, you can click skip or I already know to add it.

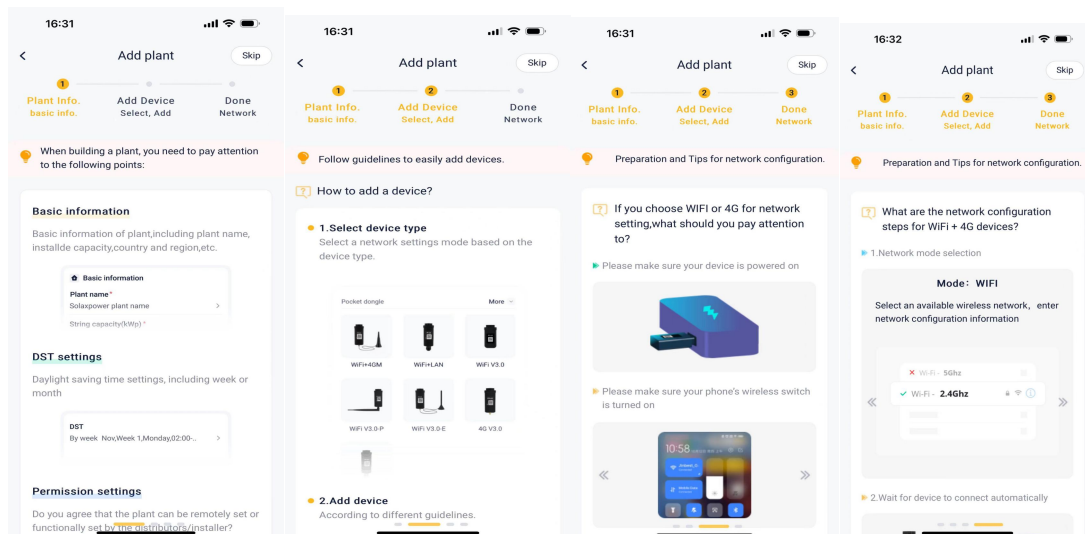


Figure 3 Boot Page

Step 3: After adding the power station page, a window will pop up asking if you can allow SolaXCloud to obtain the location information of your mobile phone. Click allow for use only or allow for this use.

Step 4: Fill in the basic information of the power station, including the station name, installed capacity (range from 0 to 99999999), country/region, time zone, and location. Choose whether to enable default first display, daylight saving time, and decide whether to grant agent/installer permissions. Once completed, click Next.

16:50

<

Add plant
Please fill in the basic information of the power station

* Plant name

* System Size (kWp)

Battery capacity (kWh)

* Country and region

* Timezone
(UTC+08:00)Beijing,Chongqing,Hong K

* Location

☐ Default top display

☐ Use Set-Point

Figure 4 Basic Information

4. Bind ECC in the added site

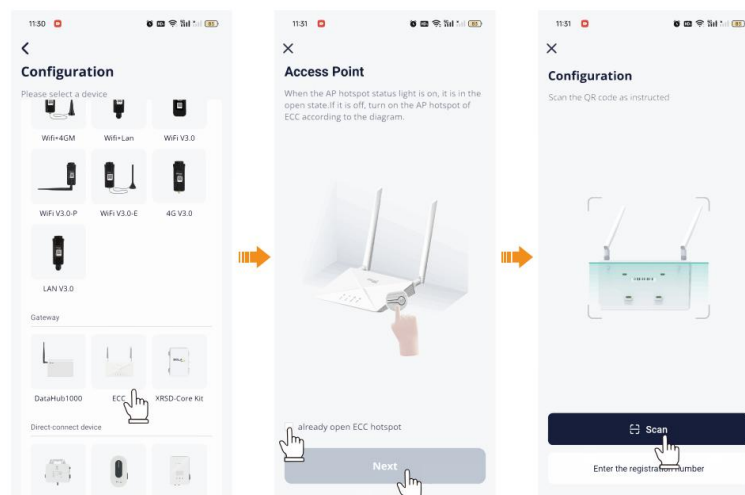


Figure 5 Bind ECC in the Added Site

5. Configure network for ECC

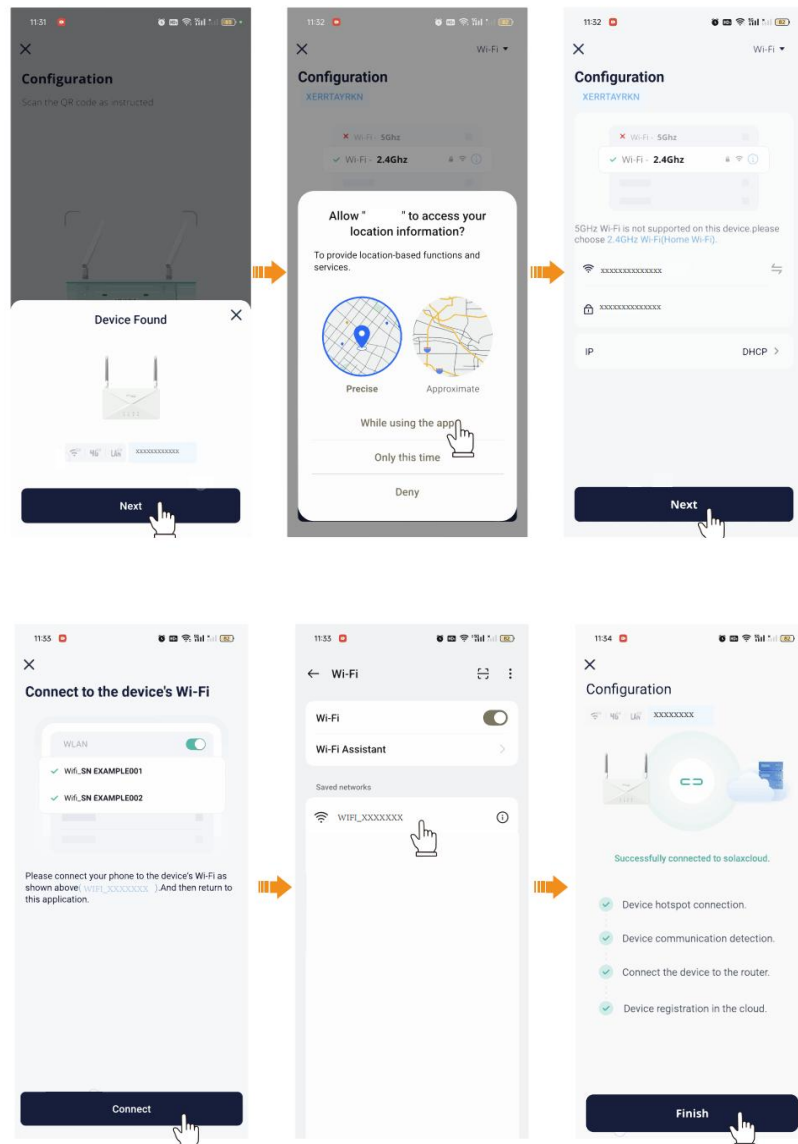


Figure 6 Configure network for ECC

Note:

- After ECC configuration succeeds, the connected ECC-PLC will show on the Gateway list.
- Remember to switch to your home WiFi for the subsequent operation.