

Grid Voltage Fault

Author: 胡心怡
Reviewer: Eason

FAQ/ Hybrid INV

Issue introduction




The inverter screen displays:GridVoltFault IE03.

Confirmation of basic information

[Photo] SN numbers of inverters.

Guidance for installer

Step1: Use a multimeter to measure the voltage at the inverter's AC port. In a three-phase system, measure the line voltage.

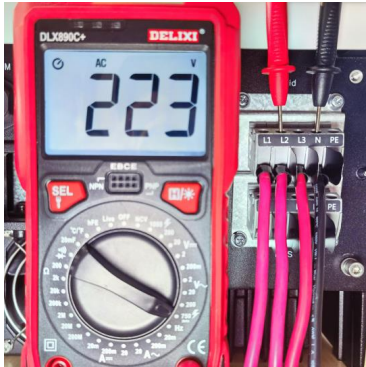	
Phase voltage on the grid side	Line voltage(line voltage= $\sqrt{3}$ ×Phase voltage)

Step2: Select the correct safety code.

Settings path:[Advance setting](#)→[Safety](#)

Safety

TOR

Save

Grid Voltage Parameters

Step3: If none of the above solutions can solve the problem,adjust up grid protection voltage value by 5V

Settings path:*Advance setting*→*Grid Voltage Parameters*→*OverVoltage_L1(V)*

Safety	▼
Grid Voltage Parameters	▲
UnderVoltage_L2 (V)	
103.5	Save
OverVoltage_L2 (V)	
276	Save
Vac 10M Avg (V)	
253	Save
UnderVoltage_L1 (V)	
195.5	Save
OverVoltage_L1 (V)	
264.5 + 5	Save
UnderFreq_L1 (Hz)	


Information check list

If you have completed the above <Guidance for installer>, and the problem is still not solved, please collect the following troubleshooting information and send them to the R&D.

1. [Photo]SN number of the inverter, which should clearly display the registration number.



2. [Photo]Local grid phase and line voltage.

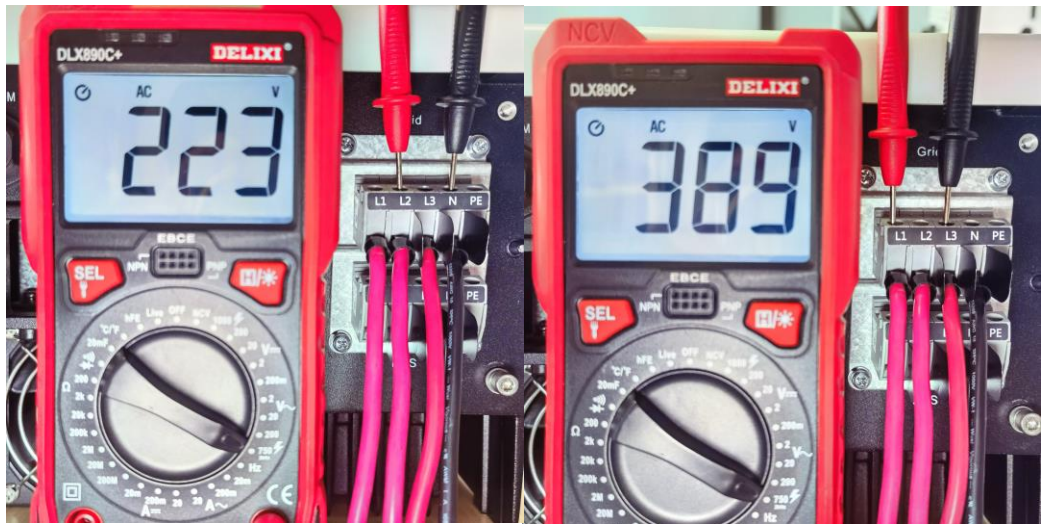

3.[Photo]Inverter safety settings.

Safety

TOR

Save

Grid Voltage Parameters

4.[Photo]The overvoltage protection values.

Safety	▼
Grid Voltage Parameters	▲
UnderVoltage_L2 (V)	
103.5	Save
OverVoltage_L2 (V)	
276	Save
Vac 10M Avg (V)	
253	Save
UnderVoltage_L1 (V)	
195.5	Save
OverVoltage_L1 (V)	
264.5 + 5	Save
UnderFreq_L1 (Hz)	