

Inverter stuck in idle mode-battery cannot charge

Author: 胡心怡

Reviewer: Eason

FAQ\Hybrid INV

Issue introduction

The inverter enters the idle status and does not charge at the set mandatory charging time.


Confirmation of basic information

[Photo]SN number of the inverter and battery.

Guidance for installer

Step1: Check the Min Soc setting, it is recommended to set it to 10-20%.


Settings path: *Setting* → *User Settings* → *Self Use/Feed-in Priority* → *Min Soc*

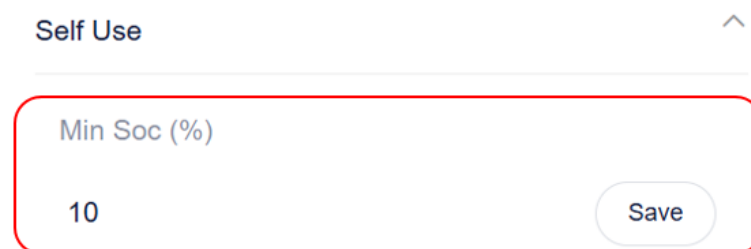

The screenshot shows a mobile app interface for 'Self Use' settings. A red box highlights the 'Min Soc (%)' field, which is currently set to '10'. To the right of the field is a 'Save' button.

Step2: Select the forced charge mode to charge the battery.

Setting Path: *Mode Select* → *Manual* → *Forced Charge*

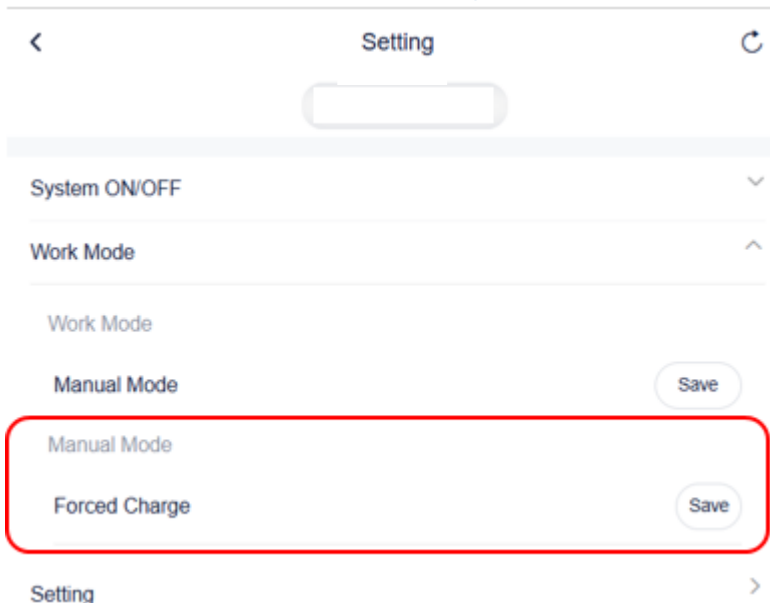

The screenshot shows a mobile app interface for 'Setting'. A red box highlights the 'Manual Mode' section, which includes a 'Forced Charge' option with a 'Save' button. Above this, the 'Work Mode' section is visible, showing 'Manual Mode' as the selected option.

Situation1< the battery can be charged>

Charge the battery to full capacity the observe subsequent situation.

Situation2< the battery cannot be charged>

Firstly check the maximum charge and discharge current, it is recommended to be set at 30 A.

Setting Path: *Settings*→*Advanced Setting*→*Charger*→*Max Charge/Discharge*

Charger

Battery Type

Lithium

Save

Charge Max Current (A)

30

Save

Discharge Max Current (A)

30

Save

Secondly measure battery voltage as following guidance, and there will be two examples for different batteries.

For T58 battery

Measure the voltage of each battery individually. For the master battery, adjust the DIP to 4 before start the batteries and connect the Y-plug to short circuit. For the slave battery, only need to do the following operation.



Use the red pen and black pen of the multimeter to measure whether the voltage on the battery side is normal. Normal single T58 battery voltage, manual rated 115.2V, the operating voltage range of 100-131V or so.



If the voltage behaves normally, consider black start to check the battery capacity. To black start, check the DIP switch according to the following instructions



0-3: (normal connection use) ↵

0: one T58 ↵

1: one T58 master + one T58 slave ↵

2: one T58 master + two T58 slaves ↵

3: one T58 master + three T58 slaves ↵

4-7: (for black start) ↵


4: one T58 ↵

5: one T58 master + one T58 slave ↵

6: one T58 master + two T58 slaves ↵

7: one T58 master + three T58 slaves ↵

And the soc will be showed on the panel.

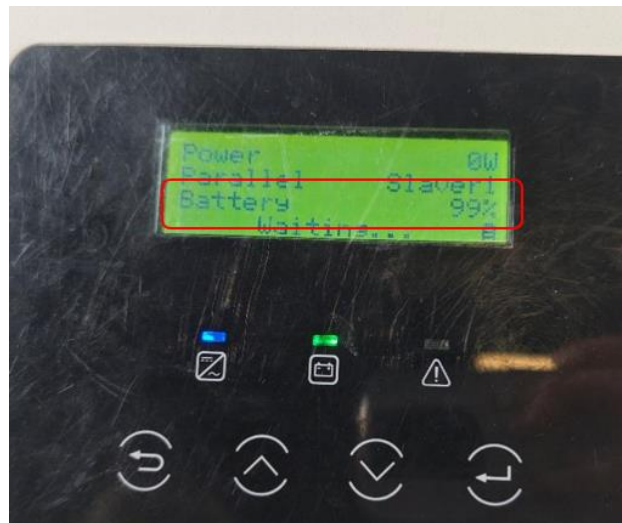

For T30 battery

Step1: use the same method as T58 slave battery to measure the voltage of T30, and a normal T30 single battery has a rated voltage value of 102.4V.




Step2: check the soc by the black start, and for T30 press the button and hold for ten seconds to black start.



Step3: If the voltage is far lower than normal value, please enable the force charge mode on inverter or use a T-BAT-Charger to charge the battery.


When using inverter:

Setting path: Setting path: *Work mode→Work mode→Manual→Force charge*

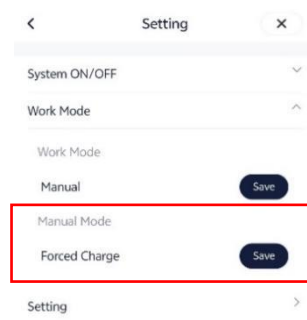

When using T-BAT-Charger:

The setting path: *setting→forced charging→password:860829→enable*

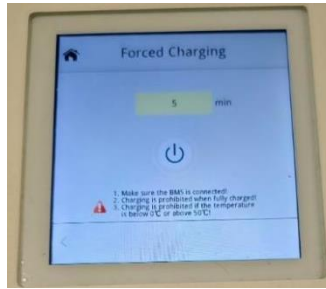

Information check list

If you have completed the above <Guidance for installer>, and the problem is still not solved, please collect the following troubleshooting information and send them to the R&D.


- 1.[Photo] Inverter and battery information including SN and registration number.




- 2.[Photo] Screenshot of Min Soc.function setting.



3. [Photo] Screenshot of max charge/discharge current setting

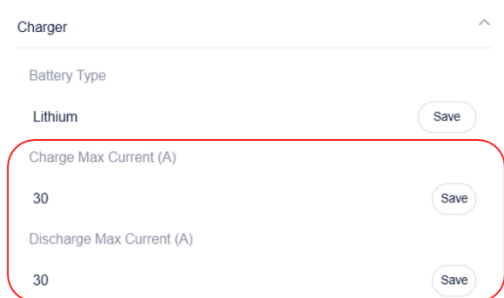

4. [Photo]The voltage of the batteries.

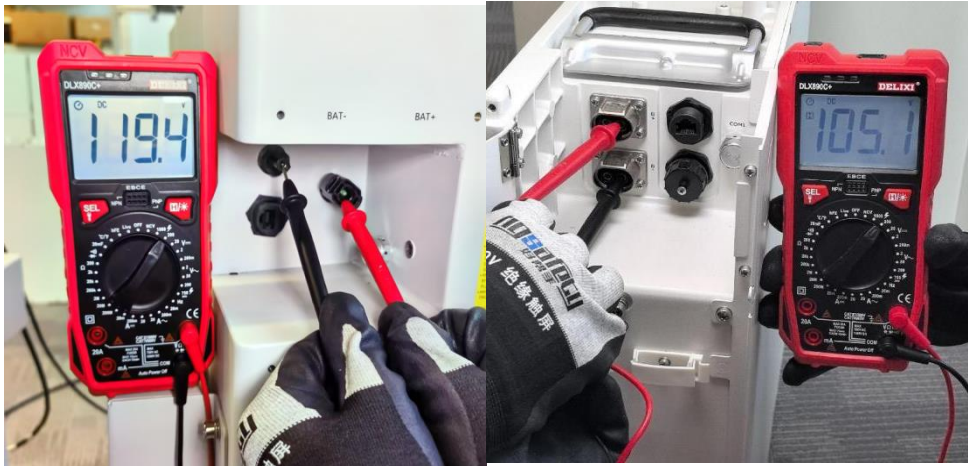

5.[Photo]The SOC of the batteries.

