

Failed to connect to the network using the WIFI V3.0 dongle

Author:胡维
Reviewer: Eason

FAQ\Network Communication

Issue introduction:

The user logs into his account and finds that the network status for the inverter under the site is displayed as 'Offline'.

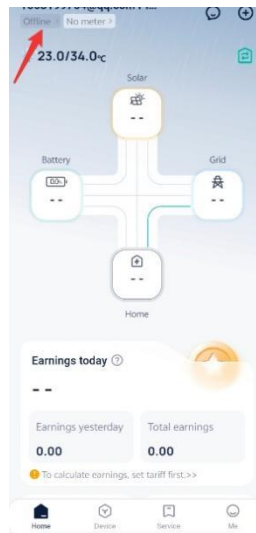

Off-line

Confirmation of basic information

[Photo]SN number of the inverter and WiFi module.

[Photo]Router Model.


Ensure that the router's SSID and password do not contain special characters (besides characters in English format, Arabic numerals, and common special characters, are there any other special symbols?).

Confirm the distance between the pocket and the router, as well as the number of walls in between.

Guidance for installer

Step1: Insert the Dongle into the working inverter.


Step2: Open the computer and locate the WLAN list. Look for the WiFi named 'wifi_**** (module SN) ****' in the list.

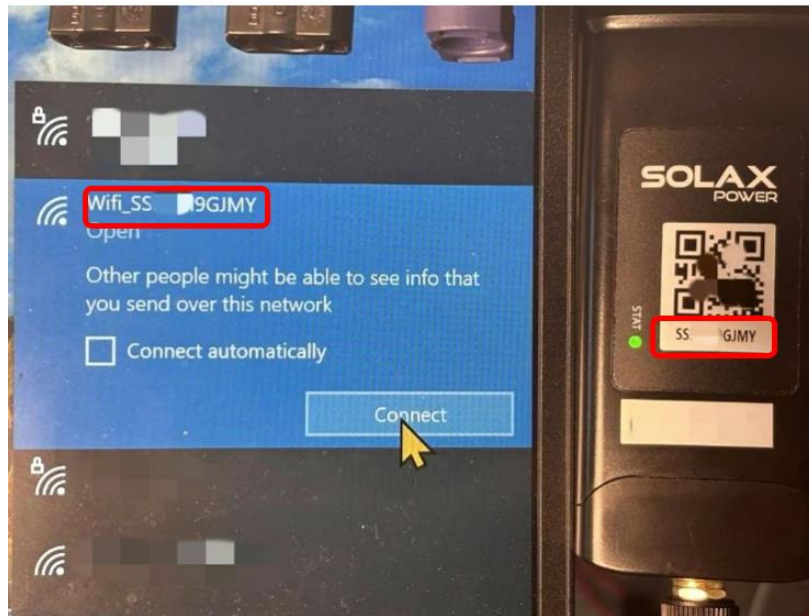


Step3: Click the 'Connection' and wait for the connection to succeed. Then open the computer's browser and enter the following address: 5.8.8.8/192.168.10.10. The Website address will be chosen corresponding to the Pocket Types in the following chart.

Pocket Types	Website address
Pocket WiFi 2.0/Plus (SW)	5.8.8.8
Pocket LAN 2.0 (SP)	Not support
Pocket GPRS 2.0 (SG)	Not support
Pocket WiFi 2.0/Plus (Transition) (SX/SJ)	5.8.8.8 (< 3.006.04)
Pocket WiFi 3.0 (SV/SR)	192.168.10.10 (≥ 3.006)
Pocket WiFi 3.0 (SS)	192.168.10.10
Pocket LAN 2.0 (Transition)(SL)	Not support
Pocket LAN 3.0 (SY)	
Pocket 4G 3.0 (SZ/SU)	Not support
Pocket WiFi+LAN 4.0 (SN)	192.168.10.10
Pocket WiFi+4GM 4.0 (SM)	192.168.10.10

Step4: Press the Enter key '↵', and interface shown below will pop up. The account is 'admin', password is the SN number of the dongle.

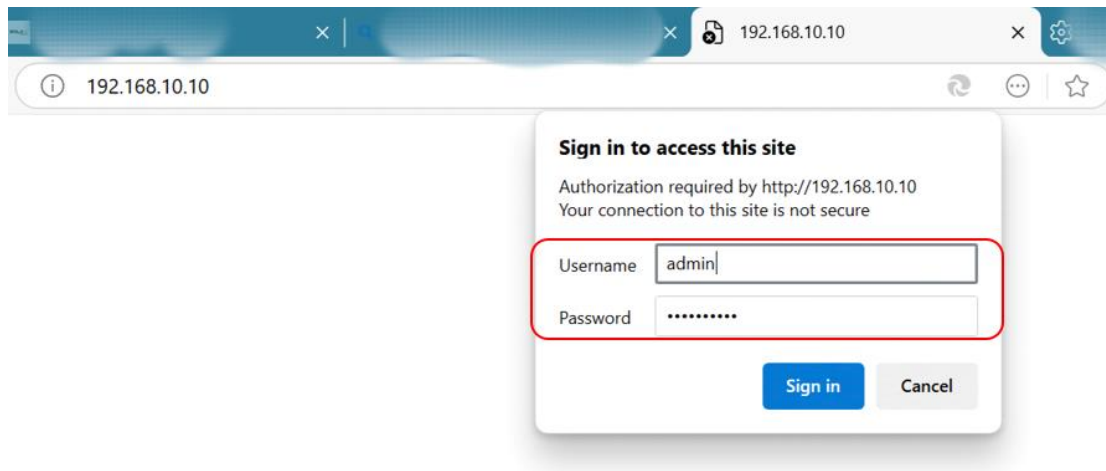

Step5: Click 'Sign in' and you will see the following interface. Click 'System' above (in the red circle) and check the three indicators identified below.

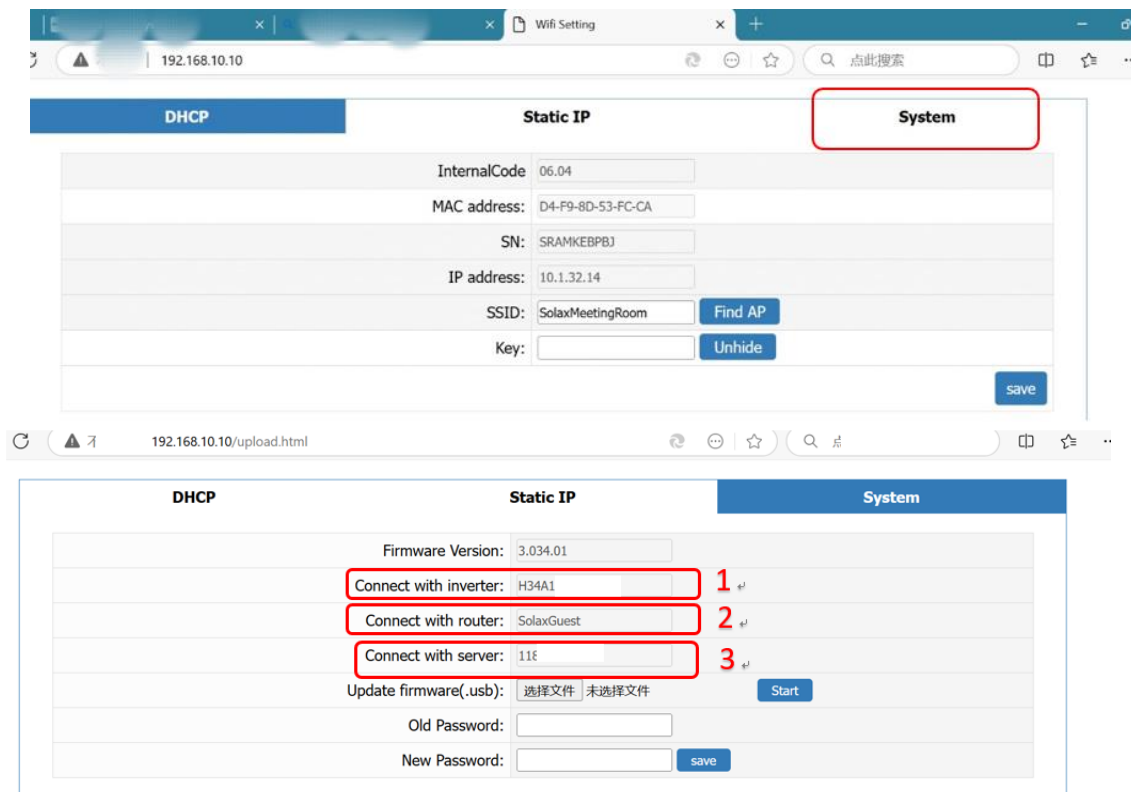

Step6: The area labeled 1 shows whether dongle is connected successfully. The connection between inverter and dongle can be checked here. If the information cannot be showed, re-plug the dongle to confirm the connection between dongle and inverter is successful. If it is still unrecognized after several plugs and unplugs. Check the silkscreen on the dongle's USB port to make sure it is not damaged. re-plug the dongle to make a good connection between the inverter and the dongle.



If “NA” is still displayed, Remove the internal components of the pocket and verify whether the pocket is damaged. First, locate the recessed clips on both sides of the pocket.




Use a flat-head screwdriver to find a downward-slanting angle, insert it into the slot, and gently pry downward.



Continue until the screwdriver is positioned as shown in the image, perpendicular to the side of the pocket.



Do the same on the other side, then remove the front cover and take out the internal components.
(There may be communication cables adhered inside; as shown in the image, removing half of them is sufficient.)

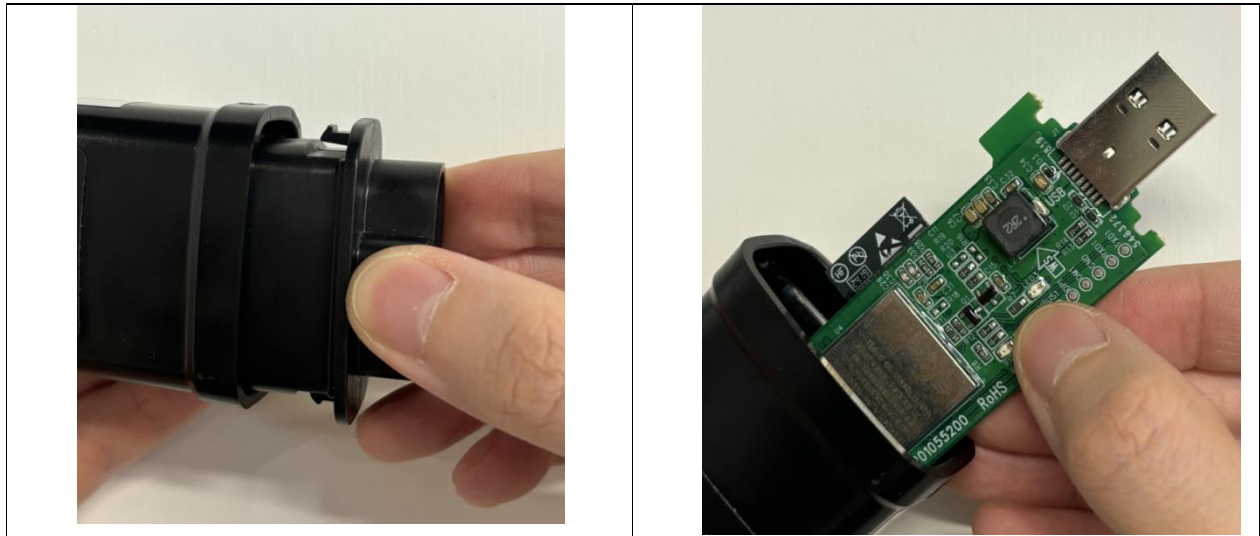

Reinsert the inverter and check if it successfully connects to the network. If not, replace the pocket. If the connection is successful, return to Step 1 and reinsert the pocket to ensure it is securely connected. When restoring the pocket, make sure the USB is inserted into the position shown in the image, and the side of the top cover with the hole should face the same direction as the side with the QR code.




Step7: The area labeled 2 shows the router which the dongle needs to be connected. If the information cannot be displayed, click the DHCP button above the page to reconfigure the network. Input the desired SSID and key at the area labeled 4, and then click the save button in the bottom.

192.168.10.10/#device_add


DHCP	Static IP	System
InternalCode: 34.01		
MAC address: 34-85-18-BA-11-DC		
SN: SS3VM9GJMY		
IP address: 192.168.111.1		
SSID: SolaxGuest		Find AP
Key:		Unhide
4		
save		

If it fails, check router Settings to see the router black-list and white-list and router frequency, and confirm the router frequency be 2.4Ghz. Note that the WiFi name(SSID) and password should not contain any special characters.

Step8: The area labeled 3 shows the link status of the server, If the information cannot be displayed, first connect the computer to the same router as the pocket. Then, in the search bar at the bottom right of the computer, type 'cmd' to open the Command Prompt window.

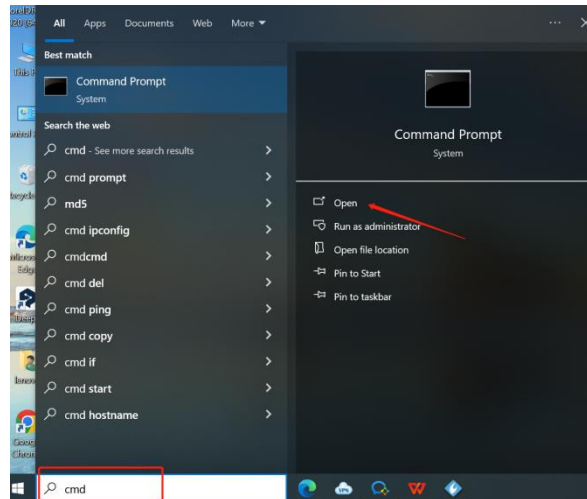


In the window, type `ping mqtt101.solaxcloud.com` and press Enter to view the results. Normally the circled area should be 'Lost=0' indicating normal. Screenshot to save this image.

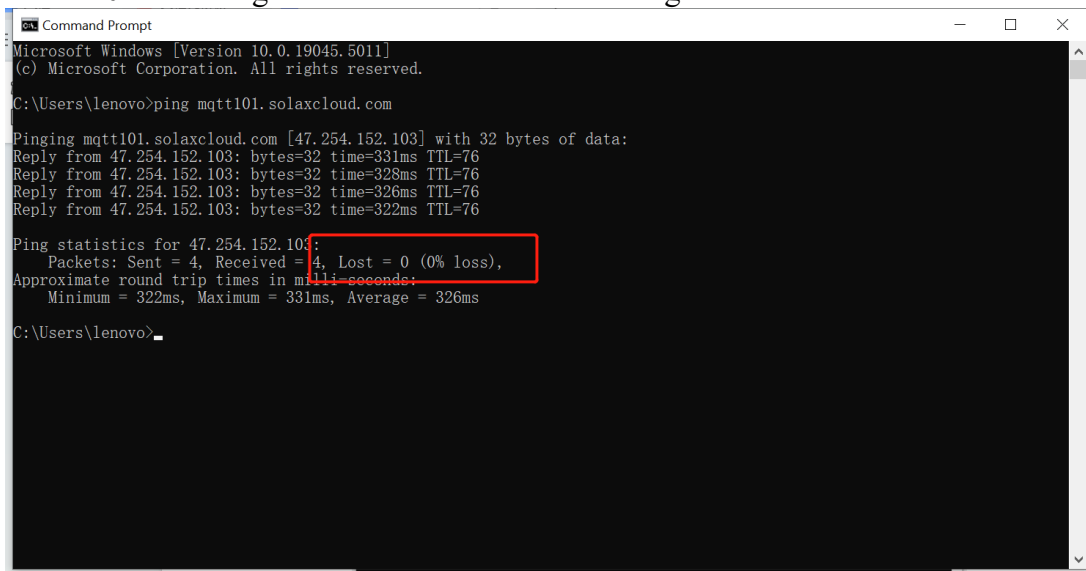

Step9: Upgrade the firmware of the WiFi module to the latest version.

Extract the file sent by SolaX technical support to obtain a file with a .USB extension.

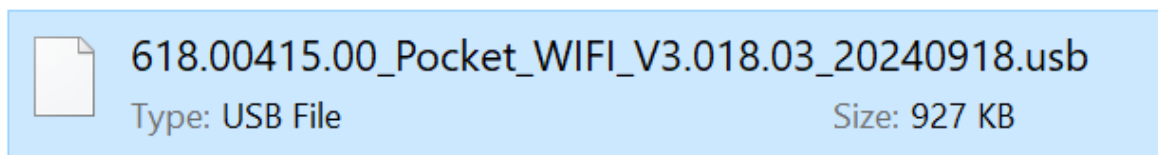

In the "System" interface, select the file and click "Start."

DHCP	Static IP	System
Firmware Version: 3.001.02		
Connect with inverter: H34A15IC196041		
Connect with router: SolaxGuest		
Connect with server: 47.254.152.103		
Update firmware(.usb): Please Select file C:\fakepath\323101024700 Start		
Old Password:		
New Password: save		

After a successful upgrade.



Firmware update success, system reboot...please wait 5 seconds and return

Step10: If the issue is still not resolved, turn on your mobile hotspot to reconfigure the Wi-Fi module. If the Wi-Fi module can connect to the internet normally through the mobile hotspot, it indicates that the problem is due to the router's settings.

Information check list:

If you have completed the above <Guidance for installer>, and the problem is still not solved, please collect the following troubleshooting information and send them to the R&D.

1.[Photo]SN number of the inverter and WiFi module., which needs to clearly show the registration number.



2.[Photo]Screen shot of the web

```
Microsoft Windows [Version 10.0.19045.5011]
(c) Microsoft Corporation. All rights reserved.

C:\Users\lenovo>ping mqtt101.solaxcloud.com

Pinging mqtt101.solaxcloud.com [47.254.152.103] with 32 bytes of data:
Reply from 47.254.152.103: bytes=32 time=331ms TTL=76
Reply from 47.254.152.103: bytes=32 time=328ms TTL=76
Reply from 47.254.152.103: bytes=32 time=326ms TTL=76
Reply from 47.254.152.103: bytes=32 time=322ms TTL=76

Ping statistics for 47.254.152.103:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milliseconds:
        Minimum = 322ms, Maximum = 331ms, Average = 326ms
C:\Users\lenovo>
```

3.[Photo]The USB port of the dongle.



4.[Video]WiFi module status light operation(10s-15s).

5.SSID and password of the router.

6.Distance between router and pocket and number of partitions.