

CLOUD -RMA Claim SOP




Background

This document outlines standardized operational procedures for installers and distributors to initiate RMA (Return Merchandise Authorization) claims via the SolaX Cloud Platform. Serving as a practical guide for SolaX authorized partners, it clarifies application pathways and documentation requirements based on account privileges, ensuring efficient and transparent after-sales processing.

RMA Claim SOP

1. Installer/Distributor log in the cloud platform.
2. Under "Service-Support", there is an entry for "RMA Claim". Click to create the application.

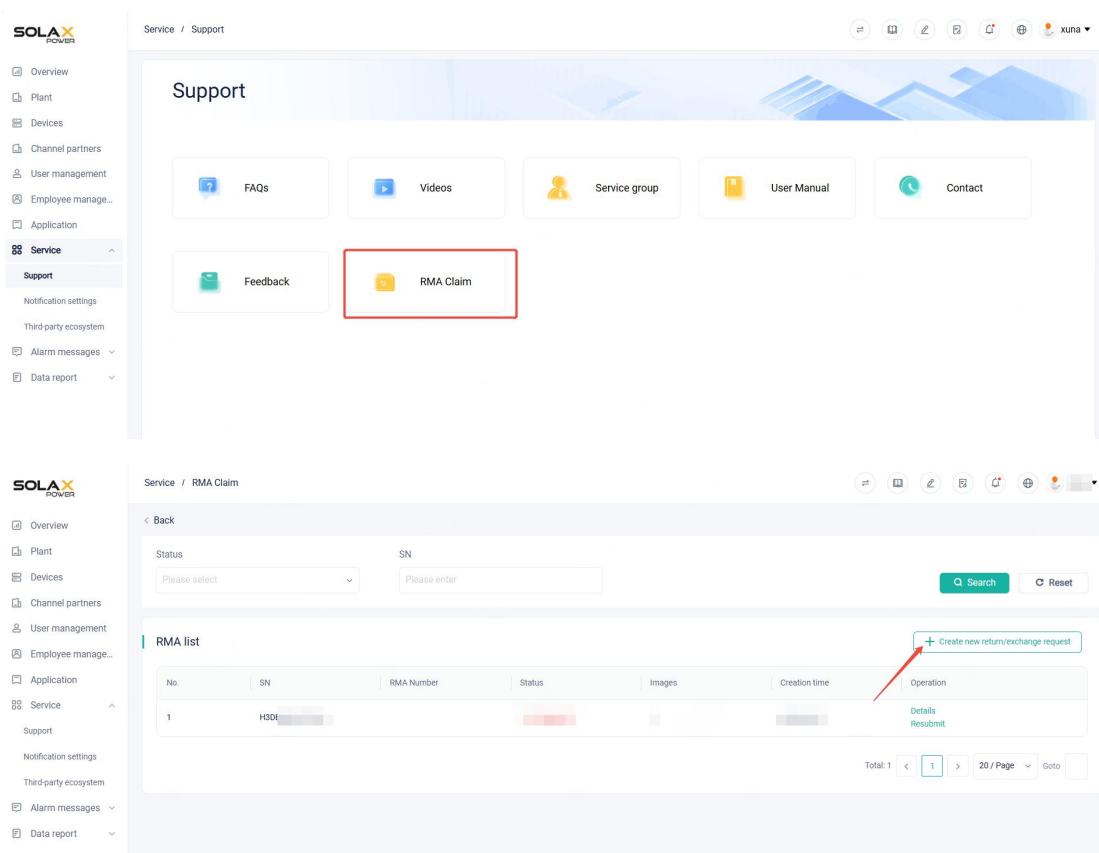

2.1 For the Distributor Account

For the Distributor account, you can directly access the application form for RMA. Fill in the recipient information, the on-site information of the faulty product, and note that multiple SNs are supported for entry.

Service / RMA Claim / RMA Information Collection

< Back

RMA Information Collection

Recipient Info

*Name *Contact number *Email *Post code

*Shipping address

Product Info Add

No.	SN	Product model	Production date	Installation date	Firmware version	No-Wifi/LAN/GPRS	Grid voltage	PV Voltage	Which loads are connected to EPS (for energy storage systems)?	Parallel status	System ou
1	HSDE02	X3-Hybrid-G1/G2	-	-	-	-	-	-	-	No	No

2.2 For Installer Accounts at Gold or Platinum Service Partner Level

If the installer account is at the Gold or Platinum service partner level, it can directly create an RMA request by selecting the options.

Submit RMA Request

☒ I was advised by SolaX helpdesk to initiate the RMA process. My replacement code is

☐ I am a SolaX Gold & Platinum Installer. I want to submit RMA request directly.

[How to become SolaX Gold & Platinum Installer >](#)

Cancel Confirm

Note:

Installers can view their account service partner level by clicking the account icon in the upper-right corner, navigating to "My Account", and selecting "Basic", as shown below.

SOLA POWER

My account / Basic

Country/Region [Modify](#)

Email [Modify](#)

Phone number [Modify](#)

Password [Modify](#)

Company information Gold

Company name [Modify](#)

Organization number [Modify](#)

Contact person [Modify](#)


Contact number [Modify](#)

Company email [Modify](#)

Address [Modify](#)

2.3 For Installer Accounts Who Have Not Reached the Gold or Platinum Service Partner Level

Installer accounts that have not yet reached the Gold or Platinum Service Partner level must enter an RMA replacement code in order to create an RMA request. This RMA replacement code is provided by Customer Service of SolaX.

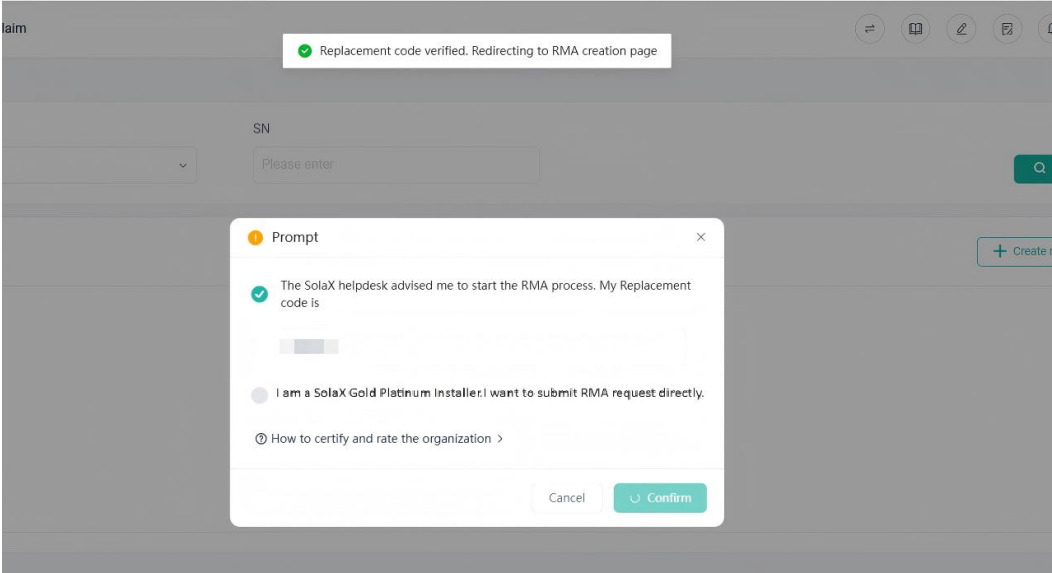

Note:

The RMA code applies when the installer has already communicated with Customer Service (via phone or email) and a preliminary RMA assessment has been made.

This RMA replacement code is provided by Customer Service of SolaX. In cases where the installer has already had preliminary communication with SolaX's customer service via phone or email, and has preliminarily determined that RMA processing is necessary, just require the installer to conduct further on-site verification.

After entering the correct RMA Code, the previously registered information by the customer service of SolaX will be automatically synchronized. The installer can add supplementary information and submit it.

A screenshot of the "RMA Information Collection" form. It has a "Back" button at the top left. The form is divided into two main sections: "Recipient Info" and "Product Info".
Recipient Info section includes:
- Name, Contact number, Email, and Post code (each with a "Please enter" placeholder and a dropdown arrow).
- Shipping address (with a "Please enter" placeholder).
Product Info section includes an "Add" button and a table with the following columns: No., SN, Product model, Production date, Installation date, Firmware version, No-WiFi/LAN/GPRS, Grid voltage, PV Voltage, Which loads are connected to EPS (for energy storage systems)?, Parallel status, and System out.
The first row of the table is highlighted with a red border and contains the following data: No. 1, SN 123456test, Product model (masked), Production date --, Installation date --, Firmware version test, No-WiFi/LAN/GPRS test, Grid voltage --, PV Voltage --, Which loads are connected to EPS --, Parallel status No, and System out No.