

Hybrid Inverter – Pgrid Bias Function

A small power bias to ensure zero injection




Introduction


This article is going to explain the **Pgrid Bias** function on Solax hybrid inverters. This function is used to adjust the power bias at **Grid Connect Point**.

There are three options able to be selected: **Disable / INV / Grid**.

If **INV** is chosen, there will be additional 40W power flowing from Grid to inverter than it should be, shown as Diagram1 below.

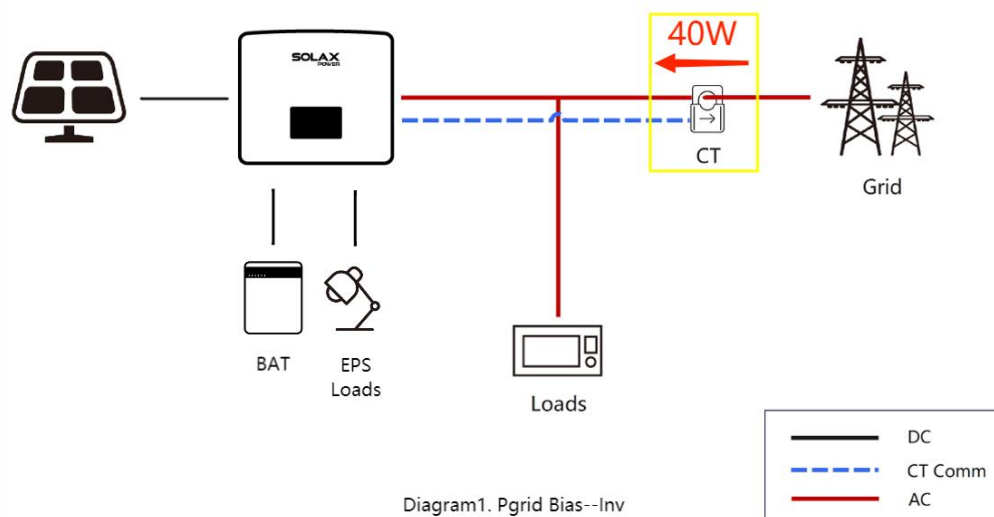

If **Grid** is chosen, inverter will output extra 40W than it should do, shown as Diagram2 below.

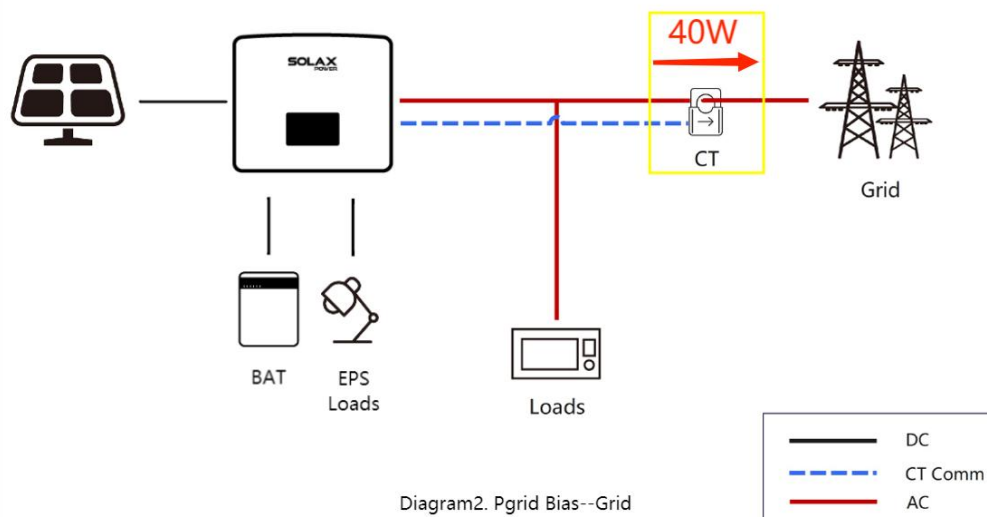

Applications

When to select INV: In some countries, it has strict requirements on Zero Injection, even if you set **Export Control** function to zero, there still will be a small feed-in energy due to the loads fluctuation. Then you can set to **INV** to minimize the feed-in energy.

When to select Grid: In some countries, it is allowed to feed in to grid. But you may find even if the battery has enough energy, sometimes the system will have a little bit consumption from grid. Because when loads increase, it takes time (1 second) for inverter to respond, the loads will take energy from the grid during this time. In this situation, you can set **Pgrid Bias** to **Grid** to minimize the consumption from the grid.

Configuration

Setting path:

Main → Settings → Advance Setting → Pgrid Bias

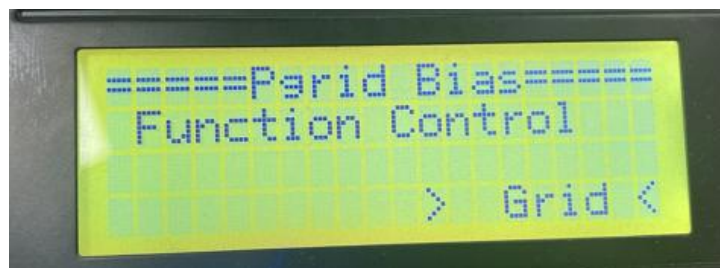


Diagram3. Setting path

Alternatively you can set remotely on App or Cloud.

Compatibility

Hardware version:

Function	Model
Pgrid Bias	X1-MINI G4
	X1-MINI G4 PLUS
	X1-BOOST G4
	X1-SMART G2
	X3-MIC G2
	X3-PRO G2
	X3-MEGA G2
	X3-FORTH

	X3-FORTH PLUS
	X1-IES
	X3-IES
	X1-Hybrid/Fit G4
	X3-Hybrid/Fit G4
	X1-AC
	X1-Vast
	X3-HYB-G4 PRO
	X3-ULTRA
	A1-Hybrid-G2
	A1-AC-G2
	J3-ULTRA-LV
	J3-ULTRA
	J1-ESS-HB
	X1-SPT