



GREENHECK
Building Value in Air.

Wiring Diagram Code:

G23N2E1BF02G25X00HJ23H0630XG31

CAUTION

UNIT SHALL BE GROUNDED IN ACCORDANCE WITH N.E.C.
POWER MUST BE OFF WHILE SERVICING.

NOTES

USE COPPER CONDUCTORS ONLY
60° C FOR TERMINALS RATED LESS THAN 100 AMPS.
75° C FOR TERMINALS RATED 100 AMPS OR MORE.

FIELD CONTROL WIRING RESISTANCE SHOULD
NOT EXCEED 0.75 OHM.

FIELD WIRED - - - - -
FACTORY SUPPLIED AND WIRED _____

NOTE: 1
MODBUS COMMUNICATION WIRING. DAISY CHAIN TO ALL MODBUS
DEVICES.


WIRE COLOR CODE

BK	BLACK	BL	BLUE	BR	BROWN
GY	GRAY	LT BL	LIGHT BLUE	O	ORANGE
PK	PINK	PR	PURPLE	R	RED
W	WHITE	Y	YELLOW		

LEGEND

CCT COOLING COIL LEAVING TEMP
CF# CONDENSING FAN CONTACTOR
CS CONDENSATE OVERFLOW SWITCH
D1 RETURN AIR DAMPER
D2 OUTDOOR AIR DAMPER
DL# DAMPER LIMIT SWITCH
DP1 DISCHARGE PRESSURE TRANSDUCER CKT A
OAT OUTDOOR AIR TEMP
PS1 WHEEL PRESSURE SWITCH
R1 ENERGY WHEEL RELAY
R2 CO2 SENSOR RELAY
R3 EXHAUST BLOWER VFD RELAY
R4 SUPPLY BLOWER VFD RELAY
R7 CKT A INTERLOCK RELAY
R10 COMPRESSOR 2 RELAY
R14 WHEEL ROTATION SENSOR RELAY
R20 A2L SUPPLY FAN AND DAMPER RELAY
R21 A2L AIR TUNNEL SECTION ALARM RELAY
R23 A2L COMPRESSOR SECTION ALARM RELAY
RHV MODULATING HOT GAS REHEAT VALVE
RH1 HUMIDITY SENSOR - OUTDOOR AIR
SAT SUPPLY AIR TEMP
S1 REMOTE START INPUT
REMOTE START SWITCH OR EXTERNAL INTERLOCKS
REMOVE JUMPER IF FIELD DEVICES ARE INSTALLED
S2 WHEEL ROTATION SENSOR
S6 BUILDING FIRE ALARM
NORMALLY CLOSED SWITCH OPENS ON ALARM.
INSTALL JUMPER FROM TERMINAL R TO 70 IF
NO FIRE DEVICES ARE INSTALLED.
VFD VARIABLE FREQUENCY DRIVE

USER INTERFACE A2L LEAK ALARM CONNECTION
ALARM STATE SHOWN, SWITCHES ON UNIT POWER UP

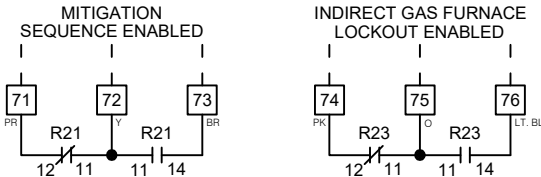

WIRE CO2 SENSOR PER MODEL SHIPPED

CO2 MODEL C7232	
CO2 MODEL C7233	
CO2 MODEL CT1W	

Wiring Template: G31 DOC NUMBER: 1002716992 REV: ----

