

Boatneck sleeveless princess button-down top

Size EU38 . 5 pieces . 1.7 m fabric at 140 cm wide . woven

Cut table

PIECE	CUT	FABRIC / INTERFACING
A. Top Center Front	cut 2 (opens at CF)	fashion fabric + interface the button stand
B. Top Side Front	cut 2	fashion fabric
C. Top Center Back	cut 2	fashion fabric
D. Top Side Back	cut 2	fashion fabric

Chalked on fabric / notions (not printed as a paper piece)

Bias binding (neckline + armholes) cut 1 strip(s) 1218 x 25 mm ON THE BIAS (45° to the grain), join end to end (total 1218 mm = edge 1198 mm + overlap), press in half, wrap the edge and trim the excess

Buttons: 6-8 x 18 mm, to taste. Interfacing: light fusible for the button stands.

Seam allowance


1.5 cm (15 mm) seam allowance is INCLUDED in every cut line cut the outer line, sew the inner line. Bias binding is trimmed to 0.6 cm (6 mm). The hem is a 2 cm double fold.

How this pack prints


This pattern tiles across 14 A4 sheet(s) in a grid 4 wide (sheet A1 is top-left). Print at 100% scale with "fit to page" OFF. Confirm the 50 mm test square on sheet 2 before you cut anything.

STOP check the print scale first

Print this page at 100% scale. In the print dialog, turn OFF "Fit to page" / "Shrink to fit" / "Scale to paper". Then measure the square below with a ruler: every side must read exactly 50 mm. If it does not, your printer is scaling fix it and reprint, or nothing else in this pack will fit.

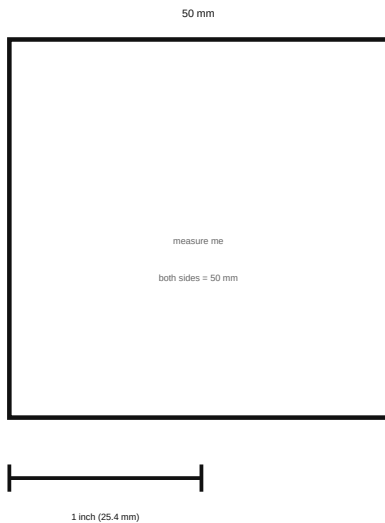

When the square is exactly 50 mm and the inch bar is 25.4 mm, the whole pattern is true scale. Proceed to tape the sheets.

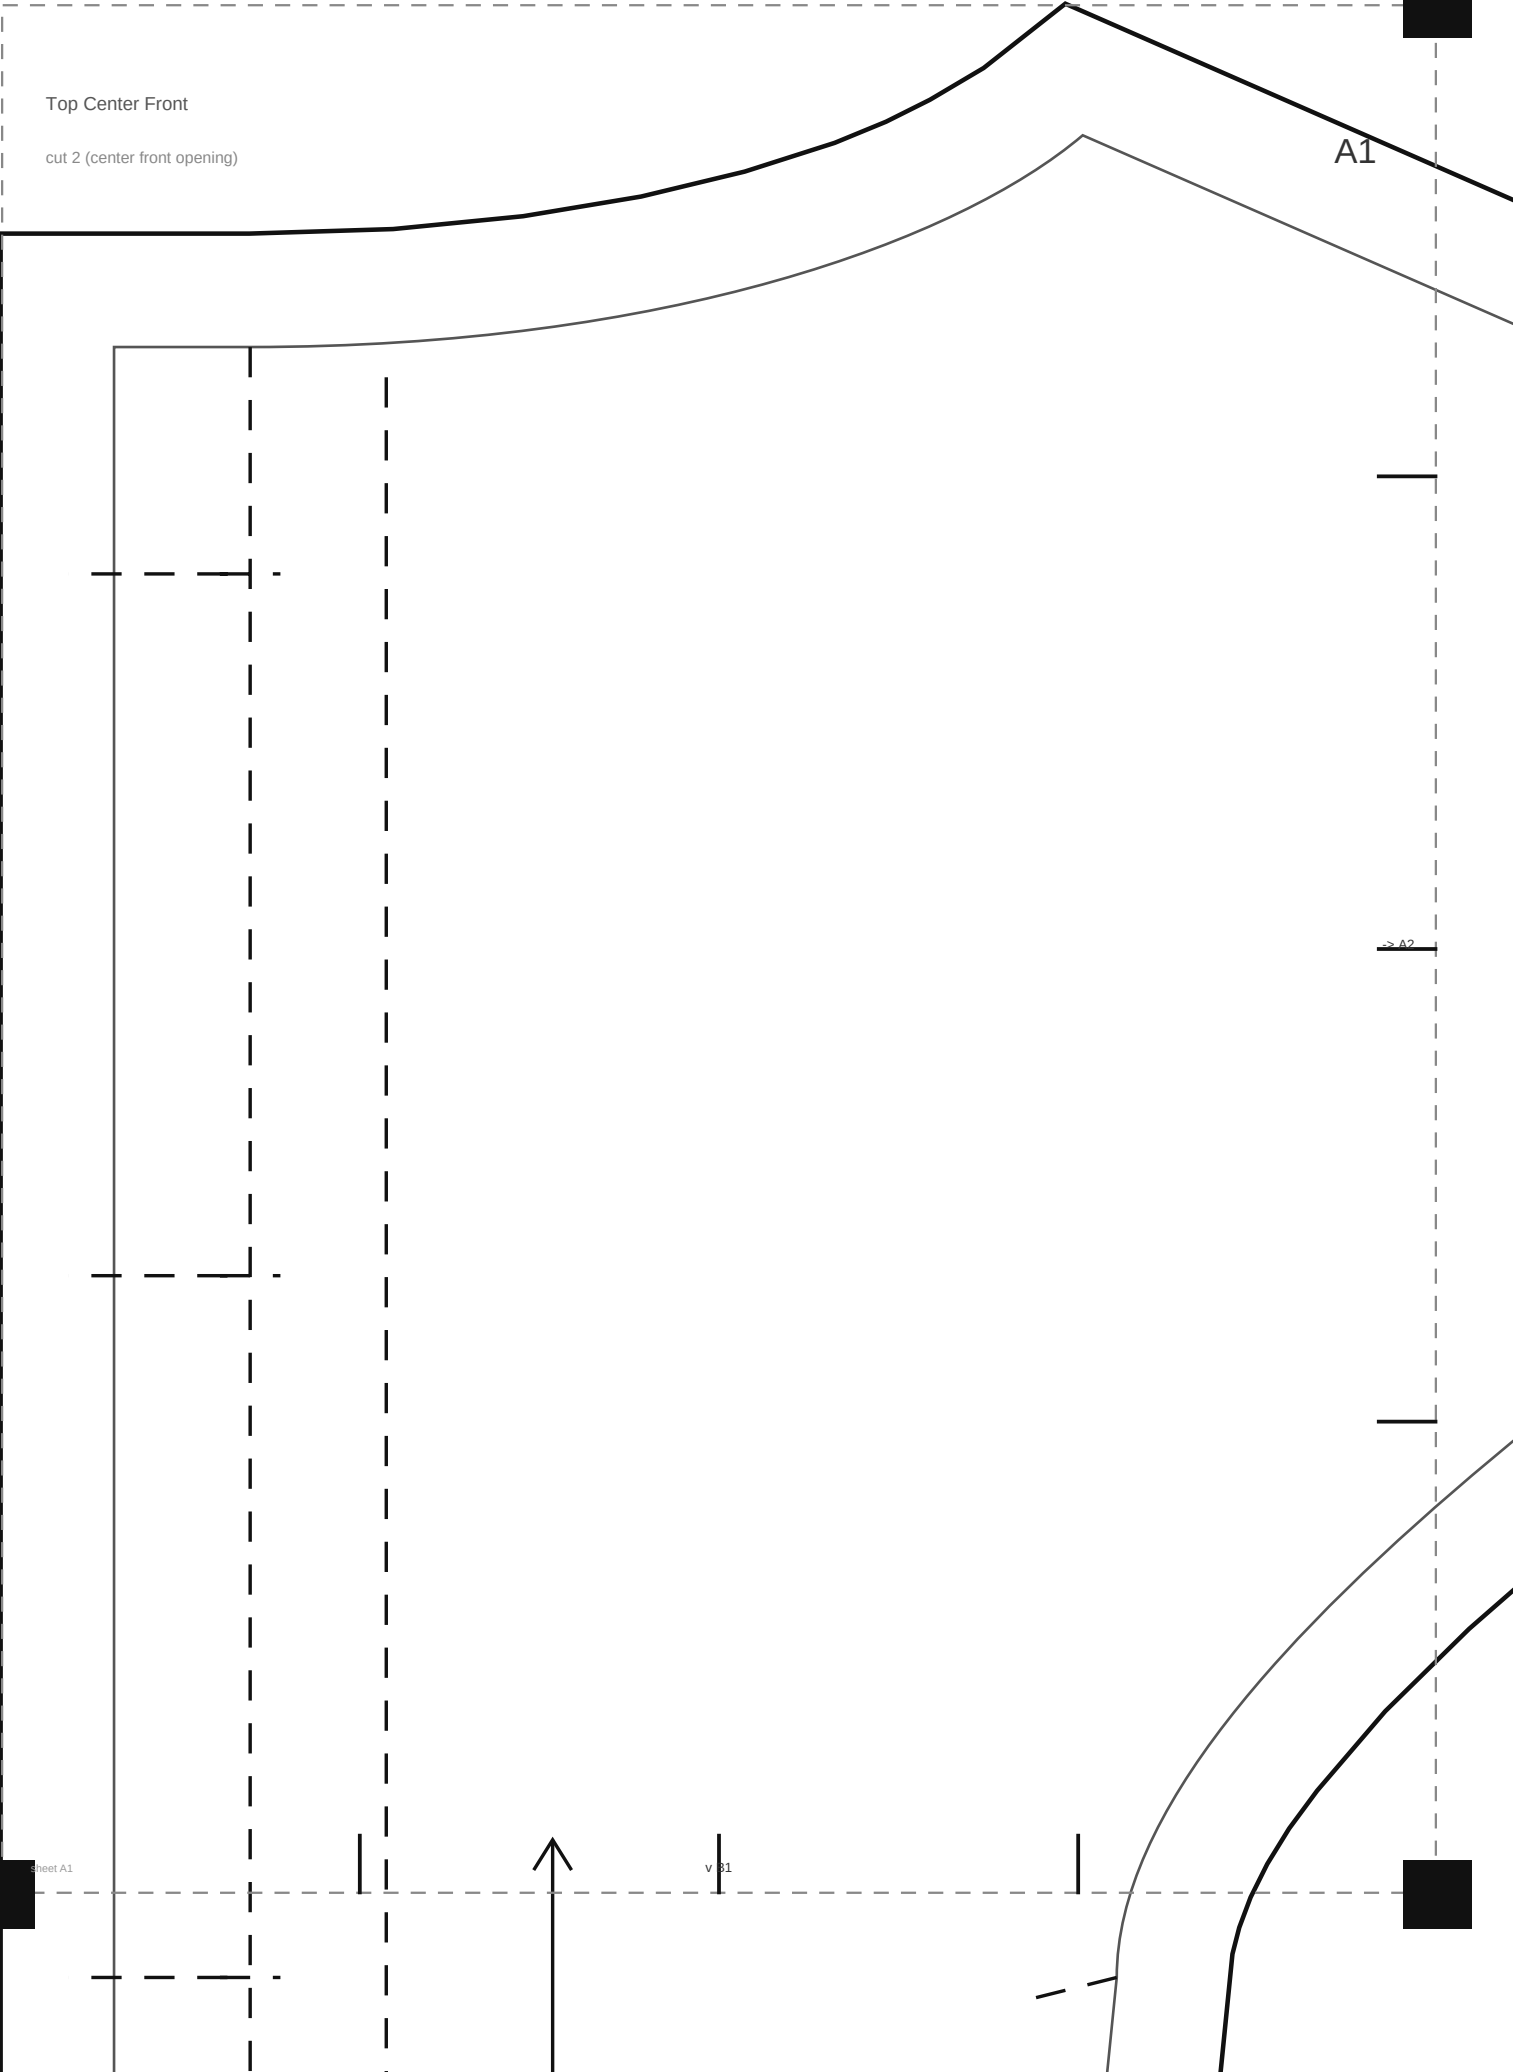

Top Center Front


cut 2 (center front opening)


A1

-> A2

sheet A1

v 81

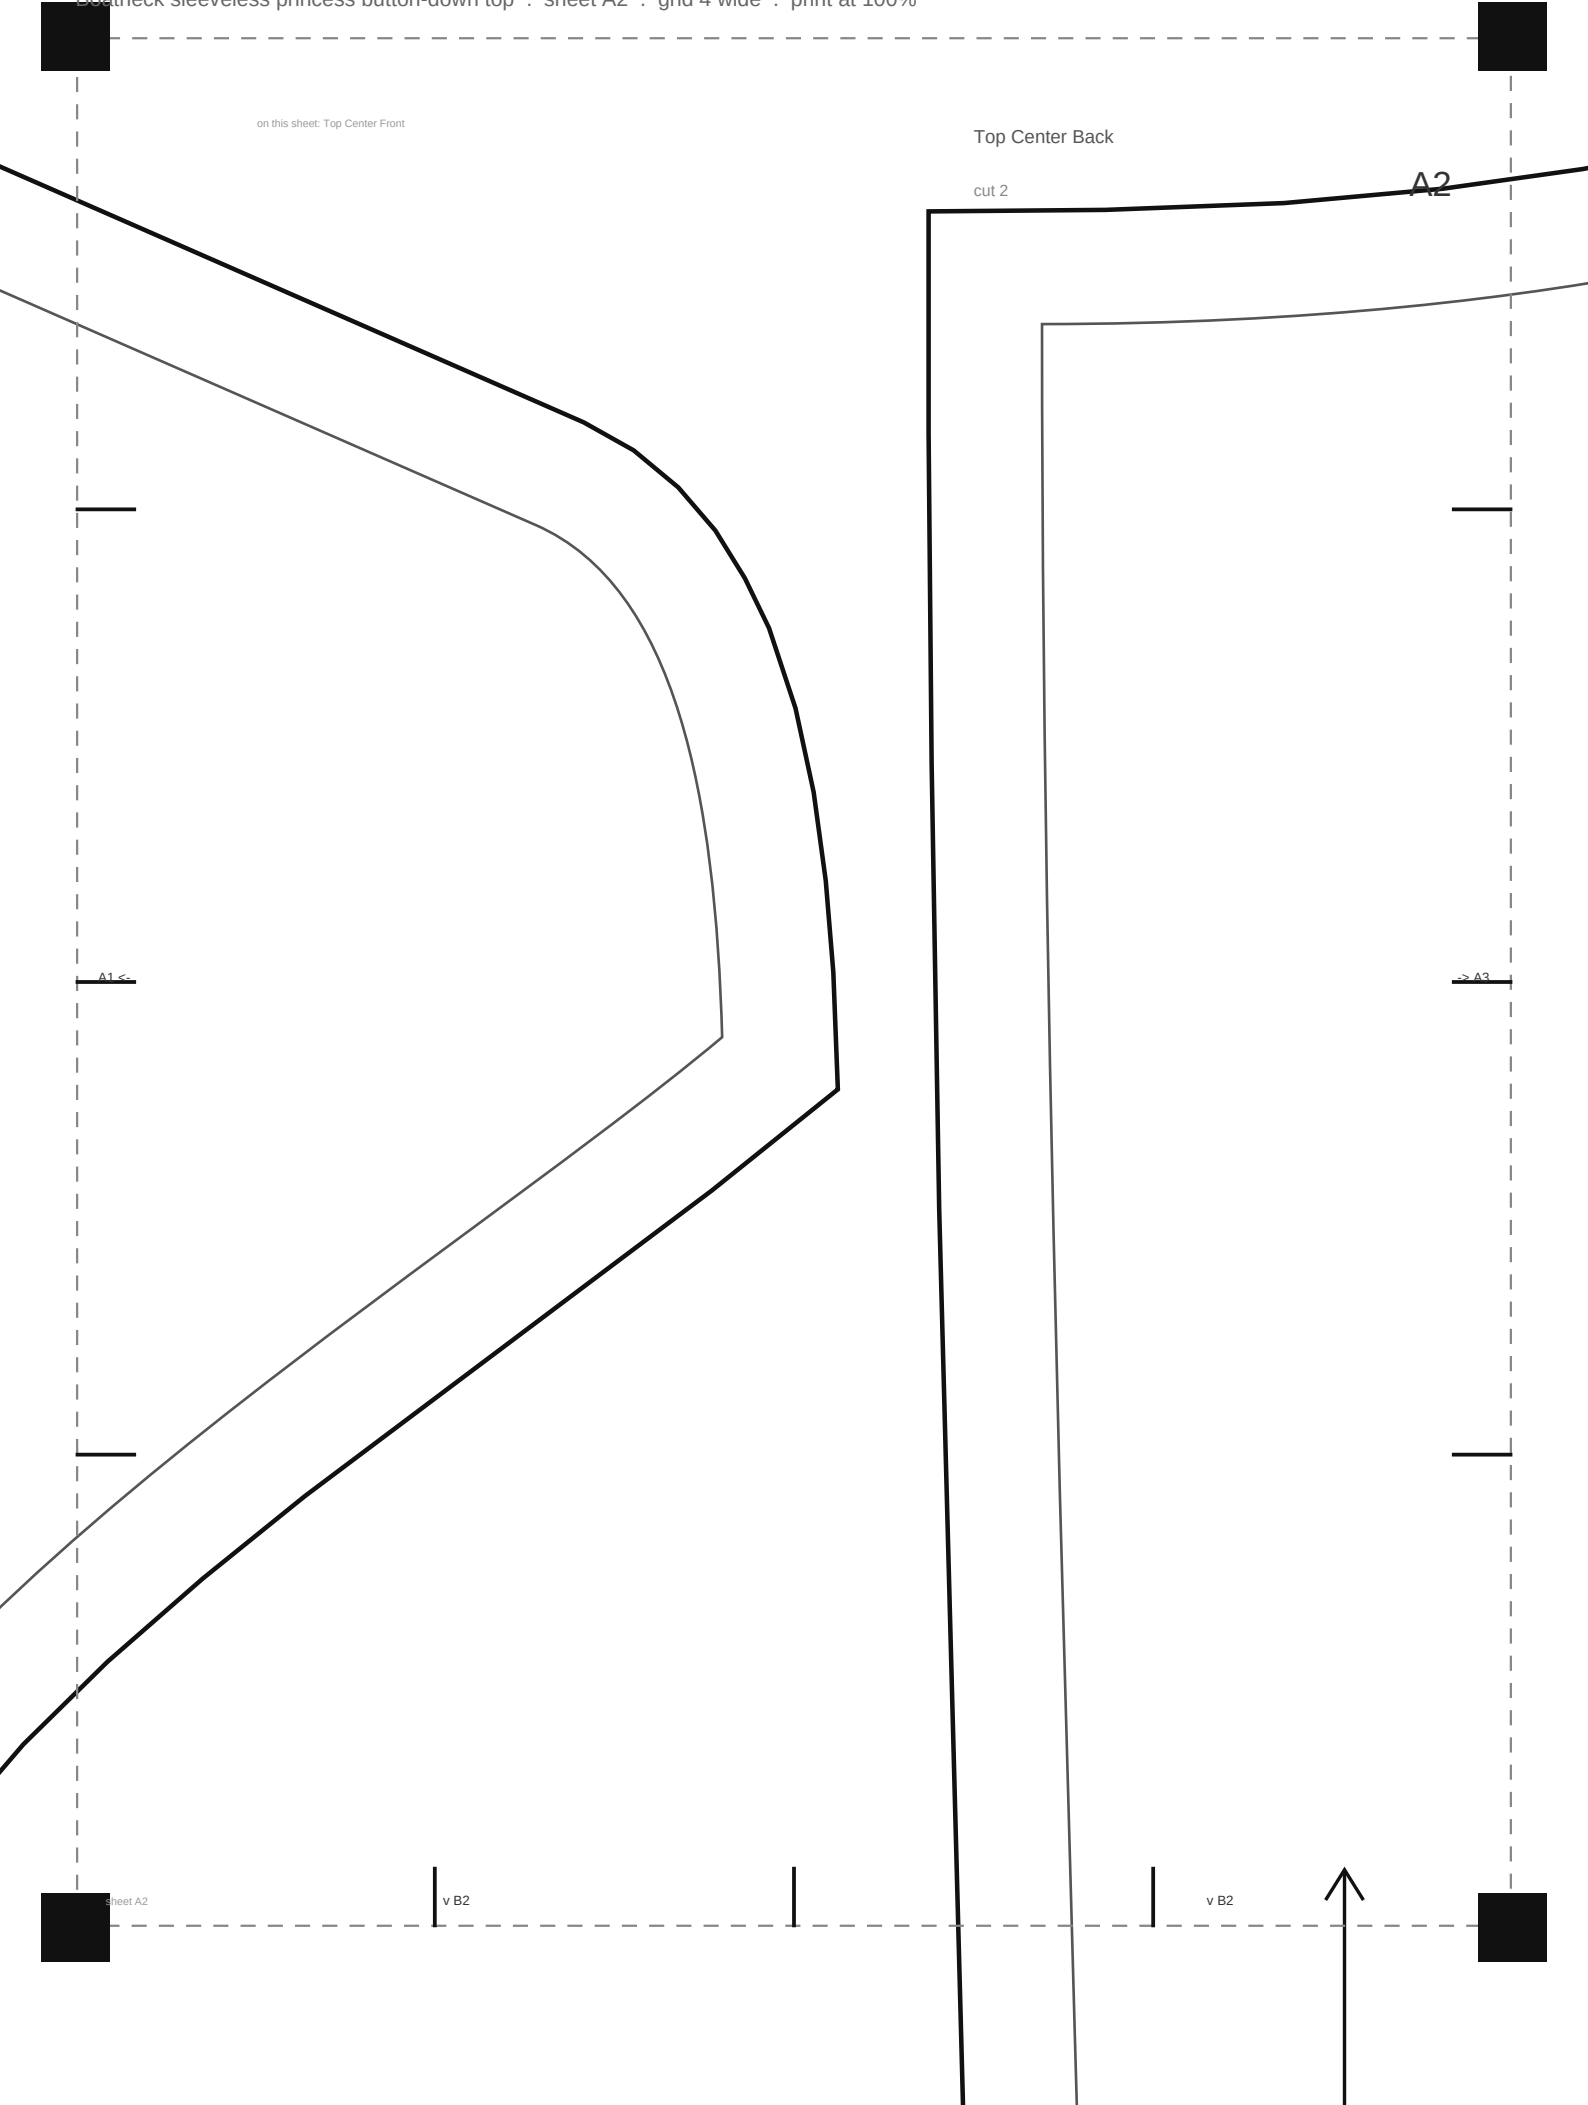

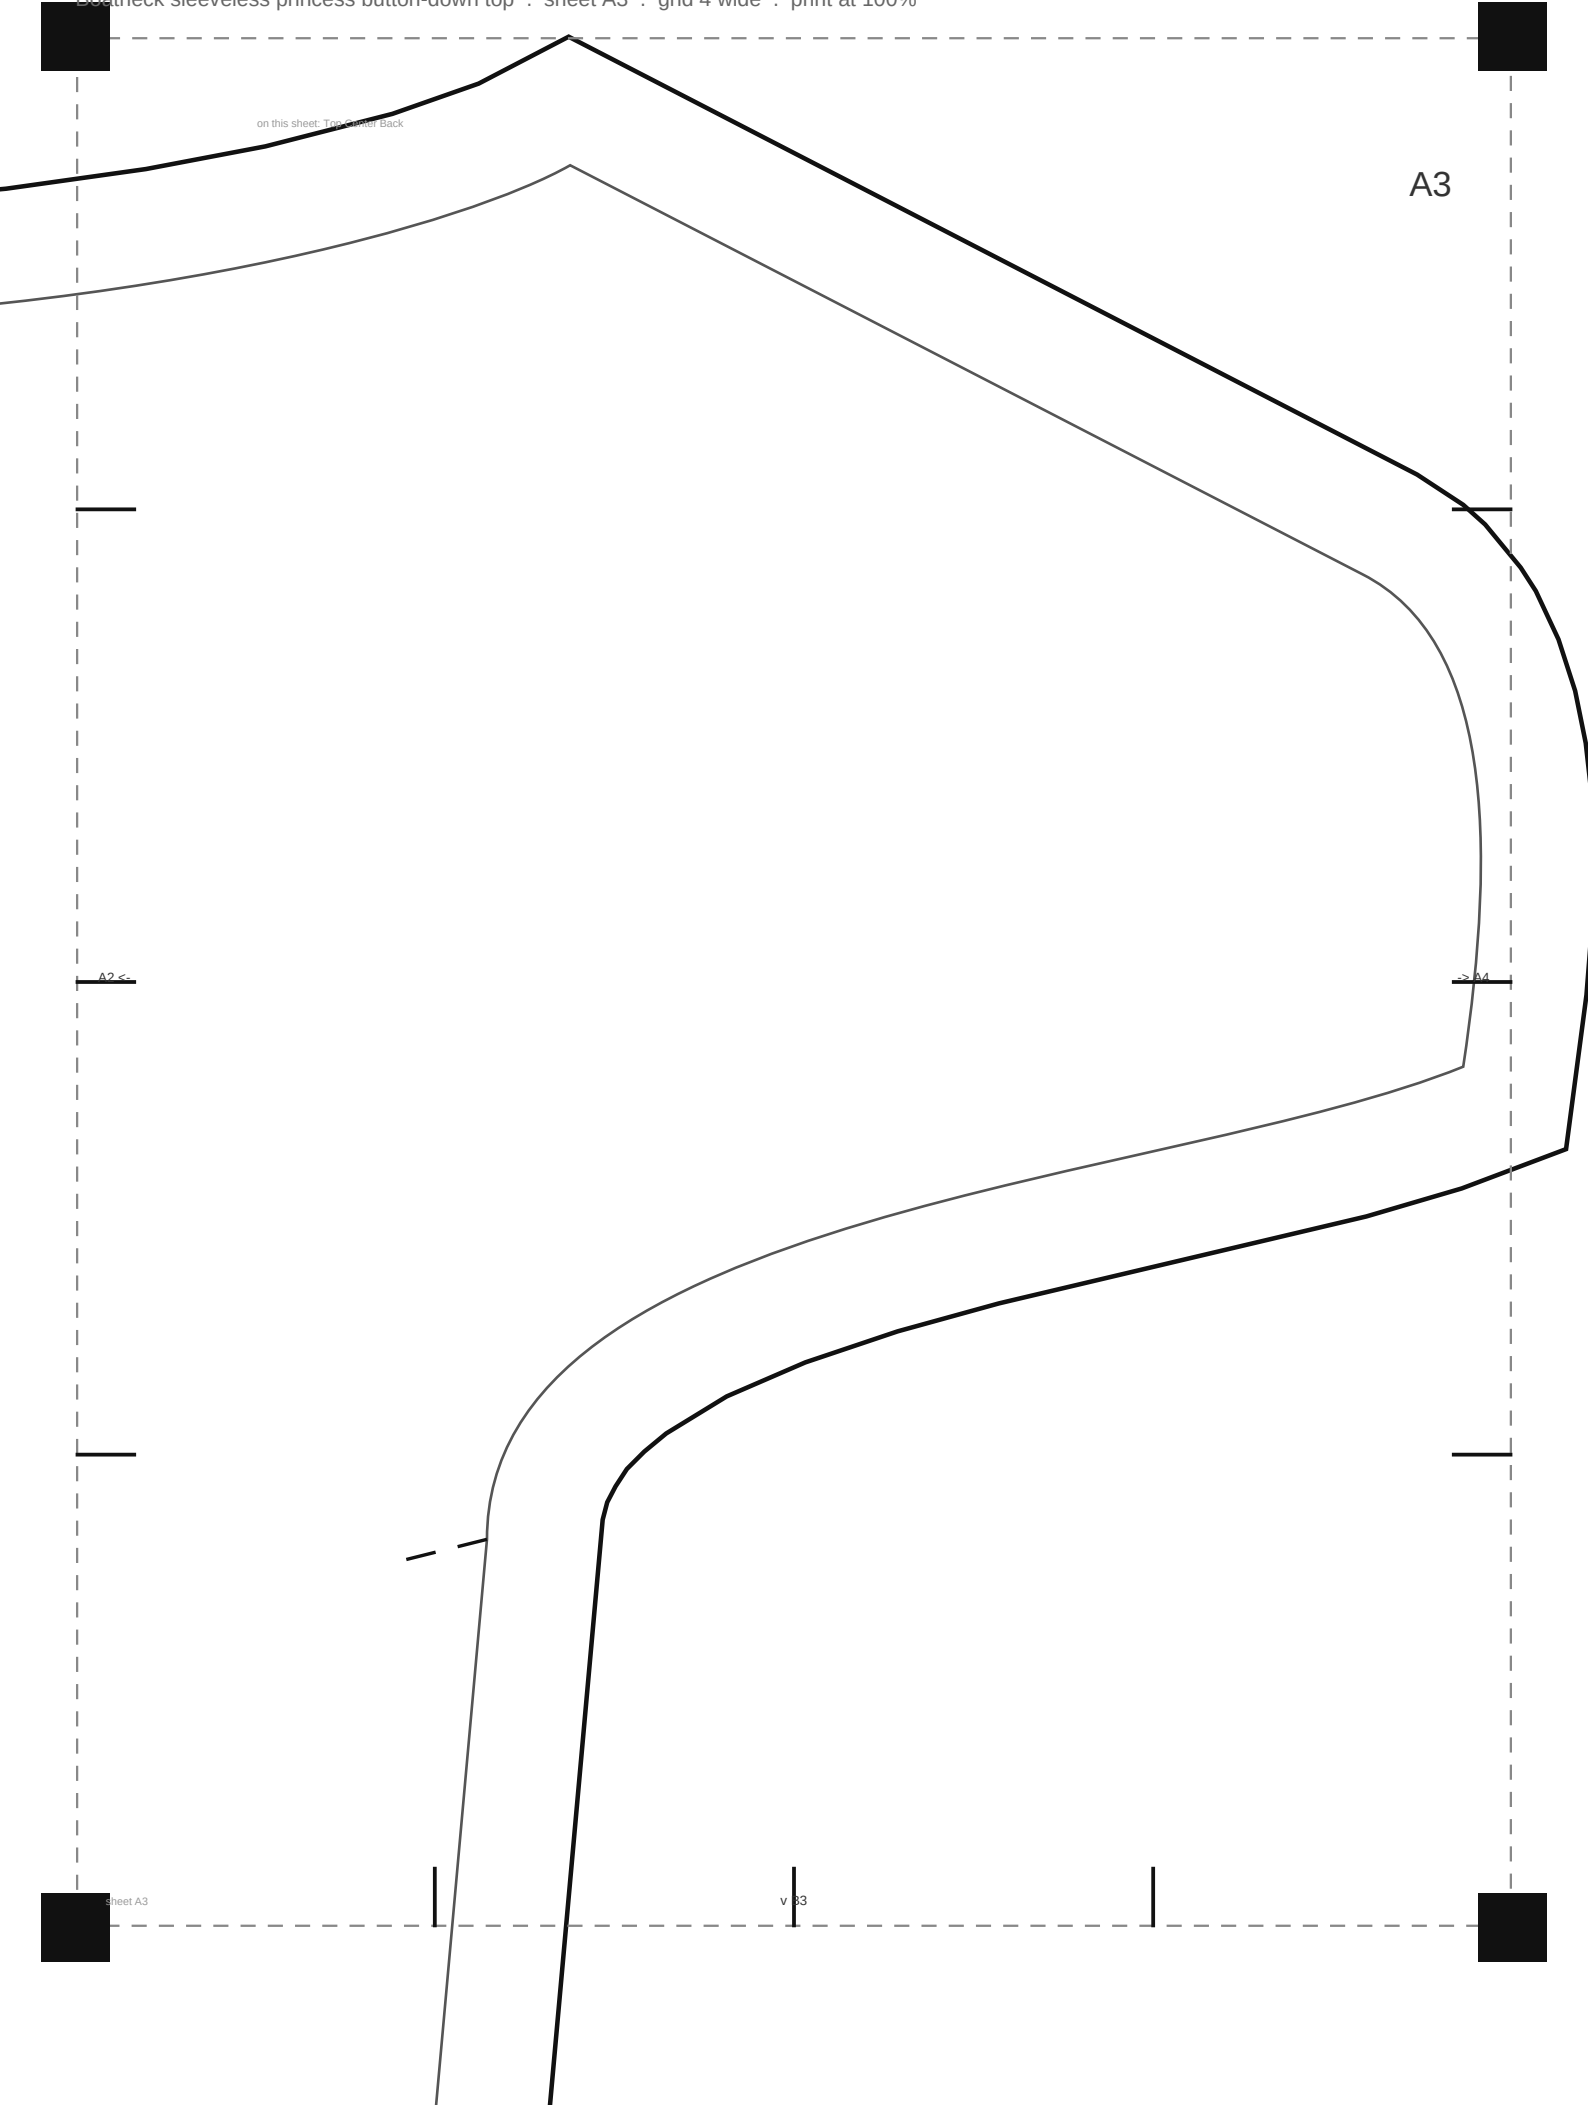

on this sheet: Top Center Back

A3

A2 <

> A4

Sheet A3

v 83

on this sheet: Top Center Back
Top Side Front
cut 2

A4

A3 <

Sheet A4

v B4

v B4

Boatneck sleeveless princess button-down top . sheet B1 grid 4 wide . print at 100%

on this sheet top center front

B1

-> B2

sheet B1

v c1

^ A2

^ A2

on this sheet: Top Center Front . Top Center Back

B2

B1 <

> B3

sheet B2

v C2

v C2

on this sheet: Top Center Back

B3

B2 <

-> B4

Boatneck sleeveless princess button-down top . sheet B4 . grid 4 wide . print at 100%

^ A4

^ A4

on this sheet: Top Center Back . Top Side Front

B4

B3 <

Sheet B4

v C4

v C4



on this sheet: Top Center Front

^ 1

C1

-> C2

Top Side Back

cut 2

sheet C1

v D1



Boatneck sleeveless princess button-down top . sheet C2 . grid 4 wide . print at 100%

^ B2

^ B2

on this sheet: Top Center Front . Top Center Back

C2

-> C3

C1 <-

sheet C2

on this sheet: Top Center Back

C3

C2 <-

-> C4

Boatneck sleeveless princess button-down top . sheet C4 . grid 4 wide . print at 100%

B4

^ B4

on this sheet: Top Center Back . Top Side Front

C4

C3 <-

Sheet C4

Boatneck sleeveless princess button-down top . sheet D1 . grid 4 wide . print at 100%

^ C1

on this sheet: Top Side Back

D1



sheet D1

v E1

^ D1

on this sheet: Top Side Back

E1



Taping the sheets together

1. Trim or fold each A4 along its dashed page frame (the frame marks the printable window).
2. Lay the sheets out in the grid: sheet A1 top-left, then A2 to its right, B1 below A1, and so on. The grid code sits in each sheet's top-right corner.
3. Overlap edge to edge so the black CORNER SQUARES from two sheets complete into one full square, and the edge TICKS line up across the seam. Tape.
4. A pattern line that runs off a page has a small arrow telling you which sheet it continues on follow it to keep panels unbroken.
5. Once taped, the register GRID should read as one continuous field with no jog at any joint.

Edges sewn together (in order)

Put each pair edge to edge before sewing and "walk" them note any mismatch in mm.

1. Center Front <-> Side Front
princess seam, both sides (match the bust notch)
2. Center Back <-> Side Back
princess seam, both sides (match the bust notch)
3. Front shoulder <-> Back shoulder
shoulder seams, both sides (press open)
4. Front side <-> Back side
side seams, both sides
5. Bias binding <-> neckline edge
bind the boat neck, ease around the curve
6. Bias binding <-> each armhole
bind both armholes (sleeveless)
7. Right front <-> Left front
button placket laps right over left at center front

Grainline & notches

Every panel carries a grainline arrow lay it parallel to the fabric selvage. Match the bust notches on each princess seam before sewing. This top has no zipper: check the boat neck opening slips over your head before cutting real fabric.