
Micrometer Screw

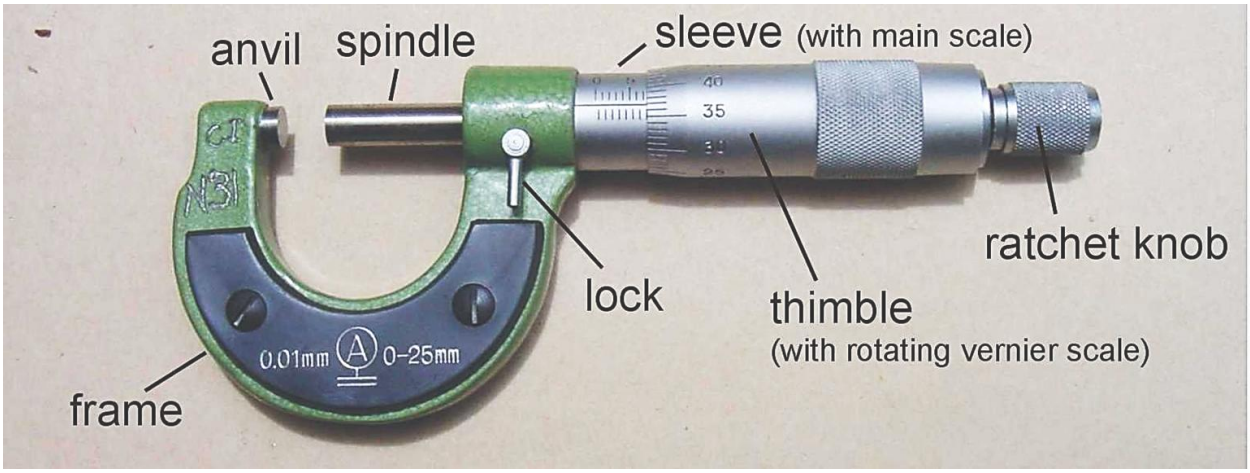

How to use a Micrometer Screw Gauge

1. Operating Instructions:
2. Open the micrometer by turning the thimble or ratchet.
3. Place the object to be measured between the spindle and anvil.
4. Close the spindle by turning the ratchet, not the thimble. The ratchet prevents excess pressure on the object being measured, so you don't squash it and get a false reading.

Now read the scale.

Reading the Scale (Example Guide):


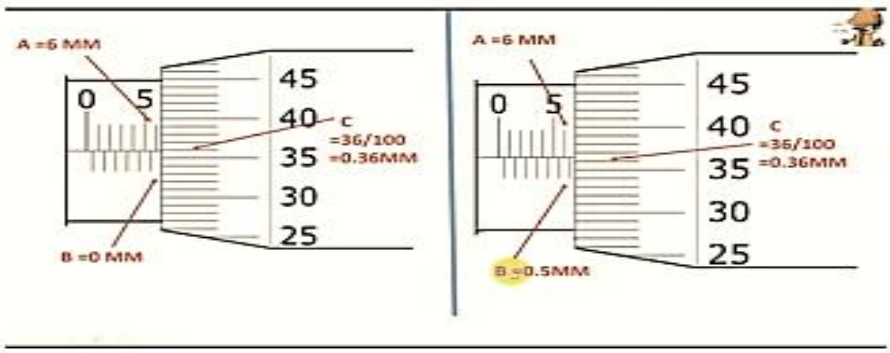





Figure 1: .... *mm*




Figure 2: ..... *mm*

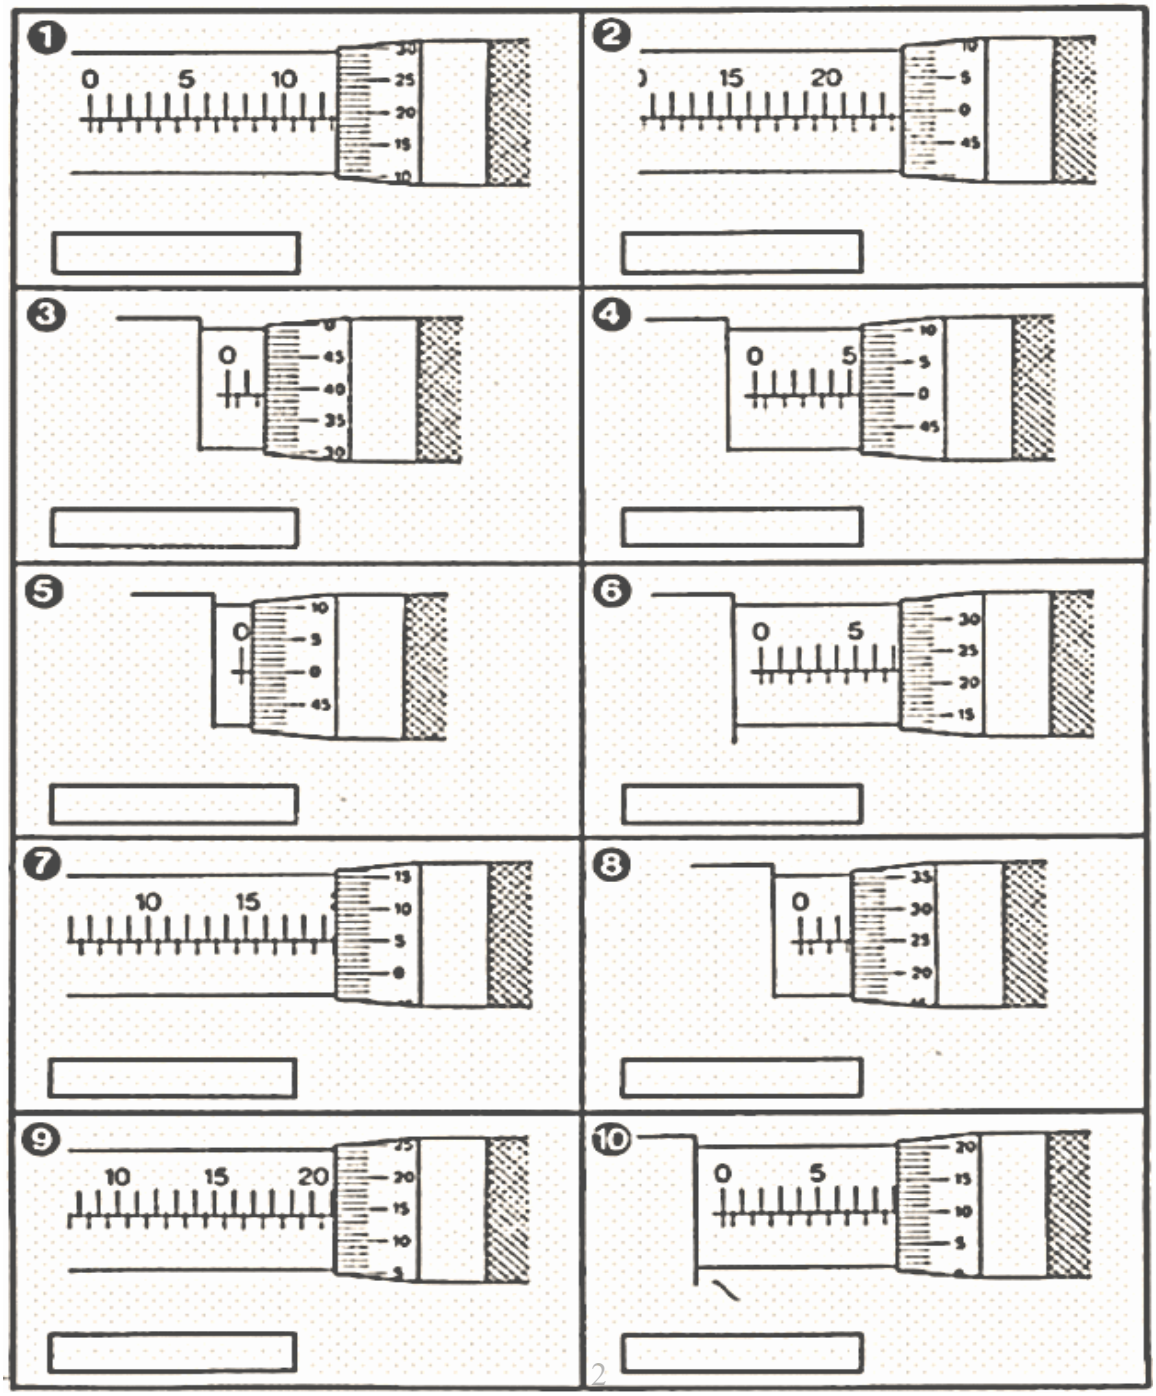

Calipers

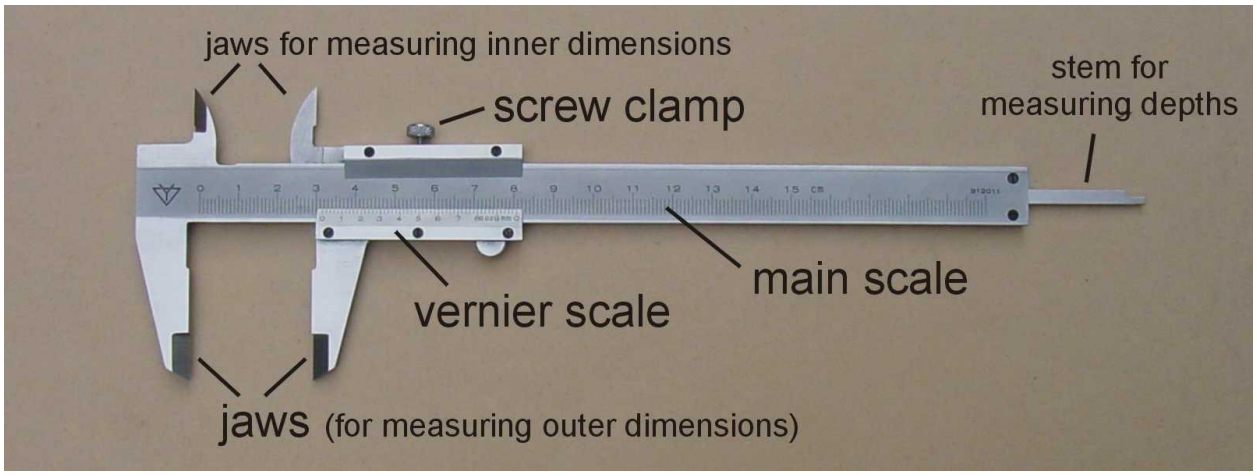

Reading the Scale

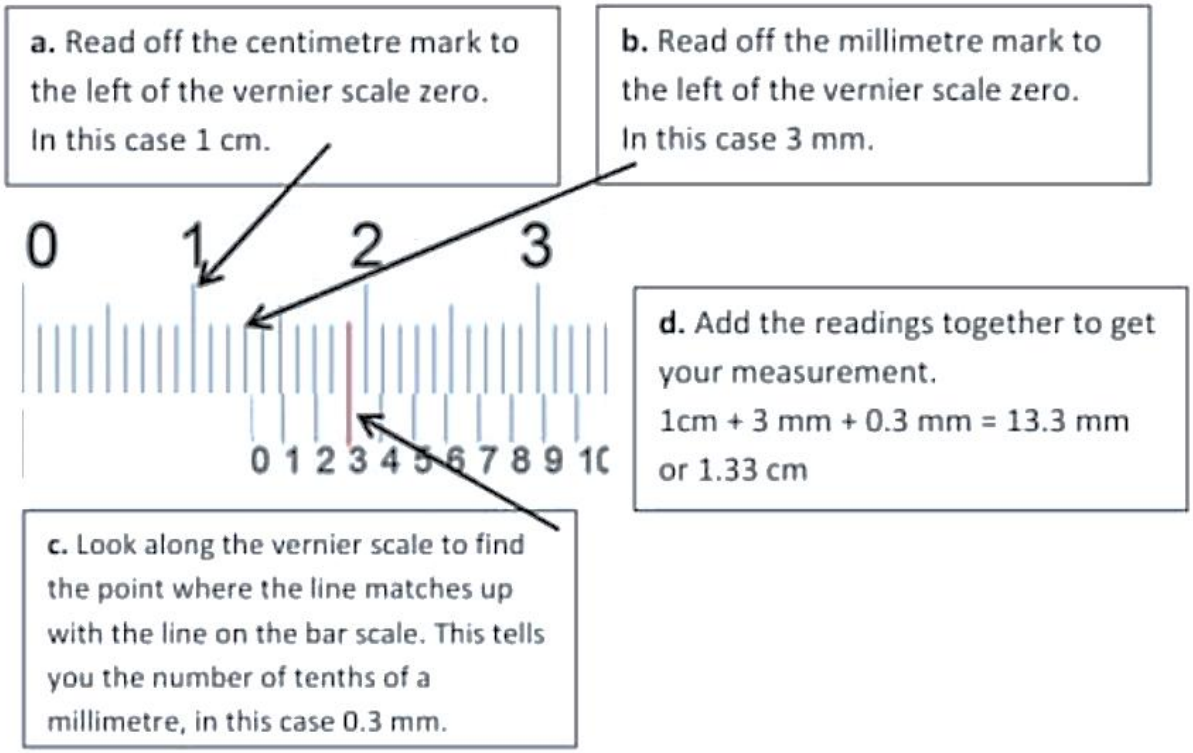

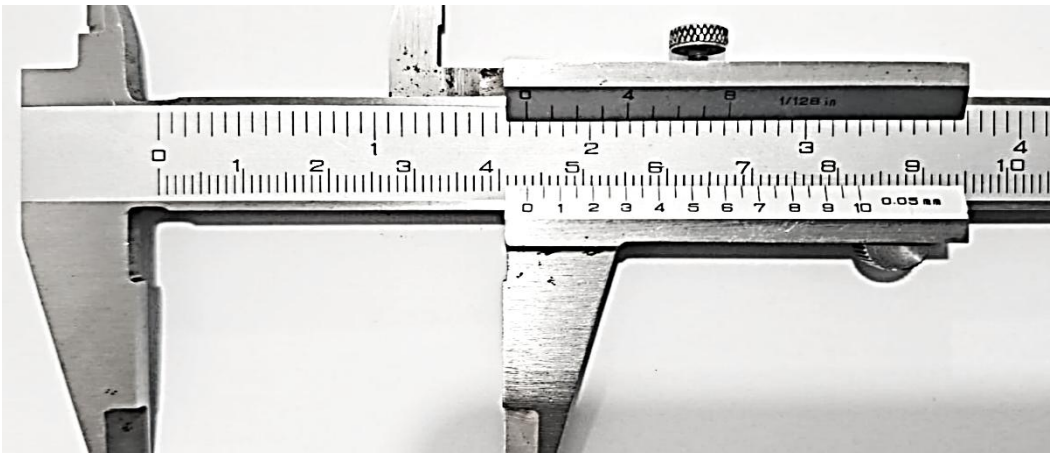


Figure 1: ***..... mm***

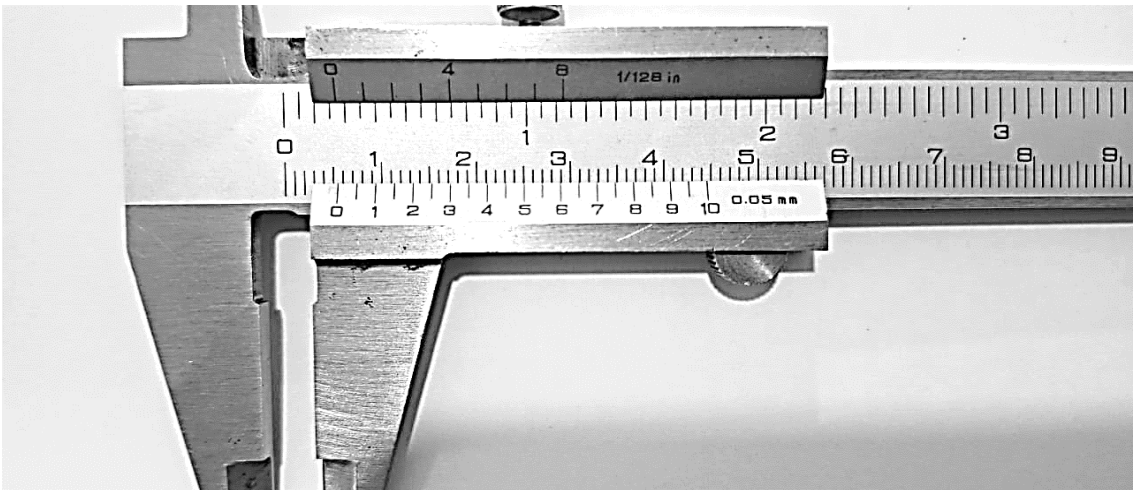


Figure 2: ***..... mm***

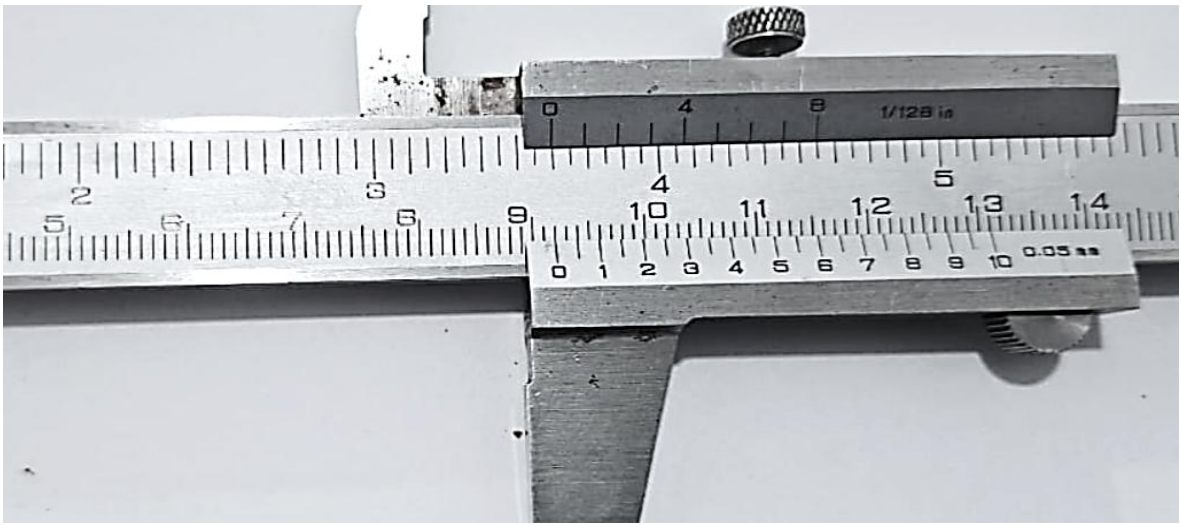


Figure3: ***..... mm***

Micrometers and Calipers

	Micrometers	Calipers
Accuracy	**Standard Accuracy:** 0.01 mm. **High Precision:** Up to 0.001 mm	**Most Common Accuracy:** 0.05 mm or 0.02 mm. **Basic Types:** 0.1 mm.
Types of Measurements	measurements for small parts (**thickness**, **diameter**)	Inside, Outside & Depth Measurements