


AF-F4 T10 nano

User Guide

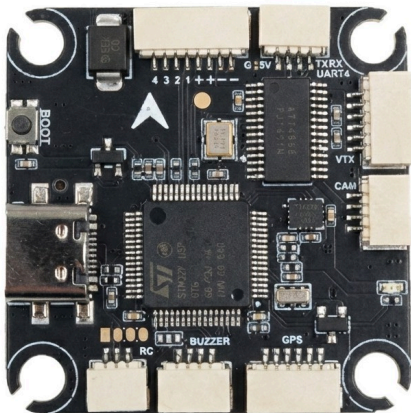

AF-F4 T10 nano Overview

AF-F4 nano + AG-F4-1A Gimbal · ArduPilot

AF-F4 T10 nano Specifications

• Basic Specifications

MCU	STM32F405
IMU	ICM-42688-P
Barometer	SPL06 (current novaX hardware definition)
Gimbal	AG-F4-1A (MNT_TYPE 13)
Operating Voltage	9 – 25 V DC
USB Input	USB Type-C (Firmware & Power)
PWM Output	8 motor/servo channels + 1 LED channel
Serial Ports	6 hardware UARTs + USB configured; verify connector pinout

AF-F4 T10 nano Specifications

• Basic Specifications



Serial Mapping	SERIAL1 = USART1 · SERIAL2 = USART2 · SERIAL3 = USART3 · SERIAL4 = UART4 · SERIAL5 = UART5 · SERIAL6 = USART6 (USB = SERIAL0)
RC Input	PWM / PPM / S.Bus
Size	39.4 × 39.4 mm
Weight	9.3 g
Supported F/W	ArduPilot

AF-F4 T10 nano Pinout

• Pinout

AF-F4 nano

Connector & Component Map

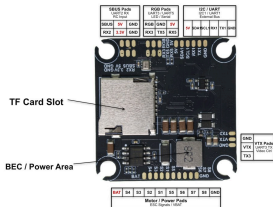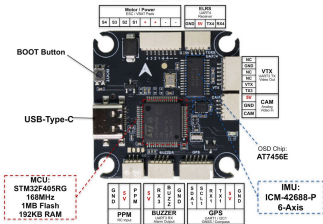

AF-F4 T10 nano Setup

1. **Mounting** — Align the board's forward direction with the vehicle nose on a vibration-damped mount; otherwise set AHRS_ORIENTATION.
2. **Power** — Supply power within the operating range and check polarity first. Operating voltage: 9 – 25 V DC.
3. **Peripherals** — Connect the receiver, GPS / compass and ESCs according to the pinout.
4. **Firmware** — Load this product's novaX ArduPilot image from the catalog Web Updater; never use another board's firmware.
5. **Setup** — In Mission Planner or similar, choose the frame, calibrate accelerometer, compass and radio, and set flight modes and failsafes.

AF-F4 T10 nano Firmware

• Available Firmware

Type	Version	Date
ArduPilot (.apj package)	1.3.4	2026-07-11
Bootloader + App (merged HEX · DFU / SWD)	1.3.4	2026-07-11

Download files from the product page (QR).

AF-F4 T10 nano Safety Notes

- Always remove propellers while wiring, configuring or updating firmware.
- Pull connectors by the housing, never by the wires.
- Beware of static discharge; do not operate in wet or dusty conditions.



<Detailed Manual>

novaX