


AF-F4 T10

Usb mode

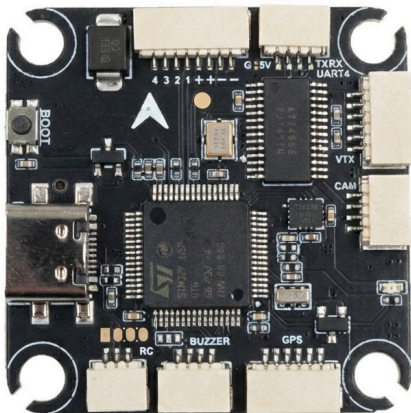

AF-F4 T10 nano 제품 외형

AF-F4 nano + AG-F4-1A Gimbal · ArduPilot

AF-F4 T10 nano 스펙

· 기본 사양

MCU	STM32F405
IMU	ICM-42688-P
기압계	SPL06 (current novaX hardware definition)
짐벌	AG-F4-1A (MNT_TYPE 13)
동작 전압	9 – 25 V DC
USB 입력	USB Type-C (Firmware & Power)
PWM 출력	8 motor/servo channels + 1 LED channel
시리얼 포트	6 hardware UARTs + USB configured; verify connector pinout

AF-F4 T10 nano 스펙

· 기본 사양

시리얼 포트 배정	SERIAL1 = USART1 · SERIAL2 = USART2 · SERIAL3 = USART3 · SERIAL4 = UART4 · SERIAL5 = UART5 · SERIAL6 = USART6 (USB = SERIAL0)
RC 입력	PWM / PPM / S.Bus
크기	39.4 × 39.4 mm
무게	9.3 g
지원 펌웨어	ArduPilot

AF-F4 T10 nano 핀맵

· 핀맵

AF-F4 nano Pinout

Both sides were straight on. Each side lists the pins left → right (side connectors: top → bottom) as you see them in the photo. The board silks names the ESC, GLRS and every bottom pad; the other top connectors keep the maker's order. There are no pin numbers.

red = power black = GND blue = signal grey = not connected

Top side

ESC								ELRS			
8-Pin: USB 4 3 2 1 + - - (→ VBAT)								8-Pin: UART4 - USB 0 2V TX RX			
S4	S3	S2	S1	+	-	-	-	GND	SV	TX4	RX4



VTX	
8-Pin: UART1 TX: maker's order	
NC	
NC	
NC	
VTX	
TX1	

CAM	
8-Pin: video in: maker's order	
SV	
GND	
CAM	

RC			GPS				
8-Pin: PP30: maker's order			8-Pin: UART3 + G23: maker's order				
GND	SV	PP30	SDA1	SCL1	RX1	TX1	SV GND


BUZZER			
8-Pin: UART3 RX: maker's order			
SV	RX3	BUZZ	GND

Bottom side (pads)

RGB pads		
UART3 / UART1: LED or serial		
RGB	GND	SV
RX3	TX3	RX3

SERVO pads		
UART3 RX: RC input		
GND	SV	SERVO
GND	3.3V	RX2

DC / UART pads					
G23 / UART3					
SV	SDA1	SCL1	RX1	TX1	GND

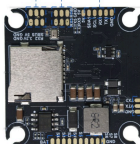

VTX pads	
UART1 TX: VTX control	
TX1	
VTX	
GND	

MOTOR / POWER pads									
Motor signals G2 → G8 → battery									
BA7	S4	S3	S2	S1	S8	S7	S6	S5	GND

Also on the board: M3C1 STM32F405RG (168 MHz; 1 MB flash; 192 KB RAM); IMU ICM-42688-P; OSD AT79SGE; BOOT button and USB Type-C on the top; TF card slot and the BEE on the bottom.

AF-F4 T10 nano 설치 및 설정

1. 장착 — 보드 앞 방향을 기체 앞쪽에 맞춰 방진 마운트로 고정합니다. 다르게 달면 AHRS_ORIENTATION 으로 맞춥니다.
2. 전원 — 동작 전압 범위의 전원을 연결하고 극성을 먼저 확인합니다. 동작 전압: 9 – 25 V DC.
3. 주변장치 — 수신기 · GPS/나침반 · ESC 를 핀맵에 맞게 연결합니다.
4. 펌웨어 — 카탈로그 웹 업데이트에서 이 제품 전용 novaX ArduPilot 펌웨어를 올립니다. 다른 보드 펌웨어는 쓰지 않습니다.
5. 초기 설정 — Mission Planner 등에서 기체 형식, 가속도계·나침반·조종기 보정, 비행 모드와 페일세이프를 설정합니다.

AF-F4 T10 nano 펌웨어

· 제공 펌웨어

종류	버전	날짜
ArduPilot (.apj package)	1.3.4	2026-07-11
Bootloader + App (merged HEX · DFU / SWD)	1.3.4	2026-07-11

파일은 제품 페이지(QR)에서 받습니다.

AF-F4 T10 nano 주의사항

- 연결 · 설정 · 펌웨어 작업 중에는 프로펠러를 반드시 분리하십시오.
- 커넥터를 뽑을 때는 선이 아니라 커넥터 몸체를 잡으십시오.
- 정전기에 주의하고, 젖거나 먼지 많은 곳에서 쓰지 마십시오.



<자세한 매뉴얼>

