


AM-1102

User Guide



AM-1102 Dimensions

• Dimensions (mm)

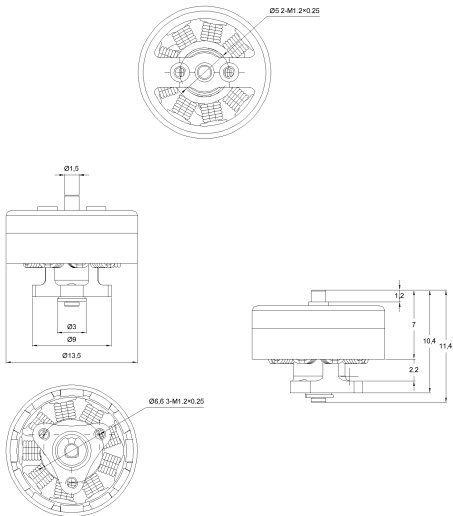

AM-1102 Specifications

• Basic Specifications

Slots / Poles	12N14P (7 pole pairs)
Rated Voltage	7.4 V (2S LiPo)
Max Current	7.08 A
Max Power	58.8 W


AM-1102 Performance Data

2S LiPo, sea-level static thrust stand. Measured values; rated specs may differ.

• Propeller 2016S

Throttle	Thrust (g)	Current (A)	Power (W)	Eff. (g/W)	Temp (°C)
20%	7.3	0.14	1.1	6.4	31.5
40%	30.2	0.91	7.7	3.9	31.4
60%	60.0	2.33	19.6	3.1	31.4
80%	88.5	4.25	35.6	2.5	32.0
100%	121.7	7.08	58.8	2.1	32.3

AM-1102 Installation

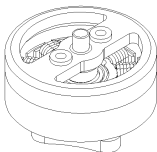

1. **Mounting** — Fix the motor to the arm through the bottom mounting holes. Follow the screw size and spacing on the drawing and use screws that do not reach the windings.
2. **ESC wiring** — Connect the three motor wires to the ESC outputs. To reverse the rotation, swap any two wires or reverse it in the ESC settings.
3. **Spin check** — Without a propeller, run at low throttle and check the direction and for abnormal noise.
4. **Propeller** — Fit a propeller matching the rotation and tighten the nut firmly.

AM-1102 Safety Notes

- Do not exceed the rated voltage. Rated: 7.4 V (2S LiPo).
- Use an ESC rated with margin above the motor maximum current. Max current: 7.08 A.
- Always remove the propeller while wiring, configuring or bench testing.
- The motor can be hot right after operation; let it cool before touching.
- Keep metal debris away from the magnets; stop using the motor if the shaft is bent or the bearings are noisy.



<Detailed Manual>

novaX